

2013 Legacy



Quick Reference Guide



Complete U.S. specifications and illustrations may not have been available at time of publication. Specifications are based on the latest product information available at time of publication. Some images shown are for illustration purposes only. Some equipment shown may be optional at extra cost. Specific options may be available only in combination with other options. Specific combinations of equipment or features may vary from time to time and by geographic area. Certain accessories and equipment may not be available at the time of publication.

This Quick Reference Guide applies to all Legacy models. Therefore, some explanations may be for equipment not installed on your vehicle. Subaru of America, Inc., reserves the right to change or discontinue at any time, without notice, prices, colors, materials, equipment, accessories, specifications, models and packages without incurring any obligation to make the same or similar changes on vehicles previously sold. Colors shown may vary due to reproduction process.

For detailed operating and safety information, please consult the Owner's Manual.

Subaru, Outback, Legacy, Forester, Impreza, BRZ, WRX, WRX/STI, BOXER, Lineartronic, Alcantara, XM and Sirius are registered trademarks.

Eyesight is a trademark of Subaru.

All rights reserved. Contents may not be reprinted or electronically reproduced in whole or in part without prior written approval of Subaru of America, Inc.

© 2012 Subaru of America, Inc.

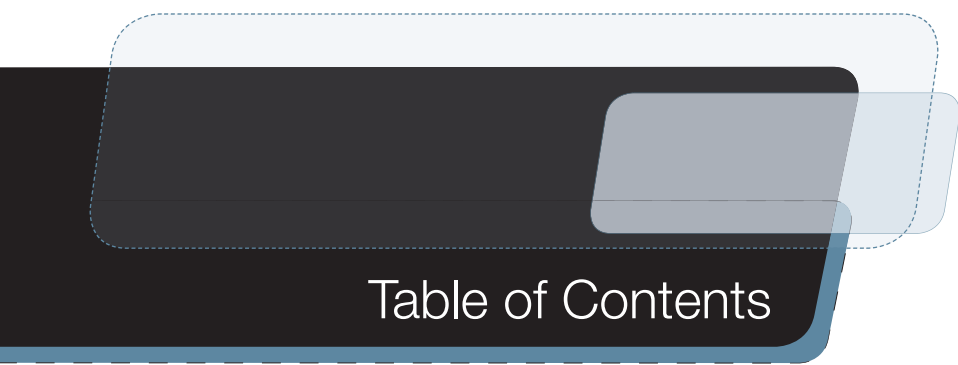 


Table of Contents

Getting Started	2 - 3
Instrument Panel	4 - 5
Gauges	6 - 9
Personalize	10 - 11
Controls	12 - 23
While Operating	24 - 25
Safety/In Case of Emergency	26 - 27
Additional Information	28 - 29

Remote Keyless Entry

Lock/Arm

- Press to lock all doors and trunk and activate the security alarm.
- If any of the doors or the trunk are not fully closed, an electronic chirp will sound five times and the hazard lights will flash five times to alert you that the doors or the trunk are not properly closed.
- To activate the vehicle finder function, press three times (within five seconds). If you are within 30 feet of the vehicle, the horn will sound one time and the hazard lights will flash three times.

Opening the Trunk Lid

Press and hold to unlock the trunk lid. An electronic chirp will sound twice and the hazard lights will flash twice.

Unlock/Disarm

- Press once to unlock the driver's door.
- Press twice (within five seconds) to unlock all doors.
- When the "Unlock/Disarm" button is pressed, the dome and map lights will illuminate if the dome light switch is in the middle position.

Panic Alarm

 
- Press once and the horn will sound and the hazard lights will flash.
- Press any button on the remote to deactivate.

Immobilizer

When the security alarm is activated, the immobilizer interrupts the starter motor to prevent an intruder from starting your vehicle without a registered key.



Seating

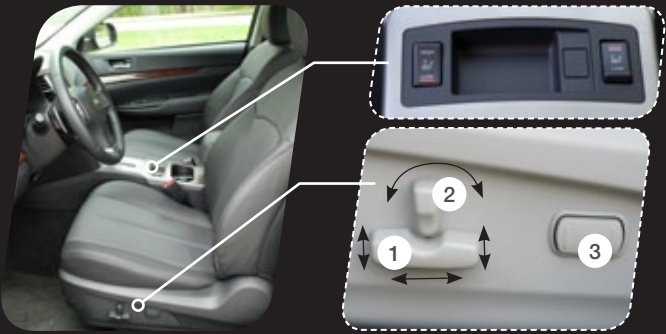

Heated Seats (if equipped)

Press the switch in the corresponding direction for the desired seat temperature. To turn off the seat heater, slightly press in the opposite direction of the current position.

Rear Seat Release Lever

Open the trunk lid. Pull the release lever on the seat side that you want to fold down. To return the seatback to its original position, raise the seatback until it locks into place making sure that it is securely locked.

10-Way Power Driver's Seat (if equipped)

1. Forward/Backward, Angle and Height

 
Move the switch toward the front or rear to move the seat forward or backward. Pull the switch up or push down on the front of the switch to adjust the angle of the seat cushion. Pulling the switch straight up or pushing the switch straight down will adjust the height of the entire seat cushion.

2. Seatback

Move the switch in the corresponding direction to adjust the angle of the seatback.

3. Lumbar Support

Press the front part of the switch to increase lumbar support; press the rear part of the switch to decrease lumbar support.

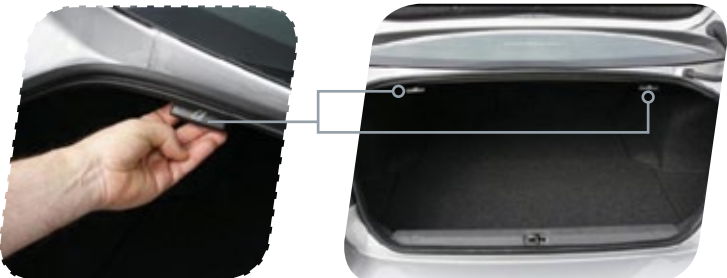

Instrument Panel



pg. 24

pg. 10

pg. 12

pg. 22

pg. 6-9

pg. 23



pg. 13

pg. 14-17

pg. 18-21

Clock

Press the "+" button to advance time or the "-" button to reverse the time. Vehicles with a navigation system, please refer to the separate "Operating Instructions for Navigation System."

Gauges

Immediate Attention

Caution

Informational

Legacy 2.5i
Legacy 2.5i Premium

Trip meter A/B selection and trip meter reset knob

ECO gauge



Seatbelt warning



Hot coolant temperature /
Cold coolant temperature



Front passenger seatbelt
warning



High beam indicator light



SRS airbag system



Engine oil level warning



Security indicator light



AT OIL TEMP
(Automatic Transmission)



Charge warning



ABS warning



Oil pressure warning

 


Low fuel

BRAKE /  Brake system



All-Wheel Drive
(Automatic Transmission)

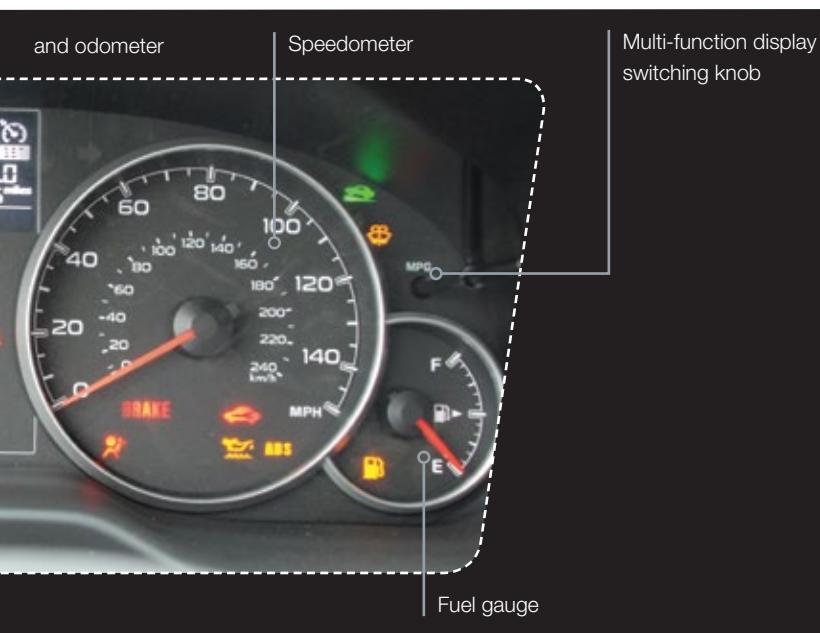

Vehicle Dynamics
Control/Vehicle Dynamics
Control operation



Hill Holder



Vehicle Dynamics Control OFF



Turn signals



CHECK ENGINE /
Malfunction indicator



Front fog light indicator
light (if equipped)



Tire pressure warning light



Headlight indicator light



Front passenger frontal
airbag ON



Front passenger frontal
airbag OFF



Low windshield
washer fluid

Gauges

■ Immediate Attention

■ Caution

■ Informational

Legacy 2.5i Limited

Trip meter A/B selection and trip meter reset knob

Temperature gauge

Tachometer

ECO gauge



Seatbelt warning



Door open (if equipped)



Front passenger seatbelt warning



Hot coolant temperature / Cold coolant temperature



SRS airbag system



High beam indicator light



Security indicator light



Engine oil level warning



Charge warning

AT OIL TEMP

AT OIL TEMP (Automatic Transmission)



Oil pressure warning

 
ABS / (ABS)

ABS warning

BRAKE / (P) Brake system



Low fuel

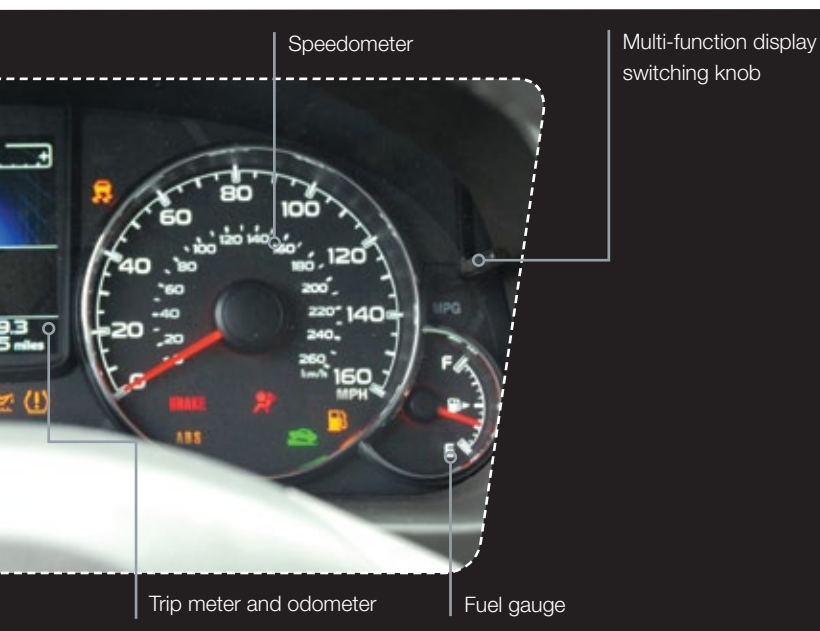

AWD

All-Wheel Drive (Automatic Transmission)



Low windshield washer fluid



Vehicle Dynamics Control/Vehicle Dynamics Control operation



Hill Holder



Vehicle Dynamics Control OFF



Turn signals

CHECK ENGINE

CHECK ENGINE / Malfunction indicator



Front fog light indicator light (if equipped)



Tire pressure warning light



Headlight indicator light

ON /

Front passenger frontal airbag ON

OFF /

Front passenger frontal airbag OFF

Personalize



Tilt and Telescopic Steering Column

Push the lever down firmly to adjust the height and lengthwise position of the column; firmly push the lever back up to lock the column in place. Do not adjust while driving.

Power Exterior Mirrors

Turn the knob to the “L” side to adjust the left-hand mirror or to the “R” side to adjust the right-hand mirror. Move the knob in the direction you want to move the mirror. Then return the knob to the neutral/center position.





Power Moonroof (if equipped)

With the moonroof in the fully closed position, press the switch ② to tilt the rear of the moonroof up. Press and hold the switch ① to lower the moonroof. Press the switch ④ to fully open the moonroof. Press the switch ③ to close the moonroof. To stop the moonroof in a midway position while opening or closing, momentarily press the switch to the ④ side or ③ side.

Controls

Light Controls

Push up for right turn signal.

 
Turns on headlights, instrument panel illumination, parking lights, taillights and license plate lights.

Push down for left turn signal.

AUTO: The vehicle's lights are automatically on or off depending on the level of the outside light.

Turns on instrument panel lights, tail lights, parking lights and license plate lights.

Turns on fog lights (if equipped).

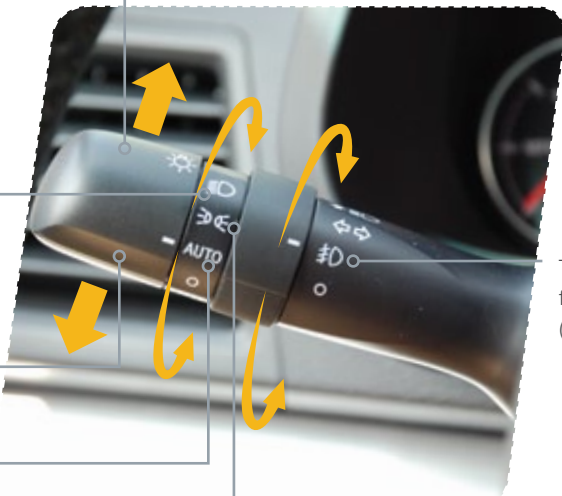

While the light switch is on, rotate the dial downward to dim the instrument panel illumination. Rotate the dial upward to make the illumination brighter. When the dial is fully rotated upward, the instrument panel illumination becomes full bright.



Windshield Wipers

To turn on the wipers, press the wiper control lever down one level for intermittent, two levels for low, or three levels for high speed. Return the lever to the “OFF” position to stop the wipers. For a single wipe, move the lever up. To spray washer fluid, pull and hold the lever toward you.

Daytime Running Lights

Daytime running lights are standard on your vehicle. Only a reduced brightness high beam will be automatically turned on when the engine has started and the parking brake is fully released and the light switch is in the “OFF” or “ ” position. The brightness of the illumination of the high beam headlights is reduced by the daytime running light system. You must always switch on your headlights when it's dark outside by turning the light switch to the  position.

Controls



Manual Climate Control (if equipped)

1. Temperature Control Dial

Rotate the temperature control dial from blue for cool, to red for warm.

2. Air Conditioning Button

Press the "A/C" button to activate the air conditioning. Press it again to turn off the air conditioning.

3. Recirculated / Outside Air Button

Press the air inlet selection button to prevent outside air from being drawn into the passenger compartment. If the button is pushed in, press it again to draw outside air into the compartment. TO PREVENT WINDSHIELD FOGGING, DO NOT REMAIN IN THE RECIRCULATED MODE FOR AN EXTENDED PERIOD OF TIME.

4. Fan Speed Control Dial

Rotate the fan speed control dial to select one of four fan speeds.



5. Rear Window Defogger Button

Press the rear window defogger button to turn on the defogger. The defogger will automatically shut off after about 15 minutes. If the window clears before that time, you can press the button again to turn it off.

6. Defrost / Defog

 
To clear the windshield and front door windows of fog or frost, press the defrost button, set the temperature control to the red position, and set the fan speed control to the fastest speed.

While in defrost mode, the air inlet selection and A/C will operate automatically (although the A/C indicator will illuminate if the button was depressed prior to or during defrost mode).

7. Air Flow Control Buttons

The air flow control buttons allow you to choose the direction of air flow. Press in the desired button.

Controls

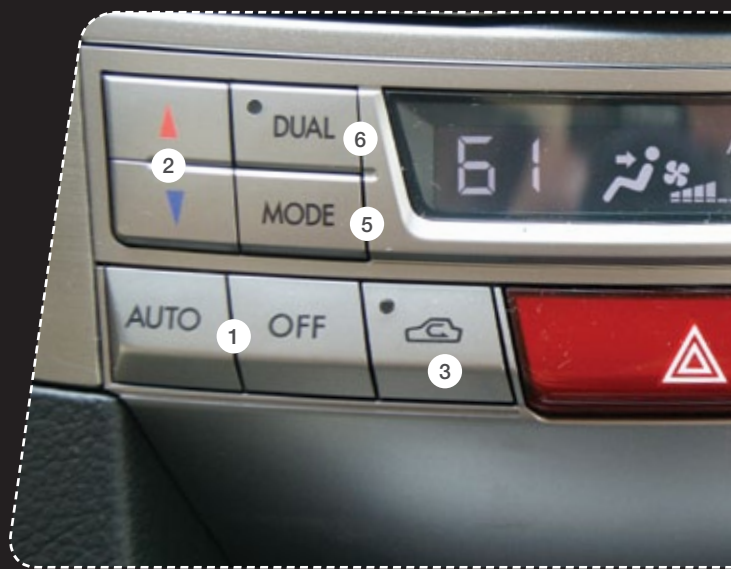

Automatic Climate Control (if equipped)

1. Automatic On and Off

This system automatically controls outlet air temperature, fan speed, air flow distribution, air inlet control, and air conditioner compressor operation. Press "AUTO" to activate. Press "OFF" to turn off the system.

2. Temperature Control Buttons

Press the blue down arrow (cool) or the red up arrow (warm) to select and maintain a comfortable climate within the driver and passenger compartment.

Temperature is displayed digitally on the screen. Separate temperature settings can be adjusted for the driver's side and passenger's side.

Operation in Manual Mode

3. Recirculated / Outside Air Button

Press the air inlet selection button to prevent outside air from being drawn into the passenger compartment. Press the button again to allow outside air into the compartment. TO PREVENT WINDSHIELD FOGGING, DO NOT REMAIN IN THE RECIRCULATED MODE FOR AN EXTENDED PERIOD OF TIME.



4. Fan Speed Control Buttons

Press the fan speed control buttons to select six different fan speed positions.

5. Air Flow Mode Selection Button

Press the button to select the desired air flow mode. The selected air flow mode – either ventilation, bi-level, heat, heat-defrost or defrost – is shown on the display.

6. Dual Mode Button

Press the “DUAL” button to activate or deactivate the dual mode. Dual mode makes it possible to have separate temperature settings for the driver’s side and passenger’s side.

7. Air Conditioner Button

Press the “A/C” button to activate the air conditioning. Press it again to turn off the air conditioning.

8. Defroster Button

Press the button to defrost or dehumidify the windshield and front door windows.

9. Rear Window Defogger Button

Press the button to turn on the defogger. It will automatically shut off after about 15 minutes. If the window clears before that time, you can press the button again to turn it off.

Controls



AM/FM Stereo with Single Disc CD Player (if equipped)

Radio Functions

1. Power / Volume Control

Press the power / volume control knob for on or off; rotate the knob to control the volume.

2. Bass, Middle Treble, Fader and Balance

Each press of the “TUNE/TRACK/CH” button will cycle you through Bass, Midrange, Treble, Fade or Balance. Rotate the “TUNE/TRACK/CH” knob to adjust the desired level.

3. FM / AM

Press the “FM” button to choose FM1, FM2 or FM3 reception. Press the “AM” button to choose AM reception.

4. Tune / Track

Rotate the “TUNE/TRACK/CH” knob clockwise to increase the tuning frequency; rotate the knob counter-clockwise to decrease it.

5. Seek

Press the right or left arrow of the “SEEK” button to pick up the next highest or lowest frequency.

6. Presets

You can save up to six favorite stations for each band – FM1, FM2, FM3 and AM. Select a frequency and press one of the preset buttons for more than 1.5 seconds to store it.

7. Satellite Radio

An optional satellite radio tuner and antenna can be connected to this audio unit. You can hear satellite radio programs by pressing the “SAT” button after connecting optional equipment. To receive satellite radio service, it is necessary to enter into a separate contract with a satellite radio provider.

CD Player functions

8. Load

Insert a disc into the slot. The CD will automatically be drawn in and will begin play at the first track.

9. Play CD

Press the "CD/AUX" button and playback will begin.

10. Repeat / Random

Press the "RPT/RDM" button once to repeat the current track; press twice to repeat the current folder.

Press and hold the "RPT/RDM" button once to randomize tracks on a CD.

11. Eject

Press the button to eject the disc.

12. Forward / Reverse

Rotate the "TUNE/TRACK/CH" knob clockwise to skip to the beginning of the next track; rotate the knob counter-clockwise to skip to the beginning of the current track. Rotate the knob counter-clockwise again to go to the previous selection.

13. Fast Forward / Fast Reverse

Press and hold the right arrow of the "SEEK" button for more than one second to fast forward. Release the button to stop. To fast reverse, press and hold the left arrow for more than one second and release the button to stop.

14. Scan

Press the "SCAN" button to begin previewing the first 10 seconds of each track on the disc. Normal playback will resume after all tracks have been scanned. Press the "SCAN" button again to stop scanning and listen to the track being previewed.

MP3/WMA Formatted CD Player Functions

15. Folder Selection

Press the up arrow of the "FOLDER" button to select the next folder. Press the down arrow to go back to the first music file. Quickly press the down arrow again to go back to the previous folder.

 
16. Page Scroll

Press the "TEXT" button to select title display. Press and hold again to scroll through the title, 8 characters at a time. Up to a maximum of 64 characters.

17. Display

Press and hold the "TEXT" button during playback to change the display to show the play time, disc title, artist name and track title. If the disc is formatted with MP3/WMA's, press the "TEXT" button to change the display to show play time, folder name and file name.

Controls

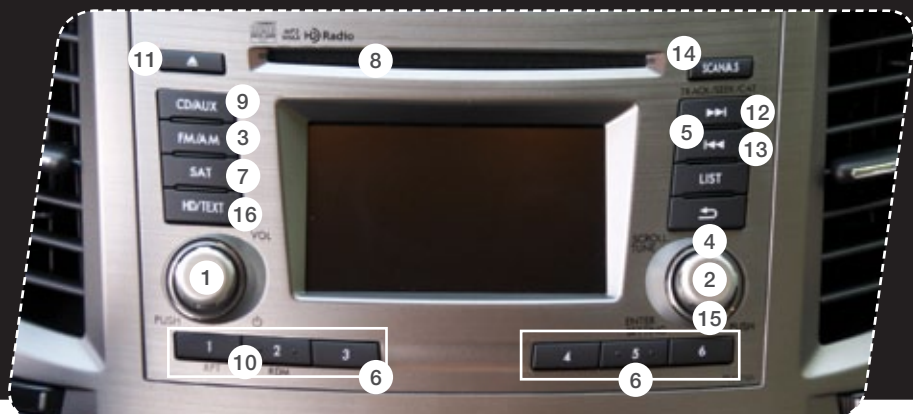

AM/FM Stereo HD Radio® with Single Disc CD Player (if equipped)

Radio Functions

1. Power / Volume Control

Press the power / volume control knob for on or off; rotate the knob to control the volume.

2. Bass, Middle, Treble, Fader and Balance

Press the “SETTING” knob; rotate the knob to select the preferred menu. Press the knob again to enter the selected menu; rotate the knob to adjust the feature.

3. FM / AM

Press the “FM/AM” button to choose FM1, FM2, FM3 or AM reception.

4. Tune / Track

Rotate the “SCROLL/TUNE” knob clockwise to increase the tuning frequency; rotate the knob counter-clockwise to decrease it.

5. Seek

Press the right or left arrow of the “SEEK” button to pick up the next highest or lowest frequency.

6. Presets

You can save up to six favorite stations for each band – FM1, FM2, FM3 and AM. Select a frequency and press one of the preset buttons until a confirmation beep is heard.

7. Satellite Radio

You can hear satellite radio programs by pressing the “SAT” button. To receive satellite radio service after your trial period, it is necessary to enter into a separate contract with the satellite radio provider.

CD Player functions

8. Load

Insert a disc into the slot. The CD will automatically be drawn in and will begin play at the first track.

9. Play CD

Press the "CD/AUX" button and playback will begin.

10. Repeat / Random

Press the "RPT" button once to repeat the current folder; press twice to repeat the current track.

Press the "RDM" button once to randomize tracks on a CD; press twice to randomize all tracks in a folder.

11. Eject

Press the button to eject the disc.

12. Forward / Reverse

Press the right arrow of the "SEEK" button to skip to the beginning of the next track. Press the left arrow to skip to the beginning of the current track; press again to go to the previous selection.

13. Fast Forward / Fast Reverse

Press and hold the right arrow of the "SEEK" button for more than one second to fast forward. Release the button to stop. To fast reverse, press and hold the left arrow for more than one second and release the button to stop.

14. Scan

Press the "SCAN/A.S" button to begin previewing the first 10 seconds of each track on the disc. Normal playback will resume after all tracks have been scanned. Press the "SCAN/A.S" button again to stop scanning and listen to the track being previewed.

MP3/WMA Formatted CD Player Functions

15. Folder Selection

Rotate the "SCROLL/TUNE" knob clockwise to select the next folder. Rotate the knob counter-clockwise to go to the previous folder.

HD Radio® Functions

16. HD Radio® Selection

Press the "HD/TEXT" button while listening to FM radio (will not work in AM broadcast). The next channel of the station that is being received will play.

You can change the HD Radio® settings by going into the settings menu.

Controls

Steering Wheel Audio Controls (if equipped)

- Push the switch up to increase or down to reduce volume.
- With any of the radio modes selected, push the switch up or down to skip through your presets. In CD mode, push the switch up or down to skip forward or back a track.




- Press the button to select the desired audio mode – FM, AM, SAT, CD, AUX, MEDIA.
- Talk switch, please refer to the “Bluetooth audio” section in your Owner’s Manual Guide.



Auxiliary Input Jack

 The 3.5mm auxiliary input jack is located in the center console. You can connect a portable music player to the auxiliary jack and hear the music stored on it through the vehicle speakers. Press the “CD/AUX” button located on the audio system to select the auxiliary mode.

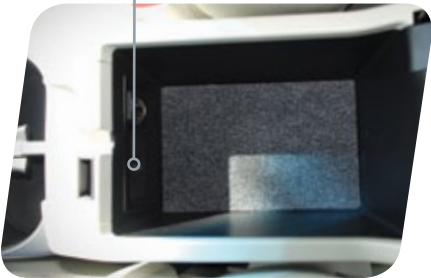


USB Storage Device / iPod® (if equipped)

You can connect a USB equipped portable music player to the USB connector and hear the music stored on it through the vehicle speakers. Press the “CD/AUX” button located on the audio system repeatedly until the USB / iPod® mode is selected.

Cruise Control

- To activate the cruise control, press the  button. The indicator light on the instrument panel will turn on. To deactivate cruise control, press the  button again.

 - To resume your speed after canceling, push the switch to the “RES” side.

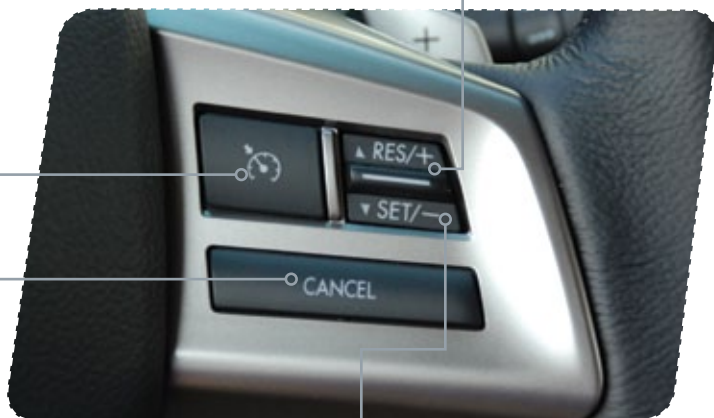

- To cancel the cruise control, push the brake pedal or press the “CANCEL” button. If you have a manual transmission, you can push in the clutch pedal.

- Press the accelerator pedal until your vehicle reaches the desired speed. Push the switch to the “SET” side and release. Ease off the accelerator pedal. Your vehicle will maintain the desired speed.

Increase speed

Push up the “RES/SET” switch to the “RES” side; hold until your vehicle reaches the desired speed and release. To increase speed using the accelerator pedal, press the pedal until you reach the desired speed. Push down the “RES/SET” switch to the “SET” side to set the speed.

Decrease speed

Push down the “RES/SET” switch to the “SET” side; hold until your vehicle slows to the desired speed and release. To decrease the speed using the brake pedal, press the pedal to release cruise control temporarily. When the speed decreases to the desired speed, push down the “RES/SET” switch to the “SET” side to set the speed.

While Operating

Electronic Parking Brake



To apply, push the brake pedal and press the parking brake switch firmly. The brake system warning light on the instrument panel and the indicator light on the parking brake switch will illuminate.

To release, make sure all doors are closed and your seatbelt is fastened, then gently push the accelerator pedal. Or, while the ignition switch is in the ON position and the brake pedal and the clutch pedal (MT models only) are pushed in, pull the parking brake switch toward you.



Hill Holder™ Function

When the Hill Holder function is activated, the parking brake will be automatically applied when stopped on an uphill or downhill slope with the brake pedal pushed down. The brake system warning light and the indicator light on the parking brake switch will illuminate. To activate, press the Hill Holder switch. To deactivate, press the Hill Holder switch again.

Automatic Transmission Shift Mode

The 5-Speed automatic transmission or the Continuously Variable Transmission (CVT) gives you ultimate control with two different driving modes: Normal Mode and Manual Mode.

Normal Mode

When the selector lever is in the “D” (Drive) position, the transmission is in Normal shift mode. The shift position indicator on the instrument panel shows “D” and the transmission automatically shifts into a suitable forward gear.

Manual Mode

In Manual Mode, you select the desired gear position to obtain necessary acceleration

and engine braking. Moving the selector lever left into the manual gate ① from “D” (Drive) position causes the transmission to change into Manual Mode. To shift, use the paddle shift control switches. The shift position indicator shows the selected gear position.





 
Paddle Shift Control Switches

- Temporary use: Even when the selector is in the “D” (Drive) position, you can temporarily shift the gear by pulling the “+” or “-” paddle shift control switch. The transmission will automatically switch back to Normal Mode.
- When the selector lever is in Manual Mode, shift to the next higher gear by pulling the “+” paddle shift control switch on the steering wheel. Pull the “-” paddle shift control switch to shift into the next lower gear.

When Manual Shifting Operation Is Possible


- Arrow-shaped lights in the center of the instrument panel show whether an upshift is possible and whether a downshift is possible.
- Both arrows are on: Upshifting and downshifting are both possible.
- Up arrow only is on: Only upshifting is possible.
- Down arrow only is on: Only downshifting is possible.

Safety / In Case of Emergency

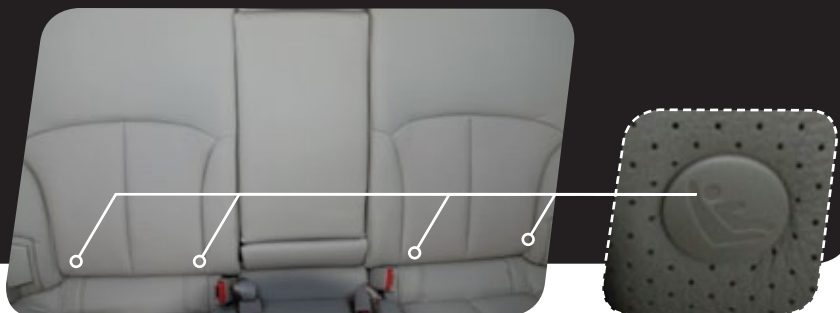


Child Restraint System

 For maximum safety, first carefully read the LATCH system instructions from the device manufacturer, as well as the installation instructions in your Owner's Manual, to properly install the LATCH compatible restraint system. Use the appropriate seatbelts or anchorages provided in your vehicle. Children age 12 and under must properly occupy the rear seat at all times.

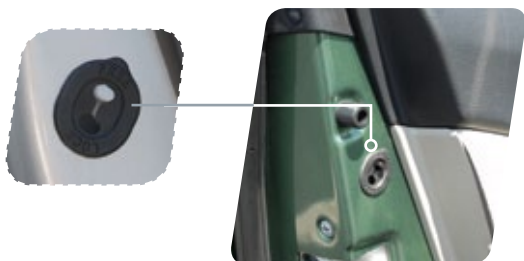

Child Safety Locks

 The child safety locks are located on the inside edges of the rear doors. In the locked position, the rear doors can only be opened from the outside.

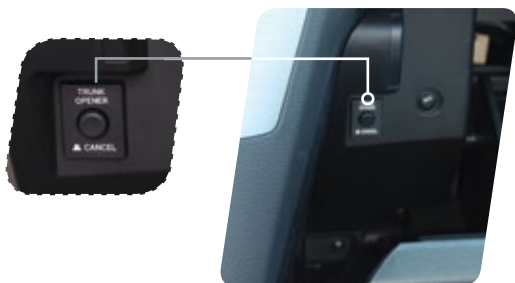

Trunk Lid Opener Switch (inside glovebox)

With the trunk lid opener switch on, the trunk lid cannot be opened with the trunk lid release or with the key.

To lock the trunk lid opener switch, press the trunk lid opener lock button. To unlock the trunk lid opener switch, press the switch again.

Internal Child Safety Trunk Release with Self-Illuminating Handle

In the event that children or adults become locked inside the trunk, this luminescent handle allows them to open the lid from inside the trunk. To open, simply pull the yellow handle downward as indicated by the arrow on the handle, and then push up on the lid.



Location of Spare Tire and Jack

A jack and other maintenance tools are stored in the tool bucket in the center of the spare tire, located in the trunk or cargo area. Raise the center lid and remove the bucket from the center of the spare tire. Take the jack out of the bucket. The jack handle is stowed on the back of the floor cover of the trunk.



Towing Your All-Wheel Drive Vehicle

Since all-wheel drive distributes engine power to all four wheels, improper towing will severely damage your AWD system. A flatbed truck is the only recommended way to properly transport your AWD vehicle. If towing is necessary, it is best done by your Subaru dealer or a commercial towing service.

Subaru Roadside Assistance

Subaru Roadside Assistance is free and standard on every 2012 Subaru vehicle. Coverage is automatic; there are no forms to complete. Subaru Roadside Assistance is available anytime during the 3-year/36,000-mile Subaru Limited Warranty, whichever comes first.* A Subaru Roadside Assistance decal has been affixed to the driver's door window.

Subaru Roadside Assistance: 1-800-261-2155

Exclusions

Specifically excluded from Subaru Roadside Assistance coverage are service requests or claims resulting from: accidents, vandalism, acts of God, violation of any laws, or vehicle modifications not recommended by the manufacturer.

*See your dealer for details

Additional Information



MY.SUBARU.COM

Your Subaru vehicle comes with a unique online resource that helps make your ownership experience more convenient and enjoyable. MySubaru.com is a website that you can personalize and offers useful features and content that makes it easy for you to manage your vehicle care and enjoy all the benefits of Subaru ownership. Log on to MySubaru.com to access features such as: automated service history, e-mail maintenance reminders, online Owner's Manual, warranty information, maintenance schedules and much more...

Access your site today @ MySubaru.com

Fuel

Use regular unleaded gasoline with an octane rating of 87 AKI or higher.

Fuel Capacity

- 18.5 US gal (70 liters, 15.4 Imp gal)
- When the low fuel indicator light is displayed on the instrument panel, approximately 2.6 U.S. gallons of fuel remain.
- If you have recently fueled your vehicle, the check engine light on the instrument panel may stay on due to a missing or loose fuel filler cap (the cap should be tightened until a click is heard).

Engine Oil

Use only the following oils:

- API classification SM or SN with the words “ENERGY CONSERVING” or “RESOURCE CONSERVING”.
- Or ILSAC GF-4 or GF-5, which can be identified with the ILSAC certification mark (Starburst mark).
 - 2.5 liter 4-cyl. DOHC models use 0W-20 synthetic.
 - 3.6 liter 6-cyl. models use 5W-30.

Engine Oil Capacity

- 2.5 liter 4-cyl. models: 5.1 US qt (4.8 liters, 4.2 Imp qt)
- 3.6 liter 6-cyl. models: 6.9 US qt (6.5 liters, 5.7 Imp qt)

Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Notes

[illegible]

Subaru Delivery Checklist

Owner Information

VEHICLE ID #	
DELIVERY DATE	
OWNER NAME	
OWNER NAME	

Owner Resources & Warranty

- ☐ Present the Subaru Owner's Manual & Quick Reference Guide (detailed review in "Operation & Controls" section)
- ☐ Review Subaru Roadside Assistance, Owner Cards & Provide Toll-Free Number 1-800-261-2155
- ☐ Explain 3/36 BASIC Warranty / 5/60 Powertrain Warranty / Explain Wear Items & Adjustments / PZEV (if applicable) / Review Rust Perforation Warranty / Tire Warranty
- ☐ Review Service & Maintenance Schedules & Terms
Explain Normal vs. Extreme Schedules (if applicable)
- ☐ Review New Owner's MY.SUBARU.COM Website
- ☐ Review The Subaru Mastercard Program from CHASE & Explain The Card Benefits
- ☐ Explain Dealership's New Owner Follow Up Procedure

Customer Signature

- ☐ Review Dealership Service Department Location, Payment Options & Hours of Operation
- ☐ Introduce The Subaru Service Advisor & Provide Their Business Card
- ☐ Explain Dealership Service Appointment Scheduling & Early Morning Service Drop Off Procedures
- ☐ Review Dealership Parts Department Location & Hours

Vehicle Condition

- ☐ Exterior Condition Approval (New Owner indicated exterior of vehicle is clean & undamaged)
- ☐ Interior Condition Approval (New Owner indicates interior of vehicle is clean & undamaged)
- ☐ Operational Condition Approval (New Owner has driven vehicle & approves it is ready for delivery)

NEW OWNER SIGNATURE
SALES CONSULTANT SIGNATURE
SALES MANAGER SIGNATURE

Fold back and remove this checklist from the QRG. Place this completed checklist in the deal jacket for future reference. Additional copies of this checklist can be made by photocopying.

Operation & Controls

Please use & reference the **SUBARU OWNER'S MANUAL**
& **QUICK REFERENCE GUIDE**

OPERATION & CONTROLS

- ☐ Review Master & Valet Keys
- ☐ Show Keyless Entry, Alarm System & Remote Start (if equipped)
- ☐ Show Hood & Gas Door Releases
- ☐ Show Yellow Caps & Explain Checking & Filling of Vehicle Fluids
- ☐ Show Fuel Filler Door & Gas Cap Operation
- ☐ Show Location of Both Fuse Boxes

REAR & SIDE

- ☐ Show Trunk Release & Valet Feature (sedans only)
- ☐ Show Spare Tire, Tools & Jack Location
- ☐ Explain Temporary Spare Tire Usage & Limitations
- ☐ Explain AWD Towing Requirements & Limitations
- ☐ Show LATCH System & Tethers
- ☐ Show Child Safety Lock Operation

INTERIOR

- ☐ Explain Operation of Manual Transmission & Hill Holder
- ☐ Explain Operation of Automatic Transmission & Review Manual Mode (if equipped)
- ☐ Show All Weather Package - Heated Front Seats, Windshield Wiper De-Icer & Heated Side Mirrors (if equipped)
- ☐ Show Seatbelt & Head Restraint Functions
- ☐ Show Tilt Steering Column & Telescopic Feature (if equipped)
- ☐ Explain the Subaru Advanced Frontal Airbag System (SRS), Front-Seat Side Pelvis/Torso Airbags (SRS) & Side-Curtain Airbags (SRS)

DRIVER CONTROLS & OPERATION

- ☐ Show Power Windows, Door Locks & Side-View Mirror Operation
- ☐ Review Instrument Panel Gauges & Warning Lights
- ☐ Explain Cruise Control & Power Moonroof Operation (if equipped)
- ☐ Explain Tire Pressure Monitoring System Light
- ☐ Show Auto Headlights, Daytime Running Lights, Parking Lights, Hazard Lights & Fog Lights (if equipped)
- ☐ Show Audio System, Station Presets, Tone, Balance & Fade Controls
- ☐ Show Interior Lighting, Map Light & Clock
- ☐ Show GPS Navigation System (if equipped)
- ☐ Show Front & Rear Wiper & Washer Controls
- ☐ Show Climate Control System Including Front & Rear Defrosters
- ☐ Show & Explain Operation of VDC Control Switch
- ☐ Explain Operation of Other Vehicle Options, Equipment, or Genuine Subaru Accessories Not Referenced Above Where Applicable

Subaru of America, Inc., Subaru Plaza,
P.O. Box 6000, Cherry Hill, NJ 08034-6000



MSA5B1303A
Issued April 2012
Printed in USA 05/12

