

2013 XV Crosstrek

Subaru of America, Inc., Subaru Plaza,
P.O. Box 6000, Cherry Hill, NJ 08034-6000



MSA5B1317A
Issued June 2012
Printed in USA 09/12



Quick Reference Guide



Complete U.S. specifications and illustrations may not have been available at time of publication. Specifications are based on the latest product information available at time of publication. Some images shown are for illustration purposes only. Some equipment shown may be optional at extra cost. Specific options may be available only in combination with other options. Specific combinations of equipment or features may vary from time to time and by geographic area. Certain accessories and equipment may not be available at the time of publication.

This Quick Reference Guide applies to all XV Crosstrek models. Therefore, some explanations may be for equipment not installed on your vehicle. Subaru of America, Inc., reserves the right to change or discontinue at any time, without notice, prices, colors, materials, equipment, accessories, specifications, models and packages without incurring any obligation to make the same or similar changes on vehicles previously sold. Colors shown may vary due to reproduction process.

For detailed operating and safety information, please consult the Owner's Manual.

Subaru, Outback, Legacy, Forester, Impreza, BRZ, WRX, WRX/STI, XV Crosstrek, BOXER, Lineartronic, Alcantara, XM and Sirius are registered trademarks.

All rights reserved. Contents may not be reprinted or electronically reproduced in whole or in part without prior written approval of Subaru of America, Inc.

© 2012 Subaru of America, Inc.

Table of Contents

Getting Started	2 - 3
Instrument Panel	4 - 5
Gauges	6 - 7
Personalize	8 - 9
Controls	10 - 21
While Operating	22 - 23
Safety/In Case of Emergency	24 - 25
Additional Information	26 - 27

Remote Keyless Entry

Lock/Arm

- Press to lock all doors and rear gate and activate the security alarm.
- If any of the doors or the rear gate are not fully closed, an electronic chirp will sound five times and the hazard lights will flash five times to alert you that the doors or the rear gate are not properly closed.
- To activate the vehicle finder function, press three times (within five seconds). If you are within 30 feet of the vehicle, the horn will sound one time and the hazard lights will flash three times.

Unlock/Disarm

- Press once to unlock the driver's door.
- Press twice (within five seconds) to unlock all doors.
- When the "Unlock/Disarm" button is pressed, the dome and map lights will illuminate if the dome light switch is in the middle position.



Opening the Rear Gate

Press to unlock the rear gate. An electronic chirp will sound twice and the hazard lights will flash twice.

Panic Alarm

- Press once and the horn will sound and the hazard lights will flash.
- Press any button on the remote to deactivate.

Immobilizer

When the security alarm is activated, the immobilizer interrupts the starter motor to prevent an intruder from starting your vehicle without a registered key.

Seating



Seat Controls

- 1. Forward/Backward**
Pull up on the lever below the front of the driver's seat to move the seat forward or backward.
- 2. Raise/Lower Seat Cushion**
To adjust the height of the driver's seat, push or pull the seat height adjustment lever located on the lower left side front of the seat.
- 3. Recline Seatback**
To adjust the seatback to the desired position, pull up on the recline lever located on the lower left rear of the driver's seat or lower right rear of the passenger's seat. Do not adjust seats while driving.

Heated Seats (if equipped)

Switches are located on the center console between the driver and passenger seats; choose low (bottom of switch) for normal heating or high (top of switch) for rapid heating. Choose the center position to turn off the seat heaters.

Folding Down the Rear Seats

Lower the headrests. Pull up on the release tab on the seat side that you want to fold down. To return the seatback to its original position, raise the seatback until it locks into place and make sure that it is securely locked.



Instrument Panel



Clock
Press the “+” button to advance the time or the “-” button to reverse the time. Vehicles with a navigation system, please refer to the separate “Operating Instructions for Navigation System.”

Gauges

Immediate Attention

Caution

Informational

Getting Started

Instrument Panel

Gauges

Personalize

Controls

While Operating

Safety / In Case of Emergency

Additional Information



	Seatbelt warning		Brake system		Vehicle Dynamics Control OFF		Turn signals
	Front passenger seatbelt warning		Hot coolant temperature / Cold coolant temperature		CHECK ENGINE / Malfunction indicator		Front fog light indicator light (if equipped)
	SRS airbag system		High beam indicator light		Tire pressure warning light		Cruise control indicator light
	Security indicator light		AT OIL TEMP (Automatic Transmission)		Front passenger frontal airbag ON		Cruise control set indicator light
	Door open		ABS warning		Front passenger frontal airbag OFF		
	Charge warning		Low fuel		Engine oil level warning light		
	Oil pressure warning		All-Wheel Drive (Automatic Transmission)		Windshield washer fluid warning		
	Power steering warning		Vehicle Dynamics Control/Vehicle Dynamics Control operation		Incline Start Assist		

Personalize




Tilt Steering Column

Push the lever down firmly to adjust the height and lengthwise position of the column; firmly push the lever back up to lock the column in place. Do not adjust while driving.



Power Exterior Mirrors

Turn the knob to the "L" side to adjust the left-hand mirror or to the "R" side to adjust the right-hand mirror. Move the knob in the direction you want to move the mirror. Then return the knob to the neutral/center position.

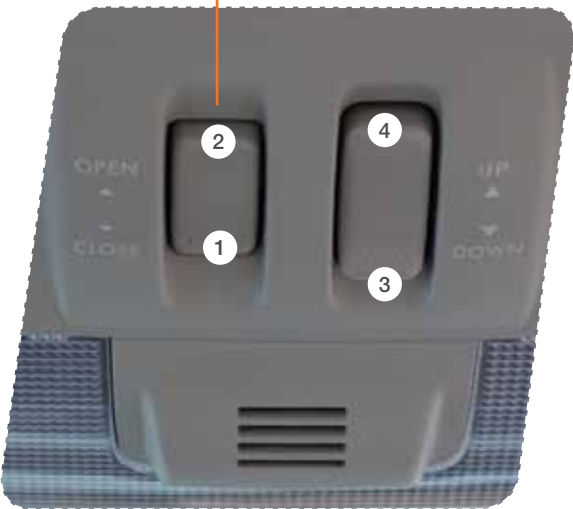


Power Moonroof (if equipped)

With the moonroof in the fully closed position, press the switch ④ to tilt the moonroof up. Press and hold the switch ③ to lower the moonroof. Press the switch ② to fully open the moonroof. Press the switch ① to close the moonroof. To stop the moonroof in a midway position while opening or closing, momentarily press the switch to the ① side or ② side.

Controls

Light Controls

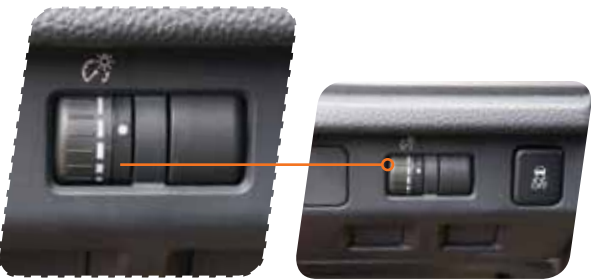

Windshield Wipers

To turn on the wipers, press the wiper control lever down one level for intermittent, two levels for low, or three levels for high speed. Return the lever to the "OFF" position to stop the wipers. For a single wipe, move the lever up. To spray washer fluid, pull and hold the lever toward you.

Rear Wiper

To operate the rear wiper, rotate the end of the knob upward to the intermittent, continuous, or wash position. When the rear wiper is off, rotate the knob downward to wash and wipe the rear window.

Daytime Running Lights

Daytime running lights are standard on your vehicle. A reduced brightness high beam will be automatically turned on when the engine has started and the parking brake is fully released or the light switch is in the "OFF" or "DRL" position. The brightness of the illumination of the high beam headlights is reduced by the daytime running light system. You must always switch on your headlights when it's dark outside by turning the light switch to the position.



Manual HVAC System

1. Air Flow Control Dial

The air flow control dial allows you to choose the direction of air flow. Rotate the dial for the desired air flow position.

Defrost / Defog

To clear the windshield and front door windows of fog or frost, rotate the air flow control dial to the defrost position, set the temperature control to the red position, and set the fan speed control to the fastest speed.

2. Rear Window Defogger Button

Press the rear window defogger button to turn on the defogger. The defogger will automatically shut off after about 15 minutes. If the window clears before that time, you can press the button again to turn it off.

3. Fan Speed Control Dial

Rotate the fan speed control dial to select one of four fan speeds.

4. Air Conditioning Button

Press the “A/C” button to activate the air conditioning. Press it again to turn off the air conditioning.

5. Recirculated / Outside Air Button

Press the air inlet selection button to prevent outside air from being drawn into the passenger compartment. If the button is pushed in, press it again to draw outside air into the compartment. TO PREVENT WINDSHIELD FOGGING, DO NOT REMAIN IN THE RECIRCULATED MODE FOR AN EXTENDED PERIOD OF TIME.

6. Temperature Control Dial

Rotate the temperature control dial from blue for cool, to red for warm.



Automatic Climate Control System (if equipped)

1. Air Flow Control Dial

On the automatic setting, the system determines the air flow location to achieve the desired temperature or you can manually choose the direction of air flow. Rotate the dial for the desired air flow position.

Defrost / Defog

To clear the windshield and front door windows of fog or frost, rotate the air flow control dial to the defrost position, set the temperature control to the red position, and set the fan speed control of the fastest speed.

2. Rear Window Defogger Button

Press the rear window defogger button to turn on the defogger. The defogger will automatically shut off after about 15 minutes. If the window clears before that time, you can press the button again to turn it off.

3. Fan Speed Control Dial

On the automatic setting, the system determines the fan speed to achieve the desired temperature or you can manually rotate the fan speed control dial to select one of seven fan speeds.

4. Air Conditioning Button

Press the “A/C” button to activate the air conditioning. Press it again to turn off the air conditioning.

5. Recirculated / Outside Air Button

In the automatic mode, the system will determine if recirculated air is needed to achieve a desired temperature. In manual mode, press the air inlet selection button to prevent outside air from being drawn into the passenger compartment. If the button is pushed

in, press it again to draw outside air into the compartment. TO PREVENT WINDSHIELD FOGGING, DO NOT REMAIN IN THE RECIRCULATED MODE FOR AN EXTENDED PERIOD OF TIME.

6. Temperature Control Dial

Rotate the temperature control dial from 65 for cool to 85 for warm.



AM/FM Stereo with Single Disc CD Player

Radio Functions

1. Power / Volume Control

Press the power / volume control knob for on or off; rotate the knob to control the volume.
2. Bass, Middle, Treble, Fader and Balance

Each press of the “TUNE/TRACK/CH” button will cycle you through Bass, Midrange, Treble, Fade or Balance. Rotate the “TUNE/TRACK/CH” knob to adjust the desired level.
3. FM / AM

Press the “FM” or “AM” button to choose FM1, FM2, FM3 or AM reception.
4. Tune / Track

Rotate the “TUNE/TRACK/CH” knob clockwise to increase the tuning frequency; rotate the knob counterclockwise to decrease it.
5. Seek

Press the right or left arrow of the “SEEK” button to pick up the next highest or lowest frequency.
6. Presets

You can save up to six favorite stations for each band – FM1, FM2, FM3 and AM. Select a frequency and press one of the preset buttons until a confirmation beep is heard.
7. PTY / CAT

Press the “PTY/CAT” button to change to program type selection mode. The PTY group that you are currently listening to is displayed for 10 seconds.

CD Player functions

8. Load

Insert a disc into the slot. The CD will automatically be drawn in and will begin play at the first track.
9. Play CD

Press the “CD/AUX” button and playback will begin.
10. Repeat / Random

Press the “RPT/RDM” button once to repeat the current track; press twice to repeat the current folder.

Press and hold the “RPT/RDM” button once to randomize all tracks in a folder; press twice to randomize tracks on a CD.
11. Eject

Press the button to eject the disc.
12. Forward / Reverse

Rotate the “TUNE/TRACK/CH” knob clockwise to skip to the beginning of the next track; rotate the knob counterclockwise to skip to the beginning of the current track. Rotate the knob counterclockwise again to go to the previous selection.
13. Fast Forward / Fast Reverse

Press and hold the right arrow of the “SEEK” button for more than one second to fast forward. Release the button to stop. To fast reverse, press and hold the left arrow for more than one second and release the button to stop.
14. Scan

Press the “SCAN” button to begin previewing the first 10 seconds of each track on the disc. Normal playback will resume after all tracks have been scanned. Press the “SCAN” button again to stop scanning and listen to the track being previewed.
15. Folder Selection

Press the up arrow of the “FOLDER” button to select the next folder. Press the down arrow to go back to the first music file. Quickly press the down arrow again to go back to the previous folder.
16. Page Scroll

Press the “TEXT” button to select title display. Press and hold again to scroll through the title, 8 characters at a time up to a maximum of 64 characters.
17. Display

Press and hold the “TEXT” button during playback to change the display to show the play time, disc title, artist name and track title. If the disc is formatted with MP3/WMA, press the “TEXT” button to change the display to show play time, folder name and file name.

MP3/WMA Formatted CD Player Functions

Controls



AM/FM Stereo HD Radio™ with Single Disc CD Player (if equipped)

Radio Functions

- 1. Power / Volume Control**
Press the power / volume control knob for on or off; rotate the knob to control the volume.
- 2. Bass, Mid, Treble, Fader and Balance**
Press the “TUNE/TRACK/CH” button to display the setting menu. Using the “TUNE/TRACK/CH” dial you can adjust the settings on the Bass, Mid, Treble, Balance and Fader.
- 3. FM**
Press the “FM” button to choose FM1, FM2, or FM-AS reception.
- 4. AM**
Press the “AM” button to choose AM or AM-AS reception.

- 5. Tune / Track**
Rotate the “TUNE/TRACK/CH” knob clockwise to increase the tuning frequency; rotate the knob counterclockwise to decrease it.
- 6. Seek**
Press the right or left arrow of the “SEEK” button to pick up the next highest or lowest frequency.
- 7. Presets**
You can save up to six favorite stations for each band – FM1, FM2, FM3 and AM. Select a frequency and press one of the preset buttons until a confirmation beep is heard.
- 8. HD/TAG**
Press the “HD/TAG” button while receiving FM radio (except analog broadcasts) to hear the stations digitally.

CD Player Functions

- 9. Load**
Insert a disc into the slot. The CD will automatically be drawn in and will begin play at the first track.
- 10. Play CD**
Press the “CD/AUX” button and playback will begin.
- 11. Repeat**
Press the “RPT” button once to repeat the current track; press twice to repeat the current folder.
- 12. Random**
Press and hold the “RDM” button once to randomize the entire disc; press twice to randomize all tracks in a folder.
- 13. Eject**
Press the button to eject the disc.
- 14. Forward / Reverse**
Rotate the “TUNE/TRACK/CH” knob clockwise to skip to the beginning of the next track; rotate the knob counterclockwise to skip to the beginning of the current track. Rotate the knob counterclockwise again to go to the previous selection.
- 15. Fast Forward / Fast Reverse**
Press and hold the right arrow of the “SEEK” button to fast forward. Release the button to stop. To fast reverse, press and hold the left arrow; release the button to stop.

MP3/WMA Formatted CD Player Functions

- 16. Folder Selection**
Press the right arrow of the “FOLDER” button to select the next folder. Press the left arrow to go back to the first music file. Quickly press the left arrow again to go back to the previous folder.

Getting Started

Instrument Panel

Gauges

Personalize

Controls

While Operating

Safety / In Case of Emergency

Additional Information

Controls

Steering Wheel Audio Controls (if equipped)

- Push the switch up to increase or down to reduce volume.
- With any of the radio modes selected, push the switch up or down to skip through your presets. In CD mode, push the switch up or down to skip forward or back on a track.
- Press the button to select the desired audio mode – FM, AM, SAT, CD, AUX, MEDIA.
- Talk switch; please refer to the “Bluetooth audio (type B and C audio)” section in your Owner’s Manual Guide.



Auxiliary Input Jack

The 3.5mm auxiliary input jack is located in the center console. You can connect a portable music player to the auxiliary jack and hear the music stored on it through the vehicle speakers. Press the “CD/AUX” button located on the audio system to select the auxiliary mode.



USB Storage Device / iPod® (if equipped)

You can connect a USB equipped portable music player to the USB connector and hear the music stored on it through the vehicle speakers. Press the “CD/AUX” button located on the audio system repeatedly until the USB / iPod® mode is selected.



Cruise Control

- To activate the cruise control, press the button. The indicator light on the instrument panel will turn on. To deactivate cruise control, press the button again.
- To resume your speed after canceling, push the switch to the “RES” side.
- To cancel the cruise control, push the brake pedal or press the “CANCEL” button. If you have a manual transmission, you can push in the clutch pedal.
- Press the accelerator pedal until your vehicle reaches the desired speed. Push the switch to the “SET” side and release. Ease off the accelerator pedal. Your vehicle will maintain the desired speed.



Increase speed

Push up the “RES/SET” switch to the “RES” side; hold until your vehicle reaches the desired speed and release. To increase speed using the accelerator pedal, press the pedal until you reach the desired speed. Push down the “RES/SET” switch to the “SET” side to set the speed.

Decrease speed

Push down the “RES/SET” switch to the “SET” side; hold until your vehicle slows to the desired speed and release. To decrease the speed using the brake pedal, press the pedal to release cruise control temporarily. When the speed decreases to the desired speed, push down the “RES/SET” switch to the “SET” side to set the speed.

While Operating

Vehicle Dynamics Control OFF Switch

Pressing the switch to deactivate the Vehicle Dynamics Control system can help in the following situations:

- A standing start on a steeply sloping road with a snowy, gravel-covered, or otherwise slippery surface.
- When the vehicle's wheels are stuck in mud or deep snow.



Trunk and Fuel Filler Lid Releases

The vehicle is equipped with trunk and fuel filler lid releases. To open the trunk, pull the trunk lever up and release. To open the fuel filler lid, pull the fuel filler lever up and release.



Paddle Shift Control Switches

- Temporary use: Even when the selector is in the "D" (Drive) position, you can temporarily shift the gear by pulling the "+" or "-" paddle shift control switch. The transmission will automatically switch back to Normal Mode.
- When the selector lever is in Manual Mode, shift to the next higher gear by pulling the "+" paddle shift control switch on the steering wheel. Pull the "-" paddle shift control switch to shift into the next lower gear.



Automatic Transmission Shift Mode

The automatic transmission gives you ultimate control with two different driving modes: Normal Mode and Manual Mode.

Normal Mode

When the selector lever is in the "D" (Drive) position, the transmission is in Normal shift mode. The shift position indicator on the instrument panel shows "D" and the transmission automatically shifts into a suitable forward gear.

Manual Mode

In Manual Mode, you select the desired gear position to obtain necessary acceleration and engine braking. Moving the selector lever left into the manual gate ① from "D" (Drive) position causes the transmission to change into Manual Mode. To shift, use the paddle shift control switches. The shift position indicator shows the selected gear position.

When Manual Shifting Operation is Possible


- Arrow-shaped lights in the center of the instrument panel show whether an upshift is possible and whether a downshift is possible.
- Both arrows are on: Upshifting and downshifting are both possible.
- Up arrow only is on: Only upshifting is possible.
- Down arrow only is on: Only downshifting is possible.

Safety / In Case of Emergency



Child Restraint System

For maximum safety, first carefully read the LATCH system instructions from the device manufacturer, as well as the installation instructions in your Owner's Manual, to properly install the LATCH compatible restraint system. Use the appropriate seatbelts or anchorages provided in your vehicle. Children age 12 and under must properly occupy the rear seat at all times.

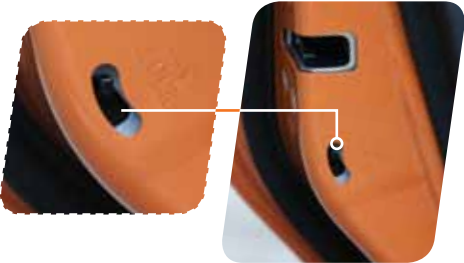

Child Safety Locks

The child safety locks are located on the inside edges of the rear doors. In the locked position, the rear doors can only be opened from the outside.



Location of Spare Tire and Jack

A jack handle is stored under the floor of the cargo area. A jack and a towing hook are stored in the tool bucket in the center of the spare tire. Also, a tool bag that contains a wheel nut wrench and a screwdriver is equipped with the vehicle.

Towing Your All-Wheel Drive Vehicle

Since all-wheel drive distributes engine power to all four wheels, improper towing will severely damage your AWD system. A flatbed truck is the only recommended way to properly transport your AWD vehicle. If towing is necessary, it is best done by your Subaru dealer or a commercial towing service.

Subaru Roadside Assistance

Subaru Roadside Assistance is free and standard on every 2013 Subaru vehicle. Coverage is automatic; there are no forms to complete. Subaru Roadside Assistance is available anytime during the 3-year/36,000-mile Subaru Limited Warranty, whichever comes first.* A Subaru Roadside Assistance decal has been affixed to the driver's door window.

Subaru Roadside Assistance: 1-800-261-2155

Exclusions

Specifically excluded from Subaru Roadside Assistance coverage are service requests or claims resulting from: accidents, vandalism, acts of God, violation of any laws, or vehicle modifications not recommended by the manufacturer.

*See your dealer for details

Additional Information



MY.SUBARU.COM

Your Subaru vehicle comes with a unique online resource that helps make your ownership experience more convenient and enjoyable. My.Subaru.com is a website that you can personalize and offers useful features and content that makes it easy for you to manage your vehicle care and enjoy all the benefits of Subaru ownership. Log on to My.Subaru.com to access features such as: automated service history, e-mail maintenance reminders, online Owner's Manual, warranty information, maintenance schedules and much more...

Access your site today @ My.Subaru.com.

Fuel

Use regular unleaded gasoline with an octane rating of 87 AKI or higher.

Fuel Capacity

- 15.9 US gal (60 liters, 13.2 Imp gal)
- When the low fuel indicator light is displayed on the instrument panel, approximately 2.6 US gallons (10.0 liters, or 2.2 Imp gal) of fuel remain.
- If you have recently fueled your vehicle, the check engine light on the instrument panel may stay on due to a missing or loose fuel filler cap (the cap should be tightened until a click is heard).

Engine Oil

Use only the following oils:

- ILSAC GF-4 or GF-5, which can be identified with the ILSAC certification mark (Starburst mark).
 - Or API classification SN or SM with the words "ENERGY CONSERVING".
- Use 0W 20 synthetic, replacement interval 7,500 miles; no requirement at the first 3,000 miles.

Engine Oil Capacity

5.1 US qt (4.8 liters, 4.2 Imp qt)

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Subaru Delivery Checklist

Owner Information

VEHICLE ID #

DELIVERY DATE

OWNER NAME

OWNER NAME

Owner Resources & Warranty

☐ Present the Subaru Owner's Manual & Quick Reference Guide (detailed review in "Operation & Controls" section)

☐ Review Subaru Roadside Assistance, Owner Cards & Provide Toll-Free Number 1-800-261-2155

☐ Explain 3/36 BASIC Warranty / 5/60 Powertrain Warranty / Explain Wear Items & Adjustments / PZEV (if applicable) / Review Rust Perforation Warranty / Tire Warranty

☐ Review Service & Maintenance Schedules & Terms
Explain Normal vs. Extreme Schedules (if applicable)

☐ Review New Owner's MY.SUBARU.COM Website

☐ Review The Subaru Mastercard Program from CHASE & Explain The Card Benefits

☐ Explain Dealership's New Owner Follow Up Procedure

Customer Signature

☐ Review Dealership Service Department Location, Payment Options & Hours of Operation

☐ Introduce The Subaru Service Advisor & Provide Their Business Card

☐ Explain Dealership Service Appointment Scheduling & Early Morning Service Drop Off Procedures

☐ Review Dealership Parts Department Location & Hours

Vehicle Condition

☐ Exterior Condition Approval (New Owner indicates exterior of vehicle is clean & undamaged)

☐ Interior Condition Approval (New Owner indicates interior of vehicle is clean & undamaged)

☐ Operational Condition Approval (New Owner has driven vehicle & approves it is ready for delivery)

NEW OWNER SIGNATURE

SALES CONSULTANT SIGNATURE

SALES MANAGER SIGNATURE

Fold back and remove this checklist from the QRG. Place this completed checklist in the deal jacket for future reference. Additional copies of this checklist can be made by photocopying.

Operation & Controls

Please use & reference the **SUBARU OWNER'S MANUAL
& QUICK REFERENCE GUIDE**

OPERATION & CONTROLS

- ☐ Review Master & Sub Master Keys
- ☐ Show Keyless Entry, Alarm System & Remote Start (if equipped)
- ☐ Show Hood & Gas Door Releases
- ☐ Show Yellow Caps & Explain Checking & Filling of Vehicle Fluids
- ☐ Show Fuel Filler Door & Gas Cap Operation
- ☐ Show Location of Both Fuse Boxes

REAR & SIDE

- ☐ Show Spare Tire, Tools & Jack Location
- ☐ Explain Temporary Spare Tire Usage & Limitations
- ☐ Explain AWD Towing Requirements & Limitations
- ☐ Show LATCH System & Tethers
- ☐ Show Child Safety Lock Operation

INTERIOR

- ☐ Explain Operation of Incline Start Assist
- ☐ Explain Operation of Automatic Transmission & Review Manual Mode (if equipped)
- ☐ Show Seatbelt & Head Restraint Functions
- ☐ Explain the Subaru Advanced Frontal Airbag System (SRS), Front-Seat Side Pelvis/Torso Airbags (SRS) & Side-Curtain Airbags (SRS)
- ☐ Show Tilt Steering Column & Telescopic Feature (if equipped)
- ☐ Show All Weather Package - Heated Front Seats, Windshield Wiper De-Icer & Heated Side Mirrors (if equipped)

DRIVER CONTROLS & OPERATION

- ☐ Show Power Windows, Door Locks & Side-View Mirror Operation
- ☐ Explain Cruise Control & Power Moonroof Operation (if equipped)
- ☐ Show Headlights, Daytime Running Lights, Parking Lights, Hazard Lights & Fog Lights
- ☐ Show Interior Lighting, Map Light & Clock
- ☐ Show Front & Rear Wiper & Washer Controls
- ☐ Show Climate Control System Including Front & Rear Defrosters
- ☐ Show & Explain Operation of VDC Control Switch
- ☐ Review Instrument Panel Gauges & Warning Lights
- ☐ Explain Tire Pressure Monitoring System Light
- ☐ Show Audio System, Station Presets, Tone, Balance & Fader Controls
- ☐ Show GPS Navigation System (if equipped)
- ☐ Explain Operation of Other Vehicle Options, Equipment, or Genuine Subaru Accessories Not Referenced Above Where Applicable