



THE BMW 4 SERIES. QUICK REFERENCE GUIDE.

BMW EfficientDynamics
Less emissions. More driving pleasure.

Contents

Your BMW 4 Series at a glance

Welcome on board

Your BMW 4 Series offers a wide range of equipment to make driving an enjoyable experience.

This Quick Reference Guide informs you about the most important basic functions of your BMW 4 Series vehicle.

For safety reasons, please read the integrated Owner's Manual for Vehicle.

Any updates made after the editorial deadline of the printed or integrated Owner's Manual are located in the appendix of this Quick Reference Guide.

BMW hopes you get off to a good start and that you enjoy your BMW 4 Series.

This Quick Reference Guide also describes and depicts equipment that may not be contained in your vehicle because of the selected special equipment or market-specific version.

4	Opening and closing	46	Breakdown assistance
6	Seats, mirrors, and steering wheel	47	Service and maintenance
11	Safety	48	24/7 Access
12	Displays and controls	50	Appendix
22	Driving		
29	Radio/CD/Multimedia		
32	iDrive		
37	Integrated Owner's Manual		
38	Navigation		
40	Entertainment		
42	Communication		
44	Refueling		



4 Opening and closing

Remote control



Unlocking


Unlocks the vehicle.

Locking

Locks the vehicle.

Opening the trunk lid

Press and hold.

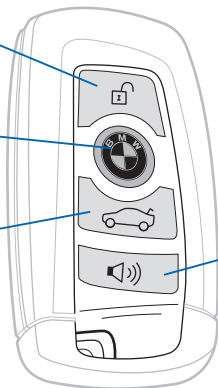

Convenient opening

Press and hold the Unlock button to open the windows and the glass sunroof.

Panic mode

Press the button for at least 3 seconds to set off the alarm system.
Switch off by pressing any button.

Personal Profile

Some of the vehicle's functions can be individually tailored and stored for several remote controls. Different settings are retrieved and implemented in the vehicle, depending on the remote control that is detected when unlocking the vehicle.

Only one remote control should be used per person.

The personal settings can be taken to another vehicle with the Personal Profile function.

The joy of driving without a remote control


The Comfort Access system allows you to gain access to the vehicle and start the engine without pressing the remote control. The remote control is automatically detected in the immediate vicinity or inside the vehicle.

Unlocking

Take a firm hold of the door handle.

Locking

Press the panel with your fingers for approx. 1 second.

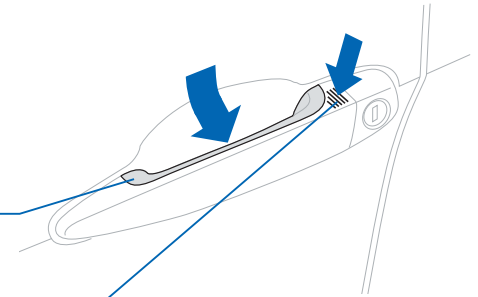

Tip

The trunk lid can be opened without contact if you have the remote control with you. Additional information can be found in the integrated Owner's Manual of the vehicle.

6 Seats, mirrors, and steering wheel

Manually adjustable seats

Backrest tilt

Height


Lumbar support

Thigh support

Forward/back

Seat tilt

Backrest width

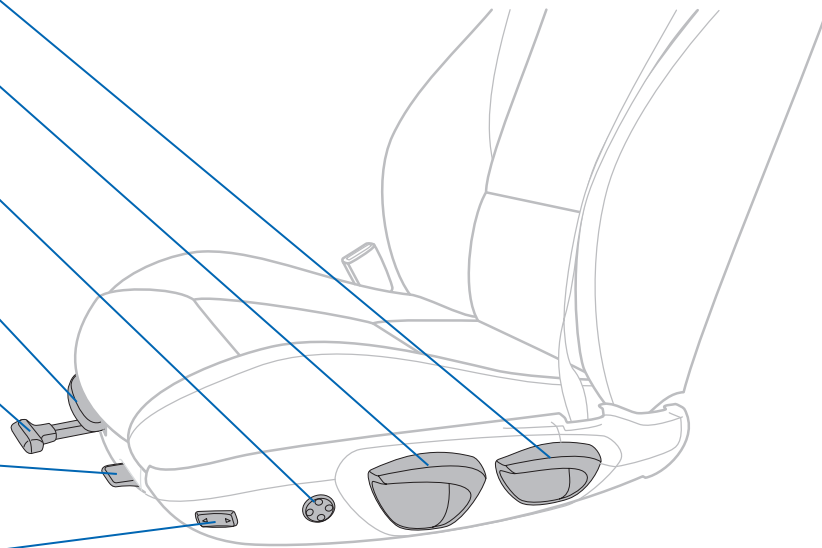

Seats, mirrors, and steering wheel 7

Electrically adjustable seats




Backrest tilt

Backrest width

**Forward/back
Height
Seat tilt**

Lumbar support

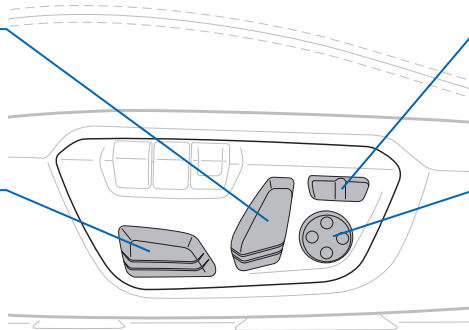

8 Seats, mirrors, and steering wheel

Mirrors

Mirror adjustment

Folding the mirrors in and out

Mirror left/right, Automatic Curb Monitor

To select the mirror: left/right

Automatic Curb Monitor on: the mirror switch is set to the driver's side mirror



Seat and mirror memory

Two different positions can be stored and retrieved for the driver's seat, exterior mirrors, and steering wheel for each remote control. The backrest width and lumbar support settings are not stored.

1. Switch on the ignition.
2. Adjust the seat and mirrors.
3. Press the M button; the LED lights up.
4. Press memory button 1 or 2.
5. Press memory button 1 or 2 to call up the stored position.


Memory buttons

M button

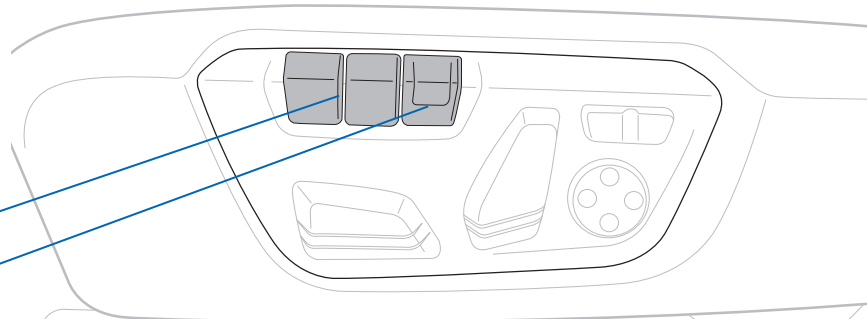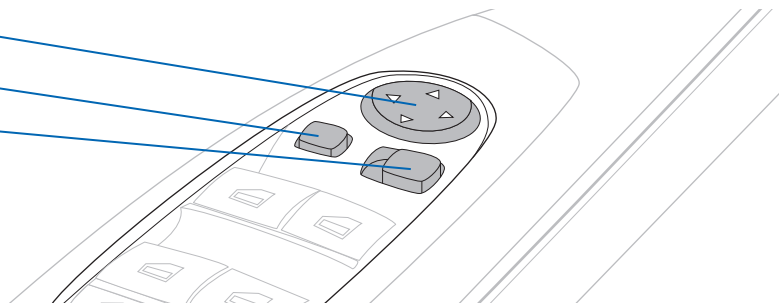

Seats, mirrors, and steering wheel 9

Universal Garage Door Opener

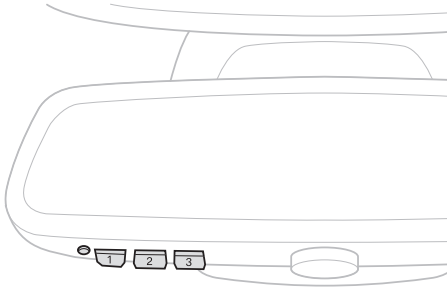

Programming

1. Switch on the ignition.
2. Press the two outer memory buttons 1 and 3 for approx. 20 seconds until the LED flashes.
3. Hold the hand-held transmitter 1 to 3 in/2.5 to 8 cm away from the memory buttons.
4. Simultaneously press the transmit button of the hand-held transmitter and the memory button of the Universal Garage Door Opener – the LED flashes slowly.
5. Release both buttons when the LED flashes rapidly.

With alternating-code radio systems

The Universal Garage Door Opener and the device may need to be synchronized.

1. Park the vehicle within range of the remote-controlled device.
2. Program the Universal Garage Door Opener as described above.
3. Press the synchronization button on the receiver of the device being set up. You have approx. 30 seconds for the next step.
4. Press the programmed memory button of the Universal Garage Door Opener for approx. 3 seconds. Repeat this step up to three times if necessary.

Operation

After programming, elements such as a garage door or lighting system can be operated using one of the buttons on the interior rear view mirror.



Note the additional information contained in the integrated Owner's Manual for Vehicle.

10 Seats, mirrors, and steering wheel

Steering wheel

Adjusting the steering wheel


1. Move the lever down.
2. Adjust the steering wheel to the seating position in longitudinal direction and height.
3. Move the lever back up.

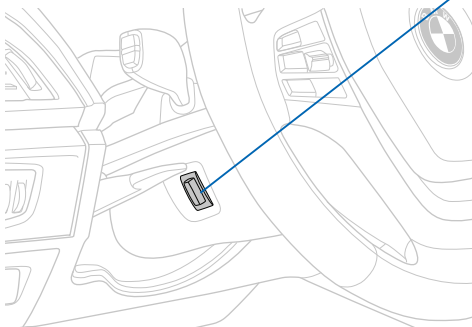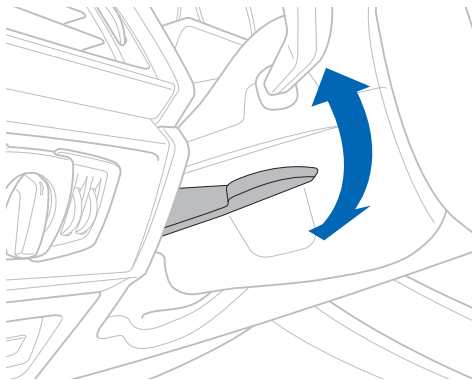

Steering wheel heating

Press the button.

The LED lights up when the steering wheel heating is switched on.

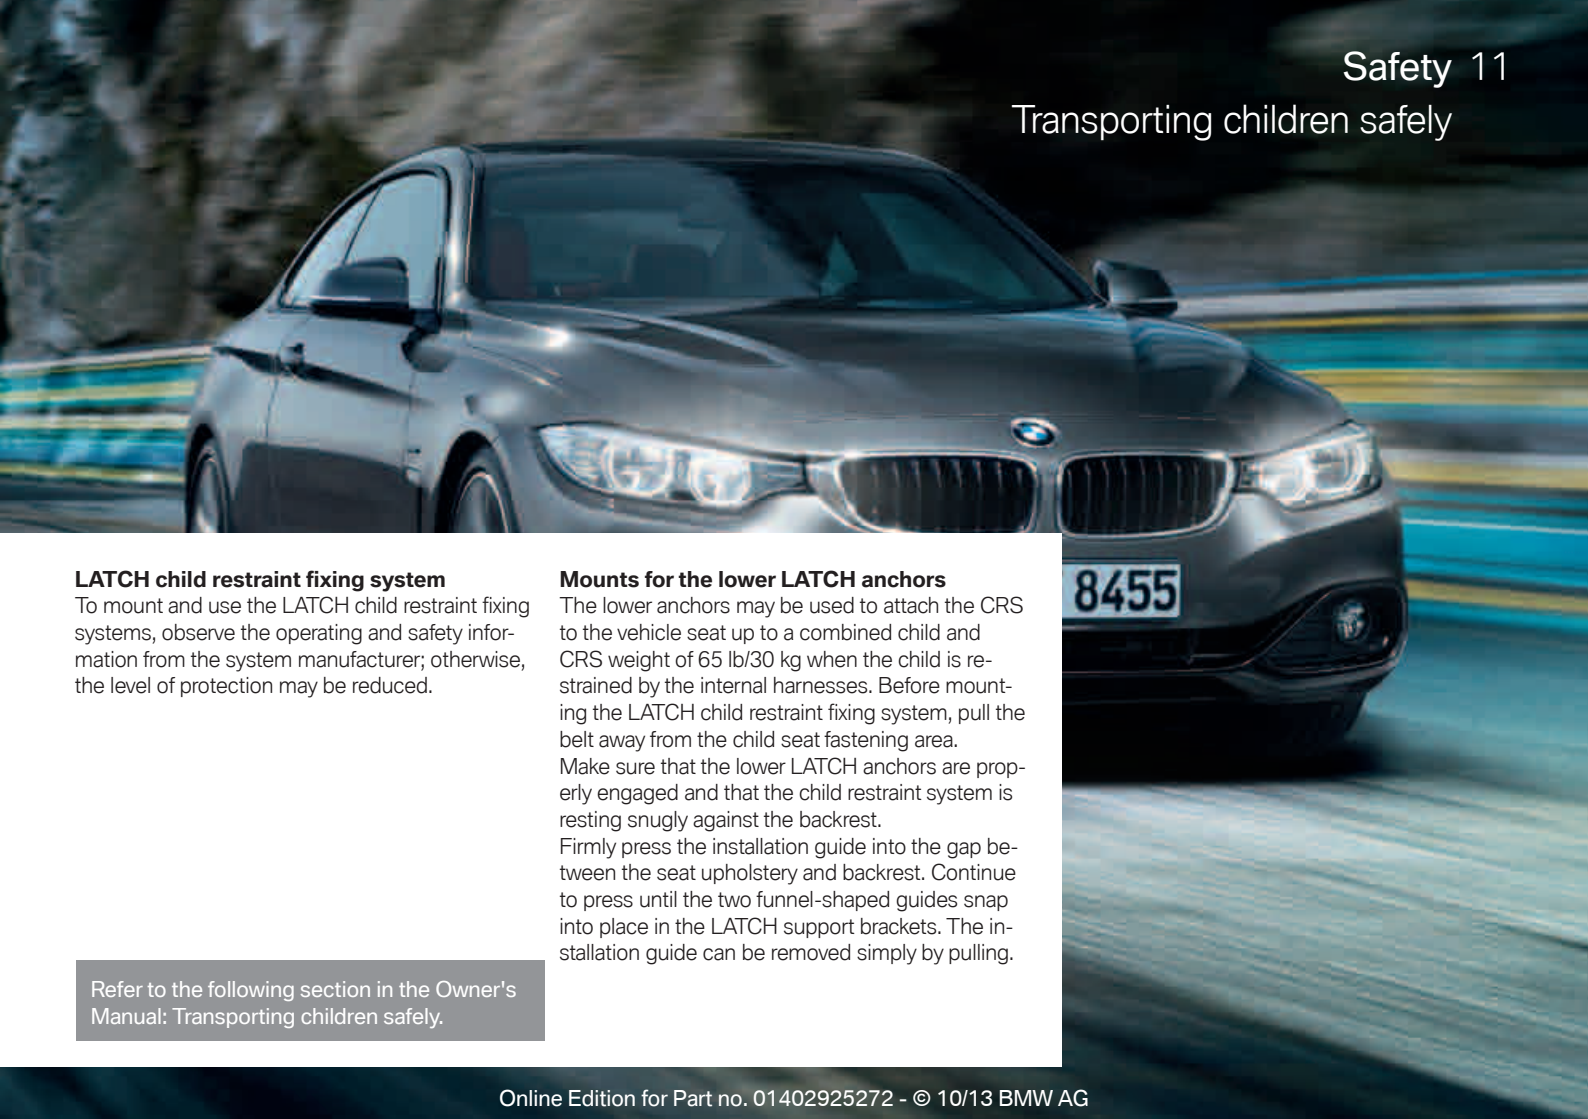**LATCH child restraint fixing system**

To mount and use the LATCH child restraint fixing systems, observe the operating and safety information from the system manufacturer; otherwise, the level of protection may be reduced.

Mounts for the lower LATCH anchors

The lower anchors may be used to attach the CRS to the vehicle seat up to a combined child and CRS weight of 65 lb/30 kg when the child is restrained by the internal harnesses. Before mounting the LATCH child restraint fixing system, pull the belt away from the child seat fastening area.

Make sure that the lower LATCH anchors are properly engaged and that the child restraint system is resting snugly against the backrest.

Firmly press the installation guide into the gap between the seat upholstery and backrest. Continue to press until the two funnel-shaped guides snap into place in the LATCH support brackets. The installation guide can be removed simply by pulling.

Refer to the following section in the Owner's Manual: Transporting children safely.

12 Displays and controls

Steering wheel



Reducing the distance


Storing the speed

Rocker switch for cruise control

Retrieving the speed


Switching cruise control on/off, interrupting
Switching active cruise control on/off, interrupting

Increasing the distance

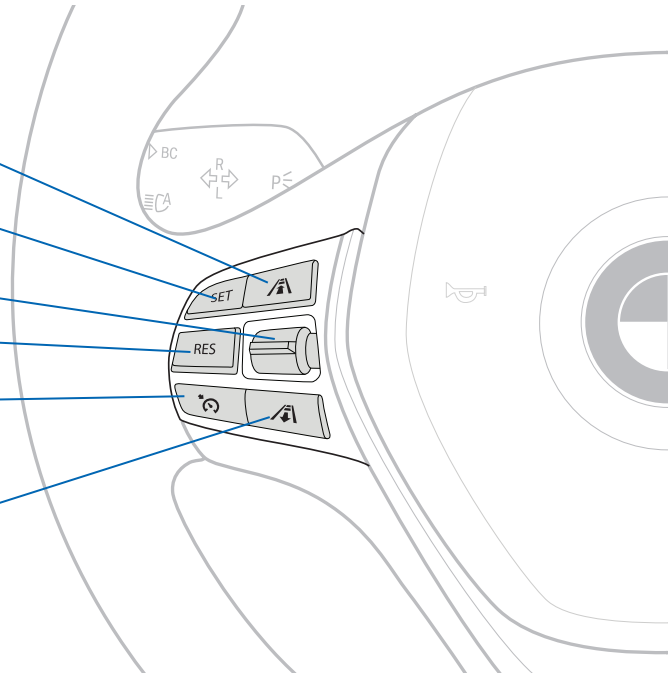

Displays and controls 13

Steering wheel

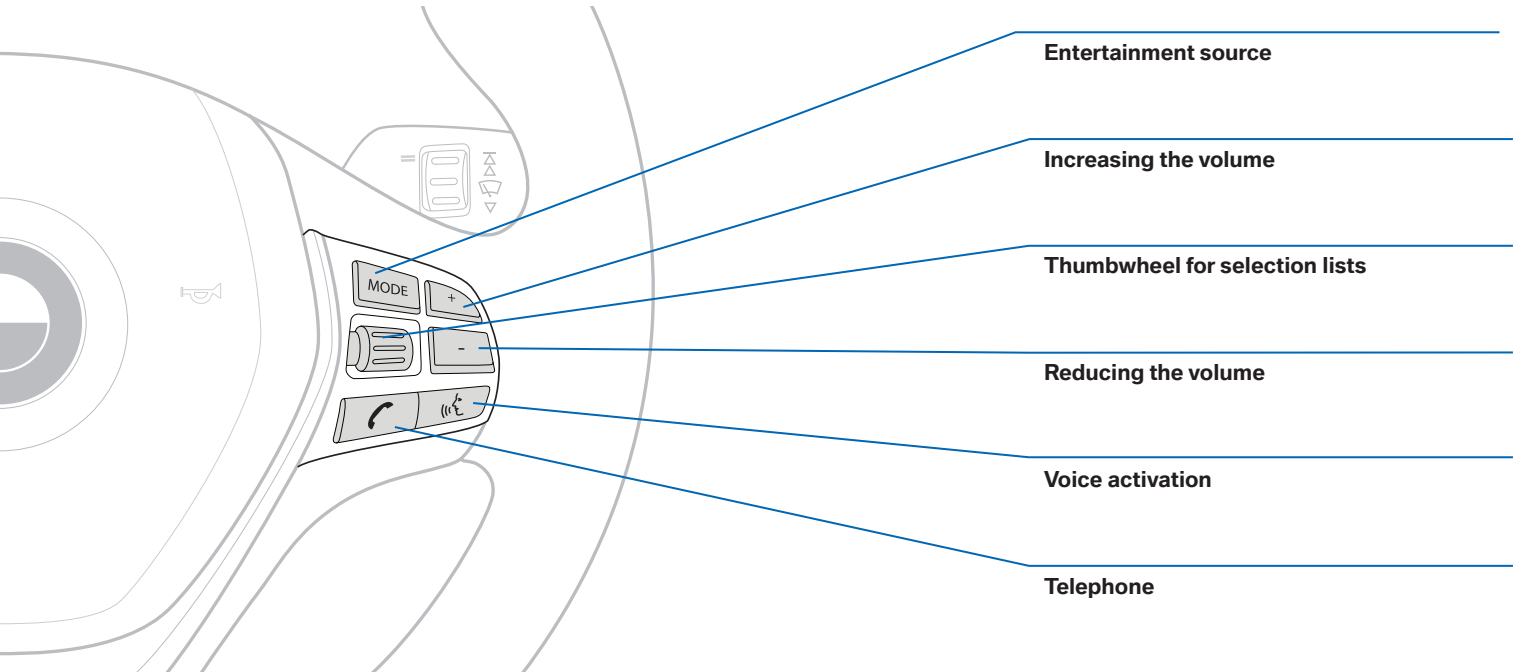

14 Displays and controls

Around the steering wheel

Activating turn signals

Push the lever up or down beyond the resistance point.

Canceling turn signals

Push the lever as far as the pressure point.

Brief signaling/triple turn signal activation

Push the lever up or down to the pressure point.

High beams

Push the lever forward.

Computer

Press the upper button on the lever.


High-beam Assistant

Press the lower button on the lever.

Headlamp flasher


Pull the lever.

Horn

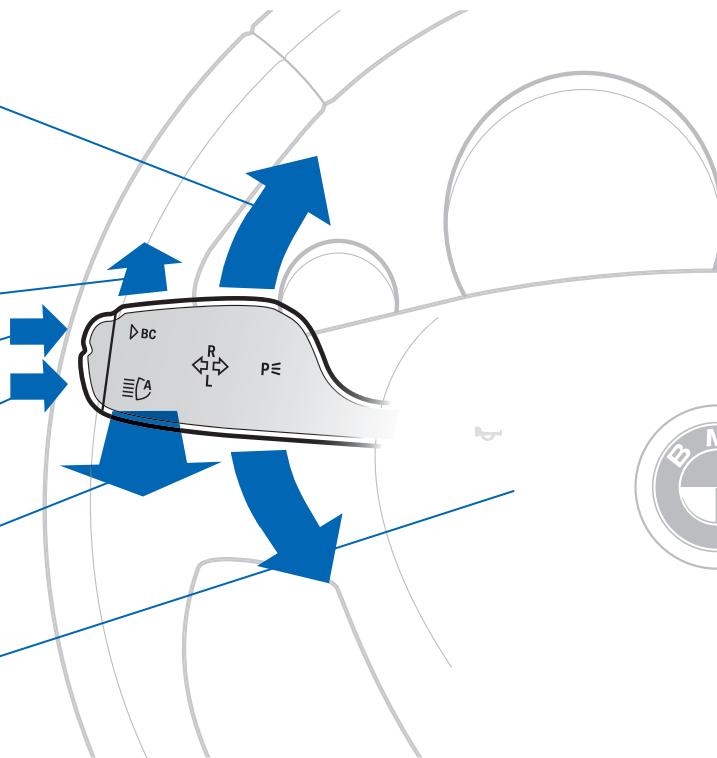

Displays and controls 15

Around the steering wheel

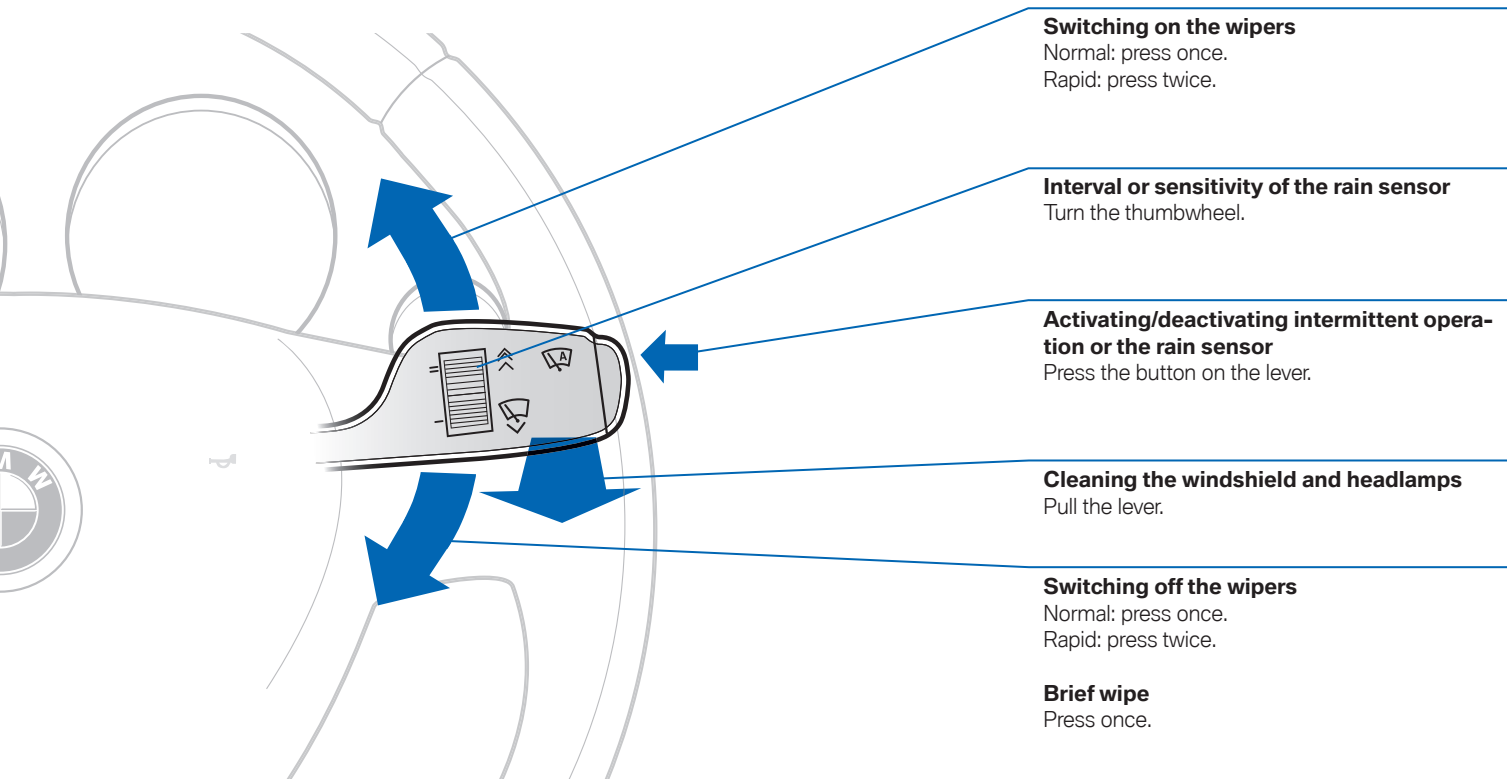

16 Displays and controls

Around the center console

Control Display

Hazard warning flashers

Central locking


Radio/CD/Multimedia

Automatic climate control

Transmission selector lever

Controller with buttons and touchpad

Parking brake

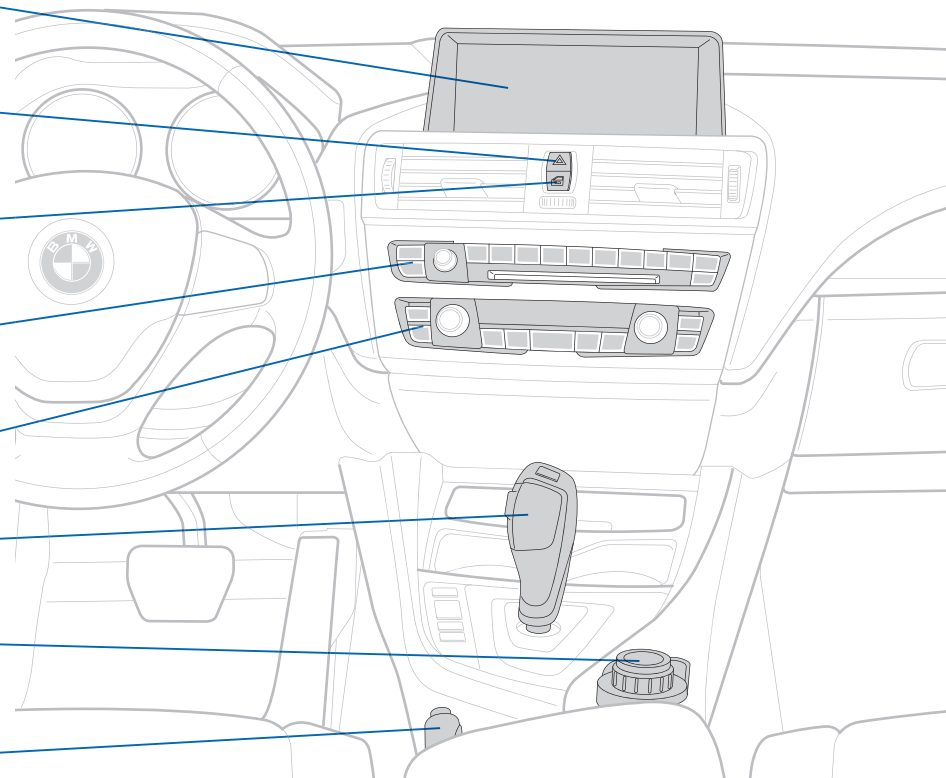

Displays and controls 17

Automatic climate control



18 Displays and controls

Automatic climate control with enhanced functions

Temperature, left

AUTO program


Seat heating, left

Defrosting windows, removing condensation


Interior temperature sensor

Rear window defroster

Air distribution, left

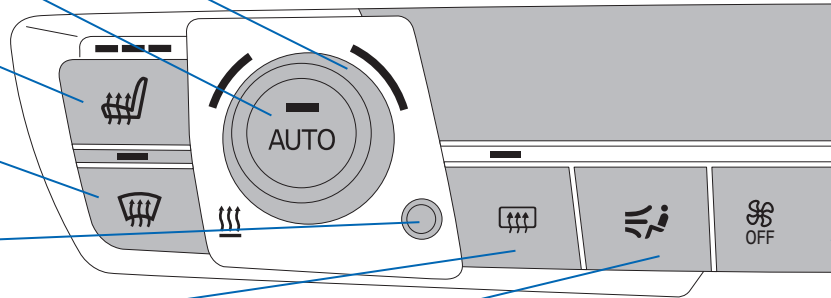

Automatic climate control with enhanced functions

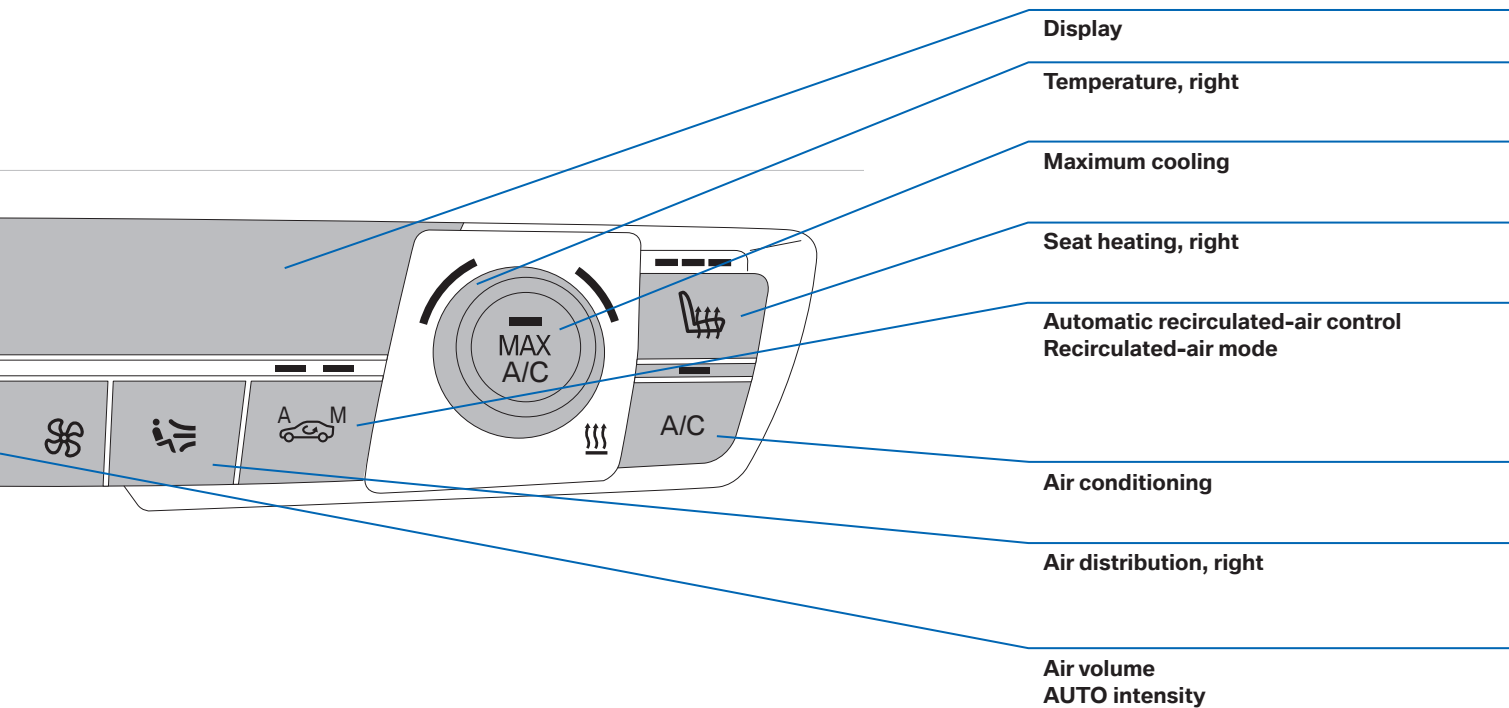

20 Displays and controls

Automatic climate control




Rear window defroster

Air distribution

Seat heating, left


Interior temperature sensor

Recirculated-air mode

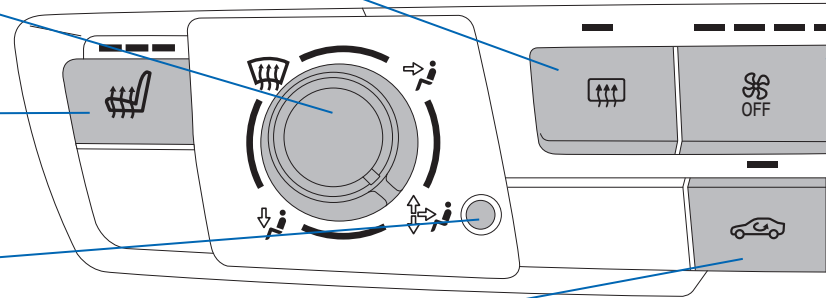

Displays and controls 21

Automatic climate control

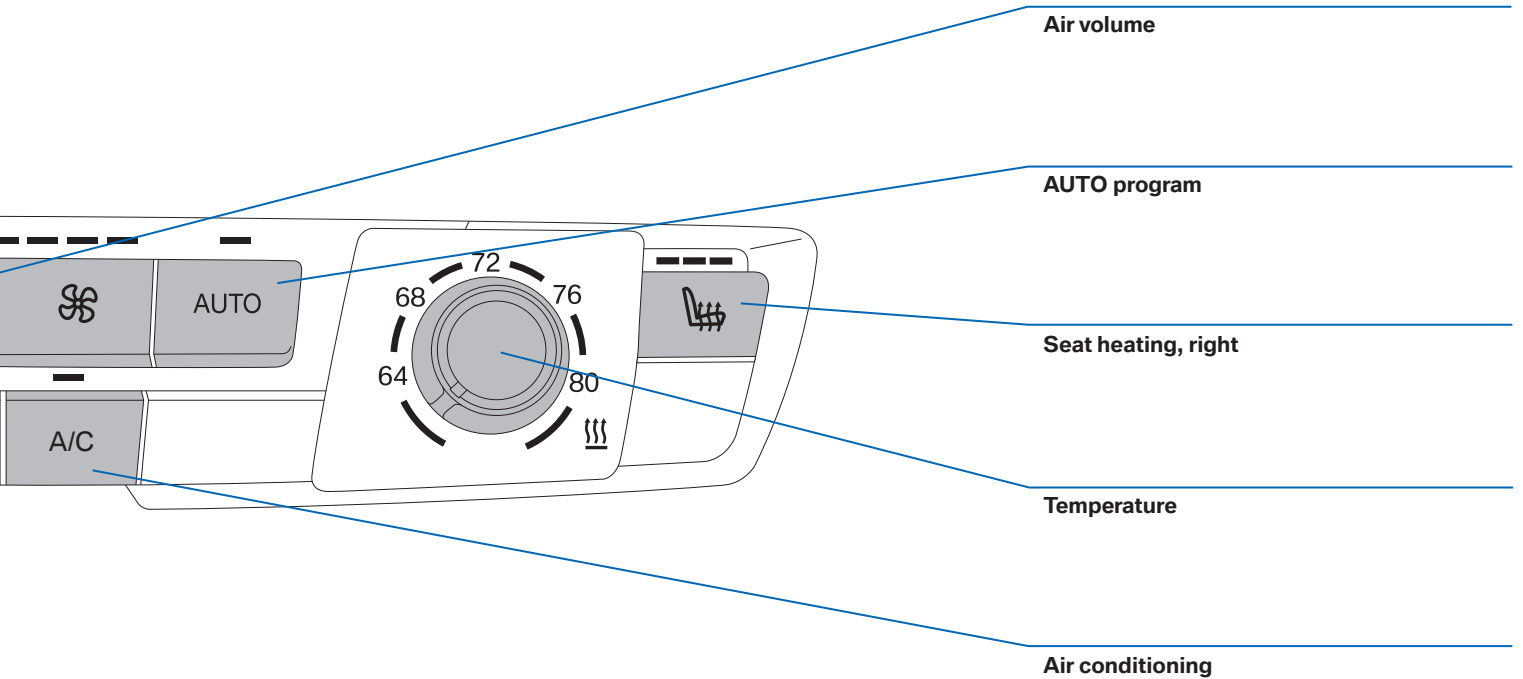

22 Driving

Start/Stop button



Switching the ignition on/off

Automatic transmission: press the Start/Stop button; while doing so, do not depress the brake pedal.

Manual transmission: press the Start/Stop button; while doing so, do not depress the clutch pedal.

Starting the engine

Automatic transmission: depress the brake pedal and press the Start/Stop button.

Manual transmission: depress the brake and clutch pedals, engage neutral, and press the Start/Stop button.

Engine off/radio ready state

When the vehicle is stationary, press the Start/Stop button.

Auto Start/Stop function

This function helps save fuel. It does this by automatically switching off the engine during stops. The READY display in the tachometer indicates that the Auto Start/Stop function is ready to start the engine automatically.

Automatic engine stop

Automatic transmission: while the vehicle is stationary, the selector lever is in D, the brake pedal is depressed and the driver's safety belt is fastened or the driver's door is closed.

Manual transmission: while the vehicle is stationary, neutral is engaged, the clutch pedal is not depressed and the driver's safety belt is fastened or the driver's door is closed.

Automatic engine start

Automatic transmission: released brake pedal.

Manual transmission: depressed clutch pedal.



Deactivating/activating the system manually

Press the button.

- The LED lights up: the Auto Start/Stop function is deactivated.
- The LED goes out: the Auto Start/Stop function is activated.

Note the additional information contained in the integrated Owner's Manual for Vehicle.

Parking lamps
Daytime running lights

Lamps off
Daytime running lights


Automatic headlamp control
Adaptive Light Control
High-beam Assistant
Welcome lamps
Daytime running lights

Front fog lamps

Rear fog lamps

Low beams
Welcome lamps
High-beam Assistant

Instrument lighting

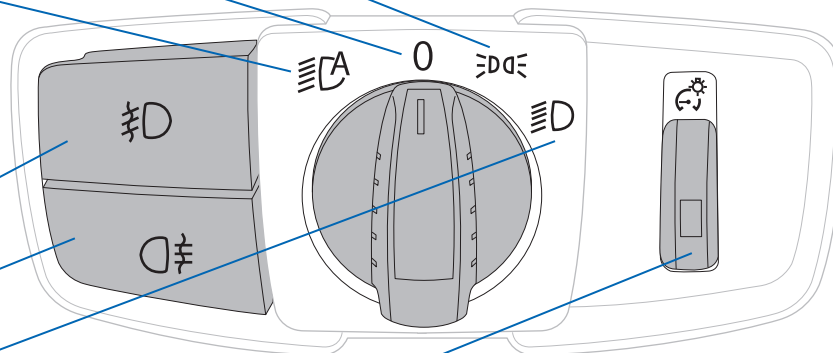

24 Driving

Automatic transmission with Steptronic/parking brake

P button

When the vehicle is stationary, press the button to engage transmission position P.

Unlock button

To shift out of P or into R:


1. Depress the brake pedal while the engine is running.
2. Press the Unlock button.
3. Move the selector lever in the desired direction.

Releasing the parking brake

Pull the lever slightly upward, press the button, and move the lever down.

Setting the parking brake

The lever engages automatically after it is pulled up.

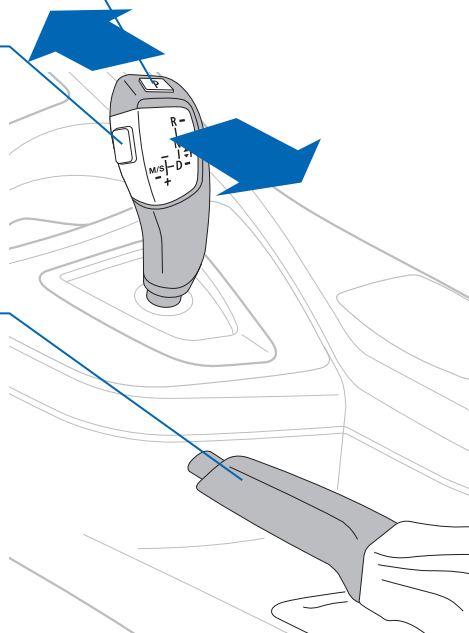

To make it possible for the vehicle to roll in an automatic car wash, take the following steps:

1. Drive into the car wash.
2. Engage transmission position N.
3. Switch off the engine.

The vehicle can roll as long as the ignition remains switched on.

Manual transmission/parking brake

Reverse gear

When the gearshift lever is pushed to the left, a slight resistance needs to be overcome.

5th/6th gear


Push the gearshift lever to the right.

Releasing the parking brake

Pull the lever slightly upward, press the button, and move the lever down.

Setting the parking brake

The lever engages automatically after it is pulled up.

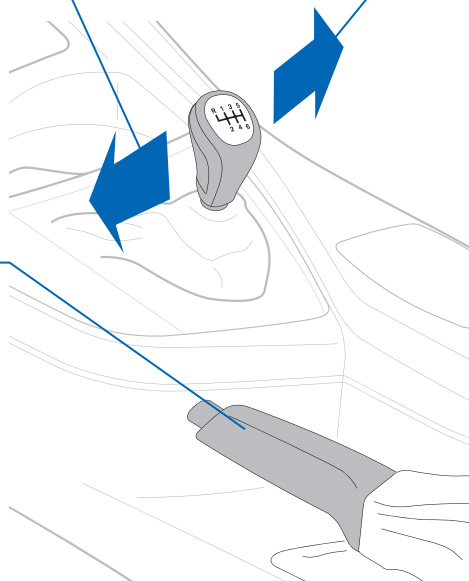

To make it possible for the vehicle to roll in an automatic car wash, take the following steps:

1. Drive into the car wash.
2. Shift to neutral.
3. Switch off the engine.
4. Switch on the ignition.

26 Driving

ECO PRO

 


The concept

ECO PRO helps achieve a fuel-efficient driving style by adjusting the engine control and comfort functions such as climate control and the seat and mirror heating temperature. Cruise control is set to a fuel-efficient driving style.

In addition, ECO PRO tips that are helpful in achieving a fuel-efficient driving style can be displayed. The resulting range extension can be displayed in the instrument cluster.

Activating ECO PRO



Press the button repeatedly until ECO PRO appears in the instrument cluster.

Bonus range and driving style

By using an optimized driving style, you can achieve a better cruising range.

- Blue display: efficient driving style
 - Gray display: adjust your driving style, for example by lifting your foot off the accelerator.
- The bonus range is included in the range display. After refueling, the bonus range is automatically reset.

ECO PRO tips



To achieve good fuel economy, drive with less pressure on the accelerator and decelerate well in advance of upcoming driving situations that require you to slow.



Reduce the vehicle speed to the selected ECO PRO speed.




Automatic transmission: change from M/S to D, and avoid manual shifting.



Manual transmission: follow the shift instructions.



Manual transmission: engage neutral gear for an engine stop.

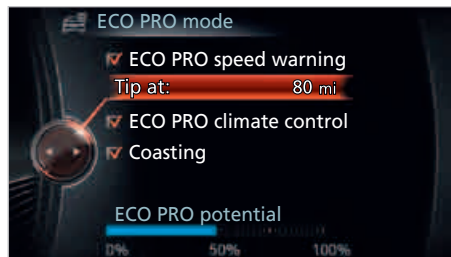


Configuring ECO PRO

Individual settings can be made.

1. "Settings"
2. "Driving mode"
3. "Configure ECO PRO"
4. Configure the program.

When coasting, the engine is automatically disengaged from the transmission in transmission position D under certain conditions. The vehicle continues coasting in a fuel-saving manner. Transmission position D remains engaged.

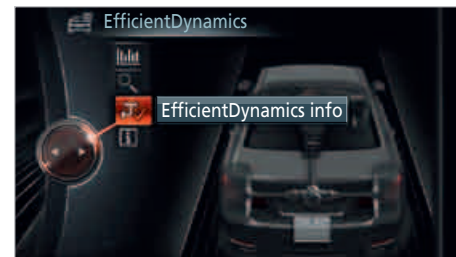

Displaying EfficientDynamics information

The currently active systems are displayed.

Icon: "EfficientDynamics info"

Vehicle-dependent systems are displayed:

- Auto Start/Stop function.
- Energy recovery.
- Climate control.
- Coasting.

28 Driving

Driving stability control systems

Dynamic Stability Control DSC

DSC prevents traction loss in the drive wheels when driving away and accelerating. DSC also recognizes unstable vehicle conditions, such as fishtailing or nose-diving. Subject to physical limits, DSC helps to keep the vehicle on a steady course by reducing engine speed and by applying the brakes at individual wheels.

DSC can be activated/deactivated using the Driving Experience Switch.

Dynamic Traction Control DTC

The DTC system is a version of the DSC in which forward momentum is optimized. The system ensures maximum forward momentum on special road conditions, such as unplowed snowy roads, but driving stability is limited.

DTC can be activated/deactivated using the Driving Experience Switch.

Dynamic Damping Control

This system reduces undesirable vehicle motion when using a dynamic driving style or traveling on uneven road surfaces. This enhances driving dynamics and comfort as required for the road surface and driving style.

The system offers different programs. They can be selected using the Driving Experience Switch.


Driving Experience Switch

The Driving Experience Switch can be used to adjust the driving dynamics of the vehicle. For this purpose, various programs are available for selection. Programs can be activated using the button of the Driving Experience Switch and the DSC OFF button.

Operating the programs



DSC OFF
TRACTION

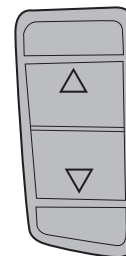

SPORT+
SPORT
COMFORT
ECO PRO

Note the additional information contained in the integrated Owner's Manual for Vehicle.



30 Radio/CD/Multimedia Controls



Switching the radio on/off

Press the knob.

Setting the volume


Turn the knob.

Changing the entertainment source

Radio
CD/DVD
Music collection
External devices


Changing the radio station waveband

CD/DVD drive

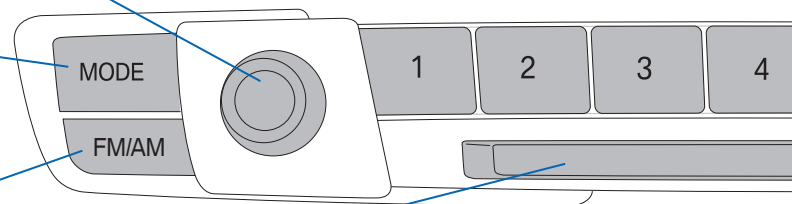

Radio/CD/Multimedia 31

Controls

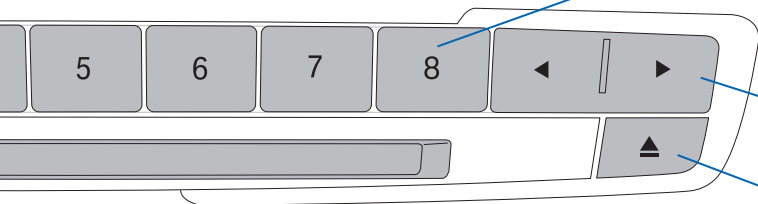

Programmable memory buttons


iDrive functions can be stored on the programmable memory buttons and called up directly, e.g., radio stations, navigation destinations, telephone numbers, and jumps into the menu.

Changing the station/track

Ejecting the CD/DVD

32 iDrive

Programmable memory buttons

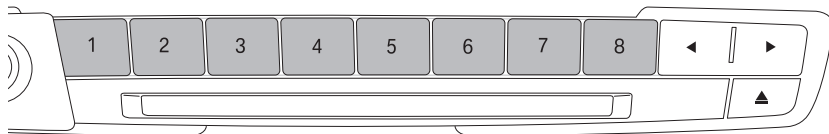

iDrive functions can be stored on the programmable memory buttons and called up directly, e.g., radio stations, navigation destinations, telephone numbers, and jumps into the menu. Without a navigation system, only radio stations can be stored on the buttons.

Tip

The content of the integrated Owner's Manual can also be saved on the programmable memory buttons.

Saving a function

1. Highlight the function via the iDrive.
2. Press the desired button for longer than 2 seconds.

Executing a function

Press the button.

The function is executed immediately. This means, for example, that the number is dialed when a phone number is selected.



Displaying memory button assignments

Briefly touch the button.

The button assignment is displayed at the top edge of the screen.

To display short information: touch the button.

To display detailed information: touch the button for an extended period.


Tip

For easy access to the Getting Help features, this function can be saved on the programmable memory buttons.

1. "Options"
2. Select "Display Owner's Manual" and save it on a programmable memory button.


iDrive 33 Controller

Controller with buttons and touchpad

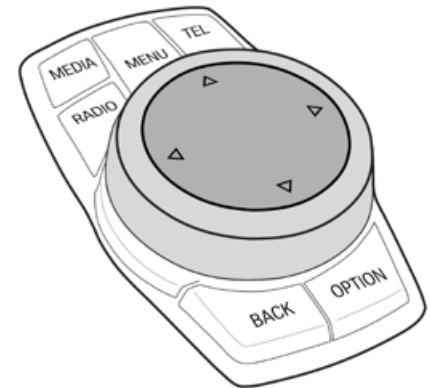

34 iDrive Controller

Highlighting the menu item

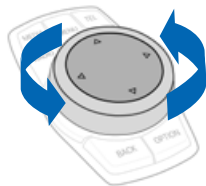


Turn the controller until the desired menu item is highlighted.

Opening the menu item




Press the controller.

Changing between panels

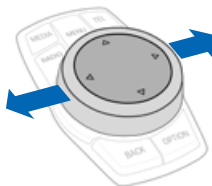

After a menu item such as "Radio" is selected, a new panel is displayed.
Panels can overlap.
Move the controller either to the left or the right.
The panel changes.

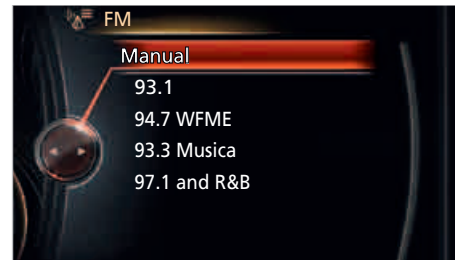

Buttons on the controller/touchpad

Opening the menus



Press the button on the controller.

Displaying the previous panel



Press the BACK button. The previous panel is re-opened.

Opening the "Options" menu




Press the OPTION button. The menu consists of different areas, e.g. screen settings or operating options for the selected main menu.

Entering letters and digits



1. Select the input mode.
2. Enter the characters exactly as shown on the Control Display.
 - Blank: from the middle of the touchpad, swipe to the right.
 - Dash: from the upper area of the touchpad, swipe to the right.
 - Underscore: from the lower area of the touchpad, swipe to the right.
 - To delete a character: swipe to the left on the touchpad.
 - Always enter associated glyphs, such as a tilde or an umlaut, together with the letter so that it will be distinctly recognized.

Moving the interactive map or webpages

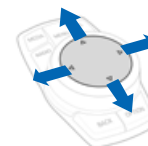

Swipe with the finger in the appropriate direction.

Zooming in/zooming out on interactive maps or webpages



Draw your fingers together or push them apart.


Displaying a menu or opening a link in the web



Tap on it once.

36 iDrive

Split screen/voice activation system

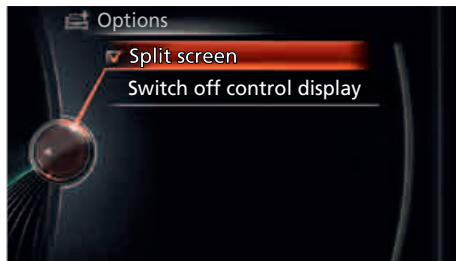

Split screen

Additional information, such as information from the computer, can be displayed on the right side of the split screen. You can set which information is displayed.

Switching the split screen on/off

1. Open "Options".
2. "Split screen"

The split screen is activated and the information remains displayed, even if another menu is selected.



Voice activation system

The voice activation system can be used to operate functions by means of spoken commands. Most menu items that are displayed on the Control Display can be voice-activated.

Example: opening the FM waveband

1. Press the button on the steering wheel.
2. Wait for the signal.
3. Say >Radio menu<.



4. Say >F M menu<.

The list of available radio stations is displayed.

Having the possible commands read aloud


1. Press the button on the steering wheel.
2. Say >commands<.

Tip

The functions can also be opened directly using so-called short commands, such as >Map view with perspective<. To give these commands, speak without hesitation, loudly, and clearly. Avoid background noise such as that caused by open windows.

Integrated Owner's Manual 37

Operation via iDrive

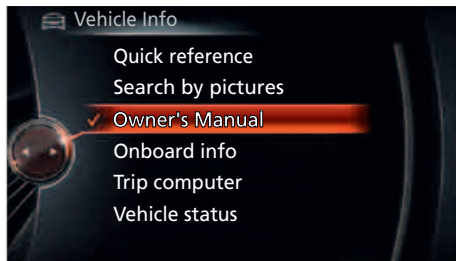

Integrated Owner's Manual

The BMW 4 Series comes with an integrated Owner's Manual, which contains all of the information necessary for you to make the best use of your vehicle. For safety reasons, the integrated Owner's Manual is only displayed when the vehicle is stationary.

Selecting the components

1. Open the main menu.
2. "Vehicle Info"
3. Select the desired section:
 - "Quick reference"
 - "Search by pictures"
 - "Owner's Manual"

Getting Help feature via iDrive

The integrated Owner's Manual for the currently selected function can be displayed.

1. Open "Options".
2. "Display Owner's Manual"

The BACK and OPTION buttons can be used to switch between the integrated Owner's Manual and the currently selected menu. This is particularly helpful for functions with multiple operating steps.

Printed Owner's Manual




A printed Owner's Manual is contained in the vehicle document portfolio in the glove compartment or in the trunk.

Tip

Complex principles are explained quickly in videos in the integrated Owner's Manual.

38 Navigation

Entering a destination

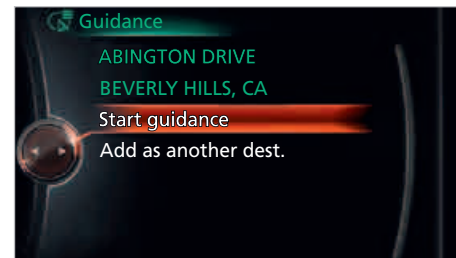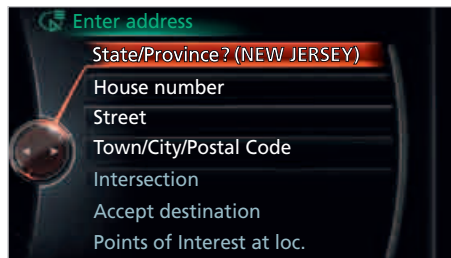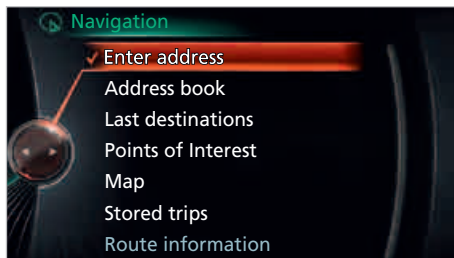

Manual destination entry

1. "Navigation"
2. "Enter address"

3. Enter the "State/Province" or select the displayed country.
4. Enter the "House number".
5. Enter the "Street".
Select letters as necessary.
The list grows smaller each time you enter a new letter.
6. Move the controller to the right.
7. Select the street name from the list.
8. Enter the "Town/City/Postal Code".


9. "Accept destination"
10. "Start guidance"

Ending destination guidance

1. "Navigation"
2. "Map"
3.  "Guidance"
4. "Stop guidance"

Tip

Destination entry can be operated using the voice activation system. Town/city, street, and building number can also be spoken in one command.

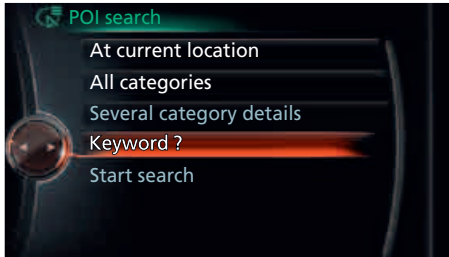

Searching for points of interest

Selection of points of interest, such as filling stations or tourist attractions.

1. "Navigation"
2. "Points of Interest"
3. Select the type of search:
 - "Online search"
 - "A-Z search"
 - "Category search".
4. Specify "At current location", "All categories" and, if necessary, "Several category details" and "Keyword".

A list of the points of interest is displayed.



Setting the map view

Several types of map views may be set, such as a perspective view in 3D.

1. "Navigation"
2. "Map"
3.  "Map views"
4.  "Additional Info"
5. "Perspective view in 3D"


Prominent areas in the navigation data are shown on the map in 3D.

Changing the scale

1. If necessary, move the controller to the right to change the map view.
2.  Select this symbol.
3. Turn the controller.

40 Entertainment

Tone/radio

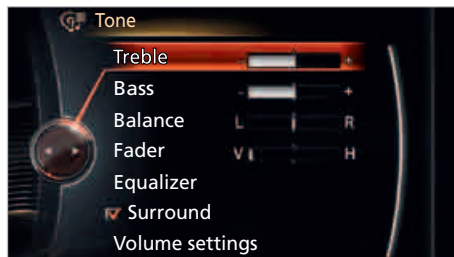


Adjusting the tone

1. "Multimedia", "Radio" or "Settings"
2. "Tone"
3. Select the desired tone settings.
4. To adjust: turn the controller.
5. To store: press the controller.



Selecting a station

1. "Radio"
 2. "FM" or "AM"
- The station played last is played and displayed.

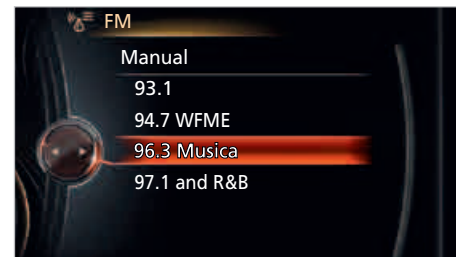

3. "FM stations" or "AM stations"
 4. Select the desired station.
- The selected station is stored for the remote control currently in use.

Tip

The radio stations can be stored on the programmable memory buttons 1–8. Use the iDrive to select the radio station and hold the desired button down for several seconds.



Storing from a CD/DVD

Music tracks from CDs/DVDs and USB media may be stored in the music collection on a hard disk in the vehicle.

1. Insert the CD or DVD in the CD/DVD player.
2. "Multimedia"
3. "CD/DVD"
4. Select the symbol for the CD/DVD player.

Tip

Music can be stored via the CD/DVD player and compressed audio files can be stored via the USB interface in the center armrest. Additional information can be found in the Owner's Manual on navigation, entertainment, and communication.



5. "Store CD"

The music collection is displayed and the first track is played. During storage, the tracks are played in sequence.

Observe the following during the storage process:

Do not switch to the CD/DVD drive and do not remove the CD/DVD from the CD/DVD drive as this will interrupt the storage process.

Tip

Other audio sources can be activated without interrupting the storage process. Tracks from the current CD/DVD that have already been stored can be called up.

42 Communication

Telephone



Pairing the mobile phone with the vehicle


1. Switch on the ignition.
2. Activate Bluetooth on the vehicle and the mobile phone.
3. If necessary, adjust the mobile phone according to the Bluetooth presets, e.g., connection without confirmation or visibility.
4. If necessary, deactivate Bluetooth audio.
5. If necessary, define a 4 to 16-digit number as the Bluetooth passkey. This is only required for the one-time pairing procedure.
6. "Settings"
7. "Connections"
8. "Bluetooth®"
9. "Add new device"
The vehicle's Bluetooth name appears on the Control Display.
10. Perform additional steps on the mobile phone, such as searching for the Bluetooth device.
The Bluetooth name of the vehicle also appears on the mobile phone display.
11. Select the Bluetooth name of the vehicle on the mobile phone display.
12. Enter and confirm the Bluetooth passkey on the mobile phone and via the iDrive.
or
Compare the control number on the Control Display with the control number on the mobile phone display. Confirm the control number on the mobile phone and on the Control Display.
"OK"

Tip

Please ask your BMW center which mobile phones with a Bluetooth interface are supported. You can obtain additional information on the Internet at:
www.bmwusa.com/bluetooth

Communication 43

Telephone

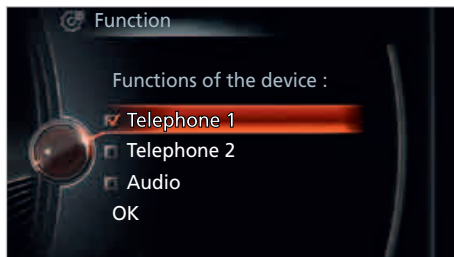

13. Select the functions for which the mobile phone is to be used.

14. "OK"

The mobile phone is connected and displayed at the top of the mobile phone list.



Dialing a number

1. "Telephone"
2. "Dial number"
3. Select the digits individually.
4. Change to letters if necessary.
5.  Select the symbol to establish the call.

The connection is established via the mobile phone to which the telephone function has been assigned.



Dialing a number from the phone book

1. "Telephone"
2. "Phone book"
3. Select the desired entry.

Accepting a call

-  Press the button on the steering wheel.

Tip

Up to three mobile phones can be linked to the vehicle and used as a telephone, an additional telephone, or an audio player. Additional information can be found in the Owner's Manual on navigation, entertainment, and communication.

Tip

A phone number can also be dialed using the voice activation system. The connection is established via the mobile phone to which the telephone function has been assigned.

44 Refueling

Refueling/oil level



Refueling

To open the fuel filler flap, tap on the rear edge.

Fuel quality: gasoline

Only use unleaded gasoline without metal additives.

Fuel quality: BMW recommends AKI 91.

Minimum grade: BMW recommends AKI 89.

Maximum ethanol content: 10%, which corresponds to E10.

The ethanol should meet the following quality standards:

US: ASTM 4806-xx

CAN: CGSB-3.511-xx

xx: Note the standard applicable in each case.

Displaying the oil level

The oil level is monitored electronically and shown on the Control Display.

1. "Vehicle Info"
2. "Vehicle status"
3.  "Engine oil level"

For recommended oil grades, refer to the Owner's Manual.

Tip

To open the hood, pull the lever in the footwell twice. Note the additional information contained in the integrated Owner's Manual for Vehicle.

Flat Tire Monitor FTM

The system identifies a loss of pressure by comparing the speeds of rotation of the individual wheels as the car is traveling.

The system must be initialized with the correct tire pressure in order for it to reliably indicate a flat tire in the instrument cluster.

1. "Vehicle Info"
2. "Vehicle status"
3.  "Perform reset"
4. Start the engine; do not drive away.
5. "Perform reset"
- Initialization of the tire pressure begins.
6. Drive away.

The FTM is not a substitute for carrying out tire pressure checks.


Initialize the FTM/TPM again after correcting the tire pressure or changing the tires/wheels.

Tire Pressure Monitor TPM

TPM checks the inflation pressures of the four mounted tires. The system notifies you if there is a significant loss of pressure in one or more tires.

In order to assure that a flat tire is indicated reliably in the instrument cluster, the system must be reset while all tire inflation pressures are correct.

1. "Vehicle Info"
2. "Vehicle status"
3.  "Perform reset"
4. Start the engine; do not drive away.
5. "Perform reset"
- The tire pressure is reset.
6. Drive away.

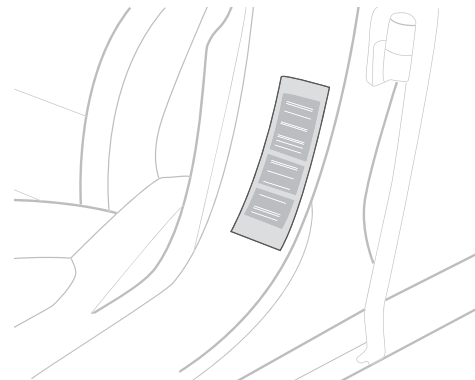

Tire pressure

The pressure values for approved tire sizes and speeds up to 100 mph/160 km/h can be found on the driver's door pillar.


If the tire's speed rating code is not listed, use the tire pressure for the corresponding size, e.g., 225/50 R17.

Check the tire pressure in cold tires at least twice a month and before taking an extended trip.

Note the additional information contained in the integrated Owner's Manual for Vehicle.


46 Breakdown assistance

Warning triangle, first aid kit

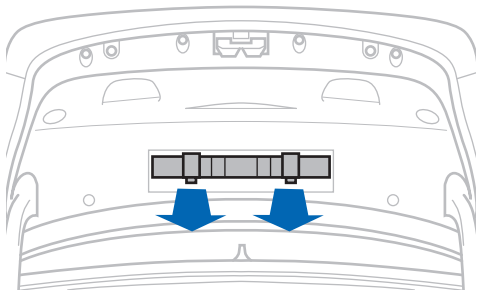

Warning triangle

The warning triangle is located on the inside of the trunk lid. Release the holders to remove it.

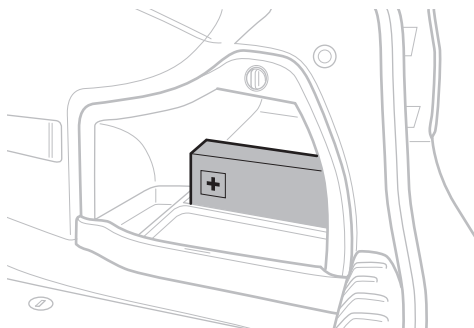

First aid kit

The first aid kit is located in a pocket on the right side of the cargo area.

 
Socket for Onboard Diagnostics OBD

There is an OBD socket on the driver's side for checking the primary components in the vehicle emissions.


SERVICE
ENGINE
SOON

Emissions

The warning lamp lights up:
Emissions are deteriorating. Have
the vehicle checked as soon as
possible.



Indicator for the previously de-
scribed malfunctions in Canadian
models.

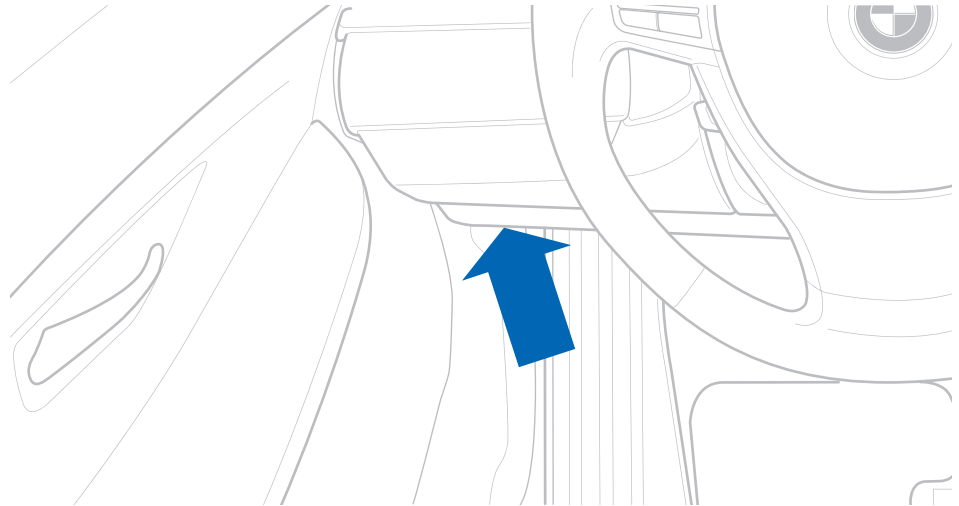

Note the additional information contained in
the integrated Owner's Manual for Vehicle.

48 24/7 Access

BMW Assist™ and Bluetooth® system



BMW Assist Safety Plan

Combining GPS location technology with hands-free wireless communication, BMW Assist connects you with a trained response specialist 24/7 to help you with almost everything while on the road.

The BMW Assist Safety Plan provides:

- Automatic Collision Notification
- Emergency Request (SOS)
- Enhanced Roadside Assistance
- Stolen Vehicle Recovery
- TeleService

Easy Access

To initiate the services, just go to "BMW Assist" in the main menu and select the desired service, or push the SOS button on the overhead console.

What You Need To Do

You must complete, sign, and submit a subscriber agreement with your salesperson. To decline services, you must complete, sign, and submit a "Waiver and Release" document. If neither action is taken, your BMW Assist services will be remotely deactivated approximately 60 days after you take delivery of your new vehicle.

Bluetooth hands-free calling

The BMW Assist system includes Bluetooth hands-free calling capability with speech recognition. See page 42 or visit www.bmwusa.com/bluetooth for BMW approved handsets and pairing instructions.

Tip

You may even prepare some services offered by BMW Assist in the comfort of your home and send them to your vehicle via the Internet.

Tip

Upgrade to our optional Convenience Plan to receive directions, traffic and weather information, Critical Calling, Concierge services, online access to the Google Maps™ database, news headlines, up-to-date fuel prices and stock indices in your BMW 4 Series with BMW Search. Push the SOS button, call toll-free 1-888-333-6118, or log on to www.bmwassist.com to learn more.

BMW Roadside Assistance

Can be contacted if assistance is needed in the event of a breakdown.

Telephone

USA: (800) 332-4BMW (4269)

Canada: 1-800-267-8269

If possible, the vehicle and position data are transmitted in the process.

Towing

The safest method approved for transporting vehicles is to use a commercial flatbed carrier truck, dispatched via Roadside Assistance, and to secure the vehicle to the flatbed truck with four nylon wheel straps.

When pulling the vehicle onto a flatbed carrier truck, only use the screw-in tow fitting found in the tool kit.

Refer to the detailed towing instructions in the Owner's Manual.

50 Appendix

Any updates to the Owner's Manual for Vehicle can be found here.

Warranty

Your vehicle is technically configured for the operating conditions and registration requirements applying in the country of first delivery, as per the respective homologation. If your vehicle is to be operated in a different country, it might be necessary to adapt your vehicle to potentially differing operating conditions and permit requirements. If your vehicle does not comply with the homologation requirements in a certain country, you cannot assert warranty claims for your vehicle there. Further information can be obtained from your Service Center.

Auto Start/Stop function

Every time the engine is started using the Start/Stop button, the Auto Start/Stop function is in the previously selected state.

More about BMW

bmwusa.com
www.bmw.ca



**The Ultimate
Driving Machine®**

© 2013 Bayerische Motoren Werke

Aktiengesellschaft

Munich, Germany

Reprinting, including excerpts, only with the
written consent of BMW AG, Munich.

US English X/13

Printed on environmentally friendly paper,
bleached without chlorine, suitable for recycling.

