

Contents

Quick Reference
Guide for the vehicle



The Ultimate
Driving Machine®



THE BMW X3. QUICK REFERENCE GUIDE.

BMW EfficientDynamics
Less emissions. More driving pleasure.

Contents

Your BMW X3 at a glance

Welcome on board

Your BMW X3 offers a wide range of equipment to make driving an enjoyable experience.

This Quick Reference Guide informs you about the most important basic functions of your BMW X3.

For safety reasons, please read the printed Owner's Manual for Vehicle.

Any updates made after the editorial deadline for the Owner's Manuals are located in the appendix of this Quick Reference Guide.

BMW hopes you get off to a good start and that you enjoy your BMW X3.

This Quick Reference Guide also describes and depicts equipment that may not be contained in your vehicle because of the selected special equipment or market-specific version.

4	Opening and closing	42	Breakdown assistance
6	Seat, mirrors, and steering wheel	43	Service and maintenance
11	Safety	44	24/7 Access
12	Displays and controls	46	Appendix
20	Driving		
26	Radio/CD/Multimedia		
28	iDrive		
33	Integrated Owner's Manual		
34	Navigation		
36	Entertainment		
38	Communication		
40	Refueling		



4 Opening and closing Remote control



Opening


Unlocks the vehicle.

Closing

Locks the vehicle.

Opening the tailgate

Press and hold.

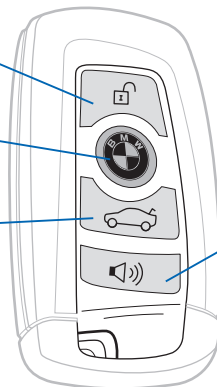

Convenient opening

Press and hold the Open button to open the side windows and the glass sunroof after unlocking.

Switching on the headlamp courtesy delay feature

Press briefly.

Panic mode

Press the button for at least 3 seconds to set off the alarm system.
Switch off by pressing any button.

Personal Profile

Some of the vehicle's functions can be individually tailored and stored for several remote controls. Different settings are retrieved and implemented in the vehicle, depending on the remote control that is detected when unlocking the vehicle. The personal settings can be taken to another vehicle with the Personal Profile function.

The joy of driving without a remote control


The Comfort Access system allows you to gain access to the vehicle and start the engine without pressing the remote control. The remote control is automatically detected in the immediate vicinity or inside the vehicle.

Opening

Take a firm hold of the door handle.

Closing

Press the panel with your fingers for approx. 1 second.

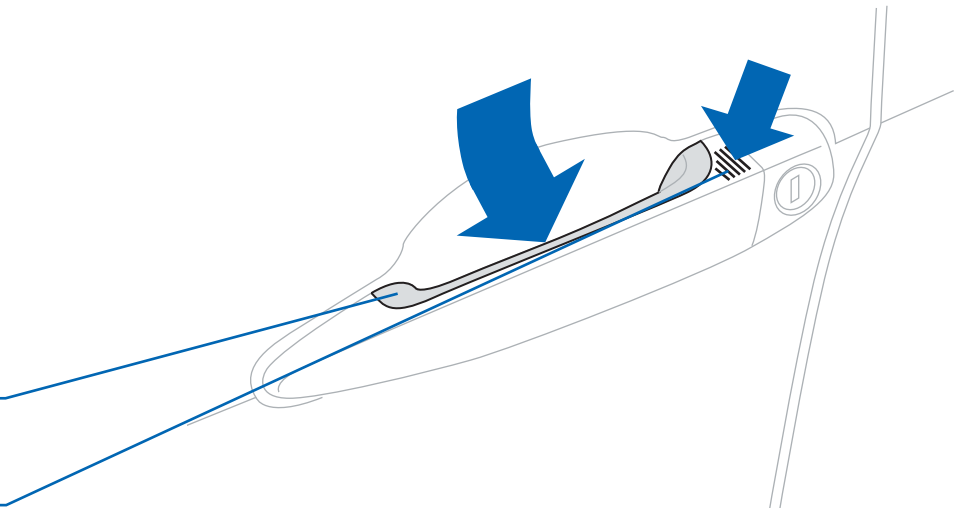

6 Seat, mirrors, and steering wheel

Electrically adjustable seat

M button

Memory buttons

Backrest tilt

Forward/back, height, seat tilt

Lumbar support


Thigh support

Backrest width

Seat and mirror memory

You can store and retrieve two different driver's seat and exterior mirror positions for each remote control. The backrest width and lumbar support settings are not stored.

1. Ignition on.
2. Adjust the seat and mirrors.
3. Press the M button; the LED lights up.
4. Press memory button 1 or 2.
5. Press memory button 1 or 2 to call up the stored position.

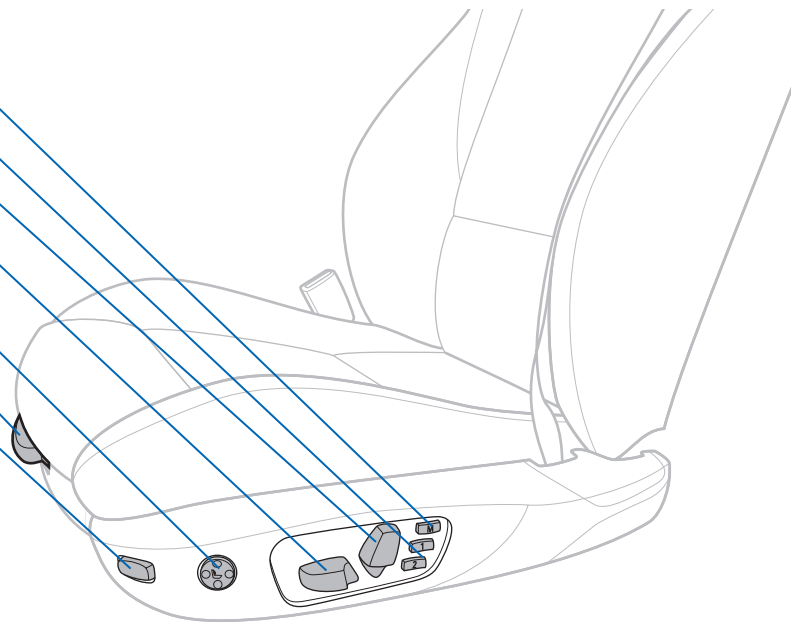

Seat, mirrors, and steering wheel 7

Manually adjustable seat

Backrest tilt

Height


Lumbar support

Thigh support

Forward/back

Seat tilt

Backrest width

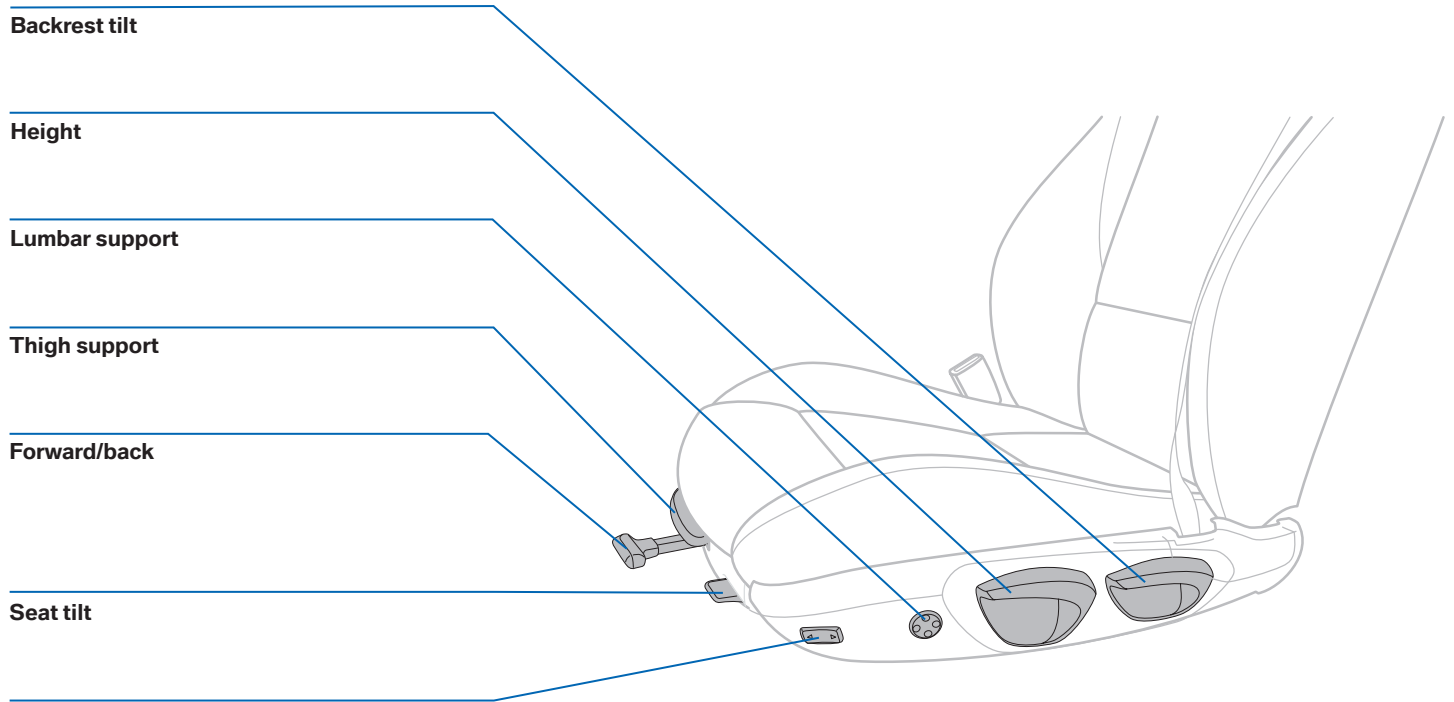

8 Seat, mirrors, and steering wheel

Mirrors




Mirror adjustment

Folding the mirrors in and out


Mirror left/right, Automatic Curb Monitor

To select the mirror: left/right
Automatic Curb Monitor on: switch set to driver's side mirror.

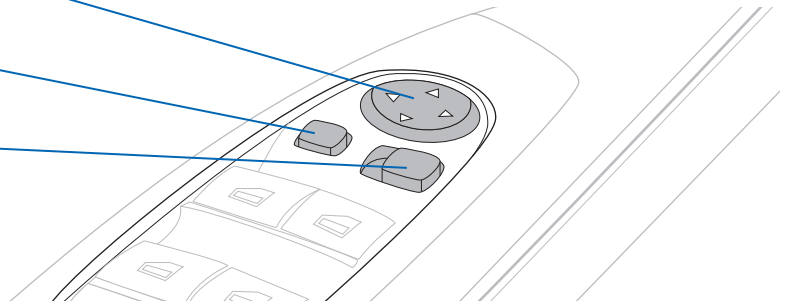

Seat, mirrors, and steering wheel 9

Universal Garage Door Opener

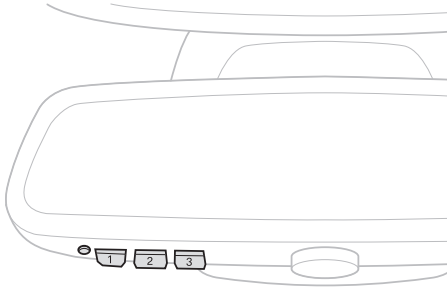

Programming

1. Switch on the ignition.
2. Press the two outer memory buttons 1 and 3 for approx. 20 seconds until the LED flashes.
3. Hold the hand-held transmitter 1 to 3 in/2.5 to 8 cm away from the memory buttons.
4. Simultaneously press the transmit button of the hand-held transmitter and the memory button of the Universal Garage Door Opener – the LED flashes slowly.
5. Release both buttons when the LED flashes rapidly.

With alternating-code radio systems

The Universal Garage Door Opener and the device may need to be synchronized.

1. Park the vehicle within range of the remote-controlled device.
2. Program the Universal Garage Door Opener as described above.
3. Press the synchronization button on the receiver of the device being set up. You have approx. 30 seconds for the next step.
4. Press the programmed memory button of the Universal Garage Door Opener for approx. 3 seconds. Repeat this step up to three times if necessary.

Operation

After programming, elements such as a garage door or lighting system can be operated using one of the buttons on the interior rear view mirror.


Note the additional information contained in the Owner's Manual for Vehicle.

10 Seat, mirrors, and steering wheel

Steering wheel

Adjusting the steering wheel


1. Move the lever down.
2. Adjust the steering wheel to the seating position in longitudinal direction and height.
3. Move the lever back up.

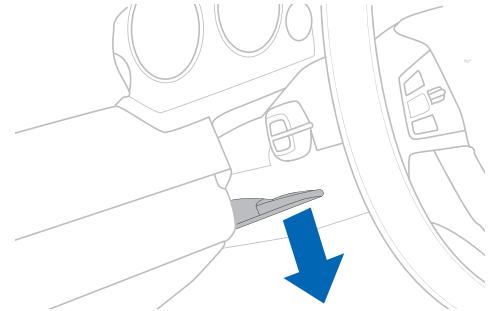

Transporting children safely

Locking the doors and windows

Move the lever in the rear doors to its downward position. The respective door can only be opened from the outside.

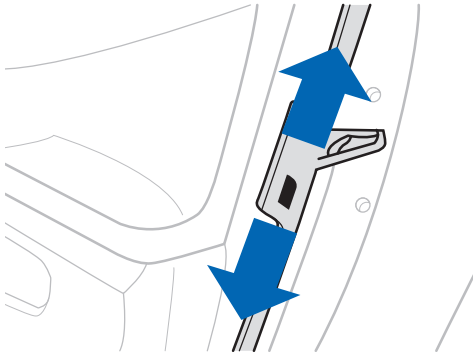

Safety switch for the rear

Press the button on the driver's door if children are being transported in the rear.

This locks various functions so that they cannot be operated from the rear.

LATCH child restraint fixing system

To mount and use the LATCH child restraint fixing systems, observe the operating and safety information from the system manufacturer; otherwise, the level of protection may be reduced.

Mounts for the lower LATCH anchors

The lower anchors may be used to attach the CRS to the vehicle seat, up to a combined child and CRS weight of 65 lb/30 kg, when the child is restrained by the internal harnesses. Before mounting the LATCH child restraint fixing system, pull the belt away from the child seat fastening area.

Make sure that the lower LATCH anchors are properly engaged and that the child restraint system is resting snugly against the backrest.

Firmly press the installation guide into the gap between the seat upholstery and backrest. Continue to press until the two funnel-shaped guides snap into place in the LATCH support brackets. The installation guide can be removed simply by pulling.

Refer to the following section in the Owner's Manual: Transporting children safely.

12 Displays and controls

Around the steering wheel

Activating turn signals

Push the lever up or down beyond the resistance point.

Canceling turn signals

Push the lever as far as the pressure point.

Brief signaling/triple turn signal activation

Push the lever up or down to the pressure point.

High beams

Push the lever forward.

Computer

Press the upper button on the lever.


High-beam Assistant

Press the lower button on the lever.

Headlamp flasher


Pull the lever.

Horn

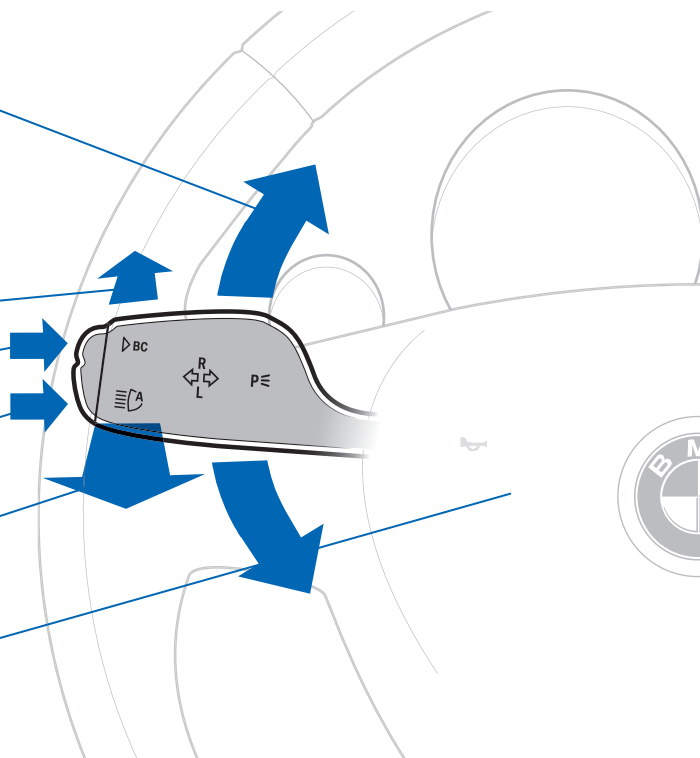

Displays and controls 13

Around the steering wheel

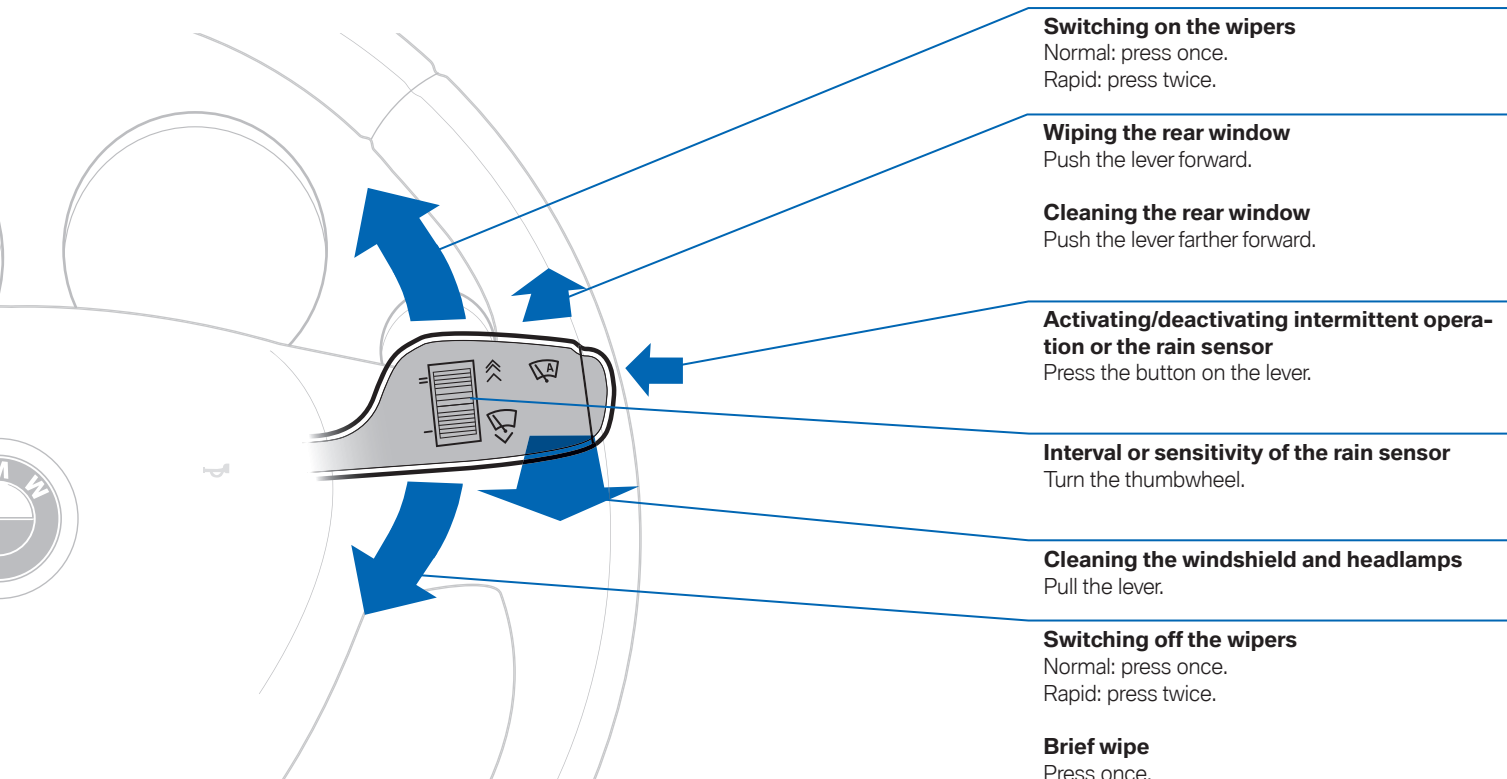

14 Displays and controls

Around the center console

Control Display

Hazard warning flashers


Central locking

Automatic climate control

Radio/CD/Multimedia

Transmission selector lever

Controller with buttons

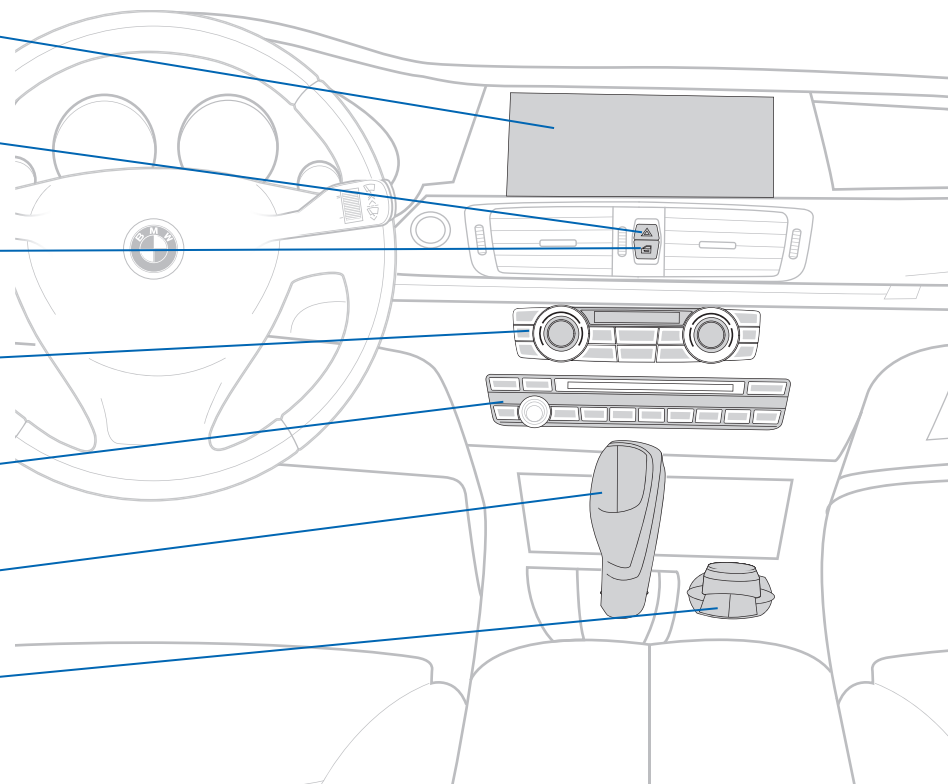

Displays and controls 15
Automatic climate control



16 Displays and controls

Automatic climate control with enhanced functions

Changing the direction of the air flow

Opening and closing the air vents

Air volume
AUTO intensity

AUTO program

Air distribution, windshield, and side windows


Temperature, left

Maximum cooling


Air distribution, upper body area

Air distribution, foot area

Seat heating, left

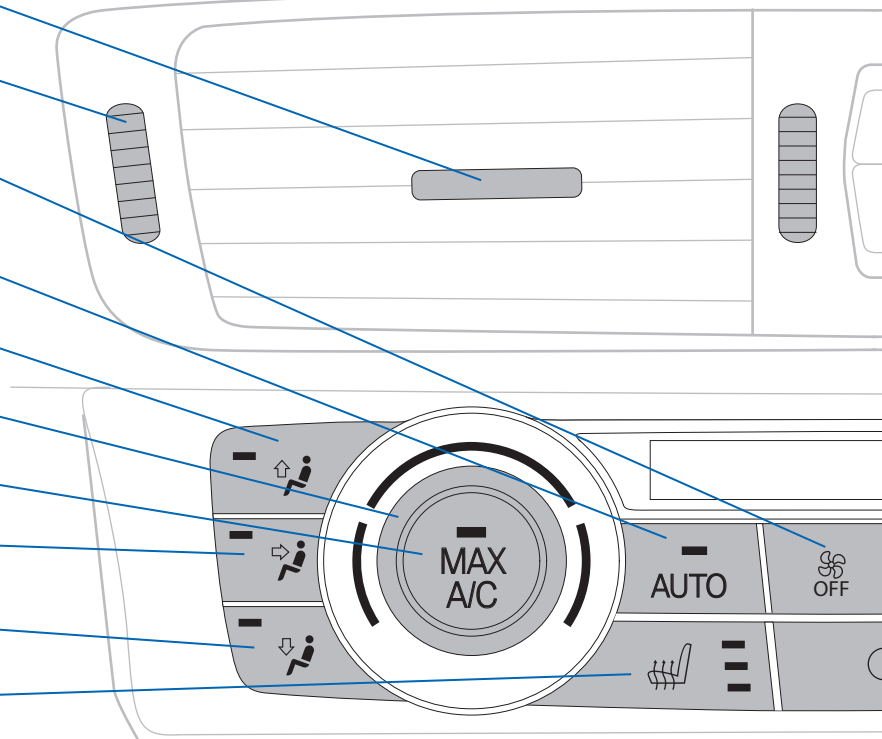

Automatic climate control with enhanced functions

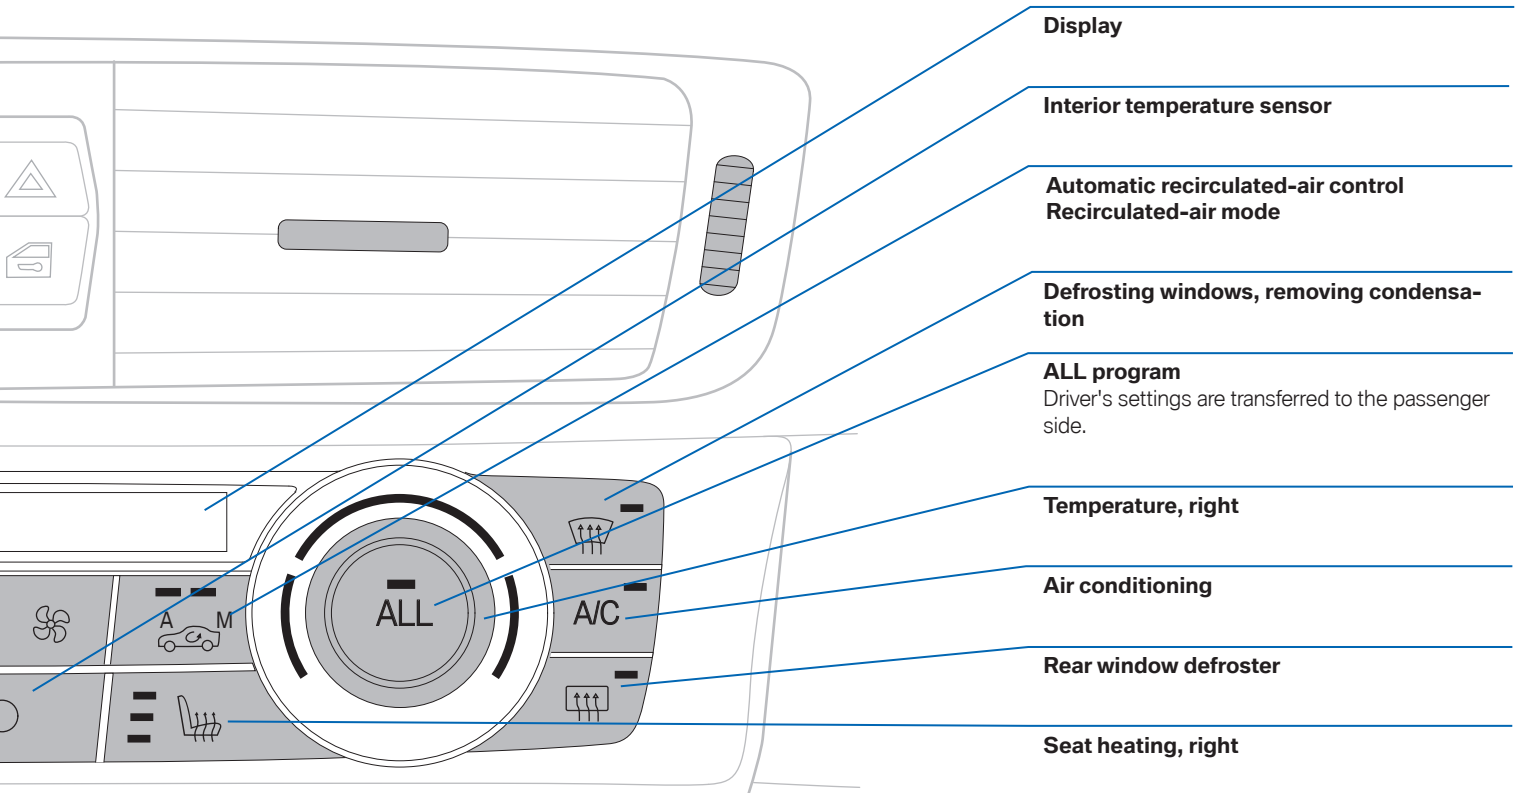

18 Displays and controls

Automatic climate control

Changing the direction of the air flow

Opening and closing the air vents

AUTO program


Air volume

Air distribution, windshield, and side windows

Air distribution, upper body area


Air distribution, foot area

Seat heating, left

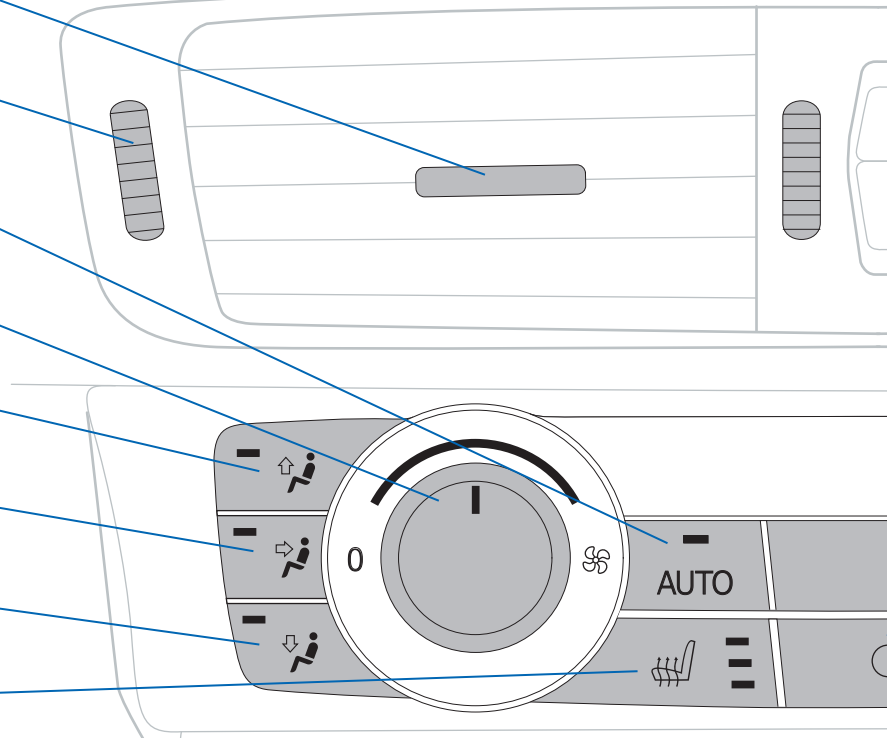

Displays and controls 19

Automatic climate control

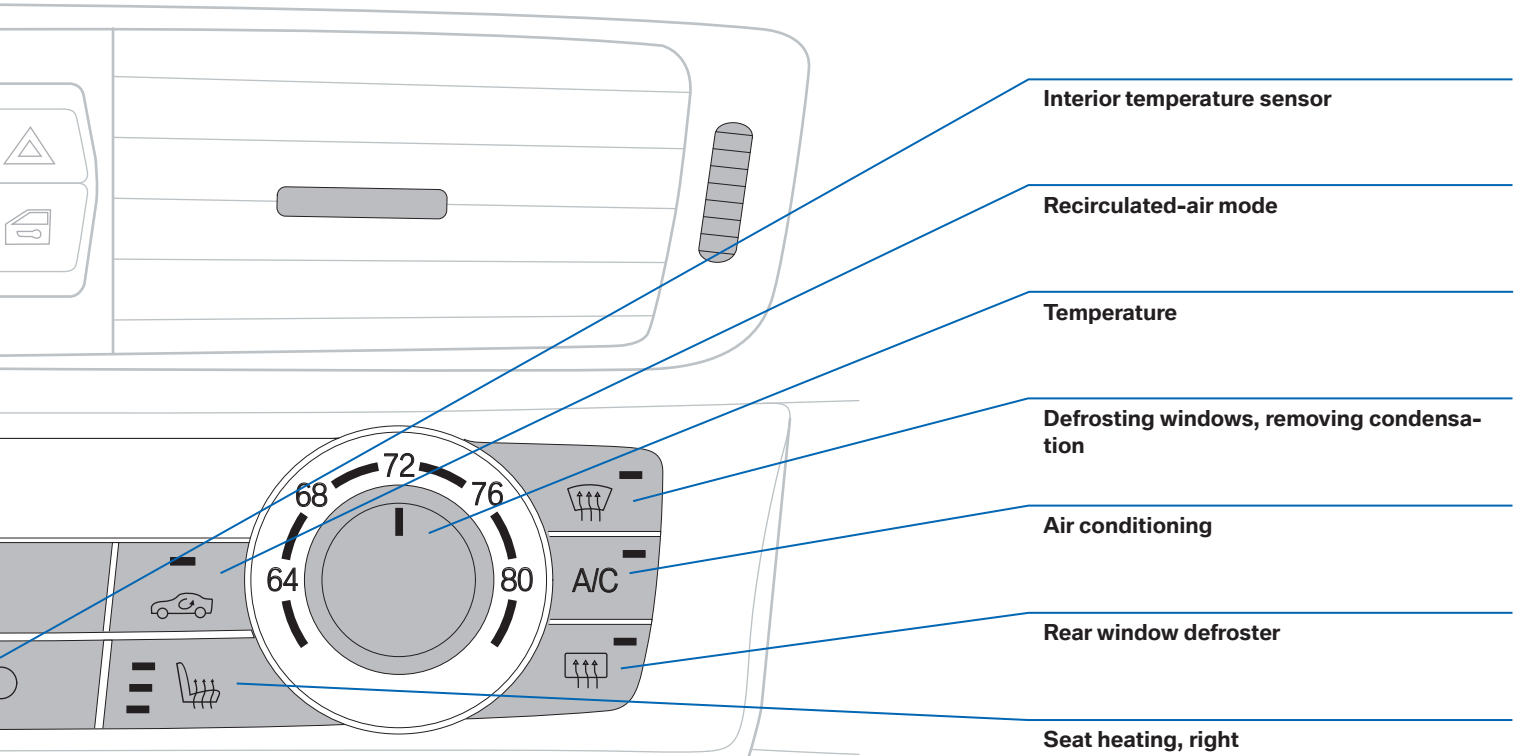

20 Driving

Start/Stop button



Switching the ignition on/off

Press the Start/Stop button; while doing this, do not depress the brake pedal.

Starting the engine

Press the Start/Stop button while depressing the brake pedal.

Engine off/radio ready state

Press the Start/Stop button while the engine is running.

Auto Start/Stop function

This function helps save fuel. It does this by automatically switching off the engine during stops. A display in the instrument cluster indicates that the Auto Start/Stop function is ready to start the engine automatically.

Automatic engine start

Release the brake pedal.

Automatic engine stop

While the vehicle is stationary, the selector lever is engaged in position D, the brake pedal is depressed, and the driver's safety belt is fastened or the driver's door is closed.

Note the additional information contained in the Owner's Manual for Vehicle.

Driving 21

Lamps

Parking lamps
Daytime running lights

Lamps off
Daytime running lights

Automatic headlamp control
Adaptive Light Control
High-beam Assistant
Welcome lamps
Daytime running lights


Front fog lamps

Rear fog lamps

Low beams
High-beam Assistant
Welcome lamps

Instrument lighting

Headlamp range control

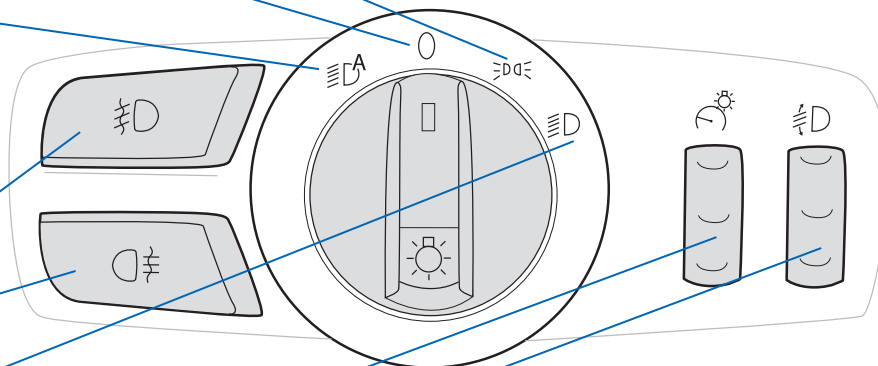

22 Driving

Automatic transmission with Steptronic/parking brake

P button

When the vehicle is stationary, press the button to engage transmission position P.

Unlock button

To shift out of P or into R:


1. Depress the brake pedal while the engine is running.
2. Press the Unlock button.
3. Move the selector lever in the desired direction.

Applying the parking brake

Pull the switch; the LED lights up.

Releasing the parking brake

Press the switch with the brake pedal depressed or transmission position P engaged; the LED goes out.

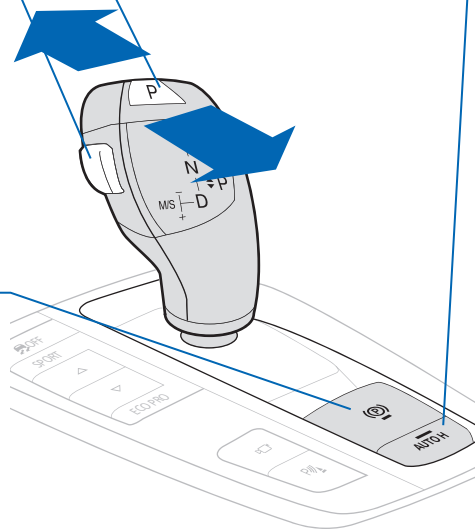

Automatic Hold

Automatically sets and releases the parking brake, such as in stop-and-go traffic.

To activate Automatic Hold:

Press the button.

The LED and AUTO H lettering light up.

To deactivate Automatic Hold:

Press the button again.

The LED and AUTO H lettering go out.

To make it possible for the vehicle to roll in an automatic car wash, take the following steps:

1. Drive into the car wash.
2. Engage transmission position N.
3. Switch off the engine.

The vehicle can roll, provided that the ignition remains switched on.

Driving stability control system

Dynamic Stability Control DSC

DSC prevents traction loss in the drive wheels when driving away and accelerating.

DSC also recognizes unstable vehicle conditions, such as fishtailing or nose-diving.

Subject to physical limits, DSC helps to keep the vehicle on a steady course by reducing engine speed and by applying the brakes at individual wheels.

DSC can be activated/deactivated using the Driving Experience Switch.

Dynamic Traction Control DTC

The DTC system is a version of the DSC in which forward momentum is optimized. The system ensures maximum forward momentum on special road conditions, such as unplowed snowy roads, but driving stability is limited.

DTC can be activated/deactivated using the Driving Experience Switch.

Dynamic Damping Control

This system reduces undesirable vehicle motion when using a dynamic driving style or traveling on uneven road surfaces. This enhances driving dynamics and comfort as required for the road surface and driving style.

The system offers three different programs. They can be selected using the Driving Experience Switch.


Driving Experience Switch

The Driving Experience Switch can be used to adjust the driving dynamics of the vehicle.

For this purpose, various programs are available for selection. Programs can be activated using the button of the Driving Experience Switch and the DSC OFF button.

Operating the programs

DSC OFF
TRACTION

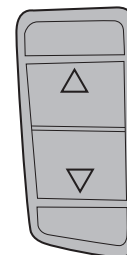

SPORT+
SPORT
COMFORT
ECO PRO

Note the additional information contained in the Owner's Manual for Vehicle.

 
24 Driving ECO PRO



The concept

ECO PRO helps achieve a fuel-efficient driving style by adjusting the engine control and comfort functions such as climate control and the seat and mirror heating temperature. In addition, ECO PRO tips that are helpful in achieving a fuel-efficient driving style can be displayed. The resulting range extension can be displayed in the instrument cluster.

Activating ECO PRO



Press the button repeatedly until ECO PRO appears in the instrument cluster.

Bonus range and driving style

By using an optimized driving style, you can achieve a better cruising range.

- Blue display: efficient driving style
- Gray display: adjust your driving style, for example by lifting your foot off the accelerator.

The bonus range is included in the range display. After refueling, the bonus range is automatically reset.

ECO PRO tips




To achieve good fuel economy, drive with less pressure on the accelerator and decelerate well in advance of upcoming driving situations that require you to slow.



Reduce the vehicle speed to the selected ECO PRO speed.




Automatic transmission: change from M/S to D, and avoid manual shifting.

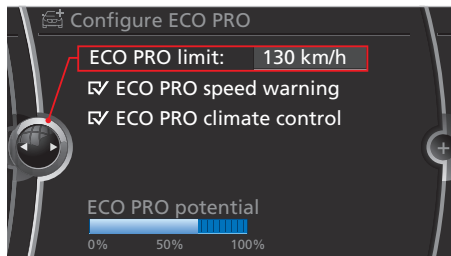

Configuring ECO PRO

Individual settings can be made.

1. "Settings"
2. "Driving mode"
3. "Configure ECO PRO"
4. Configure the program.

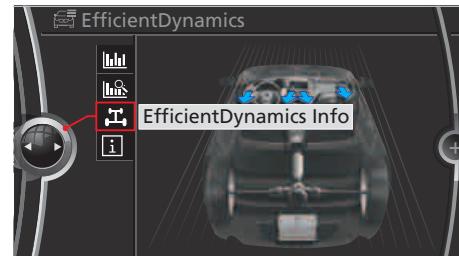

Displaying EfficientDynamics information

 
The currently active systems are displayed.

Icon: "EfficientDynamics Info"

Vehicle-dependent systems are displayed:

- Auto Start/Stop function.
- Energy recovery.
- Climate control.

26 Radio/CD/Multimedia Controls



Ejecting the CD/DVD

Changing the entertainment source

Radio
CD/DVD
Music collection
External devices


Changing the radio station waveband

Switching the radio on/off

Press the knob.



Setting the volume

Turn the knob.

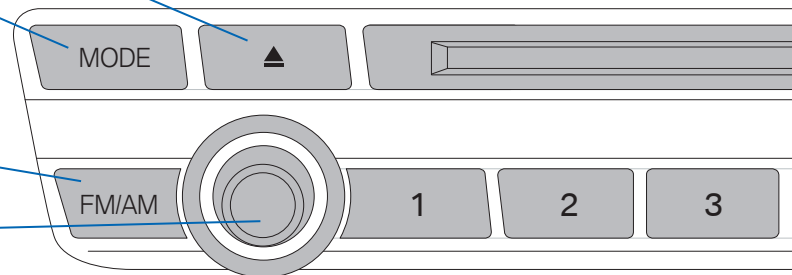

Radio/CD/Multimedia 27

 Controls

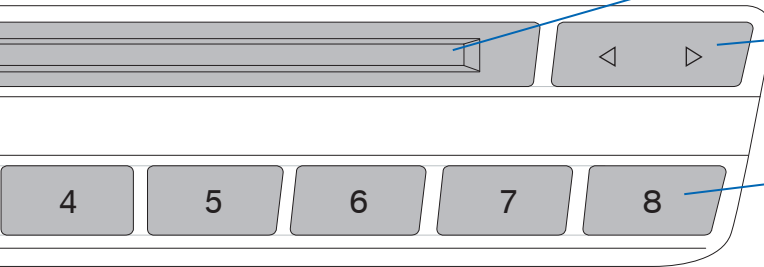

CD/DVD drive

Changing the station/track


Programmable memory buttons

iDrive functions can be stored on the programmable memory buttons and called up directly, e.g., radio stations, navigation destinations, telephone numbers, and jumps into the menu.

28 iDrive
Controller




Controller with buttons

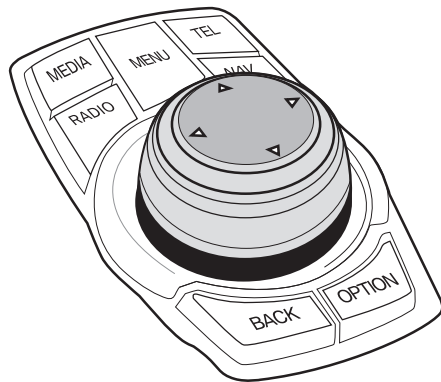


iDrive 29 Controller

Highlighting the menu item

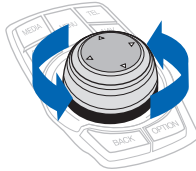


Turn the controller until the desired menu item is highlighted.

Opening the menu item


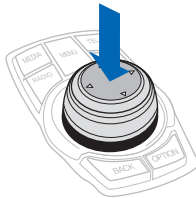


Press the controller.

Changing between panels

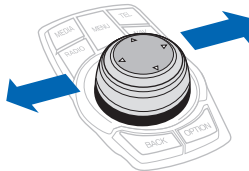

After a menu item such as "Radio" is selected, a new panel is displayed.
Panels can overlap.
Move the controller either to the left or the right.
The panel changes.

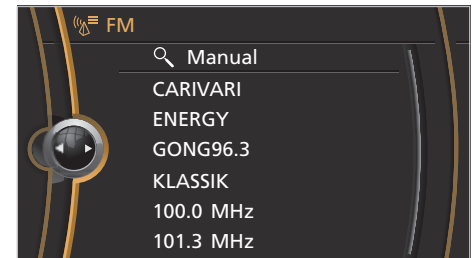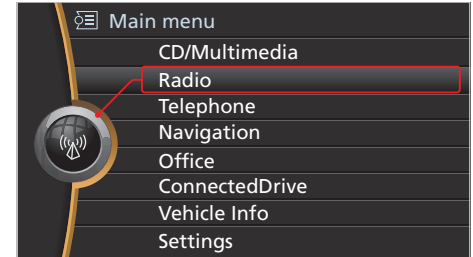


30 iDrive

Buttons on the controller

Opening the menus


Press the button on the controller.

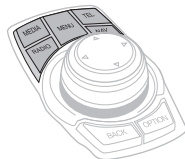

Opening the "Options" menu


Press the OPTION button.

The "Options" menu consists of different areas: screen settings, for instance "Split screen". This section remains unchanged. Operating options for the selected main menu, such as for "Radio". If necessary, additional operating options for the selected menu such as "Store station".

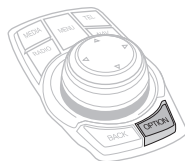

Displaying the previous panel

Press the BACK button.
The previous panel is reopened.

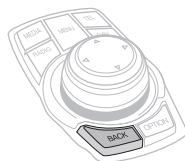

Programmable memory buttons



iDrive functions can be stored on the programmable memory buttons and called up directly, e.g., radio stations, navigation destinations, telephone numbers, and jumps into the menu.

Saving a function

1. Highlight the function via the iDrive.
2. Press the desired button for longer than 2 seconds.


Executing a function

Press the button.

The function is executed immediately. This means, for example, that the number is dialed when a phone number is selected.

Tip

You can also save content from the Integrated Owner's Manual to the programmable memory buttons.

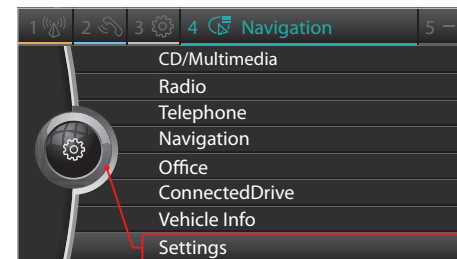

Displaying memory button assignments

Briefly touch the button.

The button assignment is displayed at the top edge of the screen.

To display short information: touch the button.


To display detailed information: touch the button for an extended period.

Tip

For easy access to the Getting Help features, you can save this function on the programmable memory buttons. In the "Options" menu, select "Display Owner's Manual" and save it to a programmable memory button.

32 iDrive

Split screen/voice activation system

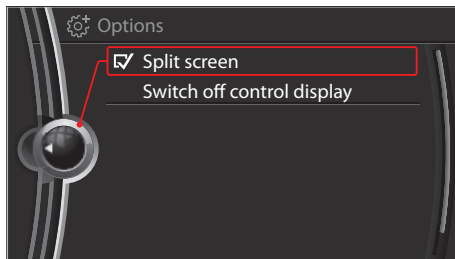


Split screen

Additional information, such as information from the computer, can be displayed on the right side of the split screen. You can set which information is displayed.

Switching the split screen on/off

1. Open "Options".
2. "Split screen"

The split screen is activated and the information remains displayed, even if another menu is selected.

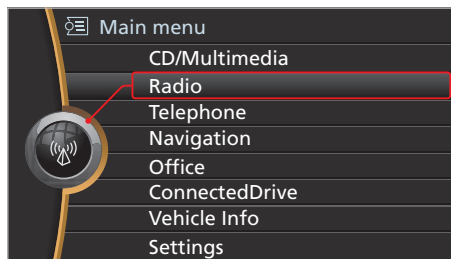


Voice activation system

The voice activation system can be used to operate functions by means of spoken commands. Most menu items that are displayed on the Control Display may be voice-activated.

Example: opening the FM waveband

1. Press the button on the steering wheel.
2. Wait for the signal.
3. Say >Radio<.

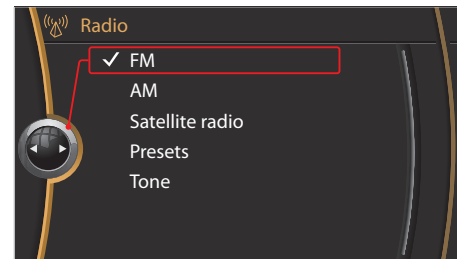

4. Say >F M<.

The list of available radio stations is displayed.

Having the possible commands read aloud


1. Press the button on the steering wheel.
2. Say >Voice commands<.

Tip

You can also open the functions directly using so-called short commands, such as >Map perspective view<. To give these commands, speak without hesitation, loudly, and clearly. Avoid background noise such as that caused by open windows.

Integrated Owner's Manual 33

Operation via iDrive

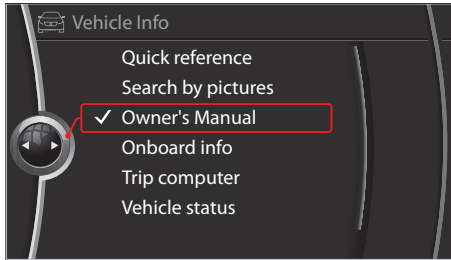


Integrated Owner's Manual

Your BMW X3 comes with an Integrated Owner's Manual, which contains all of the information necessary for you to make the best use of your vehicle. For your safety, the Integrated Owner's Manual is only displayed when the vehicle is stationary.

Selecting the components


1. Open the main menu.
2. "Vehicle Info"
3. Select the desired section:
 - "Quick reference"
 - "Search by pictures"
 - "Owner's Manual"

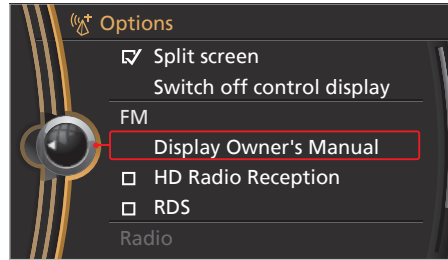

Getting Help feature via iDrive

The Owner's Manual for the currently selected menu can be displayed.

1. Open "Options".
2. "Display Owner's Manual"

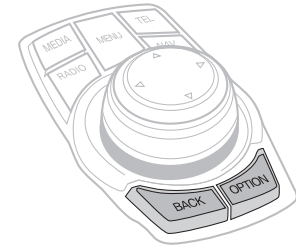

You can switch between the Integrated Owner's Manual and the currently selected menu by using the BACK and OPTION buttons. This is particularly helpful for functions with multiple operating steps.

Printed Owner's Manual




A printed Owner's Manual is contained in the vehicle document portfolio in the glove compartment or in the trunk.

Tip

Complex principles are explained quickly via videos in the Integrated Owner's Manual.

34 Navigation

Entering a destination

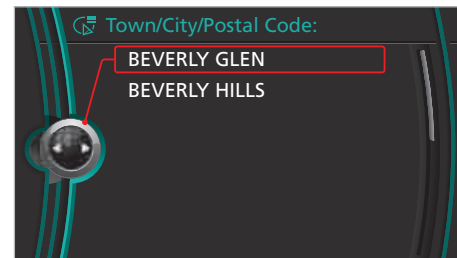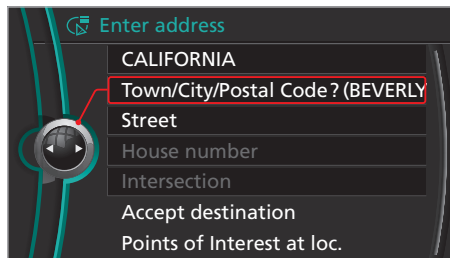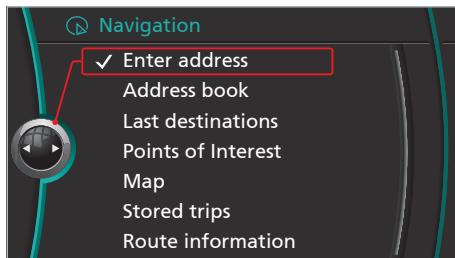

Manual destination entry


1. "Navigation"
2. "Enter address"

3. Select "State/Province" or the displayed state or province.
4. Select "Town/City/Postal Code" or the displayed town/city/postal code.
5. Select letters as necessary.
The list grows smaller each time you enter a new letter.

6. Move the controller to the right and select a town/city from the list.
7. Enter a street in the same way that you entered the town/city.
8. If desired, select the building number or intersection.
9. "Accept destination"
10. "Start guidance"

Tip

You can also enter a destination using the voice activation system. Town/city, street, and building number can also be spoken in one command.

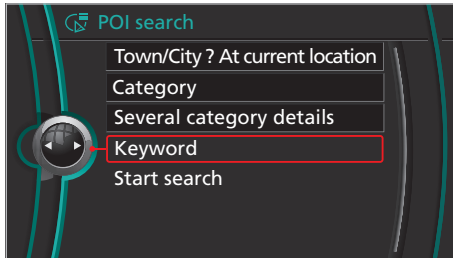


Points of interest

Selection of points of interest, such as hotels or tourist attractions.

1. "Navigation"
2. "Points of Interest"
3. Select the type of search, for instance "A-Z search".
4. Specify "Town/City", "Category" and, if necessary, "Category details" and "Keyword".

A list of the points of interest is displayed.

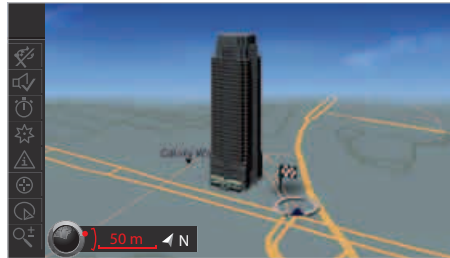

Map view settings

Several types of map views may be displayed, such as a perspective view in 3D.


1. "Navigation"
2. "Map"
3. Open "Options".
4. "Settings"
5. "Perspective view in 3D"

Changing the scale

1. If necessary, move the controller to the right to change to the map view.
2.  Select this symbol.
3. Turn the controller.


36 Entertainment

Tone/radio

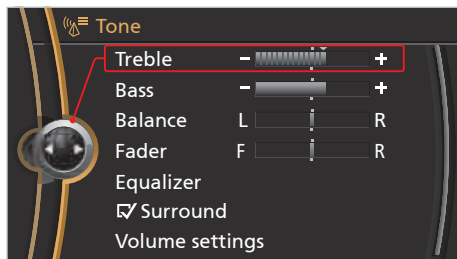


Adjusting the tone

1. "CD/Multimedia", "Radio" or "Settings"
2. "Tone"
3. Select the desired tone settings.
4. To adjust: turn the controller.
5. To store: press the controller.

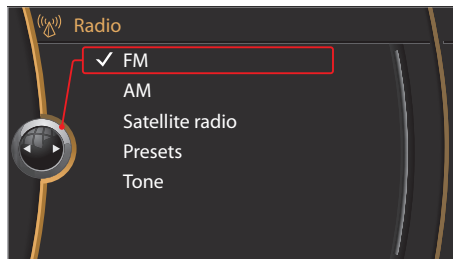

Selecting the station


1. "Radio"
2. "FM" or "AM"

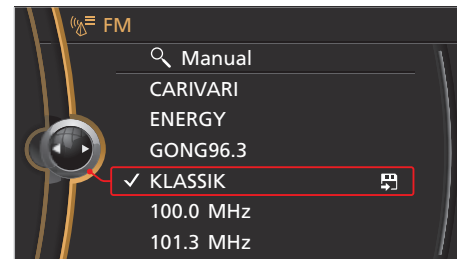

3. Select the desired station.

Tip

You can store your favorite radio stations on the programmable memory buttons 1-8. Use the iDrive to select the radio station and hold the desired button down for several seconds.

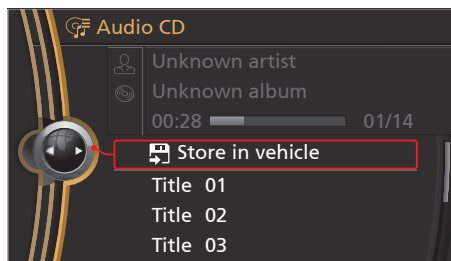

Storing music

Music tracks from CDs/DVDs and USB media may be stored in a music collection in the vehicle.

1. Insert the CD/DVD into the CD/DVD player.
2. "CD/Multimedia"
3. "CD/DVD"
4.  Select the symbol for the CD/DVD player.

5. "Store in vehicle"

The music collection is displayed.

The tracks are stored and played in sequence from the music collection.

Observe the following during the storage process:

Do not switch to the CD/DVD drive and do not remove the CD/DVD from the CD/DVD drive as this will interrupt the storage process.

Tip



Music can be stored via the CD/DVD player and compressed audio files can be stored via the USB interface in the center console. Additional information can be found in the Owner's Manual on navigation, entertainment, and communication.

Tip

While storing, you can switch to audio sources other than the CD/DVD drive without interrupting the storage process. Tracks from the current CD/DVD that have already been stored can be called up.

38 Communication

Telephone

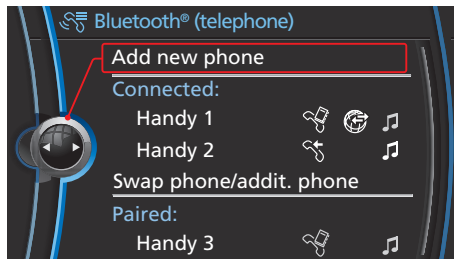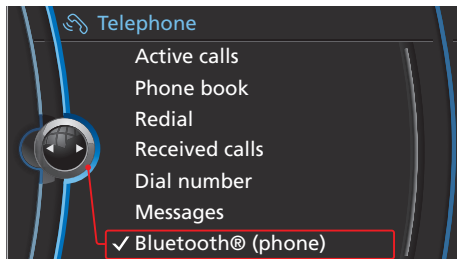

Pairing the mobile phone with the vehicle

1. Switch on the ignition.
2. Activate Bluetooth on the vehicle and the mobile phone.
3. If necessary, adjust the mobile phone according to the Bluetooth presets, e.g., connection not visible, neither with confirmation nor on the mobile phone.
4. Think of a 4 to 16-digit passkey in order to enter it later. The passkey is only required once for the pairing procedure.
5. "Telephone"
6. "Bluetooth® (phone)"
7. "Add new phone"
The vehicle's Bluetooth name appears on the Control Display.
8. Use the mobile phone to search for Bluetooth devices; check your mobile phone's operating instructions. The Bluetooth name of the vehicle also appears on the mobile phone display.
9. Select the Bluetooth name of the vehicle on the mobile phone.
The mobile phone's display or the iDrive will prompt you to enter the Bluetooth passkey.


10. Enter the passkey on the mobile phone and via the iDrive and confirm.

Tip

Please ask your BMW center which mobile phones with Bluetooth interface are supported by the mobile phone preparation package. You can obtain additional information on the Internet at: www.bmwusa.com/bluetooth

Communication 39

Telephone

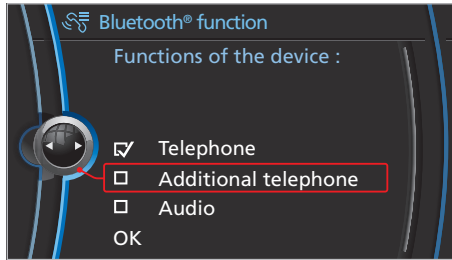

11. Select at least one function for which the mobile phone will be used.
12. "OK"

If pairing was successful, the mobile phone appears at the top of the list of mobile phones.




Dialing a number

1. "Telephone"
2. "Dial number"
3. Select the digits individually.
4.  Select this symbol to establish the call.

Accepting a call

-  Press the button on the steering wheel.

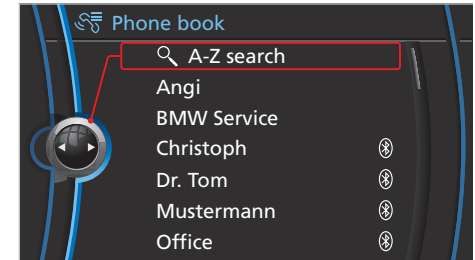

Selecting from the phone book

1. "Telephone"
2. "Phone book"
3. Select the desired entry.

Tip

Up to three mobile phones can be linked to the vehicle and used as a telephone, an additional telephone or audio player. Additional information can be found in the Owner's Manual on navigation, entertainment, and communication.

40 Refueling

Refueling/oil level



Refueling

To open the fuel filler flap, tap on the rear edge.

Fuel quality: gasoline

Only use unleaded gasoline without metal additives.

Fuel quality: BMW recommends AKI 91.

Minimum fuel grade: AKI 89.

Maximum ethanol content: 10%, which corresponds to E10.

The ethanol should meet the following quality standards:

US: ASTM 4806-xx

CAN: CGSB-3.511-xx

xx: Note the standard applicable in each case.

Displaying the oil level

The oil level is monitored electronically and shown on the Control Display.

1. "Vehicle Info"
2. "Vehicle status"
3.  "Engine oil level"

For recommended oil grades, refer to the Owner's Manual.

Note the additional information contained in the Owner's Manual for Vehicle.

Flat Tire Monitor FTM

The system identifies a loss of pressure by comparing the speeds of rotation of the individual wheels as the car is traveling.

The system must be initialized with the correct tire pressure in order for it to reliably respond in detecting a flat tire.

1. "Vehicle Info"
2. "Vehicle status"
3.  "Reset"
4. Start the engine; do not drive away.
5. Start the initialization with "Reset".
6. Drive away.


The FTM is not a substitute for carrying out tire pressure checks.

Tire Pressure Monitor TPM

TPM checks the inflation pressures of the four mounted tires. The system notifies you if there is a significant loss of pressure in one or more tires.

In order to assure that a flat tire is reported reliably, the system must be reset while all tire inflation pressures are correct.

1. "Vehicle Info"
2. "Vehicle status"
3.  "Reset"
4. Start the engine; do not drive away.
5. Reset the tire pressure using "Reset".
6. Drive away.

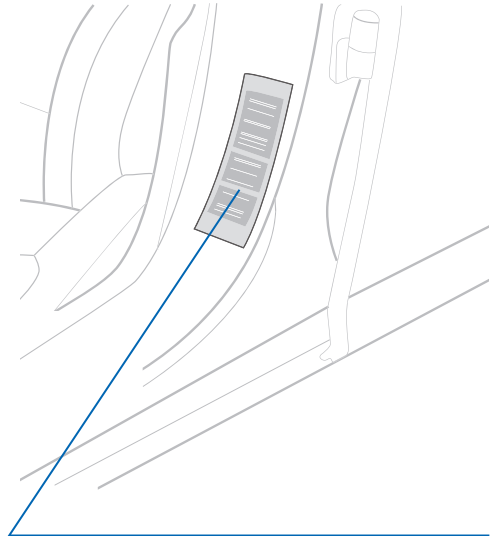

Tire pressure

The pressure values for approved tire sizes and speeds up to 100 mph/160 km/h can be found on the driver's door pillar.

If the tire's speed rating code is not listed, use the tire pressure for the corresponding size, e.g., 245/45 R19.

Check the tire pressure at least twice a month and before taking an extended trip. Initialize the FTM/TPM after correcting the tire pressure or changing the tires/wheels.


42 Breakdown assistance

Warning triangle, first aid kit



Warning triangle and first aid kit

The warning triangle and the first aid kit are located behind the left cover in the trunk. Release the holders to remove it.

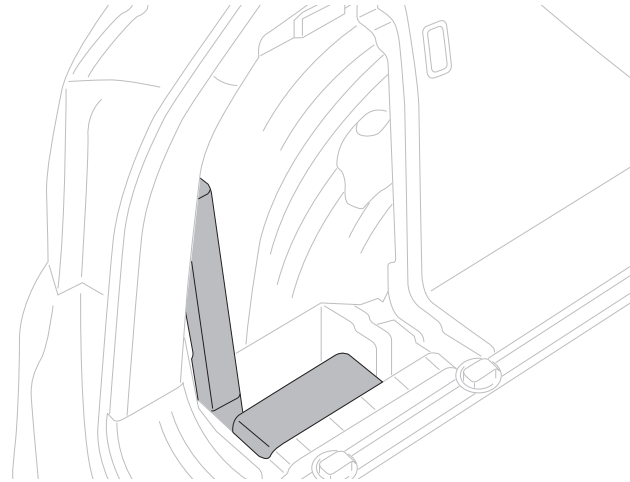


Socket for Onboard Diagnostics OBD

There is an OBD socket on the driver's side for checking the primary components in the vehicle emissions.

SERVICE
ENGINE
SOON


Emissions

 The warning lamp lights up:
Emissions are deteriorating. Have
the vehicle checked as soon as
possible.





Indicator for the previously de-
scribed malfunctions in Canadian
models.

Note the additional information contained in
the Owner's Manual for Vehicle.

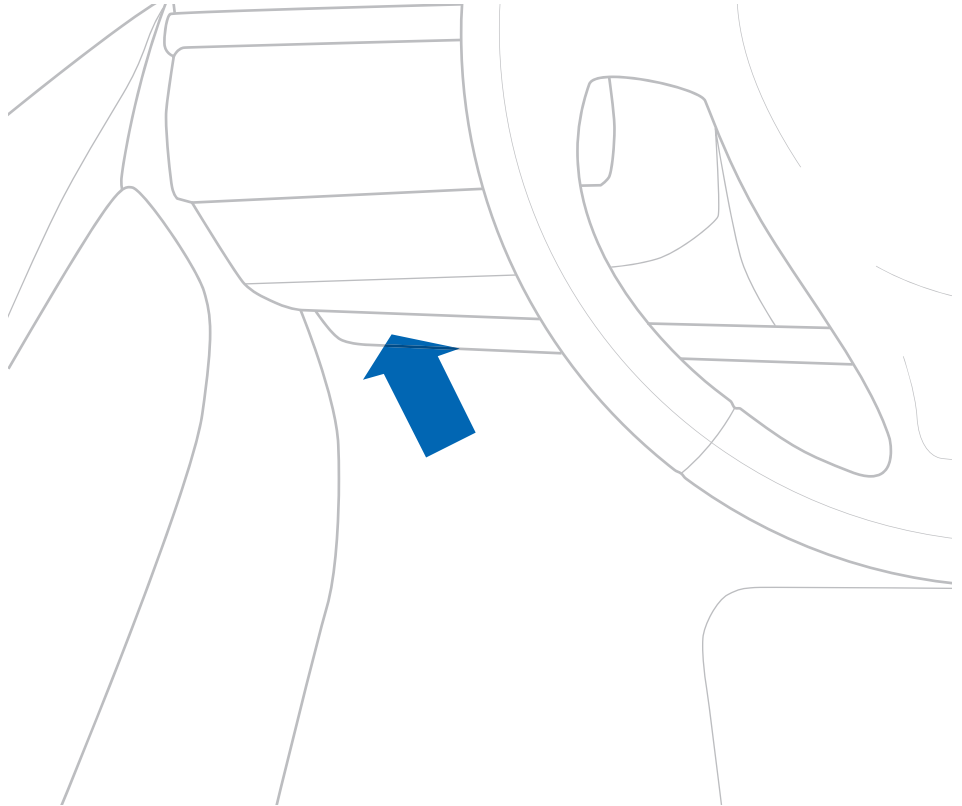

44 24/7 Access

BMW Assist™ and Bluetooth® system

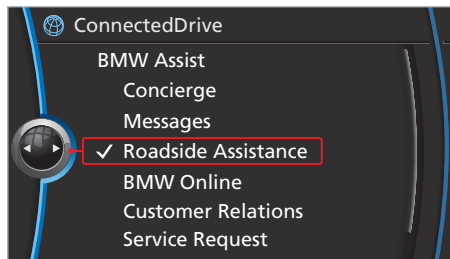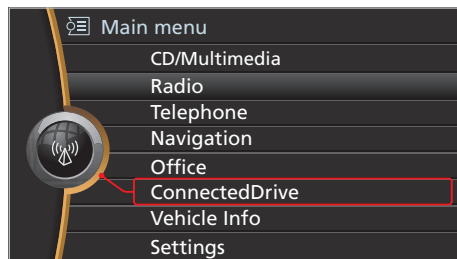

BMW Assist Safety Plan

Combining GPS location technology with hands-free wireless communication, BMW Assist connects you with a trained response specialist 24/7 to help you with almost everything while on the road.

The BMW Assist Safety Plan provides:

- Automatic Collision Notification
- Emergency Request (SOS)
- Enhanced Roadside Assistance
- Stolen Vehicle Recovery
- TeleService

Easy Access

To initiate the services, just go to "BMW Assist" in the main menu and select the desired service, or push the SOS button on the overhead console.

What You Need To Do

You must complete, sign, and submit a subscriber agreement with your salesperson. To decline services, you must complete, sign, and submit a "Waiver and Release" document. If neither action is taken, your BMW Assist services will be remotely deactivated approximately 60 days after you take delivery of your new vehicle.

Bluetooth hands-free calling

The BMW Assist system includes Bluetooth hands-free calling capability with speech recognition. See page 38 or visit www.bmwusa.com/bluetooth for BMW approved handsets and pairing instructions

Tip

You may even prepare some services offered by BMW Assist in the comfort of your home and send them to your vehicle via the Internet.

Tip

Upgrade to our optional Convenience Plan to receive directions, traffic and weather information, Critical Calling, Concierge services, online access to the Google Maps™ database, news headlines, up-to-date fuel prices and stock indices in your BMW X3 with BMW Search. Push the SOS button, call toll-free 1-888-333-6118, or log on to www.bmwassist.com to learn more.

BMW Roadside Assistance

Can be contacted if assistance is needed in the event of a breakdown.

Telephone

USA: (800) 332-4BMW (4269)

Canada: 1-800-267-8269

If possible, the vehicle and position data are transmitted in the process.

Towing

The safest method approved for transporting vehicles is to use a commercial flatbed carrier truck, dispatched via Roadside Assistance, and to secure the vehicle to the flatbed truck with four nylon wheel straps.

When pulling the vehicle onto a flatbed carrier truck, only use the screw-in tow fitting found in the tool kit.

Refer to the detailed towing instructions in the Owner's Manual.

46 Appendix

Any updates to the Owner's Manual for Vehicle can be found [here](#).

Warranty

Your vehicle is technically configured for the operating conditions and registration requirements applying in the country of first delivery, as per the respective homologation. If your vehicle is to be operated in a different country, it might be necessary to adapt your vehicle to potentially differing operating conditions and permit requirements. If your vehicle does not comply with the homologation requirements in a certain country, you cannot assert warranty claims for your vehicle there. Further information can be obtained from your Service Center.

More about BMW

bmwusa.com
www.bmw.ca



**The Ultimate
Driving Machine®**

© 2013 Bayerische Motoren Werke

Aktiengesellschaft

Munich, Germany

Reprinting, including excerpts, only with the
written consent of BMW AG, Munich.

US English VII/13

Printed on environmentally friendly paper,
bleached without chlorine, suitable for recycling.

