



GETTING TO KNOW YOUR **2014 MALIBU**



Review this Quick Reference Guide for an overview of some important features in your Chevrolet Malibu. More detailed information can be found in your Owner Manual. Some optional equipment described in this guide may not be included in your vehicle. For easy reference, keep this guide with your Owner Manual in your glove box.

INSTRUMENT PANEL CONTROLS



Symbols

	Low Fuel		StabiliTrak Active		Check Engine
	Door Ajar		StabiliTrak Off		Oil Pressure
	Traction Control Off		Security		Charging System
	Engine Coolant Temperature		Service Electric Parking Brake		Safety Belt Reminder
	Brake System		Low Tire Pressure		Airbag Readiness
	Cruise Control Set		Passenger Safety Belt Reminder		Antilock Brake System



Refer to your Owner Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See In Brief in your Owner Manual.

REMOTE KEYLESS ENTRY TRANSMITTER

Unlock

Press to unlock the driver's door. Press again to unlock all doors.

Lock

Press to lock all doors. The driver's door will not lock when open if the Unlocked Door Anti Lock Out feature is turned on.

Trunk

Press and hold to unlock the trunk.

Vehicle Locator/ Panic Alarm

Press and release to locate your vehicle. The turn signal lamps will flash and the horn will sound three times.

Press and hold to activate the alarm. The turn signal lamps will flash and the horn will sound until the button is pressed again or the ignition is turned on.



Remote Vehicle Start

Press and release the  **Lock** button and then press and hold the  button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn the ignition to the ON position.

- During a remote start, the engine will run for 10 minutes.
- Press and hold the  button until the parking lamps turn off to cancel a remote start.

Note: To change the remote lock, unlock and remote start settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

If the remote start heated seat option is selected, the heated seat button indicators do not illuminate and the temperature performance of the unoccupied heated seat may be reduced during the remote start. The heated seat turns off when the ignition is turned on.

See Keys, Doors and Windows in your Owner Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and ignition without removing the transmitter from a pocket or purse. The transmitter must be within 3 feet of the door being unlocked or the trunk.

Keyless Unlocking

- Press the button on any door handle to unlock the door. Press again to unlock all doors.

Keyless Locking

- Press the button on any door handle to lock all doors immediately.

Keyless Trunk Release

- Press the touchpad next to the center-mounted stop lamp to open the trunk.

Note: To change the door lock and unlock settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

See Keys, Doors and Windows in your Owner Manual.

Starting the Engine

- ▶ With the vehicle in Park or Neutral, press the brake pedal and then press and hold the **ENGINE START/STOP** button to start the engine.

Note: The transmitter must be in the vehicle to turn on the ignition. If the transmitter battery is weak, place the transmitter in the pocket in the center console to enable the engine to start. Replace the transmitter battery as soon as possible.

Stopping the Engine

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

The audio system will be powered for 10 minutes or until the driver's door is opened.

The windows and sunroof♦ will be powered for 10 minutes or until any door is opened.

Accessory

- ▶ With the engine off, press the **ENGINE START/STOP** button to place the ignition system in the accessory position.

See *Driving and Operating* in your Owner Manual.

STOP/START OPERATION



A fuel-saving stop/start system has been integrated with the 2.5L four-cylinder engine. While driving, when the brake is applied and the vehicle is at a complete stop, the automatic engine stop/start system may turn off the engine, referred to as an Auto Stop. In Auto Stop mode, the tachometer gauge will read AUTO STOP. The audio system, climate controls and other accessories will continue to operate. Upon releasing the brake pedal or

applying the accelerator pedal, the engine will restart. After parking the vehicle and turning off the engine, the tachometer gauge will read OFF.

Note: Before Auto Stops are enabled, a minimum vehicle speed must be achieved.

Conditions that may cause the engine to remain running or restart when the vehicle is stopped include:

- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery state of charge is low.
- The climate control system requires the engine to run based on the climate control or defog setting. Select the ECO Air Conditioning setting (green A/C indicator) to maximize the frequency and duration of Auto Stops.
- The Auto Stop time is greater than two minutes.

See *Driving and Operating* in your Owner Manual.

SEATS

Driver's Power Seat



A B C

A. 6-way Seat Adjustment

Move the horizontal control to move the seat forward or rearward, or to tilt, raise or lower the seat.

B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Adjustment

Press the control pad to adjust the lumbar support.

Folding Rear Seats



B A

1. Lower the head restraint and make sure the safety belt is in the belt guide (A).
2. Pull the lever (B) on top of the seatback. When the red marking is visible, the seatback is unlatched.
3. Fold down the seatback.

See Seats and Restraints in your Owner Manual.

TILT/TELESCOPIC STEERING WHEEL

- ▶ With the vehicle parked, push down the lever on the left side of the steering column to adjust the steering wheel. The steering wheel can then be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.

See Instruments and Controls in your Owner Manual.

DOOR LOCKS/CHILD SAFETY LOCKS/TRUNK RELEASE

- ▶ To lock or unlock all doors, press the power door  **Lock**/ **Unlock** buttons, located on the front doors.

Note: To change the lock and unlock settings, go to *Power Door Locks* in the *Vehicle Settings* menu.

- ▶ To open a locked door from inside, pull the inside door handle to unlock the door and then pull the door handle again to open the door.
- ▶ To prevent a rear door from opening from the inside, press the  **Safety Locks** button located on the driver's door. The button indicator will illuminate when activated.
- ▶ To open the trunk, with the vehicle unlocked, press the touchpad next to the center-mounted stop lamp or press the RKE transmitter  **Trunk** button.

Exterior Lights

Rotate the knob to activate the exterior lights.



Off/On

AUTO Automatic Headlamp System

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

Parking Lamps

Headlamps

Fog Lamps ♦

Press to turn the fog lamps on or off.

Instrument Panel Lighting

Instrument Panel Brightness

Rotate and hold the thumbwheel to adjust the instrument panel lighting.

See Lighting in your Owner Manual.

WINDSHIELD WIPERS



HI High Speed

LO Low Speed

INT Intermittent

Rotate the band to adjust the delay between wiper cycles. The wipers activate more often as the band is rotated upward.

OFF

Mist

Single wipe.

Washer Fluid

Pull the lever toward you to spray washer fluid on the windshield.

See Instruments and Controls in your Owner Manual.

CLIMATE CONTROLS



Dual automatic climate control system with heated seats shown

Automatic Operation

1. Press **AUTO**.
2. Set the temperature for the driver and front passenger. Allow time for the system to automatically reach the desired temperature.

If the air delivery mode or fan speed is manually adjusted, automatic operation is turned off.

Note: When the recirculation mode is used without air conditioning, the air humidity increases and the windows may fog.

See Climate Controls in your Owner Manual.

VEHICLE PERSONALIZATION

Some vehicle features can be customized using the audio controls and menus. Vehicle Settings menus may include Climate and Air Quality, Comfort and Convenience, Lighting, Power Door Locks, Remote Lock/Unlock/Start and Return to Factory Settings.



1. Press the **CONFIG** button (A) to enter the Configuration Settings menu.
2. Turn the **MENU** knob (B) to highlight Vehicle Settings, and then press the knob to select it; or use the screen buttons.
3. Turn the **MENU** knob to highlight the desired menus and settings, and then press the knob to select the highlighted item; or use the screen buttons.
4. Press the **BACK** button (C) or the Back screen button to move back within a menu.

See *Instruments and Controls in your Owner Manual*.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle system information and warning messages.



A. MENU

Press to display the:


- **Trip/Fuel** menu (digital speedometer; trip odometers; eAssist power flow, if equipped; fuel range; instantaneous fuel economy; average fuel economy; average vehicle speed; timer; OnStar Turn-by-Turn guidance navigation; boost gauge, if equipped).
- **Vehicle Information** menu (units; tire pressure; eAssist jump start, if equipped; remaining oil life; battery voltage).

B. $\Delta \nabla$

Rotate the band to scroll through the items of each menu.

C. SET/CLR

Press the button on the end of the lever to set a menu item or clear a message. Press and hold the button to reset a menu item.

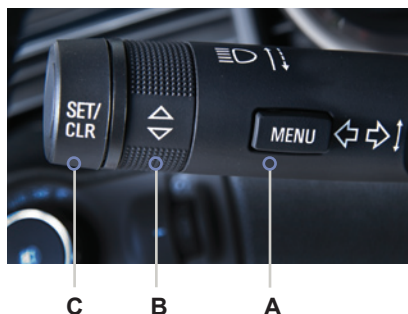

INFOTAINMENT SYSTEM ♦

Refer to your Owner Manual for important safety information about using the infotainment system while driving.

The infotainment system is controlled using the faceplate buttons, touch screen, voice recognition and audio steering wheel controls. For operation of navigation ♦ and non-touch screen systems, refer to your Owner Manual.



7-inch diagonal touch screen infotainment system shown (Eco, LT and LTZ models).
Base system (LS model) is similar.

See your Infotainment System Owner Manual.

Setting the Time

1. Press the **⌚ Clock** button.
2. Touch the **+** (plus) or **-** (minus) screen button to increase or decrease the hours, minutes or date.
3. Touch the **OK** screen button to confirm the setting.

Storing Favorite Stations

Radio stations from all bands (AM, FM or XM♦) can be stored, in any order, on up to six pages of favorites.

1. Tune in the desired radio station.
2. Press the **FAV** button to display the page where the station is to be stored.
3. Press and hold one of the six preset screen buttons until a beep is heard.
4. Repeat the steps for each desired station.

Home Page

On Home Page 1, screen buttons can be added, removed or moved.

Adding Home Page Screen Buttons

1. Press the **Home** button.
2. Touch **Menu**.
3. Touch **Customize**.
4. Touch a button to add or remove. Up to eight screen buttons can be displayed.
5. Touch **Done**.

Moving Home Page Screen Buttons

1. Press the **Home** button.
2. Touch **Menu**.
3. Touch **Sort**.
4. Touch the screen button to be moved and the screen button for the new location.
5. Touch **Done**.

Portable Audio Devices



Note: Connect an iPod/iPhone USB cord after starting the vehicle for optimum performance.

An accessory power outlet, 3.5mm auxiliary input jack and a USB port♦ are located in the center console. Route the device wires through the wire exit of the console lid.

- An iPod®, iPhone®, MP3 Player, a USB flash drive or a USB mass storage device can be connected to the USB port. Chevrolet MyLink♦ will read the device, build a list of voice commands, and fill in missing song information and album graphics. Search for music on-screen or by voice commands.

See your Infotainment System Owner Manual.

BLUETOOTH® SYSTEM

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions. The pairing process is disabled when the vehicle is moving. Streaming audio by Bluetooth is available only with the Chevrolet MyLink system and the 7-inch diagonal touch screen. ♦ For more information, visit www.gmtotalconnect.com.

Pair a Phone using Voice Recognition♦

1. Press the  **Push to Talk** button.
2. After the tone, say "Pair." The system will search for your phone. A four-digit code appears on the display.
3. Start the pairing process on the phone. Locate your vehicle name or MyLink on the phone.
4. Enter the four-digit code that appears on the touch screen or confirm a six-digit code on the phone.
5. If your phone prompts you to accept the connection or phone book download, click "yes" and always allow.

Pair a Phone using the Screen Buttons♦

1. Press the **CONFIG** button.
2. Touch **Phone Settings**.
3. Touch **Bluetooth**.
4. Touch **Pair Device**. A four-digit code appears on the display.
5. Start the pairing process on the phone. Locate your vehicle name or MyLink on the phone.
6. Enter the four-digit code that appears on the touch screen or confirm a six-digit code on the phone.
7. If your phone prompts you to accept the connection or phone book download, click "yes" and always allow.



Device List♦

To switch devices, select from the list of paired phones/devices.

Listing all Paired Phones using Voice Recognition

1. Press the  **Push to Talk** button.
2. Say "Device list" or "Select device."

Listing all Paired Phones using the Screen Buttons

1. Press the **CONFIG** button.
2. Touch **Phone Settings**.
3. Touch **Bluetooth**.
4. Touch **Device List**.

See your Infotainment System Owner Manual.

MyLink uses a Bluetooth or USB connection to link to a compatible mobile device, such as a smartphone, cell phone, USB flash drive or portable audio player/iPod®. MyLink enables streaming audio through a smartphone and hands-free voice control. For assistance with the MyLink system, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit www.chevrolet.com/mylink.

PANDORA® Internet Radio

Listen to personalized radio stations based on favorite artists or genres.

- ▶ Download the Pandora app to your smartphone. Restart the smartphone and sign in to Pandora.
- ▶ Create a station on your phone to listen to a customized song list in the vehicle.
- ▶ Connect your smartphone/device to the system by Bluetooth or, for Apple devices, by a USB cable.
- ▶ Touch the Pandora icon on the touch screen to access Pandora. A slight delay may occur when loading a song or changing a station.

Stitcher SmartRadio™

Stream favorite podcasts, radio shows and news to your vehicle.

- ▶ Download the Stitcher app to your smartphone. Restart the smartphone and sign in to Stitcher.
- ▶ Select a category to listen to.
- ▶ If you like the station, touch the Star screen button to add it to your Favorites list.

Voice Recognition

Control the music source and make phone calls hands-free using the enhanced voice recognition system.

1. Press the **Push to Talk** button on the steering wheel.
2. The radio will say "Please say a command," followed by a beep.
3. After the beep, say what you want it to do.

- **Hands-free calling:**

Example command: "Call Amanda" or "Dial 555-1212"

- **Connected music device search:**

Example command: "Play artist Van Halen"

Example command: "Play song 'Dance the Night Away'"

- **Radio control:**

Example command: "Tune FM 104.3" or "Tune XM Classic Vinyl"

Example command: "Tune Pandora" (Pandora app required)

- **Help:**

- Say "Help" for voice recognition assistance
- To start speaking immediately without waiting for the beep, press the **Push to Talk** button twice.



AUDIO STEERING WHEEL CONTROLS



+ ▢ - Volume

Press + or - to adjust the volume.

SRC Source

Press to select an audio source.

▴ ▾ Next/Previous

Rotate the thumbwheel up or down to go to the next or previous favorite radio station, track, or file.

☎ Push to Talk

☎ Press to answer an incoming call or interact with the audio, Bluetooth, navigation* or OnStar® system.

☎ End Call/Mute

☎ Press to end or reject a call.
Press to mute the vehicle speakers.

See your Infotainment System Owner Manual.

CRUISE CONTROL

Setting Cruise Control

1. Press the **On/Off** button. The **Cruise Control** symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, rotate the thumbwheel down to the **SET/-** position to set the speed. The symbol will illuminate in green on the instrument cluster.



Adjusting Cruise Control

RES/+ Resume/Accelerate

Rotate the thumbwheel up to resume a set speed.

When the system is active, rotate the thumbwheel up to increase speed.

SET/- Set/Coast

When the system is active, rotate the thumbwheel down to decrease speed.

Cancel

Press to cancel the cruise control without erasing the set speed from memory.

Pressing the brake pedal also will cancel the cruise control.

The cruise control set speed is erased when cruise control or the vehicle ignition is turned off.

See Driving and Operating in your Owner Manual.

TRACTION CONTROL AND STABILITRAK® SYSTEMS

The full-time traction control system limits wheelspin and the StabiliTrak electronic stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.



A

Turning Off Traction Control

Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ To turn off traction control, press the  **Traction Control/StabiliTrak Off** button (A). The  **Traction Control Off** light will illuminate on the instrument cluster.
- ▶ Press the button again to turn on traction control.

See Driving and Operating in your Owner Manual.

AUTOMATIC TRANSMISSION

Driver Shift Control

Driver Shift Control allows the driver to shift gears manually. The transmission will remain in the driver-selected gear.



A

B

1. Move the shift lever to the Manual (M) position (A).
2. Press the **+** (plus) or **-** (minus) button (B) on top of the shift lever to upshift or downshift. The current gear will be displayed on the Driver Information Center.

If vehicle speed is too high or too low for the requested gear, the shift will not occur. When coming to a stop, the transmission will automatically shift to 1st gear.

See Driving and Operating in your Owner Manual.

SUNROOF♦

The sunroof controls are located on the overhead console.



Express Open/ Close

- ▶ Fully press the rear of the switch to express open the sunroof. Gently press and hold the switch to partially open the sunroof.
- ▶ Fully press the front of the switch to express close the sunroof. Gently press and hold the switch to partially close the sunroof.

Tilt/ Close

- ▶ Press the rear of the switch to tilt the sunroof.
- ▶ Press the front of the switch to close the sunroof.

See Keys, Doors and Windows in your Owner Manual.

SIDE BLIND ZONE ALERT♦

While driving, the Side Blind Zone Alert displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area. The symbol flashes if a turn signal is activated when a vehicle has been detected.

- ▶ To turn the system on or off, go to Config > Vehicle Settings > Collision Detection Systems > Side Blind Zone Alert.

See Driving and Operating in your Owner Manual.

REAR VISION CAMERA♦

When the vehicle is in Reverse, a view of the area behind the vehicle appears on the infotainment screen.

Note: The system may not display a clear image if dirt, snow or ice builds up on the camera lens. Clean the camera lens, located above the license plate, with water and a soft cloth.

Rear Cross Traffic Alert♦

As part of the system, the Rear Cross Traffic Alert warns of traffic coming from either direction by displaying a visual alert on the infotainment screen and sounding three beeps.

- ▶ To turn the Rear Cross Traffic Alert on or off, go to Config > Vehicle Settings > Collision Detection Systems > Rear Cross Traffic Alert.

See Driving and Operating in your Owner Manual.

ULTRASONIC REAR PARK ASSIST♦

Detected objects are indicated by audible beeps when the vehicle is in Reverse. The interval between beeps becomes shorter as the vehicle gets closer to an object. When the distance is less than 12 in. (30cm), the beeps are continuous. The system operates only at speeds less than 5 mph.

- To turn the system on/off, go to Config > Vehicle Settings > Collision Detection Systems > Rear Parking Assist.

Note: The system may be disabled if dirt, snow or ice builds up on the sensors. Keep the vehicle clean for proper operation.

See Driving and Operating in your Owner Manual.

TIRE PRESSURE MONITOR

The  **Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures. The proper tire pressures for the vehicle are listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed in the Driver Information Center.

Tire pressure is affected by cold weather and distance driven. If the low tire pressure warning light illuminates when the vehicle is first started in cooler temperatures and then turns off as the vehicle is driven, check for the proper tire pressures.

Refer to your Owner Manual for additional information about normal monthly tire maintenance.

See Vehicle Care in your Owner Manual.

ENGINE OIL LIFE SYSTEM

The Oil Life System calculates engine oil life based on vehicle use and displays Change Engine Oil Soon on the Driver Information Center when it's necessary to change the engine oil and filter. The system should be reset to 100% only following an oil change.

See Vehicle Care in your Owner Manual.

HILL START ASSIST

After stopping on an incline, the Hill Start Assist feature momentarily holds the vehicle when the brake pedal is released. The driver-applied brake pressure is used during the stop to keep the vehicle from rolling during the period between when the brake pedal is released and the accelerator pedal is applied.

See Driving and Operating in your Owner Manual.

eASSIST OPERATION (ECO MODELS ONLY)

A compact electric assist system called eAssist has been integrated with the highly efficient 2.4-liter four-cylinder engine and six-speed automatic transmission to provide an electric “boost” to help conserve fuel. eAssist includes a small, but powerful, electric motor rated at 15 kilowatts. It replaces the typical alternator found on most engines. eAssist also uses a small, advanced 115-volt lithium-ion battery located in the trunk.

Auto Start/Stop

While driving, when the brake is applied and the vehicle comes to a complete stop, the automatic engine start/stop system may turn off the engine, referred to as an Auto Stop. In Auto Stop mode, the tachometer gauge will read AUTO STOP. The audio system, climate controls and other accessories will be powered by the high-voltage battery. The engine will restart immediately when the brake pedal is released or the accelerator pedal is applied.

After parking the vehicle and turning off the engine, the tachometer gauge will read OFF.

Conditions that may cause the engine to remain running or restart when the vehicle is stopped include:

- The engine, transmission or high-voltage battery is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The high-voltage battery state of charge is low. It will automatically recharge as the vehicle is driven.
- The climate control system requires the engine to run based on the climate control or defog setting. Using the eco air conditioning mode will result in more frequent and longer Auto Stops than the comfort air conditioning mode.
- The Auto Stop time is greater than two minutes.

See Driving and Operating in your Owner Manual.

Regenerative Braking

When braking or coasting, the electric motor acts like a generator to charge the high-voltage battery. This “regenerative braking” process captures kinetic energy that would otherwise be lost and stores it in the high-voltage battery. This electrical energy can then be reused.

Note: Capturing kinetic energy causes transmission shifts that have more feel when braking or coasting.

See In Brief in your Owner Manual.

Next Generation Transmission

All 2014 Malibu models are equipped with a next generation six-speed transmission with sophisticated algorithms that continuously store information about your driving style, such as acceleration and braking.

Over the first 250–400 miles, some transmission shifts may be more noticeable. As the vehicle is driven in a variety of city and highway driving conditions, the transmission will use its on-board processing power to quickly “learn” your driving habits to deliver a seamless driving experience.

See Driving and Operating in your Owner Manual.


Power Flow Display



The Power Flow display, located on the instrument panel's Driver Information Center or on the audio system display[◆], indicates the high-voltage battery charge level, energy flow direction, and the current eAssist operating mode. The operating modes include Engine Idle, Auto Stop, Engine Power, Hybrid Power, and Battery Charging.

See Instruments and Controls in your Owner Manual.

Driver Efficiency Gauge

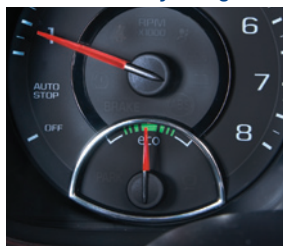

The driver efficiency gauge assists you in driving efficiently. To maximize efficiency, attempt to keep the pointer in the solid green zone in the middle of the gauge. The pointer moves to the left when braking and to the right when accelerating or driving at high speeds. When driving aggressively, it is less efficient and the pointer will move farther away from center. The eAssist system's ability to capture energy while the vehicle is slowing down makes moderate deceleration important for vehicle efficiency.

See Instruments and Controls in your Owner Manual.

Climate Control Settings

- ▶ Press the  **Air Conditioning** button until the button indicator is green to select the ECO air conditioning setting for maximum efficiency. This setting will maximize the frequency and duration of Auto Stops while still providing cabin comfort when the vehicle is in an Auto Stop.
- ▶ Press the  **Air Conditioning** button until the button indicator is amber to select the Comfort air conditioning setting for maximum comfort. Auto Stops will be reduced in both frequency and duration.



See Climate Controls in your Owner Manual.

ROADSIDE ASSISTANCE

1-800-CHEV-USA
(1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for 5 years/100,000 miles, whichever occurs first, at no expense to you. This value-added service is intended to provide you with peace of mind as you drive across town or travel the open road.

Chevrolet's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer.

Roadside Assistance and OnStar®

If you require roadside service and have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

MYCHEVROLET AND ONSTAR® MOBILE APPS



The myChevrolet and OnStar RemoteLink mobile apps connect owners to a variety of vehicle information and services, such as a searchable Owner Manual, real-time fuel information and Roadside Assistance, as well as enabling users to perform Remote Keyless Entry transmitter commands, including locking and unlocking the doors and starting the vehicle.



An active OnStar account is required to use the OnStar mobile app. Download the mobile apps from your iPhone® or Android™ device's app store. To learn more about OnStar services, press the OnStar button, refer to your Owner Manual, call 1-888-466-7827 or visit **OnStar.com**.

CHEVROLET OWNER CENTER

The Chevrolet Owner Center, a complimentary service for Chevrolet owners, is a one-stop resource designed to enhance your Chevrolet ownership experience. Exclusive member benefits include online service reminders, vehicle maintenance tips, online owner manual, special privileges and more. Sign up today at **my.chevrolet.com**.

We recommend to always use ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2013 General Motors. All rights reserved.



22898657 A