 


2014 Infiniti Q70 Hybrid

Quick Reference Guide



INFINITI.

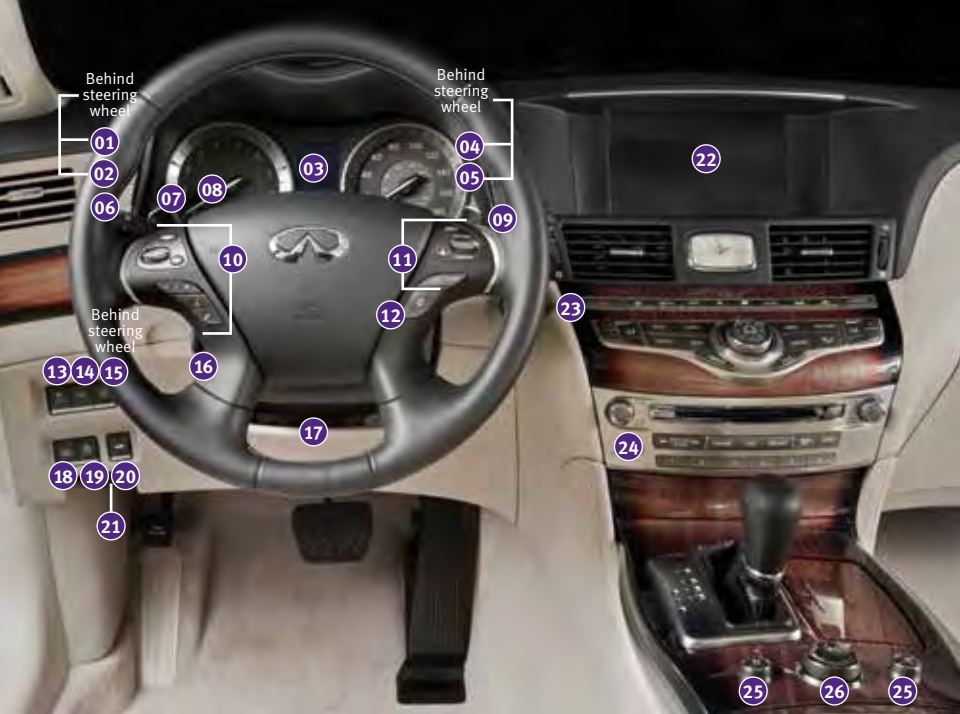

- | | |
|--|--|
| 01 ADAPTIVE FRONT LIGHTING SYSTEM (AFS) SWITCH* | 14 REAR SONAR SYSTEM OFF SWITCH |
| 02 INSTRUMENT BRIGHTNESS CONTROL SWITCHES* | 15 WARNING SYSTEMS SWITCH |
| 03 VEHICLE INFORMATION DISPLAY | 16 TILT / TELESCOPIC STEERING WHEEL SWITCH* |
| 04 TRIP RESET SWITCH* | 17 INTELLIGENT BRAKE ASSIST (IBA) SWITCH* |
| 05 TRIP COMPUTER SWITCHES | 18 REAR SUNSHADE SWITCH* |
| 06 HEADLIGHT AND TURN SIGNAL SWITCH | 19 HEATED STEERING WHEEL SWITCH* |
| 07 ASSIST CHARGE GAUGE | 20 TRUNK LID RELEASE SWITCH |
| 08 EV INDICATOR LIGHT | 21 HOOD RELEASE* |
| 09 WINDSHIELD WIPER AND WASHER SWITCH | 22 CONTROL PANEL DISPLAY SCREEN |
| 10 STEERING WHEEL SWITCHES FOR AUDIO / BLUETOOTH® | 23 CLIMATE CONTROL SYSTEM |
| 11 CRUISE CONTROL | 24 AUDIO SYSTEM |
| 12 DYNAMIC DRIVER ASSISTANCE SWITCH* | 25 CLIMATE CONTROLLED SEAT SWITCH* |
| 13 VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH* | 26 INFINITI DRIVE MODE SELECTOR* |

*See your Owner's Manual for information.

new system features

Approaching Vehicle Sound for Pedestrians (VSP) System	2
Rear Sonar System (if so equipped)	2
INFINITI Connection™ System (if so equipped)	2
Automatic Anti-glare Mirrors	4
Forest Air® System (if so equipped)	4
Blind Spot Warning (BSW) and Blind Spot Intervention™ (BSI) (if so equipped)	4

essential information

Hybrid System Warning Light	5
Hybrid Awareness	5
Tire Pressure Monitoring System (TPMS)	6
Infiniti Drive Mode Selector	7
Warning Systems Switch (if so equipped)	8
Loose Fuel Cap	8
Fuel-filler Door	9
Accessing the Front Cup Holders	9
Clock Set/Adjustment	9

first drive features

INFINITI Intelligent Key System	10
Trunk Lid Release	11
Seat Adjustments	11
Automatic Drive Positioner	12
Outside Mirror Control Switch	12
Assist Charge Gauge	13
Starting/Stopping the Hybrid System	13
Headlight Control Switch	14
Windshield Wiper and Washer Switch	15
Automatic Climate Controls	16
FM/AM/SiriusXM® satellite radio with CD/DVD Player (if so equipped)	18
USB/iPod® Interface	19
Conventional (Fixed Speed) Cruise Control	19
Intelligent Cruise Control (ICC) System (if so equipped)	20

system guide

Trip Computer	21
Bluetooth® Hands-free Phone System	21
System Operating Tips	21
Bluetooth® System with Navigation (if so equipped)	22
Bluetooth® System without Navigation (if so equipped)	24
Navigation System (if so equipped)	25
DVD Player (if so equipped)	26
HomeLink® Universal Transceiver	27



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety - Seats, seat belts and supplemental restraint system (section 1)", "Monitor, climate, audio, phone and voice recognition systems (section 4)" and "Starting and driving (section 5)" of your Owner's Manual.



To view detailed instructional videos, go to
www.infinitiownersinfo.mobi/2014/q70
 or snap this barcode with an appropriate barcode reader.



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.InfinitiUSA.com.

new system features

 
 
Approaching Vehicle Sound for Pedestrians (VSP) System

- The VSP system helps alert pedestrians to the presence of the vehicle when it is being driven at a low speed.
- When the vehicle starts to move, it produces a sound. The sound stops when the vehicle speed reaches approximately 19 MPH (30 km/h) while accelerating.
- This sound will activate again when decelerating to a speed less than 16 MPH (25 km/h).

For more information, refer to the “**Hybrid System Overview**” section of your Owner’s Manual.

Rear Sonar System (if so equipped)

- With the shift lever in the **R (REVERSE)** position, this system will sound a tone, and the sonar indicator **01** will appear in the front display to alert you to obstacles up to 3.9 ft (1.2 m) from the bumper with a decreased coverage area at the outer corners of the bumper.
- The system tones faster as the vehicle gets closer to the obstacle. A continuous tone sounds when an obstacle is less than 11.8 in (30 cm) from the bumper.
- Turn the system off by pushing the Rear Sonar System off switch **02**. Push the switch again to activate the system.

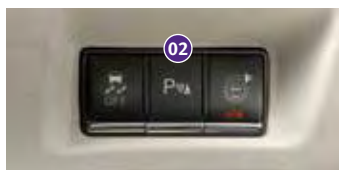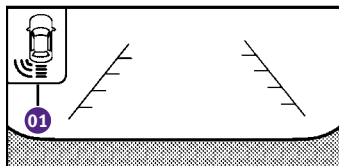

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

INFINITI Connection™ System* (if so equipped)

Infiniti Connection™ combines personalized convenience, concierge settings and personal security features to compliment the Total Ownership Experience.

For more details on Infiniti Connection™ or to enroll your vehicle, please visit www.InfinitiConnection.com to download the Infiniti Connection™ App from your smartphone’s app store or call **855-444-7244**.

Available services include:

- Infiniti Personal Assistant – To access Infiniti Personal Assistant, select “Connect to Voice Menu” from the Infiniti Connection menu or touch the  key on the map screen. At the voice prompt, say “Infiniti Personal Assistant” to be connected.
 - Your Infiniti Personal Assistant can send destination information directly to your vehicle.
- Automatic Collision Notification – In case of air bag deployment, a signal is sent containing the vehicle location and customer information to notify the proper authorities.
- Emergency Call – This service provides emergency assistance by connecting the subscriber to an Infiniti Connection Specialist.



*Infiniti Connection™ is only available on vehicles equipped with optional Infiniti Connection™ subscription service.

- In case of an emergency, press the in-vehicle telematics **SOS** button **01**.
- A Response Specialist will provide assistance based on the situation described by the vehicle's occupant.
- Enhanced Roadside Assistance – Roadside Assistance can be accessed by touching the Infiniti Connection key on the Info menu, the  key on the map screen or by pressing the **SOS** button.
- This service allows subscribers to receive assistance for a non-emergency incident, such as towing or a third party response.
- If warranted, Roadside Assistance may also be used in conjunction with the Emergency Assistance service by pressing the **SOS** button.
- My Schedule – Access your personal online Google Calendar™, hear details read via text-to-speech** and select location as a destination via the Navigation System.
- Report Stolen Vehicle – A Response Specialist will attempt to obtain location information from a reported stolen vehicle and provide that information to the local law enforcement agency.
- Remote Door Lock/Unlock – Remotely access your vehicle via an Infiniti Connection Response Specialist or designated website to remotely lock or unlock your vehicle.
- Alarm Notification – This system will notify you when the factory-installed vehicle alarm system has been activated.
- Scheduled Maintenance Notification – Receive scheduled maintenance notifications based on mileage data provided by your vehicle.
- Maintenance Alert – Receive notification of a vehicle system malfunction that triggers instrument panel warning lights.
- Destination Assistance – Receive point-of-interest assistance via guided IVR (Interactive Voice Response) or a Response Specialist by pressing the  on the map screen or the Infiniti Connection web portal.
- Destination Send-to Vehicle – Find and download point-of interest information from Google Maps™.
- To access, go to Infiniti Connection menu and select “Sync All Information Feeds”. Then go to the feeds menu page and download the desired destination information.
- Connected Search – Select “Connected Search” from the Destination menu on the vehicle's Navigation System to conduct a point-of-interest search within a certain distance of the vehicle's location.
- Drive Zone – Monitor the movement of your vehicle within a specified region. Set up boundaries in the Monitoring section of the Infiniti Connection web portal.
- Max Speed Alert – Set a maximum speed on the Infiniti Connection web portal. You will receive notifications if your vehicle exceeds the maximum speed setting.
- Mobile Information Service – Receive the latest news headlines, stock quotes and sports scores by setting up preferences on the Mobile Information Service page in the Infiniti Connection web portal.



**Laws in some jurisdictions may restrict the use of “Text-to-Speech.” Some applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

new system features

- Valet Alert – Use to set up a 0.2 mi radius around your vehicle.
 - Activate alerts by pressing the “Connect to Voice Menu” button on the Infiniti Connection™ screen or by pressing the  key on the map screen.
 - At the prompt, say “Valet Alert” and then “Activate” or “Deactivate”.

For more information, refer to the **“Viewing technical information (section 7)”** of your Navigation System Owner’s Manual.

Automatic Anti-glare Mirrors

- The inside rearview mirror and both outside mirrors are designed to automatically change reflection according to the intensity of the headlights of the vehicle following you.
- The anti-glare system will be automatically turned on when the ignition switch is in the **ON** position.

For more information, refer to the **“Pre-driving checks and adjustments (section 3)”** of your Owner’s Manual.

Forest Air® System (if so equipped)

- This system helps keep the air inside your vehicle clean using an automatic air intake and ventilation system that monitors air quality with outside and inside sensors.
- Automatic humidity control prevents over-drying of the passenger compartment and fogging of the windshield. When the system is ON, the defroster may automatically turn on.



For more information, refer to the **“Monitor, climate, audio, phone and voice recognition systems (section 4)”** of your Owner’s Manual.

Blind Spot Warning (BSW) and Blind Spot Intervention® (BSI) (if so equipped)

- The Blind Spot Warning (BSW) system alerts the driver when another vehicle moves into the vehicle’s blind spot area.
- An indicator light  near the outside mirror will illuminate if the radar sensors detect a vehicle in the detection zone.
- The Blind Spot Intervention™ (BSI) system can assist the driver in returning the vehicle to the center of the traveling lane by applying individual brake pressure to the left or right wheels for a short period of time.
- The indicator light  will first illuminate in orange and then turn green before turning off. This indicates that the Blind Spot Warning (BSW) and Blind Spot Intervention (BSI) systems are operational.



For more information, refer to the **“Starting and driving (section 5)”** of your Owner’s Manual.

Hybrid System Warning Light

- This light will illuminate when the ignition switch is in the **ON** position and will turn off when the hybrid system is started.
- The light will also illuminate when a malfunction occurs in the electric motor or hybrid system.
- When this light illuminates while driving, immediately stop the vehicle in a safe location and contact an INFINITI retailer.
- If the hybrid system warning light blinks while driving, it may indicate that the Li-ion battery charge is low and you cannot continue to drive.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

 
Hybrid Awareness

- Your vehicle is virtually silent in the electric mode. If you exit your vehicle while it is **ON**, but the engine is not running, the engine will automatically start, informing you that the car is still **ON**.
- Do not store your INFINITI Intelligent Key within detection range of the vehicle. This may cause welcome lights and other functions to activate, creating unwanted battery drain.
- The hybrid system is designed for optimum efficiency and performance. Activation of the electric mode may vary with driving conditions and driver input. A full battery display does not indicate the vehicle should be in the electric mode.

For more information, refer to the “**Hybrid System Overview**” section of your Owner’s Manual.

Tire Pressure Monitoring System (TPMS)

- A **CHECK TIRE PRESSURE** warning message will appear in the vehicle information display **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low in pressure and air is needed.
- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After the tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25km/h). The **CHECK TIRE PRESSURE** warning message and low tire pressure warning light will extinguish.
- When the low tire pressure warning light flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by an INFINITI retailer.
- Tire pressure rises and falls, depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.
- Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to "Technical and consumer information (section 9)" in your Owner's Manual for the location of the Tire and Loading Information label.

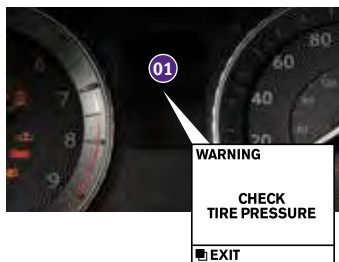

For more information, refer to the "Instruments and controls (section 2)", "Starting and driving (section 5)" and the "Maintenance and do-it-yourself (section 8)" of your Owner's Manual.

Infiniti Drive Mode Selector

Turn the switch to the following position to select the corresponding drive mode:

- 01** Standard (●) -Used for standard or normal driving.
- 02** **SPORT** - The engine and transmission will adjust, resulting in higher engine rpm and a more aggressive shift pattern. In this mode, fuel economy may be reduced.
- 03** **SNOW** – Used on snowy roads or slippery areas. In this mode, engine output is controlled to avoid wheel spin.
- 04** **ECO** – Adjusts engine and transmission points to enhance fuel economy.



ECO PEDAL SYSTEM (if so equipped)

- With the Infiniti Drive Mode Selector switch in the **ECO** Mode, the ECO pedal system assists the driver in improving fuel economy.
- The ECO pedal system applies force to make the accelerator pedal heavier, depending on the accelerator pedal operation.
- To change the ECO pedal reaction force:
 1. Push the **SETTING** button on the control panel.
 2. Touch the **ECO DRIVE** key.
 3. Touch the **ECO pedal** key and select one of the options below:
 - **OFF** - Turns the ECO pedal system off.
 - **Soft** - Softens the reaction force.
 - **Standard** - Reaction force is normal.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

essential information

Warning Systems Switch (if so equipped)

 
- The warning systems switch **01** will turn on or off any enabled warning systems including Lane Departure Warning (LDW), Blind Spot Warning (BSW), and Forward Collision Warning (FCW). Systems that are not enabled will always remain off.
- When the warning systems switch is turned off, the indicator light **02** on the switch extinguishes. If the warning systems switch is illuminated, the system is on. The indicator will also be off if all of the warning systems are deactivated using the Settings menu.
- To enable or disable these systems, perform the following steps:

1. Press the **SETTING** button **03** on the control panel.

2. Using the INFINITI Controller **04**, highlight the “Driver Assistance” key **05** on the display. Then press the **ENTER** button **06**.

3. Highlight the corresponding warning system key **07**, select ON (enabled) or OFF (disabled) and press the **ENTER** button **06**.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

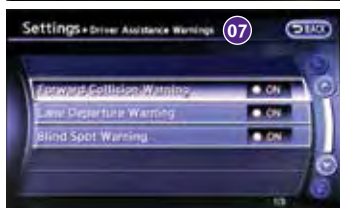

Loose Fuel Cap

- A **LOOSE FUEL CAP** warning message will appear in the vehicle information display **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed for more than 1 second.
- If the cap is not properly tightened, the Malfunction Indicator Light SERVICE ENGINE SOON may illuminate.

  For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

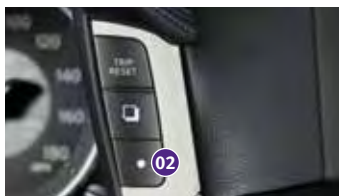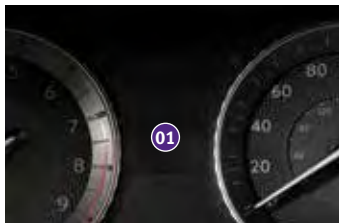

Fuel-filler Door

The fuel-filler door is located on the passenger's side of the vehicle.

- When the doors of the vehicle are locked or unlocked, the fuel-filler door is automatically locked or unlocked at the same time.
- To open the door, push the upper left side of the door.

 


For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

Accessing the Front Cup Holders

- To open the cup holders, push the lid **01** down and release.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.

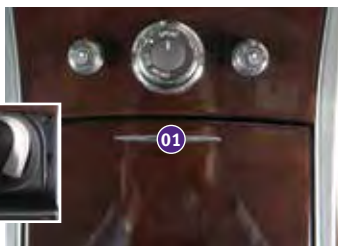

Clock Set/Adjustment

DIGITAL CLOCK ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:
 1. Press the **SETTING** button on the control panel.
 2. Touch the **Others** key.
 3. Touch the **Clock** key.
- The following settings can be adjusted:
 - **On-screen Clock:** The clock in the upper right corner of the display can be turned ON or OFF.
 - **Clock Format (24h):** The clock can be set to 12 hours or 24 hours.
 - **Offset (hour):** The time can be adjusted by increasing or decreasing per hour.
 - **Offset (min):** The time can be adjusted by increasing or decreasing per minute.
 - **Daylight Savings Time:** The application of daylight savings time can be turned ON or OFF.
 - **Time Zone:** Adjust the time zone. Choose a time zone from the available list.
- Press the **BACK** button to return to the previous screen.



For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

first drive features

INFINITI Intelligent Key System

- It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).
- The INFINITI Intelligent Key system allows you to lock or unlock your vehicle, open your trunk and start the engine.
- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **01** once or press the  button **02** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **01** once; the corresponding door will unlock. Push the door handle request switch **01** again within 1 minute; all other doors will unlock, or
 - Press the  button **03** on the key fob to unlock the driver's side door. Press the  button again; all other doors will unlock.
- To open the trunk, press the  button **04** for more than 1 second.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **05** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.



INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Move the shift lever to the **P (PARK)** position.
 2. Firmly apply the foot brake.
 3. Touch the ignition switch with the Intelligent Key and a chime will sound.
 4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**”, “**Starting and driving (section 5)**” and the “**Maintenance and do-it yourself (section 8)**” of your Owner’s Manual.

Trunk Lid Release

Use one of the following methods to unlatch the trunk lid then lift the lid to open the trunk:

- Push the trunk open request switch **01** under the trunk handle while carrying the INFINITI Intelligent Key with you.

 


- Press the  button **02** on the key fob for more than one second.



- From inside the vehicle, push the trunk lid release switch **03**.

For more information, refer to the “Pre-driving checks and adjustments (section 3)” of your Owner’s Manual.

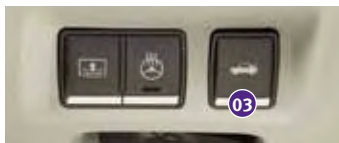

Seat Adjustments

- To slide the seat forward or backward, push the switch  **01** forward or backward.
- To recline the seatback, push the switch  **02** forward or backward.

SEAT LIFTER

- To adjust the angle of the front seat cushion or height of the seat, push the front or rear end of the switch  **01** up or down.



LUMBAR SUPPORT (if so equipped)

- To adjust the seat lumbar support, push the front or back end of the switch  **03**.

For more information, refer to the “Safety — Seats, seat belts and supplemental restraint system (section 1)” of your Owner’s Manual.

first drive features

Automatic Drive Positioner

- Two positions for the driver's seat, steering column and outside mirrors can be stored in the automatic drive positioner 01 memory.
- Follow these steps to set the memory positions:
 - Confirm the shift lever is in the **P (PARK)** position.
 - Push the ignition switch to the **ON** position.
 - Adjust the driver's seat, steering column and outside mirrors to the desired positions, using the adjusting switches for each feature.
 - Push the **SET** switch and within 5 seconds push the memory switch (**1** or **2**) for at least 1 second.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds.
 - The driver's seat, steering column and outside mirror positions are now set to your preference.
- These memorized positions can also be linked to your INFINITI Intelligent Key. To link a memorized position to your INFINITI Intelligent Key, press the unlock button on the key fob after completing the previous step.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

Outside Mirror Control Switch

- To select the right or left side mirror, move the switch 01 right or left.
- Adjust each mirror to the desired position using the switch 02.
- To fold the outside rearview mirrors, push the switch 03 to the  position. To unfold the outside rearview mirrors, push the switch 03 to the  position.



REVERSE TILT-DOWN FEATURE

- When backing up the vehicle, the right or left outside mirror can be selected to automatically turn downward.
 1. Push the ignition switch to the **ON** position.
 2. Move the shift lever to the **R (REVERSE)** position.
 3. Choose the right or left outside mirror by operating the outside mirror control switch 01.
 4. The outside mirror surface moves downward.

- When one of the following conditions has occurred, the outside mirror surface will return to its original position.
 - The shift lever is moved to any position other than the **R (REVERSE)** position.
 - The outside mirror control switch is set to the central or (neutral) position.
 - The ignition switch is pushed to the **OFF** position.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

Assist Charge Gauge

- This shows the power consumed **02** or generated **01** by the electric motor.

For more information, refer to the “**Hybrid System Overview**” section and the “**Instruments and controls (section 2)**” of your Owner’s Manual.



Starting/Stopping the Hybrid System

 
It is important to make sure the INFINITI Intelligent Key is with you (that is, in your pocket or purse).

- Depress the brake pedal.
- Press the ignition switch **START/STOP** button to start the hybrid system.
- The ready-to-drive indicator light **01** will illuminate in the meter and you may begin driving the vehicle.



TURNING THE HYBRID SYSTEM OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Press the ignition switch **START/STOP** button to turn the hybrid system off.

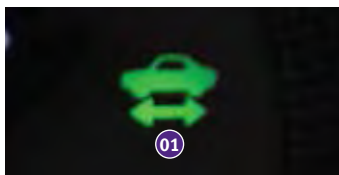

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

first drive features

Headlight Control Switch

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **01** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **02** to turn on the headlights.



AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then push the ignition switch to the **ON** position. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  position **01** or  position **02**.

HIGH BEAM SELECT

- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.



FOG LIGHT SWITCH

- The headlights must be on and the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **06** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

 


For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

Windshield Wiper and Washer Switch

- Move the lever to the following positions to operate the windshield wipers:

- 01** Mist (**MIST**) - One sweep operation of the wiper.
- 02** Auto (**AUTO**) - Operates the rain-sensing wipers intermittently. The intermittent speed can be adjusted by twisting the time control ring **03** to increase or decrease wiper sensitivity.
- 04** Low (**LO**) - Wipers operate at a continuous low-speed.
- 05** High (**HI**) - Wipers operate at a continuous high-speed.
- 06** Pull the lever toward you to activate the washer. The wipers will operate several times.

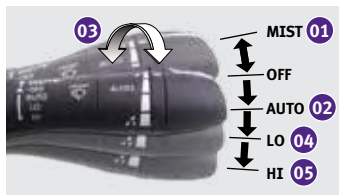

RAIN-SENSING AUTO WIPER SYSTEM

- The rain-sensing auto wiper system can automatically turn on the wipers and adjust the wiper speed, depending on the rainfall and the vehicle speed.
- To turn on the rain-sensing auto wiper system, push the lever down to the **AUTO** position **02**. The wiper will sweep once while the ignition switch is in the **ON** position.
- The rain sensor sensitivity level can be adjusted by turning the time control ring **03** to increase or decrease sensitivity.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

first drive features



Automatic Climate Controls

01 AUTO BUTTON

- The automatic mode may be used year-round. Press the **AUTO** button to turn the system on. The system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.

02 CLIMATE BUTTON

- Press the **CLIMATE** button to adjust your automatic climate controls using the climate settings on the control panel display screen.

03 DRIVER'S SIDE TEMPERATURE CONTROL BUTTONS

- Press the driver's side temperature control buttons up ▲ for warmer air or down ▼ for cooler air.

04 DRIVER'S SIDE MANUAL AIR FLOW CONTROL BUTTON

- Press the driver's side manual air flow button to manually control the driver's side air flow modes.
- The following air flow indicator modes will display on the control panel display screen:
 - ▲ Air flows from the center and side vents.
 - ▲ Air flows from the center, side and foot vents.
 - ▲ Air flows mainly from the foot vents.
 - ▲ Air flows from the defroster and foot vents.

05 PASSENGER'S SIDE TEMPERATURE CONTROL BUTTONS

- To manually adjust the passenger's side temperature, press the passenger's side temperature control buttons up ▲ for warmer air or down ▼ for cooler air.

06 PASSENGER'S SIDE MANUAL AIR FLOW CONTROL BUTTON

- Press the passenger's side manual air flow button to manually control the passenger's side air flow modes.
- The following air flow indicator modes will display on the control panel display screen:
 - ▲ Air flows from the center and side vents.
 - ▲ Air flows from the center, side and foot vents.
 - ▲ Air flows mainly from the foot vents.
 - ▲ Air flows from the defroster and foot vents.

07 FAN SPEED CONTROL BUTTONS

- Press the left  button to decrease the fan speed or press the right  button to increase the fan speed.

08 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the defroster button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- To defrost the front and side windows, set the temperature controls **03** and fan speed controls **07** to their maximum settings.

09 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS

- Push the rear window defroster switch  REAR to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

10 FOREST BUTTON (if so equipped)

- Press the forest button  to activate the Forest Air® system.
- This system's settings will activate the breeze mode, the outside odor and exhaust gas detection sensor, the inside air quality sensor and the auto humidity control. The fan speed and air flow is automatically set to the auto position.

11 INTAKE AIR CONTROL BUTTON

- Press the intake air control  button to recirculate interior air inside the vehicle. The  indicator light on the button will illuminate. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster  mode or front defroster and foot vent mode .
- Press the intake air control  button again to change the air circulation from the intake air to from the outside air. The  indicator light on the button will extinguish.

12 OFF BUTTON

- Press the **OFF** button to turn the climate control system off.

For more information, refer to the “Monitor, climate, audio, phone and voice recognition systems (section 4)” of your Owner’s Manual.

first drive features



FM/AM/SiriusXM®* Satellite Radio With CD/DVD Player (if so equipped)

01 VOLUME/ON•OFF CONTROL KNOB

- Press the **VOL/ON•OFF** control knob to turn the system on or off. Turn the knob right or left to increase or decrease the volume.

02 TUNE/FOLDER/AUDIO CONTROL KNOB

- To manually tune the radio, turn the **TUNE/FOLDER/AUDIO** knob left or right.

03 SEEK•CAT/TRACK BUTTONS

- To scan quickly and stop at the previous or next broadcast station, press the ◀◀ or ▶▶ end of the **SEEK•CAT/TRACK** button.
- For satellite radio, press the ◀◀ or ▶▶ end of the **SEEK•CAT/TRACK** button to switch to the first channel of the previous or next category.
- To change tracks on a CD, press the ◀◀ or ▶▶ end of the **SEEK•CAT/TRACK** button.
- To rewind or fast forward a track on a CD, press and hold the ◀◀ or ▶▶ end of the **SEEK•CAT/TRACK** button.

04 STATION PRESET BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM•AM** button 05 or **XM** button 06 then tune to the desired FM, AM or XM satellite radio station.
- Then press and hold the desired station preset button (1-6) until the preset number is updated on the display and the sound is briefly muted. The channel indicator will then display and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (1-6).

*SiriusXM® Satellite Radio is only available on vehicles equipped with an optional satellite radio subscription service. For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

USB/iPod® Interface

- The USB jack **01** is located in the center console under the arm rest.
- When a compatible USB memory device or iPod® is plugged into the USB jack, compatible audio and video files stored on the device can be played through the vehicle's audio system and front display.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.



Conventional (Fixed Speed) Cruise Control

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 MPH (40km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. The **CRUISE SET** indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **04**.
- To turn off cruise control, push the **ON/OFF** switch **01**. Both the **CRUISE** indicator light and the **SET** indicator light in the instrument panel will extinguish.

 
For more information, refer to the “**Starting and driving (section 5)**” of your Owner's Manual.



Intelligent Cruise Control (ICC) System (if so equipped)

VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set Vehicle-To-Vehicle Distance Control mode, press the **CRUISE ON/OFF** button **01** for less than 1.5 seconds. The **CRUISE** indicator light **02** will illuminate.
- Accelerate to the desired speed.
- Push down on the **COAST/SET** switch **03** and release it. Cruise control will be set to the desired speed.
- Press the distance button **04** repeatedly to change the set distance between long, middle and short.
- When a vehicle is not detected ahead of you in the lane, the set distance and set vehicle speed indicator lights will illuminate **05** in set mode.

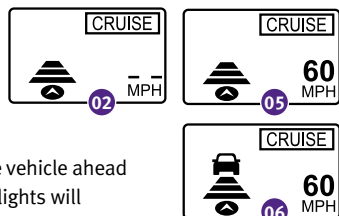

- When a vehicle is detected ahead of you in the lane, the vehicle ahead detection set distance and set vehicle speed indicator lights will illuminate **06** in set mode.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **07**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **03**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **08** or tap the brake pedal. The set vehicle speed indicator **05** will extinguish.
- To turn off cruise control, press the **CRUISE ON/OFF** button **01**. The **CRUISE** indicator light **02** in the instrument panel will extinguish.

To set conventional (fixed speed) cruise control mode:

- While cruise control is off, press the **CRUISE ON/OFF** button **01** and hold it down for more than 1.5 seconds. The **CRUISE** indicator light will illuminate.
- Accelerate to the desired speed.
- Push down on the **COAST/SET** switch **03** and release it. The **SET** indicator light will illuminate. Cruise control should be set to the desired speed.

 
 
To switch between the two cruise control modes:

- When one of the two cruise modes is in use, you must turn the system off and then turn it on again to select the other cruise control mode.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

Trip Computer

- When the  button **01** is pressed, the following modes will appear on the vehicle information display **02**:
 - Energy monitor** – Displays energy flow related to the hybrid system and the charge level of the Li-ion battery.
 - MPG** – Displays the current fuel consumption.
 - MPG/MPH** – Displays the average fuel consumption and speed since the last reset.
 - To reset, press and hold the  button **03** for more than one second. Both the fuel consumption and average speed will reset at the same time.
 - TIME/MILES** – Displays the elapsed time and total distance the vehicle has been driven since the last reset.
 - When the elapsed time and trip odometer are displayed, To reset, press and hold the  button **03** for more than one second. Both the elapsed time and trip odometer will reset at the same time.
 - RANGE** – Displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
 - OUTSIDE TEMP** – Displays the exterior air temperature including a low temperature warning feature.
 - SETTING** – Allows you to set reminders for alerts and maintenance intervals or change the language and units used in the system.
 - Press the  button **03** to cycle through the various setting modes.
 - Press the  button **01** to choose the selected menu.
 - WARNING** – Displays when a warning is present.
- To reset **TRIP A** and **TRIP B**, press and hold the **TRIP RESET** button **04** for more than one second.

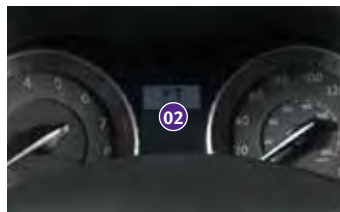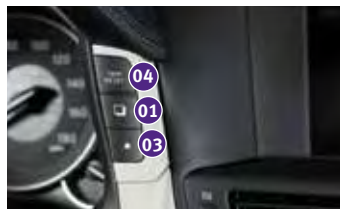


For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

Bluetooth® Hands-free Phone System

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

 - Press the  or  button to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  or  button and after the tone say, “Call Redial”.

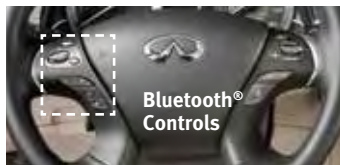

*Some jurisdictions prohibit the use of cellular telephones while driving.

- The “Help” command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Wait until after the tone sounds and the face icon on the display changes before speaking a command.
- Speak naturally without long pauses and without raising your voice.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, “Michael Smith” may be spoken as “Smith Michael”.
- To cancel a Voice Recognition session, say “Cancel” or “Quit” or press and hold the  or  button for 5 seconds.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. See your Owner’s Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone’s Owner’s Manual and visit www.InfinitiUSA.com/bluetooth.



Bluetooth® System with Navigation* (if so equipped)

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the phone.
1. Press the **SETTINGS** button, then select the **PHONE** key on the instrument panel or the  button on the steering wheel and select the “Connect Phone” key.
 2. Initiate connecting from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.InfinitiUSA.com/bluetooth.
 - When prompted for a PIN code, enter “1234” from the handset. (The PIN code is assigned by INFINITI and cannot be changed.)
 3. When connecting is complete, the screen will return to the Phone menu display.

 


*Some jurisdictions prohibit the use of cellular telephones while driving.

system guide

PHONEBOOK SETUP

- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, the vehicle phonebook may be set for up to 40 entries.
- To manually download entries:
 1. Press the  button and select the "Quick Dial" key.
 2. Select the "Add New" key at the top of the display. There are different methods to input a phone number. Select one of the following options:
 - "Copy from Call History" – to save a number from the Outgoing, Incoming or Missed Calls lists.
 - "Copy from the "Phonebook" – to save a number that has been downloaded from your handset to the vehicle.
 - "Enter Number by Keypad" – to input the number and name manually.

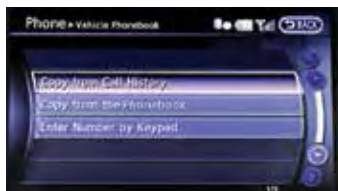

MAKING A CALL

To make a call, follow this procedure:

1. Press the  button on the steering wheel. The Phone menu will appear on the control panel display.
2. Select the "Quick Dial", "Call History", "Phonebook" or "Dial Number" key.
3. Select the desired entry from the list.
4. Select "Call" to start dialing the number.



RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel or touch the "Answer" key.
- To reject the call, touch the "Reject Call" key.
- To hang-up, press the  button or touch the "Hang Up" key.



Bluetooth® System without Navigation* (if so equipped)

PAIRING PROCEDURE

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say: “Connect Phone”. The system acknowledges the command and announces the next set of available commands.
3. Say: “Add Phone”. The system acknowledges the command and asks you to initiate connecting from the phone handset.
4. Initiate pairing from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.InfinitiUSA.com/bluetooth.
 - When prompted for a PIN code, enter “1234” from the handset. (The PIN code is assigned by INFINITI and cannot be changed.)
5. Say the name of the phone when the system asks you to provide one. You can give the phone a name of your choice.



PHONEBOOK REGISTRATION

- When the cellular phone is connected to the in-vehicle module, the data stored in the cellular phone, such as phonebook, outgoing call logs, incoming call logs and missed call logs, is automatically transferred and registered to the system.
- The availability of this function depends on each cellular phone. The copying procedure also varies according to each cellular phone. See your cellular phone's Owner's Manual for more information.
- Up to 1,000 phone numbers per registered cellular phone can be stored in the phonebook.

MAKING A CALL

1. Push the  button on the steering wheel. A tone will sound.
2. Say: “Call”. The system acknowledges the command and announces the next set of available commands.
3. Say the registered person's name. The system acknowledges the command and announces the next set of available commands.
4. Say: “Yes”. The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button.
- To hang-up, press the  button.

*Some jurisdictions prohibit the use of cellular telephones while driving.

For more information, refer to the “Monitor, climate, audio, phone and voice recognition systems (section 4)” of your Owner's Manual or visit www.InfinitiUSA.com/bluetooth.



Navigation System (if so equipped)

- 01** Touch-screen display.
- 02** Destination (**DEST**) – Press to enter a destination.
- 03** Information (**INFO**) – Press to display the vehicle, traffic (if so equipped), weather (if so equipped) or voice recognition information.
- 04** **SETTING** – Press to access the system settings.
- 05** Infiniti Controller
 - **ENTER** – Press the **ENTER** button to select the highlighted item on the screen.
 - Center Dial – Turn the dial to highlight an item on the screen, adjust a setting or adjust the map scale.
 - Slide the controller (push upward/downward/leftward/rightward) to select an item on the screen, to adjust a setting or scroll the map in eight directions.
- 06** **ROUTE** – Press to access guidance control functions, such as guidance cancellation, route priority or waypoint setting on the route.
- 07** **MAP** – Press to display the map. While following a programmed route, press multiple times to change the type of route information.

- 08 **STATUS** – Press multiple times to display audio information, air conditioner status, fuel economy or navigation directions.
- 09  **OFF** – Press to switch between the day screen (bright) and the night screen (dark). Press and hold the button to turn the display off. Press again to turn the display on.
- 10  **BACK** – Press to return to the previous screen. In a settings screen, this button can also be used to apply the setting. In a character input screen, this button can also delete the characters that have been entered.
- 11 **VOICE** – Press to hear the current voice guidance for a programmed route.

For more information, please refer to your Navigation System Owner's Manual.

DVD Player (if so equipped)

 
- This system allows you to play video files via a DVD or USB storage device, containing supported file formats, from the front display.
- To view movies on the front display, stop the vehicle in a safe location, move the shift lever to the **P (PARK)** position and apply the parking brake.
- To reduce driver distraction, movies will not be shown on the front display while the vehicle is in any drive position.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.



HomeLink® Universal Transceiver

- The HomeLink system can learn and consolidate the functions of up to 3 different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programming is complete, and the HomeLink button will activate your device.
 - A blinking light that turns to a solid continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink button, press and release the learn or smart button (the name may vary by manufacturer but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed HomeLink button for 2 seconds and release.
- You may have to repeat the previous 2 steps up to 3 times to complete the programming process. HomeLink should now activate your device.

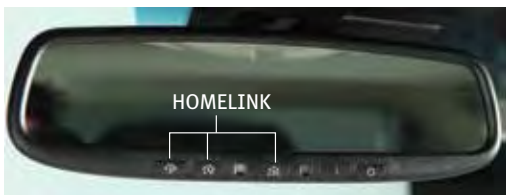

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual, the HomeLink website at www.homelink.com or call **1-800-355-3515**.



To view detailed instructional videos,
go to www.infinitiownersinfo.mobi/2014/q70
or snap this barcode with an appropriate
barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide Owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by Nissan to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guide, Owner's Manuals and any updates can also be found in the Owner section of the Infiniti website at <https://owners.infiniti.com/iowners/navigation/manualsAndGuides>. If you have questions concerning any information in your Owner's Manual, contact INFINITI Consumer Affairs. See the INFINITI CUSTOMER CARE PROGRAM page in this Owner's Manual for contact information.