

2014 Infiniti QX50

Quick Reference Guide



INFINITI.



- | | |
|--|---|
| 01 INSTRUMENT BRIGHTNESS CONTROL SWITCH* | 11 DYNAMIC DRIVER ASSISTANCE SWITCH* |
| 02 TRIP COMPUTER SWITCHES | 12 INTELLIGENT KEY PORT |
| 03 LOW TIRE PRESSURE WARNING LIGHT | 13 TILT / TELESCOPIC STEERING WHEEL SWITCH* |
| 04 HEADLIGHT AND TURN SIGNAL CONTROL | 14 HOOD RELEASE* |
| 05 WINDSHIELD WIPER AND WASHER SWITCH | 15 VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH* |
| 06 STEERING WHEEL SWITCHES FOR AUDIO* / BLUETOOTH® / NAVIGATION | 16 CONTROL PANEL DISPLAY SCREEN* |
| 07 INTELLIGENT CRUISE CONTROL BUTTONS | 17 AUDIO SYSTEM |
| 08 PUSH BUTTON IGNITION | 18 AUTOMATIC CLIMATE CONTROLS |
| 09 WARNING SYSTEMS SWITCH* | 19 FRONT PASSENGER AIR BAG STATUS LIGHT* |
| 10 INTELLIGENT BRAKE ASSIST (IBA) OFF SWITCH* | |

*See your Owner's Manual for information.

new system features

Blind Spot Warning (BSW) System (if so equipped)	2
--	---

essential information

Tire Pressure Monitoring System (TPMS)	3
Loose Fuel Cap	4
Fuel-Filler Door	4
Front Armrest/Center Console Storage Box	4

first drive features

INFINITI Intelligent Key System	5
Liftgate Release	6
Power Seat Adjustments	6
Automatic Drive Positioner (if so equipped)	7
Outside Mirror Control Switch	7
Starting/Stopping the Engine	8
Headlight Control Switch	8
Windshield Wiper and Washer Switch	9
Automatic Climate Controls	10
FM/AM/SiriusXM Satellite Radio with CD/DVD Player (with Navigation System - if so equipped)	12
USB/iPod® Interface	13
Conventional (Fixed Speed) Cruise Control	13
Intelligent Cruise Control (ICC) System (if so equipped)	14
Power Outlets	15

system guide

Trip Computer	16
Bluetooth® Hands-free Phone System (if so equipped)	16
System Operating Tips	16
Bluetooth® System with Navigation (if so equipped)	17
Bluetooth® System without Navigation (if so equipped)	19
Navigation System (if so equipped)	21
DVD Player (if so equipped)	22
HomeLink® Universal Transceiver (if so equipped)	23



- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)", "Monitor, climate, audio, phone and voice recognition systems (section 4)"** and the **"Starting and driving (section 5)"** of your Owner's Manual.



To view detailed instructional videos, go to
www.infinitiownersinfo.mobi/2014/qx50
 or snap this barcode with an appropriate barcode reader.

new system features

Blind Spot Warning (BSW) System (if so equipped)

- The control switch is located on the left side of the instrument panel.
- The system automatically turns on when the engine is started and the indicator light on the switch **01** illuminates.
- The BSW indicator lights **02**, located next to the outside mirrors, will activate when the BSW system detects a vehicle in the detection zone.
- If the turn signal is activated in the direction of a detected vehicle, a chime sounds twice and the BSW indicator light will flash.
- To cancel the system, push the control switch and the warning systems ON indicator will turn off.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual.



Tire Pressure Monitoring System (TPMS)

- A **CHECK TIRE PRESSURE** warning message will appear in the vehicle information display **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.

The image shows a close-up of a vehicle's instrument cluster. A digital display in the center shows the text 'WARNING' at the top, 'CHECK TIRE PRESSURE' in the middle, and 'EXIT' at the bottom. A callout bubble with the number '01' points to the display. To the left of the display is a tachometer and to the right is a speedometer.
- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25 km/h). The **CHECK TIRE PRESSURE** warning message and the low tire pressure warning light will disappear.

The image shows a close-up of the dashboard area. A yellow warning light, which is a horseshoe shape with an exclamation mark inside, is illuminated. A callout bubble with the number '02' points to the light.
- When the low tire pressure warning light flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by an INFINITI retailer.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to section 9, "Technical and consumer information", in your Owner's Manual for the location of the Tire and Loading Information label.

 
For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Maintenance and do-it-yourself (section 8)" of your Owner's Manual.

essential information

Loose Fuel Cap

- A **LOOSE FUEL CAP** warning message will appear in the vehicle information display **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

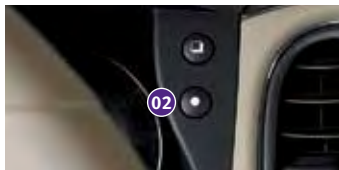

Fuel-Filler Door

Unlock the fuel-filler door using one of the following operations, then push and release the left side of the door to open.

- Push either door handle request switch or the liftgate request switch while carrying the INFINITI Intelligent Key with you.
- Press the UNLOCK button on the Intelligent Key.
- Push the power door lock switch to the UNLOCK position.

 


For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

Front Armrest/Center Console Storage Box

- To access the center console storage box, push the button **01**.


For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

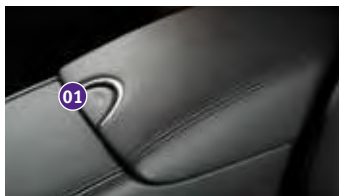

INFINITI Intelligent Key System

The INFINITI Intelligent Key System allows you to lock or unlock your vehicle, open your liftgate and start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

 
- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **01** or the liftgate request switch **02** or press the  button **03** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **01** or the liftgate request switch **02**; the corresponding door will unlock. Push the door handle request switch **01** or the liftgate request switch **02** again within 1 minute; all other doors will unlock, or
 - Press the  button **04** on the key fob to unlock the driver's side door. Press the  button again; all other doors will unlock.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **05** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.

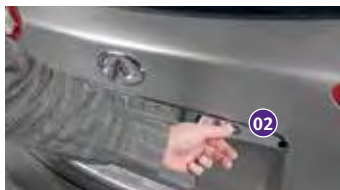

INFINITI INTELLIGENT KEY BATTERY DISCHARGE

- If the battery in the Intelligent Key is almost discharged, the guide light **06** of the Intelligent Key port blinks and the Intelligent Key insertion indicator **07** is displayed in the vehicle information display.
- To start the engine under these circumstances, insert the Intelligent Key into the key port with the keyring side facing backward until it latches into place. Then push the ignition switch to start the engine.
- To remove the Intelligent Key from the port, push the ignition switch to turn the engine off and then pull the Intelligent Key out of the port.
- The Intelligent Key port does not charge the Intelligent Key battery. If you see the Intelligent Key warning light **08**, replace the battery in the Intelligent Key.
- Do not insert the mechanical key or other objects into the key port because it will damage the key port.

 For more information, refer to the “**Pre-driving checks and adjustments (section 3)**”, “**Starting and driving (section 5)**” and the “**Maintenance and do-it yourself (section 8)**” of your Owner’s Manual.

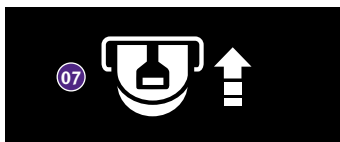


first drive features

Liftgate Release

- It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).
- Use one of the following methods to unlock the liftgate:
 - Press the  button **01** on the INFINITI Intelligent Key twice.
 - Push the liftgate request switch **02**.
- To open the liftgate, once unlocked, push the opener switch **03** located just above the license plate and pull the opener handle.

 For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



Power Seat Adjustments

- To slide the seat forward or backward, push the control switch  **01** forward or backward.
- To recline the seatback, push the switch  **02** forward or backward.

SEAT LIFTER (if so equipped for passenger seat)

- To adjust the angle of the front portion or height of the seat, push the front or rear end of the switch  **01** up or down.

POWER LUMBAR SUPPORT (if so equipped for driver’s seat)

- To adjust the seat lumbar support, push the front or back end of the switch  **03**.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.



Automatic Drive Positioner (if so equipped)

 
- Two positions for the driver's seat, steering column and outside mirrors can be stored in the automatic drive positioner memory.
- Follow these procedures to set the memory positions:
 - Confirm the shift lever is in the **P (PARK)** position.
 - Push the ignition switch to the **ON** position.
 - Adjust the driver's seat, steering column and outside mirrors to the desired positions using the adjusting switches for each feature.
 - Push the **SET** switch and within 5 seconds, push the memory switch (**1** or **2**) for at least 1 second.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds.
 - The driver's seat, steering column and outside mirror positions are now set to your preference.
- These memorized positions can also be linked to your INFINITI Intelligent Key.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.



Outside Mirror Control Switch

- To select the right or left side mirror, turn the control switch **01** right or left.
- To adjust the mirror angle, move the control switch **01** up, down, right or left.
- To prevent accidentally moving the mirror, turn and set the switch to the middle (neutral) position.

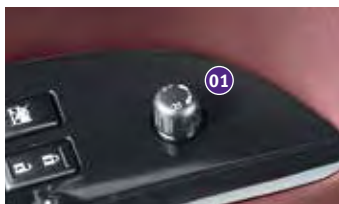

REVERSE TILT-DOWN FEATURE (if so equipped)

- When backing up the vehicle, the right or left outside mirror can be selected to automatically turn downward to provide better rear visibility.
 1. Push the ignition switch to the **ON** position.
 2. Move the shift lever to the **R (REVERSE)** position.
 3. Choose the right or left outside mirror by operating the outside mirror control switch **01**.
 4. The selected outside mirror surface moves downward.
- When one of the following conditions has occurred, the outside mirror surface will return to its original position:
 - The shift lever is moved to any position other than **R (REVERSE)**.
 - The outside mirror control switch is set to the center (neutral) position.
 - The ignition switch is pushed to the **OFF** position.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

first drive features

Starting/Stopping the Engine

- It is important to make sure the INFINITI Intelligent Key is with you (that is, in your pocket or purse).
- Depress the brake pedal.
 - If the brake pedal is not depressed, pushing the ignition switch once enters the **ACC** mode.
 - If the ignition switch is pushed a second time, the vehicle will enter the **ON** mode.
- Move the shift lever to **P (PARK)**.
- Push the ignition switch to start the engine.



TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Press the ignition switch **START/STOP** button to turn the engine off.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

Headlight Control Switch

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **01** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **02** to turn on the headlights.

 


AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then push the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  position **01** or  position **02**.

HIGH BEAM SELECT

- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light goes off.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.

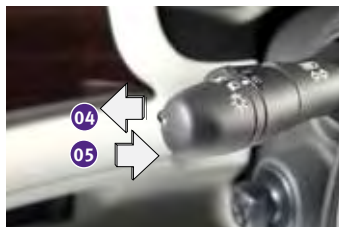

FOG LIGHT SWITCH

 
- The headlights must be in the auto, or the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **06** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.


Windshield Wiper and Washer Switch

- Move the lever to the following positions to operate the windshield wipers:
- 01** Mist (**MIST**) - One sweep operation of the front wipers.
 - 02** Intermittent (**INT**) - Operates the speed-sensing front wipers intermittently. The intermittent operation speed can be adjusted by twisting the time control ring **03** towards you to decrease wiper delay.
 - 04** Low (**LO**) - Front wipers operate at a continuous low-speed.
 - 05** High (**HI**) - Front wipers operate at a continuous high-speed.
 - 06** Front Washer  - Pull the lever toward you to activate the front washer. The front wipers will operate several times.

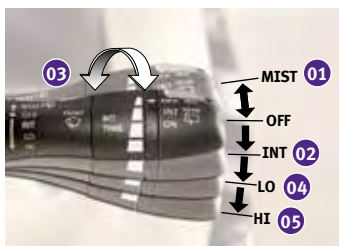


REAR WINDSHIELD WIPER AND WASHER

 - 07** Intermittent (**INT**) - Rear wiper operates intermittently.
- 08** Low (**ON**) - Rear wiper operates at a continuous low-speed.
- 09** Rear Washer  - Push the lever forward to activate the rear washer. The rear wiper will operate several times.

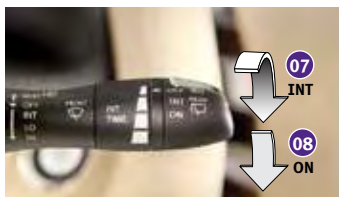

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

 first drive features

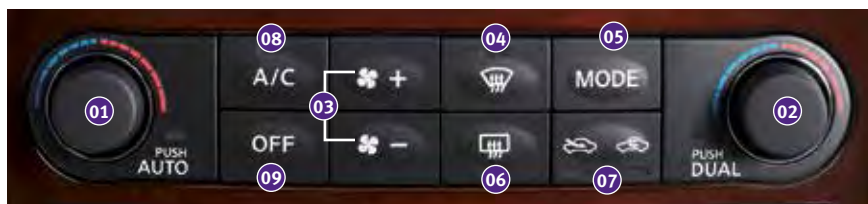

Automatic Climate Controls

01 AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- The auto mode may be used year-round. Press the **AUTO** button to turn the system on and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver's side temperature control dial to the left for cooler air or right for warmer air.

02 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by turning the passenger's side temperature control dial.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

03 FAN SPEED CONTROL BUTTONS

- To manually adjust the fan speed, press the top + button to increase the fan speed or press the bottom - button to decrease the fan speed.

04 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the defroster control button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Turn the temperature control dial **01** to set the desired temperature.
- To defrost the front and side windows quickly, set the temperature controls and fan speed controls to their maximum settings.

05 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:
 -  Air flows from the center and side vents.
 -  Air flows from the center, side and foot vents.
 -  Air flows mainly from the foot vents.
 -  Air flows from the defroster and foot vents.

06 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS

- Push the rear window defroster switch  to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

07 INTAKE AIR CONTROL BUTTON

AIR RECIRCULATION

- Press the intake air control button to recirculate interior air inside the vehicle. The indicator light on the  side will come on. This system is used to avoid outside odors and helps to adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the air conditioner is in the front defrosting mode  or front defrost and foot vent mode .

OUTSIDE AIR CIRCULATION

- Press the intake air control button again to draw outside air into the passenger compartment. The indicator light on the  side will come on.

AUTOMATIC INTAKE AIR CONTROL

- In the auto mode, the intake air will be controlled automatically. To manually control the intake air, press the intake air control button. To return to the automatic control mode, press the intake air control button for about 2 seconds.

08 A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

09 OFF BUTTON

- Press the **OFF** button to turn the climate control system off.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

first drive features



FM/AM/SiriusXM* Satellite Radio with CD/DVD Player (with Navigation System - if so equipped)

01 VOLUME/ON•OFF CONTROL KNOB

- Press the **VOL/ON•OFF** control knob to turn the system on or off. Turn the knob right or left to increase or decrease the volume.

02 SEEK•CAT AND TRACK BUTTONS

- To scan quickly through each broadcasting station, press the **SEEK•CAT** button or the **TRACK** button to stop at the previous or next broadcast station.
- For SiriusXM Satellite Radio, press the **SEEK•CAT** button or the **TRACK** button to switch to the first channel of the previous or next category.
- Press the **SEEK•CAT** button or the **TRACK** button to change tracks on a CD.
- Press and hold the **SEEK•CAT** button or the **TRACK** button to fast forward or rewind a track on a CD.

03 TUNE/FOLDER/AUDIO CONTROL KNOB

- To manually tune the radio, turn the **TUNE/FOLDER/AUDIO** knob left or right.

04 STATION PRESET BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for SiriusXM Satellite Radio.
- To store a station in a preset, you must first select a radio band by pressing the **AM•FM/SAT** button 05, then tune to the desired AM, FM or SiriusXM Satellite Radio station.
- Then press and hold the desired station preset button (1-6) until the preset number is updated on the display and the sound is briefly muted. The channel indicator will then display and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored, then press the corresponding station select button (1-6).

*SiriusXM Satellite Radio is only available on vehicles equipped with optional SiriusXM Satellite Radio subscription service.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

USB/iPod® Interface

- The USB jack **01** is located in the center console under the armrest.
- When a compatible USB memory device or iPod® is plugged into the USB jack, compatible audio and video files stored on the device can be played through the vehicle's audio system and front display.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.



Conventional (Fixed Speed) Cruise Control

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 MPH (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. The **CRUISE SET** indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **04**.
- To turn off cruise control, push the **ON/OFF** switch **01**. Both the **CRUISE** indicator light and the **SET** indicator light in the instrument panel will turn off.



 
 
 
For more information, refer to the “**Starting and driving (section 5)**” of your Owner's Manual.

first drive features

Intelligent Cruise Control (ICC) System (if so equipped)

VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set Vehicle-To-Vehicle Distance Control mode, press the **CRUISE ON/OFF** button **01** for less than 1.5 seconds. The **CRUISE** indicator light **02** will illuminate.
- Accelerate to the desired speed.
- Push down on the **COAST/SET** switch **03** and release it. Cruise control will be set to the desired speed.
- Press the distance button **04** repeatedly to change the set distance between long, middle, and short.
- When a vehicle is not detected ahead of you in the lane, the set distance and set vehicle speed indicator lights will illuminate **05** in set mode.
- When a vehicle is detected ahead of you in the lane, the vehicle ahead detection, set distance, and set vehicle speed indicator lights will illuminate **06** in set mode.
- To reset at a faster cruising speed, push up and hold the **ACCEL/RES** switch **07**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push down and hold the **COAST/SET** switch **03**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **08** or tap the brake pedal. The set vehicle speed indicator **05** will go out.
- To turn off cruise control, press the **CRUISE ON/OFF** button **01**. The **CRUISE** indicator light **02**, in the instrument panel, will turn off.



To set conventional (fixed speed) cruise control mode:

- While cruise control is off, press the **CRUISE ON/OFF** button **01** and hold it down for more than 1.5 seconds. The **CRUISE** indicator light will illuminate.
- Accelerate to the desired speed.
- Push down on the **COAST/SET** switch and release it. The **SET** indicator light will illuminate. Cruise control should be set to the desired speed.

To switch between the two cruise control modes:

- When one of the two cruise modes is in use, you must turn the system off, and then turn it on again to select the other cruise control mode.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

Power Outlets

 
- The power outlets are used for powering electrical accessories such as cellular telephones. They are rated at 12 volt, 120W (10A) maximum.
- Power outlets are located on the instrument panel **01** and inside the center console **02**.
- To use a power outlet, open the cap.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.



Trip Computer

- When the  button **01** is pressed, the following modes will appear on the vehicle information display **02** :
 - MPG** – Displays the current and average fuel consumption since the last reset.
 - MPG/MPH** – Displays the average fuel consumption and speed since the last reset.
 - TIME/MILES** – Displays the elapsed time and total distance the vehicle has been driven since the last reset.
 - RANGE** – Displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
 - OUTSIDE TEMP** – Displays the exterior air temperature including a low temperature warning feature.
 - SETTING** – Allows you to set reminders for alerts and maintenance intervals or change the language and units used in the system.
 - Press the  button **03** to cycle through the various setting modes.
 - Press the  button **01** to choose the selected menu.
 - WARNING** – This is available when a warning is present.
- Press the  button **03** for approximately 1 second to reset the currently displayed trip odometer to zero.

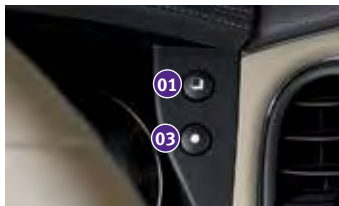


For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

Bluetooth® Hands-free Phone System (if so equipped)

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

 - The “Help” command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Say commands after the tone, or press the  button to say a command at any time.
- Speak naturally without long pauses and without raising your voice.

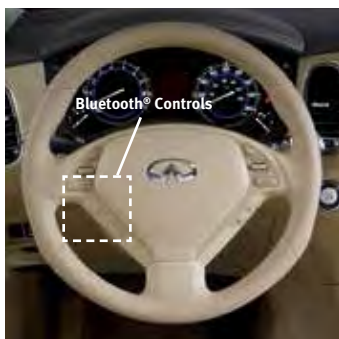

*Some jurisdictions prohibit the use of cellular telephones while driving.

- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, “Michael Smith” may be spoken as “Smith Michael”.
- To cancel a voice recognition session, simply wait 5 seconds, say “Cancel” or “Quit”, or press and hold the  button for 5 seconds.
- To increase or decrease the volume of the voice prompts, push the volume control switches  or  on the steering wheel or turn the **VOL/ON•OFF** control knob on the audio system while the system is responding.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. See your Owner’s Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone Owner’s Manual and visit www.InfinitiUSA.com/bluetooth.



Bluetooth® System with Navigation* (if so equipped)

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the phone.

 


1. Press the  button and select the “Connect Phone” key.



2. Initiate connecting from the phone.

- The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.InfinitiUSA.com/bluetooth.
- When prompted for a PIN code, enter “1234” from the handset. (The PIN code is assigned by INFINITI and cannot be changed.)

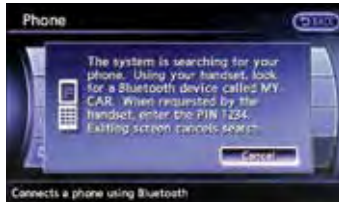

3. When the connecting is complete, the screen will return to the Phone menu display.

*Some jurisdictions prohibit the use of cellular telephones while driving.

system guide

PHONEBOOK SETUP

- Depending on your cell phone, the system may automatically download your cell phone's entire phonebook to the vehicle's Bluetooth system.
- If the phonebook does not download automatically, the vehicle phonebook may be set for up to 40 entries.
- To manually download entries:
 1. Press the  button and select the "Quick Dial" key.
 2. Select the "Add New" key at the top of the display. There are different methods to input a phone number. Select one of the following options:
 - "Copy from Call History" to save a number from the Outgoing, Incoming or Missed Calls lists.
 - "Copy from the Phonebook" to save a number that has been downloaded from your handset to the vehicle.
 - "Enter Number by Keypad" to input the number and name manually.



CALLING A PHONEBOOK ENTRY:

1. Press the  button.
2. After waiting for the tone, say "Phone".
3. After the tone, say "Phonebook" or "Quick Dial" to select the desired phonebook.
4. After the tone, say the name of the person as shown on the vehicle's display of the phonebook. Depending on the phone, the last name of the contact may need to be spoken before the first name.

MAKING A CALL:

1. Press the  button.
2. After waiting for the tone, say "Phone".
3. After the next tone, say "Dial Number".
4. After the next tone, say "123-456-7891". You may also say the digits in groups of 3, 3 and 4, respectively. To use this group dialing method, say only the first 3 digits of the phone number instead of all 10 digits. After the system recognizes the number, it will request the next 3 digits and finally the last 4 digits.
5. After the system speaks the correct number and sounds the tone, say "Dial".

RECEIVING/ENDING A CALL

 
- To accept the call, press the  button on the steering wheel or touch the “Answer” key. To reject the call, touch the “Reject Call” key.
- To hang-up, press the  button or touch the “Hang Up” key.



Bluetooth® System without Navigation* (if so equipped)

PAIRING PROCEDURE

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say “Connect Phone”. The system acknowledges the command and announces the next set of available commands.
3. Say “Add Phone”. The system acknowledges the command and asks you to initiate connecting from the phone handset.
4. Initiate pairing from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.InfinitiUSA.com/bluetooth.
 - When prompted for a PIN code, enter “1234” from the handset. (The PIN code is assigned by INFINITI and cannot be changed.)
5. The system asks for a name for the phone. Say “Yes”. The system acknowledges the command and registers the cellular phone.

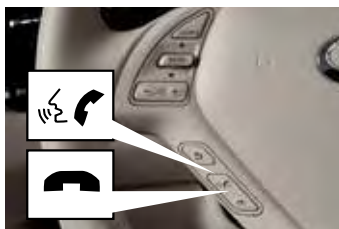

PHONEBOOK

- Depending on the phone, the system may automatically download the entire phonebook. For more information, please visit www.InfinitiUSA.com/bluetooth or the phone's user guide.
- If the phonebook does not download automatically, 40 entries can be individually downloaded. To manually download entries:
 1. Press the  button on the steering wheel
 2. After the tone, say “Phonebook”.
 3. After the next tone, say “Transfer Entry”.

*Some jurisdictions prohibit the use of cellular telephones while driving.

system guide

4. Using the phone, select an entry to send to the vehicle. Please consult the website above or your phone's user guide for specific steps of the phone.
5. The system will speak the transferred entry. Confirm the entry by saying "Yes" after the tone.

CALLING A PHONEBOOK ENTRY:

- In some cases, names stored using all UPPERCASE letters may not be recognized by the voice recognition system.
 1. Press the  button.
 2. After waiting for the tone, say "Call".
 3. After the next tone, speak a name of a phonebook entry. For example "Michael Smith".
 4. Confirm the correct name is recognized by saying "Dial" after the tone.

MAKING A CALL:

1. Press the  button.
2. After waiting for the tone, say "Call".
3. After the next tone, say "Phone Number".
4. After the next tone, say "123-456-7890".
 - You may also say the digits in groups of 3, 3 and 4, respectively. To use this group dialing method, say only the first 3 digits of the phone number instead of all 10 digits. After the system recognizes the digits, it will request the next 3 digits and finally the last 4 digits.
5. After the system speaks the correct number and sounds the tone, say "Dial".

RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel.
To reject the call, press the  button.
- To hang-up, press the  button.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual or please visit www.InfinitiUSA.com/bluetooth.



Navigation System (if so equipped)

- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.

01 Touch screen display

02 **DEST** button – Press to enter a destination.

03 **STATUS** button – Press multiple times to display audio information with either the air conditioner status, fuel economy or navigation directions.

04 **ZOOM OUT** button – Press to zoom the map out.

05 **ROUTE** button – Press to access the guidance control functions (guidance cancellation, route priority, waypoint setting on the route, etc.).

06 INFINITI Controller

- **ENTER** button – Press to select the highlighted item on the screen. If this button is pressed while a map is displayed, the map menu screen is displayed.
- Main directional buttons – Use to move across the map, highlight an item on the screen or adjust a setting (volume, brightness, etc.).
- Additional directional buttons – Use to move across the map or highlight an item on the character input screen.
- Center dial – Use to highlight an item on the screen or adjust a setting. The center dial can also be used to adjust the map scale.

system guide

- 07 **INFO** button – Press to display the vehicle (if so equipped), weather (if so equipped) or voice recognition information.
- 08  button – Press to switch between the day screen (bright) and the night screen (dark). Press and hold to turn off the display. Press again to turn on the display.
- 09 **ZOOM IN** button – Press to zoom the map in.
- 10 **MAP** button – Press to display the map. While following a programmed route, press multiple times to change the type of route information displayed.
- 11 **SETTING** button – Press to access the system settings.
- 12 **BACK** button – Press to return to the previous screen. In a settings screen, this button is also used to apply the setting. In a character input screen, this button is also used to delete the characters that have been entered.
- 13 **VOICE** button – Press to hear the current guidance for a programmed route.

For more information, please refer to your Navigation System Owner's Manual.

DVD Player (if so equipped)

 
- With this DVD Player, you can play video files via a DVD or CD from the front display.
- To view movies on the front display, stop the vehicle in a safe location, move the shift lever to the **P (PARK)** position and apply the parking brake.
- To reduce driver distraction, movies will not be shown on the front display while the vehicle is in any drive position.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.



HomeLink® Universal Transceiver

- The HomeLink® system can learn and consolidate the functions of up to 3 different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the Homelink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the Homelink® surface, keeping the Homelink® indicator light in view.
 - Press and hold the desired Homelink® button and the handheld transmitter button simultaneously until the Homelink® indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programing is complete, press and hold the Homelink® and observe the indicator light:
 - A solid continuous light indicates the programing is complete and the Homelink® button will activate your device.
 - A blinking light that turns to a solid continuous light after 2 seconds indicates additional steps are required to complete the programing.
- An additional person may make the remaining steps easier. To complete the programing process:
 - At the receiver of the device that you are programing to the Homelink®, press and release the “learn” or “smart” button (the name may vary by manufacturer but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed Homelink® button for 2 seconds and release.
 - Repeat the previous 2 steps up to 3 times to complete the programming process. Homelink® should now activate your device.

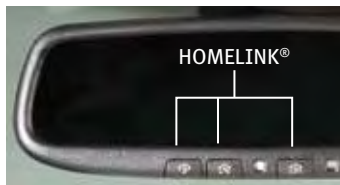

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual, the HomeLink® website at www.homelink.com or call 1-800-355-3515.



To view detailed instructional videos,
go to www.infinitiownersinfo.mobi/2014/qx50
or snap this barcode with an appropriate
barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at anytime, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your INFINITI retailer or contact Nissan North America, Inc.