

2014 Infiniti QX60 Hybrid

Quick Reference Guide



INFINITI.



- 01** INSTRUMENT BRIGHTNESS CONTROL SWITCH*
- 02** BACKUP COLLISION INTERVENTION (BCI) SWITCH*
- 03** TWIN TRIP ODOMETER RESET SWITCH*
- 04** VEHICLE INFORMATION DISPLAY
- 05** HEADLIGHT AND TURN SIGNAL SWITCH
- 06** EV INDICATOR LIGHT
- 07** LOW TIRE PRESSURE WARNING LIGHT
- 08** WINDSHIELD WIPER AND WASHER SWITCH
- 09** VEHICLE INFORMATION DISPLAY SWITCH
- 10** STEERING WHEEL SWITCHES FOR AUDIO*/BLUETOOTH®/NAVIGATION
- 11** INTELLIGENT CRUISE CONTROL
- 12** VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH*
- 13** POWER LIFTGATE SWITCH
- 14** POWER LIFTGATE MAIN SWITCH
- 15** DYNAMIC DRIVER ASSISTANCE CONTROL SWITCH*
- 16** TILT/TELESCOPIC STEERING WHEEL SWITCH*
- 17** HEADLIGHT AIMING CONTROL SWITCH*
- 18** WARNING SYSTEMS SWITCH
- 19** HEATED STEERING WHEEL SWITCH*
- 20** POWER INVERTER SWITCH
- 21** HOOD RELEASE*
- 22** CONTROL PANEL DISPLAY SCREEN*
- 23** CLIMATE CONTROL SYSTEM
- 24** AUDIO SYSTEM
- 25** FRONT PASSENGER AIR BAG STATUS LIGHT*
- 26** POWER OUTLET
- 27** DRIVER'S CLIMATE CONTROLLED SEAT SWITCH*
- 28** INFINITI DRIVE MODE SELECTOR*
- 29** PASSENGER'S CLIMATE CONTROLLED SEAT SWITCH*

*See your Owner's Manual for information.

table of contents

new system features

INFINITI Connection™ System (if so equipped)	2
Around View® Monitor (AVM) with Moving Object Detection (MOD) (if so equipped)	4
Warning Systems Switch (if so equipped)	6
Approaching Vehicle Sound for Pedestrians (VSP) System	6

essential information

Hybrid System Warning Light	7
Hybrid Awareness	7
Tire Pressure Monitoring System (TPMS) with Tire Inflation Indicator.	7
Loose Fuel Cap	8
Fuel-filler Door	8
Accessing the Front Cup Holders	8
Front Armrest/Center Console Storage Box	8
Clock Set/Adjustment	9

first drive features

INFINITI Intelligent Key System	10
Power Liftgate.	11
Power Seat Adjustments	12
2 ND Row Seats.	12
3 RD Row Manual Reclining Seatback.	13
Automatic Drive Positioner (if so equipped)	13
Outside Mirror Control Switch.	13
Assist Charge Gauge	14
Starting/Stopping the Hybrid System.	14
Headlight Control Switch.	15
Windshield Wiper and Washer Switch	16
Automatic Climate Controls.	17
Rear Climate Controls	19
FM/AM/XM Satellite Radio with CD/DVD Player (if so equipped).	19
USB/iPod® Interface	20
Conventional (Fixed Speed) Cruise Control	20
Intelligent Cruise Control (ICC) System (if so equipped)	21
Power Outlets.	22

system guide

Vehicle Information Display	23
Bluetooth® Hands-free Phone System	24
System Operating Tips	24
Bluetooth® System without Navigation (if so equipped)	25
Bluetooth® System with Navigation (if so equipped)	26
Navigation System (if so equipped)	29
Theater Package (if so equipped)	30
HomeLink® Universal Transceiver.	31

Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", "Monitor, climate, audio, phone and voice recognition systems (section 4)" and "Starting and driving (section 5)" of your Owner's Manual.



To view detailed instructional videos, go to www.infinitiownersinfo.mobi/2014/qx60 or snap this barcode with an appropriate barcode reader.

Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.InfinitiUSA.com.



new system features

INFINITI Connection™ System* (if so equipped)

Infiniti Connection™ combines personalized convenience and concierge settings and personal security features to compliment the Total Ownership Experience.

For more details on Infiniti Connection™, or to enroll your vehicle, please visit www.infiniticonnection.com or call **855-444-7244**.



Available services include:

- Infiniti Personal Assistant – To access Infiniti Personal Assistant, select “Connect to Voice Menu” from the Infiniti Connection menu or touch the  key on the map screen. At the voice prompt, say “Infiniti Personal Assistant” to be connected.
 - Your Infiniti Personal Assistant can send destination information directly to your vehicle.
- Automatic Collision Notification – In case of air bag deployment, a signal is sent containing the vehicle location and customer information and notifies the proper authorities.
- Emergency Call – This service provides emergency assistance by connecting subscriber to an Infiniti Connection™ Specialist.
 - In case of an emergency, press the in-vehicle telematics **SOS** button .
 - A Response Specialist will provide assistance based on the situation described by the vehicle's occupant.
- Enhanced Roadside Assistance – Roadside Assistance can be accessed by touching the Infiniti Connection™ key on the Info menu, the  key on the map screen or by pressing the **SOS** button .
- This service allows subscribers to receive assistance for a non-emergency incident such as towing or a third party response.
- If warranted, Roadside Assistance may also be used in conjunction with the Emergency Assistance service by pressing the **SOS** button .
- My Schedule – Access your personal online Google Calendar™, hear details read via text-to-speech** and select locations as a destination via the navigation system.
- Report Stolen Vehicle – A Response Specialist will attempt to obtain location information from a reported stolen vehicle and provide that information to local law enforcement agencies to assist in the recovery of your stolen vehicle.
- Remote Door Lock/Unlock – Remotely access your vehicle via Infiniti Connection Response Specialist or designated website to remotely lock or unlock your vehicle.
- Alarm Notification – This system will notify you when the factory-installed vehicle alarm system has been activated.



*Infiniti Connection™ is only available on vehicles equipped with optional Infiniti Connection™ subscription service.

**Laws in some communities may restrict the use of text-to-speech. Check local regulations before using this feature.

- Scheduled Maintenance Notification – Receive scheduled maintenance notifications based on mileage data provided by your vehicle.
- Maintenance Alert – Receive notification of a vehicle system malfunction that triggers instrument panel warning lights.
- Destination Assistance – Receive point-of-interest assistance via guided IVR (Interactive Voice Response), or Response Specialist by pressing the  key on the map screen, or Infiniti Connection™ web portal.
- Destination Send-to Vehicle – Find and download point-of interest information from Google Maps™.
 - To access, go to the Infiniti Connection menu and select “Sync All Information Feeds”. Then go to the feeds menu page and download the desired destination information.
- Connected Search – Select “Connected Search” from the Destination menu on the vehicle’s navigation system to conduct a point-of-interest search within a certain distance of the vehicle’s location.
- Drive Zone – Monitor the movement of your vehicle within a specified region. Set up boundaries in the Monitoring section of the Infiniti Connection web portal.
- Max Speed Alert – Set up a maximum speed on the Infiniti Connection™ web portal. You will receive notifications if your vehicle exceeds the max speed setting.
- Mobile Information Service – Receive the latest news headlines, stock quotes and sports scores by setting up preferences on the Mobile Information Service page in the Infiniti Connection™ web portal.
- Valet Alert – Use Valet Alert to set up a 0.2 mile radius around your vehicle.
 - Activate alerts by pressing the “Connect to Voice Menu” button on the Infiniti Connection screen or by pressing the  key on the map screen.
 - At the prompt, say “Valet Alert” and then “Activate” or “Deactivate”.

For more information, refer to the **“Viewing technical information (section 7)”** of your Navigation System Owner’s Manual.

new system features

Around View® Monitor (AVM) with Moving Object Detection (MOD) (if so equipped)

- With the ignition switch in the **ON** position, the Around View Monitor is activated by pressing the **CAMERA** button **01**, located on the control panel, or by moving the shift lever to the **R (REVERSE)** position. The control panel displays various views of the position of the vehicle.
- When the shift lever is in the **P (PARK)**, **N (NEUTRAL)** or **D (DRIVE)** position and the **CAMERA** button **01** is pressed, the following views will display in order:



Start from any Control Panel screen

 


Press


Front wide view



Press



Front view & bird's-eye view

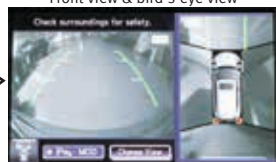

Press



Front view & front-side view




Press



- When the shift lever is in the **R (REVERSE)** position and the **CAMERA** button **01** is pressed, the following views will display in order:


Rear view & bird's-eye view

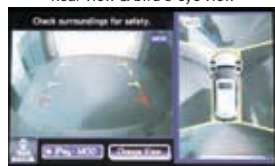


Press



Rear view & front-side view

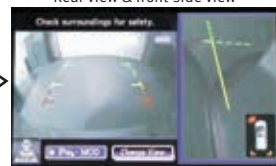

Rear wide view

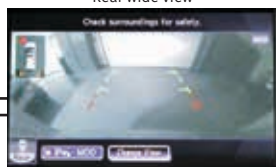


Press



Press




- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).
- There are some areas where the system will not show objects.
 - When in the front or the rear view display, an object below the bumper or on the ground may not be viewed **02**.
 - When in the bird's-eye view, a tall object near the seam of the camera viewing areas **03** will not appear in the monitor.
- The distance between objects viewed on the AVM differs from the actual distance.
- Objects in the bird's-eye view will appear further than the actual distance.

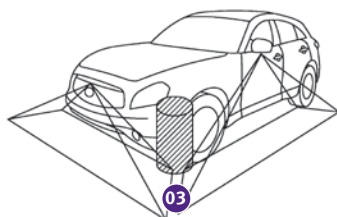

MOVING OBJECT DETECTION (MOD)

- If the MOD system detects moving objects surrounding the vehicle, a yellow frame **01** will be displayed on the camera image and a chime sounds.
- In the bird's-eye view, a yellow frame is displayed on those camera images (front, rear, right, left) where moving objects are detected.
- When the following are displayed:
 - Blue MOD icon **02**; the system is operative in this view.
 - Gray MOD icon **03**; the system is not operative in this view.
 - No MOD icon; the system is off.
- To temporarily turn the system on or off, touch the MOD key **04**.


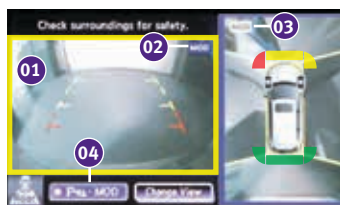


For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

new system features

Warning Systems Switch (if so equipped)

- The warning systems switch **01** will turn on and off the systems enabled in the vehicle information display. The systems controlled by the warning systems switch include:
 - Lane Departure Warning (LDW) system
 - Blind Spot Warning (BSW) system
 - Forward Collisions Warning (FCW) system
- When the warning systems switch is turned off, the indicator **02** on the switch is off. If the warning systems switch is illuminated, the system is on. The indicator will also be off if all of the warning systems are deactivated using the settings menu.
- To enable or disable these systems, perform the following operation:
 - Press the  button **03** on the steering wheel multiple times until you reach the **Settings** menu.
 - Press up or down on the  button **04**, to select **Driver Assistance** **05** and **Driving Aids** **06** menu items.
 - Press the **ENTER** button **04** to change a menu item.

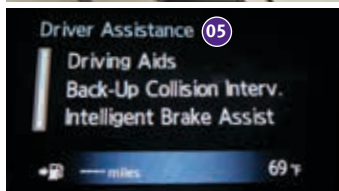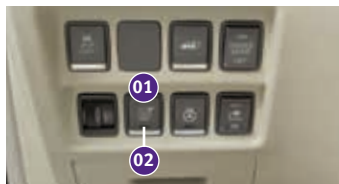

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

Approaching Vehicle Sound for Pedestrians (VSP) System

- The VSP system helps alert pedestrians to the presence of the vehicle when it is being driven at a low speed.
- When the vehicle starts to move, it produces a sound. The sound stops when the vehicle speed reaches approximately 19 MPH (30 km/h) while accelerating.
- This sound will activate again when decelerating to a speed less than 16 MPH (25 km/h).

For more information, refer to the “**Hybrid System Overview**” section of your Owner’s Manual.

Hybrid System Warning Light

- This light will illuminate when the ignition switch is in the **ON** position and will turn off when the hybrid system is started.
- The light will also illuminate when a malfunction occurs in the electric motor or hybrid system.
- When this light illuminates while driving, immediately stop the vehicle in a safe location and contact an INFINITI retailer.
- If the hybrid system warning light blinks while driving, it may indicate that the Li-ion battery charge is low and you cannot continue to drive.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

Hybrid Awareness

- Your vehicle is virtually silent in the electric mode. If you exit your vehicle while it is **ON**, but the engine is not running, the engine will automatically start, informing you that the car is still **ON**.
- Do not store your INFINITI Intelligent Key within detection range of the vehicle. This may cause welcome lights and other functions to activate creating unwanted battery drain.
- The hybrid system is designed for optimum efficiency and performance. Activation of the electric mode may vary with driving conditions and driver input. A full battery display does not indicate the vehicle should be in the electric mode.

For more information, refer to the “**Hybrid System Overview**” section of your Owner’s Manual.

Tire Pressure Monitoring System (TPMS) with Tire Inflation Indicator

- A **Tire Pressure Low - Add Air** warning message will appear in the vehicle information display **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.
- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- When adding air to an under-inflated tire, the TPMS with Tire Inflation Indicator provides visual and audible signals to help you inflate the tires to the recommended COLD tire pressure.



To use the tire inflation indicator:

1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
 2. Place the ignition switch in the **ON** position. Do not start the engine.
 3. Add air to the under-inflated tire and within a few seconds, the hazard warning lights will start flashing.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop flashing.
 5. Repeat this procedure for any additional under-inflated tires.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25 km/h). The **Tire Pressure Low - Add Air** warning message and low tire pressure warning light will disappear.

essential information


- When the low tire pressure warning light flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by an INFINITI retailer.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to section 9, "Technical and consumer information" in your Owner's Manual for the location of the Tire and Loading Information label.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Maintenance and do-it-yourself (section 8)" of your Owner's Manual.

Loose Fuel Cap

- A **LOOSE FUEL CAP** warning message will appear in the vehicle information display **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed for about 1 second.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.

For more information, refer to the "Instruments and controls (section 2)" and the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

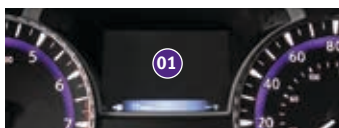

Fuel-filler Door

The fuel-filler door is located on the driver's side of the vehicle.

- The fuel-filler door automatically locks/unlocks when the driver's door is locked/unlocked.
- To open the fuel-filler door, push the right side of the fuel-filler door and release.




For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

Accessing the Front Cup Holders


- To open the cup holders, push the lid **01** down and release.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

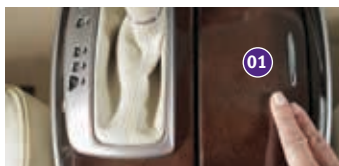

Front Armrest/Center Console Storage Box

- To access the top storage bin, pull up on the driver's side lever **01**.
- To access the bottom storage bin, pull up on the passenger's side lever **02**.

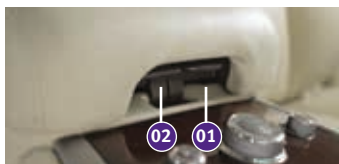

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

Clock Set/Adjustment

DIGITAL CLOCK ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:
 1. Press the **SETTING** button on the control panel.
 2. Touch the **Others** key.
 3. Touch the **Clock** key.



- The following settings can be adjusted:
 - **On-screen Clock:** The clock in the upper right corner of the display can be turned ON or OFF.
 - **Clock Format (24h):** The clock can be set to 12 hours or 24 hours.
 - **Offset (hour):** The time can be adjusted by increasing or decreasing per hour.
 - **Offset (min):** The time can be adjusted by increasing or decreasing per minute.
 - **Daylight Savings Time:** The application of daylight savings time can be turned ON or OFF.
 - **Time Zone:** Adjust the time zone. Choose a time zone from the available list.
- Press the **BACK** button to return to the previous screen.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

first drive features

INFINITI Intelligent Key System

The INFINITI Intelligent Key system allows you to lock or unlock your vehicle, open your liftgate and remotely start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

REMOTE ENGINE START* (if so equipped)

- The remote engine start system must be enabled in the vehicle settings within the vehicle information display.
- The remote engine start operating range is approximately 200 ft (60 m) from the vehicle. The effective operating range may be shorter due to environmental conditions or obstacles between you and the vehicle.
- For the remote engine start to function, the vehicle must be in the **P (PARK)** position with the ignition off, and all the doors closed and locked.
- To start your vehicle remotely:
 1. Press the  button **01**.
 2. Within 5 seconds press and hold the remote engine start  button **02** for at least 2 seconds.
- The engine will start and the parking lights will turn on.
- Automatic climate control will begin heating or cooling the vehicle depending on the last used mode.
- The engine will run for 10 minutes and then turn off.
- Repeat steps 1 and 2 to extend the time for an additional 10 minute period.
 - After two remote starts the ignition switch must be cycled before the remote start can be used again.
- To start driving depress the brake pedal and push the ignition switch **START/STOP** button.



LOCKING AND UNLOCKING THE VEHICLE

- The lock and unlock operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **03** once or press the  button **01** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **03** once; the corresponding door will unlock. Push the door handle request switch again within 30 seconds; all other doors will unlock, or
 - Press the  button **04** on the key fob to unlock the driver's side door. Press the  button again; all other doors will unlock.

LIFTGATE RELEASE

- To open the rear liftgate, press the  button **05** for longer than 1 second.
- To close the rear liftgate, press the  button **05** again for longer than 1 second.

PANIC ALARM

- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **06** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.

INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged, or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:

1. Move the shift lever to the **P (PARK)** position.
2. Firmly apply the foot brake.
3. Touch the ignition switch with the Intelligent Key and a chime will sound.
4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.

*Laws in some communities may restrict the use of remote starters. Check local regulations before using this feature.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**”, the “**Starting and driving (section 5)**” and the “**Maintenance and do-it yourself (section 8)**” of your Owner’s Manual.



Power Liftgate

- When the liftgate is closed and locked, the liftgate will open automatically by:
 - Pushing the power liftgate switch **01** on the instrument panel.
 - Pushing the liftgate opener switch **02**, the liftgate must be unlocked, or you must have the Intelligent Key with you (in your pocket or purse).
 - Pressing the  button **03** on the INFINITI Intelligent Key for more than 1 second.
- The power liftgate operation can be turned on or off by the power liftgate main switch **04** on the instrument panel.
- When the power liftgate main switch is pushed to the **OFF** position, power operation is not available using the power liftgate switch on the liftgate **05** or the liftgate opener switch **02**.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.


first drive features

Power Seat Adjustments

- To slide the seat forward or backward, push the control switch  **01** forward or backward.
- To recline the seatback, push the switch  **02** forward or backward.

SEAT LIFTER

- To raise or lower the front portion or height of the seat, push the front or back end of the switch  **01** up or down.

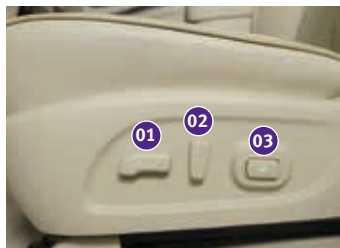

POWER LUMBAR SUPPORT (if so equipped for driver's seat)

- To adjust the seat lumbar support, push the front or back end of the switch  **03**.

For more information, refer to the **"Safety — seats, seat belts and supplemental restraint system (section 1)"** of your Owner's Manual.

2ND Row Seats

- To slide the seat forward or backward, pull the center of the bar **01** up and hold it while you slide the seat forward or backward to the desired position. Release the bar to lock the seat in position.
- To recline the seatback, pull up on the recline handle **02** and lean back. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.



MULTI-MODE/CHILD SEAT ACCESS FUNCTION

- This feature is not available on driver's side of 2nd row seat.
- If a child safety seat is installed on the passenger's side of the 2nd row seat, the 3rd row can be accessed without removing the child safety seat.
- To access the 3rd row from outside the vehicle, lift up on the seatback release lever **03**.

EZ ENTRY MODE

- To enter the 3rd row from outside the vehicle, lift up on fully the seatback lever **03**. This will release the back of the seat and fold up the seat cushion.
- For access to the rear seat slide the entire seat forward by pushing on the upper seatback area.
- To return the seat to a locked position, push the upper seatback rearward until the seatback and track are locked. Push the seat cushion down. Locking the seatback will also lock the track.

For more information, refer to the **"Safety — seats, seat belts and supplemental restraint system (section 1)"** of your Owner's Manual.

3RD Row Manual Reclining Seatback

- To recline the seatback, pull up on the latch **01** located on the outside corner of each seatback. Lean back until the desired angle is obtained.
- To bring the seatback forward again, pull up on the latch **01** and move your body forward. The seatback will move forward.

For more information, refer to the “**Safety — seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.



Automatic Drive Positioner (if so equipped)


- Two positions for the driver’s seat, steering column and outside mirrors can be stored in the automatic drive positioner **01** memory.
- Follow these procedures to set the memory positions:
 - Confirm the shift lever is in the **P (PARK)** position.
 - Push the ignition switch to the **ON** position.
 - Adjust the driver’s seat, steering column and outside mirrors to the desired positions using the adjusting switches for each feature.
 - Push the **SET** switch and within 5 seconds, push the memory switch (**1** or **2**) for at least 1 second.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds, and a chime will sound (if so equipped) when memory is stored correctly.
 - The driver’s seat, steering column and outside mirror positions are now set to your preference.
- These memorized positions can also be linked to your INFINITI Intelligent Key.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



Outside Mirror Control Switch

- To select the right or left side mirror, move the control switch **01** right or left.
- Adjust each mirror to the desired position using the switch **02**.
- To fold the outside rearview mirrors, push the switch **03** to the  position. To unfold the outside rearview mirrors, push the switch **03** to the  position.

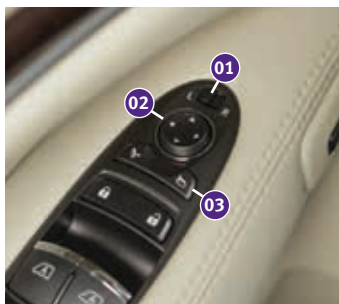

first drive features

REVERSE TILT-DOWN FEATURE (if so equipped)


- The reverse tilt-down feature will turn the selected outside mirror surface downward to provide better rear visibility close to the vehicle.
 1. Push the ignition switch to the **ON** position.
 2. Choose the right or left outside mirror by operating the outside mirror control switch **01**.
 3. Move the shift lever to the **R (REVERSE)** position.
 4. The outside mirror surfaces move downward.
- The outside mirror surfaces will return to their original positions when one of the following conditions has occurred:
 - The shift lever is moved to any position other than **R (REVERSE)**.
 - The outside mirror control switch is set to the center (neutral) position.
 - The ignition switch is pushed to the **OFF** position.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

Assist Charge Gauge

- This shows the power consumed **02**, or generated **01** by the electric motor.

For more information, refer to the “**Hybrid System Overview**” section and the “**Instruments and controls (section 2)**” of your Owner’s Manual.

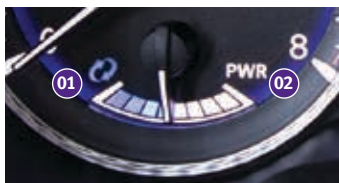

Starting/Stopping the Hybrid System

- It is important to make sure the INFINITI Intelligent Key is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Press the ignition switch **START/STOP** button to start the hybrid system.

TURNING THE HYBRID SYSTEM OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Press the ignition switch **START/STOP** button to turn the hybrid system off.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.



Headlight Control Switch

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **01** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **02** to turn on the headlights.




AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then push the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  position **01** or  position **02**.

HIGH BEAM SELECT

- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light goes off.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.

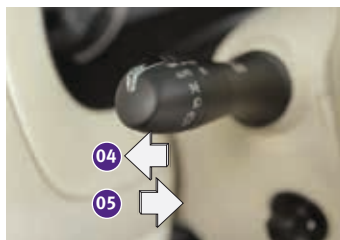

FOG LIGHT SWITCH

- The headlights must be in auto, or the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **06** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.




For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

Windshield Wiper and Washer Switch

- Move the lever to the following positions to operate the windshield wipers:

- 01** Mist (**MIST**) – One sweep operation of the front wipers.
- 02** Auto (**AUTO**) – Operates the speed-sensing and rain-sensing (if so equipped) front wipers intermittently. The intermittent speed can be adjusted by twisting the time control ring **03** to increase or decrease wiper speed or sensitivity.
- 04** Low (**LO**) – Front wipers operate at a continuous low-speed.
- 05** High (**HI**) – Front wipers operate at a continuous high-speed.
- 06** Pull the lever toward you to activate the front washer. The front wipers will operate several times.

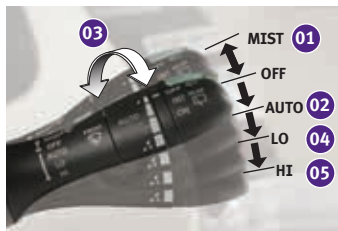


RAIN-SENSING AUTO WIPER SYSTEM (if so equipped)


- The rain-sensing auto wiper system can automatically turn on the wipers and adjust the wiper speed depending on the rainfall and the vehicle speed.
- To set the rain-sensing auto wiper system, push the lever down to the **AUTO** position **02**. The wiper will sweep once while the ignition switch is in the **ON** position.
- The rain sensor sensitivity level can be adjusted by turning the time control ring **03** toward the front or toward the rear.

REAR WINDSHIELD WIPER AND WASHER

- 07** Intermittent (**INT**) – Rear wiper operates intermittently.
- 08** Low (**ON**) – Rear wiper operates at a continuous low-speed.
- 09** Push the lever forward to activate the rear washer. The rear wiper will operate several times.

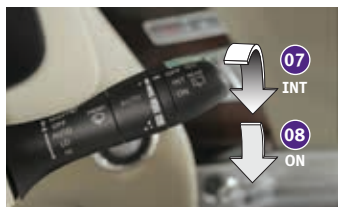

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

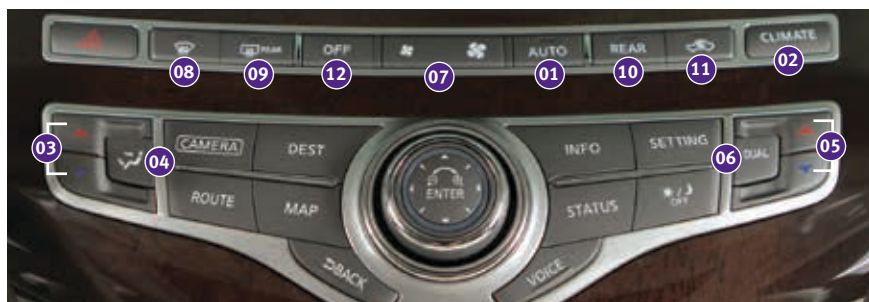

Automatic Climate Controls

01 AUTO BUTTON

- The auto mode may be used year-round. Press the **AUTO** button to turn the system on and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.

02 CLIMATE BUTTON

- Press the **CLIMATE** button to adjust your automatic climate controls using the climate settings on the control panel display screen.

03 DRIVER'S SIDE TEMPERATURE CONTROL BUTTONS

- Press the driver's side temperature control buttons up ▲ for warmer air or down ▼ for cooler air.

04 DRIVER'S SIDE MANUAL AIR FLOW CONTROL BUTTON

- Press the driver's side manual air flow control button to manually control the driver's side air flow modes.
- The following air flow indicator modes will display on the control panel display screen:
 - ▲ Air flows from the center and side vents.
 - ▲ Air flows from the center, side and foot vents.
 - ▲ Air flows mainly from the foot vents.
 - ▲ Air flows from the defroster and foot vents.

05 PASSENGER'S SIDE TEMPERATURE CONTROL BUTTONS

- To manually adjust the passenger's side temperature, press the passenger's side temperature control buttons up ▲ for warmer air or down ▼ for cooler air.

06 DUAL BUTTON

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by pressing the passenger's side temperature control buttons.

first drive features

07 FAN SPEED CONTROL BUTTONS

- Press the left  button to decrease the fan speed or press the right  button to increase the fan speed.

08 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the defroster control button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- To defrost the front and side windows, set the temperature controls **03** and fan speed controls **07** to their maximum settings.

09 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS

- Push the rear window defroster switch  **REAR** to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

10 REAR AIR CONDITIONER

- To control the rear automatic air conditioning system with the front air conditioner control panel, press the **REAR** button.
- When the rear automatic air conditioning system is on, the indicator light on the **REAR** button will illuminate and the front display will switch to the rear air conditioner screen. Use the driver temperature and fan speed buttons to adjust settings.



- To adjust the front air conditioning system, press the **REAR** button again.
- To turn off the rear automatic air conditioning system from the front controls, press the **REAR** button until the **Rear Air-conditioning** screen is displayed. Then, press the **OFF** button **12**.
- The rear passenger controls are unavailable when **Rear Air-conditioning** screen is shown on the front display.

11 INTAKE AIR CONTROL BUTTON

- Press the intake air control  button to recirculate interior air inside the vehicle. The  indicator light on the button will illuminate. This system is used to avoid certain outside odors and helps to adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defrost mode  or front defrost and foot vent mode .
- Press the intake air control  button again to change the air circulation from the intake air to the outside air. The  indicator light on the button will turn off.

12 OFF BUTTON

- Press the **OFF** button to turn the climate control system off.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

Rear Climate Controls


- To activate the system:

1. Press the **REAR** button **01** on the front control panel until **Rear Air-conditioning** screen is displayed.

- The indicator light will illuminate.
- The Fan Speed, Temperature, **AUTO**, and **OFF** buttons will now control the Rear Air-conditioning system.

2. Press the **REAR** button **01** again, and the screen will return to what was previously displayed.

- The indicator light will stay illuminated to indicate that the Rear Air-conditioning system is active.

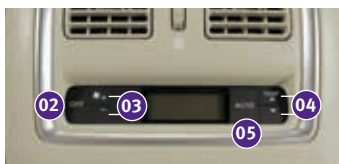

- OFF** button **02** – Turns off the rear climate control system, and **REAR** button indicator light.
- Fan speed control buttons **03** – Press **+** or **-** to increase or decrease fan speed.
- Temperature increase and decrease buttons **04** – Adjusts the rear temperature up **▲** or down **▼**.
- AUTO** button **05** – System automatically works to keep flow and fan speed at a constant temperature.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



FM/AM/XM* Satellite Radio with CD/DVD Player (if so equipped)

01 VOLUME/ON•OFF CONTROL KNOB

- Press the **VOL/ON•OFF** control knob to turn the system on or off. Turn the knob right or left to increase or decrease the volume.

02 TUNE/FOLDER/AUDIO CONTROL KNOB

- To manually tune the radio, turn the **TUNE/FOLDER/AUDIO** knob left or right.

03 SEEK•CAT/TRACK BUTTONS

- To scan quickly and stop at the previous or next broadcast station, press the **◀◀** or **▶▶** end of the **SEEK•CAT/TRACK** button.
- For XM Satellite Radio, press the **◀◀** or **▶▶** end of the **SEEK•CAT/TRACK** button to switch to the first channel of the previous or next category.
- To change tracks on a CD, press the **◀◀** or **▶▶** end of the **SEEK•CAT/TRACK** button.
- To fast forward or rewind a track on a CD, press and hold the **◀◀** or **▶▶** end of the **SEEK•CAT/TRACK** button.

*XM Satellite Radio is only available on vehicles equipped with optional XM Satellite Radio subscription service.

first drive features


04 STATION PRESET BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for XM Satellite Radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM•AM** 05 or **XM** 06 button, then tune to the desired FM, AM or XM Satellite Radio station.
- Then press and hold the desired station preset button (1-6) until the preset number is updated on the display and the sound is briefly muted. The channel indicator will then display and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (1-6).

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

USB/iPod® Interface

- The USB jack 01 is located in the center console under the arm rest.
- When a compatible USB memory device or iPod® is plugged into the USB jack, compatible audio and video files stored on the device can be played through the vehicle’s audio system and front display.

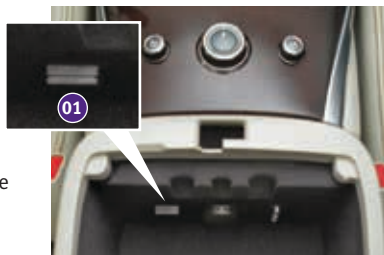

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

Conventional (Fixed Speed) Cruise Control


- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 MPH (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **CRUISE ON/OFF** switch 01. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch 02 and release. The **SET** indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch 03. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch 02. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch 04.
- To turn off cruise control, push the **CRUISE ON/OFF** switch 01. Both the **CRUISE** indicator light and the **SET** indicator light in the instrument panel will turn off.



Intelligent Cruise Control (ICC) System (if so equipped)

VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set Vehicle-To-Vehicle Distance Control mode, press the **CRUISE ON/OFF** button **01** for less than 1.5 seconds. The **CRUISE** indicator light **02** will illuminate.
- Accelerate to the desired speed.
- Push down on the **COAST/SET** switch **03** and release it. Cruise control will be set to the desired speed.
- Press the distance button **04** repeatedly to change the set distance between long, middle, and short.
- When a vehicle is not detected ahead of you in the lane, the set distance and set vehicle speed indicator lights will illuminate **05** in set mode.
- When a vehicle is detected ahead of you in the lane, the vehicle ahead detection, set distance, and set vehicle speed indicator lights will illuminate **06** in set mode.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **07**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **03**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **08** or tap the brake pedal. The set vehicle speed indicator **05** will go out.
- To turn off cruise control, press the **CRUISE ON/OFF** button **01**. The **CRUISE** indicator light **02**, in the instrument panel, will turn off.

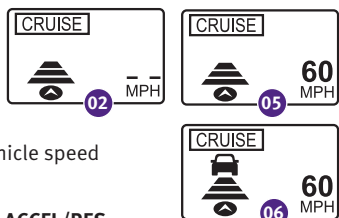

To set conventional (fixed speed) cruise control mode:

- While cruise control is off, press the **CRUISE ON/OFF** button **01** and hold it down for more than 1.5 seconds. The **CRUISE** indicator light will illuminate.
- Accelerate to the desired speed.
- Push down on the **COAST/SET** switch and release it. The **SET** indicator light will illuminate. Cruise control will be set to the desired speed.

To switch between the two cruise control modes:

- When one of the two cruise modes is in use, you must turn the system off, and then turn it on again to select the other cruise control mode.


For more information, refer to the **“Starting and driving (section 5)”** of your Owner’s Manual.

first drive features

Power Outlets

12V OUTLETS

- The power outlets are for powering electrical accessories such as cellular telephones. They are rated at 12 volt, 120W (10A) maximum.
- To use a power outlet, open the cap.
- The power outlet on the instrument panel **01**, inside the center console **02**, on the back of the center console **03** and in the cargo area **04** are powered only when the ignition switch is in the **ACC** or **ON** position.

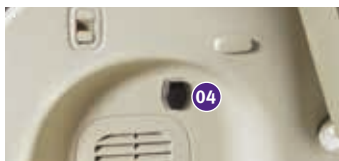

120V OUTLET (if so equipped)

- The 120V outlet **05** is located on the back of the center console.
- To use the outlets for devices that require 120V power, place the ignition in the **ON** position and push the power inverter switch **06**.
- The switch will illuminate when enabled.




For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

Vehicle Information Display

The vehicle information display **01** displays such items as:

- Vehicle settings
- Trip computer information
- Energy flow meter
- Drive system warnings and settings (if so equipped)
- Cruise Control System
- Intelligent Cruise Control (ICC) System (if so equipped) information
- Intelligent Key operation information
- Indicators and warnings
- Tire pressure information

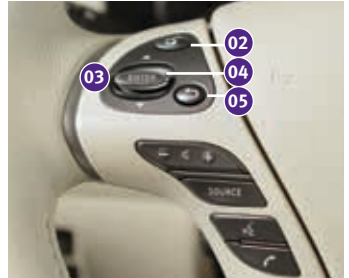

USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display modes can be changed using the  button **02** and **ENTER** button **03** located on the steering wheel.

1. Press  **02** to enter the vehicle information menu items.
2. Press  **04** to navigate through the items in vehicle information.
4. Press **ENTER** **03** to change or select an item in the vehicle information display.
5. Press  **05** to go back to the previous menu.

START UP DISPLAY

When the vehicle is placed in the **ON** or **ACC** position the screens that display in the vehicle information include:

- Active system status (if so equipped)
- Trip computer
- Tire pressure information
- Fuel economy
- Warnings (displays when a warning is present)

RESETTING THE TRIP COMPUTER

1. Press the  button **02** until you reach the Trip computer mode **06**.
2. Press the  button **02** again for more than 1.5 seconds to reset average fuel consumption, average speed, distance to empty and journey time.



system guide

SETTINGS

The setting mode allows you to change the information displayed in the vehicle information display:

- Driver Assistance (if so equipped)
- Vehicle settings
- Main Menu Selection
- Body Color
- Maintenance
- Alarms
- Language
- Unit
- Welcome Effects
- Factory Reset


For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

Bluetooth® Hands-free Phone System

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

- Press the  or  button to interrupt the voice prompts at any time and speak a command after the tone.
- The “Help” command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, “Michael Smith” may be spoken as “Smith Michael”.
- To cancel a voice recognition session, say “Cancel” or “Quit” or press and hold the  or  button for 5 seconds.
- To go back to the previous command, say “Go back” or “Correction”.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. See your Owner’s Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone Owner’s Manual and visit www.InfinitiUSA.com/bluetooth.

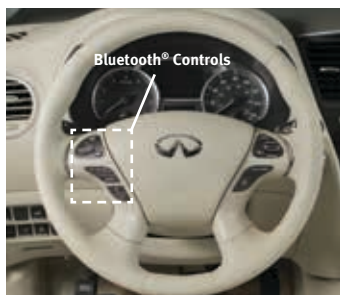


*Some jurisdictions prohibit the use of cellular telephones while driving.

Bluetooth® System without Navigation (if so equipped)

CONNECTING PROCEDURE

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say "Connect Phone". The system acknowledges the command and announces the next set of available commands.
3. Say "Add Phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.
4. Initiate connecting from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.InfinitiUSA.com/bluetooth.
 - When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by INFINITI and cannot be changed.)
5. Say the name of the phone when the system asks you to provide one. You can give the phone a name of your choice.

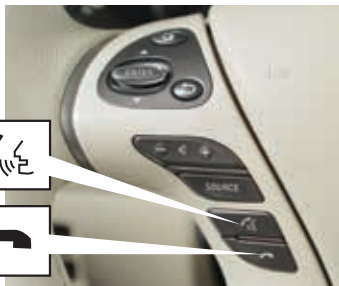

PHONEBOOK

- Depending on the phone, the system may automatically download the entire phonebook. For more information, please visit www.InfinitiUSA.com/bluetooth or the phone's user guide.
- If the phonebook does not download automatically, 40 entries can be individually downloaded.
- To manually download entries:
 1. Push the  button on the steering wheel.
 2. After the tone, say "Phonebook".
 3. After the next tone, say "Transfer Entry".
 4. Using the phone, select an entry to send to the vehicle. Please consult the website above or your phone's User Guide for specific steps of the phone.
 5. The system will speak the transferred entry. Confirm the entry by saying "Yes" after the tone.

MAKING A CALL BY PHONEBOOK ENTRY

- In some cases, names stored using all UPPERCASE letters may not be recognized by the voice recognition system.
1. Press the  button.
 2. After waiting for the tone, say "Call".
 3. After the next tone, speak a name of a phonebook entry. For example "Michael Smith".
 4. Confirm the correct name is recognized by saying "Dial" after the tone.

system guide

MAKING A CALL BY PHONE NUMBER

1. Press the  button.
 2. After waiting for the tone, say “Call”.
 3. After the next tone, say “Phone Number”.
 4. After the next tone, say “123-456-7890”.
- You may also say the digits in groups of 3, 3 and 4, respectively. To use this group dialing method, say only the first 3 digits of the phone number instead of all 10 digits. After the system recognizes the digits, it will request the next 3 digits and finally the last 4 digits.
5. After the system speaks the correct number and sounds the tone, say “Dial.”

RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button.
- To hang-up, press the  button.


Bluetooth® System with Navigation (if so equipped)

CONNECTING PROCEDURE


- The vehicle must be stationary when connecting the phone.



1. Press the **SETTING** button on the instrument panel and select the “Bluetooth” key on the display.

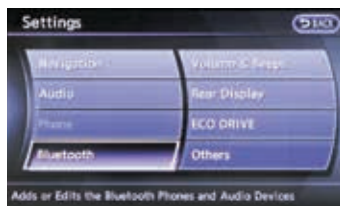

2. Select the “Connect Bluetooth” key.

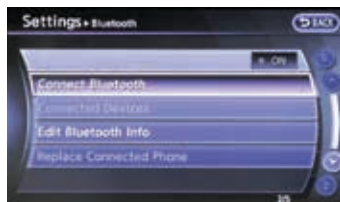


3. A popup box will appear on the screen, prompting you to confirm that the connection is for the phone system. Select the “Yes” key.



4. Initiate connecting from the phone.

- The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.InfinitiUSA.com/bluetooth.
- When prompted for a PIN code, enter “1234” from the handset. (The PIN code is assigned by INFINITI and cannot be changed.)

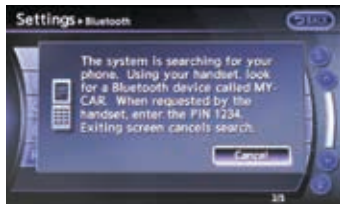

5. When connecting is complete, the screen will return to the Bluetooth settings screen.


PHONEBOOK SETUP

- Depending on your cell phone, the system may automatically download your cell phone's entire phonebook to the vehicle's Bluetooth system.
- If the phonebook does not download automatically, the vehicle phonebook may be set for up to 40 entries.
- To manually download entries:

1. Press the  button and select the “Vehicle Phonebook” key.
2. Select the “Add New” key at the top of the display. There are different methods to input a phone number. Select one of the following options:



- “Copy from Call History” to save a number from the Outgoing, Incoming or Missed Calls lists.
- “Copy from the Handset” to save a number that has been downloaded from your handset to the vehicle.
- “Enter Number by Keypad” to input the number and name manually.

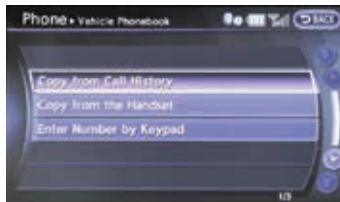


system guide

MAKING A CALL

To make a call, follow this procedure:


1. Press the  button on the steering wheel. The “Phone” menu will appear on the control panel display.
2. Select the “Vehicle Phonebook”, “Call History”, “Handset Phonebook” or “Dial Number” key.
3. Select the desired entry from the list.
4. Dialing begins when the entry is selected or when the “OK” key is selected.

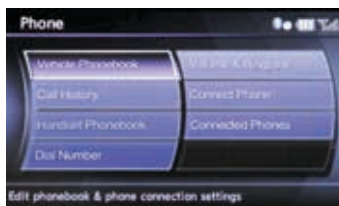

RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel or touch the “Answer” key.
 - To reject the call, touch the “Reject Call” key.
-
- To hang up, press the  button or touch the “Hang Up” key.

For more information, refer to the **“Monitor, climate, audio, phone and voice recognition systems (section 4)”** of your Owner’s Manual or please visit www.InfinitiUSA.com/bluetooth.

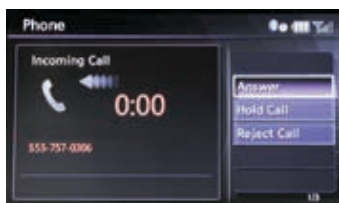



Navigation System (if so equipped)

- 01 Touch screen display.
- 02 Destination (**DEST**) – Press to enter a destination.
- 03 Information (**INFO**) – Press to display the vehicle, traffic (if so equipped), weather (if so equipped) or voice recognition information.
- 04 **SETTING** – Press to access the system settings.
- 05 Infiniti Controller
 - **ENTER** Button – Press the **ENTER** button to select the highlighted item on the screen.
 - Center Dial – Turn the dial to highlight an item on the screen, adjust a setting or adjust the map scale.
 - Slide the controller (push upward/downward/leftward/rightward) to select an item on the screen, to adjust a setting or scroll the map in 8 directions.
- 06 **ROUTE** – Press to access guidance control functions such as guidance cancellation, route priority or waypoint setting on the route.
- 07 **MAP** – Press to display the map. While following a programmed route, press multiple times to change the type of route information.
- 08 **STATUS** – Press multiple times to display audio information, the air conditioner status, fuel economy or navigation directions.



system guide

- 09  **OFF** – Press to switch between the day screen (bright) and the night screen (dark). Press and hold the button to turn the display off. Press again to turn the display on.
- 10  **BACK** – Press to return to the previous screen. In a settings screen, this button can also be used to apply the setting. In a character input screen, this button can also delete the characters that have been entered.
- 11 **VOICE** – Press to hear the current voice guidance for a programmed route.

For more information, please refer to your Navigation System Owner's Manual.

Theater Package (if so equipped)

- With this Entertainment System, you can play video files via a DVD or CD providing images and sound both from the front and rear display screens.
- You can also connect auxiliary devices such as video games, camcorders or portable video players to the auxiliary jacks 01 located on the back of the center console. (Your device will be controlled through its own control panel.)
- Rear Auxiliary Mode allows rear seat passengers to independently display different sources on each screen.
- Use the remote controller 02, provided with the system, to operate the rear display screens.
- Use the headphones 03, also provided with the system, to listen to audio wirelessly and independently. You may also connect your own wired-headphones to the headphone jacks 04 located on the back of the center console.
- For optimum performance, select the appropriate headphone channel 05 that corresponds to the headrest display being viewed directly in front of you.
- To watch or control videos on the front display make sure the vehicle is in the **P (PARK)** position and the parking brake is applied.
- To reduce driver distraction, the wireless headphones will not operate while located in the front seats and movies will not be shown on the front display while the vehicle is in any drive position.
- To access standard DVD controls on the front display while playing a DVD on the rear display, press the **DISC•AUX** button on the audio control panel while the vehicle is in the **P (PARK)** position and the parking brake is applied.

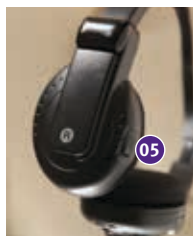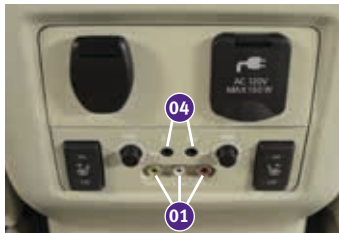

For more information, refer to the “Monitor, climate, audio, phone and voice recognition systems (section 4)” of your Owner's Manual.



HomeLink® Universal Transceiver

- The HomeLink system can learn and consolidate the functions of up to 3 different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programming is complete, press and hold the HomeLink and observe the indicator light:
 - A solid continuous light indicates the programming is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink, press and release the “learn” or “smart” button (the name may vary by manufacturer but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed HomeLink button for 2 seconds and release.
- Repeat the previous 2 steps up to 3 times to complete the programming process. HomeLink should now activate your device.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.



INFINITI.



To view detailed instructional videos,
go to www.infinitiownersinfo.mobi/2014/qx60
or snap this barcode with an appropriate
barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at any time, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your INFINITI retailer or contact Nissan North America, Inc.