

2014 Infiniti QX80

Quick Reference Guide



INFINITI.



- 01** INSTRUMENT BRIGHTNESS CONTROL SWITCH*
- 02** TRIP COMPUTER SWITCHES
- 03** HEADLIGHT AND TURN SIGNAL SWITCH
- 04** WINDSHIELD WIPER AND WASHER SWITCH
- 05** STEERING WHEEL SWITCHES FOR AUDIO* / BLUETOOTH® / NAVIGATION
- 06** CRUISE CONTROL
- 07** WARNING SYSTEMS SWITCH*
- 08** POWER LIFTGATE SWITCH
- 09** TILT / TELESCOPIC STEERING WHEEL SWITCH*
- 10** DYNAMIC DRIVER ASSISTANCE SWITCH*
- 11** POWER LIFTGATE MAIN SWITCH*
- 12** HOOD RELEASE*
- 13** CONTROL PANEL DISPLAY SCREEN*
- 14** AUDIO SYSTEM
- 15** CLIMATE CONTROL SYSTEM
- 16** CLIMATE CONTROLLED SEAT KNOBS*
- 17** TIP-UP 2ND ROW SEAT SWITCHES
- 18** HEATED STEERING WHEEL SWITCH*
- 19** POWER OUTLET*
- 20** FRONT PASSENGER AIR BAG STATUS LIGHT*
- 21** FOUR-WHEEL DRIVE (4WD) SHIFT SWITCH*

*See your Owner's Manual for information.

new system features

Infiniti Connection System™ (if so equipped)	2
Theater Package (if so equipped)	3
Around View® Monitor with Moving Object Detection (MOD)	4
Blind Spot Warning (BSW) and Blind Spot Intervention™ (BSI) (if so equipped)	4
Lane Departure Prevention (LDP) System (if so equipped)	4

essential information

Tire Pressure Monitoring System (TPMS) with Tire Inflation Indicator.	5
Loose Fuel Cap	6
Fuel-filler Door	6
Adaptive Front Lighting System (AFS) (if so equipped)	6
Clock Set/Adjustment	7

first drive features

INFINITI Intelligent Key System	8
Power Liftgate	9
Front Seat Adjustments	10
Automatic Drive Positioner	10
2 nd Row Seats	11
3 rd Row Power Folding Seats	12
Outside Mirror Control Switch	13
Starting/Stopping the Engine	13
Headlight Control	14
Windshield Wiper and Washer Switch	15
Automatic Climate Controls	16
Rear Climate Controls	17
FM/AM/SiriusXM Satellite Radio with CD/DVD Player	18
Conventional (Fixed Speed) Cruise Control	19
Intelligent Cruise Control (ICC) System (if so equipped)	19

system guide

Trip Computer	21
Bluetooth® Hands-free Phone System	21
Navigation System	24
HomeLink® Universal Transceiver	25



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", "Monitor, climate, audio, phone and voice recognition systems (section 4)" and "Starting and driving (section 5)" of your Owner's Manual.



To view detailed instructional videos, go to www.infinitiownersinfo.mobi/2014/qx80 or snap this barcode with an appropriate barcode reader.



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.InfinitiUSA.com.

new system features

INFINITI Connection™ System* (if so equipped)

Infiniti Connection™ combines personalized convenience and concierge settings and personal security features to compliment the Total Ownership Experience.

For more details on Infiniti Connection™, or to enroll your vehicle, please visit www.infiniticonnection.com or call **855-444-7244**.

Available services include:



- Infiniti Personal Assistant – To access Infiniti Personal Assistant, select “Connect to Voice Menu” from the Infiniti Connection menu or touch the  key on the map screen. At the voice prompt, say “Infiniti Personal Assistant” to be connected.
 - Your Infiniti Personal Assistant can send destination information directly to your vehicle.
- Automatic Collision Notification – In case of air bag deployment, a signal is sent containing the vehicle location and customer information to a Response Specialist who notifies the proper authorities.
- Emergency Call – This service provides emergency assistance by connecting subscriber to an Infiniti Connection™ Specialist.
 - In case of an emergency, press the in-vehicle telematics **SOS** button .
 - A Response Specialist will provide assistance based on the situation described by the vehicle's occupant.
- Enhanced Roadside Assistance – Roadside Assistance can be accessed by touching the Infiniti Connection™ key on the Info menu, the  key on the map screen or by pressing the **SOS** button.
 - This service allows subscribers to receive assistance for a non-emergency incident such as towing or a third party response.
 - If warranted, Roadside Assistance may also be used in conjunction with the Emergency Assistance service by pressing the **SOS** button.
- My Schedule – Access your personal online Google Calendar™, hear details read via text-to-speech** and select locations as a destination via the navigation system.
- Report Stolen Vehicle – A Response Specialist will attempt to obtain location information from a reported stolen vehicle and provide that information to local law enforcement agencies to assist in the recovery of your stolen vehicle.
- Remote Door Lock/Unlock – Remotely access your vehicle via Infiniti Connection Response Specialist or designated website to remotely lock or unlock your vehicle.
- Alarm Notification – This system will notify you when the factory-installed vehicle alarm system has been activated.
- Scheduled Maintenance Notification – Receive scheduled maintenance notifications based on mileage data provided by your vehicle.
- Maintenance Alert – Receive notification of a vehicle system malfunction that triggers instrument panel warning lights.
- Destination Assistance – Receive point-of-interest assistance via guided IVR (Interactive Voice Response), or Response Specialist by pressing the  key on the map screen, or Infiniti Connection™ web portal.



*Infiniti Connection™ is only available on vehicles equipped with optional Infiniti Connection™ subscription service.

- Destination Send-to Vehicle – Find and download point-of interest information from Google Maps™. To access, go to the Infiniti Connection menu and select “Sync All Information Feeds”. Then go to the feeds menu page and download the desired destination information.
- Connected Search – Select “Connected Search” from the Destination menu on the vehicle’s navigation system to conduct a point-of-interest search within a certain distance of the vehicle’s location.
- Drive Zone – Monitor the movement of your vehicle within a specified region. Set up boundaries in the Monitoring section of the Infiniti Connection™ web portal.
- Max Speed Alert – Set up a maximum speed on the Infiniti Connection™ web portal. You will receive notifications if your vehicle exceeds the max speed setting.
- Mobile Information Service – Receive the latest news headlines, stock quotes and sports scores by setting up preferences on the Mobile Information Service page in the Infiniti Connection™ web portal.
- Valet Alert – Use Valet Alert to set up a 0.2 mile radius around your vehicle.
 - Activate alerts by pressing the “Connect to Voice Menu” button on the Infiniti Connection™ screen or by pressing the  key on the map screen.
 - At the prompt, say “Valet Alert” and then “Activate” or “Deactivate”.

**Laws in some communities may restrict the use of text-to-speech. Check local regulations before using this feature.

For more information, refer to the “**Viewing technical information (section 7)**” of your Navigation System Owner’s Manual.

Theater Package (if so equipped)

- With this entertainment system, you can play video files via a DVD or CD providing images and sound both from the front and rear display screens.
- You can also connect auxiliary devices such as video games, camcorders or portable video players to the auxiliary jacks. (Your device will be controlled through its own control panel.)
- Rear Auxiliary Mode allows rear seat passengers to independently display different sources on each screen.
- Use the remote controller, provided with the system, to operate the rear display screens.
- Use the headphones, also provided with the system, to listen to audio wirelessly and independently.
- To watch or control videos on the front display make sure the vehicle is in the **P (PARK)** position and the parking brake is applied.
- To reduce driver distraction, movies will not be shown on the front display while the vehicle is in any drive position.
- To access standard DVD controls on the front display while playing a DVD on the rear display, press the **DISC•AUX** button on the audio control panel while the vehicle is in the **P (PARK)** position and the parking brake is applied.



For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

new system features

Around View® Monitor with Moving Object Detection (MOD)

- Moving Object Detection (MOD) operates only with the Around View® Monitor activated.
 - To temporarily turn the system on or off select the “MOD” key on the bottom of the control panel display.
- When the **CAMERA** button is pressed and the vehicle speed is less than 6 MPH (10 km/h) or the shift lever is moved to the **R (REVERSE)** position, the Information Display Screen will automatically change to view the area surrounding the vehicle.
- With the Around View® Monitor displayed, the corner sonar system can detect objects near the vehicle and warn the driver by sounding a tone and showing an indicator in the display screen.



For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

Blind Spot Warning (BSW) and Blind Spot Intervention™ (BSI) (if so equipped)

- The Blind Spot Warning (BSW) system alerts the driver when another vehicle moves into the vehicle’s blind spot area.
- An indicator light near the outside mirror will illuminate if the radar sensors detect a vehicle in the detection zone.
- The Blind Spot Intervention™ (BSI) system can assist the driver in returning the vehicle to the center of the traveling lane by applying individual brake pressure to the left or right wheels for a short period of time.
- The indicator light will first illuminate in orange and then turn green before turning off. This indicates that the Blind Spot Warning (BSW) and Blind Spot Intervention (BSI) systems are operational.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

Lane Departure Prevention (LDP) System (if so equipped)

- This system will help you return the vehicle to the center direction of the traveling lane by applying brake control to the left or right wheels individually (for a short period of time).

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.



Tire Pressure Monitoring System (TPMS) with Tire Inflation Indicator

- A **CHECK TIRE PRESSURE** warning message will appear in the vehicle information display **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.



- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.

- When adding air to an under-inflated tire, the TPMS with Tire Inflation Indicator provides visual and audible signals to help you inflate the tires to the recommended COLD tire pressure.



- To use the Tire Inflation Indicator:

1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
 2. Place the ignition switch in the **ON** position. Do not start the engine.
 3. Add air to the under-inflated tire and within a few seconds, the hazard warning lights will start flashing.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop.
 5. Repeat this procedure for any additional under-inflated tires.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25 km/h). The **CHECK TIRE PRESSURE** warning message and low tire pressure warning light will disappear.
 - When the low tire pressure warning light flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by an INFINITI retailer.
 - Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
 - The Tire and Loading Information label contains valuable information. Please refer to section 9, "Technical and consumer information" in your Owner's Manual for the location of the Tire and Loading Information label.

 
For more information, refer to the "Instruments and controls (section 2)", "Starting and driving (section 5)" and the "Maintenance and do-it-yourself (section 8)" of your Owner's Manual.

essential information

Loose Fuel Cap

- A **LOOSE FUEL CAP** warning message will appear in the vehicle information display **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light **SERVICE ENGINE SOON** may illuminate.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

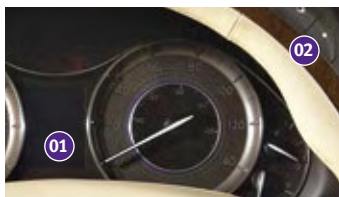

Fuel-filler Door

The fuel-filler door is located on the left, rear side of the vehicle.

- When the doors of the vehicle are locked or unlocked, the fuel-filler door is automatically locked or unlocked at the same time.
- To open the door, once unlocked, push the right side of the door.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



Adaptive Front Lighting System (AFS) (if so equipped)

- As your vehicle turns left or right, or drives along winding roads, the AFS system moves your low beams left or right, according to your vehicle’s steering pattern.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

Clock Set/Adjustment

DIGITAL CLOCK ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:
 1. Press the **SETTING** button on the control panel.
 2. Touch the Others key.
 3. Touch the Clock key.
- The following settings can be adjusted:
 - **On-screen Clock:** The clock in the upper right corner of the display can be turned ON or OFF.
 - **Clock Format (24h):** The clock can be set to 12 hours or 24 hours.
 - **Offset (hour):** The time can be adjusted by increasing or decreasing per hour.
 - **Offset (min):** The time can be adjusted by increasing or decreasing per minute.
 - **Daylight Savings Time:** The application of daylight savings time can be turned ON or OFF.
 - **Time Zone:** Adjust the time zone from the following:
 - Pacific
 - Atlantic
 - Mountain
 - Newfoundland
 - Central
 - Hawaii
 - Eastern
 - Alaska
- Press the **BACK** button to return to the previous screen.



ANALOG CLOCK ADJUSTMENT

- To set the clock backward, push the button **01**.
- To set the clock forward, push the button **02**.
- To move forward or backward faster, push and hold the button for more than 5 seconds.

For more information, refer to the **"Instruments and controls (section 2)"** or the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.



first drive features

 
INFINITI Intelligent Key System

The INFINITI Intelligent Key system allows you to lock or unlock your vehicle, open your liftgate and start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

REMOTE ENGINE START*



- The remote engine start system must be enabled in the vehicle settings within the vehicle information display.
- The remote engine start operating range is approximately 200 ft (60 m) from the vehicle. The effective operating range may be shorter due to environmental conditions or obstacles between you and the vehicle.
- For the remote engine start to function, the vehicle must be in the **P (PARK)** position with the ignition off, and all the doors closed and locked.
- To start your vehicle remotely:
 1. Press the  button **02**
 2. Within 5 seconds press and hold the remote engine start  button **06** for at least 2 seconds.
- The engine will start and the parking lights will turn on.
- Automatic climate control will begin heating or cooling the vehicle depending on the last used mode.
- The engine will run for 10 minutes and then turn off.
- Repeat steps 1 and 2 to extend the time for an additional 10 minute period.
 - After two remote starts the ignition switch must be cycled before the remote start can be used again.
- To start driving depress the brake pedal and push the ignition switch **START/STOP** button.
- To lock the vehicle, push either door handle request switch **01** once or press the  button **02** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **01** once; the corresponding door will unlock. Push the door handle request switch **01** again within 1 minute; all other doors will unlock, or
 - Press the  button **03** on the key fob to unlock the driver's side door. Press the  button again; all other doors will unlock.
- To open the liftgate, press the  button **04** for more than 1 second.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **05** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.

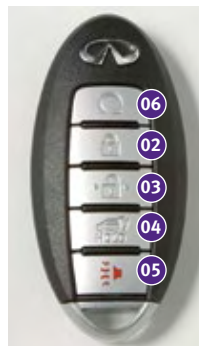

INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged, or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Move the shift lever to the **P (PARK)** position.
 2. Firmly apply the foot brake.
 3. Touch the ignition switch with the Intelligent Key and a chime will sound.
 4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.

 


*Laws in some communities may restrict the use of remote starters. Check local regulations before using this feature.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**”, the “**Starting and driving (section 5)**” and the “**Maintenance and do-it yourself (section 8)**” of your Owner’s Manual.

Power Liftgate

- When the liftgate is closed and locked, the liftgate will open automatically by:
 - Pushing the power liftgate switch **01** on the instrument panel.
 - Pushing the liftgate opener switch **02**, the liftgate must be unlocked, or you must have the Intelligent Key with you (in your pocket or purse).
 - Pressing the  button **03** on the INFINITI Intelligent Key for more than 1 second.
- The power liftgate operation can be turned on or off by the power liftgate main switch **04** on the instrument panel.
- When the power liftgate main switch **04** is pushed to the **OFF** position, power operation is not available using the power liftgate switch located on the lower part of the liftgate or the liftgate opener switch **02**.

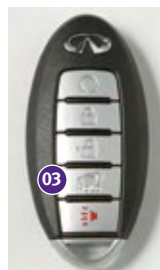

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

first drive features

Front Seat Adjustments

- To slide the seat forward or backward, push the control switch  **01** forward or backward.
- To recline the seatback, push the switch  **02** forward or backward.

SEAT LIFTER

- To raise or lower the front portion or height of the seat, push the front or back end of the switch  **01** up or down.



 
LUMBAR SUPPORT

- To adjust the seat lumbar support, push the front or back end of the switch  **03**.

For more information, refer to the “**Safety — seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

Automatic Drive Positioner

- Two positions for the driver’s seat, steering column and outside mirrors can be stored in the automatic drive positioner memory.
- Follow these procedures to set the memory positions:
 - Confirm the shift lever is in the **P (PARK)** position.
 - Push the ignition switch to the **ON** position.
 - Adjust the driver’s seat, steering column and outside mirrors to the desired positions using the adjusting switches for each feature.
 - Push the **SET** switch and within 5 seconds, push the memory switch (**1** or **2**) for at least 1 second.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds.
 - The driver’s seat, steering column and outside mirror positions are now set to your preference.
- These memorized positions can also be linked to your INFINITI Intelligent Key. To link a memorized position to your INFINITI Intelligent Key, press the unlock button on the key fob after completing the previous step.

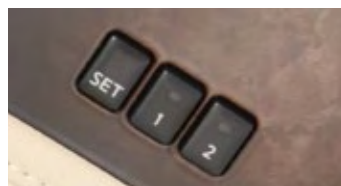

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

 
 
2nd Row Seats

- The 2nd row seat can be tipped forward for easy entry to or exit from the 3rd row seat and can be folded flat for maximum cargo hauling/extra storage space.

TIPPING THE 2ND ROW SEATS FORWARD FOR ENTRY TO THE 3RD ROW


MANUAL CONTROLS

1. Raise the armrest up to the stowed position.
2. Lift up on the seatback release latch **A** or the reclining lever **B**. The seatback will tip forward.
3. Lift up on the lower rear corner of the seat bottom and tip the seat forward.

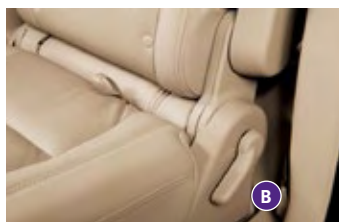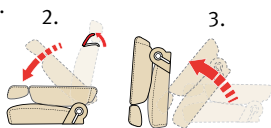


To return the 2nd row seats to the standard position:

 1. Push back on the seat to return it to its original position and lock it in place.
2. Pull up and push back on the seatback to lock it in place.
3. Use the seat reclining lever **B** to adjust the seat to the desired position.

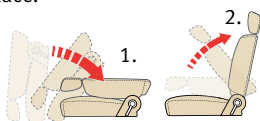


POWER REMOTE CONTROLS (if so equipped)

 - To fold down and tip forward the 2nd row seatback, push and hold the remote tip-up 2nd row seat switch **01** located on the instrument panel.
- The lower corner of the seat base will lift and the 2nd row seat will tip forward.

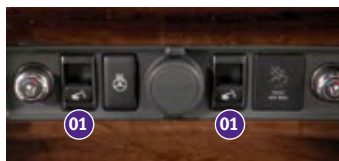

FOLDING THE 2ND ROW SEATS FLAT

 
1. Raise the armrest up to the stowed position.
 2. Pull the seat bottom release strap **C** to position the seat bottom forward.
 3. Pull seat reclining lever **B** up to fold the seatback forward.
- There is a carpet panel flap on the back side of the seatback that can be folded toward the back of the vehicle to provide a level cargo floor when the 3rd row seats are also folded flat. The center console (if so equipped) can also be removed.



first drive features

TO RETURN THE 2ND ROW SEATS TO THE STANDARD POSITION:


 
1. Return the carpet panel flap to the back side of the seatback and secure it in place.
2. Pull the seat reclining lever **B** up while you lift up and push back on the seatback until it locks in place.
3. Return the seat bottom backward to its original position until it locks in place.
4. Use the seat reclining lever to adjust the seat to the desired position.



For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” section of your Owner’s Manual.


3rd Row Power Folding Seats

  - The 3rd row seats can be folded flat for maximum cargo hauling or extra storage space.
- Before folding down the 3rd row seats:
 - The vehicle’s shift lever must be in **P (PARK)** or **N (NEUTRAL)**.
 - Place the seat belt buckles in the storage of the seat cushion **01** to avoid dropping them under the seat cushion or causing damage to your leather seats.
 - Disconnect and secure the center seat belt and tongues into the retractor base **02**.

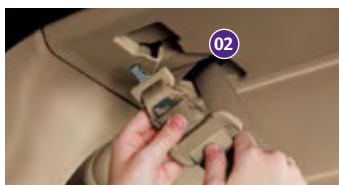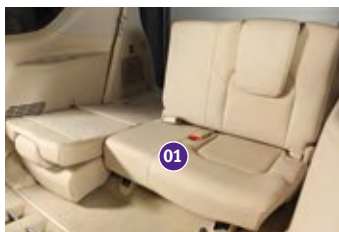

1. To release the seat belt connector tongue, insert a suitable tool (a key, for example) into the opening on the side of the connector buckle.
2. Retract the seat belt up to the retractor base located in the rear ceiling storage area.
3. Insert the seat belt tongue into the fabric sleeve so that it will lay flat.
4. Secure the connector tongue into the retractor base.
5. Always reconnect the center seat belt when the seat is returned to the upright position.

 
- Make sure that there are no objects on the seat cushion.
- Lower the 3rd row head restraints.
- To lower the seat, push and hold the front portion **A** of the right or left 3rd row power folding seat switch **01**.
- To return the seats to an upright position, press the back portion **B** of the right or left 3rd row power folding seat switch **01**.

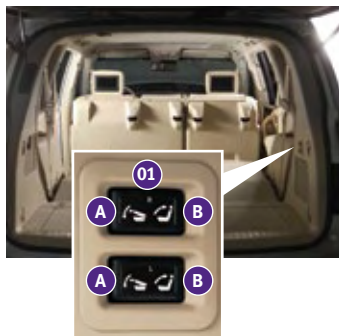

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

Outside Mirror Control Switch

 - Move the control switch **01** right or left to select the right or left side mirror.
- Adjust each mirror to the desired position using the switch **02**.
- Move this switch **01** to the center (neutral) position to prevent accidentally moving the mirror.

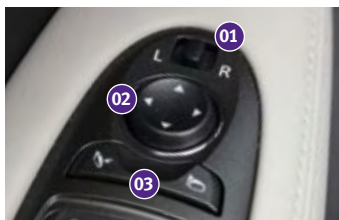

POWER FOLDING OUTSIDE MIRRORS

- To fold the outside rearview mirrors, push the switch **03** to the  position. To unfold the outside rearview mirrors, push the switch **03** to the  position.
- If mirrors are manually operated or bumped, the mirror body can become loose at the pivot point.
- To correct electronic mirror operation, cycle mirrors by pushing the outside rearview mirror folding switch **03** to the  position until completely closed, then push the switch **03** to the  position until the mirror is completely open.

REVERSE TILT-DOWN FEATURE

- When backing up the vehicle, the right or left outside mirrors will turn downward automatically to provide better rear visibility.
 1. Push the ignition switch to the **ON** position.
 2. Move the shift lever to the **R (REVERSE)** position.
 3. Choose the right or left outside mirror by operating the outside mirror control switch.
 4. The outside mirror surfaces move downward.
- When one of the following conditions has occurred, the outside mirror surfaces will return to their original positions.
 - The shift lever is moved to any position other than **R (REVERSE)**.
 - The outside mirror control switch is set to the center (neutral) position.
 - The ignition switch is pushed to the **OFF** position.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

Starting/Stopping the Engine

- It is important to make sure the INFINITI Intelligent Key is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Press the ignition switch **START/STOP** button to start the engine.



TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Press the ignition switch **START/STOP** button to turn the engine off.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

first drive features

Headlight Control

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **01** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **02** to turn on the headlights.



AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then push the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  position **01** or  position **02**.

HIGH BEAM SELECT

- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light extinguishes.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.



FOG LIGHT SWITCH

- The headlights must be on and the low beams selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **06** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

 
 


For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

Windshield Wiper and Washer Switch

- Move the lever to the following positions to operate the windshield wipers:

- 01 Mist (**MIST**) - One sweep operation of the front wipers.
- 02 Auto (**AUTO**) - Operates the rain-sensing auto front wiper system. The rain sensor sensitivity level can be adjusted by twisting the time control ring 03 to increase or decrease wiper sensitivity.
- 04 Low (**LO**) - Front wipers operate at a continuous low speed.
- 05 High (**HI**) - Front wipers operate at a continuous high speed.
- 06 Pull the lever toward you to activate the front washer. The front wipers will operate several times.

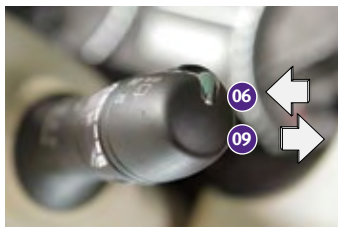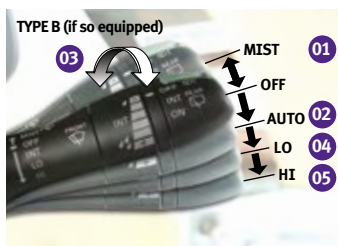


REAR WINDSHIELD WIPER AND WASHER

- 07 Intermittent (**INT**) - Rear wiper operates intermittently.
- 08 Low (**ON**) - Rear wiper operates at a continuous low speed.
- 09 Push the lever forward to activate the rear washer. The rear wiper will operate several times.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

 first drive features

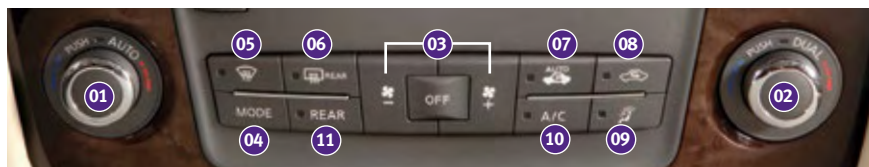

Automatic Climate Controls

01 AUTO BUTTON/TEMPERATURE CONTROL DIAL

- Press the **AUTO** button and the system will automatically control air flow distribution and fan speed to achieve and maintain the temperature setting (automatic cooling and/or dehumidified heating).
- Turn the driver's side temperature control dial to set your desired temperature.
- Auto mode may be used year-round and will work to reach a comfortable temperature quickly. For example on a very hot day, the system will initially operate at maximum air flow for rapid cool down.

02 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the passenger's side **DUAL** control button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side control by turning the passenger's side control.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

03 FAN SPEED CONTROL BUTTONS

- Press the fan speed control buttons to manually decrease the fan speed  or increase the fan speed .

04 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:



Air flows from the center and side vents.



Air flows from the center, side and foot vents.



Air flows mainly from the foot vents.



Air flows from the defroster and foot vents.

05 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the defroster control button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Use the temperature control dial  to set the desired temperature.
- To set the defroster on high, press the fan speed control button  to increase the fan speed to the maximum setting.

06 REAR WINDOW AND OUTSIDE MIRROR DEFROSTER SWITCH

- Push the rear window defroster switch  to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

07 AUTOMATIC INTAKE AIR CONTROL

- In the auto mode, air intake will be controlled automatically.
- This mode helps to adjust the inside vehicle temperature more effectively.
- To manually control air recirculation inside the vehicle, press the air recirculation button  08. The indicator light on the button will illuminate.
- To return to the automatic control mode, push and hold the auto-recirculation button  07 until the indicator light on the button illuminates.

09 UPPER VENT BUTTON

- When the upper vent button  is pressed, the air flow against the driver's or passenger's upper body becomes gentle. The indicator light on the button will illuminate.
- In this mode, air from the upper ventilator flows to control the cabin temperature without blowing air directly on the occupants.

10 A/C BUTTON

- Press the **A/C** button to manually turn the A/C on or off.
- When on, this system not only provides cooler air, but removes humidity from the air to help avoid window fogging.

11 REAR A/C BUTTON

- This button will allow the front controls to operate the front or rear climate control systems.
- To operate the rear climate control system from the front, press the **REAR** button so that the light illuminates and the "Rear Air-conditioning" screen is displayed.
- To adjust the front climate control system, press the **REAR** button again.



 
For more information, refer to the "**Instrument and controls (section 2)**" or the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

Rear Climate Controls

- To activate the system:
 1. Press the **REAR** button 01 on the front control panel until **Rear Air-conditioning** screen is displayed.
 - The indicator light will illuminate.
 - The Fan Speed, Temperature, **AUTO**, and **OFF** buttons will now control the Rear Air-conditioning system.

first drive features

2. Press the **REAR** button **01** again, and the screen will return to what was previously displayed.
 - The indicator light will stay illuminated to indicate that the Rear Air-conditioning system is active.
- **OFF** button **02** — Turns off the rear climate control system, and **REAR** button indicator light.
- Fan speed control buttons **03** — Press **+** or **-** to increase or decrease fan speed.
- Temperature increase and decrease buttons **04** — Adjusts the rear temperature up **▲** or down **▼**.
- **AUTO** button **05** — System automatically works to keep air flow and fan speed at a constant temperature.
- **MODE** button **06** — Changes the air flow mode. The air flow modes are:
 -  The air outlet is fixed at foot level.
 -  The air outlet is fixed at the head and foot level.
 -  The air outlet is fixed at the head level.



For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



FM/AM/SiriusXM* Satellite Radio With CD/DVD Player

01 VOLUME/ON•OFF CONTROL KNOB

- Press the **VOL/ON•OFF** control knob to turn the system on or off. Turn the knob right or left to increase or decrease the volume.

02 SEEK/CAT AND TRACK BUTTONS

- To scan quickly and stop at the previous or next broadcast station, press the **◀◀SEEK-CAT** button or the **TRACK▶▶▶** button.
- For SiriusXM Satellite Radio, press the **◀◀SEEK-CAT** button or the **TRACK▶▶▶** button to switch to the first channel of the previous or next category.
- To change tracks on a CD, press the **◀◀SEEK-CAT** button or the **TRACK▶▶▶** button.

- To rewind or fast forward a track on a CD, press and hold the **SEEK-CAT** button or the **TRACK** button.

03 TUNE/FOLDER/AUDIO CONTROL KNOB

- To manually tune the radio, turn the **TUNE/FOLDER/AUDIO** knob left or right.

04 STATION PRESET BUTTONS

 
- Twelve stations can be set for the FM band, six for the AM band and eighteen for SiriusXM Satellite Radio.
- To store a station in a preset you must first select a radio band by pressing the **FM•AM** 05 or **XM** 06 button, then tune to the desired FM, AM or SiriusXM Satellite Radio station.
- Then press and hold the desired station preset button (1-6) until the preset number is updated on the display and the sound is briefly muted. The channel indicator will then display and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (1-6).

*SiriusXM Satellite Radio is only available on vehicles equipped with optional SiriusXM Satellite Radio subscription service.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

Conventional (Fixed Speed) Cruise Control

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 MPH (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch 01. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch 02 and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch 03. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch 02. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch 04.
- To turn off cruise control, push the **ON/OFF** switch 01. The **CRUISE** indicator light in the instrument panel will turn off.

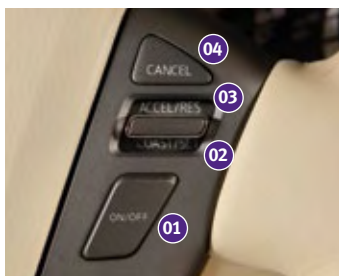

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

first drive features

 
Intelligent Cruise Control (ICC) System (if so equipped)

- The Intelligent Cruise Control (ICC) system automatically maintains a selected distance from the vehicle traveling in front of you according to that vehicle's speed (up to the set speed) or at the set speed when the road ahead is clear.
- This system may not function properly due to road conditions when direct sunlight, rain, mud, snow or other road spray cause the sensor to become blocked.



VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set Vehicle-To-Vehicle Distance Control mode, press the **CRUISE ON/OFF** button **01** for less than 1.5 seconds. The indicator light **02** will illuminate.
- Accelerate to the desired speed.
- Push down on the **COAST/SET** switch **03** and release it. Cruise control will be set to the desired speed.
- Press the distance button **04** repeatedly to change the set distance between long, middle, and short.
- When a vehicle is not detected ahead of you in the lane, the set distance and set vehicle speed indicator lights will illuminate **05** in set mode.
- When a vehicle is detected ahead of you in the lane, the vehicle ahead detection, set distance, and set vehicle speed indicator lights will illuminate **06** in set mode.

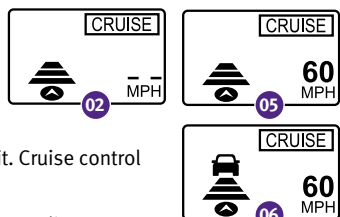

TO SET CONVENTIONAL FIXED SPEED CRUISE CONTROL MODE:

- While cruise control is off, press the **CRUISE ON/OFF** button and hold it down for more than 1.5 seconds. The **CRUISE** indicator light will illuminate.
- Accelerate to the desired speed.
- Push down on the **COAST/SET** switch and release it. The **SET** indicator light will illuminate. Cruise control should be set to the desired speed.

 
 
TO SWITCH BETWEEN THE TWO CRUISE CONTROL MODES:

- When one of the two cruise modes is in use, you must turn the system off, and then turn it on again to select the other cruise control mode.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

Trip Computer

- When the  button **01** is pressed, the following modes will appear on the vehicle information display **02**:
 - MPG** – Displays the current and average fuel consumption since the last reset.
 - MPG/MPH** – Displays the average fuel consumption and speed since the last reset.
 - TIME/MILES** – Displays the elapsed time and distance driven since the last reset.
 - RANGE** – Displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
 - OUTSIDE TEMP** – Displays the temperature outside your vehicle.
 - SETTING** – Allows you to set reminders for alerts and maintenance intervals or change the language and units used in the system.
 - Press the  button **03** to cycle through the various setting modes.
 - Press the  button **01** to choose the selected mode.
 - WARNING** – Displays when a warning is present.
- Press the  button **03** for approximately 1 second to reset the currently displayed trip odometer to zero.

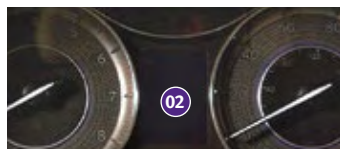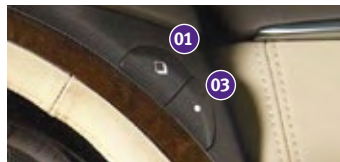

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

Bluetooth® Hands-free Phone System

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

- Press the  button to interrupt the voice prompts at any time and speak a command after the tone.
- The “Help” command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Say commands after the tone, or press the  button to say a command at any time.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, “Michael Smith” may be spoken as “Smith Michael”.



 
 
*Some jurisdictions prohibit the use of cellular telephones while driving.

system guide

- To cancel a voice recognition session, simply wait 5 seconds, say “Cancel” or “Quit”, or press and hold the  button for 5 seconds.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. See your Owner’s Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone Owner’s Manual and visit **www.InfinitiUSA.com/Bluetooth**.

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the phone.
1. Press the  button and select the “Connect Phone” key.
 2. Initiate connecting from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit **www.InfinitiUSA.com/bluetooth**.
 - When prompted for a PIN code, enter “1234” from the handset. (The PIN code is assigned by INFINITI and cannot be changed.)
 3. When the connecting is complete, the screen will return to the Phone menu display.

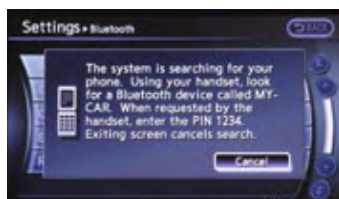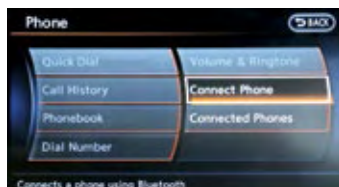



PHONEBOOK SETUP

- Depending on your cell phone, the system may automatically download your cell phone’s entire phonebook to the vehicle’s Bluetooth® system.
- If the phonebook does not download automatically, 40 entries can be individually downloaded.
- To manually download entries:
 1. Press the  button and select the “Quick Dial” key.
 2. Select the “Add New” key at the top of the display.

There are different methods to input a phone number.

Select one of the following options:

  
- “Copy from Call History” to save a number from the Outgoing, Incoming or Missed Calls lists.
- “Copy from the Phonebook” to save a number that has been downloaded from your handset to the vehicle.
- “Enter Number by Keypad” to input the number and name manually.

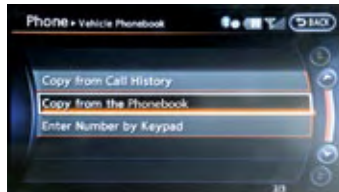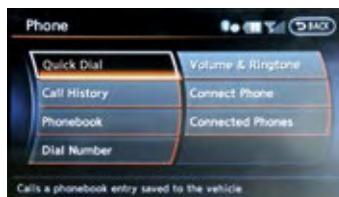

DIALING A CONTACT USING VOICE RECOGNITION

To make a call using voice recognition, follow this procedure:


 
1. Press the  button on the steering wheel.
After the tone, say “PHONE”
2. After the system confirms your command, wait for the tone and say “Phonebook”.
3. The system will prompt you to speak a name. After the tone, say a name from your phonebook. Be aware that for some phones it will be necessary to say the name in the last name, first name format.
4. The system will give you a list of close matches. After the tone, select the correct match by saying the number next to the correct match.
5. The system will confirm your selection. After the tone, say “Dial”.

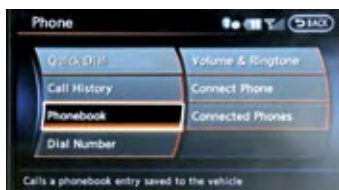

RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel or touch the “Answer” key.
- To reject the call, touch the “Reject Call” key.
- To hang-up, press the  button or touch the “Hang up” key.

  For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual or please visit www.InfinitiUSA.com/bluetooth.

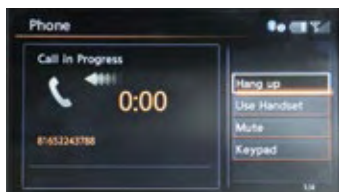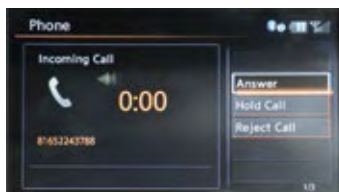




Navigation System

- 01 **Destination (DEST)** - Press to enter a destination
- 02 **INFINITI controller**
 - Slide or rotate to highlight an item on the screen and press **ENTER** to select the highlighted item.
 - On the map screen turn to adjust the map scale.
 - To scroll the map, slide the INFINITI controller in the direction you want to scroll.
- 03 **Information (INFO)** - Press to display the vehicle, traffic (if so equipped), weather (if so equipped) or voice recognition information.
- 04 **SETTING** - Press to access the system settings.
- 05 **ROUTE** - Press to access the guidance control functions such as guidance cancellation, route priority, and waypoint settings on the route.
- 06 **MAP** - Press to display the map. While following a programmed route, press multiple times to change the type of route information.
- 07 **← BACK** - Press to return to the previous screen. In a settings screen, this button can also be used to apply the setting. In a character input screen, this button can also delete the characters that have been entered.
- 08 **VOICE** - Press to hear the current voice guidance for a programmed route.
- 09 **STATUS** - Press multiple times to display audio information, the air conditioner status, fuel economy or navigation directions.
- 10 **☀/☾ OFF** - Press to switch between the day screen (bright) and the night screen (dark). Press and hold the button to turn the display off. Press again to turn the display on.

For more information, please refer to your Navigation System Owner's Manual.

HomeLink® Universal Transceiver

 - The HomeLink system can learn and consolidate the functions of up to 3 different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programing is complete, press and hold the HomeLink and observe the indicator light:
 - A solid continuous light indicates the programing is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid continuous light after 2 seconds indicates additional steps are required to complete the programing.
- An additional person may make the remaining steps easier. To complete the programing process:
 - At the receiver of the device that you are programing to the HomeLink, press and release the “learn” or “smart” button (the name may vary by manufacturer but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed HomeLink button for 2 seconds and release.
- You may have to repeat the previous 2 steps up to 3 times to complete the programming process. HomeLink should now activate your device.

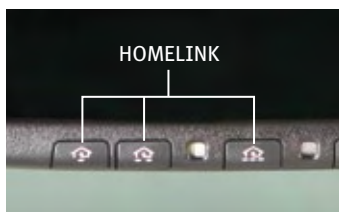

For more information, refer to the **“Instruments and controls (section 2)”** of your Owner’s Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.



INFINITI®



To view detailed instructional videos,
go to www.infinitiownersinfo.mobi/2014/qx80
or snap this barcode with an appropriate
barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at any time, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your INFINITI retailer or contact Nissan North America, Inc.