

2014 **cube**

QUICK REFERENCE GUIDE





- 01** LOW TIRE PRESSURE WARNING LIGHT
- 02** HEADLIGHT AND TURN SIGNAL CONTROL
- 03** INSTRUMENT BRIGHTNESS CONTROL*
- 04** TWIN TRIP ODOMETER / TRIP COMPUTER
- 05** WINDSHIELD WIPER AND WASHER SWITCH

- 06** STEERING WHEEL SWITCHES FOR AUDIO / BLUETOOTH®
- 07** CRUISE CONTROL
- 08** OUTSIDE MIRROR CONTROL SWITCH
- 09** STEERING WHEEL TILT ADJUSTMENT*

- 10** VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH*
- 11** FUEL-FILLER DOOR RELEASE
- 12** HOOD RELEASE*
- 13** AUDIO AND NAVIGATION SYSTEM

- 14** FRONT PASSENGER AIR BAG STATUS LIGHT*
- 15** PUSH-BUTTON IGNITION SWITCH
- 16** AUTOMATIC CLIMATE CONTROLS
- 17** POWER OUTLET*

*See your Owner's Manual for information.

NEW SYSTEM FEATURES

Navigation System (if so equipped)	2
--	---

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS)	3
Loose Fuel Cap	3
Fuel-Filler Door	4
Clock Set/Adjustment	4

FIRST DRIVE FEATURES

NISSAN Intelligent Key® System (if so equipped)	5
Opening the Back Door	6
Front Seat Adjustments	6
Rear Seat Adjustments	6
Outside Mirror Control Switch	7
Starting/Stopping the Engine	7
Headlight Control Switch	8
Windshield Wiper and Washer Switch	9
Automatic Climate Controls (if so equipped)	10
FM/AM/SiriusXM Satellite Radio with CD Player (if so equipped)	12
USB/iPod® Interface (if so equipped)	13
Cruise Control	13

SYSTEM GUIDE

Trip Computer	14
Bluetooth® Hands-free Phone System	14



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"**, the **"Center display, heater, air conditioner, audio and phone systems (section 4)"** and the **"Starting and driving (section 5)"** of your Owner's Manual.



To view detailed instructional videos, go to
www.nissanownersinfo.mobi/2014/cube
 or snap this barcode with an appropriate barcode reader.



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.nissanusa.com.

NEW SYSTEM FEATURES



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.

 
 
- 01** - Press to change the display brightness between day and night modes. Press and hold to turn the display off. Press again to turn the display on.
- 02** Touch screen display.
- 03** **MAP** - Press to display the current location map screen.
- 04** **NAV** - Press to access the functions of the Navigation System.
- 05** **TRAF** - Press to view traffic information on the route.
- 06** **SETUP** - Press to access the system settings.
- 07** **BACK** - Press to return to the previous screen.
- 08** **SCROLL KNOB** - Turn to scroll through the items in a list. Press to select a menu item.
- 09** **SD-card location** - An SD-card with map data must be inserted here for map functions to operate.
- 10** **VOLUME CONTROL KNOB** - Turn right to increase the volume or left to decrease the volume.

For more information, refer to your Navigation System Owner's Manual.

ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A **CHECK... TIRE... PRES...** warning message **01** will appear as scrolling text in the trip computer display **02** and the low tire pressure warning light **03** will illuminate when one or more tires are low in pressure and air is needed.
 - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25 km/h). The **CHECK... TIRE... PRES...** warning message and low tire pressure warning light will disappear.
- When the low tire pressure warning light flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressures (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to "Technical and consumer information" (section 9)", in your Owner's Manual for the location of the Tire and Loading Information label.

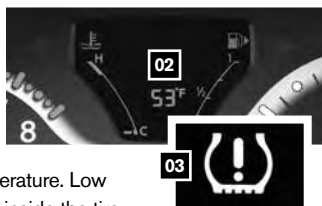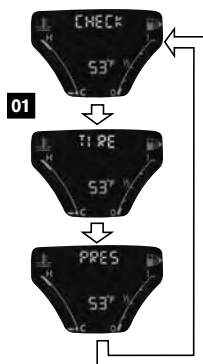

For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**" and the "**Maintenance and do-it-yourself (section 8)**" of your Owner's Manual.

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will appear in the trip computer display **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light SERVICE ENGINE SOON may also illuminate.



For more information, refer to the "**Instruments and controls (section 2)**" and the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

ESSENTIAL INFORMATION

FUEL-FILLER DOOR

 
- To open the fuel-filler door, pull the release **01** located on the driver's side instrument panel.
- The fuel-filler door is located on the right, rear side of the vehicle.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.



CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:
 1. Press the **SETUP** button **01**.
 2. Select the “System” key.
 3. Select the “Clock” key.
- The following settings can be adjusted:
 - **Time Format:** The clock can be set to 12 hours or 24 hours.
 - **Use GPS Clock:** When this setting is activated, the clock is set and continually updated via the GPS used by the Navigation System.
 - **Set Clock Manually:** When this setting is activated, the clock can be set manually. Touch the “+” or “-” key to adjust the hours and minutes up or down.
 - **Daylight Savings Time:** When this setting is activated, daylight savings time is on. Touch the “Daylight Savings Time” key to toggle the setting on or off.
 - **Time Zone:** Choose the applicable time zone from the list.

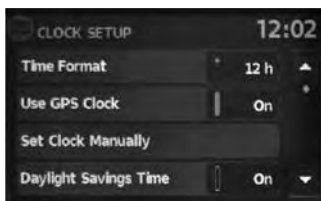

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Heater, air conditioner, audio and phone systems (section 4)**” of your Owner's Manual.

FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM (if so equipped)

The NISSAN Intelligent Key® System allows you to lock or unlock the vehicle, open the back door and start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **01**, push the back door request switch **02**, or press the  button **03** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **01** once or the back door request switch **02** once; the corresponding door will unlock. Push the request switch again within 1 minute; all other doors will unlock, or
 - Press the  button **04** on the key fob to unlock the driver's side door. Press the  button again; all other doors will unlock.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **05** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.



INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged, or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:

1. Move the shift lever to the **P (PARK)** position.
2. Firmly apply the foot brake.
3. Touch the ignition switch with the Intelligent Key and a chime will sound.
4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**”, the “**Starting and driving (section 5)**” and the “**Maintenance and do-it yourself (section 8)**” of your Owner's Manual.

FIRST DRIVE FEATURES

OPENING THE BACK DOOR

Use one of the following methods to unlock the back door then pull the handle **01** to open:

- Press the **1** button **02** on the key fob twice.
- Push the back door request switch **03** while carrying the NISSAN Intelligent Key[®] with you (if so equipped).

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



FRONT SEAT ADJUSTMENTS

 
- To slide the seat forward or backward, pull up on the lever **01** under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- To recline the seatback, pull up on the lever **02** and lean back. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.



SEAT LIFTER (driver’s seat only)

- To adjust the seat height, pull up or push down repeatedly on the adjusting lever **03**.


For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

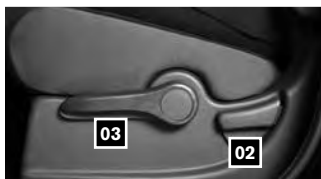

REAR SEAT ADJUSTMENTS

ADJUSTING THE REAR BENCH SEAT

 - To slide the rear bench seat forward or backward, pull up on the lever **01** under the front of the seat and slide forward or backward. The seat will slide in 3 fixed positions. Release the lever to lock the seat in position.
- To recline the seatback, pull the strap **02** and lean back. To bring the seatback forward, pull the strap and lean forward. Release the strap to lock the seatback in position.

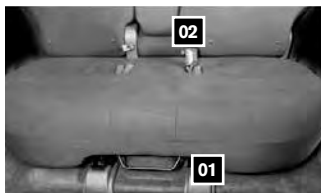

FOLDING DOWN THE REAR BENCH SEAT

- To fold the seats flat, secure the seat belts on the seat belt hooks on the side wall. Release the connector tongue of the rear center seat belt from the buckle then store the connector and seat belt tongues on the seat belt hook.
- Before folding down the seatback, tuck the seat belt buckles into the seat cushion pockets.
- Fold the seatback down by pulling the adjusting strap **01**.
- To raise the seatback, lift up the seatback and push it to the upright position until it is latched.
- After raising the seatback, pull the seat belt buckles out of the seat cushion pockets until they are fully extended before using the seat belts.



For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

OUTSIDE MIRROR CONTROL SWITCH

- The outside mirror control switch is located on the left side of the instrument panel.
- To select the left or right mirror, move the switch **01** to the left or right
- Adjust each mirror to the desired position using the control switch **02**.
- To prevent accidentally moving the mirror, move switch **01** to the center (neutral) position.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

STARTING/STOPPING THE ENGINE

CONTINUOUSLY VARIABLE TRANSMISSION
(NISSAN Intelligent Key® models only - if so equipped)

- It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Move the shift lever to the **P (PARK)** position.
- Push the ignition switch to start the engine.

TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position, apply the parking brake and push the ignition switch.



FIRST DRIVE FEATURES

MANUAL TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Move the shift lever to the **N (Neutral)** position.
- Depress the clutch pedal to the floor.
- Turn the ignition switch to start the engine.



TURNING THE ENGINE OFF

- Apply the foot brake and place the shift lever in first gear, then apply the parking brake and turn the ignition switch to **OFF**.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **01** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **02** to turn on the headlights.

 


AUTOLIGHT SYSTEM (if so equipped)

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then push the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF** position,  position **01** or  position **02**.


HIGH BEAM SELECT

- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam . The blue indicator light will extinguish.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.

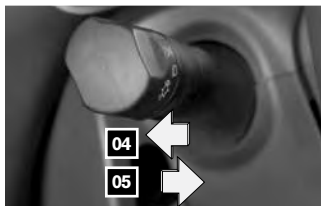

FOG LIGHT SWITCH (if so equipped)

 - The headlights must be on and the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **06** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.


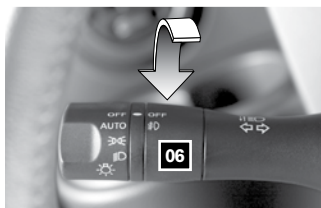


For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.

WINDSHIELD WIPER AND WASHER SWITCH


- Move the lever to the following positions to operate the windshield wipers:

  - 01** Mist (**MIST**) - One sweep operation of the front wipers.
- 02** Intermittent (**INT**) - Front wipers operate intermittently. The intermittent operation speed can be adjusted by twisting the time control ring **03** to increase or decrease **INT** wiper speed.
- 04** Low (**LO**) - Front wipers operate at a continuous low speed.
- 05** High (**HI**) - Front wipers operate at a continuous high speed.
- 06** Pull the lever toward you to activate the front washer. The front wipers will operate several times.

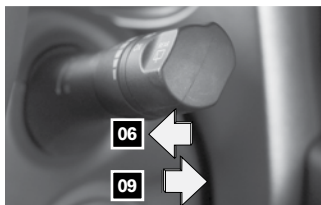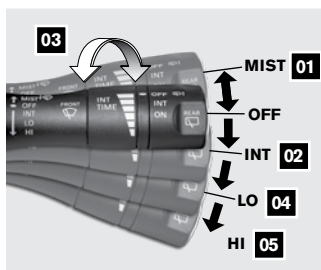


REAR WINDSHIELD WIPER AND WASHER

 - 07** Intermittent (**INT**) - Rear wiper operates intermittently.
- 08** Low (**ON**) - Rear wiper operates at a continuous low speed.
- 09** Push the lever forward to activate the rear washer. The rear wiper will operate several times.

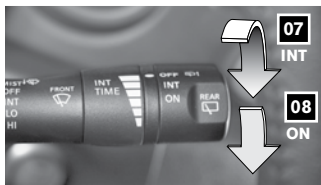

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.

 FIRST DRIVE FEATURES

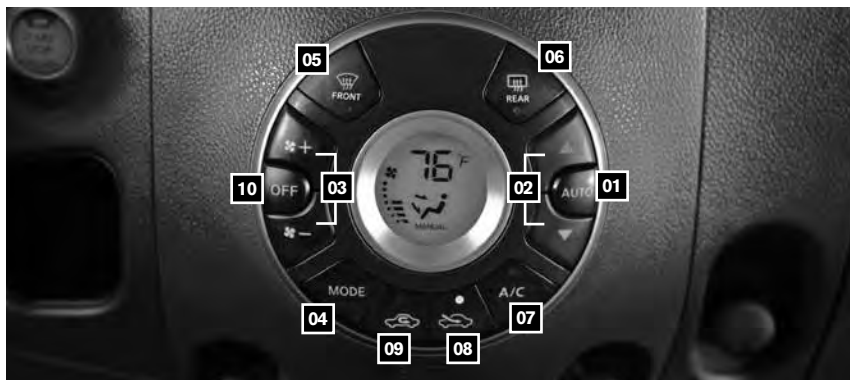

AUTOMATIC CLIMATE CONTROLS (if so equipped)

01 AUTO BUTTON

- The automatic mode may be used year-round. Press the **AUTO** button and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.

02 TEMPERATURE CONTROL BUTTONS

- Press the temperature control buttons **02** up ▲ to increase the temperature or down ▼ to decrease the temperature.

03 FAN SPEED CONTROL BUTTONS

- Press the fan speed control buttons to manually adjust the fan speed faster ❄+ or slower ❄-.
- Using the fan speed control buttons will disable the auto mode; to resume auto mode, press the **AUTO** button **01**.

04 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:

❄ Air flows from the center and side vents.

❄ Air flows from the center, side and foot vents.

❄ Air flows mainly from the foot vents.

❄ Air flows from the defroster and foot vents.

05 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the defroster control button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Use the temperature control buttons **02** to set the desired temperature.
- To set the defroster on high, press the fan speed control button ❄+ to increase the fan speed to the maximum setting.

06 DEFROSTING REAR WINDOW

- Push the rear window defroster switch  to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

07 A/C BUTTON

- Press the **A/C** button to manually turn the A/C on or off.

08 OUTSIDE AIR CIRCULATION BUTTON

- Press the outside air circulation button  to draw fresh air into the vehicle; the indicator light on the button will illuminate.
- Press and hold the outside air circulation button  for more than 1.5 seconds to set automatic outside air circulation mode.

09 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate air inside the vehicle; the indicator light on the button will illuminate. This system is used to avoid outside odors and to help adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot outlet mode .

10 OFF BUTTON

- Press the **OFF** button to turn the climate control system off.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Center display, heater, air conditioner, audio and phone systems (section 4)**” of your Owner’s Manual.

FIRST DRIVE FEATURES



FM/AM/SiriusXM* SATELLITE RADIO WITH CD PLAYER (if so equipped)

01 VOL/ON-OFF CONTROL KNOB

- Press the **VOL/ON-OFF** control knob to turn the system on or off.
- Turn the **VOL/ON-OFF** control knob to the right or left to increase or decrease the volume.

02 TUNE/SCROLL/AUDIO KNOB

- To manually tune the radio, turn the **TUNE/SCROLL/AUDIO** knob left or right.

03 SEEK/CATEGORY BUTTONS

- To scan through each broadcasting station, press the **SEEK/CATEGORY** buttons.
- To skip from one track to another on a CD, press the **SEEK/CATEGORY** buttons.
- When the **SEEK/CATEGORY** buttons are pressed and held while a CD is playing, the CD will rewind or fast forward. When the button is released, the CD will play at normal speed.

04 STATION SELECT BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for SiriusXM Satellite Radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **05** or **XM** button **06** then tune to the desired FM, AM or SiriusXM Satellite Radio station.
- Then press and hold the desired station select button (**1-6**) until a beep is heard and the sound is briefly muted. The channel indicator will appear on the display and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (**1-6**).

*SiriusXM Satellite Radio is only available on vehicles equipped with optional SiriusXM Satellite Radio subscription service.

For more information, refer to the **"Center display, heater, air conditioner, audio and phone systems (section 4)"** of your Owner's Manual.

To view detailed instructional videos regarding these and other features,
please go to www.nissanownersinfo.mobi.

USB/iPOD® INTERFACE (if so equipped)

- The USB jack **01** is located on the instrument panel in front of the shift lever.
- When a compatible USB memory device or iPod® is plugged into the USB jack **01**, compatible audio files stored on the device can be played through the vehicle's audio system.

For more information, refer to the “**Center display, heater, air conditioner, audio and phone systems (section 4)**” of your Owner's Manual.



CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 MPH (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **CRUISE ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **04**.
- To turn off cruise control, push the **CRUISE ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will extinguish.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner's Manual.

SYSTEM GUIDE

TRIP COMPUTER

With the ignition switch in the **ON** position, trip computer **01** modes can be selected by pressing the trip computer mode switch **02** on the instrument panel.

The following modes can be selected in the display:

- Trip A – measures the distance of one specific trip.
- Trip B – measures the distance of a second specific trip.
- Current Fuel Consumption – displays the current fuel consumption.
- Distance to Empty (dte) – displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
- Average Fuel Consumption – displays the average fuel consumption since the last reset.



TRIP COMPUTER RESET

- To reset Trip A or Trip B, go to the desired mode on your trip computer and hold the trip computer mode switch **02** for more than 3 seconds.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

- Press the  button to interrupt the voice prompts at any time and speak a command after the tone.
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To cancel a voice recognition session, simply wait 5 seconds, say "Cancel" or "Quit", or press the  button for 5 seconds.



*Some jurisdictions prohibit the use of cellular telephones while driving.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- To increase or decrease the volume of the voice prompts, push the volume control switches  or  on the steering wheel or turn the **VOL/ON-OFF** control knob on the audio system while the system is responding.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. See your Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit **www.nissanusa.com/bluetooth**.

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the phone.
1. Press the  button on the steering wheel. The system announces the available commands.
 2. Say: "Connect phone". The system acknowledges the command and announces the next set of available commands.
 3. Say: "Add phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.
 4. Initiate connecting from the phone:
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and compatible phones, please visit **www.nissanusa.com/bluetooth**.
 - When prompted for a Passkey code, enter "1234" from the handset. (The Passkey code is assigned by NISSAN and cannot be changed.)
 5. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.

PHONEBOOK SETUP

- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, 40 entries can be individually downloaded.
- To manually download entries:
 1. Push the  button on the steering wheel.
 2. After the tone, say "Phonebook".
 3. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.
 4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, choose "Store".
 5. The system confirms the name, location and number.
- The transfer procedure varies according to each cellular phone. See your cellular phone's Owner's Manual for details. You can also visit **www.nissanusa.com/bluetooth** for instructions on transferring phone numbers from NISSAN recommended cellular phones.

SYSTEM GUIDE

MAKING A CALL

1. Press the  button. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say: "Phone Number". The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call, starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- When you receive a phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button.
- To reject the call, press the  button.
- To hang up the phone at the end of a call or to disconnect during call placement, press the  button.

For more information, refer to the "**Center display, heater, air conditioner, audio and phone systems (section 4)**" of your Owner's Manual.

MEMO

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at any time, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your NISSAN dealer or contact Nissan North America, Inc.



To view detailed instructional videos,
go to **www.nissanownersinfo.mobi/2014/cube**
or snap this barcode with an appropriate barcode reader.

