 


2014 **MAXIMA**

QUICK REFERENCE GUIDE



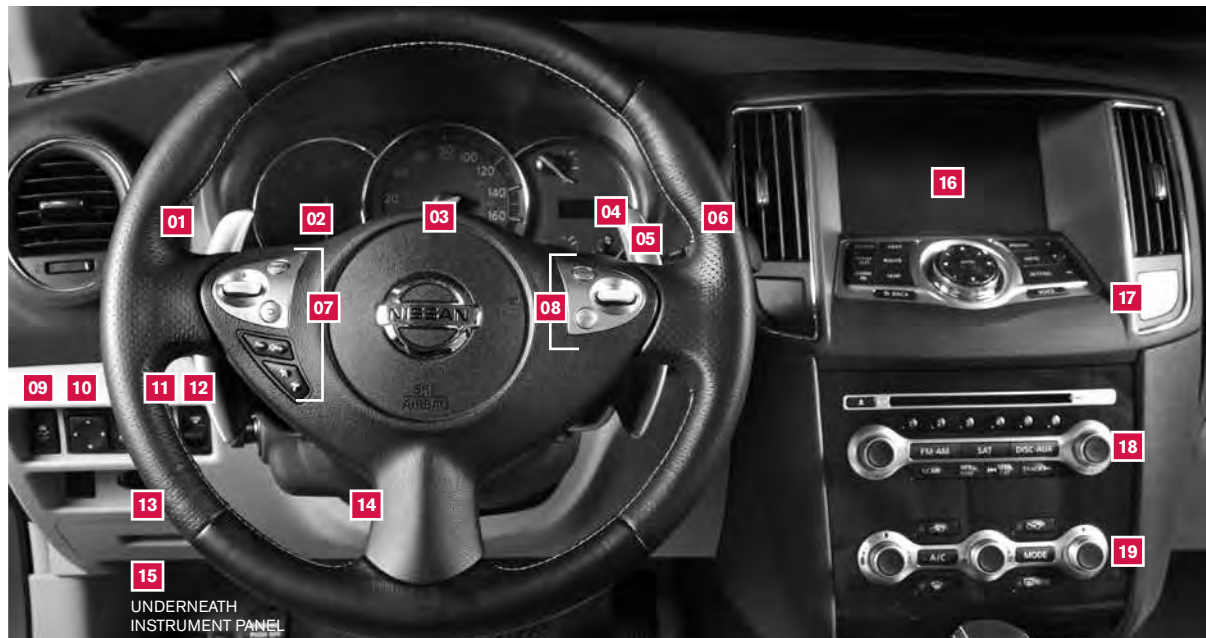

UNDERNEATH
INSTRUMENT PANEL

- | | | | |
|---|--|--|---|
| 01 HEADLIGHT AND TURN SIGNAL CONTROL | 06 WINDSHIELD WIPER / WASHER SWITCH | 10 OUTSIDE MIRROR CONTROL SWITCH | 15 HOOD RELEASE* |
| 02 LOW TIRE PRESSURE WARNING LIGHT | 07 STEERING WHEEL SWITCHES FOR AUDIO* / BLUETOOTH® / NAVIGATION | 11 HEATED STEERING WHEEL SWITCH* | 16 CONTROL PANEL DISPLAY* |
| 03 VEHICLE INFORMATION DISPLAY | 08 CRUISE CONTROL | 12 TRUNK LID RELEASE SWITCH | 17 FRONT PASSENGER AIR BAG STATUS LIGHT* |
| 04 TRIP ODOMETER* | 09 VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH* | 13 INTELLIGENT KEY PORT | 18 AUDIO SYSTEM |
| 05 INSTRUMENT BRIGHTNESS CONTROL* | | 14 TILT / TELESCOPIC STEERING COLUMN* | 19 AUTOMATIC CLIMATE CONTROLS |

*See your Owner's Manual for information.

NEW SYSTEM FEATURES

RearView Monitor (if so equipped)	2
---	---

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS)	3
Loose Fuel Cap	3
Fuel-filler Door	4
Heated Steering Wheel (if so equipped)	4
Clock Set/Adjustment	4

FIRST DRIVE FEATURES

NISSAN Intelligent Key® System	5
Trunk Lid Release	6
Seat Adjustments	6
Automatic Drive Positioner (if so equipped)	7
Outside Mirror Control Switch	7
Starting/Stopping the Engine	8
Headlight Control Switch	8
Windshield Wiper and Washer Switch	9
Automatic Climate Controls	9
FM/AM/SiriusXM® Satellite Radio with CD/DVD Player (if so equipped)	11
USB/iPod® Interface (if so equipped)	12
Cruise Control	12

SYSTEM GUIDE

Vehicle Information Display	13
Bluetooth® Hands-free Phone System	13
System Operating Tips	13
Bluetooth® System without Navigation (if so equipped)	14
Bluetooth® System with Navigation (if so equipped)	16
Navigation System (if so equipped)	18
DVD Player (if so equipped)	19
HomeLink® Universal Transceiver (if so equipped)	20



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"**, the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** and the **"Starting and driving (section 5)"** of your Owner's Manual.



To view detailed instructional videos, go to
www.nissanownersinfo.mobi/2014/maxima
 or snap this barcode with an appropriate barcode reader.



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.nissanusa.com.

NEW SYSTEM FEATURES

REARVIEW MONITOR (if so equipped)

 
- When the shift lever is shifted into the **R (REVERSE)** position, the monitor display shows a rearward view from the vehicle.
- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line:
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).



For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS)

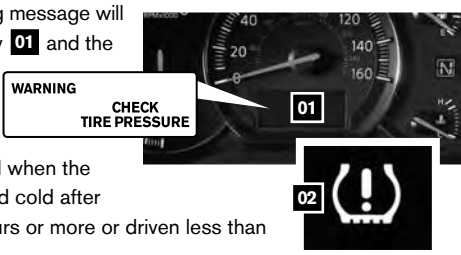- A **CHECK TIRE PRESSURE** warning message will appear in the vehicle information display **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.
 - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25 km/h). The **CHECK TIRE PRESSURE** warning message and low tire pressure warning light will disappear.
- When the low tire pressure warning light flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to section 9, "Technical and consumer information", in your Owner's Manual for the location of the Tire and Loading Information label.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Maintenance and do-it-yourself (section 8)" of your Owner's Manual.

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will appear in the vehicle information display **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed for about 1 second.
- If the cap is not properly tightened, the Malfunction Indicator Light **SERVICE ENGINE SOON** may illuminate.

For more information, refer to the "Instruments and controls (section 2)" and the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

ESSENTIAL INFORMATION

FUEL-FILLER DOOR

The fuel-filler door is located on the driver's side of the vehicle.

- When the doors of the vehicle are locked or unlocked, the fuel-filler door is automatically locked or unlocked at the same time.

- To open the fuel-filler door, once unlocked, push the right side of the door.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

HEATED STEERING WHEEL (if so equipped)

- Once activated, your heated steering wheel will automatically turn on and off to maintain a temperature above 68°F (20°C).
- If the surface temperature of the steering wheel is above 68°F (20°C) and the control switch **01** is turned on, the system will not heat the steering wheel. This does not indicate a malfunction.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner's Manual.

CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:
 1. Press the **SETTING** button on the control panel.
 2. Touch the **Clock** key.

- The following settings can be adjusted:

- **On-screen Clock:** The clock in the upper right corner of the display can be turned ON or OFF.
- **Clock Format (24h):** The clock can be set to 12 hours or 24 hours.
- **Offset (hour):** The time can be adjusted by increasing or decreasing per hour.
- **Offset (min):** The time can be adjusted by increasing or decreasing per minute.
- **Daylight Savings Time:** The application of daylight savings time can be turned ON or OFF.
- **Time Zone:** Adjust the time zone. Choose a time zone from the available list.

- Press the **BACK** button to return to the previous screen.



 
For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.

FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM



The NISSAN Intelligent Key® system allows you to lock or unlock the vehicle, open the trunk and start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **01** once or press the  button **02** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **01** once; the corresponding door will unlock. Push the door handle request switch **01** again within 1 minute; all other doors will unlock, or
 - Press the  button **03** on the key fob to unlock the driver's side door. Press the  button again; all other doors will unlock.
- To release the trunk lid, press the  button **04** for more than 0.5 seconds. Lift the trunk lid to access the trunk.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **05** for more than 0.5 seconds. Once activated, the panic alarm and headlights will stay on for a period of time.

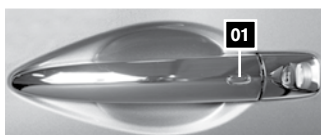

NISSAN INTELLIGENT KEY® BATTERY DISCHARGE

  - If the battery in the Intelligent Key is almost discharged, the guide light **06** of the Intelligent Key port blinks and the Intelligent Key insertion indicator **07** is displayed in the vehicle information display.
- To start the engine under these circumstances, insert the Intelligent Key into the key port with the front side facing upward until it latches into place. Then push the ignition switch to start the engine.
- To remove the Intelligent Key from the port, push the ignition switch to turn the engine off and then pull the Intelligent Key out of the port.
- The Intelligent Key port does not charge the Intelligent Key battery. If you see the Intelligent Key battery discharge indicator **08**, replace the battery in the Intelligent Key.
- Do not insert the mechanical key or other objects into the key port because they will damage the key port.

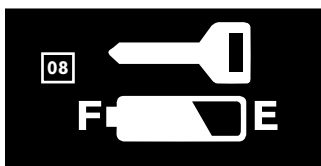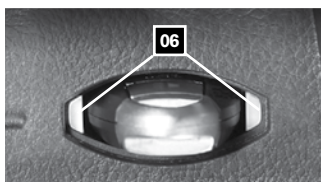

For more information, refer to the “Pre-driving checks and adjustments (section 3)”, the “Starting and driving (section 5)” and the “Maintenance and do-it yourself (section 8)” of your Owner's Manual.

 
To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FIRST DRIVE FEATURES

TRUNK LID RELEASE

Use one of the following methods to open the trunk:

- Push the trunk opener request switch **01**, located on the far right under the trunk handle, for more than 1 second while carrying the NISSAN Intelligent Key® with you.

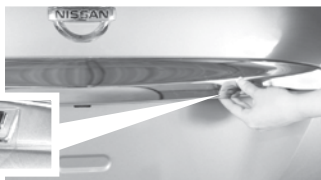

- Press the trunk release button **HOLD 02** on the Intelligent Key for more than 0.5 seconds.



- From inside the vehicle, push the trunk lid release switch **03** located on the instrument panel to the left of the steering wheel.

For more information, refer to the “Pre-driving checks and adjustments (section 3)” of your Owner’s Manual.



SEAT ADJUSTMENTS

- To slide the seat forward or backward, push the control switch **01** forward or backward.
- To adjust the angle of the seatback, push the switch **02** forward or backward.



SEAT LIFTER (driver’s seat)

- To adjust the angle and height of the seat cushion, push the front or rear end of the switch **01** up or down.

POWER LUMBAR SUPPORT (if so equipped for driver’s seat)

- To adjust the seat lumbar area, push the front or rear end of the switch **03**.

For more information, refer to the “Safety — Seats, seat belts and supplemental restraint system (section 1)” of your Owner’s Manual.

AUTOMATIC DRIVE POSITIONER (if so equipped)

- Two positions for the driver's seat, steering column and outside mirrors can be stored in the automatic drive positioner memory.
- Follow these procedures to set the memory positions:
 - Confirm the shift lever is in the **P (PARK)** position.
 - Push the ignition switch to the **ON** position.
 - Adjust the driver's seat, steering column and outside mirrors to the desired positions using the adjusting switches for each feature.
 - Push the **SET** switch within 5 seconds and push the memory switch (**1** or **2**) for at least 1 second.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds.
 - The driver's seat, steering column and outside mirror positions are now set to your preferences.
- These memorized positions can also be linked to your NISSAN Intelligent Key®.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.



OUTSIDE MIRROR CONTROL SWITCH

- The outside mirror control switch is located on the left side of the instrument panel.
- To select the left or right mirror, move the switch **01**.
- Adjust each mirror to the desired position using the switch **02**.
- To prevent accidentally moving the mirror, move this switch **01** to the center (neutral) position.



REVERSE TILT-DOWN FEATURE (if so equipped)

- If the small switch is in the center (neutral) position, neither mirror will turn downward when the shift lever is moved to **R (REVERSE)**.
- When the small switch **01** is in either the left or right position, the reverse tilt-down feature will turn both outside mirror surfaces downward to provide better rear visibility close to the vehicle.
- To turn both mirrors downward, move the shift lever to **R (REVERSE)**.
- The mirror surfaces will return to their original position when any of the following have occurred:
 - The shift lever is moved to any position other than **R (REVERSE)**.
 - The outside mirror control switch is set to the center (neutral) position.
 - The ignition switch is placed in the **OFF** position.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

FIRST DRIVE FEATURES

STARTING/STOPPING THE ENGINE

- It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).
- Depress the brake pedal.
 - If the brake pedal is not depressed, pushing the ignition switch once enters the **ACC** mode.
 - If the ignition is pushed a second time, the vehicle will enter the **ON** mode.
- Press the ignition switch **START/STOP** button to start the engine.



TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Press the ignition switch **START/STOP** button to turn the engine off.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **01** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **02** to turn on the headlights.



AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then turn the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  position **01** or  position **02**.

 
HIGH BEAM SELECT

- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight control switch back to the original position to select the low beam. The blue indicator light goes off.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.



FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams selected for the fog lights to operate.
- Turn the switch (inside collar) to the **ON** position **06** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

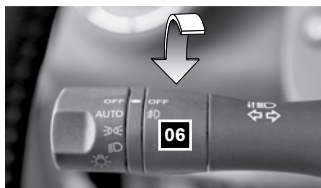


For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

WINDSHIELD WIPER AND WASHER SWITCH

- Move the lever to the following positions to operate the windshield wipers:

 - 01** Mist (**MIST**) – One sweep operation of the wipers.
- 02** Intermittent (**INT**) – Move the lever down to the **INT** position and then rotate the control ring **03** to increase or decrease wiper speed.
- 04** Low (**LO**) – Wipers operate at a continuous low-speed.
- 05** High (**HI**) – Wipers operate at a continuous high-speed.
- 06** Washer  – Pull the lever toward you to activate the washer. The wipers will operate several times.

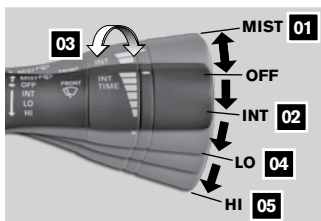

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



AUTOMATIC CLIMATE CONTROLS

01 AUTO BUTTON/DRIVER’S SIDE TEMPERATURE CONTROL DIAL

- The auto mode may be used year-round. Press the **AUTO** button to turn the system on and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver’s side temperature control dial to the left for cooler air or right for warmer air.

FIRST DRIVE FEATURES

02 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by turning the passenger's side temperature control dial.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

03 ON-OFF BUTTON/FAN SPEED CONTROL KNOB

- Turn the fan speed control knob left to decrease fan speed or right to increase fan speed.
- Press the button to turn the system on or off.

04 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:

 Air flows from the center and side vents.

 Air flows from the center, side and foot vents.

 Air flows mainly from the foot vents.

 Air flows from the defroster and foot vents.

05 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate interior air inside the vehicle. The indicator light on the button will come on. This system is used to avoid certain outside odors and helps to adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defrosting mode  or the front defrosting and foot vent mode .

06 FRESH AIR INTAKE BUTTON

- Press the fresh air intake button  to draw outside air into the passenger compartment. The indicator light on the button will illuminate.

07 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the defroster control button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Turn the temperature control dial **01** to set the desired temperature.
- To defrost the front and side windows, set the temperature control **01** and fan speed control **03** to their maximum settings.

08 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS (if so equipped)

- Press the rear window defroster switch  **REAR** to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

09 A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.



FM/AM/SiriusXM[®]* SATELLITE RADIO WITH CD/DVD PLAYER (if so equipped)

01 ON-OFF BUTTON/VOL (volume) CONTROL DIAL

- Press the **ON-OFF** button to turn the system on or off.
- Turn the **VOL** control dial right or left to increase or decrease the volume.

02 SEEK/CAT AND TRACK BUTTONS

- To scan quickly through each broadcasting station, press the **SEEK/CAT** button or the **TRACK** button to stop at the previous or next broadcast station.
- For satellite radio, to switch to the first channel of the previous or next category, press the **SEEK/CAT** button or the **TRACK** button.
- To change tracks on a CD, press the **SEEK/CAT** button or the **TRACK** button.
- To fast forward or rewind a track on a CD, press and hold the **SEEK/CAT** button or the **TRACK** button.

03 AUDIO BUTTON/TUNE/FOLDER CONTROL DIAL

- Press the **AUDIO** button to go to the audio settings screen.
- To manually tune the radio, turn the **TUNE/FOLDER** control dial left or right.

04 STATION PRESET BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **05** or **SAT** button **06**, then tune to the desired FM, AM or XM satellite radio station.
- Then press and hold the desired station preset button (**1-6**) until the preset number is updated on the display and the sound is briefly muted. The channel indicator will then come on and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored, then press the corresponding station select button (**1-6**).

*SiriusXM[®] Satellite Radio is only available on vehicles equipped with an optional satellite radio subscription service.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

FIRST DRIVE FEATURES

USB/iPOD® INTERFACE (if so equipped)

- The USB jack **01** is located in the center console under the arm rest.
- When a compatible USB memory device or iPod® is plugged into the USB jack, compatible audio and video files stored on the device can be played through the vehicle's audio system and front display.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.



CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 MPH (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **04**.
- To turn off cruise control, push the **ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will turn off.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner's Manual.

SYSTEM GUIDE

VEHICLE INFORMATION DISPLAY

- The vehicle information display **01** is located on the bottom of the speedometer.
- Press the  button **02** to cycle through the following modes on the vehicle information display:
 - **MPG** – Displays the instant fuel economy since the last reset.
 - **MPG/MPH** – Displays the average fuel economy and average speed since the last reset.
 - **TIME/miles** – Displays the elapsed time and distance driven since the last reset.
 - **RANGE** – Displays the estimated distance the vehicle can be driven before refueling.
 - **TIRE PRESSURES** – Displays the tire pressure of each tire. (The order of tire pressure figures displayed does not correspond with the actual order of the tire position.)
 - **OUTSIDE TEMP** – Displays the temperature outside your vehicle.
 - **SETTING** – Allows you to set reminders or preferences for alerts, maintenance intervals or language displays in the system.
 - Press the  button **03** to cycle through the various setting modes.
 - Press the  button **02** to choose the selected mode.
 - **WARNING** – Displays when a warning is present.
- To reset **TRIP A**, **TRIP B**, **mpg**, or **mpg AVG**, go to the desired mode on the trip computer and hold the change button **04** for more than 1 second.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

- Press the  button to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button and after the tone say, “Call Redial”.
- The “Help” command can be used to hear a list of available commands at any time.



*Some jurisdictions prohibit the use of cellular telephones while driving.

SYSTEM GUIDE

- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To cancel a voice recognition session, simply wait 5 seconds, say "Cancel" or "Quit," or press and hold the  button for 5 seconds.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Voice Adaptation Mode. See your Owner's Manual for detailed information.



Bluetooth® System without Navigation* (if so equipped)

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the phone.
1. Press the  button on the steering wheel. The system announces the available commands.
 2. Say: "Connect phone". The system acknowledges the command and announces the next set of available commands.
 3. Say: "Add phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.
 4. Initiate connecting from the phone:
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and compatible phones, please visit www.nissanusa.com/bluetooth.
 - When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)
 5. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.



PHONEBOOK SETUP

- Depending on your cell phone, the system may automatically download your cell phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, 40 entries can be individually downloaded.

*Some jurisdictions prohibit the use of cellular telephones while driving.

■ To manually download entries:

1. Press the  button on the steering wheel.
 2. After the tone, say "Phonebook".
 3. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.
- The transfer procedure varies according to each cellular phone. See your cellular phone's owner's manual for details. You can also visit www.nissanusa.com/bluetooth for instructions on transferring phone numbers from NISSAN recommended cellular phones.
4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, choose "Store."
 5. The system confirms the name, location and number.

MAKING A CALL FROM THE PHONEBOOK

 
- In some cases, names stored in all UPPERCASE letters may not be recognized by the voice recognition system.
1. Press the  button.
 2. After waiting for the tone, say "Call".
 3. After the next tone, speak a name of a phonebook entry. For example, "Michael Smith".
 4. Confirm the correct name is recognized by saying "Dial" after the tone.

MAKING A CALL BY PHONE NUMBER

1. Press the  button. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say: "Phone Number". The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- When you receive a phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button.
To reject the call, press the  button.
- To hang up the phone at the end of a call or to disconnect during call placement, press the  button.

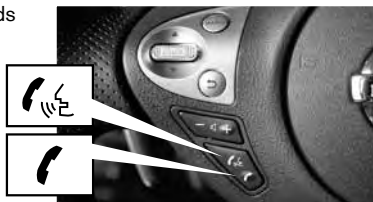

SYSTEM GUIDE

Bluetooth® System with Navigation* (if so equipped)

- Bluetooth® Streaming Audio (available with Navigation System only) allows you to use a compatible Bluetooth® phone to play audio files on your device. Your compatible cellular phone can be connected to the vehicle's audio system allowing audio files to play through the vehicle's speakers.

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the phone.
1. Press the **SETTING** button on the instrument panel and select the "Bluetooth" key on the display.



2. Select the "Connect Bluetooth" key.



3. A pop-up box will appear on the screen, prompting you to confirm that the connection is for the phone system. Select the "Yes" key.



4. Initiate connecting from the phone.

- The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.nissanusa.com/bluetooth.



- When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)

5. When connecting is complete, the screen will return to the Bluetooth® settings screen.

*Some jurisdictions prohibit the use of cellular telephones while driving.

PHONEBOOK SETUP

- Depending on your cell phone, the system may automatically download your cell phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, the vehicle phonebook may be set for up to 40 entries.
- To manually download entries:
 1. Press the **PHONE** button and select the "Vehicle Phonebook" key.
 2. Select the "Add New" key at the top of the display. There are different methods to input a phone number. Select one of the following options:
 - "Copy from Call History" to save a number from the Outgoing, Incoming or Missed Calls lists.
 - "Copy from the Handset" to save a number that has been downloaded from your handset to the vehicle.
 - "Enter Number by Keypad" to input the number and name manually.



MAKING A CALL

To make a call, follow this procedure:

 
1. Press the **PHONE** button on the instrument panel or the  button on the steering wheel. The "Phone" menu will appear on the control panel display.
2. Select the "Vehicle Phonebook", "Call History", "Handset Phonebook" or "Dial Number" key.
3. Select the desired entry from the list.
4. Dialing begins when the entry is selected or when the "OK" key is selected.



RECEIVING/ENDING A CALL

- To accept the call, press the **PHONE** button on the instrument panel, the  button on the steering wheel or touch the "Answer" key.
- To reject the call, touch the "Reject Call" key on the display or press and hold the  button on the steering wheel.
- To hang-up, press the  button or touch the "Hang Up" key.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual or visit www.nissanusa.com/bluetooth.

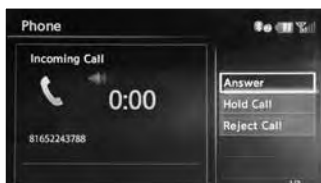

SYSTEM GUIDE



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.

- 01** Touch-screen display.
- 02 STATUS** – Press multiple times to display audio information with either the air conditioner status, fuel economy or navigation directions.
- 03** Destination (**DEST**) – Press to enter a destination.
- 04 ZOOM OUT** – Press to zoom the map out.
- 05 ROUTE** – Press to access guidance control functions (guidance cancellation, route priority, waypoint setting on the route, etc.).
- 06** Information (**INFO**) – Press to display the vehicle, traffic (if so equipped), weather (if so equipped) or voice recognition information.
- 07**  – Press to switch between the day screen (bright) and the night screen (dark). Press and hold the button to turn the display off. Press again to turn the display on.

08 Multi-function Controller

- **ENTER** – Press to select the highlighted item on the screen. If this button is pressed while a map is displayed, the map menu screen is displayed.
- Main directional buttons – Press to move across the map, highlight an item on the screen or adjust a setting.
- Additional directional buttons – Press to move across the map or highlight an item on the character input screen.
- Center dial – Turn the dial to highlight an item on the screen, adjust a setting or adjust the map scale.

09 ZOOM IN – Press to zoom the map in.

10 MAP – Press to display the map. While following a programed route, press multiple times to change the type of route information.

11 SETTING – Press to access the system settings.

12 ↶ BACK – Press to return to the previous screen. In a settings screen, this button can also be used to apply the setting. In a character input screen, this button can also delete the characters that have been entered.

13 VOICE – Press to hear the current voice guidance for a programed route.

For more information, please refer to your Navigation System Owner's Manual.

DVD PLAYER (if so equipped)

- With this DVD player, you can play video files via a DVD or CD, providing images and sound from the front display.
- You can also connect auxiliary devices, such as video games, camcorders or portable video players, to the auxiliary jacks. (Your device will be controlled through its own control panel.)
- To view movies on the front display, stop the vehicle in a safe location, move the shift lever to the **P (PARK)** position and apply the parking brake.
- To reduce driver distraction, movies will not be shown on the front display while the vehicle is in any drive position.



For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

SYSTEM GUIDE



HOMELINK® UNIVERSAL TRANSCIEVER (if so equipped)

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to 3 different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programing is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programing is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid continuous light after 2 seconds indicates additional steps are required to complete the programing.
- An additional person may make the remaining steps easier. To complete the programing process:
 - At the receiver of the device that you are programing to the HomeLink, press and release the “learn” or “smart” button (the name may vary by manufacturer but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programed HomeLink button for 2 seconds and release.
- You may have to repeat the previous 2 steps up to 3 times to complete the programing process. HomeLink should now activate your device.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.

MEMO

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at any time, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your NISSAN dealer or contact Nissan North America, Inc.



To view detailed instructional videos,
go to **www.nissanownersinfo.mobi/2014/maxima**
or snap this barcode with an appropriate barcode reader.

