 


2014 **PATHFINDER** **HYBRID**

QUICK REFERENCE GUIDE



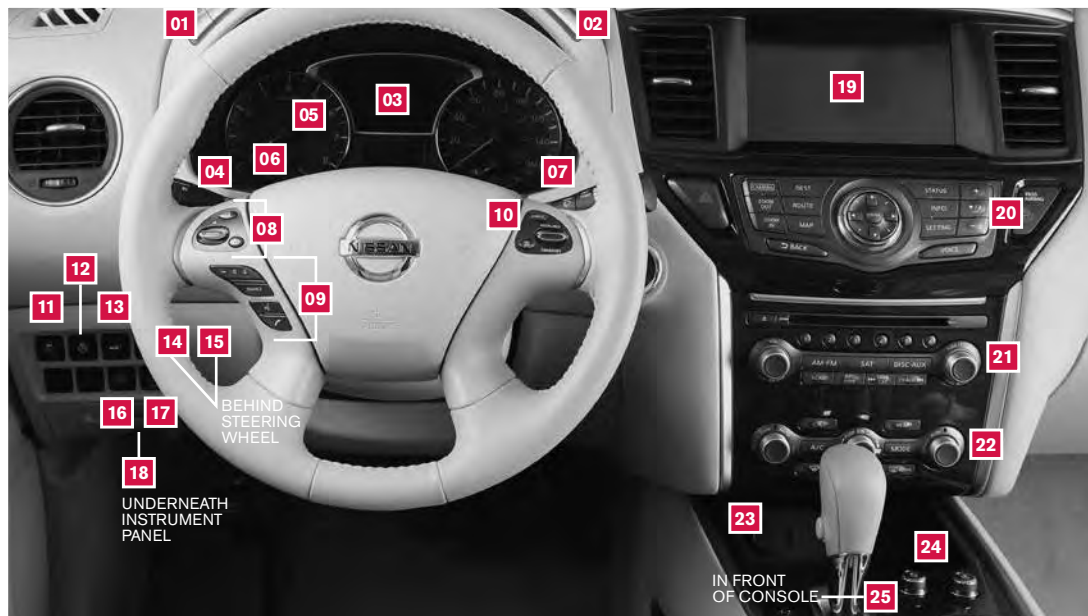

- | | | | |
|--|--|---|---|
| 01 INSTRUMENT BRIGHTNESS CONTROL* | 08 VEHICLE INFORMATION DISPLAY SWITCH | 14 POWER LIFTGATE MAIN SWITCH | 21 AUDIO SYSTEM |
| 02 TWIN TRIP ODOMETER RESET SWITCH* | 09 STEERING WHEEL SWITCHES FOR AUDIO*/BLUETOOTH/NAVIGATION* | 15 TILT/TELESCOPIC STEERING COLUMN* | 22 AUTOMATIC CLIMATE CONTROLS |
| 03 VEHICLE INFORMATION DISPLAY | 10 CRUISE CONTROL | 16 TOW MODE SWITCH | 23 POWER OUTLET |
| 04 HEADLIGHT AND TURN SIGNAL CONTROL | 11 VEHICLE DYNAMIC CONTROL (VDC) SYSTEM OFF SWITCH* | 17 POWER INVERTER SWITCH | 24 CLIMATE CONTROL/HEATED SEAT SWITCHES* |
| 05 LOW TIRE PRESSURE WARNING LIGHT | 12 HEATED STEERING WHEEL SWITCH* | 18 HOOD RELEASE* | 25 4WD-i CONTROL KNOB* |
| 06 EV INDICATOR LIGHT | 13 POWER LIFTGATE SWITCH | 19 CONTROL PANEL DISPLAY SCREEN* | |
| 07 WINDSHIELD WIPER AND WASHER SWITCH | | 20 FRONT PASSENGER AIR BAG STATUS LIGHT* | |

*See your Owner's Manual for information.

NEW SYSTEM FEATURES

Approaching Vehicle Sound for Pedestrians (VSP) System.	2
Around View® Monitor System with Camera Aided Sonar (parking sensor) (if so equipped).	2

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS) with Easy Fill Tire Alert.	4
Hybrid System Warning Light	5
Hybrid Awareness.	5
Loose Fuel Cap.	5
Fuel-filler Door.	5
Clock Set/Adjustment.	6

FIRST DRIVE FEATURES

NISSAN Intelligent Key® System (if so equipped).	7
Power Liftgate (if so equipped)	8
Front Power Seat Adjustments (if so equipped)	9
2 ND Row Seats.	9
3 RD Row Seats.	10
Automatic Drive Positioner (if so equipped).	10
Outside Mirror Control Switch.	11
Assist Charge Gauge	11
Starting/Stopping the Hybrid System.	11
Headlight Control Switch	12
Windshield Wiper and Washer Switch.	13
Automatic Climate Controls.	13
Rear Climate Controls	15
FM/AM/SiriusXM Satellite Radio with CD/DVD Player (if so equipped).	15
USB/iPod® Interface.	16
Cruise Control.	17
Power Outlets (if so equipped)	17

SYSTEM GUIDE

Vehicle Information Display.	19
Bluetooth® Hands-free Phone System (if so equipped)	20
System Operating Tips	20
Bluetooth® System with Navigation (if so equipped).	21
Bluetooth® System without Navigation (if so equipped).	23
Navigation System (if so equipped)	24
Dual Head Restraint DVD System (if so equipped).	25
HomeLink® Universal Transceiver (if so equipped)	26



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"**, **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** and **"Starting and driving (section 5)"** of your Owner's Manual.



To view detailed instructional videos, go to
www.nissanownersinfo.mobi/2014/pathfinder
 or snap this barcode with an appropriate barcode reader.



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at **www.nissanusa.com**.

NEW SYSTEM FEATURES

APPROACHING VEHICLE SOUND FOR PEDESTRIANS (VSP) SYSTEM

- The VSP system helps alert pedestrians to the presence of the vehicle when it is being driven at a low speed.
- When the vehicle starts to move, it produces a sound. The sound stops when the vehicle speed reaches approximately 19 MPH (30 km/h) while accelerating.

For more information, refer to the **"HEV overview (section HEV)"** of your Owner's Manual.

AROUND VIEW® MONITOR SYSTEM WITH CAMERA AIDED SONAR (parking sensor) (if so equipped)

- With the ignition switch in the **ON** position, the Around View® Monitor is activated by pressing the **CAMERA** button **01** located on the control panel, or by moving the shift lever to the **R (REVERSE)** position. The control panel displays various views of the position of the vehicle.
- When the shift lever is in the **P (PARK)**, **N (NEUTRAL)** or **D (DRIVE)** position and the **CAMERA** button **01** is pressed, the front view and bird's eye view screen is displayed.
- When **CAMERA** button **01** is pressed again the front view and front-side view screen is displayed.
- When the shift lever is in the **R (REVERSE)** position the rear view and bird's-eye view screen will be displayed.
- When the **CAMERA** button **01** is pressed, the rear view and front-side view screen will be displayed.
- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m)
- There are some areas where the system will not show objects.
 - When in the front or the rear view display, an object below the bumper or on the ground may not be viewed **02**.
 - When in the bird's-eye view, a tall object near the seam of the camera viewing areas **03** will not appear in the monitor.



FRONT VIEW & BIRD'S EYE VIEW



FRONT VIEW & FRONT-SIDE VIEW



REAR VIEW & BIRD'S EYE VIEW



REAR VIEW & FRONT-SIDE VIEW



 
- The distance between objects viewed on the Around View® Monitor System differs from the actual distance.
- Objects in the bird's-eye view will appear further than the actual distance.



02

CAMERA AIDED SONAR (parking sensor)

- If the Camera Aided Sonar (parking sensor) detects objects toward the rear of the vehicle while in **R (REVERSE)**, a beep will sound until the object is within 3 ft. Then, a continuous audible sound is heard.
- Either in bird's-eye view or front-side view a red, yellow, or green field will be displayed dependent on how far the object is from the rear of the vehicle, and where the object is detected.
- To temporarily disable the sonar (parking sensor), follow this procedure.
 1. Start with the vehicle in the **P (PARK)** position.
 2. Move the shift lever to the **R (REVERSE)** position.
 3. On the vehicle information display you will be prompted to turn off the sonar (parking sensor) by pressing the  button **04**.
 - When the sonar (parking sensor) is disabled, in the bird's-eye view you will temporarily see a flashing grey sonar icon and red brackets on the corners of the vehicle that will stay until the system is re-enabled.
- The Sonar system will be restored when you move the shift lever out of **R (REVERSE)**, and then back into **R (REVERSE)**.

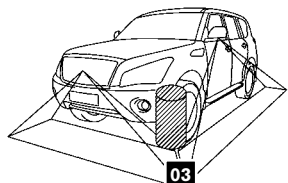

03



04

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**", of your Owner's Manual.

ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS) with Easy Fill Tire Alert

- A **Tire Pressure Low – Add Air** warning message will appear in the vehicle information display **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.



- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.

- When adding air to an under-inflated tire, the TPMS with Easy Fill Tire Alert provides visual and audible signals to help you inflate the tires to the recommended COLD tire pressure.



To use the Easy Fill Tire Alert:

1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
 2. Place the ignition switch in the **ON** position. Do not start the engine.
 3. Add air to the under-inflated tire and within a few seconds, the hazard warning lights will start flashing.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning lights will stop flashing.
 5. Repeat this procedure for any additional under-inflated tires.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25 km/h). The **Tire Pressure Low – Add Air** warning message and low tire pressure warning light will disappear.
 - When the low tire pressure warning light flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
 - Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - The Tire and Loading Information label contains valuable information. Please refer to section 9, "Technical and consumer information" in your Owner's Manual for the location of the Tire and Loading Information label.

For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**" and the "**Maintenance and do-it-yourself (section 8)**" of your Owner's Manual.

HYBRID SYSTEM WARNING LIGHT

- This light will illuminate when the ignition switch is in the **ON** position and will turn off when the hybrid system is started.
- The light will also illuminate when a malfunction occurs in the electric motor or hybrid system.
- When this light illuminates while driving, immediately stop the vehicle in a safe location and contact a NISSAN dealer.
- If the hybrid system warning light blinks while driving, it may indicate that the Li-ion battery charge is low and you cannot continue to drive.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.



HYBRID AWARENESS

- Your vehicle is virtually silent in the electric mode. If you exit your vehicle while it is **ON**, but the engine is not running, the engine will automatically start, informing you that the car is still **ON**.
- Do not store your NISSAN Intelligent Key™ within detection range of the vehicle. This may cause welcome lights and other functions to activate creating unwanted battery drain.
- The hybrid system is designed for optimum efficiency and performance. Activation of the electric mode may vary with driving conditions and driver input. A full battery display does not indicate the vehicle should be in the electric mode..

For more information, refer to the **"Hybrid System Overview"** section of your Owner's Manual.

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will appear in the vehicle information display **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset  button **02** is pressed for about 1 second.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.

For more information, refer to the **"Instruments and controls (section 2)"** and the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.



FUEL-FILLER DOOR

The fuel-filler door is located on the driver's side of the vehicle.

- The fuel-filler door automatically locks or unlocks when the driver's door is locked or unlocked.
- To open the fuel-filler door after unlocking, push the right side of the fuel-filler door.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.



To view detailed instructional videos regarding these and other features, please go to **www.nissanownersinfo.mobi**.

ESSENTIAL INFORMATION

CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:

1. Press the **SETTING** button on the control panel.
2. Touch the **Others** key.
3. Touch the **Clock** key.

- The following settings can be adjusted:

- **On-screen Clock:** The clock in the upper right corner of the display can be turned ON or OFF.
- **Clock Format (24h):** The clock can be set to 12 hours or 24 hours.
- **Offset (hour):** The time can be adjusted by increasing or decreasing per hour.
- **Offset (min):** The time can be adjusted by increasing or decreasing per minute.
- **Daylight Savings Time:** The application of daylight savings time can be turned ON or OFF.
- **Time Zone:** Adjust the time zone. Choose a time zone from the available list.

- Press the **BACK** button to return to the previous screen.



For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.

FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM (if so equipped)

The NISSAN Intelligent Key® system allows you to lock or unlock your vehicle, open your liftgate and remotely start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).



REMOTE ENGINE START* (if so equipped)

- The remote start operating range is approximately 200 ft (60 m) from the vehicle. The effective operating range may be shorter if there are walls or other obstructions between the key and the vehicle.
- For remote start to function the car must be in **P (PARK)** with the ignition off and all doors must be closed and locked. Please see your Owner's Manual for additional information.
- To start your vehicle remotely:
 1. Press the  button **01**.
 2. Within 5 seconds press and hold the engine start  button **02** for at least 2 seconds.
- The engine will start and the parking lights will turn on.
- Automatic climate control will begin heating or cooling the vehicle depending on the last used mode.
- The engine will run for 10 minutes and then turn off.
- Repeat steps 1 and 2 to extend the time for an additional 10 minute period.
 - After two remote starts the ignition switch must be cycled before remote start can be used again.
- To start driving, depress the brake pedal and push the ignition switch **START/STOP** button.

LOCKING AND UNLOCKING THE VEHICLE

- The lock and unlock operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **03** once or press the  button **01** on the Intelligent Key.



- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **03** once; the corresponding door will unlock. Push the door handle request switch again within 30 seconds; all other doors will unlock, or
 - Press the  button **04** on the Intelligent Key to unlock the driver's side door. Press the  button **04** again; all other doors will unlock.

LIFTGATE RELEASE

- To open the rear liftgate, press the  button **05** for longer than 1 second.
- To close the rear liftgate, press the  button **05** again for longer than 1 second.

FIRST DRIVE FEATURES

PANIC ALARM

- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **06** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.



INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged, or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Move the shift lever to the **P (PARK)** position.
 2. Firmly apply the foot brake.
 3. Touch the ignition switch with the Intelligent Key and a chime will sound.
 4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.

*Laws in some communities may restrict the use of remote starters. Check local regulations before using this feature.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**”, the “**Starting and driving (section 5)**” and the “**Maintenance and do-it-yourself (section 8)**” of your Owner’s Manual.

POWER LIFTGATE (if so equipped)

- When the liftgate is closed and locked, the liftgate will open automatically by:
 - Pushing the power liftgate switch **01** on the instrument panel.
 - Pushing the liftgate opener switch **02**, the liftgate must be unlocked, or you must have the Intelligent Key with you (in your pocket or purse).
 - Pressing the  button **03** on the NISSAN Intelligent Key® for more than 1 second.
- The power liftgate operation can be turned on or off by the power liftgate main switch **04** on the instrument panel.
 - When the power liftgate main switch **04** is pushed to the **OFF** position, power operation is not available using the power liftgate switch on the liftgate **05** or the liftgate opener switch **02**.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

FRONT POWER SEAT ADJUSTMENTS (if so equipped)

- To slide the seat forward or backward, push the control switch **01** forward or backward.
- To recline the seatback, push the switch **02** forward or backward.



SEAT LIFTER

- To raise or lower the front portion or height of the seat, push the front or back end of the switch **01** up or down

POWER LUMBAR SUPPORT (if so equipped for driver's seat)

- To adjust the seat lumbar support, push the front or back end of the switch **03**.

For more information, refer to the **"Safety—seats, seat belts and supplemental restraint system (section 1)"** of your Owner's Manual.

2ND ROW SEATS

- To slide the seat forward or backward, pull the center of the bar **01** up and hold it while you slide the seat forward or backward to the desired position. Release the bar to lock the seat in position.
- To recline the seatback, pull up on the recline handle **02** and lean back. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.



CHILD SEAT ACCESS MODE

- This feature is not available on the driver's side of the 2nd row seat.
- If a child safety seat is installed on the passenger's side of the 2nd row seat, the 3rd row can be accessed without removing the child safety seat.
- To access the 3rd row from outside the vehicle, lift up on the seatback release lever **03** and move the seat toward the front of the vehicle.

MULTI-MODE

- To enter the 3rd row from outside the vehicle, lift up fully on the seatback release lever **03**. This will release the back of the seat and fold up the seat cushion.
- For access to the rear seat, slide the entire seat forward by pushing on the upper seatback area.
- To return the seat to a locked position, push the upper seatback rearward until the seatback and track are locked. Push the seat cushion down. Locking the seatback will also lock the track.

For more information, refer to the **"Safety—Seats, seat belts and supplemental restraint system (section 1)"** of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FIRST DRIVE FEATURES

3RD ROW SEATS

- To recline the seatback, pull up on the latch **01** located on the outside corner of each seatback. Lean back until the desired angle is obtained.
- To bring the seatback forward again, pull up on the latch **01** and move your body forward. The seatback will move forward.



For more information, refer to the “**Safety—seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

AUTOMATIC DRIVE POSITIONER (if so equipped)

- Two positions for the driver’s seat, steering column and outside mirrors can be stored in the automatic drive positioner **01** memory.
- Follow these procedures to set the memory positions:
 - Confirm the shift lever is in the **P (PARK)** position.
 - Push the ignition switch to the **ON** position.
 - Adjust the driver’s seat, steering column and outside mirrors to the desired positions using the adjusting switches for each feature.
 - Push the **SET** switch and within 5 seconds, push the memory switch (**1** or **2**) for at least 1 second.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds, and a chime will sound (if so equipped) when memory is stored correctly.
 - The driver’s seat, steering column and outside mirror positions are now set to your preference.
- These memorized positions can also be linked to your NISSAN Intelligent Key®.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, move the control switch **01** right or left.
- Adjust each mirror to the desired position using the switch **02**.



REVERSE TILT-DOWN FEATURE (if so equipped)

- The reverse tilt-down feature will turn the selected outside mirror surface downward to provide better rear visibility close to the vehicle.
 1. Set the parking brake.
 2. Push the ignition switch to the **ON** position.
 3. Move the shift lever to the **R (REVERSE)** position.
 4. Choose the right or left outside mirror by operating the outside mirror control switch **01**.
 5. The outside mirror surfaces move downward.
- The outside mirror surfaces will return to their original positions when one of the following conditions has occurred:
 - The shift lever is moved to any position other than **R (REVERSE)**.
 - The outside mirror control switch is set to the center (neutral) position.
 - The ignition switch is placed in the **OFF** position.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

ASSIST CHARGE GAUGE

- This shows the power consumed **02**, or generated **01** by the electric motor.

For more information, refer to the “**Hybrid System Overview**” section and the “**Instruments and controls (section 2)**” of your Owner’s Manual.



STARTING/STOPPING THE HYBRID SYSTEM

- It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Press the ignition switch **START/STOP** button to start the hybrid system.
- The ready to drive indicator light **01** will illuminate in the meter and you may begin driving the vehicle.



TURNING THE HYBRID SYSTEM OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Press the ignition switch **START/STOP** button to turn the hybrid system off.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

FIRST DRIVE FEATURES

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **01** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **02** to turn on the headlights.



AUTOLIGHT SYSTEM (if so equipped)

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then push the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  position **01** or  position **02**.



HIGH BEAM SELECT

- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.

FOG LIGHT SWITCH

- The headlights must be on and the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **06** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

LANE CHANGE SIGNAL

 
 
- To signal a lane change, move the lever up or down to the point where the indicator light begins to flash, but the lever does not latch.
- The turn signal will flash 3 times automatically.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

WINDSHIELD WIPER AND WASHER SWITCH

- Move the lever to the following positions to operate the windshield wipers:

- 01** Mist (**MIST**) – One sweep operation of the front wipers.
- 02** Intermittent (**INT**) – Operates the speed-sensing front wipers intermittently. The intermittent speed can be adjusted by twisting the time control ring **03** to increase or decrease wiper speed.
- 04** Low (**LO**) – Front wipers operate at a continuous low speed.
- 05** High (**HI**) – Front wipers operate at a continuous high speed.
- 06** Pull the lever toward you to activate the front washer. The front wipers will operate several times.

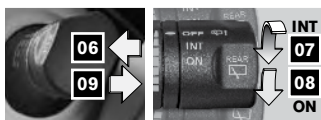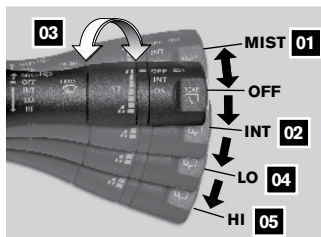

REAR WINDSHIELD WIPER AND WASHER

- 07** Intermittent (**INT**) – Rear wiper operates intermittently.
- 08** Low (**ON**) – rear wiper operates at a continuous low speed.
- 09** Push the lever forward to activate the rear washer. The rear wiper will operate several times.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



AUTOMATIC CLIMATE CONTROLS

01 AUTO BUTTON/DRIVER’S SIDE TEMPERATURE CONTROL DIAL

- The auto mode may be used year-round. Push the **AUTO** button to turn the system on and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver’s side temperature control dial to the left for cooler air or right for warmer air.

02 DUAL BUTTON/PASSENGER’S SIDE TEMPERATURE CONTROL DIAL

- Push the **DUAL** button to turn the passenger’s side temperature controls on or off. This will allow the passenger’s side temperature to be adjusted independently from the driver’s side by turning the passenger’s side temperature control dial.
- Turn the passenger’s side temperature control dial left for cooler air or right for warmer air.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FIRST DRIVE FEATURES

03 ON-OFF/FAN SPEED CONTROL DIAL

- Turn the fan speed control dial left to decrease fan speed or right to increase fan speed.
- Push the button to turn the system on or off.

04 MODE BUTTON

- Push the **MODE** button to cycle through the following air flow outlets:

- Air flows from the center and side vents.
- Air flows from the center, side and foot vents.
- Air flows mainly from the foot vents.
- Air flows from the defroster and foot vents.

05 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate interior air inside the vehicle. The indicator light on the button will come on. This system is used to avoid certain outside odors and helps to adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defrosting mode  or the front defrosting and foot vent mode .

06 REAR AIR CONDITIONER

- To control the rear automatic air conditioning system with the front air conditioner control panel, press the **REAR** button.
- When the rear automatic air conditioning system is on, the indicator light on the **REAR** button will illuminate and the front display will switch to the **Rear Air-conditioning** screen. Use the driver temperature and fan speed buttons to adjust settings.
- To adjust the front air conditioning system, press the **REAR** button again.
- To turn off the rear automatic air conditioning system from the front controls, press the **REAR** button until the Rear Air-conditioning screen is displayed. Then, press the **ON-OFF/FAN SPEED CONTROL DIAL** **03**.
- The rear passenger controls are unavailable when the **Rear Air-conditioning** screen is shown on the front display.



07 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the defroster control button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Turn the temperature control dial **01** to set the desired temperature.
- To defrost the front and side windows, set the temperature control **01** and fan speed control **03** to their maximum settings.

08 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Press the rear window defroster switch  **REAR** to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

09 A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

REAR CLIMATE CONTROLS

- To activate the system:

1. Press the **REAR** button **01** on the front control panel until the **Rear Air-conditioning** screen is displayed.
 - The indicator light will illuminate.
 - The Fan Speed, Temperature, **AUTO**, and **OFF** buttons will now control the Rear Air-conditioning system.
2. Press the **REAR** button **01** again, and the screen will return to what was previously displayed.
 - The Indicator light will stay illuminated to indicate that the Rear Air-conditioning system is active.

 
- **OFF** button **02** – Turns off the rear climate control system, and the **REAR** button indicator light.

- Fan speed control buttons **03** – Press **+** or **-** to increase or decrease fan speed.

- Temperature increase and decrease buttons **04** – Adjusts the rear temperature up ▲ or down ▼.

- **AUTO** button **05** – System automatically works to keep air flow and fan speed at a constant temperature.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

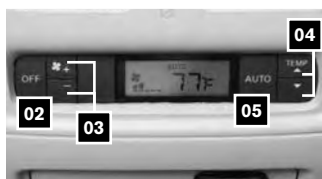

FM/AM/SiriusXM SATELLITE RADIO WITH CD/DVD PLAYER (if so equipped)

01 VOL/ON-OFF CONTROL KNOB

- Press the **VOL/ON-OFF** control knob to turn the system on or off. Turn the knob right or left to increase or decrease the volume.

FIRST DRIVE FEATURES

02 SEEK/CAT AND TRACK BUTTONS

- To scan quickly and stop at the previous or next broadcast station, press the **◀◀ SEEK-CAT** button or the **TRACK ▶▶** button.
- For SiriusXM Satellite Radio, to switch to the previous or next category, press the **◀◀ SEEK-CAT** button or the **TRACK ▶▶** button.
- To change tracks on a CD, press the **◀◀ SEEK-CAT** button or the **TRACK ▶▶** button.
- To rewind or fast forward a track on a CD, press and hold the **◀◀ SEEK-CAT** button or the **TRACK ▶▶** button.

03 TUNE/FOLDER/AUDIO CONTROL KNOB

- To manually tune the radio, turn the **TUNE/FOLDER/AUDIO** knob left or right.

04 STATION SELECT BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for the SiriusXM Satellite Radio.
- To store a station in a preset, you must first select a radio band by pressing the **AM-FM 05** or **SAT 06** button, then tune to the desired AM, FM or SiriusXM Satellite Radio station.
- Then press and hold the desired station preset button **(1-6)** until the preset number is updated on the display and the sound is briefly muted. The channel indicator will then display and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button **(1-6)**.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

USB/iPOD® INTERFACE

- The USB jack **01** is located in the center console under the armrest.
- When a compatible USB memory device or iPod® is plugged into the USB jack **01**, compatible audio and video files stored on the device can be played through the vehicle’s audio system and front display.



For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 MPH (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON-OFF** switch **01**. **CRUISE** will be displayed in the vehicle information display.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. The **SET** indicator light in the vehicle information display will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **04**.
- To turn off cruise control, push the **ON/OFF** switch **01**. Both the **CRUISE** indicator light and the **SET** indicator light in the vehicle information display will turn off.

 


For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

POWER OUTLETS (if so equipped)

12V OUTLETS

- The power outlets are for powering electrical accessories such as cellular telephones. They are rated at 12 volt, 120W (10A) maximum.
- To use a power outlet, open the cap.
- The power outlets on the instrument panel **01** and inside the center console **02** are powered only when the ignition switch is in the **ACC** or **ON** position.
- The power outlet in the cargo area **03** is powered all the time.

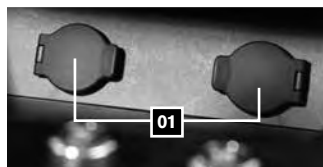


FIRST DRIVE FEATURES

120V OUTLET (if so equipped)

- The 120V outlet **04** is located on the back of the center console.
- To use the outlets for devices that require 120V power, place the ignition in the **ON** position and push the power inverter switch **05**.
- The switch will illuminate when enabled.

 For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

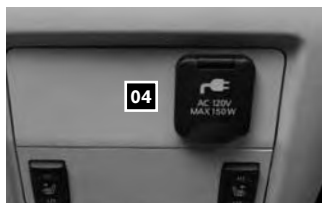

SYSTEM GUIDE

VEHICLE INFORMATION DISPLAY

The vehicle information display **01** displays such items as:

- Vehicle settings
- Trip computer information
- Energy flow meter
- Drive system warnings and settings (if so equipped)
- Cruise control system
- Intelligent Key operation information
- Indicators and warnings
- Tire pressure information
- 4X4 information (if so equipped)



USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display modes can be changed using the **02** button and the **ENTER** button **03** located on the steering wheel.

- Press the **02** button to enter the vehicle information menu items.
- Press the **04** button to navigate through the items in vehicle information.
- Press the **ENTER** button **03** to change or select an item in the vehicle information display.
- Press the **05** button to go back to the previous menu.

RESETTING THE TRIP COMPUTER

1. Press the **02** button until you reach the trip computer mode **06**.
2. Press the **02** button again for more than 1.5 seconds to reset average fuel consumption, average speed, distance to empty and journey time.



SETTINGS

The setting mode allows you to change the information displayed in the vehicle information display:

- Driver assistance (if so equipped)
- Main menu selection
- Body color
- Maintenance
- Alarms
- Vehicle settings
- Language
- Unit
- Welcome effect

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

 
SYSTEM GUIDE

BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

- Press the  or  button to interrupt the voice prompts at any time and speak a command after the tone.
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from ceiling.
- Speak naturally without long pauses and without raising your voice.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To cancel a voice recognition session, simply wait 5 seconds, say "Cancel" or "Quit", or press and hold the  or  button.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. See your Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone Owner's Manual and visit **www.nissanusa.com/bluetooth**.

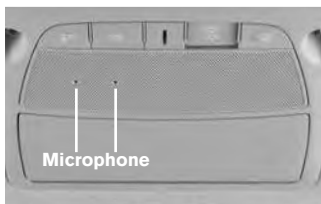

*Some jurisdictions prohibit the use of cellular telephones while driving.

BLUETOOTH® SYSTEM WITH NAVIGATION (if so equipped)

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the phone.



 
 
1. Press the **SETTING** button on the control panel and select the "Bluetooth" key on the display.
2. Select the 'Connect Bluetooth' key.
3. A popup box will appear on the screen, prompting you to confirm that the connection is for the phone system. Select the "Yes" key.
4. Initiate connecting from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.nissanusa.com/bluetooth.
 - When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)
5. When connecting is complete, the screen will return to the Bluetooth® setting screen.



SYSTEM GUIDE

PHONEBOOK

- Depending on your cell phone, the system may automatically download your cell phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, the vehicle phonebook may be set for up to 40 entries.
- To manually download entries:
 1. Press the  button on the steering wheel and select the "Vehicle Phonebook" key.
 2. Select the "Add New" key at the top of the display. There are different methods to input a phone number. Select one of the following options:
- "Copy from Call History" to save a number from the Outgoing, Incoming or Missed Calls lists.
- "Copy from the handset" to save a number that has been downloaded from your handset to the vehicle.
- "Enter Number by Keypad" to input the number and name manually.

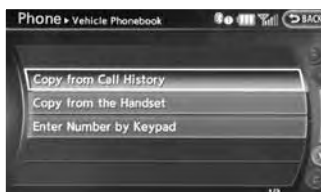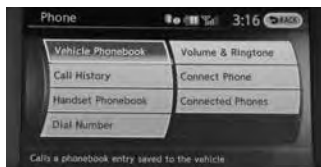

MAKING A CALL

 
To make a call, follow this procedure:

1. Press the  button on the steering wheel. The "Phone" menu will appear on the control panel display.
2. Select the "Vehicle Phonebook", "Call History", "Handset Phonebook", or "Dial Number" key.
3. Select the desired entry from the list.
4. Dialing begins when the entry is selected or when the "OK" key is selected.



RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel or touch the "Answer" key.
- To reject the call, touch the "Reject Call" key or press and hold the  button on the steering wheel.
- To hang up, press the  button on the steering wheel or touch the "Hang Up" key.

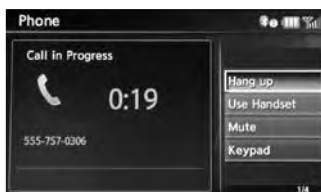

BLUETOOTH® SYSTEM WITHOUT NAVIGATION (if so equipped)

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the phone.
- 1. Press the  button on the steering wheel. The system announces the available commands.
- 2. Say: "Connect phone". The system acknowledges the command and announces the next set of available commands.
- 3. Say: "Add phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.
- 4. Initiate connecting from the phone:
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and compatible phones, please visit www.nissanusa.com/bluetooth.
 - When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)
- 5. Say the name for the phone when the system asks you to provide one. You can give the phone a name of your choice.



PHONEBOOK

- The phonebook stores up to 1,000 names for each phone paired with the system.
- Depending on your cell phone, the system may automatically download your cell phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, 40 entries can be individually downloaded.
- To manually download entries:
 1. Press the  button on the steering wheel.
 2. After the tone, say "Phonebook".
 3. After the next tone say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.
 - The transfer procedure varies according to each cellular phone. See your cellular phone's Owner's Manual for details. You can also visit www.nissanusa.com/bluetooth for instruction on transferring phone numbers from NISSAN recommended cellular phones.
 4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, choose "Store".
 5. The system confirms the name, location and number.

SYSTEM GUIDE

MAKING A CALL FROM THE PHONEBOOK

- In some cases, names stored in all UPPERCASE letters may not be recognized by the voice recognition system.
- 1. Press the  button on the steering wheel.
- 2. After waiting for the tone, say "Call".
- 3. After the next tone, speak the name of a phonebook entry. For example, "Michael Smith".
- 4. Confirm the correct name is recognized by saying "Dial" after the tone.

MAKING A CALL BY PHONE NUMBER

- 1. Press the  button on the steering wheel. A tone will sound.
- 2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
- 3. Say: "Phone Number". The system acknowledges the command and announces the next set of available commands.
- 4. Say the number you wish to call, starting with the area code in single digit format.
- 5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
- 6. Say: "Dial". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- When you receive a phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button on the steering wheel.
- To hang up the phone at the end of a call or to disconnect during call placement, press the  button on the steering wheel.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

NAVIGATION SYSTEM (if so equipped)

- 01** Touch screen display
- 02** Destination (**DEST**)
 - Press to enter a destination.
- 03** Multi-function controller - Turn to highlight an item on the screen, and press **ENTER** to select the highlighted item. On the map screen, turn to adjust the map scale. To scroll the map, push the controller in the direction you want to scroll.
- 04** **STATUS** – Press multiple times to display audio information, the air conditioner status, fuel economy or navigation directions.



 
To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- 05 ROUTE** – Press to access the guidance control functions such as guidance cancellation, route priority, waypoint setting on the route.
- 06 Information (INFO)** – Press to display the vehicle, traffic (if so equipped), weather (if so equipped) or voice recognition information.
- 07  OFF** – Press to switch between the day screen (bright) and the night screen (dark). Press and hold the button to turn the display off. Press again to turn the display on.
- 08 ZOOM IN, ZOOM OUT** - Press to adjust the map scale.
- 09 MAP** – Press to display the map. While following a programmed route, press multiple times to change the type of route information.
- 10 SETTING** – Press to access the system settings.
- 11 BACK** – Press to return to the previous screen. In a settings screen, this button can also be used to apply the setting. In a character input screen, this button can also delete the characters that have been entered.
- 12 VOICE** – Press to hear the current voice guidance for a programmed route.

For more information, please refer to your **Navigation System Owner's Manual**.


DUAL HEAD RESTRAINT DVD SYSTEM (if so equipped)

- With this Dual Head Restraint DVD System, you can play video files via a DVD or CD providing images and sound both from the front and rear display screens.
- You can also connect auxiliary devices such as video games, camcorders or portable video players to the auxiliary jacks **01** located on the back of the center console. (Your device will be controlled through its own control panel.)
- Rear Auxiliary Mode allows rear seat passengers to independently display different sources on each screen.
- Use the remote controller **02**, provided with the system, to operate the rear display screens.
- Use the headphones **03**, also provided with the system, to listen to audio wirelessly and independently. You may also connect your own wired-headphones to the headphone jacks **04** located on the back of the center console.

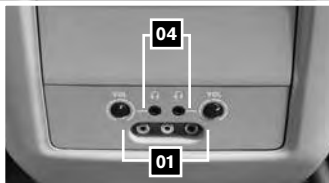

SYSTEM GUIDE

 - For optimum performance, select the appropriate headphone channel **05** that corresponds to the headrest display being viewed directly in front of you.
- To watch or control videos on the front display make sure the vehicle is in the **P (PARK)** position and the parking brake is applied.
- To reduce driver distraction, the wireless headphones will not operate while located in the front seats and movies will not be shown on the front display while the vehicle is in any drive position.
- To access standard DVD controls on the front display while playing a DVD on the rear display, press the **DISC-AUX** button on the audio control panel while the vehicle is in the **P (Park)** position and the parking brake is applied.

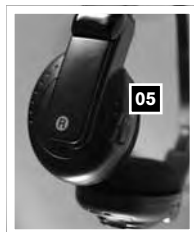

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink system can learn and consolidate the functions of up to 3 different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programing is complete, press and hold the HomeLink and observe the indicator light:
 - A solid continuous light indicates the programing is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink, press and release the “learn” or “smart” button (the name may vary by manufacturer but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed HomeLink button for 2 seconds and release.
- Repeat the previous 2 steps up to 3 times to complete the programming process. HomeLink should now activate your device.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

MEMO

MEMO

MEMO

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at any time, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your NISSAN dealer or contact Nissan North America, Inc.



To view detailed instructional videos,
go to **www.nissanownersinfo.mobi/2014/pathfinder**
or snap this barcode with an appropriate barcode reader.

