 


2014 SENTRA

QUICK REFERENCE GUIDE



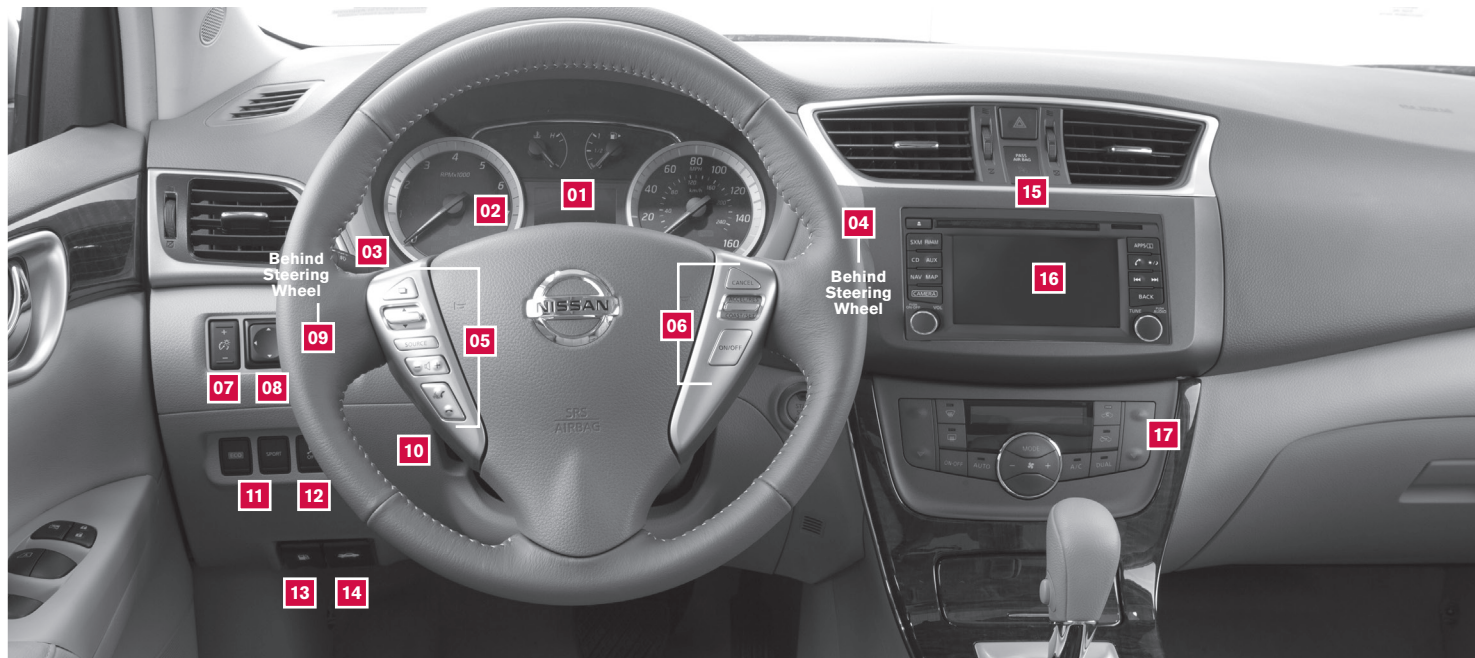

- | | | | |
|---|---|---|---|
| 01 TRIP COMPUTER | 05 TRIP COMPUTER MENU/
STEERING WHEEL SWITCHES
FOR AUDIO*/BLUETOOTH® | 09 TRUNK LID RELEASE SWITCH | 14 HOOD RELEASE* |
| 02 LOW TIRE PRESSURE WARNING LIGHT | 06 CRUISE CONTROL | 10 TILT/TELESCOPIC STEERING COLUMN* | 15 FRONT PASSENGER AIR BAG
STATUS LIGHT |
| 03 HEADLIGHT AND TURN SIGNAL CONTROL | 07 INSTRUMENT BRIGHTNESS CONTROL* | 11 DRIVE MODES (ECO and SPORT) | 16 AUDIO AND NAVIGATION SYSTEM |
| 04 WINDSHIELD WIPER AND
WASHER SWITCH | 08 OUTSIDE MIRROR CONTROL SWITCH | 12 VEHICLE DYNAMIC CONTROL (VDC)
OFF SWITCH | 17 CLIMATE CONTROLS |
| | | 13 FUEL-FILLER DOOR RELEASE | |

*See your Owner's Manual for information.

NEW SYSTEM FEATURES

Drive Modes	2
RearView Monitor (if so equipped).	2

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS) with Easy Fill Tire Alert (if so equipped).	3
Loose Fuel Cap	4
Fuel-filler Door	4
Clock Set/Adjustment	5

FIRST DRIVE FEATURES

NISSAN Intelligent Key® System (if so equipped)	6
Trunk Lid Release Switch	6
Seat Adjustments	7
Outside Mirror Control Switch	7
Starting/Stopping the Engine	7
Headlight Control Switch	8
Windshield Wiper and Washer Switch	9
Automatic Climate Controls (if so equipped)	10
FM/AM/SiriusXM® Satellite Radio with CD Player (if so equipped).	11
USB/Aux Jack and iPod® Interface (if so equipped)	12
Cruise Control (if so equipped)	13

SYSTEM GUIDE

Trip Computer	14
Bluetooth® Hands-free Phone System (if so equipped)	14
System Operating Tips	14
Bluetooth® System Without Navigation (if so equipped).	15
Bluetooth® System With Navigation (if so equipped)	17
Navigation System (if so equipped)	19



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"**, the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** and the **"Starting and driving (section 5)"** of your Owner's Manual.



To view detailed instructional videos, go to
www.nissanownersinfo.mobi/2014/sentra
 or snap this barcode with an appropriate barcode reader.



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.nissanusa.com.

NEW SYSTEM FEATURES

DRIVE MODES

NORMAL

- Normal drive mode is recommended for normal, everyday driving and is the default mode of your vehicle.

ECO

- ECO drive mode is recommended to help maximize fuel economy. Performance may be reduced.
 - Press the **ECO** button **01** on the instrument panel to activate.
 - The **ECO** drive indicator light illuminates on the instrument panel.

SPORT

- SPORT drive mode is recommended for an enhanced performance feel. Fuel economy may be reduced.
 - Press the **SPORT** button **02** on the instrument panel to activate.
 - The **SPORT** drive indicator light illuminates on the instrument panel.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.



REARVIEW MONITOR (if so equipped)

- When the shift lever is shifted into the **R (REVERSE)** position, the monitor display shows a rearward view from the vehicle.
- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).



For more information, refer to the “**Display screen, heater, air conditioner, audio and phone systems (section 4)**” of your Owner’s Manual.

ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY FILL TIRE ALERT (if so equipped)

- A **CHECK TIRE PRES** warning message will appear in the trip computer **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.
 - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25 km/h). The **CHECK TIRE PRES** warning message and low tire pressure warning light will disappear.
- When adding air to an under-inflated tire, the TPMS with Easy Fill Tire Alert provides visual and audible signals to help you inflate the tires to the recommended COLD tire pressure.
- To use the Easy Fill Tire Alert system (if so equipped):
 1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
 2. Place the ignition switch in the **ON** position. Do not start the engine.
 3. Add air to the under-inflated tire, and within a few seconds the hazard warning lights will start flashing.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning lights will stop flashing.
 5. Repeat this procedure for any additional under-inflated tires.
- When the low tire pressure warning light flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressures (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to section 9, "Technical and consumer information", in your Owner's Manual for the location of the Tire and Loading Information label.



For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Maintenance and do-it-yourself (section 8)" of your Owner's Manual.

ESSENTIAL INFORMATION

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will display in the trip computer **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the  button **02** on the steering wheel is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light  may also illuminate.



For more information, refer to the **“Instruments and controls (section 2)”** and the **“Pre-driving checks and adjustments (section 3)”** of your Owner's Manual.

FUEL-FILLER DOOR

- The fuel-filler door release is located to the left of the steering wheel below the instrument panel.
- To open the fuel-filler door, pull the release **01**.
- The fuel-filler door is located on the right, rear side of the vehicle.

For more information, refer to the **“Pre-driving checks and adjustments (section 3)”** of your Owner's Manual.



CLOCK SET/ADJUSTMENT

 
- To adjust the time and the appearance of the clock on the display:

1. Press the **APPS**  button **01**.
2. Touch the "Settings" key.
3. Touch the "System" key.
4. Touch the "Clock" key.

- The following settings can be adjusted:

- **Time Format:** The clock can be set to 12 hours or 24 hours.
- **Date Format:** The date can be changed to one of 5 different formats.
- **Clock Mode:** From here the clock mode options are:
 - **Manual:** Allows for the option "Set Clock Manually". Touch this to begin setting the clock manually using the "+" or "-" to adjust the hours, minutes, day, and month up or down.
 - **Time Zone:** Touch the "Time Zone" key **02** to choose from the applicable time zone list, and/or touch "Daylight savings time" key to switch between on and off.
 - **Auto:** Automatically sets the clock to the vehicle's current location.

- Press the **BACK** button **03** to return to the previous screen.

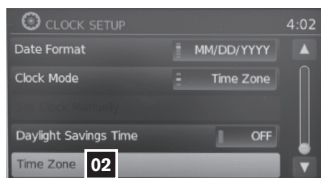

For more information, please refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM (if so equipped)

The NISSAN Intelligent Key® system allows you to lock or unlock the vehicle, open the trunk and start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- To lock the vehicle, push either door handle request switch **01** once or press the **i** button **02** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **01** once; the corresponding door will unlock. Push the door handle request switch **01** again within 60 seconds; all other doors will unlock, or
 - Press the **i** button **03** on the key fob to unlock the driver's side door. Press the **i** button again; all other doors will unlock.
- To release the trunk lid, press the  button **04** for more than 1 second. Lift the trunk lid to access the trunk.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **05** for more than 0.5 seconds. Once activated, the panic alarm and headlights will stay on for a period of time.

 
For more information, refer to the “Pre-driving checks and adjustments (section 3)” of your Owner's Manual.

TRUNK LID RELEASE SWITCH

Use one of the following methods to unlatch the trunk lid, then raise the lid to open the trunk:

- Push the trunk opener request switch **01**, located in the center under the trunk handle, for more than 1 second. The doors must be unlocked or the NISSAN Intelligent Key® must be with you (that is, in your pocket or purse).
- Press the trunk release button  button **02** on the key fob for more than 1 second.
- Push the trunk lid release **03** down. The release is located to the left of the steering wheel.

For more information, refer to the “Pre-driving checks and adjustments (section 3)” of your Owner's Manual.

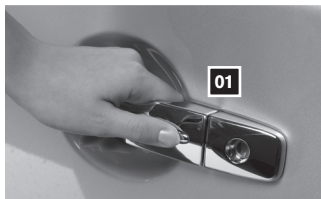

SEAT ADJUSTMENTS

- To slide the front seat forward or backward, pull up on the center of the bar **01** under the front of the seat and slide forward or backward. Release the bar to lock the seat in position.
- To recline the seatback, pull up on the lever **02** and lean back. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.



SEAT LIFTER (driver's seat)

- To adjust the seat height, pull up or push down on the adjusting lever **03** repeatedly.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner's Manual.

OUTSIDE MIRROR CONTROL SWITCH

- Move switch **01** right or left to select the right or left side mirror.
- Adjust each mirror to the desired position using the switch **02**.
- Move the switch **01** to the middle (neutral) position to prevent accidentally moving the mirror.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

STARTING/STOPPING THE ENGINE

CONTINUOUSLY VARIABLE TRANSMISSION

(NISSAN Intelligent Key® models only - if so equipped)

- It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).
- Depress the brake pedal.
 - If the brake pedal is not depressed, pushing the ignition switch once enters the **ACC** mode.
 - If the ignition switch is pushed a second, time the vehicle will enter the **ON** mode.
- Move the shift lever to the **P (PARK)** position.
- Push the ignition switch to start the engine.



MANUAL TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Move the shift lever to the **N (NEUTRAL)** position.
- Depress the clutch pedal to the floor.
- Press the ignition switch.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FIRST DRIVE FEATURES

TURNING THE ENGINE OFF

- For a Continuously Variable Transmission, apply the brake pedal, move the shift lever to the **P (PARK)** position, apply the parking brake and press the ignition switch.
- For a manual transmission, apply the brake pedal, place the vehicle in 1st gear, apply the parking brake and push the ignition switch.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **01** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **02** to turn on the headlights.

AUTOLIGHT SYSTEM (if so equipped)

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then push the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  position **01** or  position **02**.

HIGH BEAM SELECT

- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light goes off.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.

 
FOG LIGHT SWITCH (if so equipped)

- The headlights must be in the auto, or low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **06** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

LANE CHANGE SIGNAL

- To signal a lane change, move the lever up or down to the point where the indicator light begins to flash, but the lever does not latch.
- The turn signal will flash 3 times automatically.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

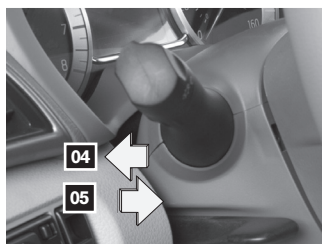

WINDSHIELD WIPER AND WASHER SWITCH

- Move the lever to the following positions to operate the windshield wipers:

  - 01** Mist (**MIST**) – One sweep operation of the wipers.
- 02** Intermittent (**INT**) – Wipers operate intermittently. The intermittent operation speed can be adjusted by twisting the time control ring **03** to increase or decrease wiper speed.
- 04** Low (**LO**) – Wipers operate at a continuous, low speed.
- 05** High (**HI**) – Wipers operate at a continuous, high speed.
- 06** Pull the lever toward you to activate the washer. The wipers will operate several times.

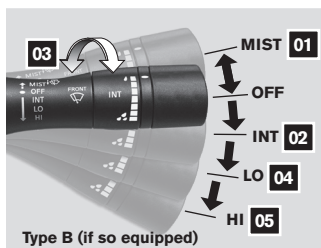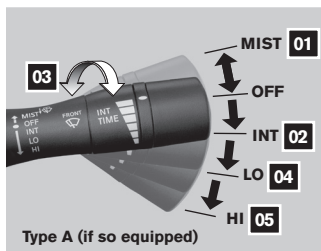

WIPER BLADE REPLACEMENT PROCEDURE

The windshield wipers must be in the service position in order to replace the wiper blades.

 
To move the wiper blades to the service position, follow this procedure:

- When the ignition switch is in the **ON** position or within 60 seconds of placing the ignition switch to the **OFF** position, push the windshield wiper and washer lever up to the **MIST** position **01** two times in less than 0.5 seconds. The windshield wipers will move to the service position automatically, and the wiper blades can now be replaced.

To move the wiper blades back to the original position:

- Pull the windshield wiper and washer lever up for more than 1 second or push the lever down to operate at any wiper speed.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Maintenance and do-it-yourself (section 8)**” of your Owner’s Manual.

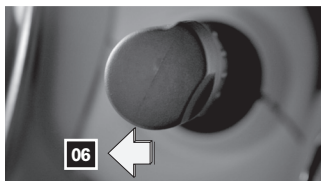

FIRST DRIVE FEATURES



AUTOMATIC CLIMATE CONTROLS (if so equipped)

01 AUTO BUTTON

- This mode may be used all year round. Press the **AUTO** button to turn the system on. The system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed. The A/C automatically turns on when **AUTO** is selected.

02 DUAL BUTTON

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by pressing the passenger's side temperature control buttons.

03 DRIVER'S SIDE TEMPERATURE CONTROL BUTTONS

- Buttons are used to control the driver's side temperature by pressing up for warmer air or down for cooler air.

04 PASSENGER'S SIDE TEMPERATURE CONTROL BUTTONS

- Buttons are used to control the passenger's side temperature by pressing up for warmer air or down for cooler air.

05 FAN SPEED CONTROL BUTTONS

- Press **-** to lower the fan speed and press **+** to raise the fan speed.

06 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the defroster control button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air. To optimally defog side windows, direct side vents to side windows.
- Press the temperature control buttons **03** or **04** to set the desired temperature.
- To quickly defrost ice from outside the windows, press the fan speed button **05** until you have reached the maximum speed, and set the temperature controls **03** and **04** to the full HOT settings.

07 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:

 Air flows from the center and side vents.

 Air flows from the center, side and foot vents.

 Air flows mainly from the foot vents.

 Air flows from the defroster and foot vents.

08 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Press the rear window defroster switch  to turn the system on or off.
- This function automatically turns off after a period of time.

09 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate interior air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and helps to adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot vent mode .

10 FRESH AIR INTAKE BUTTON

- Press the fresh air intake button to draw outside air into the passenger compartment. The indicator light on the button will illuminate.

11 A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off.

12 ON-OFF BUTTON

- Press the **ON-OFF** button to turn the system on or off.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.



FM/AM/SiriusXM®* SATELLITE RADIO WITH CD PLAYER (if so equipped)

01 ON-OFF BUTTON/VOL (volume) CONTROL KNOB

- Press the **ON-OFF BUTTON** control knob to turn the system on or off.
- Turn the **VOL (volume)** control knob to the right or left to increase or decrease the volume.

*SiriusXM® Satellite Radio is only available on vehicles equipped with an optional satellite radio subscription service.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FIRST DRIVE FEATURES

02 TUNE KNOB

- To manually tune the radio, turn the TUNE knob left or right.
- Press the **AUDIO BUTTON** to go to the audio settings screen.

03 SEEK/CATEGORY BUTTONS

- To tune and stop at the previous or next broadcasting station, press the seek buttons **◀◀** or **▶▶**.
- For satellite radio, to switch to the first channel of the previous or next category, press the seek buttons **◀◀** or **▶▶**.
- To change tracks on a CD, press the seek buttons **◀◀** or **▶▶**.
- When the seek buttons **◀◀** or **▶▶** are pressed and held while a CD is playing, the CD will rewind or fast forward. When the button is released, the CD will play at normal speed.

04 STATION SELECT KEYS

Twelve stations can be set for the FM band, six for the AM band and eighteen for satellite radio.

- To store a station in a preset, first select a radio band by pressing the **FM-AM** **05** or **SXM** button **06**, then tune to the desired FM, AM or XM satellite radio station.
- Now select and hold the desired station memory key (**1-6**) until the preset number is updated on the display and a beep is heard. Programing is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station memory key (**1-6**).

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

USB/AUX JACK AND IPOD® INTERFACE (if so equipped)

- The USB/AUX jack **01** is located in the center console under the armrest.
- When a compatible USB memory device, iPod® or auxiliary device is plugged into the USB/Aux jack, compatible audio files stored on the device can be played through the vehicle’s audio system.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 MPH (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON-OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **04**.
- To turn off the cruise control, push the **ON-OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will extinguish.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

SYSTEM GUIDE

TRIP COMPUTER

- With the ignition switch in the **ON** position, trip computer modes can be selected by pressing the  button **02** on the steering wheel.
- The following modes can be selected in the vehicle information display **01**:
 - **Odometer** (shown at all times) – records the total distance the vehicle has been driven.
 - **Trip A** – measures the distance of one specific trip.
 - **Trip B** – measures the distance of a second specific trip.
 - **Eco Pedal Indicator** – displays the recommended accelerator pedal position to optimize fuel consumption.
 - **MPG** – displays the instant fuel consumption.
 - **AVG/mpg** – displays the average fuel consumption since the last reset.
 - **AVG/mph** – displays the average vehicle speed since the last reset.
 - **dte** – displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
- To reset **Trip A**, **Trip B**, **AVG/mpg**, or **AVG/mph**, go to the desired mode on the trip computer and hold the  button **02** for more than 3 seconds.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner's Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

- Press the  button to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button and after the tone say, “Call Redial”.
- The “Help” command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.



*Some jurisdictions prohibit the use of cellular telephones while driving.

- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To cancel a voice recognition session, say "Exit" or press and hold the  button.
- To increase or decrease the volume of the voice prompts, push the volume control switches  or  on the steering wheel or turn the **VOL/ON-OFF** control knob on the audio system while the system is responding.
- Voice commands can be used to operate various Bluetooth System features using the NISSAN Voice Recognition system. See your Owner's Manual for detailed information.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode.
- For more detailed information and instructions, refer to your cellular phone Owner's Manual and visit www.nissuanusa.com/bluetooth.

BLUETOOTH® SYSTEM WITHOUT NAVIGATION (if so equipped)

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the phone.
1. Press the  button on the steering wheel. The system announces the available commands.
 2. Say: "Connect phone". The system acknowledges the command and announces the next set of available commands.
 3. Say: "Add phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.
 4. Initiate connecting from the phone:
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and compatible phones, please visit www.nissanusa.com/bluetooth.
 - When prompted for a Passkey code, enter "1234" from the handset. (The Passkey code is assigned by NISSAN and cannot be changed.)
 5. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.



PHONEBOOK SETUP

- The phonebook stores up to 1,000 names for each phone paired with the system.
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, entries can be individually downloaded.
- To manually download entries:
 1. Push the  button on the steering wheel.
 2. After the tone, say "Phonebook".

SYSTEM GUIDE

3. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.
 - The transfer procedure varies according to each cellular phone. See your cellular phone's Owner's Manual for details. You can also visit **www.nissanusa.com/bluetooth** for instructions on transferring phone numbers from NISSAN-recommended cellular phones.
4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, choose "Store".
5. The system confirms the name, location and number.

MAKING A CALL FROM THE PHONEBOOK

- In some cases, names stored using all UPPERCASE letters may not be recognized by the voice recognition system.
1. Press the  button.
 2. After waiting for the tone, say "Call".
 3. After the next tone, speak a name of a phonebook entry. For example, "Michael Smith".
 4. Confirm the correct name is recognized by saying "Dial" after the tone.

MAKING A CALL BY PHONE NUMBER

1. Press the  button. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say: "Phone Number". The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- When you receive a phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button.
- To reject the call, press the  button.
- To hang-up the phone at the end of a call or to disconnect during call placement, press the  button.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or please visit **www.nissanownersinfo.mobi**.

BLUETOOTH® SYSTEM WITH NAVIGATION (if so equipped)

 
- Send predefined or custom text messages* through your vehicle's Bluetooth® system.
- Receive texts through your vehicle's Bluetooth® system that can be read to you.
- Bluetooth® Streaming Audio allows you to use a compatible Bluetooth® phone to play audio files on your device. Your compatible cellular phone can be connected to the vehicle's audio system, allowing audio files to play through the vehicle's speakers.

SMARTPHONE INTEGRATION*

- For information on how to pair your phone and use popular smartphone apps in your NISSAN, please visit: **www.nissanusa.com/connect/support**.

CONNECTING PROCEDURE


1. Press the **APPS**  button on the control panel.
2. Select the "Settings" key **01**.

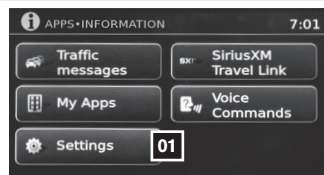

3. Select the "Phone & Bluetooth" key **02**.



 4. Select the "Connect New Device" key **03**.
5. Initiate the connecting process from the handset.
The system will display the message:
"Is PIN XXXXXX displayed on your Bluetooth device?"

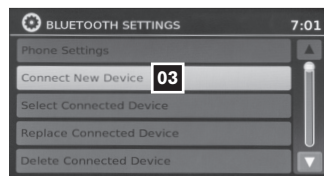


If the PIN is displayed on your Bluetooth® device, select "Yes" to complete the connecting process.

VEHICLE PHONEBOOK

To access the vehicle phonebook:

 1. Press the  button on the instrument panel.
2. Select the "Phonebook" key **04**.
3. Choose the desired entry from the displayed list.

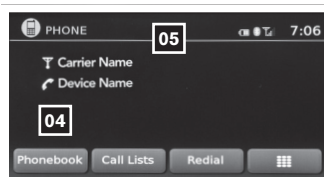

*Laws in some jurisdictions may restrict the use of "Text-to-Speech." Some applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

 
SYSTEM GUIDE

MAKING A CALL

1. Press the  button on the instrument panel. The "Phone" screen **05** will appear on the display.
2. Select one of the following options to make a call:
 - "Phonebook": Select the name from an entry stored in the vehicle phonebook.
 - "Call Lists": Select the name from the incoming, outgoing or missed call history.
 - "Redial": Dial the last outgoing call from the vehicle.
 -  – Input the phone number manually using the keypad displayed on the screen.

RECEIVING A CALL

- To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Select the  icon on the screen.
- To reject the incoming call, either:
 - Press the  button on the steering wheel, or
 - Select the  icon on the screen.

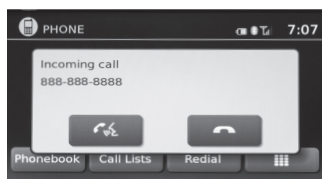

For more information, refer to the **"Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- NissanConnect™ Apps integrates popular smartphone apps and services into your vehicle. NissanConnect™ Apps requires a subscription. Please visit www.nissanconnect.com for more information.

- 01 NAV** button – Press to access the functions of the Navigation System.
- 02 MAP** button – Press to display the current location map screen.
- 03 VOL** knob – Turn right to increase the volume or left to decrease the volume.
- 04** key – Select to zoom the map in.
- 05** key – Select to zoom the map out.
- 06 APPS** button – Press to access Traffic messages, MyApps, SiriusXM Travel Link, Voice Commands, and Settings.
- 07** button – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **TUNE** knob. Press and hold to turn the display off. Press again to turn the display on.
- 08 BACK** button – Press to return to the previous screen.
- 09 TUNE** knob – Turn to navigate the items in a list. Press to select a menu item.
- 10** Touch-screen display.
- 11** SD-card location – An SD-card with map data must be inserted here for map functions to operate.

For more information, refer to your **Navigation System** Owner's Manual.

MEMO

MEMO

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. NISSAN North America, Inc. reserves the right to make changes, at any time, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your NISSAN dealer or contact NISSAN North America, Inc.



To view detailed instructional videos,
go to **www.nissanownersinfo.mobi/2014/sentra**
or snap this barcode with an appropriate barcode reader.

