 


2014 **VERSA NOTE**

QUICK REFERENCE GUIDE



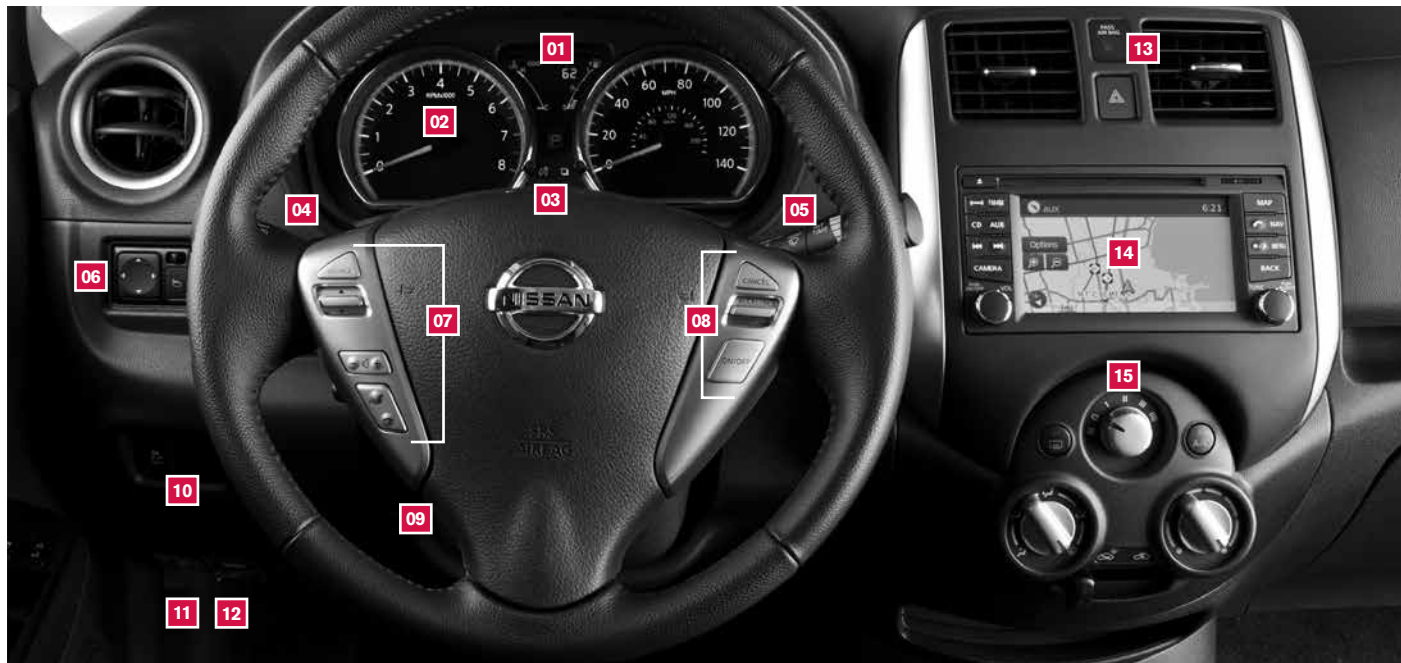

01 TRIP COMPUTER

02 LOW TIRE PRESSURE WARNING LIGHT

03 INSTRUMENT BRIGHTNESS CONTROL*

04 HEADLIGHT AND TURN SIGNAL CONTROL

05 WINDSHIELD WIPER AND WASHER SWITCH

06 OUTSIDE MIRROR CONTROL SWITCH

07 STEERING WHEEL SWITCHES FOR AUDIO CONTROL / BLUETOOTH®

08 CRUISE CONTROL

09 STEERING WHEEL TILT ADJUSTMENT*

10 VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH*

11 FUEL-FILLER DOOR RELEASE

12 HOOD RELEASE*

13 FRONT PASSENGER AIR BAG STATUS LIGHT*

14 AUDIO AND NAVIGATION SYSTEM

15 CLIMATE CONTROLS

*See your Owner's Manual for information.

NEW SYSTEM FEATURES

Around View [®] Monitor (if so equipped)	2
Trip Computer	3
USB/AUX Jack and iPod [®] Interface (if so equipped)	3
Divide-N-Hide [®] Adjustable Floor	4

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS) with Easy Fill Tire Alert (if so equipped)	5
Loose Fuel Cap	6
Fuel-Filler Door	6
Clock Set/Adjustment	7

FIRST DRIVE FEATURES

NISSAN Intelligent Key [®] System (if so equipped)	8
Rear Hatch Release (NISSAN Intelligent Key [®] models only - if so equipped)	9
Seat Adjustments	9
Outside Mirror Control Switch	9
Starting/Stopping the Engine	10
Headlight Control Switch	11
Windshield Wiper and Washer Switch	11
Manual Climate Controls	12
FM/AM/SiriusXM Satellite Radio with CD Player (if so equipped)	13
Cruise Control (if so equipped)	14

SYSTEM GUIDE

Bluetooth [®] Hands-free Phone System (if so equipped)	15
System Operating Tips	15
Bluetooth [®] System without Navigation (if so equipped)	15
Bluetooth [®] System with Navigation (if so equipped)	17
Navigation System (if so equipped)	19



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"**, **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** and **"Starting and driving (section 5)"** of your Owner's Manual.



To view detailed instructional videos, go to
www.nissanownersinfo.mobi/
2014/versa
 or snap this barcode with an
 appropriate barcode reader.



Additional information about your vehicle is also available in
 your Owner's Manual, Navigation System Owner's Manual
 and at www.nissanusa.com.

 
NEW SYSTEM FEATURES

AROUND VIEW® MONITOR (if so equipped)


- With the ignition switch in the **ON** position, the Around View® Monitor is activated by pressing the **CAMERA** button **01**, located on the navigation unit, or by moving the shift lever to the **R (REVERSE)** position. The monitor displays various views of the position of the vehicle.



- When the vehicle is in the **P (PARK)**, **N (NEUTRAL)** or **D (DRIVE)** position and the **CAMERA** button **01** is pressed, the following views will display in order:

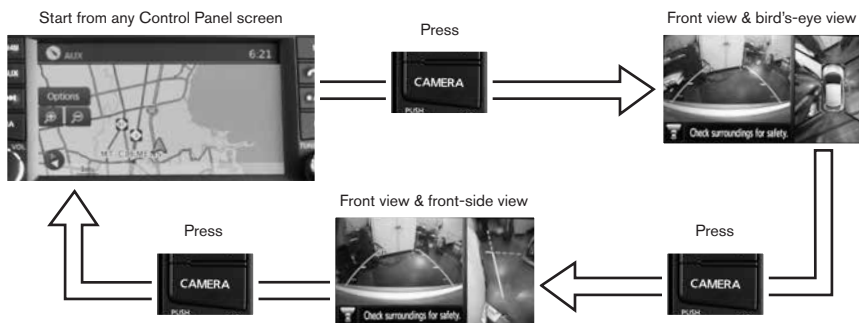

 - When the vehicle is in the **R (REVERSE)** position and the **CAMERA** button **01** is pressed, the following views will display in order:

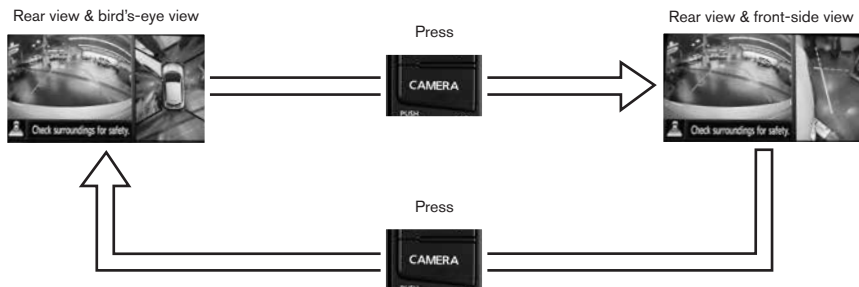

- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).

For information regarding how to access additional viewing cycles, please refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

TRIP COMPUTER

- With the ignition switch in the **ON** position, modes of the trip computer **01** can be selected by pushing the trip computer change button **02** on the instrument panel.
- The following modes can be selected in the display:
 - **ODO** – records the total distance the vehicle has been driven.
 - **Trip A** – measures the distance of one specific trip.
 - **Trip B** – measures the distance of a second specific trip.
 - **mpg** – displays the instant fuel consumption.
 - **mpg AVG** – displays the average fuel consumption since the last reset.
 - **mls** ➡  – displays the estimated distance that can be driven before refueling.
- To reset **TRIP A**, **TRIP B**, **mpg**, or **mpg AVG** go to the desired mode on the trip computer and hold the change button **02** for more than 3 seconds.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner's Manual.

USB/AUX JACK AND IPOD® INTERFACE (if so equipped)

- The USB/Aux jack **01** is located on the center console.
- When a compatible USB memory device, iPod® or auxiliary device is plugged into the USB/Aux jack, compatible audio files stored on the device can be played through the vehicle's audio system.

 


For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.

NEW SYSTEM FEATURES

DIVIDE-N-HIDE® ADJUSTABLE FLOOR

- Do not place more than 100 lbs (45 kg) on the adjustable floor.

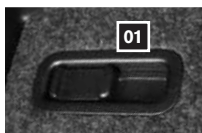

- There are two positions to store the adjustable floor. The upper position allows for additional storage below the adjustable floor **03**.
- The adjustable floor has two retaining tabs **01** on each side to secure the floor in place. When the tabs are in the lock position (outboard) the adjustable floor may be moved along the tracks from the lower position to the upper position and vice versa. When the tabs are in the unlock position (inboard), the adjustable floor may be removed completely.



To slide the adjustable floor from the lower position **02** to the upper position **04** using the guide tracks:

1. Fold the adjustable floor in half **03**.
2. Lift the floor and pull up along the guide tracks.
3. Push the floor back, then unfold the floor.



 
For more information, refer to the “**Starting and driving (section 5)**”, and the “**In case of emergency (section 6)**” of your Owner’s Manual.



ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY FILL TIRE ALERT (if so equipped)

- A **CHECK TIRE PRES** warning message will appear in the trip computer **01** and the low tire pressure warning light **03** will illuminate when one or more tires are low on pressure and air is needed.
 - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25 km/h). The **CHECK TIRE PRES** warning message and low tire pressure warning light will disappear.
- To only reset the **CHECK TIRE PRES** warning message, press the reset button **02** for more than 1 second.
- When adding air to an under-inflated tire, the TPMS with Easy Fill Tire Alert (if so equipped) provides visual and audible signals to help you inflate the tires to the recommended COLD tire pressure.

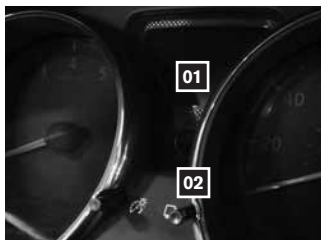

To use the Easy Fill Tire Alert (if so equipped):

 
1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
 2. Place the ignition switch in the **ON** position. Do not start the engine.
 3. Add air to the under-inflated tire and within a few seconds, the hazard warning lights will start flashing.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop flashing.
 5. Repeat this procedure for any additional under-inflated tires.
- When the low tire pressure warning light flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
 - Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
 - The Tire and Loading Information label contains valuable information. Please refer to section 9, "Technical and consumer information", in your Owner's Manual for the location of the Tire and Loading Information label.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Maintenance and do-it yourself (section 8)" of your Owner's Manual.

ESSENTIAL INFORMATION

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will display in the odometer **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed for more than 1 second.
- If the cap is not fully tightened, the Malfunction Indicator light  may also illuminate.

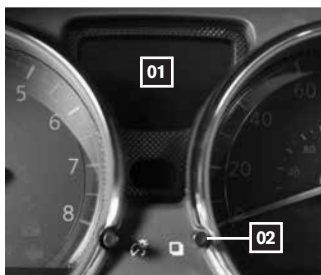

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

FUEL-FILLER DOOR

- The fuel-filler door release **01** is located to the left of the steering wheel and below the instrument panel.
- To open the fuel-filler door, pull the release. To lock, close the fuel-filler door securely.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:

1. Press the **MENU** button **01**
2. Touch the "Settings" key.
3. Touch the "System" key.
4. Touch the "Clock Settings" key.

- The following settings can be adjusted:

- **Time Format:** The clock can be set to 12 hours or 24 hours.
- **Date Format:** The date can be changed to one of 5 different formats.
- **Clock Mode:** From here the clock mode options are:
 - **Manual:** Allows for the option "Set Clock Manually". Touch this to begin setting the clock manually using the "+" or "-" to adjust the hours and minutes up or down.
 - **Time Zone:** Touch the "Time Zone" key **02** to choose from the applicable time zone list, and/or touch "Daylight savings time" to switch between on and off.
 - **Auto:** Automatically sets the clock to the vehicles current location.

- Press the **BACK** button **03** to return to the previous screen.



For more information please refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM (if so equipped)

The NISSAN Intelligent Key® System allows you to lock or unlock your vehicle and activate the panic alarm. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, press the  button **01** on the key fob or push either door handle request switch **02** once.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **02** once; the corresponding door will unlock. Push the door handle request switch **02** again within 60 seconds; all other doors will unlock, or
 - Press the  button **03** on the key fob to unlock the driver's side door. Press the  button again; all other doors will unlock.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **04** for more than 0.5 seconds. Once activated, the panic alarm and headlights will stay on for a period of time.



INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged, or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Move the shift lever to the **P (PARK)** position.
 2. Firmly apply the foot brake.
 3. Touch the ignition switch with the Intelligent Key and a chime will sound.
 4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.



For more information, refer to the “Pre-driving checks and adjustments (section 3)”, “Starting and driving (section 5)” and the “Maintenance and do-it yourself (section 8)” of your Owner’s Manual.

REAR HATCH RELEASE (NISSAN Intelligent Key® models only) (if so equipped)

- To open the rear hatch, unlock it with one of the following operations:
 - Press the  button **01** on the key fob twice.
 - Push the rear hatch request switch **02** while carrying the NISSAN Intelligent Key® with you.
- Then pull the handle **03** located below the request switch **02**.
- Pull up on the rear hatch to open.

 


For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



SEAT ADJUSTMENTS

- To slide the front seat forward or backward, pull up on the lever **01** under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- To recline the seatback, pull up on the lever **02** and lean back. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.

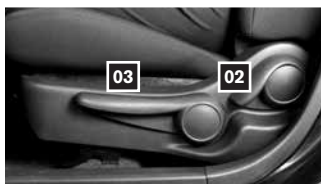


SEAT LIFTER (if so equipped for driver’s seat)

- To adjust the seat height, pull up or push down on the adjusting lever **03** repeatedly.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

OUTSIDE MIRROR CONTROL SWITCH

 - Move the switch **01** right or left to select the right or left mirror.
- Adjust each mirror to the desired position using the switch **02**.
- Move the switch **01** to the middle “neutral” position to prevent accidentally moving the mirror.

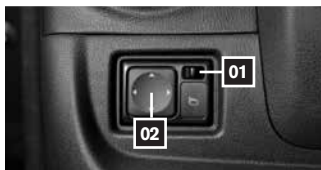

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

FIRST DRIVE FEATURES

STARTING/STOPPING THE ENGINE

STARTING THE ENGINE

- It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

CONTINUOUSLY VARIABLE TRANSMISSION

(NISSAN Intelligent Key® models only - if so equipped)

- Depress the brake pedal.
 - If the brake pedal is not depressed, pushing the ignition switch once enters the ACC mode.
 - If the ignition is pushed a second time, the vehicle will enter the ON mode.
- Move the shift lever to **P (PARK)**.
- Push the ignition switch to start or stop the engine.



MANUAL TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Depress the clutch pedal to the floor.
- Move the shift lever to **N (NEUTRAL)**.
- Turn the ignition switch to **START**.



TURNING THE ENGINE OFF

- For a Continuously Variable Transmission (NISSAN Intelligent Key® models only - if so equipped), apply the brake pedal, move the shift lever to the **P (PARK)** position, apply the parking brake and push the ignition **START/STOP** switch to turn the engine off.
- For a manual transmission, apply the brake pedal, place the vehicle in 1st gear, apply the parking brake and turn the ignition switch to the **LOCK** position.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

HEADLIGHT CONTROL SWITCH

 
HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **01** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **02** to turn on the headlights.



HIGH BEAM SELECT

- Push the headlight control switch forward **03** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light goes off.
- Pull and release the headlight control switch **04** to flash the headlight high beams on and off.

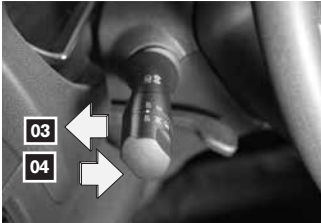

FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **05** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

 
 


For more information, refer to the “Instruments and controls (section 2)” of your Owner’s Manual.

WINDSHIELD WIPER AND WASHER SWITCH

- Move the lever to the following positions to operate the windshield wipers:

- 01** Mist (**MIST**) – One sweep operation of the wipers.
- 02** Intermittent (**INT**) – Wipers operate intermittently. The intermittent operation speed can be adjusted by twisting the time control ring **03** (if so equipped) to increase or decrease wiper speed.
- 04** Low (**LO**) – Wipers operate at a continuous low-speed.
- 05** High (**HI**) – Wipers operate at a continuous high-speed.
- 06** Washer  – Pull the lever toward you to activate the washer. The wipers will operate several times.

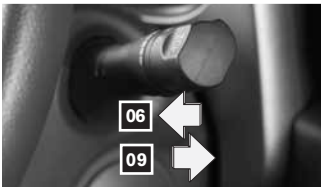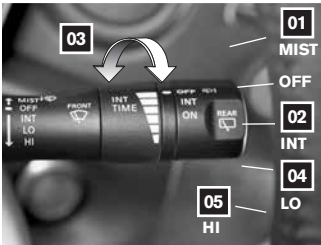

FIRST DRIVE FEATURES

REAR WINDSHIELD WIPER AND WASHER

- 07** Intermittent (**INT**) – Rear wiper operates intermittently.
- 08** Low (**ON**) – Rear wiper operates at a continuous low-speed.
- 09** Push the lever forward to activate the rear washer. The rear wiper will operate several times.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

MANUAL CLIMATE CONTROLS

01 FAN SPEED CONTROL DIAL

- Turn the dial to the left to decrease fan speed or to the right to increase fan speed.

02 AIR FLOW CONTROL DIAL

- Turn the dial to select the following air flow outlets:
 - Air flows from the center and side vents.
 - Air flows from the center, side, and foot vents.
 - Air flows mainly from the foot vents.
 - Air flows from the defroster and foot vents.
 - Air flows mainly from the defroster vents.



03 TEMPERATURE CONTROL DIAL

- Turn the temperature control dial left for cooler air or right for warmer air.

04 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- First, move the air intake lever **05** to the left position to draw fresh air into the vehicle.
- Then turn the air flow control dial **02** to the front window defroster mode .
- When the or position is selected, press the **A/C** button (if so equipped) to turn the air conditioner on for better performance. This will dehumidify the air and help defog the windows.

06 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Push the rear window defroster switch to turn the system on or off.

07 A/C BUTTON

- Press the **A/C** button to turn the air conditioner on. This system helps cool and dehumidify the air inside the cabin and defog the windows.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



FM/AM/SiriusXM* SATELLITE RADIO WITH CD PLAYER (if so equipped)

01 VOL/ON-OFF CONTROL DIAL

- Press the **VOL/ON-OFF** control dial to turn the system on or off.
- Turn the **VOL/ON-OFF** control dial to the right or left to increase or decrease the volume.

02 TUNE KNOB/AUDIO BUTTON

- To manually tune the radio, turn the **TUNE** knob left or right.

03 SEEK BUTTONS

- To tune and stop at the next or previous broadcasting station, press the seek buttons **◀◀** or **▶▶**.
- For SiriusXM Satellite Radio, to switch to the first channel of the previous or next category, press the seek buttons **◀◀** or **▶▶**.
- To change tracks on a CD, press the seek buttons **◀◀** or **▶▶**.
- When the seek buttons **◀◀** or **▶▶** are pressed and held while a CD is playing, the CD will rewind or fast forward. When the button is released, the CD will play at normal speed.

04 STATION MEMORY KEYS

Twelve stations can be set for the FM band, six for the AM band and eighteen for SiriusXM Satellite Radio.

- To store a station in a preset first select a radio band by pressing the **FM-AM** **05** or **XM** button **06**, then tune to the desired FM, AM or SiriusXM Satellite Radio station.
- Now select and hold the desired station memory key (**1-6**) until the preset number is updated on the display and a beep is heard. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station memory key (**1-6**).

*SiriusXM Satellite Radio is only available on vehicles equipped with optional SiriusXM Satellite Radio subscription service.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

FIRST DRIVE FEATURES

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 MPH (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **CRUISE ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **04**.
- To turn off cruise control, push the **CRUISE ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will turn off.



For more information, refer to the “Starting and driving (section 5)” of your Owner’s Manual.

SYSTEM GUIDE

BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

- Press the  button to interrupt the voice prompts at any time and speak a command after the tone.
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To cancel a voice recognition session, simply wait 5 seconds, say "Cancel" or "Quit," or press and hold the  button for 5 seconds.
- To increase or decrease the volume of the voice prompts, push the volume control switches  or  on the steering wheel or turn the control dial on the audio system while the audio system is responding.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Voice Adaptation Mode. See your Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone Owner's Manual and visit www.nissanusa.com/bluetooth.



BLUETOOTH® SYSTEM WITHOUT NAVIGATION (if so equipped)

CONNECTING PROCEDURE

The vehicle must be stationary when connecting the phone.

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say: "Connect phone". The system acknowledges the command and announces the next set of available commands.
3. Say: "Add phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.
4. Initiate connecting from the phone:
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and compatible phones, please visit www.nissanusa.com/bluetooth.
 - When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)
5. Say a name for the phone when the system asks you to provide one. You can give the phone a name of your choice.

SYSTEM GUIDE

PHONEBOOK SETUP

- The phonebook stores up to 1,000 names for each phone paired with the system.
- Depending on your cell phone, the system may automatically download your cell phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, entries can be individually downloaded.
- To manually download entries:
 1. Push the  button on the steering wheel.
 2. After the tone, say "Phonebook".
 3. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.
 - The transfer procedure varies according to each cellular phone. See your cellular phone's owner's manual for details. You can also visit www.nissanusa.com/bluetooth for instructions on transferring phone numbers from NISSAN recommended cellular phones.
 4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, choose "Store."
 5. The system confirms the name, location and number.

MAKING A CALL FROM THE PHONEBOOK

In some cases, names stored using all UPPERCASE letters may not be recognized by the voice recognition system.

1. Press the  button.
2. After waiting for the tone, say "Call".
3. After the next tone, speak the name of a phonebook entry. For example "Michael Smith".
4. Confirm the correct name is recognized by saying "Dial" after the tone.

MAKING A CALL BY PHONE NUMBER

1. Press the  button. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say: "Phone Number". The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- When you receive a phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button.
- To reject the call, press the  button.
- To hang up the phone at the end of a call or to disconnect during call placement, press the  button.

 
For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or please visit www.nissanusa.com/bluetooth.

BLUETOOTH® SYSTEM WITH NAVIGATION (if so equipped)

- Send predefined or custom text messages* through your vehicle's Bluetooth® system.
- Receive texts through your vehicle's Bluetooth® system that can be read to you.
- Bluetooth® Streaming Audio allows you to use a compatible Bluetooth® phone to play audio files on your device. Your compatible cellular phone can be connected to the vehicle's audio system, allowing audio files to play through the vehicle's speakers.

CONNECTING PROCEDURE

1. Press the **MENU** button on the control panel.
2. Select the "Settings" key **01**.

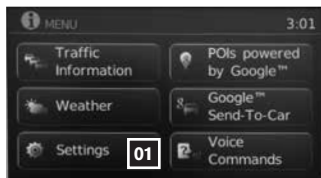

3. Select the "Phone & Bluetooth" key **02**.



4. Select the "Connect New Device" key **03**.
5. Initiate the connecting process from the handset. The system will display the message: "is PIN XXXXXX displayed on your Bluetooth® device?" If the PIN is displayed on your Bluetooth® device, select "Yes" to complete the connecting process.



 
VEHICLE PHONEBOOK

To access the vehicle phonebook:

1. Press the  button on the control panel.
2. Select the "Phonebook" key **04**.
3. Choose the desired entry from the displayed list.

MAKING A CALL FROM THE PHONEBOOK

1. Press the  button on the steering wheel to activate Voice Recognition.
2. Say "Call".
3. Say a name in the vehicle phonebook to call that entry.

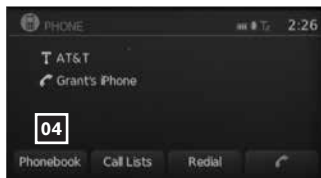

MAKING A CALL BY PHONE NUMBER

1. Press the  button on the steering wheel to activate Voice Recognition.
2. Say "Phone".
3. Say "Dial Number", and when prompted speak the digits of the number you wish to dial.
4. Say "Dial".

SYSTEM GUIDE

 
RECEIVING A CALL

To accept the incoming call, either:

1. Press the  button on the steering wheel, or
2. Select the green  on the screen.

To reject the incoming call, either:

1. Press the  button on the steering wheel, or
2. Select the red  on the screen.

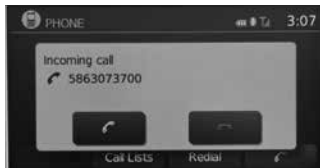

*Laws in some communities may restrict the use of text messaging. Check local regulations before using this feature.

For more information, refer to the **“Monitor, climate, audio, phone and voice recognition systems (section 4)”** of your Owner's Manual.



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- NissanConnect™ Google™ services require an active subscription. Please contact a NISSAN dealer for more information.
- Your Navigation System, along with POIs (Point Of Interest) powered by Google™* (if so equipped), allows you to enter a destination using Google search results.
- Using Google™ Send-to-Car* (if so equipped) you can send a destination from Google Maps to your vehicle's Navigation System.
- Hands-free Text Messaging – The system allows for the sending and receiving of text messages through the vehicle interface.

- 01 VOL/ON-OFF** control dial – Rotate clockwise to increase the volume or counterclockwise to decrease the volume.
- 02 TUNE knob/AUDIO** button – Turn to scroll through the items in a list. Press to select a menu item.
- 03 MAP** button – Press to display the current location map screen.
- 04 NAV** button – Press to access the functions of the Navigation System.
- 05** ☀/🌙 – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the TUNE knob. Press and hold to turn the display off. Press again to turn the display on.
- 06 MENU** button – Press to access the system settings key.
- 07 BACK** button – Press to return to the previous screen.

*An account must first be registered from the Info Services settings screen and a compatible Bluetooth® Hands-free phone and subscription service is required. Please visit www.nissanusa.com/bluetooth for compatible phone information.

For more information, refer to your **Navigation System** Owner's Manual.

MEMO

MEMO

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at any time, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your NISSAN dealer or contact Nissan North America, Inc.



To view detailed instructional videos,
go to **www.nissanownersinfo.mobi/2014/versa**
or snap this barcode with an appropriate barcode reader.

