

2014 Sienna Quick Reference Guide

2014 Sienna

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Sienna.

A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Sienna operations. Every Sienna owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	9
Fuel tank door release and cap	8
Hood release	8
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry¹	6
Light control-Instrument panel	9
Smart Key system^{1,2}	7

FEATURES/OPERATIONS

Air Conditioning/Heating	24-26
Audio	22-23
Auto lock/unlock²	10
Automatic Transmission	10
Bottle holders	31
BSM (Blind Spot Monitor)	20
Clock	31
Cruise control	20
Cup holders	32
Door-Power back	18
Doors-Power sliding	17
Dynamic radar cruise control	21
Enhanced VSC OFF button	28
Garage door opener (HomeLink®)^{2,3}	29
Hill-start Assist Control (HAC)	29
Lights¹ & turn signals	11-12
Moonroof	19
Parking brake	10
Power outlets-12V DC	30
Power outlets-120V AC	30
Rear seat entertainment system	28
Seat adjustments-Front	14
Seat adjustments-Rear	14
Seat heaters	26
Seats-Head restraints	13
Seats-Removing second row center seat	15
Seats-Removing second row outside seats	15
Seats-Stowing third row seats	16
Sunshade-Side	19
Telephone controls (Bluetooth®)	27
Tilt and telescopic steering wheel	11
Windows	18
Windows-Power quarter	18
Windshield wipers & washers	13

SAFETY AND

EMERGENCY FEATURES

Door locks	33
Doors-Child safety locks	33
Floor mat installation	37
Seat belts	34
Seat belts-Shoulder belt anchor	33
Spare tire & tools	35
Star Safety System™	36-37
Tire Pressure Monitoring (warning) System	34

¹ Visit your Toyota dealer for information on customizing this feature.

 
² Programmable by customer. Refer to the Owner's Manual for instructions and more information.

³ HomeLink® is a registered trademark of Johnson Controls, Inc.




OVERVIEW

Instrument panel


Steering wheel controls

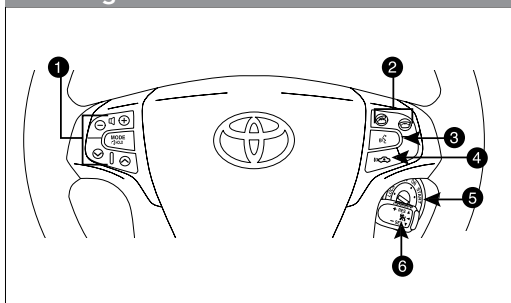

Automatic Air Conditioning system

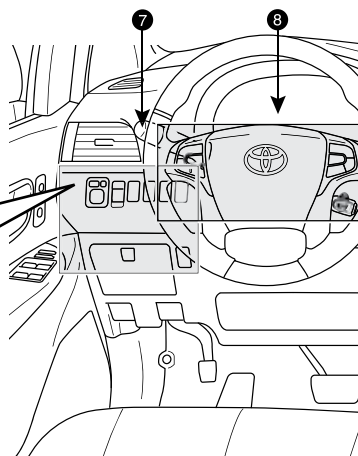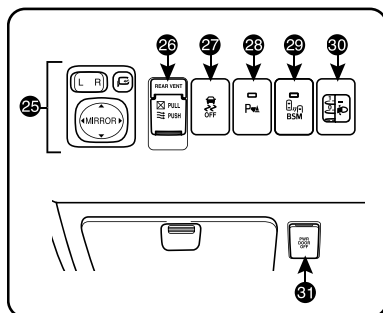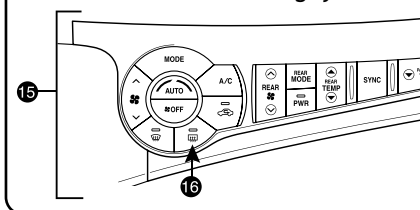   

- ❶ Steering wheel audio controls¹
- ❷ Telephone controls^{1,2}
- ❸ Voice command button^{1,2}
- ❹ Distance switch¹
- ❺ Ignition switch (standard key)¹
- ❻ Cruise control¹
- ❼ Headlight, turn signal and front fog light¹ controls
- ❽ Gauges and meters
- ❾ Wiper and washer controls
- ❿ Emergency flasher button
- ⓫ Multi-Information Display¹
- ⓬ Clock¹
- ⓭ Audio system/Navigation system^{1,2}
- ⓮ “ENGINE START STOP” switch (Smart Key)¹
- ⓯ Air Conditioning controls
- ⓰ Outside rearview mirrors¹/Rear window defogger button/Windshield wiper de-icer¹
- ⓱ Auxiliary box¹

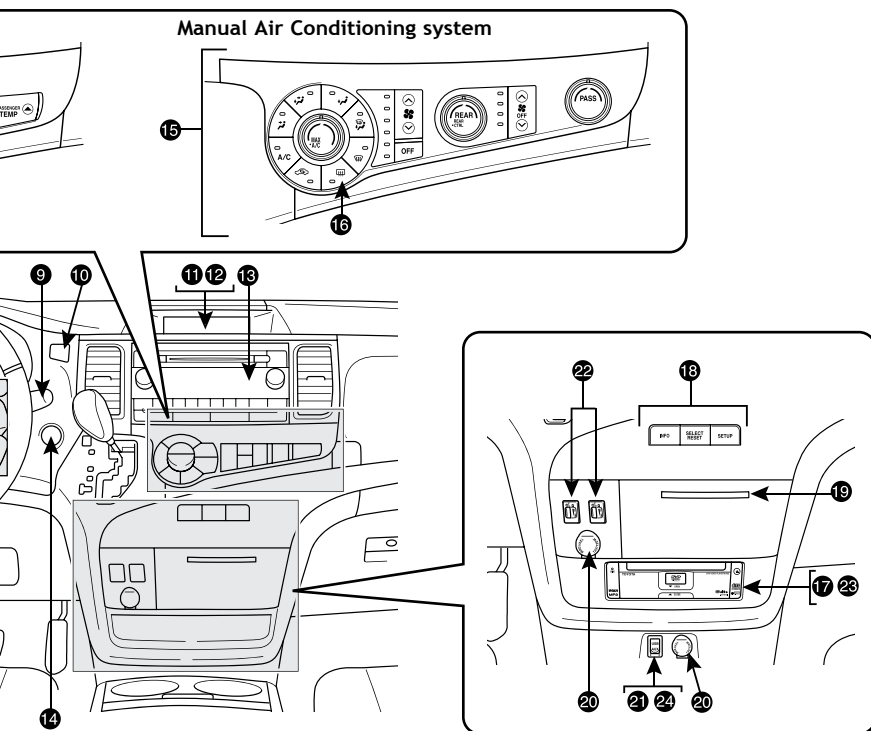 


- 18 Multi-Information Display switches¹
- 19 Cup holder
- 20 Power outlets (12V)
- 21 AUX port
- 22 Seat heater switches¹
- 23 DVD player¹
- 24 USB port¹
- 25 Power rearview mirror controls
- 26 Power quarter window switch¹
- 27 Enhanced VSC/TRAC OFF switch
- 28 Intuitive parking assist switch¹
- 29 BSM (Blind Spot Monitor) main switch¹
- 30 Headlight beam level control dial¹
- 31 Power sliding door¹/power back door main switch¹

¹ If equipped

² For vehicles with a navigation system, refer to the “Navigation System Owner’s Manual.”

 Instrument cluster

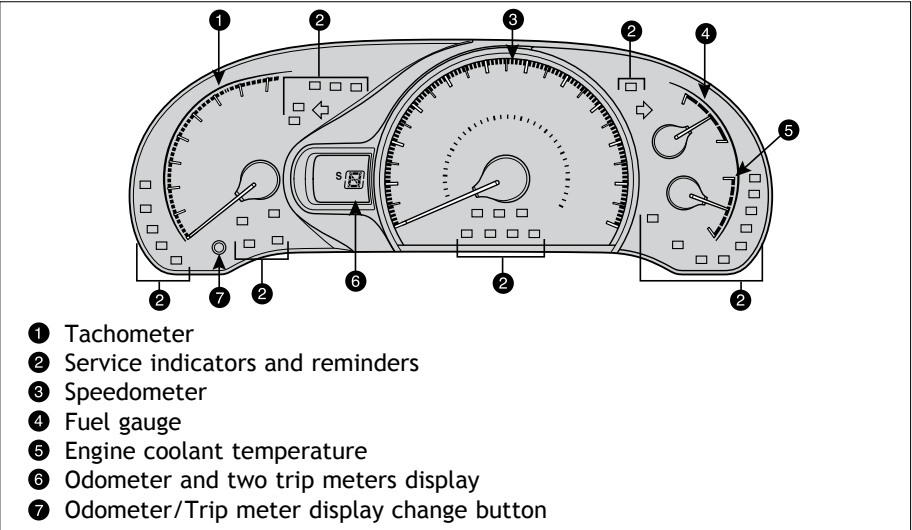

Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2014 Owner’s Manual.

BRAKE	Brake system warning ¹
	Driver seat belt reminder (alarm will sound if speed is over 12 mph)
 PASSENGER	Front passenger seat belt reminder (alarm will sound if speed is over 12 mph)
	Charging system warning ¹
 CHECK	Malfunction/Check Engine indicator ¹
	Low engine oil pressure warning ¹
	Open door warning
	Airbag SRS warning ¹
 PASSENGER AIR BAG OFF AIR BAG ON	SRS AIR BAG ON-OFF indicator
 OFF	Vehicle Stability Control OFF indicator ^{1,5}

¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

² If this light flashes, refer to “Cruise control,” Section 2-4, 2014 Owner’s Manual.

³ If this light flashes, refer to “Dynamic radar cruise control,” Section 2-4, 2014 Owner’s Manual.

	Low Tire Pressure Warning ¹
	Low windshield washer fluid level warning ¹
MAINT REQD	Engine oil replacement reminder ¹
3RD SEAT	Third seat fold incomplete warning
ABS	Anti-lock Brake System warning ¹
	Electric power steering system warning light ¹
	Master warning light ¹
	Low fuel level warning light
AWD	Active Torque Control 4WD system warning light ¹
	Headlight low/high beam indicator
	Automatic high beam indicator ⁴
	Fog light indicator
	Turn signal indicator
	Shift position indicators
	Slip indicator/Hill-start Assist Control indicator ^{1,5}
TRAC OFF	Traction Control OFF indicator ¹
	Cruise control indicator ^{2,4}
SET	Cruise control SET indicator
	Radar cruise control indicator ^{3,4}
READY	Radar cruise READY indicator
PCS	Pre-Collision System indicator ^{1,6}
ECO	ECO Driving Indicator Light ¹
	Security indicator
BSM	Blind Spot Monitor warning/Blind Spot Monitor outside rearview mirror indicators

⁴ The indicator flashes to indicate a malfunction.

⁵ The indicator flashes to indicate that the system is operating.

⁶ The indicator flashes faster than usual to indicate that the system is operating.

Keyless entry

Locking operation

Type A

Type B

Type C

Unlocking operation

Type A

Type B

Type C

Push ONCE: Driver door
TWICE: ALL doors

NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

Power sliding door operation (if equipped)

Left side power sliding door

Right side power sliding door

Type A

Type B

Type A

Type B

Power back door operation (if equipped)

Type A

Type B

 
Push and hold

Panic button (if equipped)

Push and hold

Smart Key system (if equipped)

Start function

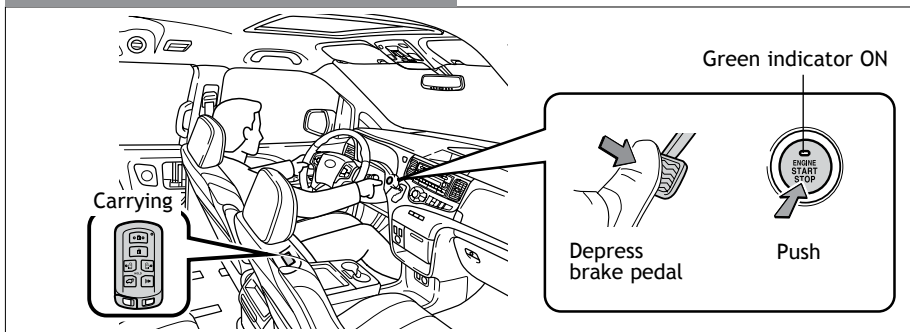


NOTE: Gear shift lever must be in Park and brake pedal depressed.

Power (without starting engine)


Without depressing the brake pedal, pressing the “ENGINE START STOP” switch will change the operation mode in succession from:

ACCESSORY	Accessories such as the radio will operate.
ON	Power ON; the engine is not running.
OFF	All systems OFF.

 
Locking operation

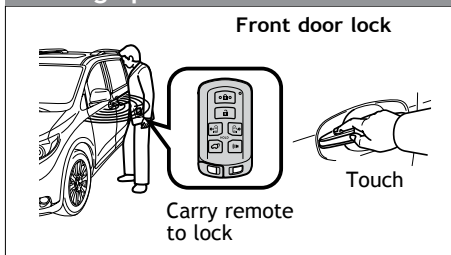


Unlocking operation

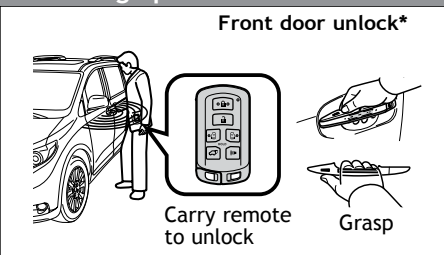 

Sliding door unlock

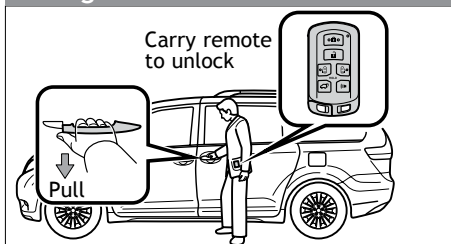 




Back door lock/unlock

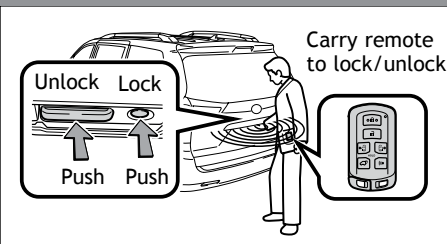 

* Driver door unlocking function can be programmed to unlock driver side doors only, or all doors. Grasping any passenger door handle will unlock all doors.




NOTE: Doors may also be locked/unlocked using remote.

   Fuel tank door release and cap

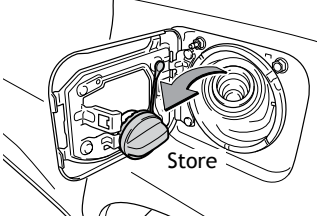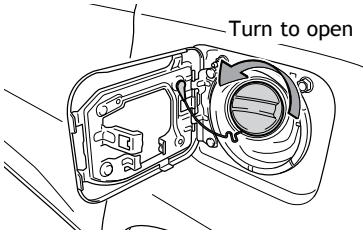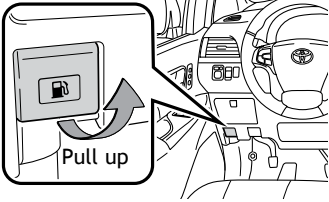


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

   
Hood release

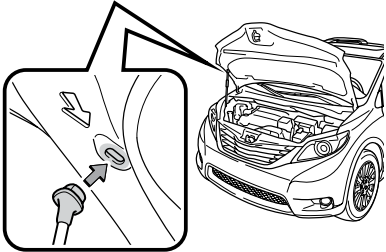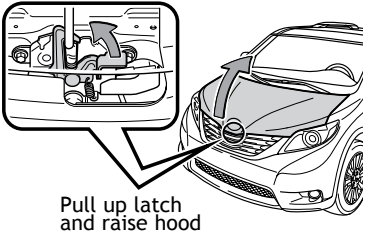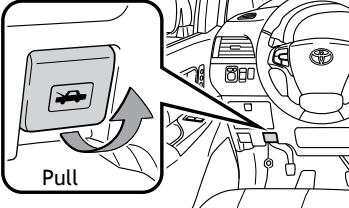

Light control-Instrument panel

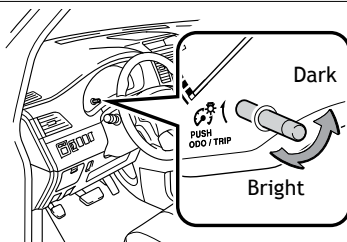 

Engine maintenance

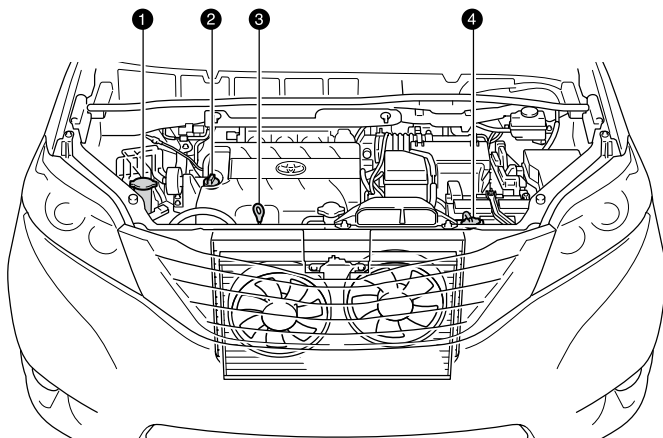 

- ❶ Windshield and rear window washer fluid tank
- ❷ Engine oil filler cap
- ❸ Engine oil level dipstick
- ❹ Engine coolant reservoir

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty & Maintenance Guide.”

FEATURES/OPERATIONS

 
Auto lock/unlock

Automatic door locks can be programmed to operate in four different modes, or turned OFF.

- Doors lock when shifting from Park.
- Doors lock when the vehicle speed is approximately 12 mph or higher.
- Doors unlock when shifting into Park.
- Doors unlock when the driver's door is opened within 10 seconds after turning the "ENGINE START STOP" switch OFF. (Vehicles with a Smart Key system)
- Doors unlock when the driver's door is opened within 10 seconds after turning the ignition switch to the "ACC" or "LOCK" position. (Vehicles without a Smart Key system)

Refer to the Owner's Manual for more details.

Automatic Transmission

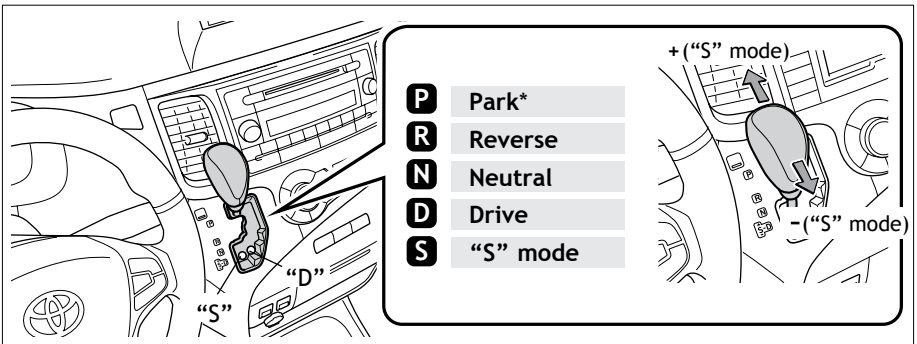

* The "ENGINE START STOP" switch/ignition switch must be "ON" and the brake pedal depressed to shift from Park.

 
"S" (Sequential) mode

Shift the shift lever to "S" position from "D" position.

- + : Upshift (push and release)
- : Downshift (pull and release)


Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Parking brake

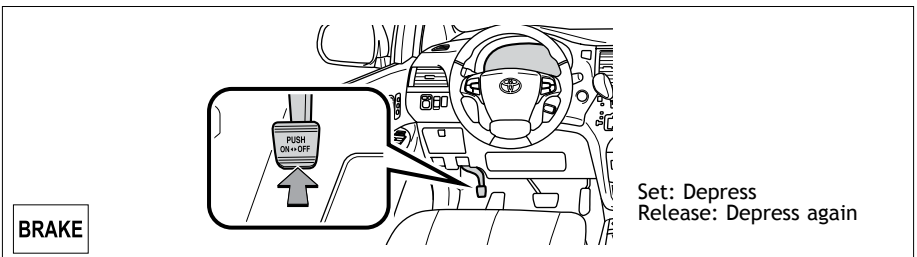


Tilt and telescopic steering wheel

 Lock release lever

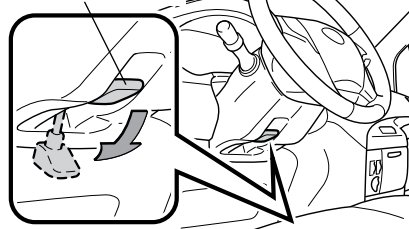

Angle

 Length

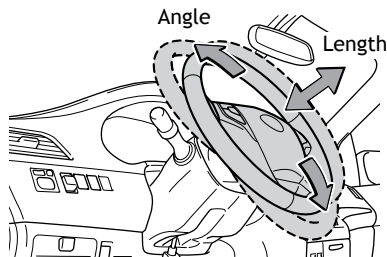


Hold wheel, push lever down, set angle and length, and return lever.


NOTE: Do not attempt to adjust while the vehicle is in motion.

Lights & turn signals

 Headlights

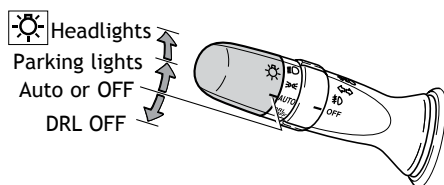

Without automatic high beam

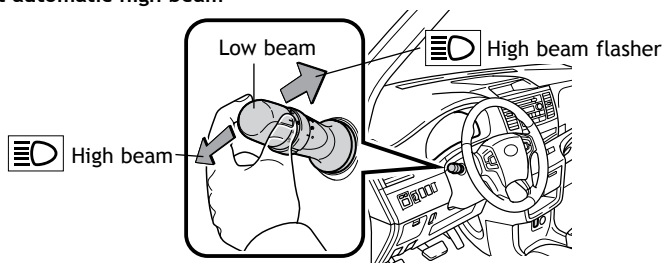 


-Daytime Running Light system (DRL) Automatically turns on the headlights at a reduced intensity.

-Automatic light cut off system Automatically turns lights off after a delay of 30 seconds, or the lock switch on remote may be pushed after locking.


FEATURES/OPERATIONS

Automatic high beam (if equipped)

 Activate*

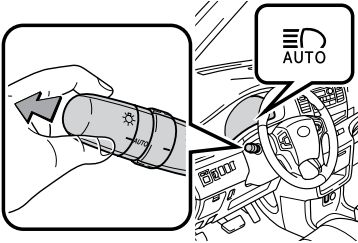


Deactivate

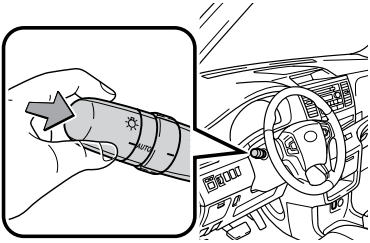 

* Refer to the *Owner's Manual* for details on activating the automatic high beams.

Front fog lights (if equipped)

 
Type A

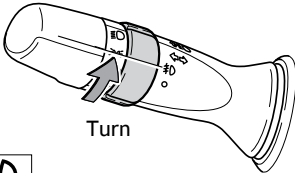

Turn



 
Type B

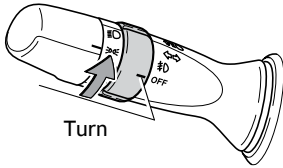



Turn

Front fog lights come on only when the headlights are on low beam.

 Turn signals

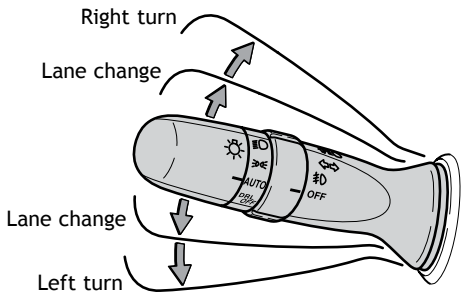

  Headlight beam level control (if equipped)

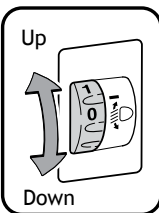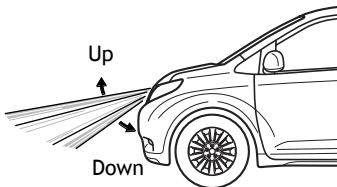


Rotating the dial downward will lower the angle of the beam.


Windshield wipers & washers

Front

 Type A

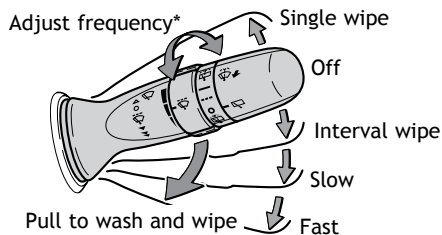


Type B

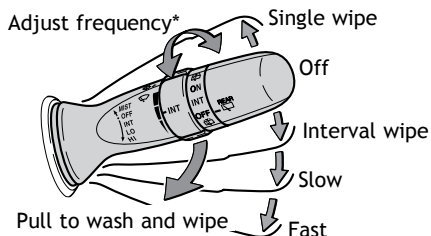 


*** Intermittent windshield wiper frequency adjustment**
Rotate to increase/decrease wipe frequency.

 Type A

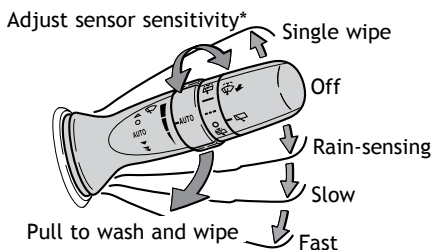


Type B

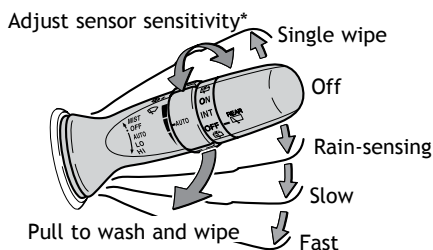 


*** Rain-sensing windshield wiper** Rotate to increase/decrease sensor sensitivity.

Rear

 Type A

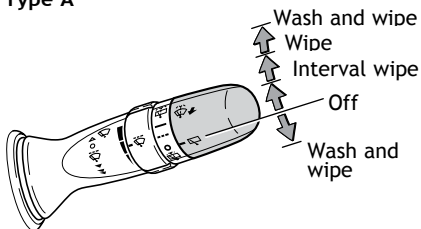

Type B

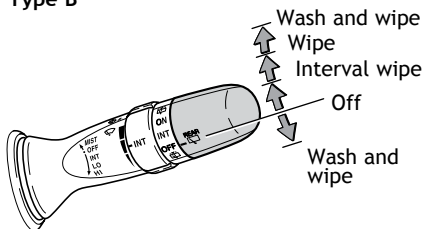 


Seats-Head restraints


Front and second row outside seats



 Second row center (8-passenger models) and third row center seats

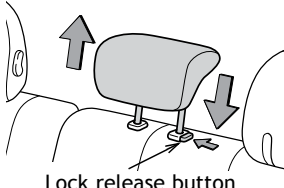


Third row outside seats

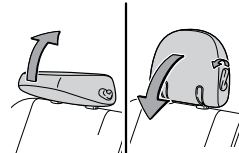 


Seat adjustments-Front

 Manual seat

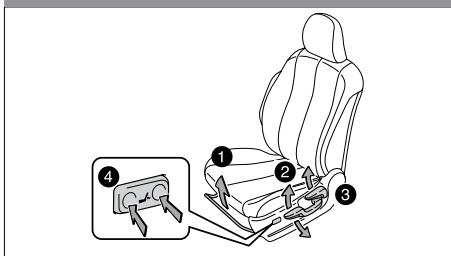

Power seat

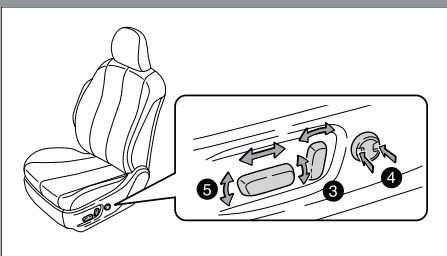 


- ① Seat position (forward/backward)
- ② Height crank (driver side only)
- ③ Seatback angle
- ④ Lumbar support (if equipped)
- ⑤ Seat position, cushion angle and height


Seat adjustments-Rear

Second row seat

 
Tip-up seat (7-passenger models)

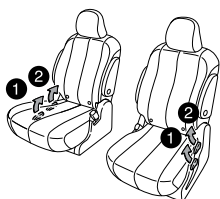

Tip-up seat (8-passenger models)

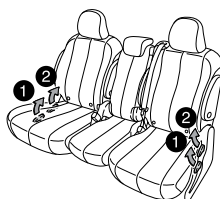 


Ottoman seat

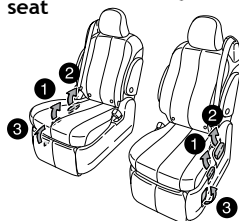 


Third row seat

 Manual

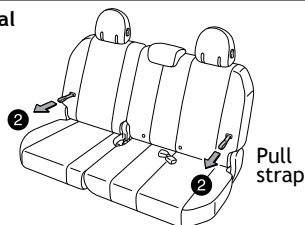

Power

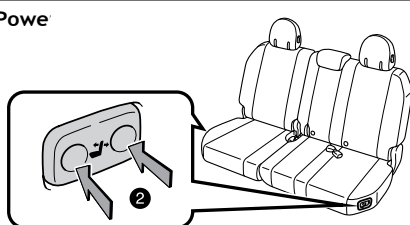 


- ① Seat position (forward/backward)
- ② Seatback angle
- ③ Ottoman angle


Refer to the *Owner's Manual* for more details.

Seats-Removing second row outside seats

 
Tip-up seats

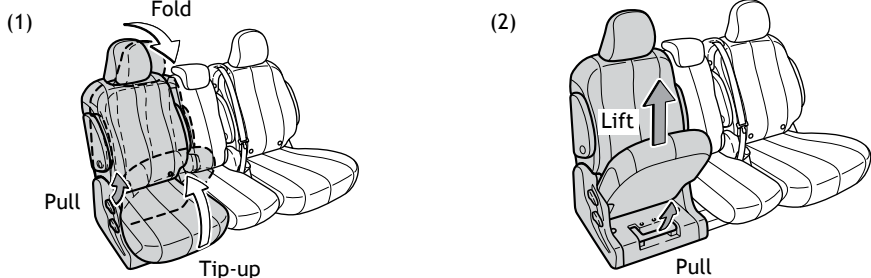

Ottoman seats

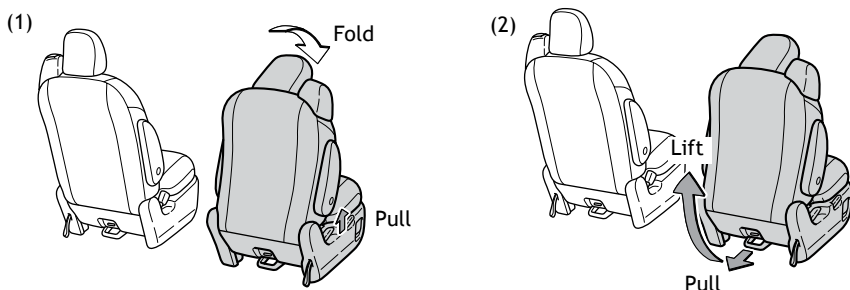 


 Seats-Removing second row center seat (if equipped)

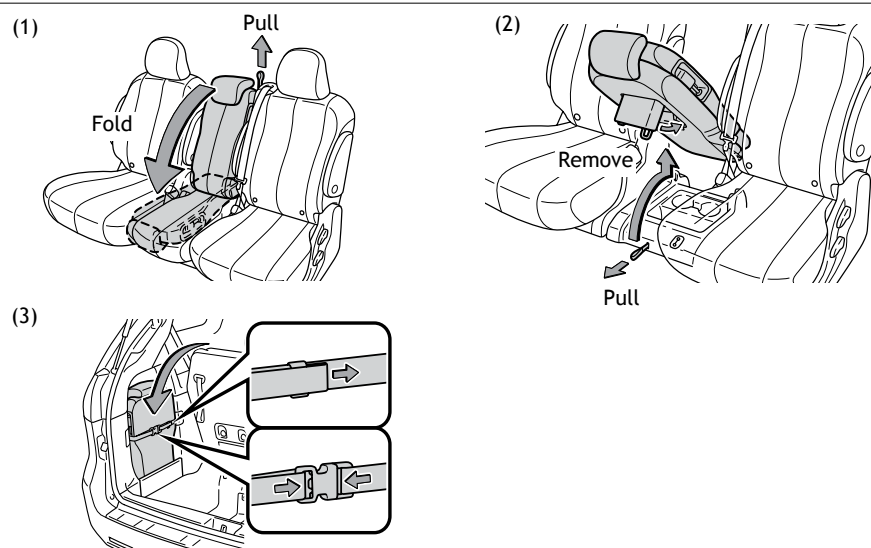


Seats-Stowing third row seats

 Manual

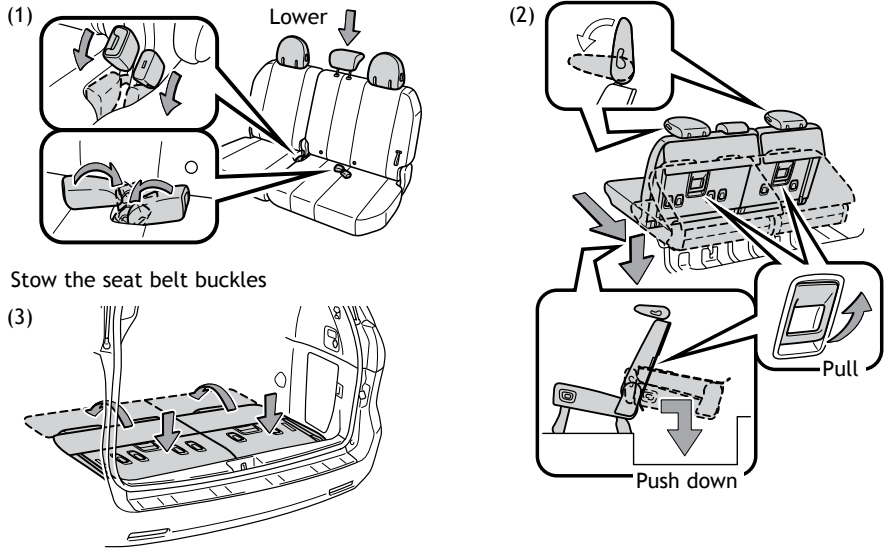

Power

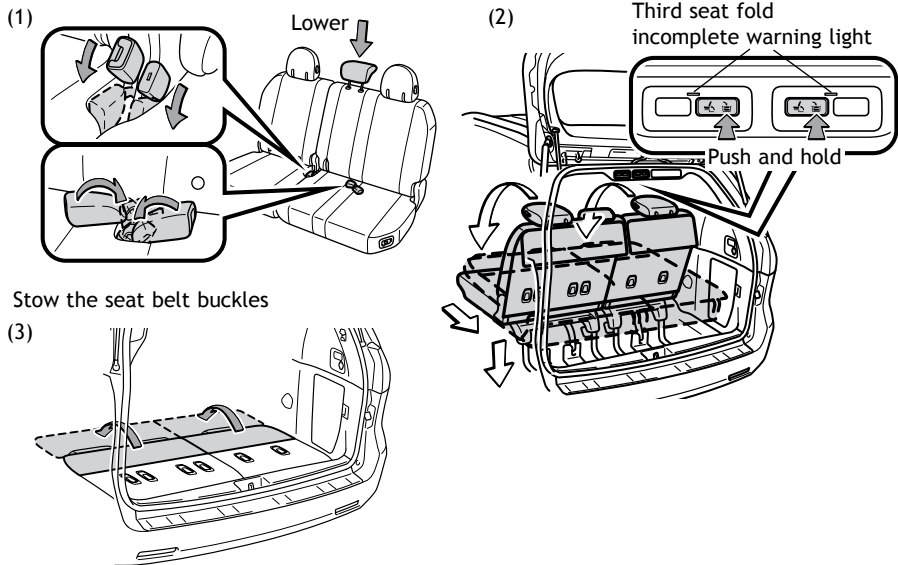 


An alarm will sound for 10 seconds and the **3RD SEAT** indicator will light up on the instrument panel if the seat is not fully open or stowed when vehicle is shifted out of Park.

Refer to the *Owner's Manual* for more details.

Doors-Power sliding (if equipped)


ON/OFF switch

 Instrument panel

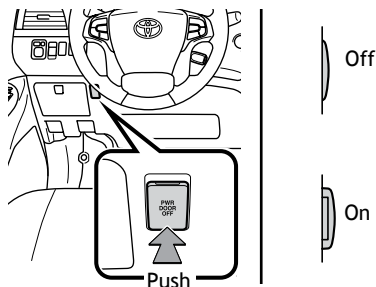


Opening/Closing

 Front overhead console

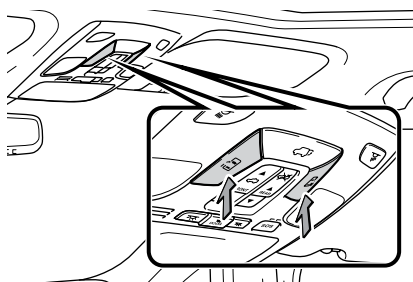

Open: Push
Close: Push again

 Center pillar

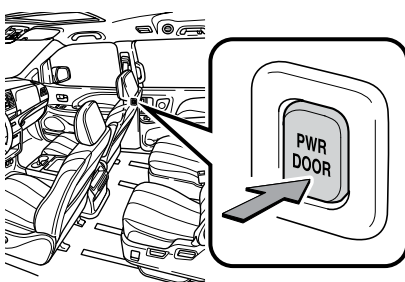

Open: Push
Close: Push again

Power

- Sliding doors will not fully open if the sliding door window is open.
- Power sliding doors will open only when gear selector is in the “P” (Park) position, and doors are unlocked. Refer to the *Owner’s Manual* for more details.
- An alarm will sound if a sliding door is open and the vehicle is shifted out of Park.
- Left sliding door will not open if gas door is open.
- If battery is disconnected, the power sliding doors need to be reinitialized.

Refer to the *Owner’s Manual* for more details.

 
Manual

- Sliding doors will not lock into the open position if the sliding door window is open.

Door-Power back (if equipped)

ON/OFF switch

Instrument panel

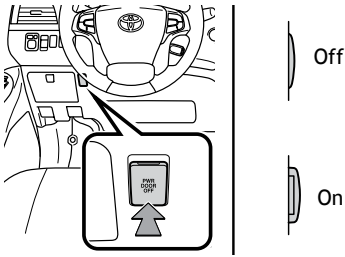


Off

On

Push

Opening/Closing

 
Front overhead console

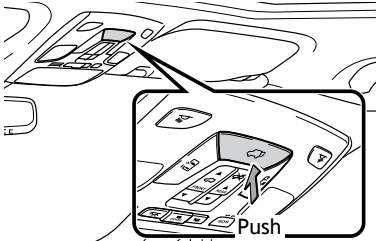

Open: Push
Close: Push again

NOTE: If battery is disconnected, the power back door needs to be reinitialized. Refer to the *Owner's Manual* for more details.

 Windows

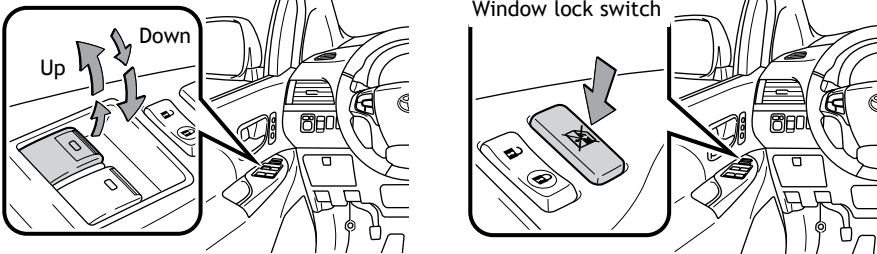

Up

 
Down

Window lock switch

Automatic operation Push the switch completely down or pull it completely up and release to fully open or close. To stop window partway, lightly push the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Windows-Power quarter (if equipped)

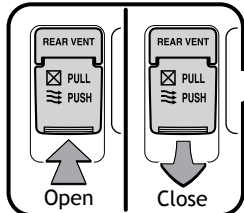

REAR VENT

 
REAR VENT

Open

Close


Moonroof (if equipped)

Front moonroof

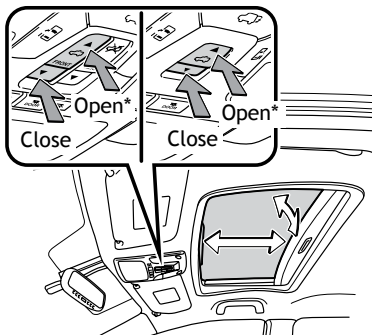

* Tilt: Push
Open: Push again

 
Rear moonroof (if equipped)

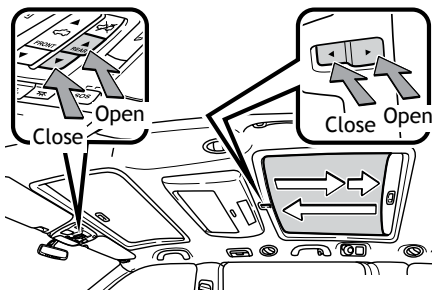


Push once to open partway;
again to open completely.

Sunshade-Side (if equipped)

 
Rear side window

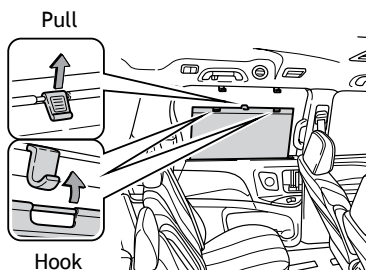

Rear quarter window

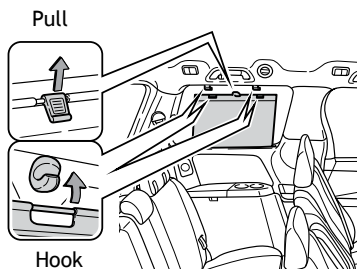 



BSM (Blind Spot Monitor)(if equipped)

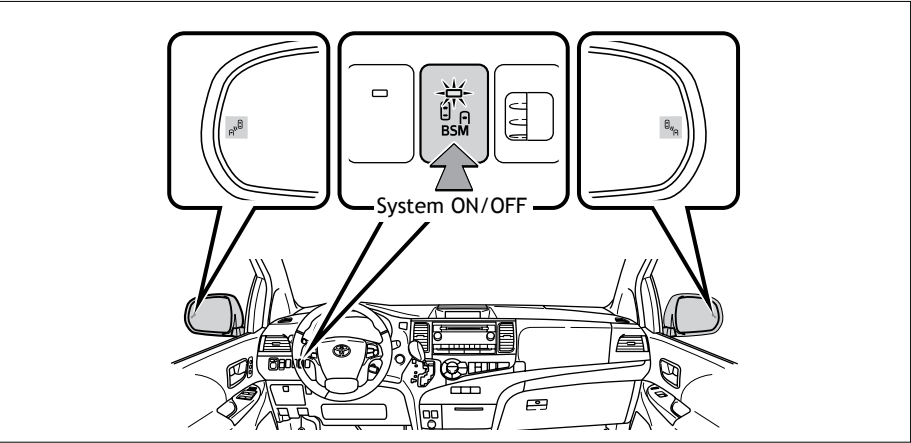 

The Blind Spot Monitor is a system that assists the driver in safely changing lanes. The system uses radar sensors to detect vehicles that are traveling in an adjacent lane in the area that is not reflected in the outside rearview mirror (the blind spot), and advises the driver of the vehicles' presence via the outside rearview mirror indicator.

Refer to the *Owner's Manual* for more details on this system before attempting to use it.

  Cruise control (if equipped)

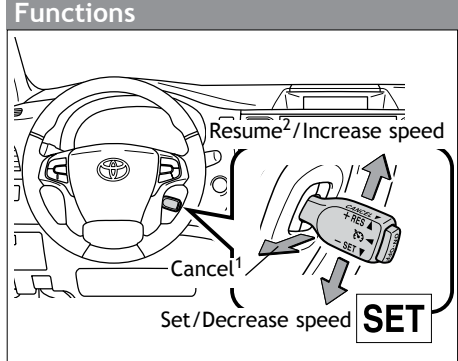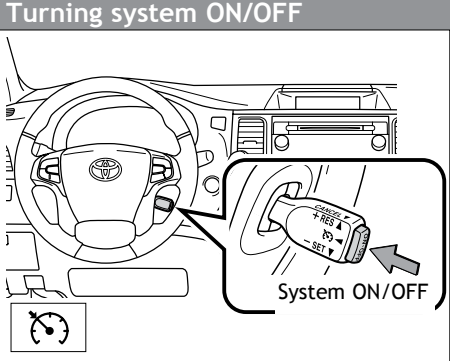


¹ The set speed may also be cancelled by depressing the brake pedal.
² The set speed may be resumed once vehicle speed reaches 25 mph.

Dynamic radar cruise control (if equipped)


Refer to the *Owner's Manual* for more details and complete safety precautions before attempting to use "Dynamic radar cruise control."

 Fixed speed mode

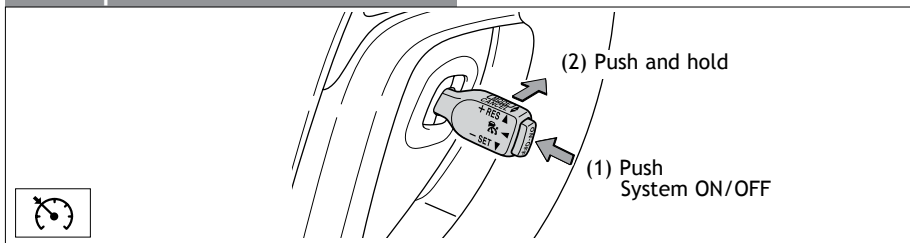

To set, cancel and resume a speed Refer to "Functions" in the *Cruise Control* section, and to the *Owner's Manual* for more details.

 
Distance control mode

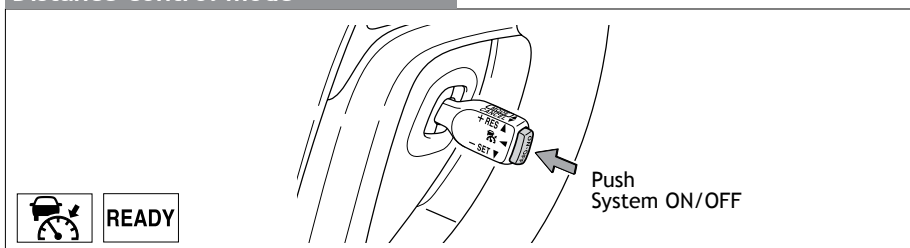

The distance control mode will cruise at a set speed, decelerate to maintain a selected distance from a slower vehicle traveling in front of you, and accelerate back up to the selected speed if the vehicle in front changes lanes or speeds up.

To set, cancel and resume a speed Refer to "Functions" in the *Cruise Control* section, and your *Owner's Manual* for more details.

 NOTE: Once vehicle speed is set, pushing lever up toward "+ RES" will increase speed to the nearest 5 mph, and then in 5 mph increments. Pushing lever down toward "- SET" will reduce speed in the same way.

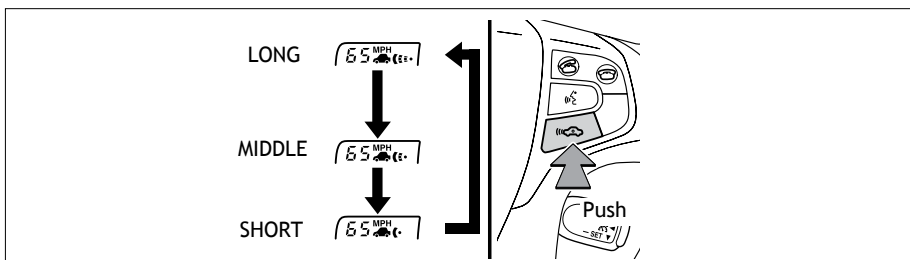


To change the vehicle-to-vehicle distance


Push the distance button to cycle through the settings, which will change progressively from LONG to MIDDLE to SHORT.

Audio

 
Type 1

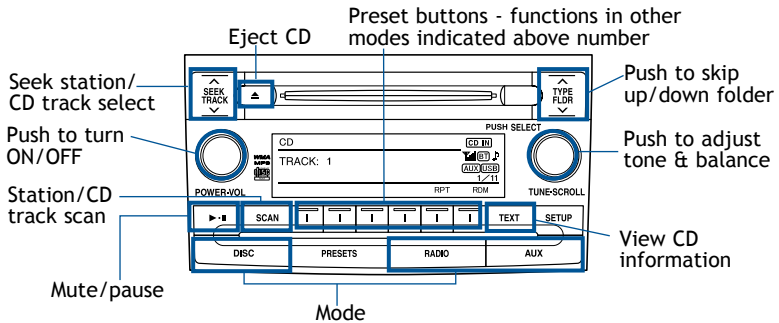

Type 2 (additional functions)

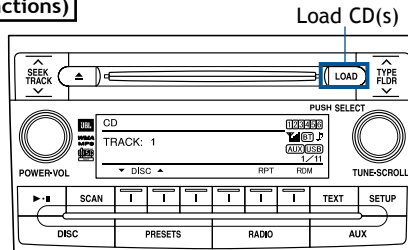 

Type 3

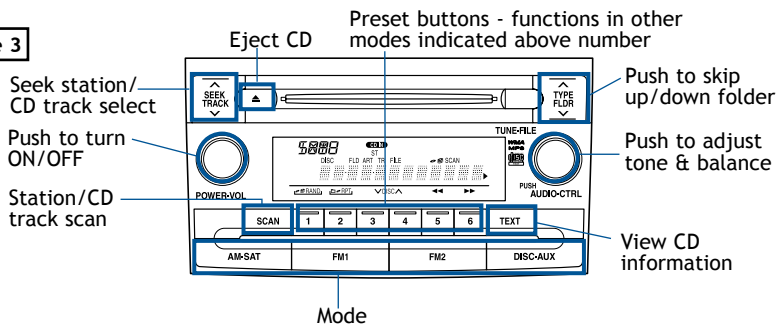 

CD player

To scan tracks on a disc Push and hold "SCAN." Push again to hold selection.
CD changer (Type 2 only)

-To load one disc Push "LOAD" and insert one disc.

-To load multiple discs Push and hold "LOAD" until you hear a beep. Insert one disc. Shutter will close and then re-open for next disc.

To select a file (MP3/WMA only) Turn "TUNE-FILE," "TUNE-SCROLL" or either side of "SEEK TRACK."

 
To select a folder (MP3/WMA only) Push either side of "TYPE FLDR."

Radio

To preset stations Tune in the desired station and hold down a preset button (1) or from (1) to (6) until you hear a beep.

To scan stations Push and hold “SCAN” to scan preset stations. Push again to hold selection.

iPod®/USB/AUX port

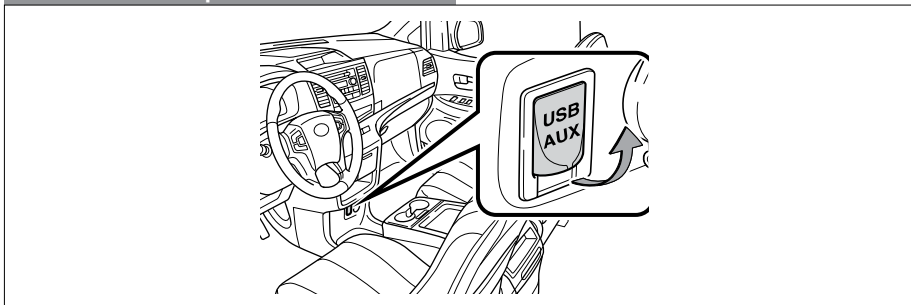


iPod®/USB port (if equipped)

By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.

AUX port

By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

 Steering wheel switches (if equipped)

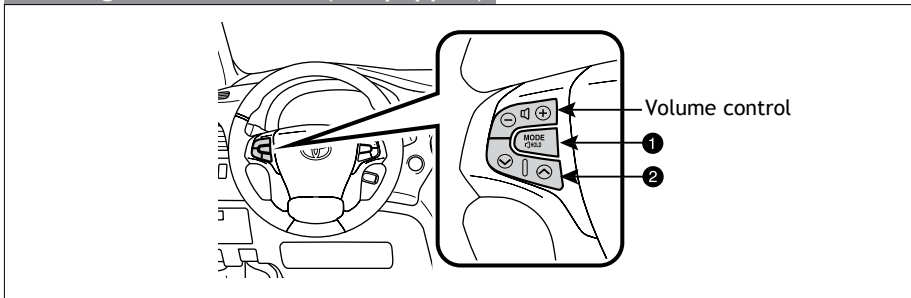

1 “MODE”

Push to turn audio ON and select an audio mode. Push and hold to turn the audio system OFF.

 
2 “▲ ▼”

Use to search within the selected audio medium (radio, CD, iPod®, etc.).


Air Conditioning/Heating

Front automatic Air Conditioning

Control panel

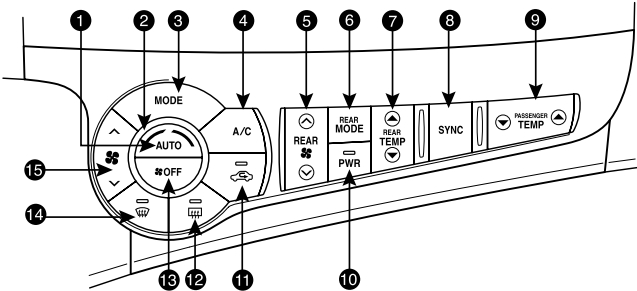


Display

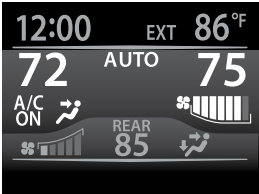 

- ① Automatic climate control ON
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.
- ② Temperature selector (driver side)
- ③ Airflow vent
In “” mode, use fresh air (“” indicator “OFF”) to reduce window fogging. “” mode uses fresh air only.
- ④ Air Conditioning ON/OFF
- ⑤ Rear fan speed
- ⑥ Rear airflow vent
- ⑦ Temperature selector (rear passenger area*)
- ⑧ Synchronizes driver, front passenger and rear temperature settings
- ⑨ Temperature selector (front passenger side)
- ⑩ Rear Air Conditioning ON/OFF
- ⑪ Recirculated cabin air (fresh air when OFF)
- ⑫ Outside rearview mirror/Rear window defogger and windshield wiper de-icer (if equipped)
- ⑬ Climate control OFF
- ⑭ Windshield defogger
- ⑮ Front fan speed


* To change the rear seat setting, press the “PWR” button.

 Front manual Air Conditioning

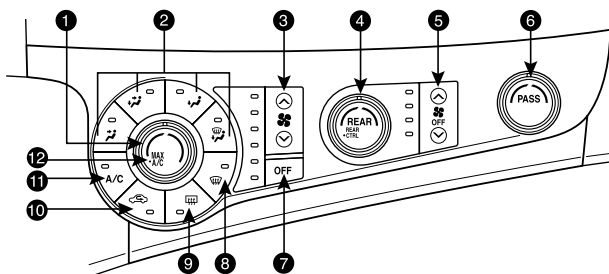


- ① Temperature selector (driver side)
- ② Airflow vent
In “” mode, use fresh air (“” indicator OFF) to reduce window fogging. “” mode uses fresh air only.
- ③ Front fan speed
- ④ Temperature selector (rear passenger area)
- ⑤ Rear fan speed
- ⑥ Temperature selector (front passenger side)
- ⑦ Climate control OFF
- ⑧ Windshield defogger
- ⑨ Outside rearview mirror/Rear window defogger and windshield wiper de-icer (if equipped)
- ⑩ Recirculated cabin air (fresh air when OFF)
- ⑪ Air Conditioning ON/OFF
- ⑫ Use for quick cooling. MAX A/C changes air intake to recirculate. It is not possible to change intake to fresh.

 Rear automatic Air Conditioning

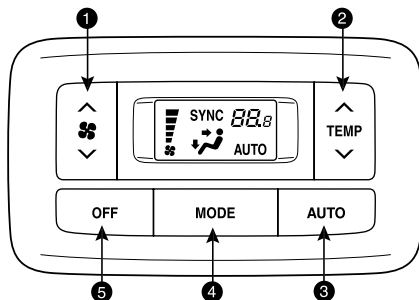



- ① Fan speed
- ② Temperature selector
- ③ Automatic climate control ON
- ④ Airflow vent
- ⑤ Climate control OFF

 Rear manual Air Conditioning

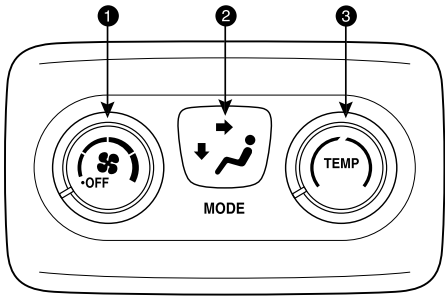


- 1 Fan speed
- 2 Airflow vent
- 3 Temperature selector

  Seat heaters (if equipped)

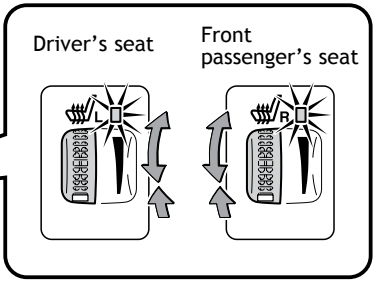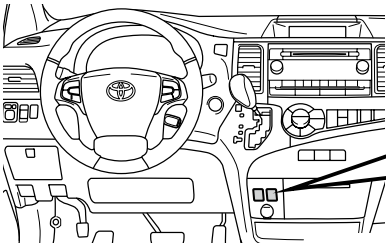


Telephone controls (Bluetooth®) (if equipped)

 
Audio unit

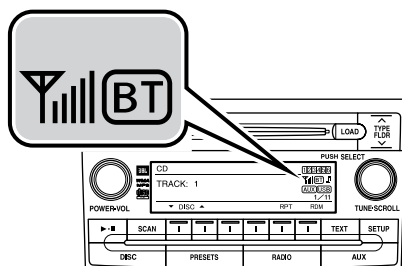

Microphone

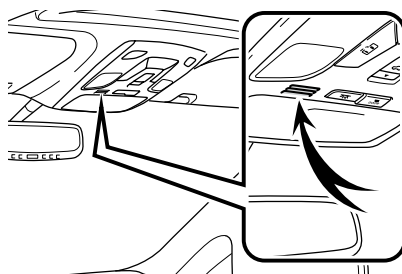 


Steering wheel telephone switches

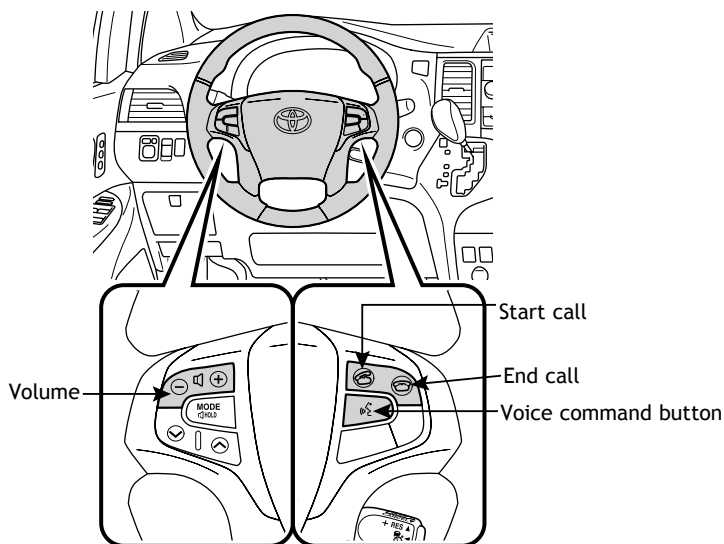 

Bluetooth® technology allows dialing or receipt of calls without taking hands off the steering wheel or using a cable to connect the telephone and the system.


Refer to “Using the hands-free phone system (for cellular phone),” Section 3-5 in the *Owner's Manual*, for more details.

 Rear seat entertainment system (if equipped)

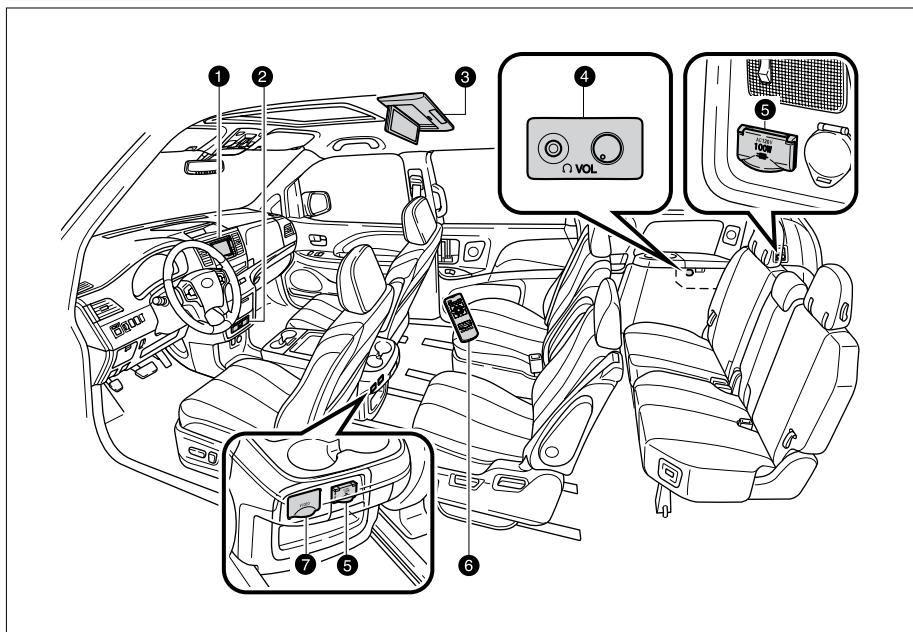

- ① Front audio
- ② DVD player
- ③ Display
- ④ Headphone jacks and headphone volume control
- ⑤ 120V AC Power outlets
- ⑥ Remote control
- ⑦ AV input port

 
Enhanced VSC OFF button

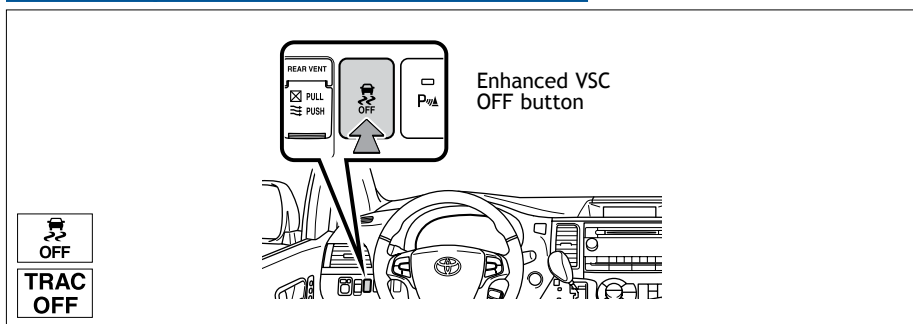


The Enhanced VSC OFF button is used to switch between modes related to the TRAC and Enhanced VSC functions.

Refer to Section 2-4 of the *Owner's Manual* for more information.

 Hill-start Assist Control (HAC) (if equipped)

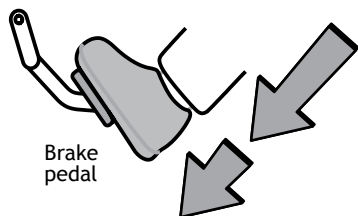


Brake
pedal

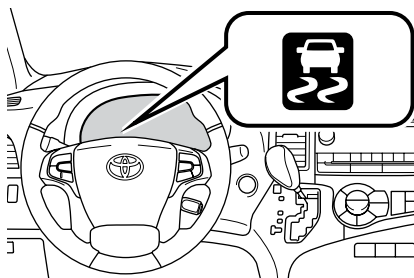 

HAC helps prevent rolling backwards on an incline. To engage, push further down on brake pedal while at a complete stop until a beep sounds and slip indicator illuminates. HAC holds for approximately 2 seconds after releasing brake pedal.

Refer to the *Owner's Manual* for more details.

 Garage door opener (HomeLink®)* (if equipped)

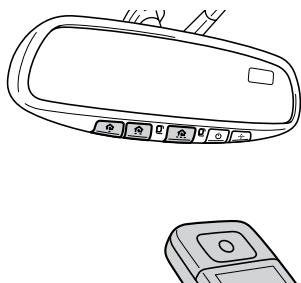

Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.

Refer to "Garage door opener," Section 3-8 in the *Owner's Manual*, for more details.

 
For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.

* HomeLink® is a registered trademark of Johnson Controls, Inc.


Power outlets-12V DC

Instrument panel


Type A

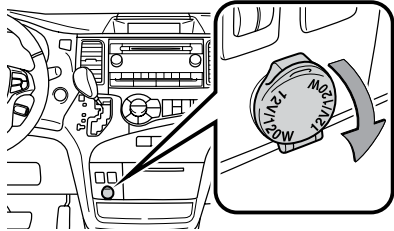

Type B

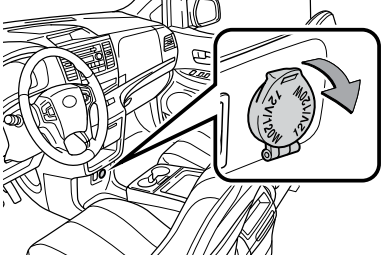 

Luggage compartment

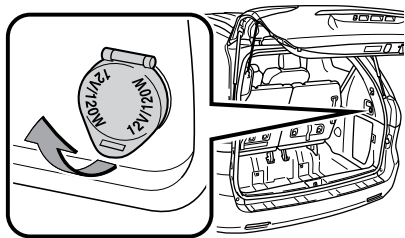 


Ignition/“ENGINE START STOP” switch must be in “ACC” or “ON” position for use.


Power outlets-120V AC (if equipped)

Console box

 
Type A

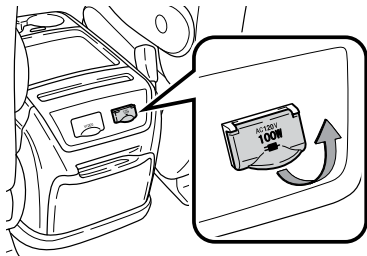

Type B

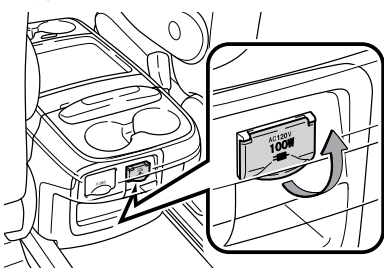 


Luggage compartment

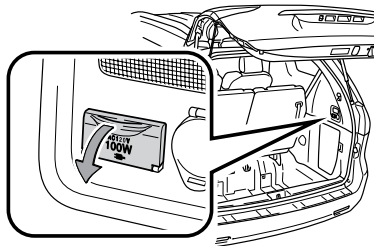 

Ignition/“ENGINE START STOP” switch must be in the “ON” position for use.

 
Clock (if equipped)

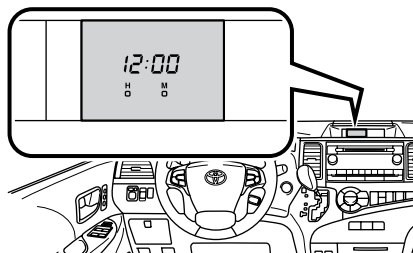


H- Hour set
M- Minute set

Bottle holders

 Front doors

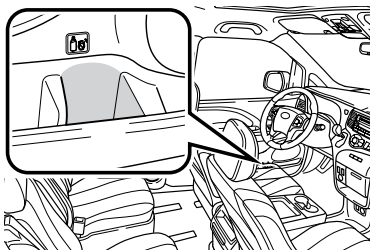


Sliding doors

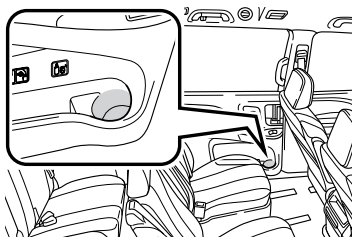 

NOTE: Do not place open containers in the bottle holders.


Cup holders

 Instrument panel

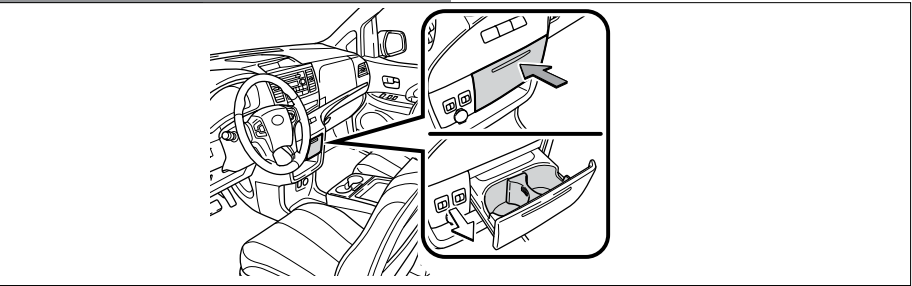


Console box (if equipped)

 Front

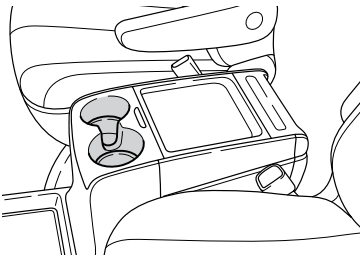


Rear

 
Type A

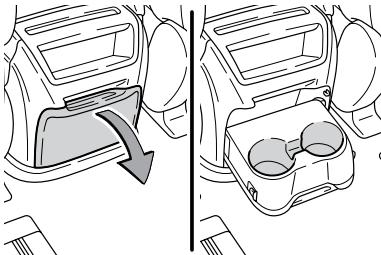


Type B

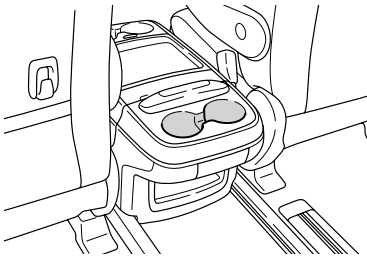 

Second center seat (if equipped)

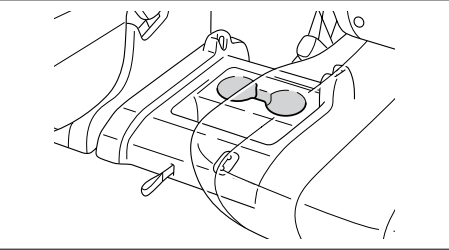 


Third row area

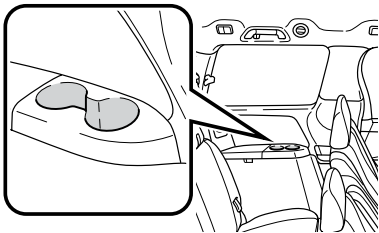 


SAFETY AND EMERGENCY FEATURES

 Door locks

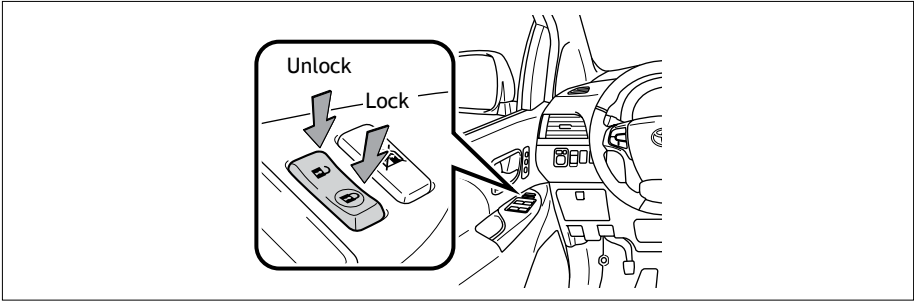


Doors-Child safety locks

 Rear door

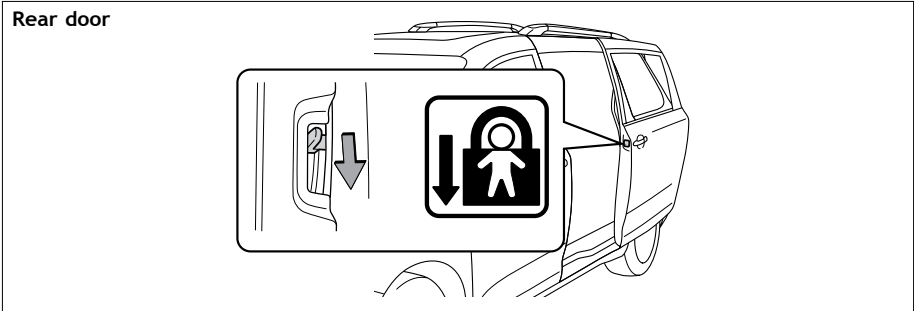


Moving the lever downward will allow the door to be opened only from the outside.

 Seat belts-Shoulder belt anchor

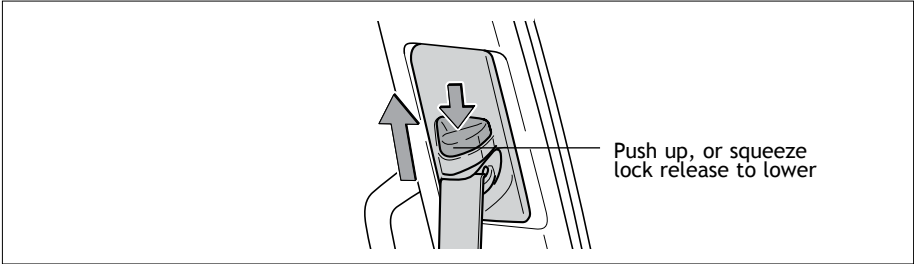


Seat belts

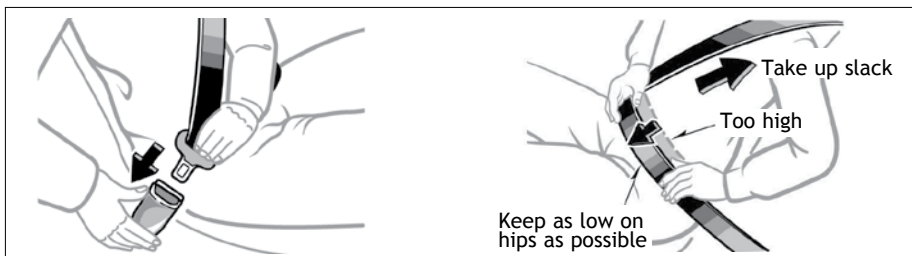 

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

 Tire Pressure Monitoring (warning) System

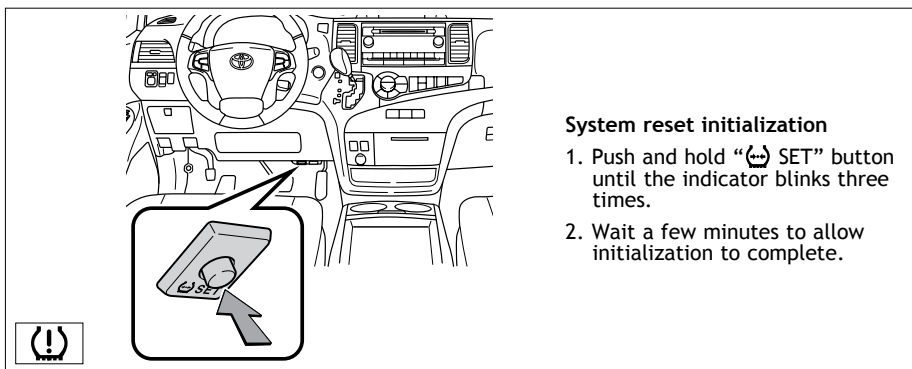

System reset initialization

1. Push and hold “SET” button until the indicator blinks three times.
2. Wait a few minutes to allow initialization to complete.

After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to “ON” and press and hold the “SET” button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the *Owner's Manual* for tire inflation specifications.

 
If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

Spare tire & tools

All-Wheel Drive models are equipped with run-flat tires. Refer to the *Owner's Manual* for more details.



Tool and spare tire location

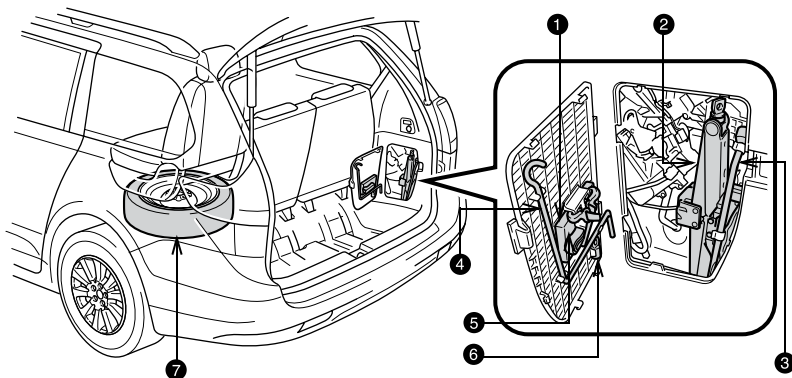

- ① Tire bag
- ② Jack
- ③ Wheel nut wrench
- ④ Jack handle
- ⑤ Tire strap
- ⑥ Socket adapter
- ⑦ Spare tire

Removing the spare tire

  Two-wheel drive models

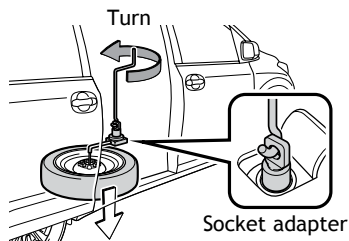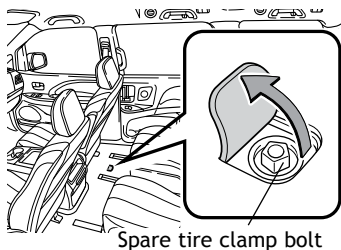

Refer to the *Owner's Manual* for jack positioning and tire changing procedures.

SAFETY AND EMERGENCY FEATURES

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

Vehicle Stability Control (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by “pulsing” brake pressure to each wheel. This limits brake lockup and helps provide directional control for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by “pulsing” each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

Brake Assist (BA)

Brake Assist is designed to detect sudden or “panic” braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

Smart Stop Technology (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

