 


Subaru of America, Inc., Subaru Plaza,
P.O. Box 6000, Cherry Hill, NJ 08034-6000



MSA5B1410A
Issued July 2013
Printed in USA 12/13



2014 BRZ



Quick Reference Guide



Complete U.S. specifications and illustrations may not have been available at time of publication. Specifications are based on the latest product information available at time of publication. Some images shown are for illustration purposes only. Some equipment shown may be optional at extra cost. Specific options may be available only in combination with other options. Specific combinations of equipment or features may vary from time to time and by geographic area. Certain accessories and equipment may not be available at the time of publication.

This Quick Reference Guide applies to all BRZ models. Therefore, some explanations may be for equipment not installed on your vehicle. Subaru of America, Inc., reserves the right to change or discontinue at any time, without notice, prices, colors, materials, equipment, accessories, specifications, models and packages without incurring any obligation to make the same or similar changes on vehicles previously sold. Colors shown may vary due to reproduction process.

For detailed operating and safety information, please consult the Owner's Manual.

Subaru, Outback, Legacy, Forester, Impreza, WRX, WRX/STI, BRZ, BOXER, SI-DRIVE, Lineartronic, Alcantara, Circle Surround, XM and Sirius are registered trademarks.

All rights reserved. Contents may not be reprinted or electronically reproduced in whole or in part without prior written approval of Subaru of America, Inc.

© 2013 Subaru of America, Inc.

Table of Contents

Getting Started	2 - 3
Instrument Panel	4 - 5
Gauges	6 - 7
Personalize	8 - 11
Controls	12 - 19
While Operating	20 - 23
Safety/In Case of Emergency	24 - 25
Additional Information	26 - 27

Getting Started

Remote Keyless Entry

1. Lock/Arm

- Press to lock all doors and trunk and activate the security alarm.
- If any of the doors or the trunk are not fully closed, an electronic chirp will sound to alert you that the doors or the trunk are not properly closed.

2. Opening the Trunk Lid

Press and hold to unlock the trunk lid. An electronic chirp will sound.

3. Panic Alarm

- Press and hold, the horn will sound and the hazard lights will flash.
- Press any button on the remote to deactivate.

4. Unlock/Disarm

- Press once to unlock the driver's door.
- Press twice (within five seconds) to unlock all doors.
- When the "Unlock/Disarm" button is pressed, the dome and map lights will illuminate if the dome light switch is in the middle position.



Keyless Access with Push Button Start System (if equipped)

By simply carrying the access key in your pocket; you can lock and unlock doors, open the trunk lid and start your car without ever having to take the keyfob out of your pocket.



Seating



Seat Controls

1. Forward/Backward

Pull up on the lever below the front of the driver's seat to move the seat forward or backward.

2. Raise/Lower Seat Cushion

To adjust the height of the driver's seat, push or pull the seat height adjustment lever located on the lower left side front of the seat.

3. Recline Seatback

To adjust the seatback to the desired position, pull up on the recline lever located on the lower left side rear of the driver's seat or lower right side rear side of the passenger's seat. Do not adjust seats while driving.

4. Seatback Fold Strap

 
To get in and out of the back seats, pull the seat strap to fold the desired seat. When finished, push the seatback until it locks in place.

Heated Seats (if equipped)

Switches are located on the center console between the driver and passenger seats. Choose low (bottom of switch) for normal heating or high (top of switch) for rapid heating. Choose the center position to turn off the seat heaters.

Folding Down the Rear Seats

Lower the headrests. Open the trunk and pull the release strap on the seat side that you want to fold down. To return the seatback to its original position, raise the seatback until it locks into place and make sure that it is securely locked.

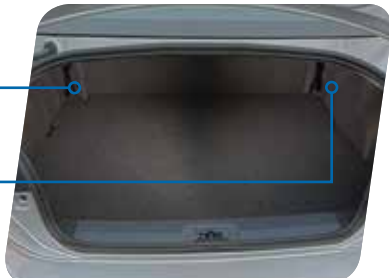

Instrument Panel



pg. 12

pg. 20

pg. 12

pg. 9

pg. 6-7

pg. 19

pg. 20



pg. 13

pg. 14-15


pg. 16

pg. 21

Clock

Press the “H” button to adjust the hours and the “M” button to adjust the minutes. Vehicles with a navigation system, please refer to the separate booklet “Operating Instructions for Navigation System.”

 Gauges

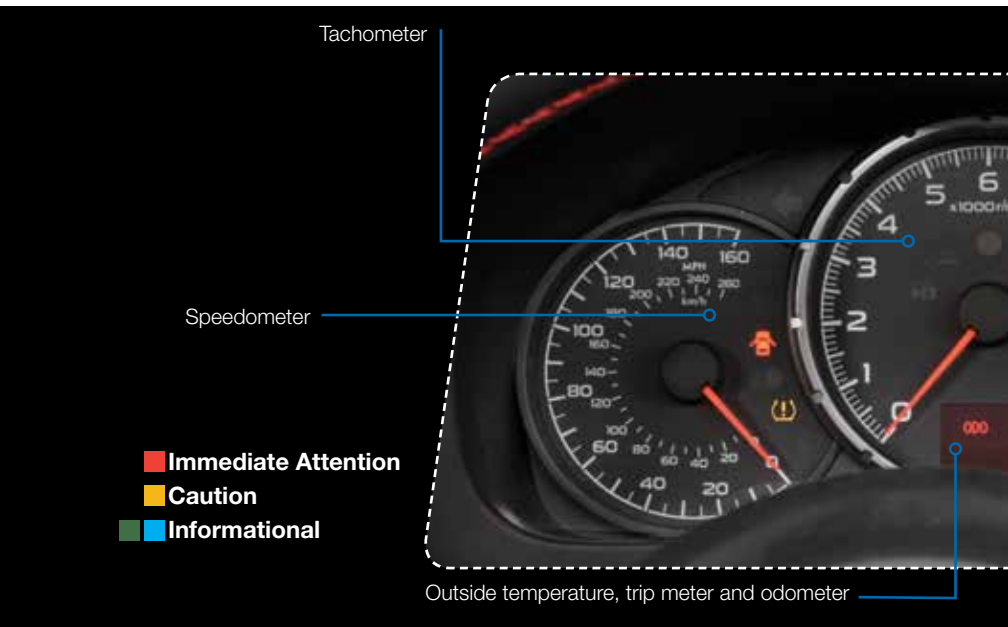

Seatbelt warning



REV indicator



Front passenger seatbelt warning



Hot coolant temperature/
Cold coolant temperature



SRS airbag system



High beam indicator light



Engine immobilizer indicator light



AT OIL TEMP
(Automatic Transmission)



Door open



ABS warning



Charge warning



Low fuel



Oil pressure warning



 
SNOW indicator
(Automatic Transmission)



Power steering warning



Slip indicator

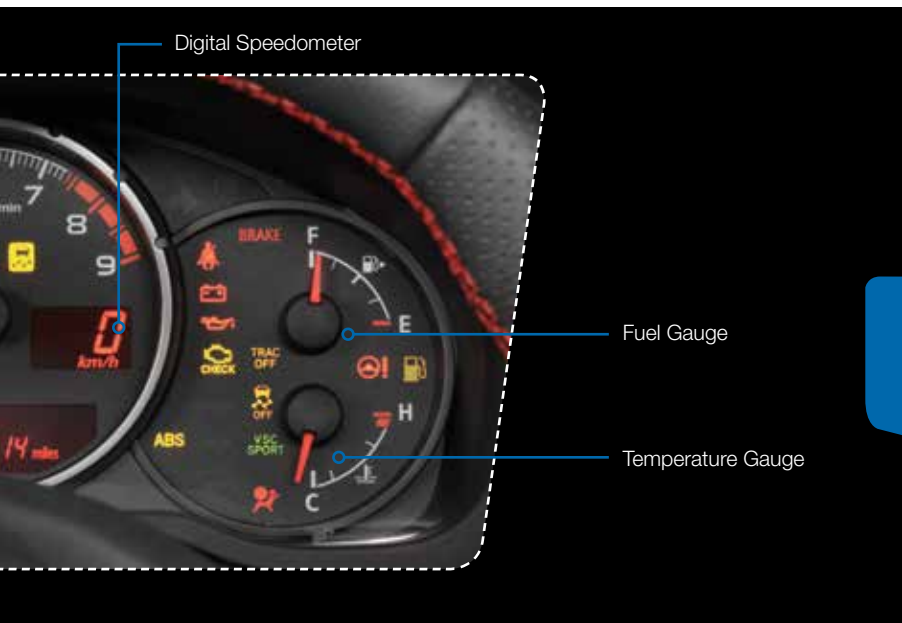

VSC off



Turn signals

CHECK engine/
Malfunction indicatorFront fog light indicator
light (if equipped)

Tire pressure warning light

Cruise control
indicator lightFront passenger frontal
airbag OFF/ONCruise control set
indicator lightHeadlight leveler
(if equipped)SPORT indicator
(Automatic Transmission)

TRAC OFF indicator



VSC SPORT indicator

Smart key system
(if equipped)

Personalize



 
Tilt Steering Column

Push the lever down firmly to adjust the height position of the column; firmly push the lever back up to lock the column in place. Do not adjust while driving.

Power Exterior Mirrors

Turn the knob to the “L” to adjust the left-hand mirror or to the “R” to adjust the right-hand mirror. Move the knob in the direction you want to move the mirror. Then return the knob to the neutral/center position.



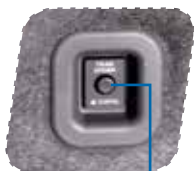

Trunk Lid Cancel Button

Prevent unauthorized entry into the trunk by locking the trunk release lever. Press the trunk lid cancel button to lock the trunk release lever. The trunk can only be opened using the master key. Press the button in to unlock the trunk release lever.



km/h - MPH, ODO - TRIP and DISP Buttons

1. Press this button to change the digital display from km/h to MPH. Press again to switch back.
2. Press this button to cycle through the odometer, trip meter A, trip meter B, the setting screen for the tachometer needle or the setting screen for the shift position indicator.
3. Press this button to cycle through the outside temperature, current fuel consumption, average fuel consumption or the setting screen for the REV indicator.

 
Bluetooth for AM/FM Stereo HD Radio® with Single Disc CD Player and Navigation System



AUDIO BUTTON

Pairing Your Cell Phone

Press the **AUDIO BUTTON**; touch the up and down arrows at the top or bottom of the column on the display, until the "Info" soft key appears. Then touch the "Info" soft key.

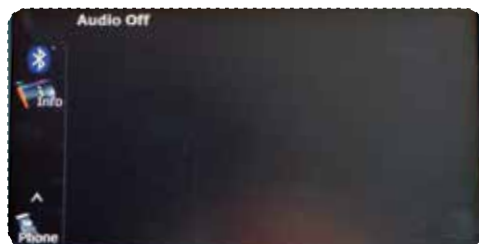


Then touch "Bluetooth."



Now touch "Connect Phone."



 Touch "Add New."

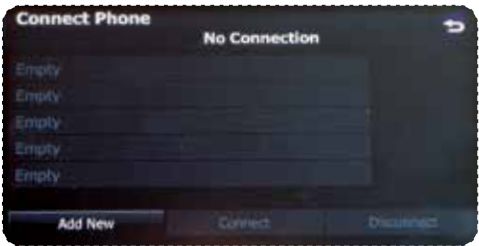

A pass-key pairing number will appear on the screen. Put your phone into Bluetooth pairing, search or discoverable mode. Depending on the phone's make, model and software; the phone may connect automatically or the pass-key number may need to be inputted on the phone. Pair your phone to the system.



When the phone is successfully paired, the screen will show the phone's name on the list.



 
Controls

Light Controls

Push up for right turn signal.

Turns on headlights, instrument panel illumination, parking lights, tail lights and license plate lights.

Push down for left turn signal.

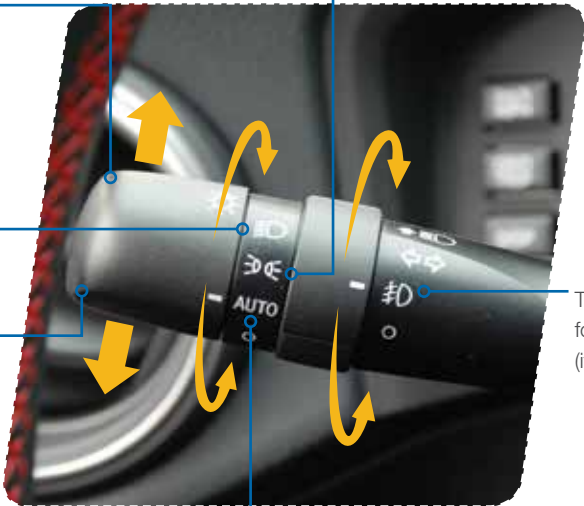


Turns on instrument panel lights, tail lights, parking lights and license plate lights.

Turns on fog lights (if equipped).

AUTO: The vehicle's lights are automatically on or off depending on the level of the outside light.

Illumination Brightness Control

 While the light switch is on, rotate the dial downward to dim the instrument panel illumination. Rotate the dial upward to make the illumination brighter. When the dial is fully rotated upward, the instrument panel illumination becomes full bright.

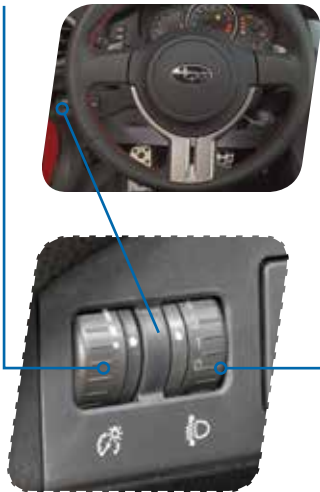

Headlight Beam Leveler

High-Intensity Discharge (HID) headlights generate more light than conventional halogen headlights. Therefore, a driver of an oncoming vehicle may experience too much glare when your headlight beam height adjustment is high because the vehicle is carrying a heavy load. The headlight beam leveler can be used to adjust beam height to avoid such a condition. To lower the beam, turn the knob to the higher numbers.



 
Windshield Wipers

To turn on the wipers, press the wiper control lever down one level for intermittent, two levels for low, or three levels for high speed. Return the lever to the “OFF” position to stop the wipers. For a single wipe, move the lever up. To spray washer fluid, pull and hold the lever toward you.

Daytime Running Lights

Daytime running lights are standard on your vehicle. Only a reduced brightness high beam will be automatically turned on when the engine has started and the parking brake is fully released or the light switch is in the “OFF” or “ ” position. The brightness of the illumination of the high beam headlights is reduced by the daytime running light system. You must always switch on your headlights when it’s dark outside by turning the light switch to the  position.

Controls

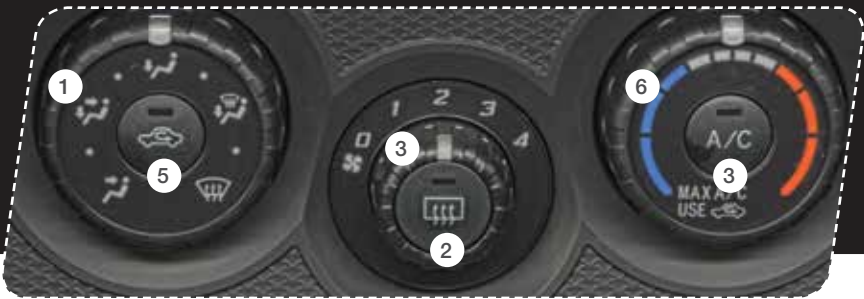

Manual Climate Control

1. Air Flow Control Dial

The air flow control dial allows you to choose the direction of air flow. Rotate the dial for the desired air flow position.

Defrost/Defog

To clear the windshield and front door windows of fog or frost, rotate the air flow control dial to the defrost position, set the temperature control to the red position, and set the fan speed control to the fastest speed.



Automatic Climate Control System (if equipped)

1. Automatic On and Off

This system automatically controls outlet air temperature, fan speed, air flow distribution, air inlet control, and air conditioner compressor operation. Press “AUTO” to activate. Push “OFF” to turn off the system.

2. Temperature Control Dials

Rotate the dial to select a temperature and maintain a comfortable climate within the driver and passenger compartment. Temperature is displayed digitally on the screen. Separate temperature settings can be adjusted for the driver's side and passenger's side.

2. Rear Window Defogger Button

Press the rear window defogger button to turn on the defogger. The defogger will automatically shut off after about 15 minutes. If the window clears before that time, you can press the button again to turn it off.

3. Fan Speed Control Dial

Rotate the fan speed control dial to select one of four fan speeds.

4. Air Conditioning Button

Press the "A/C" button to activate the air conditioning. Press it again to turn off the air conditioning.

5. Recirculated/Outside Air Button

Press the air inlet selection button to prevent outside air from being drawn

into the passenger compartment.

If the button is pushed in, press it again to draw outside air into the compartment. TO PREVENT WINDSHIELD FOGGING, DO NOT REMAIN IN THE RECIRCULATED MODE FOR AN EXTENDED PERIOD OF TIME.

6. Temperature Control Dial

Rotate the temperature control dial from blue for cool, to red for warm.

Operation in Manual Mode

3. Recirculated/Outside Air Switch

Push the air inlet selection button to prevent outside air from being drawn into the passenger compartment. Push the button again to allow outside air into the compartment. TO PREVENT WINDSHIELD FOGGING, DO NOT REMAIN IN THE RECIRCULATED MODE FOR AN EXTENDED PERIOD OF TIME.

4. Fan Speed Control Dial

On the automatic setting, the system determines the fan speed to achieve the desired temperature or you can manually rotate the fan speed control dial to select one of seven fan speeds.

5. Air Flow Mode Selection Button

Press the button to select the desired air flow mode. The selected air flow mode is shown on the display above.

6. Dual Mode Switch

Push the "DUAL" switch to activate or deactivate the dual mode. Dual mode makes it possible to have separate temperature settings for the driver's side and passenger's side.

7. Air Conditioner Switch

Push the "A/C" switch to activate the air conditioning. Push it again to turn off the air conditioning.

8. Front Defroster Button

Press the button to defrost or dehumidify the windshield and front door windows.

9. Rear Window Defogger Switch

Push the switch to turn on the defogger. It will automatically shut off after about 15 minutes. If the window clears before that time, you can push the switch again to turn it off.

Controls



AM/FM Stereo HD Radio® with Single Disc CD Player and Navigation System*

Radio Functions

1. Power/Volume Control

Press the power/volume control knob for on or off; rotate the knob to control the volume.

2. Audio Source

Press the “AUDIO” button to display the audio screen. Touch the audio source you want to hear. Use the arrow to scroll down the list of available sources.

3. Sound Settings

While in an audio operations screen touch the “Sound” key. You will be able to adjust EQ, sound position, SVC (Source Volume Control) and ASL (Automatic Sound Levelizer) settings.

CD Player Functions

4. Load

Insert a disc into the slot. The CD will automatically be drawn in and will begin play at the first track.

5. Eject

Press the button to eject the disc.

*For more detailed information on audio operation, please refer to the Navigation Owner's Manual.



USB Port (if equipped)

The USB port is located underneath the climate controls. You can connect a USB equipped portable music player to the USB port and hear the music stored on it through the vehicle speakers. Press the “AUDIO” button located on the audio system and then touch the “USB” key to select the USB mode.

Auxiliary Input Jack

The 3.5mm auxiliary input jack is located underneath the USB port. You can connect a portable music player to the auxiliary jack and hear the music stored on it through the vehicle speakers. Press the “AUDIO” button located on the audio system and then touch the “AUX” key to select the auxiliary mode.

Controls



Driving Systems/Modes

To help enhance driving safety and performance, the following systems operate automatically in response to various driving situations.

1. If the vehicle gets stuck in mud, dirt or snow, the traction control system may reduce power from the engine to the wheels. Turning the system off may make it easier for you to rock the vehicle in order to free it. Press the button again to turn the traction control back on.
2. Your vehicle is equipped with two types of control modes to accommodate various driving preferences. The control modes can be selected with the "VSC SPORT" button. Normal mode allows secure and smooth normal driving. When the button is pressed, Vehicle Stability Control (VSC) SPORT mode is activated.
3. If equipped, push the switch toward the "SPORT" mode for sporty driving or when driving in mountainous regions with lots of curves. To cancel sport mode, push the switch toward "SPORT" mode again.

 
If equipped, push the switch toward the "SNOW" mode for accelerating and driving on slippery road surfaces, such as snow. To cancel snow mode, push the switch toward "SNOW" mode again.

For more detailed information, please refer to your Owner's Manual.

Cruise Control

- To resume your speed after canceling, push the lever up to the “RES” side.

- To cancel the cruise control, pull the lever toward you, push the brake pedal or press the “ON-OFF” button. If you have a manual transmission, you can push in the clutch pedal.

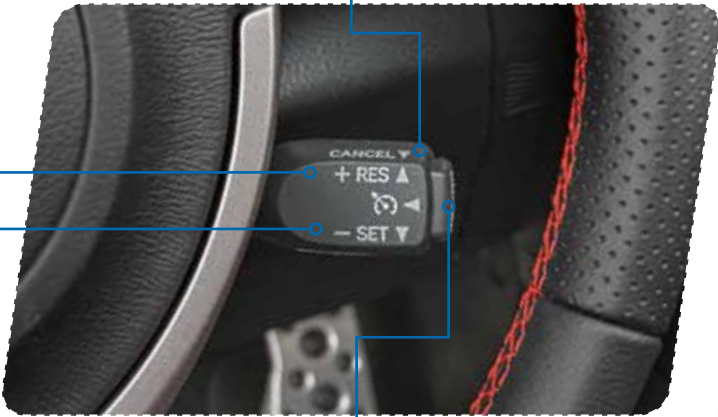

- Press the accelerator pedal until your vehicle reaches the desired speed. Push the lever down to the “SET” side and release. Ease off the accelerator pedal. Your vehicle will maintain the desired speed.

- To activate the cruise control, press the “ON-OFF” button. The cruise control indicator light on the instrument panel will turn on. To deactivate cruise control, press the “ON-OFF” button again.

Increase speed

Push the lever up to the “RES” side; hold until your vehicle reaches the desired speed and release. To increase speed using the accelerator pedal, press the pedal until you reach the desired speed. Push the lever down to the “SET” side to set the speed.

Decrease speed

Push the lever down to the “SET” side; hold until your vehicle slows to the desired speed and release. To decrease the speed using the brake pedal, press the pedal to release cruise control temporarily. When the speed decreases to the desired speed, push the lever down to the “SET” side to set the speed.

While Operating

Trunk and Fuel Filler Lid Releases

The vehicle is equipped with trunk and fuel filler lid releases. To open the trunk, press the trunk lever button. To open the fuel filler lid, pull the fuel filler lever up and release.



Paddle Shift Control Switches

- Temporary use: Even when the selector lever is in the “D” (Drive) position, you can temporarily shift the gear by pulling the “+” or “-” paddle shift control switch. The transmission will then automatically switch back to Normal Mode.
- When the shift selector lever is in Manual Mode, shift to the next higher gear by pulling the “+” paddle shift control switch on the steering wheel. Pull the “-” paddle shift control switch to shift into the next lower gear.





Automatic Transmission Shift Mode

The automatic transmission gives you ultimate control with two different driving modes: Normal Mode and Manual Mode.

Normal Mode

When the selector lever is in the “D” (Drive) position, the transmission is in Normal shift mode. The shift position indicator on the instrument panel shows “D” and the transmission automatically shifts into a suitable forward gear.

 
Manual Mode

In Manual Mode, you select the desired gear position to obtain necessary acceleration and engine braking. Moving the selector lever left into the manual gate ① from the “D” (Drive) position causes the transmission to change into Manual Mode. To shift, use the paddle shift control switches or gear lever. The shift position indicator shows the selected gear position.

When Manual Shifting Operation is Possible

- Arrow-shaped indicator lights in the center of the instrument panel show whether an upshift is possible and whether a downshift is possible.
 - Both arrows are on: Upshifting and downshifting are both possible.
 - Up arrow only is on: Only upshifting is possible.
 - Down arrow only is on: Only downshifting is possible.

BRZ Engine Compartment

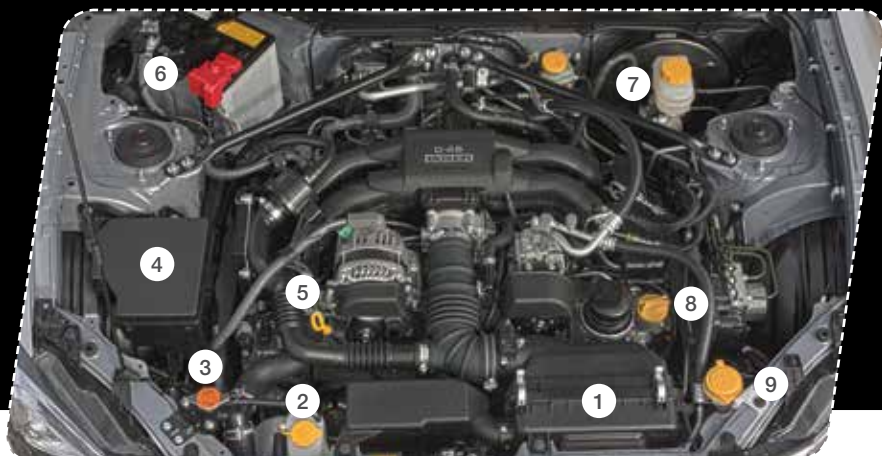

1. Air Cleaner Element

This element filters intake air. Follow the maintenance guidelines in your "Warranty and Maintenance" booklet. When necessary, replace this element with a genuine Subaru air cleaner.

2. Engine Coolant Reservoir

Check your coolant level at each fuel stop. Observe the coolant level on the outside of the reservoir while the engine is cool. If the level is close to – or lower than – the "LOW" level mark, add coolant to the "FULL" level mark. If the reserve tank is empty, remove the radiator cap and refill as required. Please refer to your Owner's Manual for details.

3. Radiator Cap

If your engine overheats, safely pull off the road and stop your vehicle in a safe place. Never attempt to remove the radiator cap until the engine has been shut off and has fully cooled down. If steam is coming from the engine compartment, turn the engine off and move everyone away from the vehicle until it cools. Please refer to your Owner's Manual for details.

4. Main Fuse Box

Your BRZ has two fuse boxes. One is located under the instrument panel, behind the fuse box cover on the driver's seat side. The other is housed in the engine compartment, as shown here. Fuses are designed to melt during an overload situation in order to prevent damage to the wiring harness and electrical equipment. If any lights, accessories or electrical controls fail to operate properly, inspect the corresponding fuse. If it has melted or appears discolored, replace it in accordance with the instructions in your Owner's Manual. The fuse puller and spare fuses are located in the main fuse box in the engine compartment.

5. Engine Oil Level Gauge

Check the engine oil level at each fuel stop. Pull out the dipstick, wipe it clean, and insert it again. Pull it out and check the oil level. If it's below the lower level, add oil to bring the level up to the upper level. Use only engine oil of the recommended grade and viscosity.

Please refer to your Owner's Manual for oil recommendations and other important details.

6. Battery

When your vehicle does not start due to a battery that has run down, the vehicle may be jump-started by connecting your battery to another battery with jumper cables. Jump-starting is dangerous if done incorrectly. Please refer to your Owner's Manual for instructions. If you're unsure about how to jump-start your vehicle, please consult a competent mechanic.

7. Brake Fluid Reservoir

Check your brake fluid level monthly. Observe the fluid level on the outside of the reservoir. If the level is below the "MIN" level mark, add the recommended brake fluid (FMVSS No. 116, fresh DOT 3 or 4 brake fluid) to the "MAX" level mark. Use only brake fluid from a sealed container.

8. Engine Oil Filler Cap

Change your oil according to the maintenance schedule in your "Warranty and Maintenance Booklet." Your engine oil must be changed more frequently when you drive on dusty roads, frequently make short trips, or when you drive in extremely cold weather.

9. Windshield Washer Tank

It's a good idea to check your washer fluid every time you stop for fuel. If the level is low, fill the windshield washer tank to the neck of the reservoir with windshield washer fluid. In cold weather, use a freeze resistant windshield washer fluid.

Safety/In Case of Emergency



Child Restraint System

For maximum safety, first carefully read the LATCH system instructions from the device manufacturer, as well as the installation instructions in your Owner's Manual, to properly install the LATCH compatible child restraint system. Use the appropriate seatbelts or anchorages provided in your vehicle. Children age 12 and under must properly occupy the rear seat at all times.



Internal Safety Trunk Release with Self-Illuminating Handle

In the event that children or adults become locked inside the trunk, this luminescent handle allows them to open the lid from inside the trunk. To open, simply pull the yellow handle downward as indicated by the arrow on the handle, and then push up on the lid.



Location of Spare Tire and Jack

A spare tire, jack, jack handle, towing eyelet, screwdriver and wheel nut wrench are stored under the floor of the trunk.

Subaru Roadside Assistance

Subaru Roadside Assistance is free and standard on every 2014 BRZ vehicle. Coverage is automatic; there are no forms to complete. Subaru Roadside Assistance is available anytime during the 3-year/36,000-mile Subaru Limited Warranty, whichever comes first.* A Subaru Roadside Assistance decal has been affixed to the driver's door window.

Subaru Roadside Assistance: 1-800-261-2155

Exclusions

Specifically excluded from Subaru Roadside Assistance coverage are service requests or claims resulting from: accidents, vandalism, acts of God, violation of any laws, or vehicle modifications not recommended by the manufacturer.

*See your dealer for details.

Additional Information



MY.SUBARU.COM

Your Subaru vehicle comes with a unique online resource that helps make your ownership experience more convenient and enjoyable. MySubaru.com is a website that you can personalize and offers useful features and content that makes it easy for you to manage your vehicle care and enjoy all the benefits of Subaru ownership. Log on to MySubaru.com to access features such as: automated service history, e-mail maintenance reminders, online Owner's Manual, warranty information, maintenance schedules and much more...

Access your site today @ MySubaru.com.

Fuel

Use premium unleaded gasoline with an octane rating of 91 AKI or higher.

Fuel Capacity

- 13.2 US gal (50 liters, 11 Imp gal)
- When the low fuel indicator light is displayed on the instrument panel, approximately 1.8 US gallons (7.0 liters, or 1.5 Imp gal) of fuel remain.
- If you have recently fueled your vehicle, the check engine light on the instrument panel may stay on due to a missing or loose fuel filler cap (the cap should be tightened until a click is heard).

Engine Oil

Use only the following oils:

- ILSAC GF-4 or GF-5, which can be identified with the ILSAC certification mark (Starburst mark).
- Or API classification SN or SM with the words “ENERGY CONSERVING”.
 - Use 0W 20 synthetic, replacement interval 7,500 miles; no requirement at the first 3,000 miles.

Engine Oil Capacity

- Without filter: 5.5 US qt (5.2 liters, 4.6 Imp qt)
- With filter: 5.8 US qt (5.5 liters, 4.8 Imp qt)

Notes

[illegible]

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

[illegible]

Subaru Delivery Checklist

Owner Information

VEHICLE ID #	
DELIVERY DATE	
OWNER NAME	
OWNER NAME	

Customer Resources & Warranty

- ☐ Present the Subaru Owner Manual and Quick Reference Guide (detailed review in “Operation and Controls” section)
- ☐ Review Subaru Roadside Assistance, owner cards and provide Toll-Free Number 1-800-261-2155
- ☐ Explain 3/36 BASIC warranty / 5/60 powertrain warranty / explain wear items and adjustments / review rust perforation warranty / tire warranty
- ☐ Review service and maintenance schedules and terms explain normal vs. extreme schedules (if applicable)
- ☐ Review new owner’s MY.SUBARU.COM website
- ☐ Explain dealership’s new owner follow up procedure

Customer Signature

- ☐ Review dealership service department location, payment options and hours of operation
- ☐ Introduce the Subaru Service Advisor and provide their business card
- ☐ Explain dealership service appointment scheduling and early morning service drop off procedures
- ☐ Review dealership parts department location and hours

Vehicle Condition

- ☐ Exterior condition approval (new owner indicates exterior of vehicle is clean and undamaged)
- ☐ Interior condition approval (new owner indicates interior of vehicle is clean and undamaged)
- ☐ Operational condition approval (new owner has driven vehicle and approves it is ready for delivery)

NEW OWNER SIGNATURE
SALES CONSULTANT SIGNATURE
SALES MANAGER SIGNATURE

Fold back and remove this checklist from the QRG. Place this completed checklist in the deal jacket for future reference. Additional copies of this checklist can be made by photocopying.

Operation & Controls

Please use and reference the **SUBARU OWNER MANUAL** for more detailed information.

OPERATION & CONTROLS

- ☐ Review Master and Valet Keys
- ☐ Show Keyless Entry, Alarm System and Remote Start (if equipped)
- ☐ Show hood and gas door releases
- ☐ Show yellow caps in engine compartment and explain checking and filling of vehicle fluids
- ☐ Show fuel filler door and gas cap operation
- ☐ Show location of fuse boxes

REAR & SIDE

- ☐ Show trunk release and valet feature
- ☐ Show spare tire, tools and jack location
- ☐ Explain temporary spare tire usage and limitations
- ☐ Explain AWD towing requirements and limitations
- ☐ Show LATCH System and Tethers
- ☐ Show Child Safety Lock operation

INTERIOR

- ☐ Explain operation of manual transmission
- ☐ Explain operation of automatic transmission and review sport and manual modes (if equipped)
- ☐ Show heated front seats, windshield wiper de-icer and heated side mirrors (if equipped)
- ☐ Show seatbelt and head restraint functions
- ☐ Show tilt steering column feature
- ☐ Explain the Subaru Advanced Frontal Airbag System (SRS), Front-Seat Side Pelvis / Torso Airbags (SRS) and Side-Curtain Airbags (SRS)

DRIVER CONTROLS & OPERATION

- ☐ Show Power Windows, Door Locks and Side-View Mirror operation
- ☐ Explain Cruise Control
- ☐ Show Auto Headlights, Daytime Running Lights, Parking Lights, Hazard Lights and Fog Lights
- ☐ Show interior lighting, map light and clock
- ☐ Show front wiper and washer controls
- ☐ Show climate control system including front and rear defrosters
- ☐ Show and explain operation of VSC control switch
- ☐ Review Instrument Panel Gauges and Warning Lights
- ☐ Explain Tire Pressure Monitoring System and indicator light
- ☐ Show Audio System, Station Presets, Tone, Balance, Fade Controls, USB and AUX jack
- ☐ Show GPS Navigation System (if equipped)
- ☐ Assist customer with pairing cell phone

☐ Explain operation of other vehicle options, equipment, or Genuine Subaru Accessories not referenced above where applicable