

**2014
Tacoma
Quick Reference Guide**

2014 Tacoma

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Tacoma.

A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Tacoma operations. Every Tacoma owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	7
Fuel tank door and cap	6
Hood release	6
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry*	6

FEATURES/OPERATIONS

Air Conditioning/Heating	16
Audio	14-15
Automatic Transmission	8
Clock	16
Cruise control	13
Four-wheel drive	9
Lights & turn signals	12
Light control-Instrument panel	8
Parking brake	10
Power outlets	17
Rear differential lock	18
Seat adjustments-Front	10
Seats-Folding rear	11
Seats-Head restraints	10
Tilt and telescopic steering wheel	9
VSC OFF switch	18
Windows-Power	12
Windshield wipers & washers	13

SAFETY AND


EMERGENCY FEATURES

Door locks-Power	19
Doors-Child safety locks	20
Floor mat installation	23
Seat belts	19
Seat belts-Shoulder belt anchor	19
Spare tire & tools	21
Star Safety System™	22-23
Tire Pressure Monitoring (warning) System	20

* Visit your Toyota dealer for information on this and other customizable options.

OVERVIEW

Instrument panel

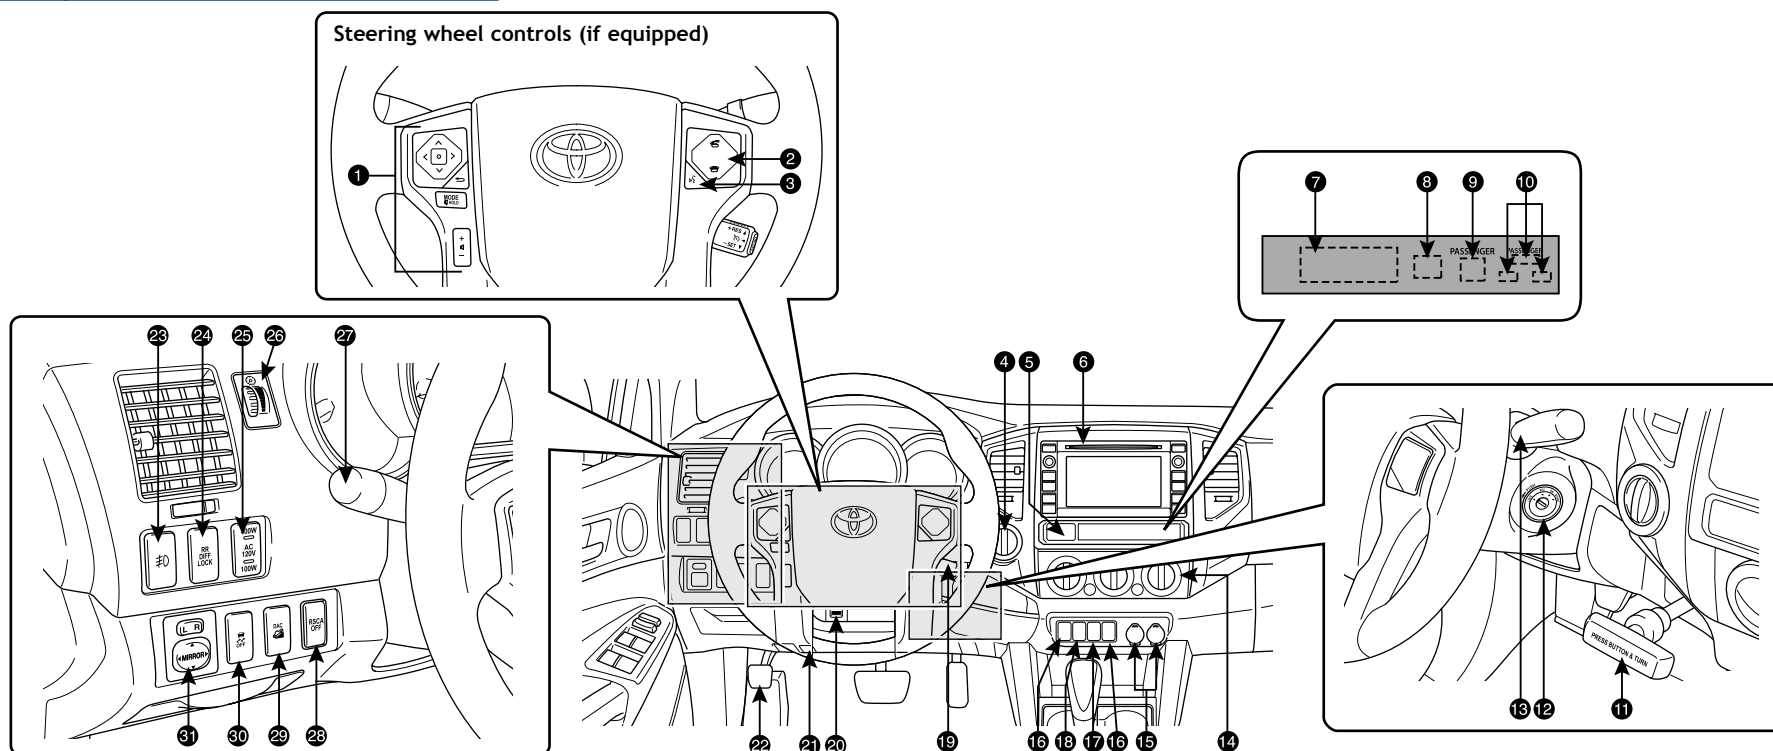

- 1 Steering wheel audio controls⁴
- 2 Telephone controls⁴
- 3 Voice command button⁴
- 4 Two-wheel/Four-wheel drive selector¹
- 5 Emergency flasher button
- 6 Multimedia system^{1,4}
- 7 Clock
- 8 Theft deterrent system/Engine immobilizer indicator¹
- 9 Front passenger seat belt reminder
- 10 Front passenger occupant classification indicator or front passenger airbag ON/OFF indicator
- 11 Parking brake lever²
- 12 Ignition switch
- 13 Windshield wiper and washer controls
- 14 Air Conditioning controls
- 15 12V DC Power outlets
- 16 Seat heater switches¹
- 17 AUX/USB port
- 18 "A-TRAC" (Active traction control system) switch¹
- 19 Cruise control¹
- 20 Tilt and telescopic steering lock release lever
- 21 Tire Pressure Monitoring (warning) System reset
- 22 Parking brake pedal³
- 23 Front fog light switch¹
- 24 Rear differential lock switch¹
- 25 120V AC Power outlet ON/OFF switch¹
- 26 Instrument panel light control
- 27 Headlight and turn signal controls
- 28 "RSCA OFF" (Roll Sensing Curtain shield Airbags OFF) switch¹
- 29 "DAC" (Downhill Assist Control) button¹ or clutch start cancel switch¹
- 30 Vehicle Stability Control OFF switch
- 31 Power rearview mirror control switches¹

- 21 Tire Pressure Monitoring (warning) System reset
- 22 Parking brake pedal³
- 23 Front fog light switch¹
- 24 Rear differential lock switch¹
- 25 120V AC Power outlet ON/OFF switch¹
- 26 Instrument panel light control
- 27 Headlight and turn signal controls
- 28 "RSCA OFF" (Roll Sensing Curtain shield Airbags OFF) switch¹
- 29 "DAC" (Downhill Assist Control) button¹ or clutch start cancel switch¹
- 30 Vehicle Stability Control OFF switch
- 31 Power rearview mirror control switches¹

¹ If equipped


² Manual Transmission only

³ Automatic Transmission only

⁴ For details, refer to "Navigation System Owner's Manual."

NOTE: For vehicles equipped with Entune™, please consult the "Navigation System With Entune Quick Reference Guide" or www.toyota.com/entune.

Instrument cluster

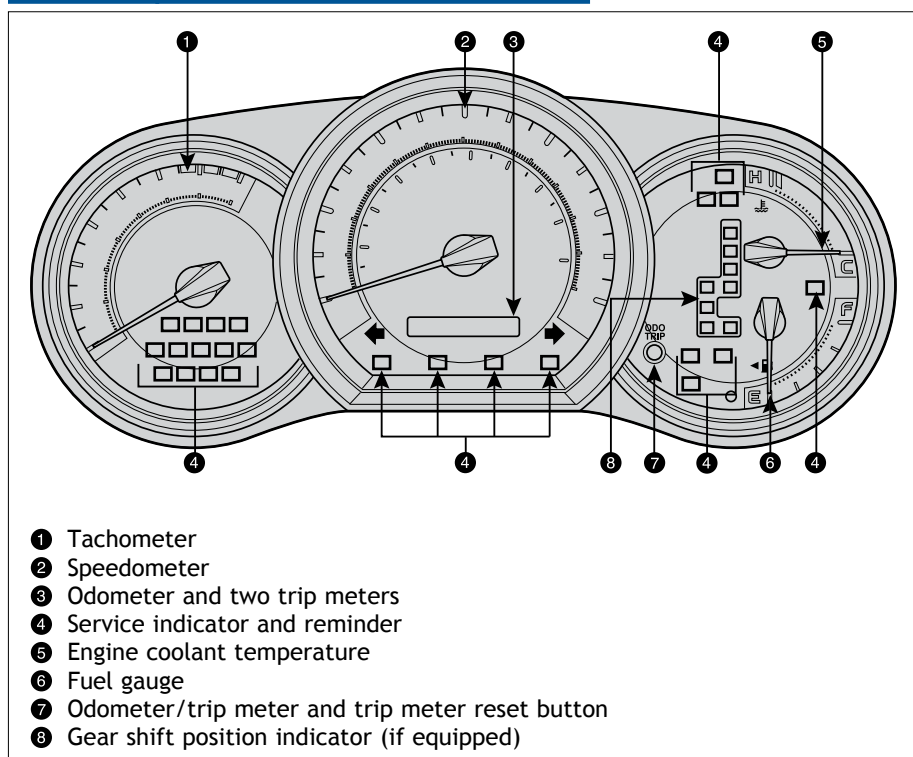

Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2014 Owner’s Manual.

	Brake system warning ¹
	Driver/Front passenger seat belt reminder
	Charging system warning ¹
	Front passenger occupant classification indicator/ Front passenger airbag ON/OFF indicator
	Low engine oil pressure warning ¹
	Malfunction/Check Engine indicator ¹
	Engine oil replacement reminder ¹

	Open door warning
	Airbag SRS warning ¹
	Automatic Transmission fluid temperature warning ¹
	Low Tire Pressure Warning ¹
	Theft deterrent/Engine immobilizer system indicator
	Roll Sensing Curtain shield Airbags OFF indicator ¹
	Headlight low beam indicator
	Headlight high beam indicator
	Turn signal indicator
	Automatic Transmission indicator (5-speed)/(4-speed)
	Four-wheel drive indicator ²
	Low speed four-wheel drive indicator ²
	Rear differential lock indicator ^{1,3}
	Slip indicator ¹
	Vehicle Stability Control OFF indicator ¹
	Active traction control system indicator
	Traction control OFF indicator ¹
	Downhill Assist Control system indicator ¹
	AUTO Limited Slip Differential indicator ¹
	Cruise control indicator ⁴
	Low fuel level warning
	Anti-lock Brake System warning ¹

¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.


² If this light flashes, refer to “Four-wheel drive system,” Section 2-4, 2014 Owner’s Manual.

³ If this light flashes, refer to “Rear differential lock system,” Section 2-4, 2014 Owner’s Manual.

⁴ If this light flashes, refer to “Cruise control,” Section 2-4, 2014 Owner’s Manual.


Keyless entry (if equipped)

Locking operation

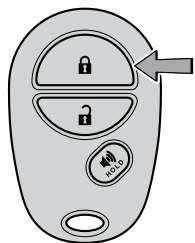

Push

Unlocking operation

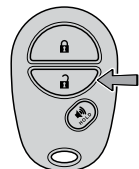


Push ONCE: Driver door
TWICE: All doors



NOTE: If a door is not opened within 30 seconds of unlocking, all doors will relock for safety.



Panic button

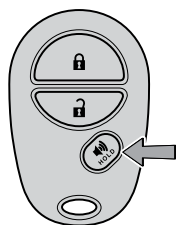


Push and hold



Fuel tank door and cap

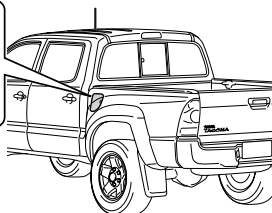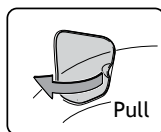


Turn to open

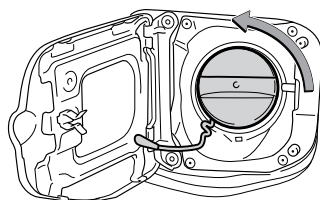


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “ CHECK” indicator may illuminate.

Hood release

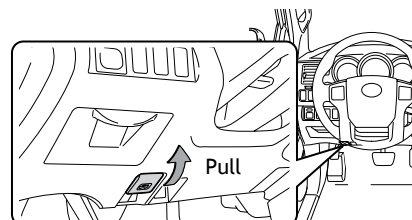


Pull up latch and raise hood

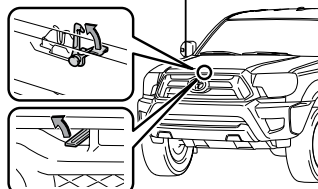


Engine maintenance

4 cylinder (2TR-FE) engine

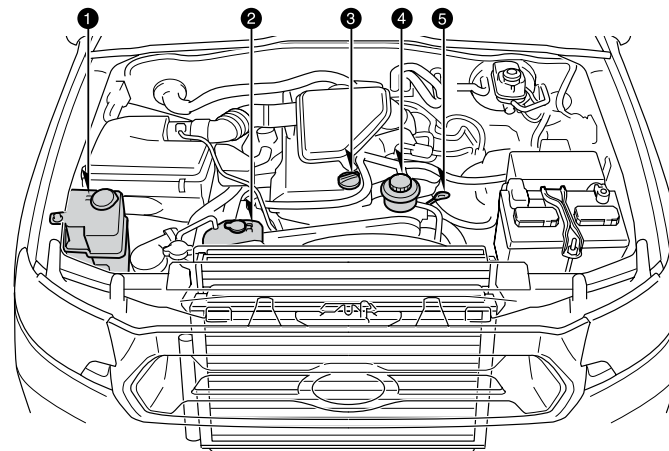

6 cylinder (1GR-FE) engine

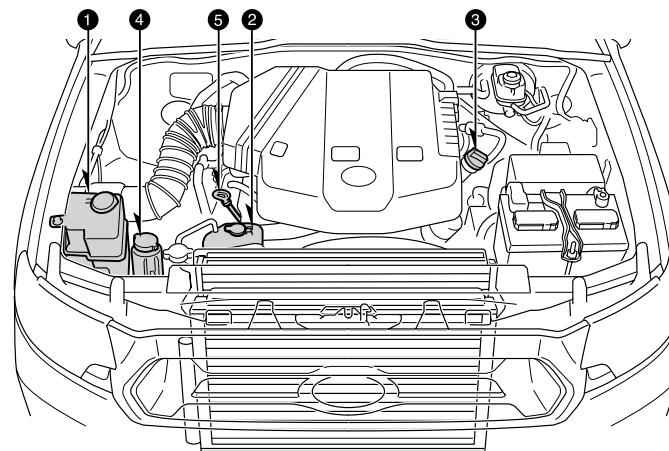


- 1 Windshield washer fluid tank
- 2 Engine coolant reservoir
- 3 Engine oil filler cap
- 4 Power steering fluid reservoir
- 5 Engine oil level dipstick

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “*Warranty & Maintenance Guide*.”


FEATURES/OPERATIONS

Automatic Transmission (if equipped)

5-speed models

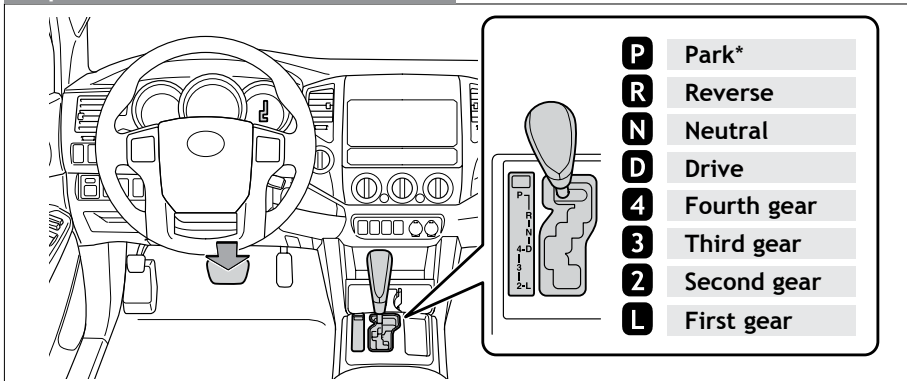


4-speed models

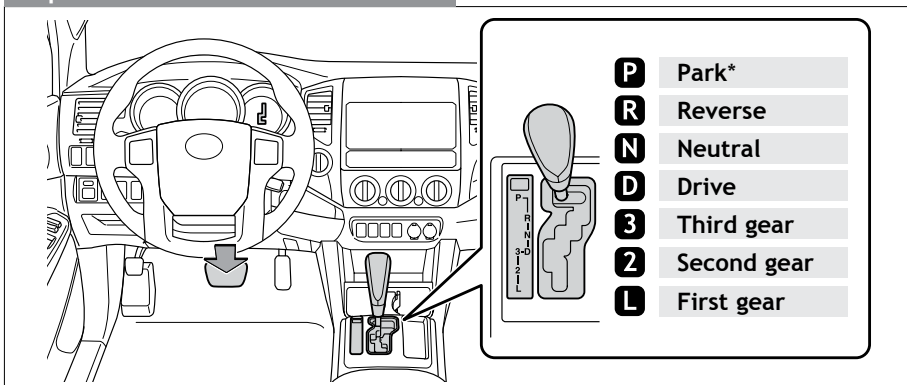


*The ignition switch must be "ON" and the brake pedal depressed to shift from Park.

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Light control-Instrument panel

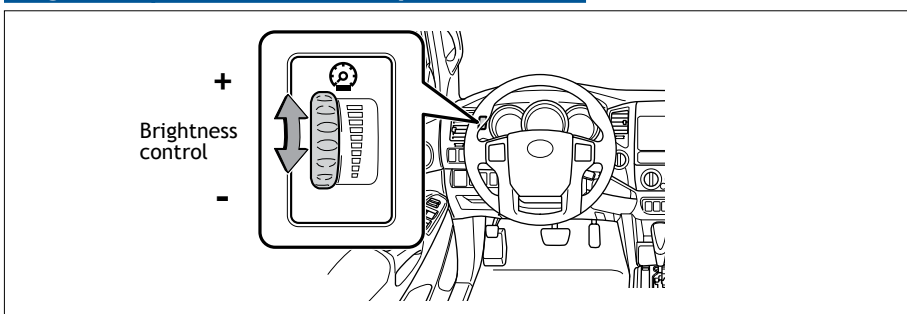


Four-wheel drive (if equipped)

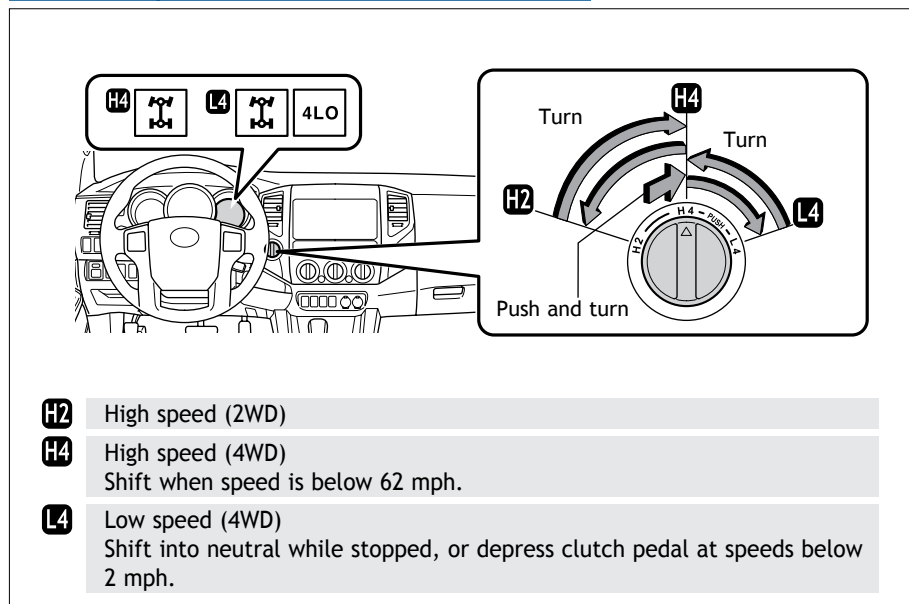

For best fuel economy and performance under normal driving conditions, keep in "H2" position.

Tilt and telescopic steering wheel

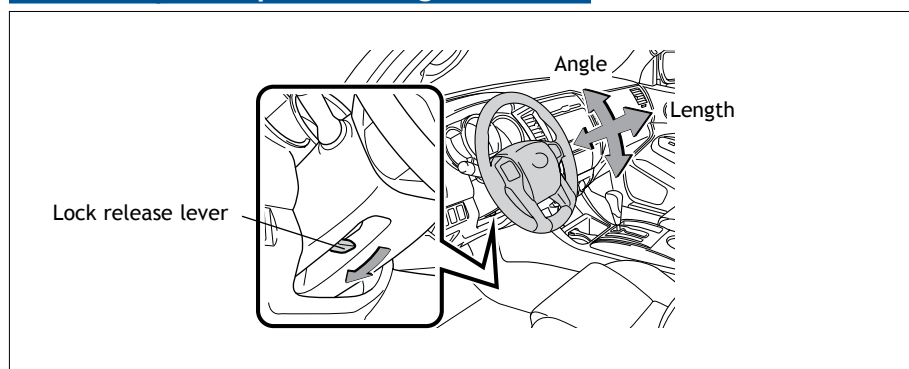


Hold wheel, push lever down, set angle and length, and return lever.

NOTE: Do not attempt to adjust while the vehicle is in motion.

Parking brake

Automatic Transmission


BRAKE

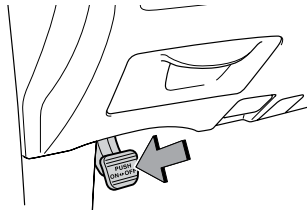

Set: Depress
Release: Depress again

Manual Transmission


Set

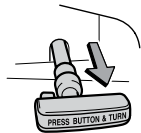

BRAKE

Release


(1) Push button

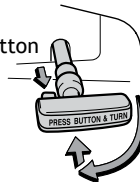

(2) Turn and push in lever


Seats-Head restraints

Separate seats-Front

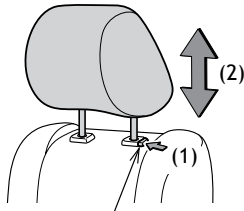

Lock release button


Bench seat-Front

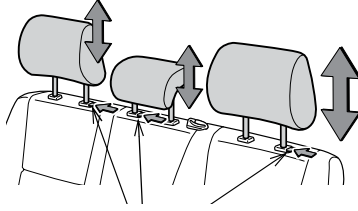

Lock release button


Seat adjustments-Front

Separate seat

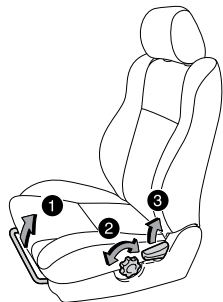

- ① Seat position (forward/backward)
- ② Driver's seat lumbar support (if equipped)
- ③ Seatback angle


Bench seat

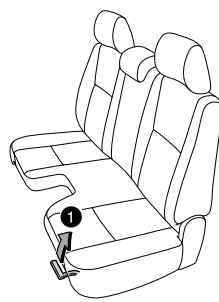


Seats-Folding rear

Access cab

(1)

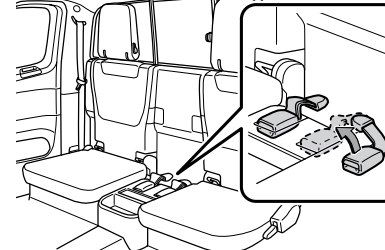


(2)

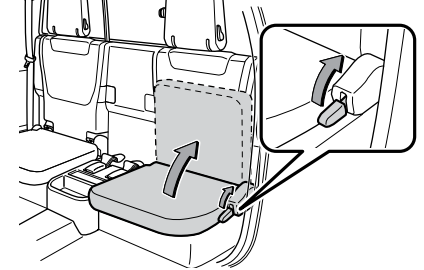


- (1) Stow the seat belt buckles.
- (2) Raise the bottom cushion up while pulling the lever until it locks.

Double cab


(1)

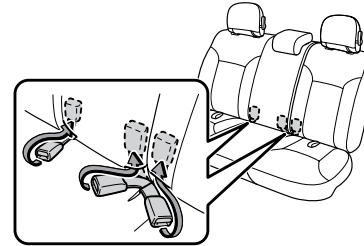


(2)

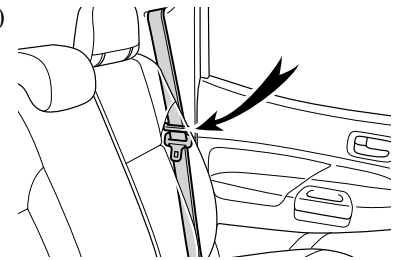


(3)

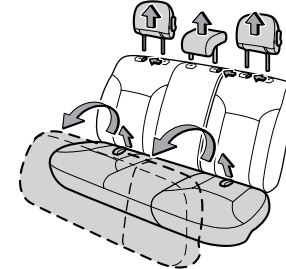

(4)

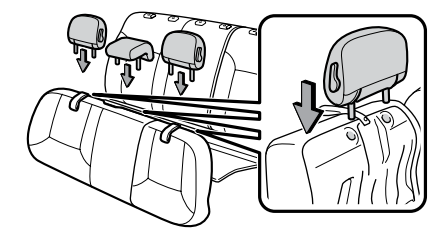


(5)

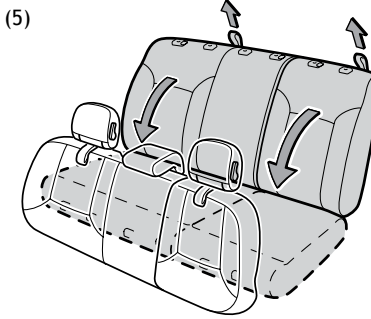

- (1) Stow the seat belt buckles.
- (2) Pass the seat belt through the seat belt hangers.
- (3) Remove the head restraint and swing the bottom cushion.
- (4) Attach the head restraints.
- (5) Fold down the seatback.


Lights & turn signals

Headlights

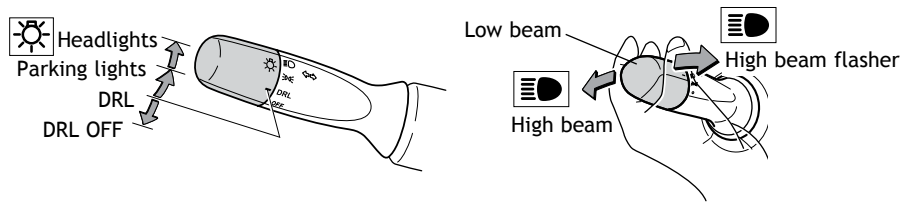


- Daytime Running Light system** Automatically turns on the front turn signal lights upon starting engine and releasing parking brake.
- Automatic light cutoff system** Automatically turns lights off when driver's door is opened with the ignition switch in the "ACC" or "LOCK" position.

Front fog lights (if equipped)

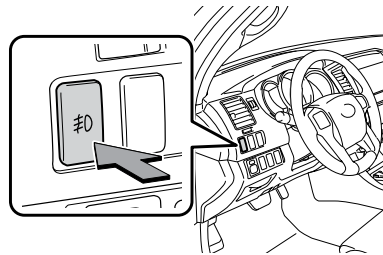


Front fog lights come on only when the headlights are on low beam.

Turn signals

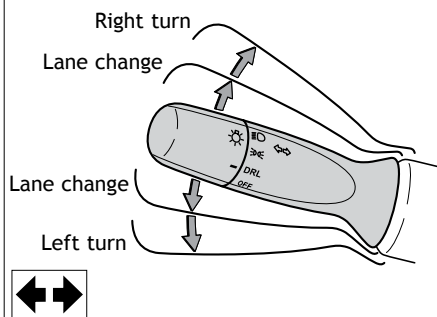


Windows-Power (if equipped)

Driver side

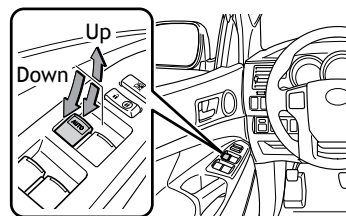

Window lock switch

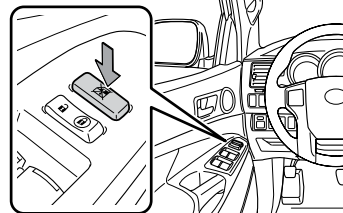

Automatic down operation (driver side only)


Push the switch completely down and release to fully open. To stop the window partway, operate the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.


Windshield wipers & washers

With intermittent wiper

Type A

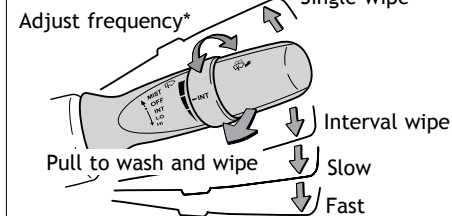


Type B

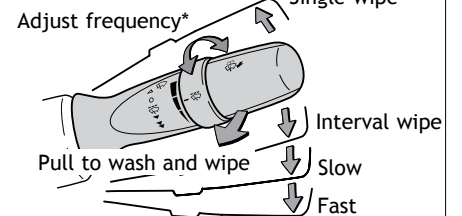


*** Intermittent windshield wiper frequency adjustment**
Rotate to increase/decrease wipe frequency.

Without intermittent wiper

Type A

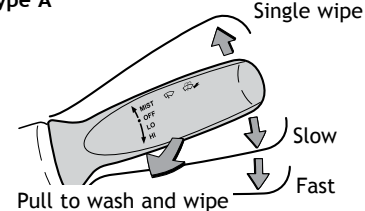


Type B

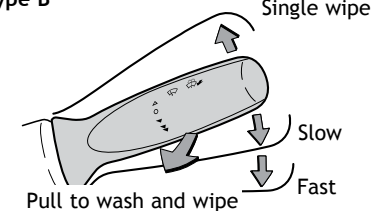


Cruise control (if equipped)

Turning system ON/OFF

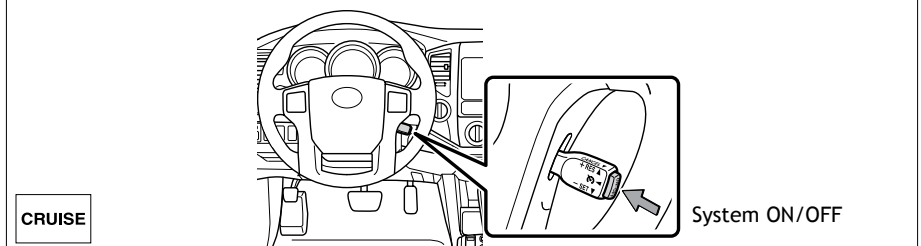

Functions

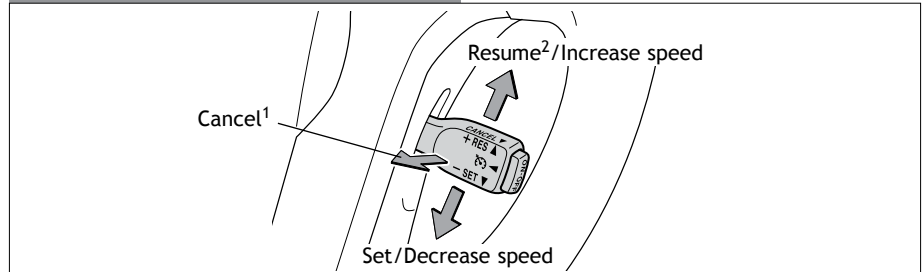


¹ The set speed may also be cancelled by depressing the brake pedal.


² The set speed may be resumed once vehicle speed exceeds 25 mph.

Audio

Entune Audio

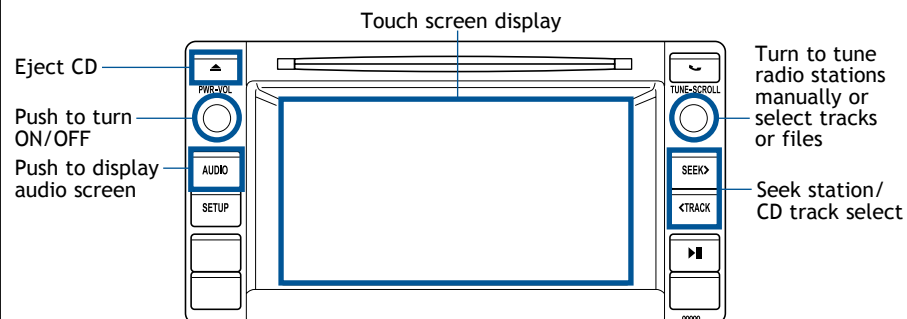


Entune Audio Plus*¹/Entune Premium Audio*¹

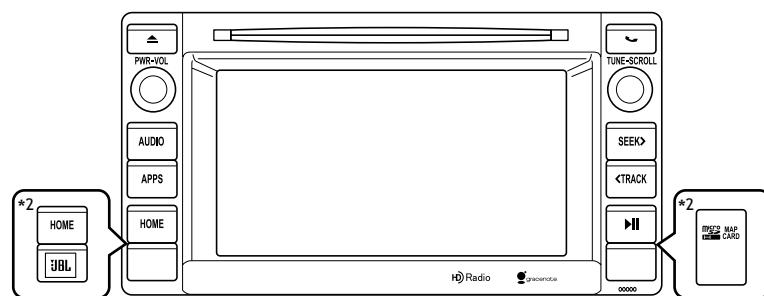

*¹ Refer to the "Navigation System Owner's Manual" for instruction.

*² Entune Premium Audio

Steering wheel switches

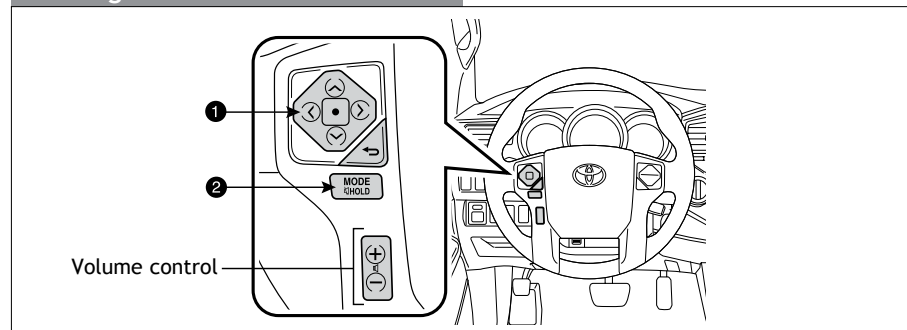


① "Λ V"

Use to search within the selected audio medium (radio, CD, iPod®, etc.).

② "MODE"

Push to turn audio ON and select an audio mode. Push and hold to pause the music or mute.

iPod®/USB/AUX port

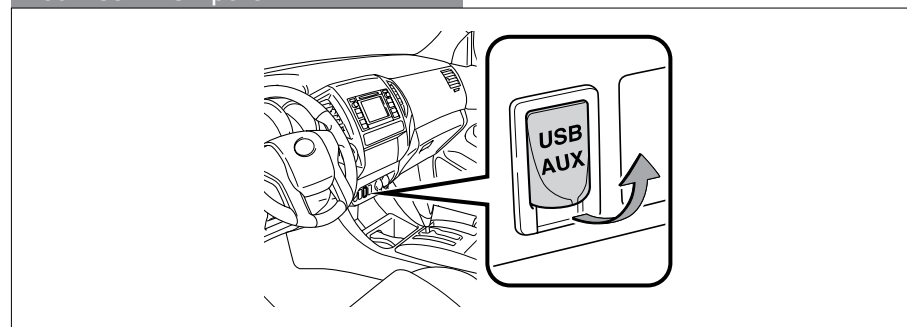

iPod®/USB port


By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle's speaker system.

AUX port


By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in AUX mode.

Refer to the "Navigation System Owner's Manual" for instructions and more information.

Clock

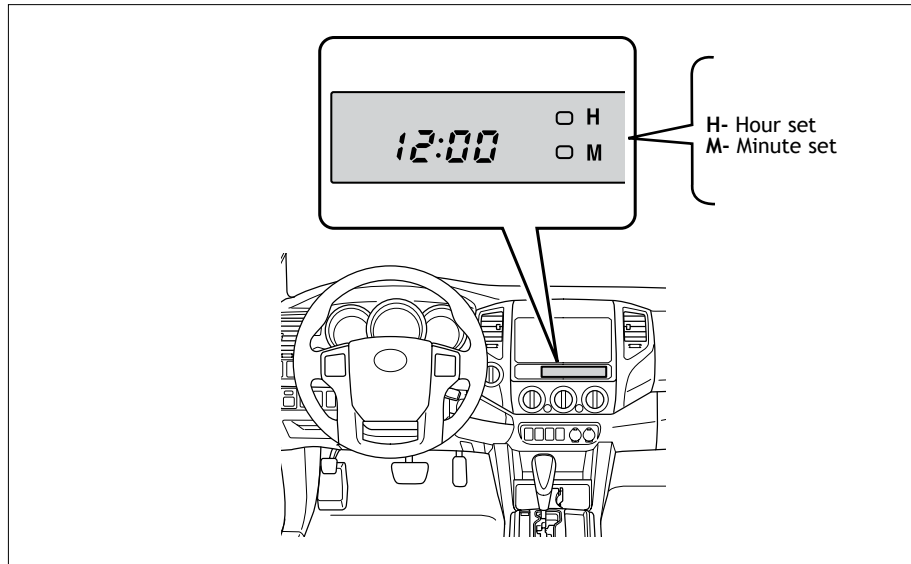


Air Conditioning/Heating

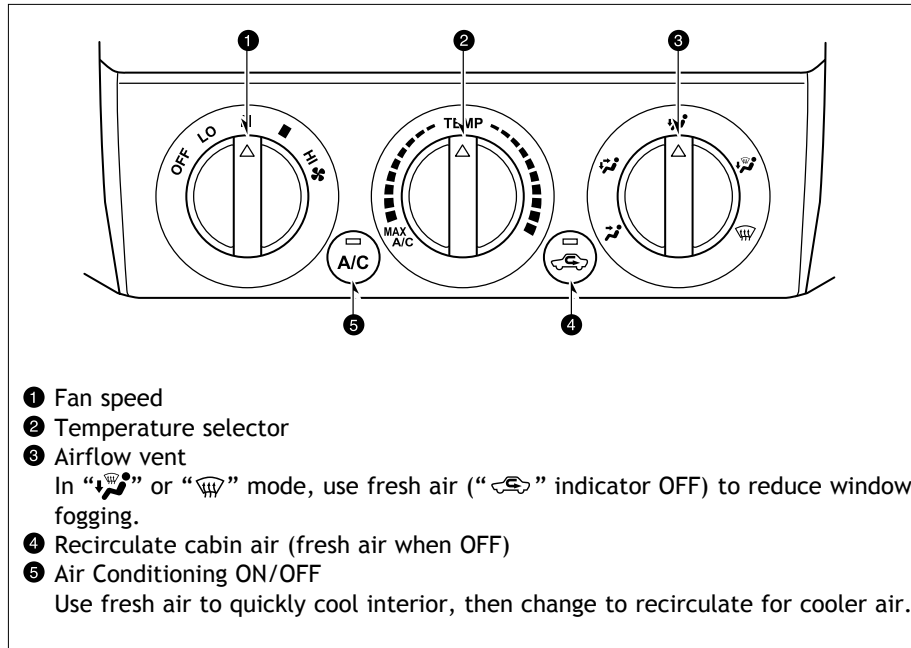


Power outlets

12V DC

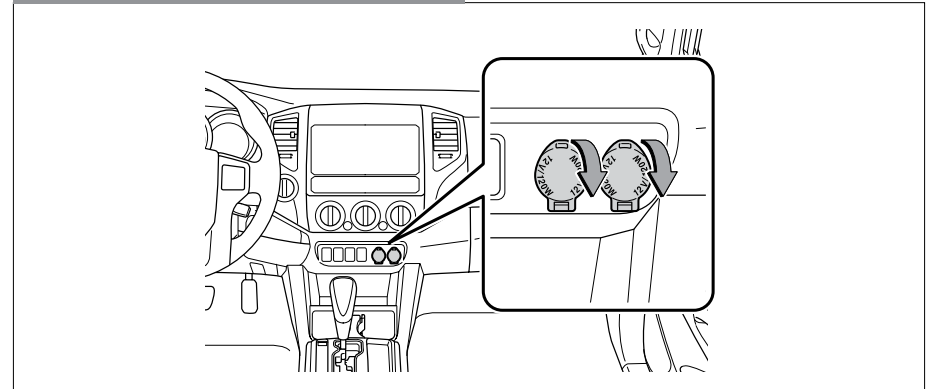

Key must be in the “ACC” or “ON” position to be used.

120V AC (if equipped)

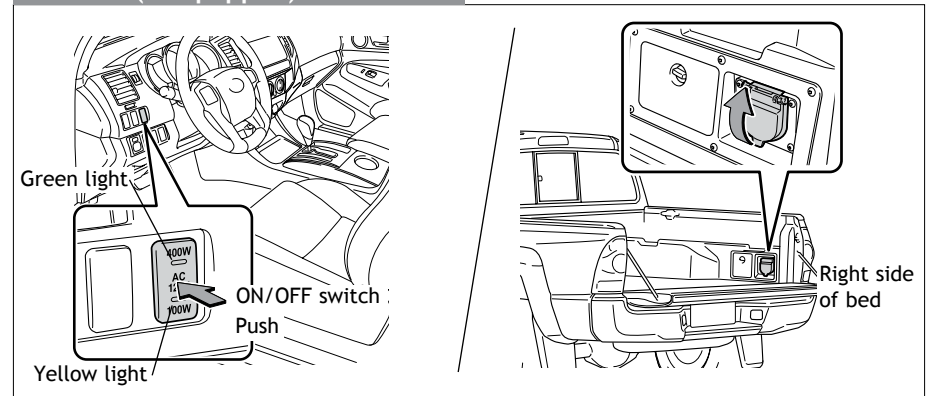


The engine must be running for use.

Yellow Light Only Max Capacity 120V AC/100W

Green & Yellow Lights Max Capacity 120V AC/400W

Refer to the *Owner's Manual* for more details.


Rear differential lock (if equipped)

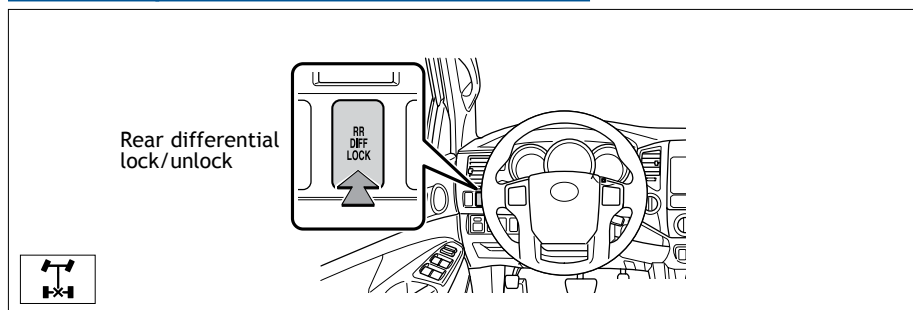

Use **ONLY** when wheel spinning occurs in a ditch, or on slippery or unpaved surfaces. **DO NOT USE THE REAR DIFFERENTIAL LOCK IN CONDITIONS OTHER THAN THOSE SPECIFIED IN THE OWNER'S MANUAL. UNLOCK THE DIFFERENTIAL ONCE THE VEHICLE MOVES OUT OF THE TROUBLE SPOT.**

Refer to your *Owner's Manual* for complete details on this system before attempting to use it.

VSC OFF switch

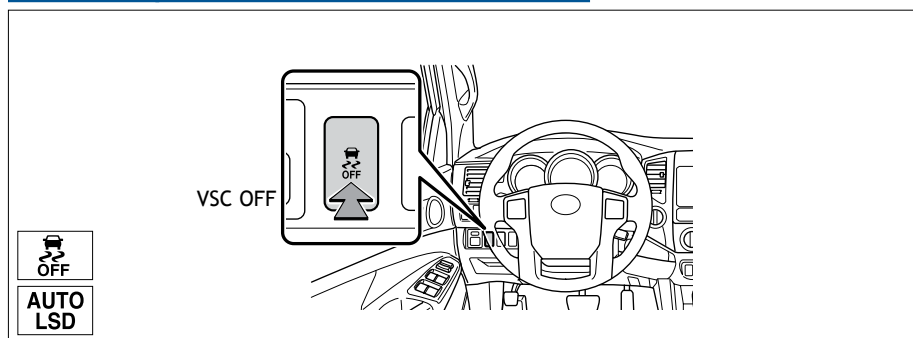


The VSC OFF switch is used to switch between modes related to the TRAC, VSC and Auto LSD functions.

Refer to the *Owner's Manual* for more information.

SAFETY AND EMERGENCY FEATURES

Seat belts

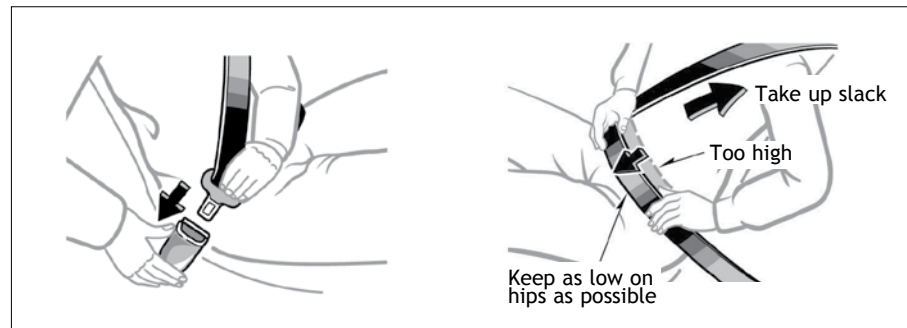


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.


Seat belts-Shoulder belt anchor



Door locks-Power (if equipped)

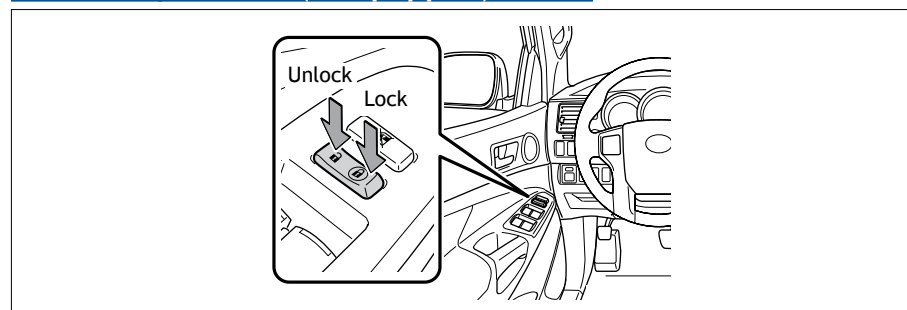

Tire Pressure Monitoring (warning) System

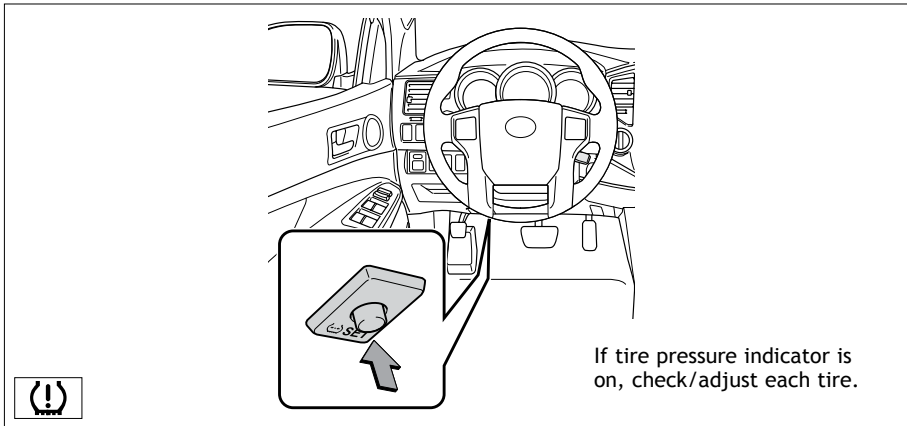


After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to "ON" and press and hold the "SET" button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the *Owner's Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

Doors-Child safety locks (double cab only)

Rear door

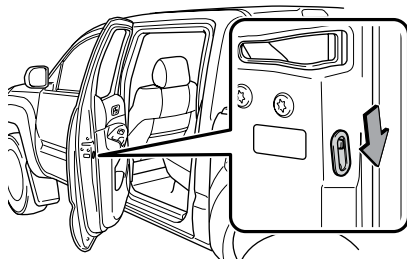


Moving the lever to "LOCK" will allow the door to be opened only from the outside.


Spare tire & tools

Tool location


Regular cab models
-behind the seatback

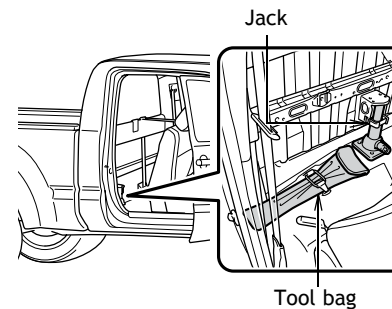


Double cab models
-under the rear seat

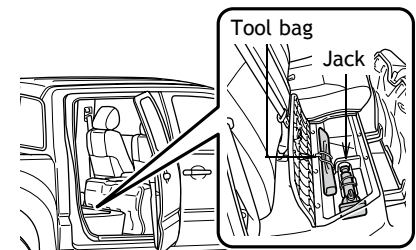

Access cab models
-under the rear seat

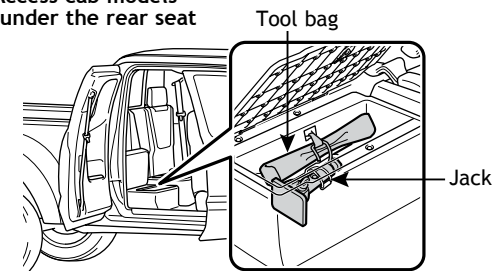

Removing the spare tire

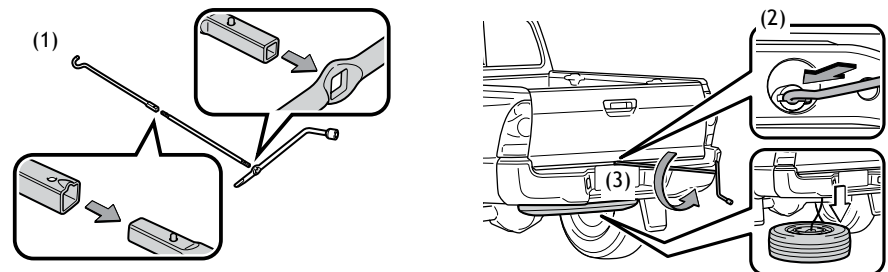

- (1) Assemble the jack handle.
- (2) Insert the jack handle end into the lowering screw.
- (3) Turn the jack handle counterclockwise.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

Vehicle Stability Control (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by "pulsing" brake pressure to each wheel. This limits brake lockup and helps provide directional control for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

Brake Assist (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

Smart Stop Technology (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

