

Contents

Quick Reference
Guide for the vehicle



The Ultimate
Driving Machine®



THE BMW 6 SERIES. QUICK REFERENCE GUIDE.

BMW EfficientDynamics
Less emissions. More driving pleasure.

Contents

Your BMW 6 Series at a glance

Welcome on board

Your BMW 6 Series offers you a wide range of equipment to make driving an enjoyable experience.

This Quick Reference Guide informs you about the most important basic functions of your BMW 6 Series vehicle.

For safety reasons, please read the integrated Owner's Manual for Vehicle.

Any updates made after the editorial deadline of the printed or integrated Owner's Manual are located in the appendix of this Quick Reference Guide.

BMW hopes you get off to a good start and that you enjoy your BMW 6 Series.

This Quick Reference Guide also describes and depicts equipment that may not be contained in your vehicle because of the selected special equipment or market-specific version.

4	Opening and closing	46	Breakdown assistance
8	Seat, mirrors, and steering wheel	47	Service and maintenance
12	Safety	48	24/7 Access
13	Displays and controls	50	Appendix
24	Driving		
30	Radio/CD/Multimedia		
32	iDrive		
37	Integrated Owner's Manual		
38	Navigation		
40	Entertainment		
42	Communication		
44	Refueling		



4 Opening and closing

Remote control

Unlocking

Locking

Opening the trunk lid

 
Press and hold.

Switching on the headlamp courtesy delay feature

Press briefly.

Panic mode

Press the button for at least 3 seconds to set off the alarm system.
Switch off by pressing any button.

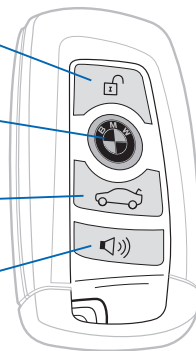

Convenient opening

Press and hold the Open button after unlocking.
Coupe: open the windows, glass sunroof.
Convertible: open the windows, rear window.
With Comfort Access, the convertible top in addition.

Convenient closing

Convertible: press and hold the Close button.
Close the windows and rear window. With Comfort Access, the convertible top in addition.

Tip

Depending on the equipment and the country variant, it is possible to set whether the doors are also unlocked when the trunk lid is opened.

Personal Profile

Individual settings in the vehicle are saved in personal profiles. Every remote control is assigned a profile.

Three personal profiles and a guest profile can be created.

For example, the following settings can be stored in a profile:

- Driver's seat position.
- Steering wheel position.
- Exterior mirror position.
- Assignment of the programmable memory buttons.
- Stored stations, station listened to last.

The settings are retrieved and implemented in the vehicle depending on the remote control that is detected when unlocking the vehicle.

Only one remote control should be used per person.

The personal settings can be taken to another vehicle with the Personal Profile function.

Comfort Access

 
The Comfort Access system allows you to gain access to the vehicle and start the engine without pressing the remote control. The remote control is automatically detected in the immediate vicinity or inside the vehicle.

Unlocking


Take a firm hold of the door handle.

Locking


Press the surface for approx. 1 second with your finger, without grasping the door handle.

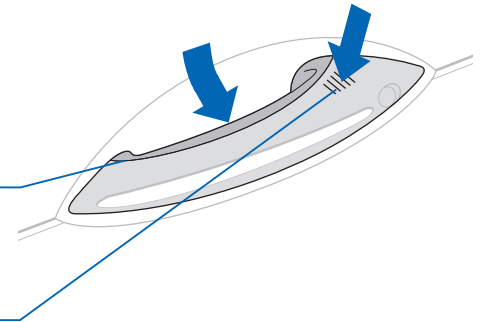

6 Opening and closing Trunk lid

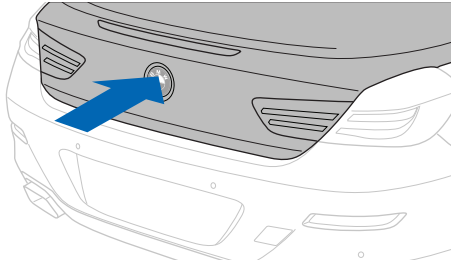 

 Opening the trunk lid from the outside
Press on the top half of the BMW emblem.

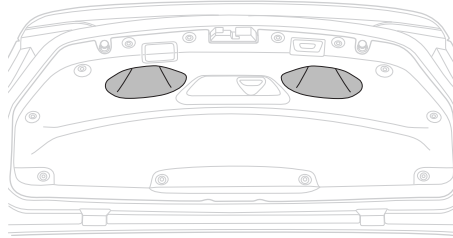

Closing the trunk lid from the outside
Recessed grips in the interior trim of the trunk lid make it easier to pull down the lid.

Opening and closing 7

Convertible: convertible top

Opening

Press and hold the switch.

 
Closing

Pull and hold the switch.

The left LED lights up green:
During opening or closing.

The right LED flashes red after the switch is
released:
The procedure is not completed.

The right LED lights up red when the switch is
pushed:
The cargo area partition is folded up, the trunk lid
is not closed, or a malfunction has occurred. The
convertible top cannot be moved.

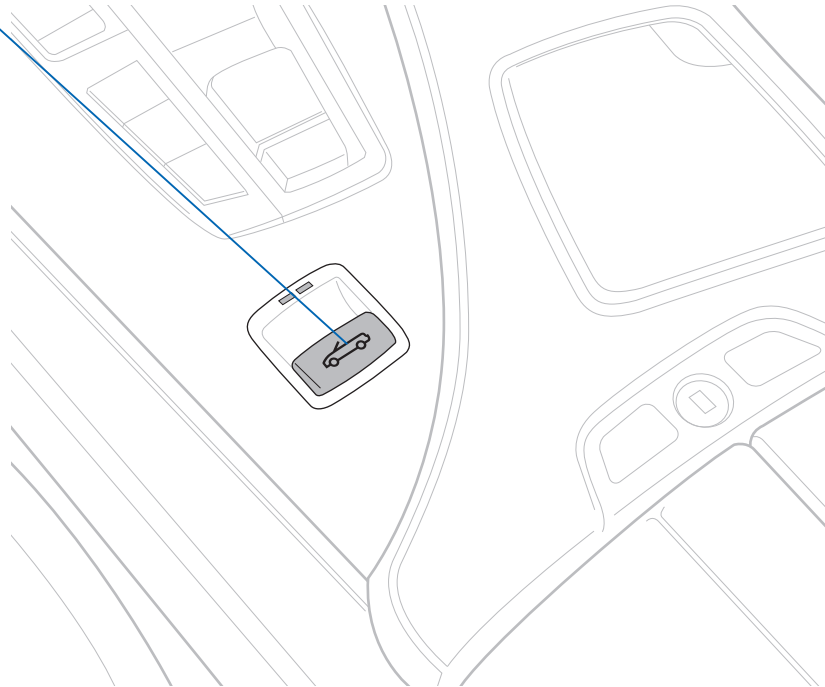

8 Seat, mirrors, and steering wheel

Electrically adjustable seat

 


Active seat

Shoulder support

Thigh support

Forward/back
Height
Seat tilt

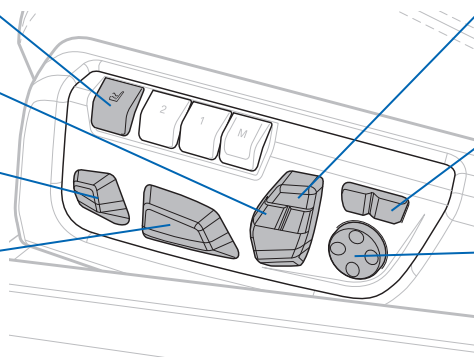

Backrest tilt
High head restraint

Backrest width

Lumbar support

 
Mirror adjustment

Folding the mirrors in and out

Mirrors, Automatic Curb Monitor

To select the mirror: left/right.


Automatic Curb Monitor on: switch set to driver's side mirror.

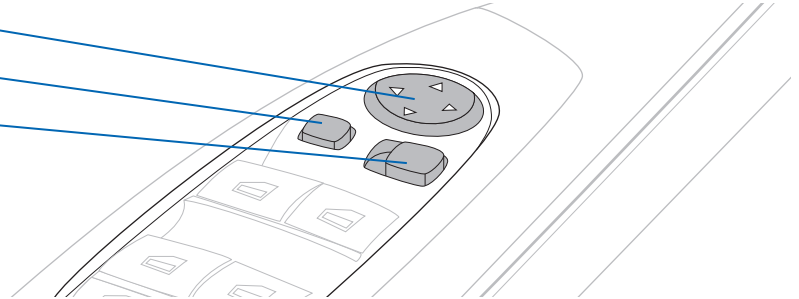

Seat, mirror, and steering wheel memory

Two driver's seat, exterior mirror and steering wheel positions can be stored and retrieved per profile. The lumbar support setting is not stored.

 1. Switch on the ignition.
2. Set the seat, mirrors, and steering wheel.
3. Press the M button; the LED lights up.
4. Press the desired 1 or 2 button as long as the LED is lit up. The LED goes out.
5. Press memory button 1 or 2 to call up the stored position.

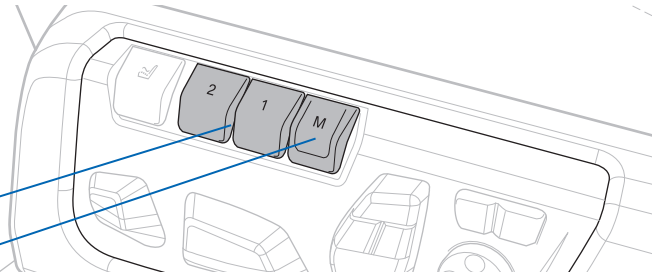

Memory buttons

M button

10 Seat, mirrors, and steering wheel

 
Universal Garage Door Opener

The concept

After programming, elements such as a garage door or lighting system can be operated using one of the buttons on the interior rear view mirror.

Programming

1. Switch on the ignition.
2. Press the two outer memory buttons 1 and 3 for approx. 20 seconds until the LED flashes.
3. Hold the hand-held transmitter 1 to 3 in/2.5 to 8 cm away from the memory buttons.
4. Simultaneously press the transmit button of the hand-held transmitter and the memory button of the Universal Garage Door Opener – the LED flashes slowly.
5. Release both buttons when the LED flashes rapidly.

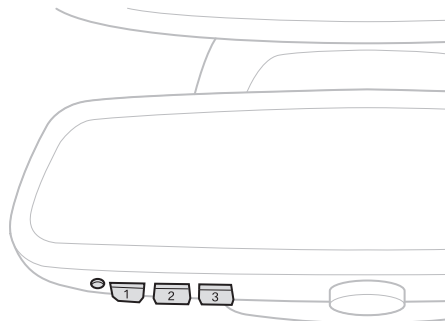

With alternating-code radio systems

 
The Universal Garage Door Opener and the device may need to be synchronized.

1. Park the vehicle within range of the remote-controlled device.
2. Program the Universal Garage Door Opener as described above.
3. Press the synchronization button on the receiver of the device being set up. You have approx. 30 seconds for the next step.
4. Press the programmed memory button of the Universal Garage Door Opener for approx. 3 seconds. Repeat this step up to three times if necessary.

Note the additional information contained in the integrated Owner's Manual for Vehicle.


Seat, mirrors, and steering wheel 11

Steering wheel

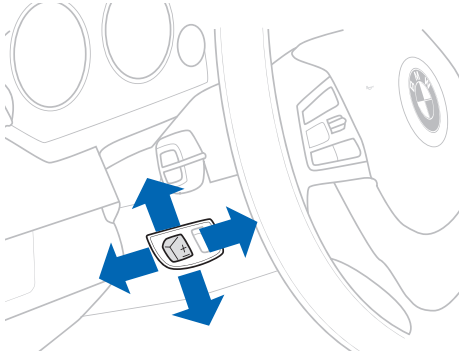

Electric steering wheel adjustment

 The steering wheel can be adjusted in four directions.

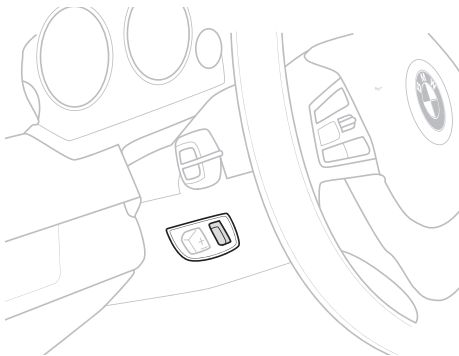

Steering wheel heating

Press the button.

The LED in the button lights up when the steering wheel heating is switched on.

12 Safety

Transporting children safely



LATCH child restraint mounting system

To install and use the LATCH child restraint mounting systems, observe the operating and safety information from the system manufacturer; otherwise, the level of protection may be reduced.

Mounts for the lower LATCH anchors

The lower anchors may be used to attach the CRS to the vehicle seat up to a combined child and CRS weight of 65 lb/30 kg when the child is restrained by the internal harnesses.

Before installing the LATCH child restraint mounting system, pull the belt away from the child seat fastening area.

Make sure that the lower LATCH anchors are properly engaged and that the child restraint system is resting snugly against the backrest.

Firmly press the installation guide into the gap between the seat upholstery and backrest. Continue to press until the two funnel-shaped guides snap into place in the LATCH support brackets. The installation guide can be removed simply by pulling.

Refer to the following section in the Owner's Manual: Transporting children safely.



Displays and controls 13
Steering wheel

14 Displays and controls

Steering wheel



Reducing the distance
Traffic Jam Assist: cruise control
Set distance

 
Storing the speed

Rocker switch for cruise control

Retrieving the speed


Switching cruise control on/off, interrupting
Switching active cruise control on/off, interrupting

Increasing the distance
Traffic Jam Assist ON/OFF, Pause

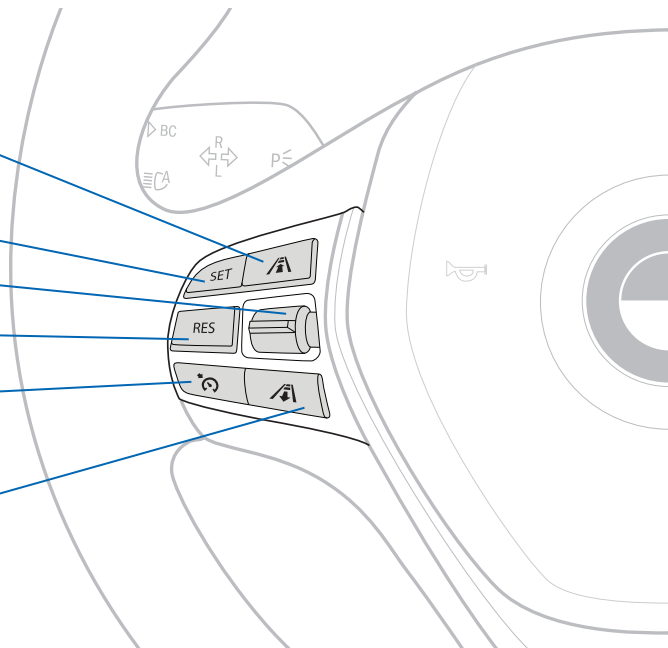

Displays and controls 15

 Steering wheel

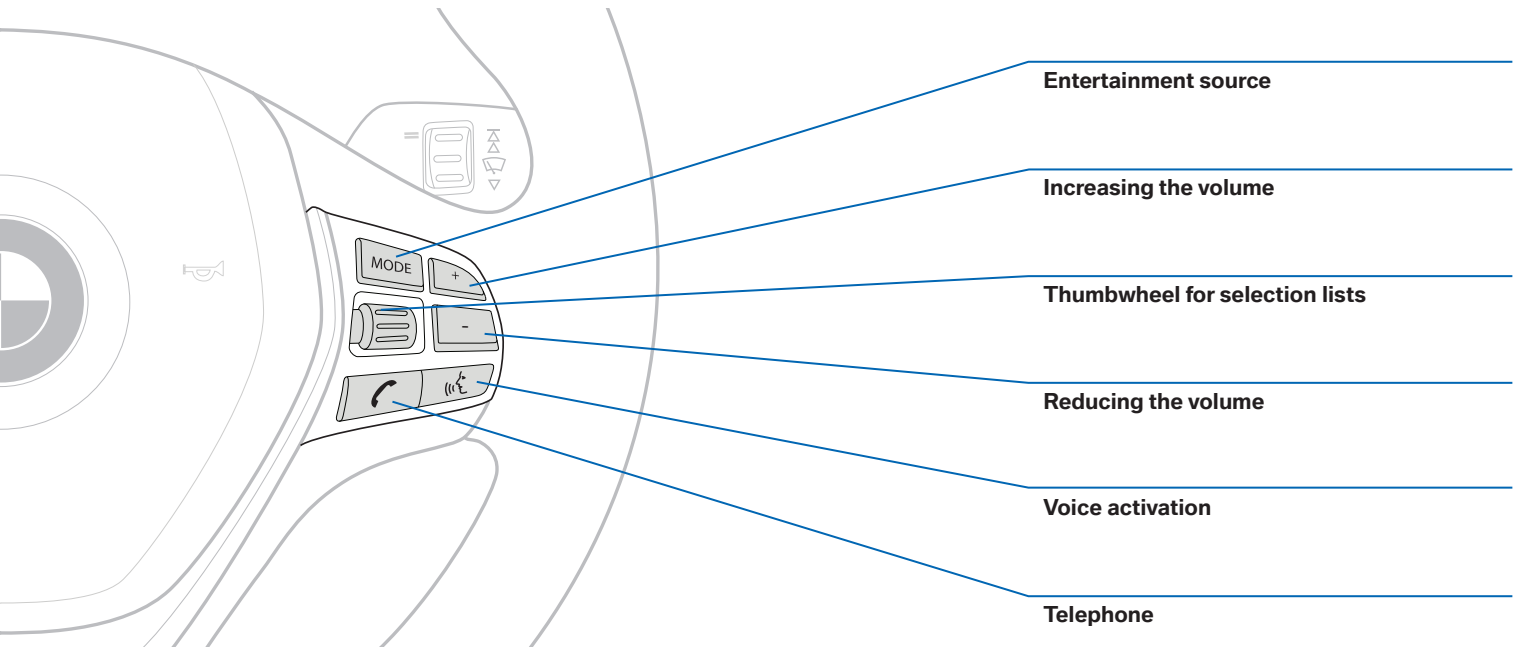

16 Displays and controls

Around the steering wheel

Activating turn signals

Pressing beyond the resistance point.

Turn signal canceling/one-touch flashing

Press up to the point of resistance.

Signaling briefly

Press up to the resistance point and hold there.

 
High beams

Computer

High-beam Assistant


Headlamp flasher

Horn

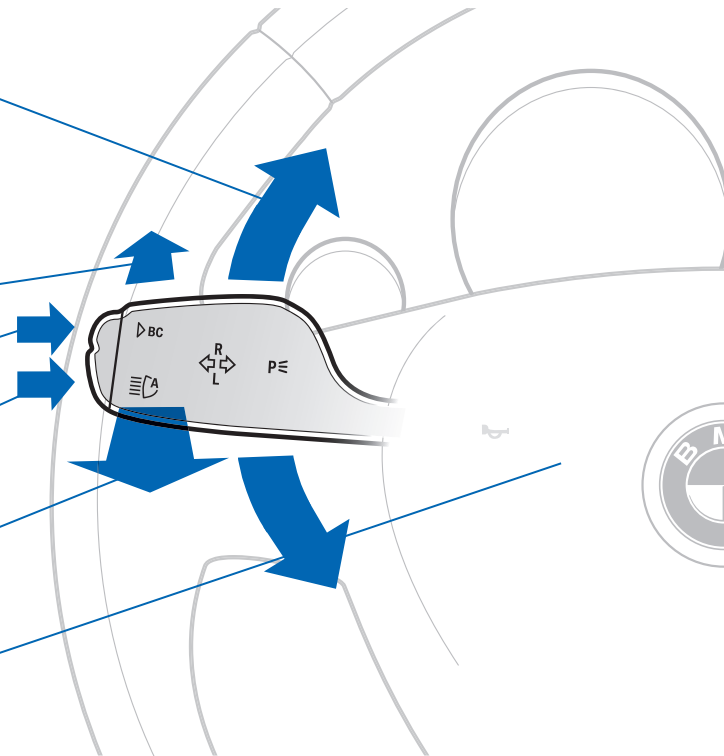

Displays and controls 17

 
Around the steering wheel

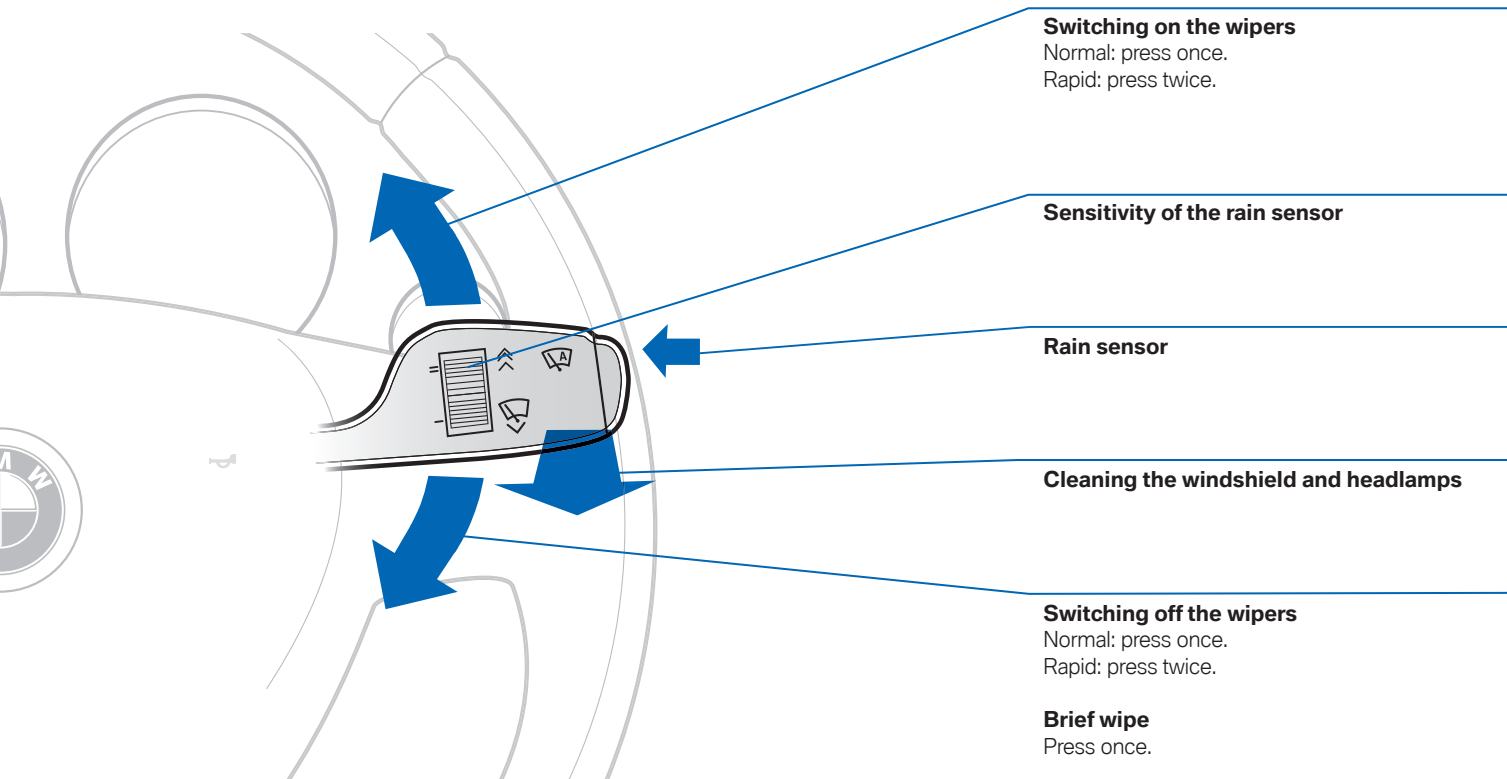

18 Displays and controls

Multifunctional instrument display

 The instrument display is variable. When the driving mode is changed to ECO PRO, SPORT or SPORT+, the style of the instrument display adjusts according to the selected drive mode. Changing of the display style can be disabled on the Control Display.



Changing the driving mode

Press the button in the center console repeatedly until the desired driving mode appears in the tachometer.



Display in the ECO PRO driving mode

This display supports a fuel-efficient driving style by highlighting the efficiency display and presenting various ECO PRO tips.



Display in the SPORT, SPORT+ driving mode

This display supports a sporty driving style by highlighting the tachometer, the transmission displays, and the speed. Shift lights show the optimum point to shift. This helps you achieve the best possible vehicle acceleration during sporty driving.

Note the additional information contained in the integrated Owner's Manual for Vehicle.

Displays and controls 19

Around the center console

Control Display

Hazard warning flashers

 
Central locking

Radio/CD/Multimedia

Automatic climate control

Selector lever

Controller with buttons

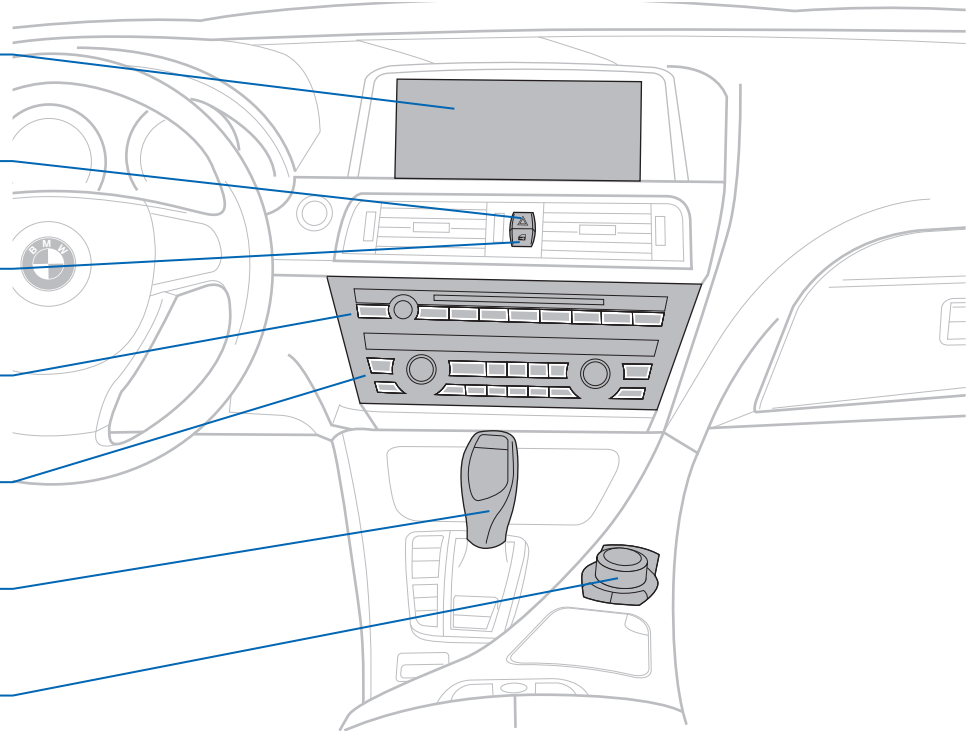

20 Displays and controls

Automatic climate control

Display

Air volume, AUTO intensity, left
Residual heat

Temperature, left

AUTO program, left

Air distribution, left

Active seat ventilation, left

 
Seat heating, left

SYNC program


The driver's settings are transferred to the front passenger side/rear.

Rear window defroster

Air conditioning

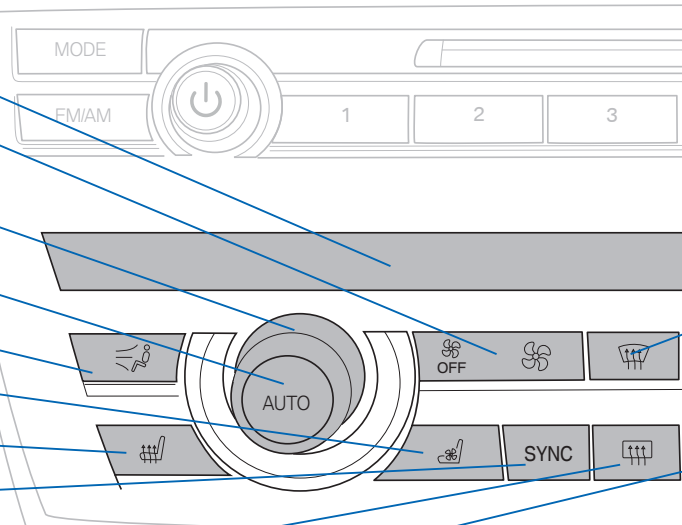

Automatic climate control

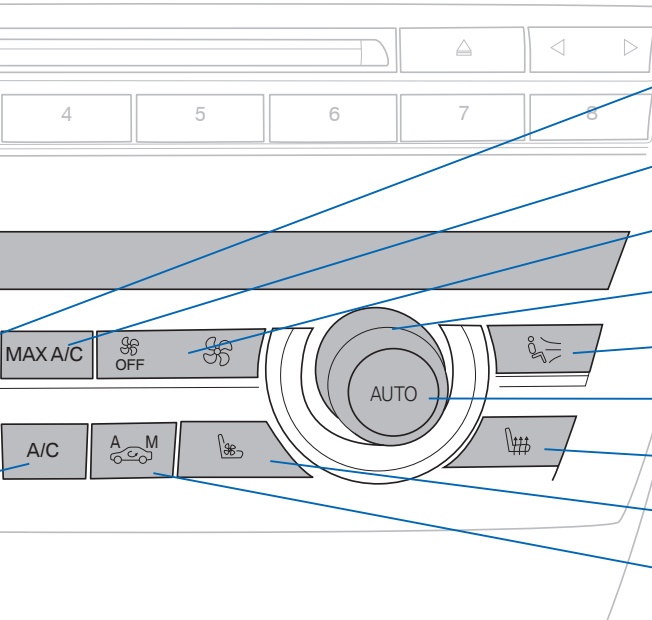 

Defrosting windows, removing condensation

Maximum cooling

Air volume, AUTO intensity, right

Temperature, right

Air distribution, right

AUTO program, right

Seat heating, right

Active seat ventilation, right

**Automatic recirculated-air control
Recirculated-air mode**

22 Displays and controls

Ventilation

Changing the airflow direction, left side

 
Opening and closing the air vents, left side

Fine adjustment, air temperature, upper body

Toward blue: colder.


Toward red: warmer.

This does not change the selected interior temperature.

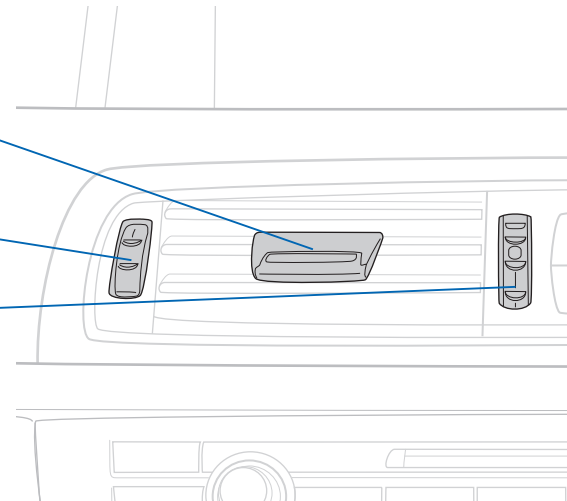

Displays and controls 23

 Ventilation

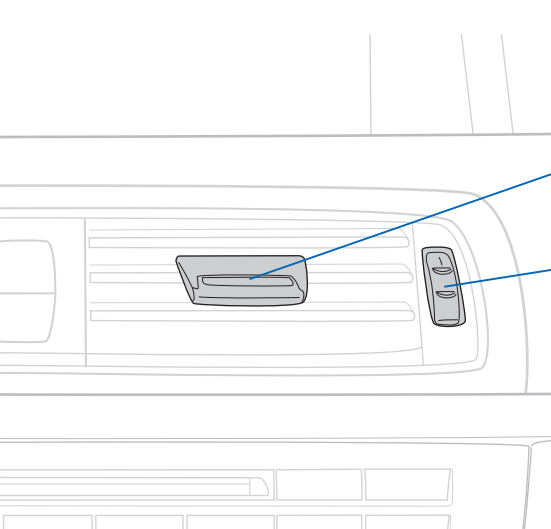

Changing the airflow direction, right side

Opening and closing the air vents, right side

24 Driving

Start/Stop button



Switching the ignition on/off

Press the Start/Stop button; while doing this, do not depress the brake pedal.

Starting the engine

Press the Start/Stop button while depressing the brake pedal.

Engine off/radio ready state

When the vehicle is stationary, press the Start/Stop button.

If the engine is switched off and the ignition is switched on, the system automatically switches to the radio-ready state when the door is opened if the lights are switched off, or the daytime running lights are switched on.

Auto Start/Stop function

This function helps save fuel. It does this by automatically switching off the engine during stops. A display in the instrument cluster indicates that the Auto Start/Stop function is ready to start the engine automatically.

Automatic engine stop

During a stop, the engine is switched off automatically under the following conditions:

- Selector lever in D.
- Brake pedal remains depressed.
- The driver's safety belt is buckled or the driver's door is closed.

Automatic engine start

Release the brake pedal.



Deactivating/activating the system manually

Press the button.

- The LED lights up: the Auto Start/Stop function is deactivated.
- The LED goes out: the Auto Start/Stop function is activated.

Even if driving away was not intended, the deactivated engine could start up automatically under certain circumstances. Note the additional information contained in the integrated Owner's Manual for Vehicle.

Parking lamps
Daytime running lights

Lamps off
Daytime running lights

 
Automatic headlamp control
Adaptive Light Control
High-beam Assistant
Welcome lamps
Daytime running lights

Front fog lamps

Rear fog lamps

Low beams
Welcome lamps
High-beam Assistant

Instrument lighting

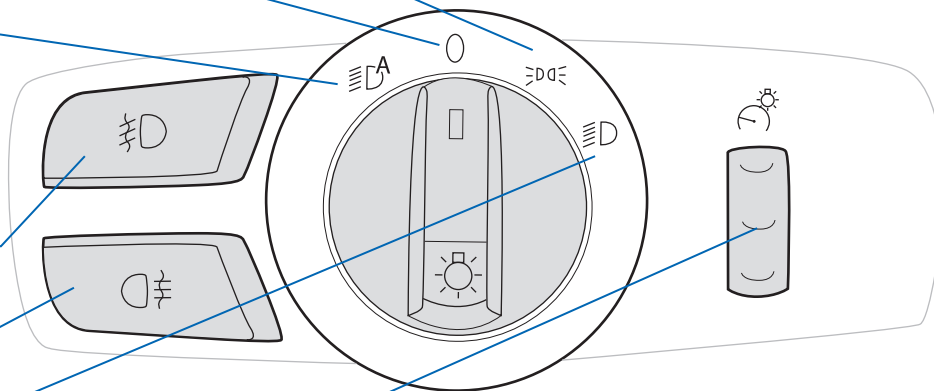

26 Driving

Automatic transmission with Steptronic/parking brake

P button

When the vehicle is stationary, press the button to engage selector lever position P.

Unlock button

To shift out of P or into R:

 
1. Depress the brake pedal while the engine is running.
2. Press the Unlock button.
3. Move the selector lever in the desired direction.

Applying the parking brake

Pull the switch; the LED lights up.

Releasing the parking brake

Press the switch with the brake pedal depressed or selector lever position P engaged; the LED goes out.

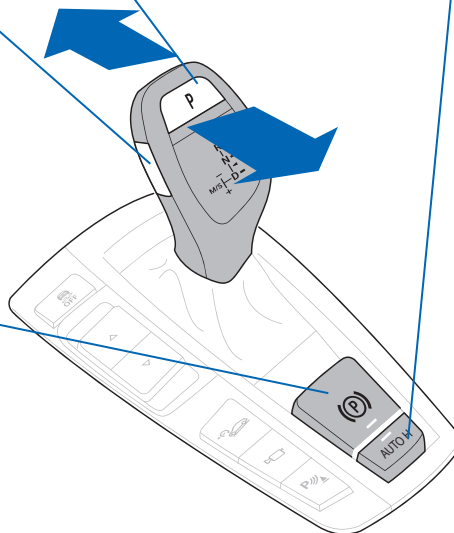

Automatic Hold

Automatically sets and releases the parking brake, such as in stop-and-go traffic.

To activate Automatic Hold:

Press the button.

The LED and AUTO H lettering light up.

To deactivate Automatic Hold:

Press the button again.

The LED and AUTO H lettering go out.

To make it possible for the vehicle to roll in an automatic car wash, take the following steps:

1. Drive into the car wash.
2. Engage selector lever position N.
3. Deactivate Automatic Hold.
4. Release the parking brake.
5. Switch off the engine.

 
The vehicle can roll as long as the ignition remains switched on.



The concept

ECO PRO helps achieve a fuel-efficient driving style by adjusting the engine control and comfort functions such as climate control and the seat and mirror heating temperature.

Activating ECO PRO



Press the button repeatedly until ECO PRO appears in the instrument cluster.

Bonus range and driving style

By using an optimized driving style, you can achieve a better cruising range.

- Blue display: efficient driving style
- Gray display: adjust your driving style, for example by lifting your foot off the accelerator.

The bonus range attained can be displayed in the instrument cluster.

After refueling, the bonus range is automatically reset.

28 Driving

ECO PRO

ECO PRO tips



 
To achieve good fuel economy, drive with less pressure on the accelerator and decelerate well in advance of upcoming driving situations that require you to slow.



Reduce the vehicle speed to the selected ECO PRO speed.




Change from M/S to D, and avoid manual shifting.

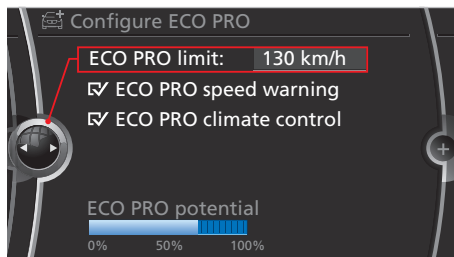

Configuring ECO PRO

Individual settings can be made.

 1. "Settings"
2. "Driving mode"
3. "Configure ECO PRO"
4. Configure the program.

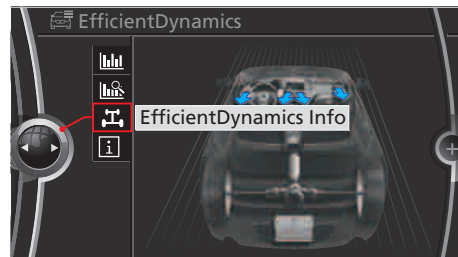

Displaying EfficientDynamics information

The currently active systems are displayed.

EfficientDynamics Info

Vehicle-dependent systems are displayed:

- Auto Start/Stop function.
- Energy recovery.
- Climate control.
- Coasting.

When coasting, the engine is automatically disengaged from the transmission in selector lever position D under certain conditions. The vehicle continues coasting in a fuel-saving manner. Selector lever position D remains engaged.

Driving stability control systems

Dynamic Stability Control DSC

DSC prevents traction loss in the drive wheels when driving away and accelerating.

DSC also recognizes unstable vehicle conditions, such as fishtailing or nose-diving.

Subject to physical limits, DSC helps to keep the vehicle on a steady course by reducing engine speed and by applying the brakes at individual wheels.

DSC can be activated/deactivated using the Driving Experience Switch.

Dynamic Traction Control DTC

The DTC system is a version of the DSC in which forward momentum is optimized. The system ensures maximum forward momentum on special road conditions, such as unplowed snowy roads, but driving stability is limited.

DTC can be activated/deactivated using the Driving Experience Switch.

Dynamic Damping Control

This system reduces undesirable vehicle motion when using a dynamic driving style or traveling on uneven road surfaces. This enhances driving dynamics and comfort as required for the road surface and driving style.

The system offers different programs. They can be selected using the Driving Experience Switch.

 
Driving Experience Switch

The Driving Experience Switch can be used to adjust the driving dynamics of the vehicle.

For this purpose, various programs are available for selection. Programs can be activated using the button of the Driving Experience Switch and the DSC OFF button.

Operating the programs

DSC OFF
TRACTION

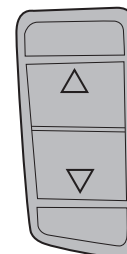

SPORT+
SPORT
COMFORT
COMFORT+
ECO PRO

Note the additional information contained in the integrated Owner's Manual for Vehicle.

30 Radio/CD/Multimedia Controls

Switching the radio on/off

Press the knob.

 
Setting the volume

Turn the knob.

Changing the entertainment source


Radio
CD/DVD
Music collection
External devices

Changing the radio station waveband

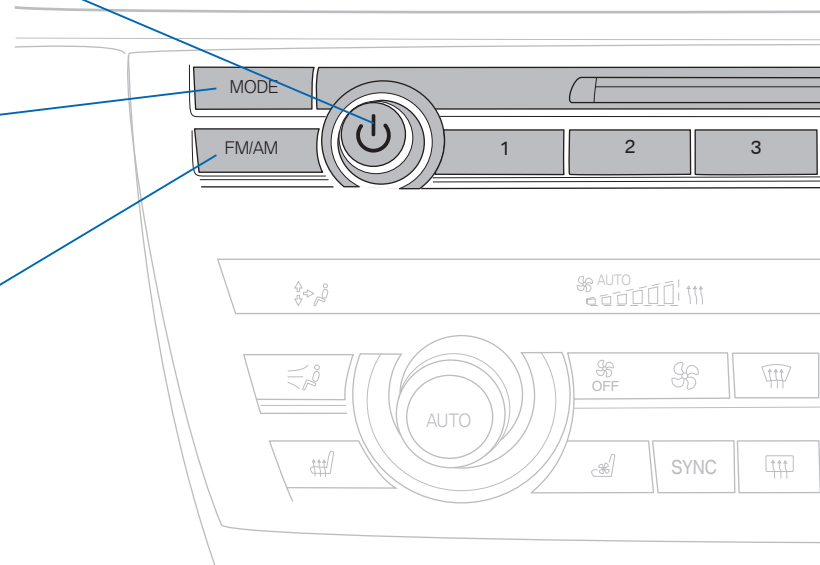

Radio/CD/Multimedia 31

 Controls




CD/DVD drive

Ejecting the CD/DVD


Changing the station/track

 Programmable memory buttons

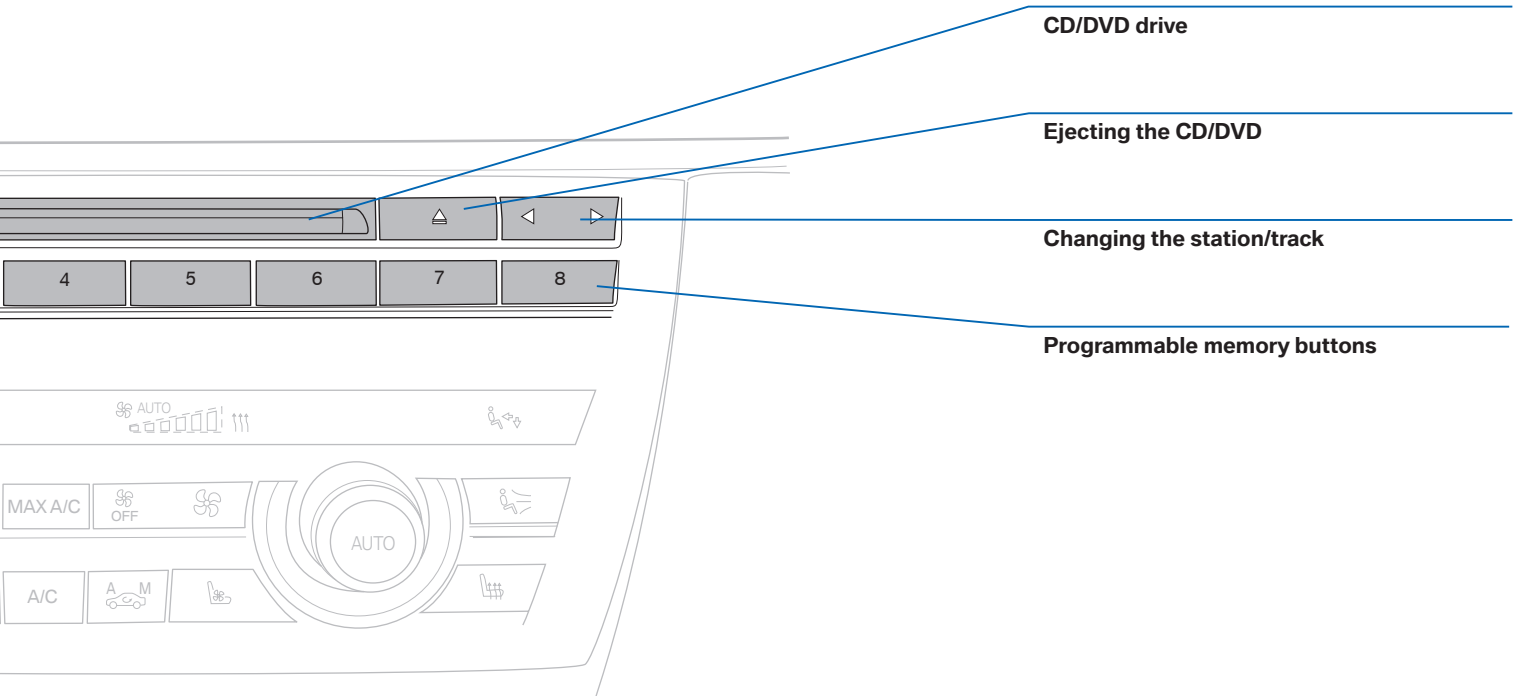


32 iDrive Controller

 Controller with buttons

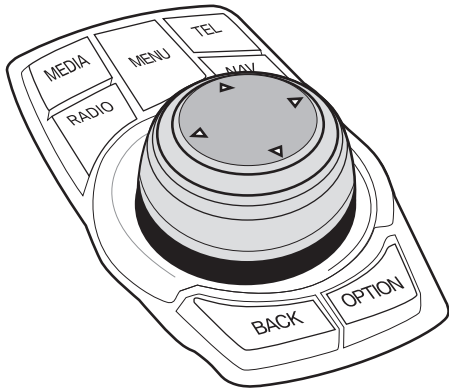


iDrive 33 Controller

 Highlighting the menu item

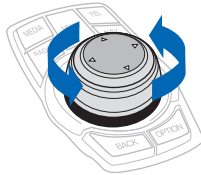


Turn the controller until the desired menu item is highlighted.

 Opening the menu item



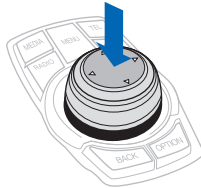


Press the controller.

 Changing between panels

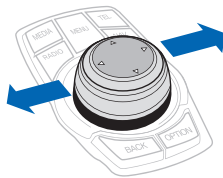

   
After a menu item such as "Radio" is selected, a new panel is displayed. Panels can overlap. Move the controller either to the left or the right. The panel changes.

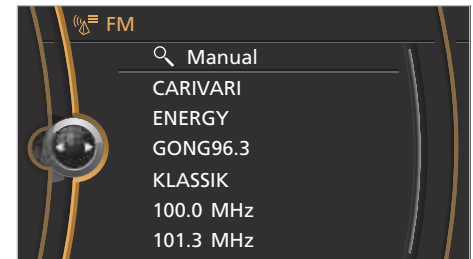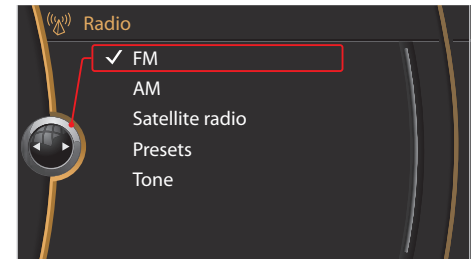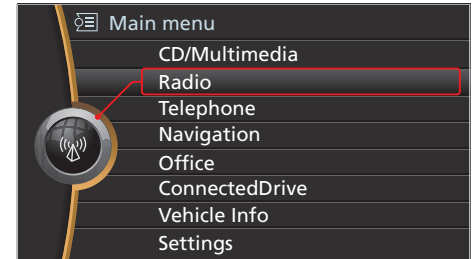

34 iDrive


Buttons on the controller

 Opening the menus

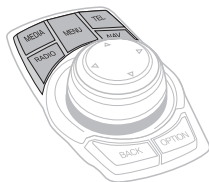

Press the button on the controller.

 
Opening the "Options" menu

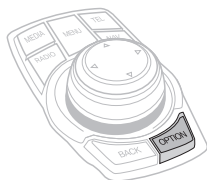

Press the OPTION button.

The "Options" menu consists of different areas: screen settings, for instance "Split screen". This section remains unchanged. Operating options for the selected main menu, such as for "Radio". If necessary, additional operating options for the selected menu such as "Store station".


 
Displaying the previous panel

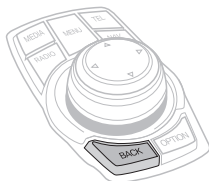

Press the BACK button.

The previous panel is reopened.

  Programmable memory buttons

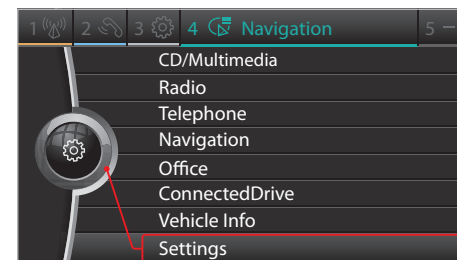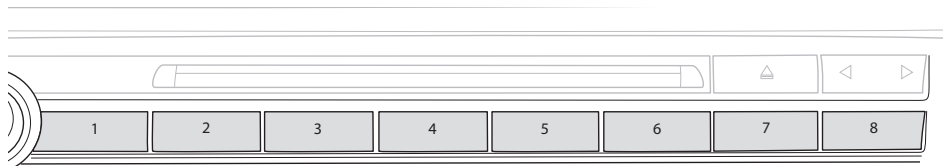

The concept

iDrive functions can be stored on the programmable memory buttons and called up directly, e.g., radio stations, navigation destinations, telephone numbers, and jumps into the menu.

Saving a function

1. Highlight the function via the iDrive.
2. Press the desired button for longer than 2 seconds.

Executing a function

Press the button.

The function is executed immediately. This means, for example, that the number is dialed when a phone number is selected.

Displaying memory button assignments

Briefly touch the button.

The button assignment is displayed at the top edge of the screen.

To display short information: touch the button.

 
To display detailed information: touch the button for an extended period.

Tip

The content of the integrated Owner's Manual can also be saved on the programmable memory buttons.

36 iDrive

Split screen/voice activation system

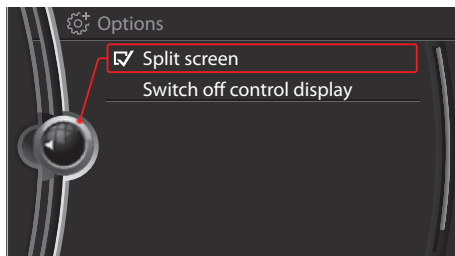


Split screen

Additional information, such as information from the computer, can be displayed on the right side of the split screen. You can set which information is displayed.

Switching the split screen on/off

1. Open "Options".
2. "Split screen"

 The split screen is activated and the information remains displayed, even if another menu is selected.

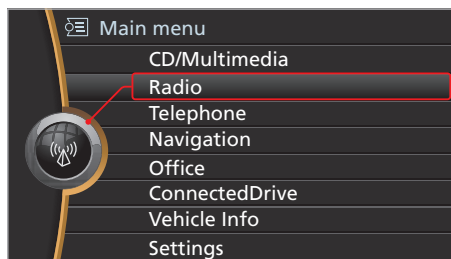


Voice activation system

The voice activation system can be used to operate functions by means of spoken commands. Most menu items that are displayed on the Control Display can be voice-activated.

Example: opening the FM waveband

 1. Press the button on the steering wheel.
2. Wait for the signal.
3. Say >Radio<.

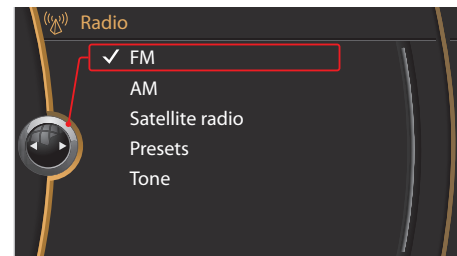

4. Say >F M<.

The list of available radio stations is displayed.

Having the possible commands read aloud

1. Press the button on the steering wheel.
2. Say >Voice commands<.

 
 
 
Tip

The functions can also be opened directly using so-called short commands, such as >Radio<.

To give these commands, speak without hesitation, loudly, and clearly. Avoid background noise such as that caused by open windows.

Integrated Owner's Manual 37

Operation via iDrive

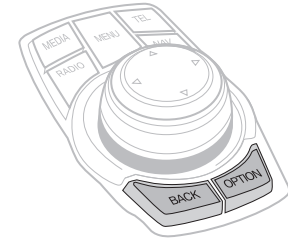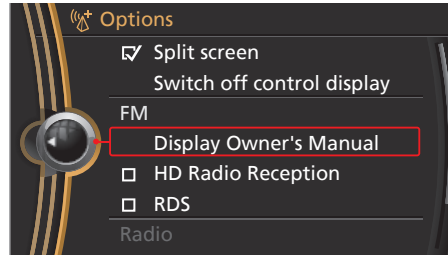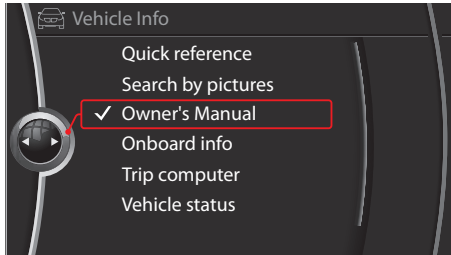

Integrated Owner's Manual

The BMW 6 Series comes with an integrated Owner's Manual, which contains all of the information necessary for you to make the best use of your vehicle. For safety reasons, the integrated Owner's Manual is only displayed when the vehicle is stationary.

Selecting the components

1. Open the main menu.
2. "Vehicle Info"
3. Select the desired section:
 - "Quick reference"
 - "Search by pictures"
 - "Owner's Manual"

Getting Help feature via iDrive

The integrated Owner's Manual for the currently selected menu can be displayed.

1. Open "Options".
2. "Display Owner's Manual"

The BACK and OPTION buttons can be used to switch between the integrated Owner's Manual and the currently selected menu. This is particularly helpful for functions with multiple operating steps.

Printed Owner's Manual

 
 
 
A printed Owner's Manual is contained in the vehicle document portfolio in the glove compartment or in the trunk.

Tip

Complex principles are explained quickly in videos in the integrated Owner's Manual.

38 Navigation

Entering a destination

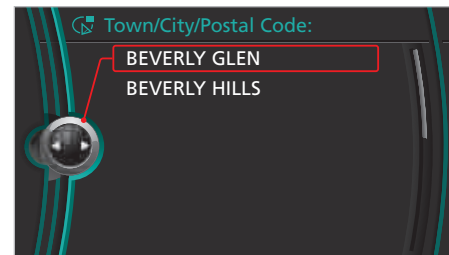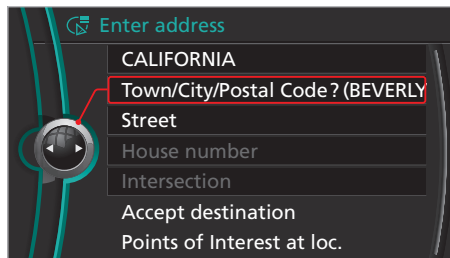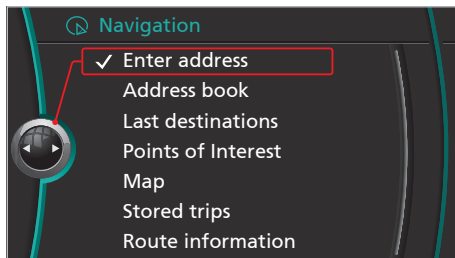

Manual destination entry

 
1. "Navigation"
2. "Enter address"

3. Select "State/Province" or the displayed state or province.
4. Select "Town/City/Postal Code" or the displayed town/city/postal code.
5. Select letters as necessary.
The list grows smaller each time you enter a new letter.

6. Move the controller to the right and select a town/city from the list.
7. Enter a street in the same way that you entered the town/city.
8. If desired, select the building number or intersection.
9. "Accept destination"
10. "Start guidance"

Tip

Destination entry can be operated using the voice activation system. Town/city, street, and building number can also be spoken in one command.

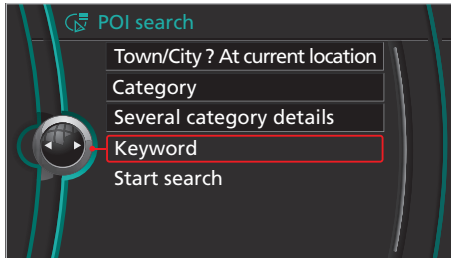

Points of interest

Selection of points of interest, such as hotels or tourist attractions.

1. "Navigation"
2. "Points of Interest"
3. Select the type of search, for instance "A-Z search".
4. Specify the "Town/City", "Category" and, if necessary, "Category details" and "Keyword".

A list of the points of interest is displayed.



Map view settings

Several types of map views may be displayed, such as a perspective view in 3D.

 
1. "Navigation"
2. "Map"
3. Open "Options".
4. "Settings"
5. "Perspective view in 3D"

Changing the scale

1. If necessary, move the controller to the right to change to the map view.
2.  Select this symbol.
3. Turn the controller.


40 Entertainment

Tone/radio

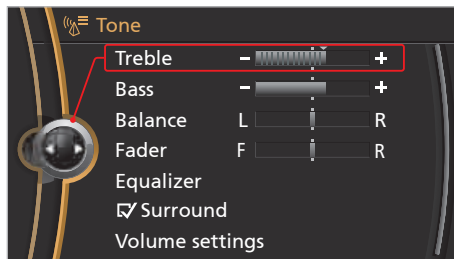


Adjusting the tone

 1. "CD/Multimedia", "Radio" or "Settings"
2. "Tone"
3. Select the desired tone settings.
4. To adjust: turn the controller.
5. To store: press the controller.

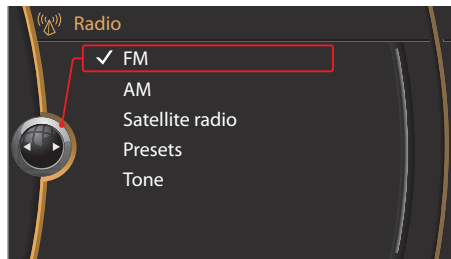

Selecting the station

 1. "Radio"
2. "FM" or "AM"

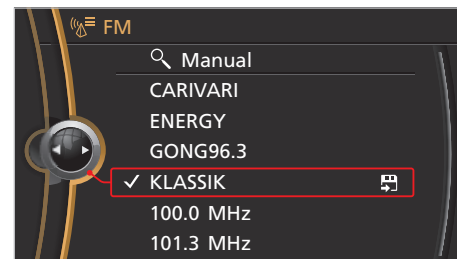



3. Select the desired station.

Tip

The radio stations can be stored on the programmable memory buttons 1–8. Use the iDrive to select the radio station and hold the desired button down for several seconds.

Entertainment 41

  Music collection

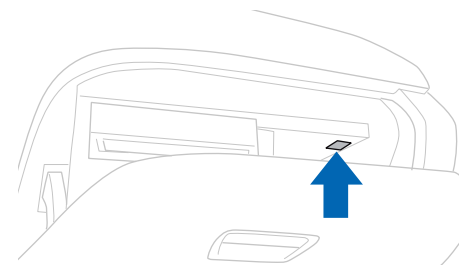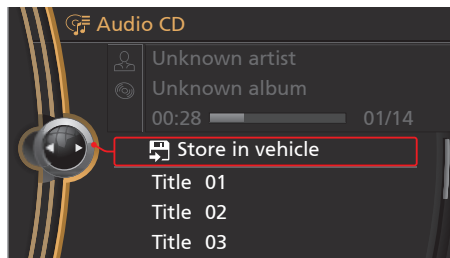

Storing music

Music tracks from CDs/DVDs and USB media may be stored in a music collection in the vehicle.

1. Insert the CD/DVD into the CD/DVD player.
2. "CD/Multimedia"
3. "CD/DVD"
4.  Select the symbol for the CD/DVD player.

5. "Store in vehicle"

The music collection is displayed.

The tracks are stored and played in sequence from the music collection.

Observe the following during the storage process:

Do not switch to the CD/DVD drive and do not remove the CD/DVD from the CD/DVD drive as this will interrupt the storage process.

Tip

Other audio sources, except for the CD/DVD drive, can be activated without interrupting the storage process. Tracks from the current CD/DVD that have already been stored can be called up.

 
 
USB interface

Music can be stored via the CD/DVD drive and compressed audio files can be stored via the USB interface in the glove compartment.

Additional information can be found in the Owner's Manual on navigation, entertainment, and communication.

42 Communication

Telephone

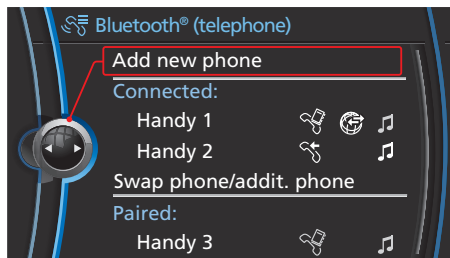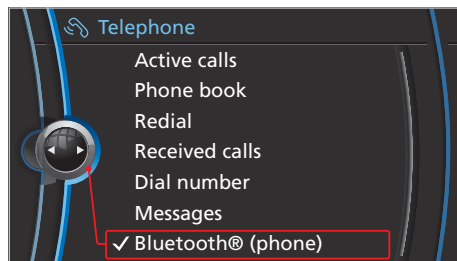

Pairing the mobile phone with the vehicle

1. Switch on the ignition.
2. Activate Bluetooth on the vehicle and the mobile phone.
3. If necessary, adjust the mobile phone according to the Bluetooth presettings, e.g., connection not visible, neither with confirmation nor on the mobile phone.
4. Think of a 4 to 16-digit passkey in order to enter it later. The passkey is only required once for the pairing procedure.
5. "Telephone"
6. "Bluetooth® (phone)"
7. "Add new phone"
The vehicle's Bluetooth name appears on the Control Display.
8. Use the mobile phone to search for Bluetooth devices; check your mobile phone's operating instructions. The Bluetooth name of the vehicle also appears on the mobile phone display.
9. Select the Bluetooth name of the vehicle on the mobile phone.
The mobile phone's display or the iDrive will prompt you to enter the Bluetooth passkey.

 
10. Enter the passkey on the mobile phone and via the iDrive and confirm.

Tip

Please ask your BMW center which mobile phones with Bluetooth interface are supported by the mobile phone preparation package. You can obtain additional information on the Internet at: www.bmwusa.com/bluetooth

Communication 43

Telephone

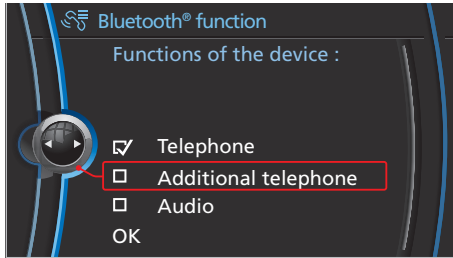

11. Select at least one function for which the mobile phone will be used.
12. "OK"

If pairing was successful, the mobile phone appears on the mobile phone list.

 


Dialing a number

1. "Telephone"
2. "Dial number"
3. Select the digits individually.
4.  Select the symbol to establish the call.

Accepting a call

-  Press the button on the steering wheel.

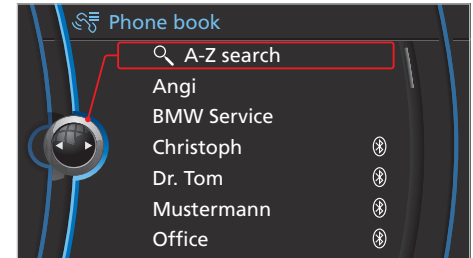

Selecting from the phone book

1. "Telephone"
2. "Phone book"
3. Select the desired entry.

Tip

Up to three mobile phones can be linked to the vehicle and used as a telephone, an additional telephone or audio player. Additional information can be found in the Owner's Manual on navigation, entertainment, and communication.

44 Refueling

Refueling/oil level



Refueling

To open the fuel filler flap, tap on the rear edge.

Fuel quality: gasoline

Only use unleaded gasoline without metal additives.

Fuel quality: BMW recommends AKI 91.

Minimum grade: BMW recommends AKI 89.

Maximum ethanol content: 10%, which corresponds to E10.

The ethanol should meet the following quality standards:

US: ASTM 4806-xx

CAN: CGSB-3.511-xx

xx: Note the standard applicable in each case.

Displaying the oil level

The oil level is monitored electronically and shown on the Control Display.

1. "Vehicle Info"
2. "Vehicle status"
3.  "Engine oil level"

For recommended oil grades, refer to the Owner's Manual

Note the additional information contained in the integrated Owner's Manual for Vehicle.

Flat Tire Monitor FTM

The system identifies a loss of pressure by comparing the speeds of rotation of the individual wheels as the car is traveling.

The system must be initialized with the correct tire pressure in order for it to reliably respond in detecting a flat tire.

1. "Vehicle Info"
2. "Vehicle status"
3.  "Reset"
4. Start the engine; do not drive away.
5. Start the initialization with "Reset".
6. Drive away.

 
The FTM is not a substitute for carrying out tire pressure checks.

Tire Pressure Monitor TPM

TPM checks the inflation pressures of the four mounted tires. The system notifies you if there is a significant loss of pressure in one or more tires.

In order to assure that a flat tire is reported reliably, the system must be reset while all tire inflation pressures are correct.

1. "Vehicle Info"
2. "Vehicle status"
3.  "Reset"
4. Start the engine; do not drive away.
5. Reset the tire pressure using "Reset".
6. Drive away.

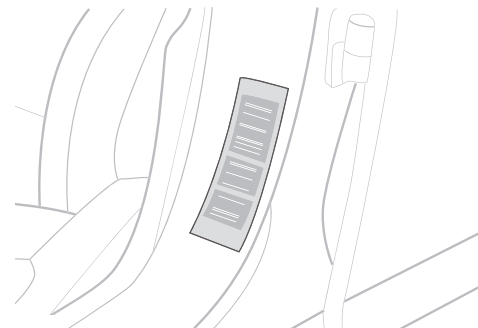

Tire pressure

The pressure values for approved tire sizes and speeds up to 100 mph/160 km/h can be found on the driver's door pillar.

 
If the tire's speed rating code is not listed, use the tire pressure for the corresponding size.

Initialize the FTM/TPM again after correcting the tire pressure or changing the tires/wheels.

Check the tire pressure in cold tires at least twice a month and before taking an extended trip.
Note the additional information contained in the integrated Owner's Manual for Vehicle.


46 Breakdown assistance

Warning triangle, first aid kit

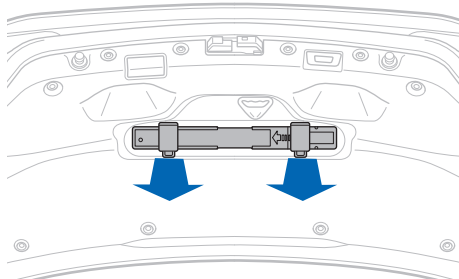


Warning triangle in Coupe

 The warning triangle is located on the inside of the trunk lid. Release the holders to remove it.

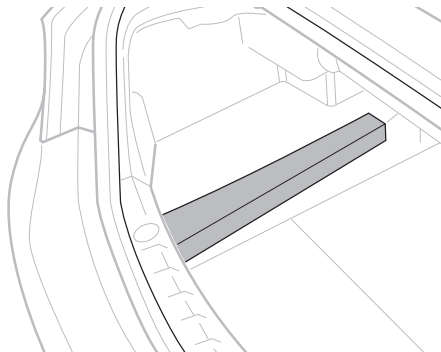

Warning triangle in Convertible

 The warning triangle is located under a cover on the left side of the trunk. Press against the lower edge of the cover and remove it.

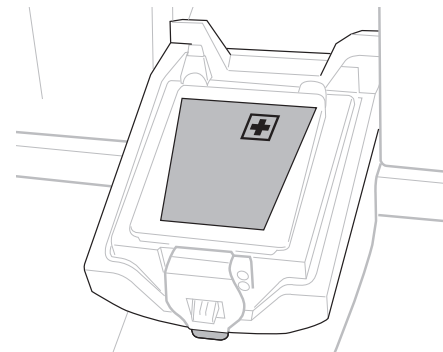

First aid kit in Convertible/Coupe

The first aid kit is located in the insert in the rear seat backrest. Pull the release and remove the insert toward the front.

 
Socket for Onboard Diagnostics OBD

There is an OBD socket on the driver's side for checking the primary components in the vehicle emissions.


SERVICE
ENGINE
SOON

Emissions

The warning lamp lights up:
Emissions are deteriorating. Have
the vehicle checked as soon as
possible.

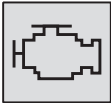


 
Indicator for the previously de-
scribed malfunctions in Canadian
models.

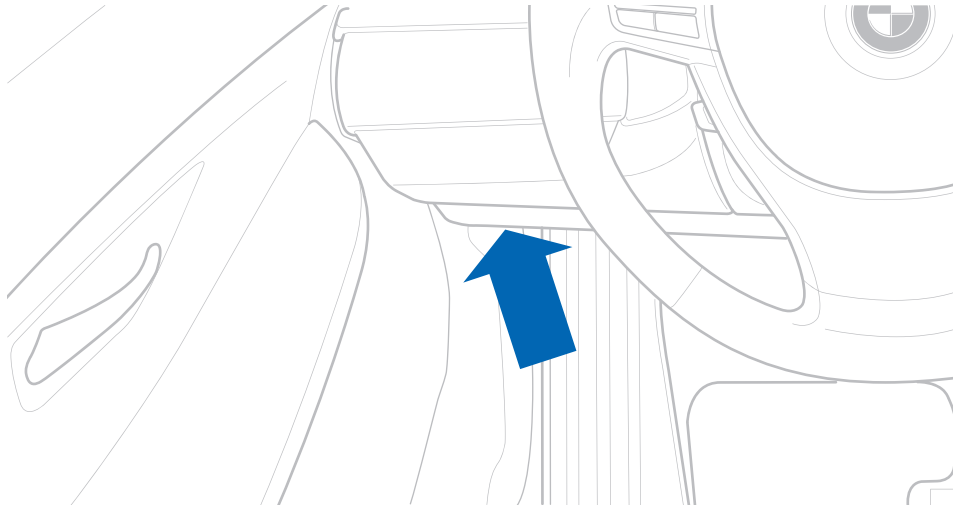

Note the additional information contained in
the integrated Owner's Manual for Vehicle.

48 24/7 Access

  BMW Assist™ and Bluetooth® system

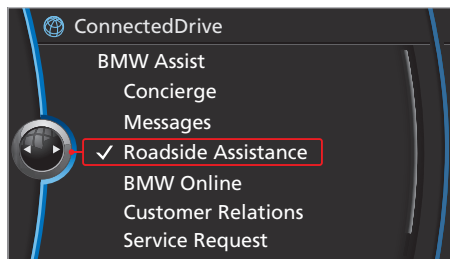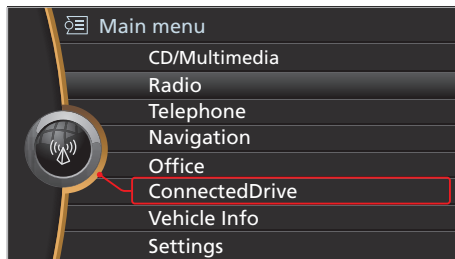

BMW Assist Safety Plan

Combining GPS location technology with hands-free wireless communication, BMW Assist connects you with a trained response specialist 24/7 to help you with almost everything while on the road.

The BMW Assist Safety Plan provides:

- Automatic Collision Notification
- Emergency Request (SOS)
- Enhanced Roadside Assistance
- Stolen Vehicle Recovery
- TeleService

Easy Access

To initiate the services, just go to "BMW Assist" in the main menu and select the desired service, or push the SOS button on the overhead console.

What You Need To Do

You must complete, sign, and submit a subscriber agreement with your salesperson. To decline services, you must complete, sign, and submit a "Waiver and Release" document. If neither action is taken, your BMW Assist services will be remotely deactivated approximately 60 days after you take delivery of your new vehicle.

Bluetooth hands-free calling

The BMW Assist system includes Bluetooth hands-free calling capability with speech recognition. See page 42 or visit www.bmwusa.com/bluetooth for BMW approved handsets and pairing instructions.

Tip

You may even prepare some services offered by BMW Assist in the comfort of your home and send them to your vehicle via the Internet.

Tip

Upgrade to our optional Convenience Plan to receive directions, traffic and weather information, Critical Calling, Concierge services, online access to the Google Maps™ database, news headlines, up-to-date fuel prices and stock indices in your BMW 6 Series with BMW Search. Push the SOS button, call toll-free 1-888-333-6118, or log on to www.bmwassist.com to learn more.

**BMW Roadside Assistance**

Can be contacted if assistance is needed in the event of a breakdown.

Telephone

USA: (800) 332-4BMW (4269)

Canada: 1-800-267-8269

If possible, the vehicle and position data are transmitted in the process.

Towing

The safest method approved for transporting vehicles is to use a commercial flatbed carrier truck, dispatched via Roadside Assistance, and to secure the vehicle to the flatbed truck with four nylon wheel straps.

When pulling the vehicle onto a flatbed carrier truck, only use the screw-in tow fitting found in the tool kit.

Refer to the detailed towing instructions in the Owner's Manual.

50 Appendix

Any updates to the Owner's Manual for Vehicle can be found [here](#).

More about BMW

bmwusa.com
www.bmw.ca



**The Ultimate
Driving Machine®**

© 2014 Bayerische Motoren Werke

Aktiengesellschaft

Munich, Germany

Reprinting, including excerpts, only with the
written consent of BMW AG, Munich.

US English II/14

Printed on environmentally friendly paper,
bleached without chlorine, suitable for recycling.

