

2015


Cadillac

XTS

CONVENIENCE/PERSONALIZATION GUIDE

Review this guide for an overview of some important features in your Cadillac XTS. Some optional equipment (denoted by ♦) described in this guide may not be included in your vehicle. More detailed information can be found in your Owner Manual.

INSTRUMENT PANEL

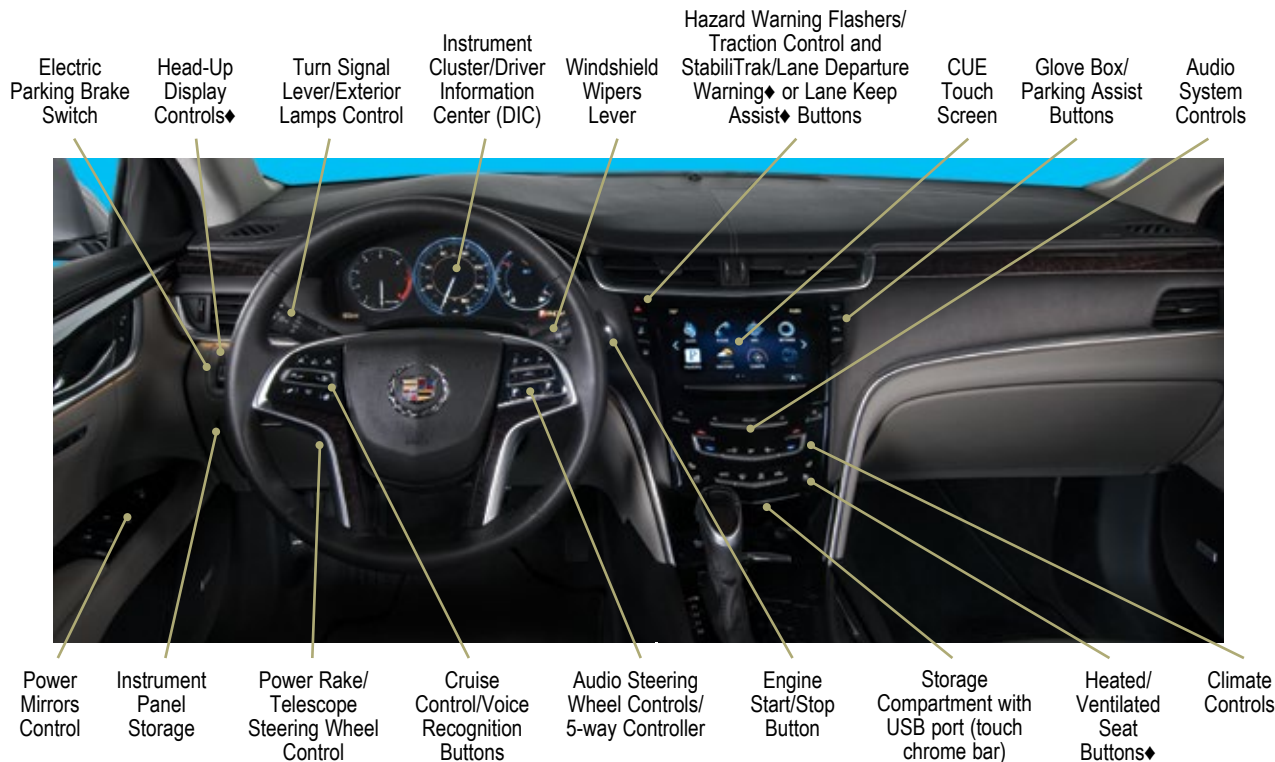

REMOTE KEYLESS ENTRY TRANSMITTER



Lock

Press to lock all doors.



Unlock

Press to unlock the driver's door.

Press again to unlock all doors.

Press and hold to lower all windows. ♦

Note: To change the Remote Lock and Unlock settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.



Remote Vehicle Start

Use to start the engine from outside the vehicle. See Adaptive Remote Start on page 4.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The exterior lamps flash and the horn sounds.

Press and hold for 3 seconds to activate the alarm. The turn signal lamps flash and the horn sounds for 30 seconds, or until the button is pressed again or the vehicle is started.



Trunk Release

Press twice to open the trunk.



See Keys, Doors and Windows in your Owner Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors, ignition and trunk without removing the Remote Keyless Entry transmitter from your pocket or purse. The transmitter must be within 3 feet of the door being unlocked or the trunk.

Keyless Unlocking

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the lock button on a passenger door handle to unlock all doors.
- ▶ Press the touch pad above the license plate to open the trunk.



Keyless Locking

With the ignition off, the transmitter removed from the vehicle, and all doors closed:

- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay once all doors are closed.
- ▶ Press the lock button on any door handle to lock all doors immediately.

Note: To change the door lock and unlock settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

See Keys, Doors and Windows in your Owner Manual.

KEYLESS START

Start

- ▶ With the vehicle in Park or Neutral, press the brake pedal and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.



Note: The transmitter must be in the vehicle to turn on the ignition.

If the transmitter battery is weak, place the transmitter in the depression below the Accessory Power Outlet in the center console lower storage area to enable the engine to start.

Cell phone chargers may interfere with the operation of the Pushbutton Start System and should not be plugged in when starting or turning off the engine.

Stop/Off

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof until any door is opened.

Accessory

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the Accessory mode. The yellow indicator on the button will illuminate.

See *Driving and Operating* in your Owner Manual.

ADAPTIVE REMOTE START

Starting the Vehicle

1. Press and release the **Lock** button on the Remote Keyless Entry transmitter.
2. Immediately press and hold the **Remote Start** button until the turn signal lamps flash.

When the vehicle starts, the parking lamps will light and remain on while the engine is running. The engine will continue running for 10 minutes. Repeat these steps for a 10-minute time extension. Remote start can be extended only once.

3. Before driving, press the brake pedal and then press the **ENGINE START/STOP** button to turn on all vehicle controls.

Canceling a Remote Start

- ▶ Press and hold the **Remote Start** button until the parking lamps turn off.

Climate Control Operation

During a remote start, the automatic climate control system will operate at the same setting as when the vehicle was last turned off.

Heated Seat Operation

If the remote start heated seat option is selected in the Vehicle Settings, the heated seat button indicators do not illuminate and the temperature performance of the unoccupied heated seat may be reduced during the remote start. The heated seat turns off when the vehicle is turned on. If heated seat operation is desired after the vehicle has been turned on, press the heated seat button.

See *Keys, Doors and Windows* in your Owner Manual.

STEERING WHEEL CONTROLS

Cruise Control

 **On/Off**

SET Set Speed

With Cruise Control on, press the control bar down fully to set the cruise speed.

RES Resume Speed

With Cruise Control on, press the control bar up fully to resume the previous set speed.

+ – Adjust Speed

When active, press the control bar up (+) or down (–) lightly to increase or decrease the set speed by 1-mph increments; press up or down fully to increase or decrease the set speed to the next 5-mph interval on the speedometer.

 **Cancel**

Press to cancel cruise control without erasing the set speed from memory.

Following Gap (Adaptive Cruise Control♦ and Forward Collision Alert♦)

Press repeatedly to select a setting of Far, Medium, Near, or in some vehicles, Off.

See Driving and Operating in your Owner Manual.

Heated Steering Wheel♦

 **On/Off**

See Instruments and Controls in your Owner Manual.



Voice Recognition

 **Push to Talk**

Press to interact with the OnStar, Bluetooth or CUE system.

 **End Call/Mute**

Press to end/reject a call or mute the audio system.

See Instruments and Controls in your Owner Manual.

5-Way Controller

Moves left/right, up/down, and in.

 **Left/Right**

Press to navigate to the left or right cluster display or to toggle to the next or previous menu option.

 **Up/Down**

Press the control bar up or down to scroll through a menu.

SEL Select

Press to select a highlighted menu item.

Audio Controls

  **Volume**

Press  or  to increase or decrease the volume.

 **Next/Previous**

Press  or  to select the next or previous favorite radio station, track or file.

See Instruments and Controls in your Owner Manual.



INSTRUMENT CLUSTER



Balanced configuration shown

Cluster Display Zones



Use the 5-way controller on the right side of the steering wheel to navigate and select between the available display zones in each cluster configuration.

Uplevel Cluster Configurations♦

1. Use the 5-way controller on the steering wheel to find the Settings page in one of the display zones on the cluster.
2. Press **SEL (Select)** to enter the Settings menu.
3. Scroll ∇ down to highlight Display Layout; press **SEL**.
4. Scroll $\wedge$ up or ∇ down to highlight one of four reconfigurable displays; press **SEL**.
5. Press $\leftarrow$ to exit the menu.

See Instruments and Controls in your Owner Manual.

DRIVER INFORMATION CENTER



The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle information. The default DIC Info Displays include a digital speedometer, trip odometers, fuel range, average fuel economy, compass, oil life, and tire pressure. Additional Info Displays are available.

Info Pages Menu

1. Use the 5-way controller on the right side of the steering wheel to find the Settings page in one of the display zones on the display.
2. Press **SEL** to enter the Settings menu.
3. Scroll  down to highlight Info Pages; press **SEL**.
4. Scroll  up or  down to move through the list of info displays.
5. Press **SEL** to select or deselect a display item.

See Instruments and Controls in your Owner Manual.

HEAD-UP DISPLAY

The Head-Up Display (HUD) projects select vehicle operating information onto the windshield. The HUD controls are located on the left side of the instrument panel.



Lift up or press down to adjust the position of the image. It cannot be adjusted side-to-side.




Press to select from four displays: Speed View; Audio/Phone View; Navigation View; and Performance View.



Lift up or press down to brighten or dim the display.
Hold down to turn off the display.

See Instruments and Controls in your Owner Manual.

TOUCH SCREEN AND CONTROLS

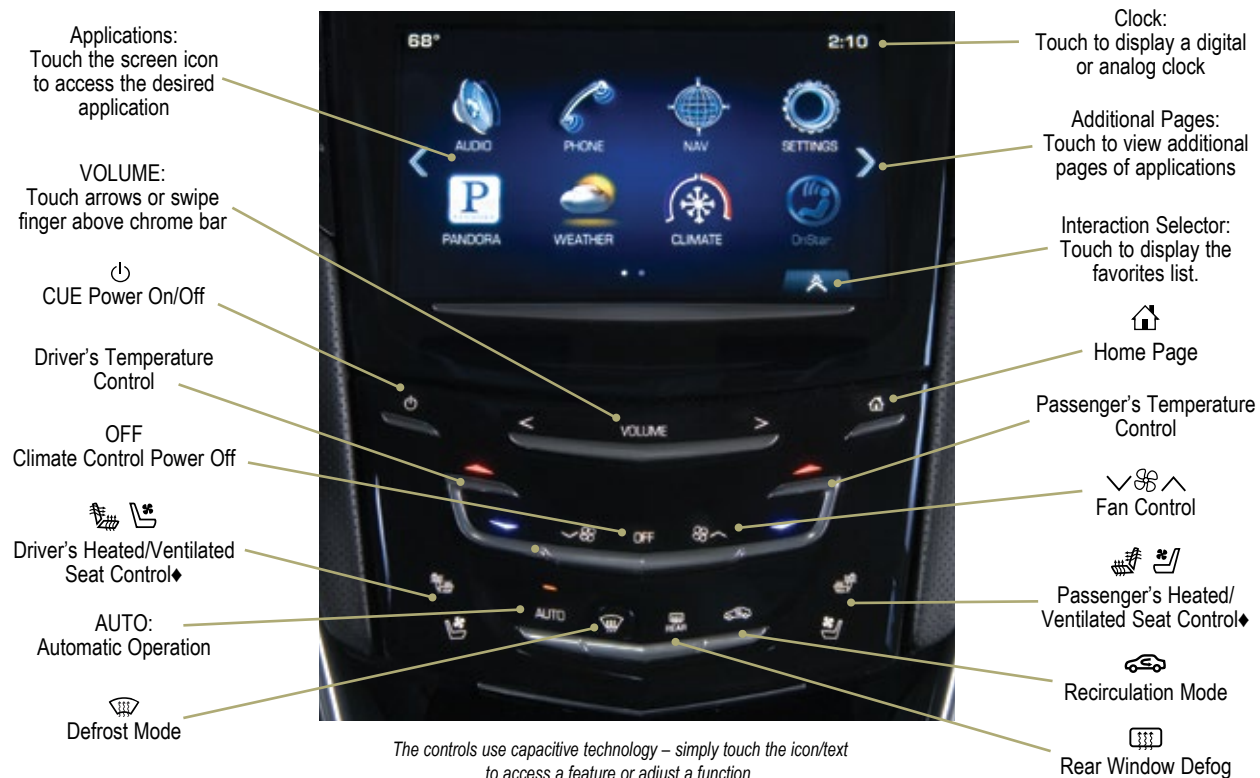

CUE SYSTEM MENUS

CUE offers a variety of entertainment, communication and vehicle system options. Touch an application icon on the touch screen to access the following items.



Audio

- Voice Recognition
- Radio Band
- Seek Up/Down
- Tune/Play
- Media
- Menu



Navigation◆

- Zoom Out
- Zoom In
- Overview
- Destination
- Map Menu
- Seek Up/Down
- Tune/Play



Phone

- Voice Recognition
- Contacts
- Recent
- Keypad
- Voice Mail
- Phones

Note: The  microphone icon activates Handset Voice Recognition. See page 12.



Climate

- Driver/Vehicle Set Temperature
- Passenger Set Temperature
- Sync Temperature Settings
- AC Mode
- Automatic Climate On/Off
- Air Distribution Settings
- Front/Rear Settings
- Fan Speed



Settings

- Time and Date
- Language
- Valet Mode
- Radio
- Vehicle
- Bluetooth
- Voice
- Display
- Rear Camera
- Return to Factory Settings

INTERACTING WITH THE CUE SYSTEM

To make interactions simple, use the following gestures on the CUE touch screen just as you would on a smartphone.

Tap



Tap an item on the screen to perform the desired function.

Drag



Touch an item on the screen and drag your finger along the screen while holding down on the item.

Nudge



Press the desired item and move your finger in an up/down or side-to-side motion without releasing your finger. When your finger is removed, the item stops moving.

Flick



Press anywhere within a list or page and move your finger rapidly in an up/down or side-to-side motion, releasing from the screen while your finger is still moving.

Press and Hold



Press and hold an item.

Pinch



Place two fingers on the screen and bring them together in a pinching motion.

Spread



Place two fingers on the screen and spread them apart.

Double Tap



Tap an item twice on the screen quickly.

See your CUE Infotainment System Manual.

CUE SYSTEM FEATURES

Refer to your Owner Manual for important safety information about using the infotainment system while driving.

CUE uses a Bluetooth or USB connection to link a compatible smartphone, cell phone, USB flash drive or portable audio player/iPod® to the touch screen infotainment display. It offers a variety of entertainment options, including streaming audio from the Internet and features enhanced hands-free voice control, music information and the ability to play music files from a USB flash drive or an SD media card. For assistance, call 1-855-4-CUE-NOW (1-855-428-3669) or visit www.cadillac.com/cue.

Setting the Time

1. Touch **Settings** on the home page.
2. Touch **Time and Date**.
3. Touch **Set Time**.
4. Touch **+** or **-** to adjust the hours, minutes, and AM or PM.
5. Touch **< BACK** to exit the menu.
 - If the Auto Set feature is enabled, the time will be updated automatically as the system obtains time information from the cellular network.

Storing Favorites

Radio stations from all bands (AM, FM or XM♦), Pandora stations, tone settings, phone contacts and navigation destinations♦ can be stored in any order.

1. Display the desired radio station, tone settings, Pandora station, navigation destination or contact.
2. Touch and drag up the  Interaction Selector at the bottom of the screen to display the favorite screen buttons.
3. Touch and hold a favorite screen button until a beep sounds.
4. Repeat the steps to store another favorite item.

CD Player (Dealer-installed accessory)

If equipped, the CD player is located in the glove box.

- Touch  **Media** until CD is displayed to play a disc.

♦ Optional equipment

Portable Audio Devices

USB ports are located at the front of the center console and in the center console storage compartment.

- Connect an iPod®, iPhone®, MP3 player, a USB flash drive or a USB mass storage device to the USB port. CUE will read the connected device, build a list of voice commands, and fill in missing song information and album graphics. Search for music on-screen or by voice commands.

PANDORA® Internet Radio

Listen to personalized radio stations based on favorite artists or genres. Requires an Internet-connected device with Pandora software.

1. Download the Pandora app to your smartphone. Restart the smartphone and sign in to Pandora.
2. Create a station on your phone to listen to a customized song list in the vehicle.
3. Connect your smartphone/device to the system by Bluetooth or, for Apple devices, by a USB cable.
4. Touch the Pandora icon on the touch screen to access Pandora. A slight delay may occur when loading a song or changing a station.

See your CUE Infotainment System Manual.

BLUETOOTH® SYSTEM

Refer to your Owner Manual for important safety information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit www.gmttotalconnect.com for more information.

Pair a Phone

1. To use voice recognition, press the **Push to Talk** button; after the tone, say "Pair Phone," or
Use the touch screen to select **Phone > Pair Device**.
2. Start the pairing process on the phone. Locate Cadillac CUE on the phone.
3. Enter the four-digit code that appears on the touch screen into the phone or, if a six-digit code appears on the phone, confirm it on the touch screen.
4. If the phone prompts to accept the connection or phone book download, select Always Accept and Allow.

See your CUE Infotainment System Manual.

VALET MODE

- ▶ To lock/unlock various features of the vehicle, select Valet Mode under Vehicle Settings and enter a passcode. It can be used when it's desired that only an authorized user has access to personalized features.

See your CUE Infotainment System Manual.

VOICE RECOGNITION

Control the music source and navigation destination, and make phone calls hands-free, using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will say "Please say a command," followed by a beep.
3. After the beep, say what you want it to do.

- **Hands-free calling:**

Example command: "Call Amanda" or "Dial 555-1212"

- **Connected music device search:**

Example commands: "Play artist [name]" or "Play song [name]"

- **Radio control:**

Example commands: "Tune FM 104.3" or "Tune XM Classic Vinyl"

- **Navigation controls:**

Example commands: "Destination Address" or "Destination Contact"

- **Help:**

Say "Help" for voice recognition assistance

Handset Voice Recognition

Handset Voice Recognition pass-thru allows access to the voice recognition commands on a compatible, paired cell phone; e.g., Siri or Voice Command. Visit www.gmttotalconnect.com for more information.

- ▶ To activate Handset Voice Recognition, touch the 
Microphone icon on the CUE touch screen or press and hold the  **Push to Talk** steering wheel button.

See your CUE Infotainment System Manual.

VEHICLE PERSONALIZATION




Some vehicle features can be customized using the controls on the audio system. The Vehicle Settings menu may include Climate and Air Quality; Collision/Detection Systems; Comfort and Convenience; Lighting; Power Door Locks; and Remote Locking, Unlocking and Starting.

1. Touch **Settings** on the home page.
2. Touch **Vehicle**.
3. Touch the desired menu item.
4. Touch the desired feature and setting.
5. Touch **< BACK** to exit each menu.

See Instruments and Controls in your Owner Manual.

NAVIGATION

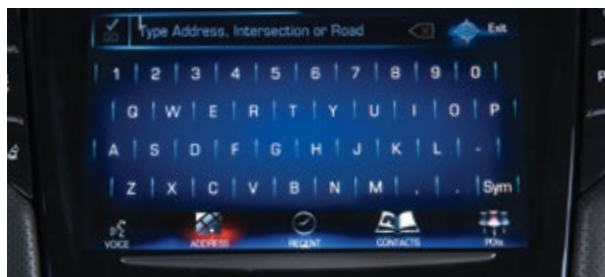

Enter a destination using the Single Line Destination feature. Approximate your desired destination and CUE's auto-fill function will enter the necessary information.

1. Touch **Navigation** on the home page.
2. Touch **Destination**.
3. Type the address, intersection or road.
4. Touch **Go**.
5. Select the desired name from the generated list.
6. Touch **Go**.

See your CUE Infotainment System Manual.

ONSTAR WITH 4G LTE

If equipped with OnStar 4G LTE and Wi-Fi®, up to seven devices (smartphones, tablets and laptops) can be connected to high-speed Internet through the vehicle's built-in Wi-Fi hotspot.

- ▶ To retrieve the SSID and password for the hotspot, press the OnStar Voice Command button on the overhead console or rearview mirror, wait for the prompt, and then say "Wi-Fi settings." The information will be displayed on the screen.

For assistance or to change the SSID and password, press the blue OnStar button or call 1-888-4-ONSTAR (1-888-466-7827).

Note: See onstar.com for a detailed instruction guide, vehicle availability, details, and system limitations. Services and apps vary by make, model, year, carrier, availability, and conditions. 4G LTE service is available in select markets. 4G LTE performance is based on industry averages and vehicle systems design. Some services require a data plan.

See your CUE Infotainment System Manual.

TRUNK RELEASE

- ▶ To open the trunk from inside the vehicle, press the  **Trunk Release** button on the driver's door.
- ▶ To open the trunk from outside the vehicle, press the touch pad above the license plate. The vehicle must be unlocked or the transmitter must be within range of the trunk.



See Keys, Doors and Windows in your Owner Manual. 14

POWER MIRRORS

Power Mirror Adjustment

- ▶ Move the selector switch (A) to the Left (L) or Right (R) position to select the driver's or passenger's mirror; use the four-way control (B) to adjust the mirror.



Power Folding Mirrors

- ▶ Press the  **Power Folding Mirrors** button (not shown) to fold/unfold the exterior mirrors.

Reverse Tilt Mirror

The Reverse Tilt Mirror will tilt down the driver and/or passenger mirrors to improve visibility near the rear wheels when the vehicle is shifted into Reverse.

Note: To change the Reverse Tilt Mirror settings, go to Comfort and Convenience in the Vehicle Settings menu.

See Keys, Doors and Windows in your Owner Manual.

POWER DOOR LOCKS/SAFETY LOCKS

- ▶ Press the power door  **Lock**/ **Unlock** button on the driver's door to unlock or lock all doors.
- ▶ Pull the inside door handle to unlock a door; pull the handle again to open the door.
- ▶ Press the  **Safety Locks** button on the driver's door to prevent the rear doors from opening from the inside and to disable the rear power windows.

See Keys, Doors and Windows in your Owner Manual.

EXTERIOR LIGHTING



Exterior Lighting

 **Off/On**

AUTO Automatic Light Control

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions, including the IntelliBeam® automatic high-beam system♦.

 **Parking Lamps**

 **Headlamps**

Adaptive Forward Lighting (AFL)♦


The AFL system pivots the headlamps left or right in the direction of travel.

Note: The AFL system operates only when the exterior lamps control knob is in the AUTO position, at speeds greater than 2 mph, and after driving a short distance to calibrate the system.

See Lighting in your Owner Manual.

♦ Optional equipment

WINDSHIELD WIPERS

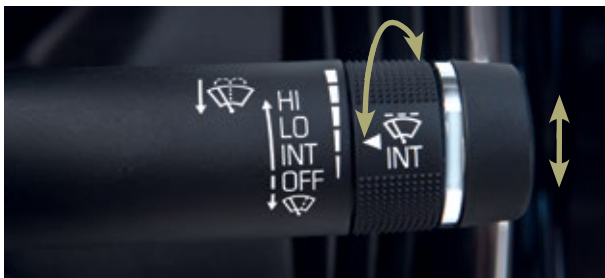

Move the lever to operate the windshield wipers.

HI Fast wiper

LO Slow wiper

INT Intermittent (Rainsense™ Sensitivity)♦

Move the lever to INT to turn on the Rainsense wipers. Rotate the INT band to adjust the automatic wiper cycling based on the amount of moisture on the windshield. The wipers activate more often as the band is rotated upward.

Note: When entering an automatic car wash, it is recommended to turn off the Rainsense wipers.

OFF

 **Mist**

 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield.

See Instruments and Controls in your Owner Manual.

DRIVER ASSISTANCE SYSTEMS

The driver assistance systems use advanced technologies to help avoid collisions by providing visual, audible and/or seat vibration alerts.

Driver Awareness Package

Safety Alert Seat ♦ – The driver's seat pulses, left side, right side, or simultaneously, to alert the driver of potential hazards.

- ▶ Audible alerts may be selected instead of Safety Alert Seat pulsing alerts. To change the alert setting, go to **Settings > Vehicle > Collision/Detection Systems > Alert Type**.

Forward Collision Alert ♦ – The  **Vehicle Ahead** indicator is green on the instrument cluster when a vehicle is detected and is yellow when following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the driver's seat pulses.

- ▶ To set the alert timing or turn the system off, press the  **Following Gap** button on the left side of the steering wheel.

Side Blind Zone Alert ♦ – While driving, a  warning symbol displays on the left or right side mirror when a vehicle is detected in that side blind spot area.

- ▶ To turn the system on or off, go to **Settings > Vehicle > Collision/Detection Systems > Side Blind Zone Alert**.

Rear Cross Traffic Alert ♦ – With the vehicle in Reverse, a warning of approaching cross traffic is displayed on the touch screen from the Rear Vision Camera, and the left or right side of the driver's seat pulses to indicate the direction of the cross traffic.

- ▶ To turn the system on or off, press the  **Parking Assist** button on the center of the instrument panel (this also will turn the Parking Assist and Rear Automatic Braking systems on/off), or go to **Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert**.

Lane Keep Assist (Front-Wheel-Drive models only) ♦ – The  **Lane Keep Assist** indicator is green on the instrument cluster when a lane is detected ahead. If the vehicle crosses a detected lane, the indicator changes to yellow and the system gently turns the steering wheel to assist in keeping the vehicle in the lane. Turn the steering wheel to override Lane Keep Assist.

- ▶ To turn the system on or off, press the  **Lane Keep Assist** button on the center of the instrument panel.

Lane Departure Warning (All-Wheel-Drive models only) ♦ – When crossing a detected lane marking without using a turn signal, the yellow  **Lane Departure Warning** symbol flashes on the instrument cluster and the left or right side of the driver's seat pulses. Turn the steering wheel to suppress Lane Departure Warning.

- ▶ To turn the system on or off, press the  **Lane Departure Warning** button on the center of the instrument panel.

Driver Assist Package (includes Driver Awareness Package)

Front and Rear Automatic Braking ♦ – Automatically applies the brakes in potential collision situations to help reduce damage or help avoid collisions with vehicles directly ahead or behind, and with some objects behind.

- ▶ To turn the Front Automatic Braking system on or off, go to **Settings > Vehicle > Collision/Detection Systems > Auto Collision Preparation**.
- ▶ To turn the Rear Automatic Braking system on or off, press the  **Parking Assist** button on the center of the instrument panel (this also will turn the Parking Assist and Rear Cross Traffic Alert systems on/off).

See *Driving and Operating in your Owner Manual*.

DRIVER ASSISTANCE SYSTEMS

Driver Assist Package (includes Driver Awareness Package)

Adaptive Cruise Control – If a vehicle is detected ahead, the vehicle accelerates or brakes moderately to maintain the driver-selected cruise speed and following gap.

- ▶ To set a following gap, press the  **Following Gap** button on the left side of the steering wheel.

See Driving and Operating in your Owner Manual.

ULTRAVIEW SUNROOF



Open/Close the Sunshade

- ▶ Press the rear or front of the  **Sunshade** switch (A) to express-open or express-close the sunshade.

Open/Close the Sunroof

- ▶ Press and hold the front of the  **Sunroof** switch (B) to vent the sunroof.
- ▶ Press the rear of the  switch to express-open the sunroof to the comfort position.
- ▶ Press the front of the  switch to express-close the sunroof.

See Keys, Doors and Windows in your Owner Manual.

◆ Optional equipment

MEMORY SEATS



Set Memory Positions

1. Adjust the driver's seat, power outside mirrors and the power steering column to the desired positions.
2. Press and hold the **SET** button and button **1** on the driver's door until a beep sounds.
3. Repeat the steps using button **2** for a second driver.

Set Exit Position

1. Adjust the driver's seat, power outside mirrors and the power steering column to the desired positions.
2. Press and hold the **SET** button and the  **EXIT** button on the driver's door at the same time until a beep sounds.

Recall Positions


- ▶ Press button **1**, **2** or . If the vehicle is moving, press and hold the button until the seat and mirrors reach the set position.

Passenger Memory Seat

The front passenger memory seat operates the same as the driver's seat. Use the memory seat controls, located on the passenger's door, to save and recall settings for the front passenger's seat.

See Seats and Restraints in your Owner Manual.

AUTOMATIC TRANSMISSION TAP SHIFT

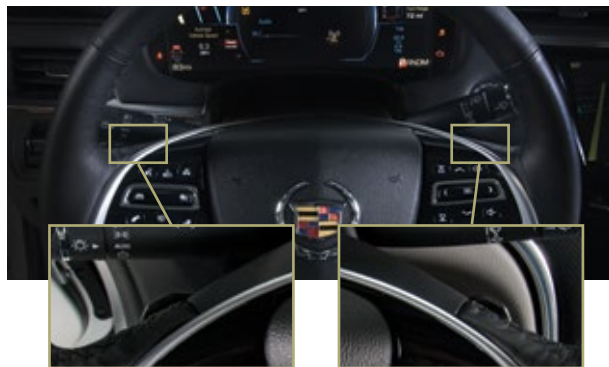

The 6-speed automatic transmission has a Tap Shift mode that allows you to shift gears similar to a manual transmission.


Using Tap Shift

1. Move the shift lever to the **M** (Manual Mode) position.
2. Using the buttons on the back of the steering wheel, tap the left (–) button to downshift and the right (+) button to upshift. The current gear selection will be shown in the Driver Information Center and Head-Up Display♦.

If current vehicle speed is too high or too low for the requested gear, the shift will not occur. When coming to a stop, the transmission will automatically shift to 1st gear.

See Driving and Operating in your Owner Manual.

STABILITRAK®/TRACTION CONTROL SYSTEMS

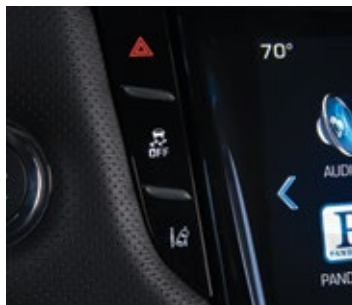

The traction control system limits wheelspin and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

Turning Off Traction Control

Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control/StabiliTrak** button on the center of the instrument panel. The  **Traction Control Off** light on the instrument cluster will illuminate.
- ▶ Press the  button again to turn on traction control.

See Driving and Operating in your Owner Manual.

AUTOMATIC PARKING ASSIST◆

Automatic Parking Assist steers the vehicle to help park in parallel or perpendicular spaces.

- ▶ Press the **P**  **Automatic Parking Assist** button on the center of the instrument panel to begin searching for a parking space. To switch between parallel and perpendicular parking, press and hold the **P**  button. A beep sounds and a symbol displays in the Driver Information Center when a parking space large enough is found.
- ▶ Shift the vehicle into Reverse or Drive as directed and apply the accelerator or brake as required. Be prepared to brake. Parking Complete will be displayed and a beep will sound when the parking maneuver is complete.

See Driving and Operating in your Owner Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, pull the **(P) Parking Brake** switch on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the **(P)** switch.

See Driving and Operating in your Owner Manual.



ENGINE OIL LIFE SYSTEM

The Engine Oil Life System calculates oil life based on vehicle use and displays Change Engine Oil Soon on the Driver Information Center when it's necessary to change the oil and filter. Reset the system to 100% only following an oil change.

See Vehicle Care in your Owner Manual.

TIRES

Tire Pressure Monitor

The **(!** **Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures. The proper tire pressures for the vehicle are listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed in the Driver Information Center.

Tire pressure is affected by cold weather and distance driven. If the low tire pressure warning light illuminates when the vehicle is first started in cooler temperatures and then turns off as the vehicle is driven, check for the proper tire pressures.

Refer to your Owner Manual for additional information about normal monthly tire maintenance.

Tire Sealant and Compressor Kit◆

The tire sealant and compressor kit can be used to temporarily seal small punctures in the tread area of the tire. The kit is located under the trunk floor. Refer to the kit instructions for complete operating information.

See Vehicle Care in your Owner Manual.

OWNER PRIVILEGES™

ROADSIDE ASSISTANCE

1-800-224-1400

TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump-starting, lock-out service, fuel delivery and flat tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

Roadside Assistance and OnStar®: If you have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

CUSTOMER ASSISTANCE

1-800-458-8006

Should you need to ask a question, make a comment, or request additional information, Cadillac Customer Assistance is available anytime.

CADILLAC ONLINE OWNER CENTER

Visit **my.cadillac.com** for access to the Cadillac Owner Center, which features online owner manuals, maintenance information, service records, and more.

myCADILLAC and ONSTAR MOBILE APPS

The myCadillac and OnStar RemoteLink mobile apps connect owners to a variety of vehicle information and services, such as a searchable Owner Manual, real-time fuel information and Roadside Assistance, as well as enabling users to perform Remote Keyless Entry transmitter commands, including locking and unlocking the doors and starting the vehicle.



An active OnStar account is required to use the OnStar mobile app. Download the mobile apps from your iPhone® or Android™ device's app store. To learn more about OnStar services, press the OnStar button, refer to your Owner Manual, call 1-888-466-7827 or visit **onstar.com**.

CUE SUPPORT

For information or assistance operating the CUE infotainment system, call 1-855-4-CUE-NOW (1-855-428-3669).

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2014 by General Motors. All rights reserved.



* 2 2 9 4 0 2 1 4 A *