



This Quick Reference Guide is not intended to replace your vehicle Owner's Manual which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.

LEARN MORE ABOUT YOUR NEW VEHICLE

To put QR tags to work for you, use your mobile phone's browser or app store link to download a QR tag reader. Then follow the directions to scan the QR tag and see your vehicle's features come to life.



fordowner.com



ford.ca

United States

 
Ford Customer Relationship Center
1-800-392-3673 (FORD)
(TDD for the hearing impaired: 1-800-232-5952)
fordowner.com

Canada

Ford Customer Relationship Centre
1-800-565-3673 (FORD)
ford.ca

WARNING: Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

Explorer
May 2014
First Printing
Quick Reference Guide
Litho in U.S.A.



FL2J 19G217 AA

QUICK REFERENCE GUIDE

+++++ 2015 EXPLORER



COMMONLY USED SYNC® VOICE COMMANDS



Basic Commands

- What can I say?
- List of commands
- Main menu
- Previous
- Next
- Go back
- Exit
- Help
- Pair my phone



Phone

- Phone list of commands
 - Dial
 - Call <name> on cell/at home/at work
 - Call voicemail
 - Do not disturb <On/Off>
 - Listen to text messages (phone-dependent feature)



Navigation*

- Navigation list of commands
 - Destination street address <number, name, city>
 - Destination home
 - Navigation voice <On/Off>
 - Navigation volume <increase/decrease>
 - Repeat instruction
 - Show <map/north-up/heading-up/3-D>
- Travel Link list of commands
 - Traffic
 - Weather
 - Movie listings
 - Fuel prices
 - Sports <headlines/scores/schedule>



Climate*

- Climate control list of commands
 - Climate <On/Off>
 - Climate my temperature
 - Climate temperature



Entertainment

- Audio list of commands:
You can also get detailed lists of commands for radio, USB, *Bluetooth*® audio, SiriusXM and SD card
- Audio <On/Off>
- Radio
 - FM <87.9-107.9>
 - FM preset <#>
- CD
 - Play track <1-512>
 - Shuffle <On/Off>
- USB
 - Play song <name>
 - Play album <name>
- SiriusXM
 - <Channel name>
 - Preset <#>

*available only with MyFord Touch

Some services may not be available in your area. Refer to your Owner's Manual, visit the website or call the toll-free number for

more information. For U.S. customers: visit SyncMyRide.com or call **1-800-392-3673** (select Option 1 or 2 for language, then Option 3).

For Canadian customers: visit SyncMyRide.ca or call **1-800-565-3673** (select Option 1 or 2 for language, then Option 3).

TABLE OF CONTENTS

INSTRUMENT PANEL	4-5
SYNC	6-7
SYNC WITH MYFORD TOUCH	8-10
CONVENIENCE	11
COMFORT	12-14
FUNCTION	15-17
ESSENTIAL FEATURES	18-19

INSTRUMENT PANEL



1. AUTOLAMPS*

When the lighting control is in the autolamps  position, the headlamps automatically turn on in low light situations or when the system activates the wipers. The headlamps remain on for a period of time after you switch the ignition off.

Use the information display controls to adjust the period of time that the headlamps remain on. See the *Lighting* section of your *Owner's Manual* for more details.

2. POWER TILT AND TELESCOPE STEERING COLUMN*

The four-way rocker control allows you to tilt and telescope the steering wheel to the position you desire.

*if equipped

3. CRUISE CONTROL

To set a cruise control speed:

- Press the **ON** control up and release.
- Accelerate to the desired speed.
- Press the **SET** control up and release, then take your foot off the accelerator.

After you set your speed, you can press the **SET** control up or down to adjust cruise speed. To switch off cruise control, press the **OFF** control down.

4. LEFT INFORMATION DISPLAY*

Provides information about various systems on your vehicle. Use the left-hand, 5-way controls located on the steering wheel to choose and confirm settings and messages. Refer to the *Information Displays* chapter in your *Owner's Manual* for more information.



5. SERVICE ENGINE SOON LIGHT

 Lights briefly when you switch on the ignition. If the light remains on or is blinking after starting the engine, the On-Board Diagnostics (OBD-II) system has detected a problem. Drive in a moderate fashion and contact an authorized dealer as soon as possible.

6. RIGHT INFORMATION DISPLAY

Displays information about Entertainment, Phone and Navigation*. Use the right-hand, 5-way controls located on your steering wheel to scroll through, highlight and make minor adjustments within a selected menu. Refer to the *MyFord Touch*® chapter in your *Owner's Manual* for more information.

7. STEERING WHEEL-MOUNTED CONTROLS

AUDIO CONTROL

Press **VOL +** or **-** to increase or decrease volume levels. Press **SEEK ▲** or **▼** to access the next or previous

radio station preset, CD track or preset satellite radio channel*.

VOICE CONTROL*

Press  to access SYNC® phone features.

Press  to access voice recognition.

8. PUSH BUTTON START*

Allows you to start your vehicle by fully pressing the brake pedal and the **ENGINE START STOP** button. Press the button again to switch the engine off.

NOTE: Your intelligent access transmitter* must be inside the vehicle for the ignition to start.

9. HAZARD CONTROL

*if equipped 5



SYNC is a hands-free, voice recognition system used for entertainment, information and communication. SYNC. Say the Word.

GETTING STARTED WITH YOUR SYNC SYSTEM

Before You Get Started

1. Set up your owner account at **SyncMyRide.com** (U.S.) or **SyncMyRide.ca** (Canada). Register by following the on-screen instructions. After registering, you can see what services you may be eligible for.
2. SYNC uses a wireless connection called **Bluetooth®** to communicate with your phone. Switch on **Bluetooth** mode in your phone's menu options. This lets your phone find SYNC. If you need more details on setting up your phone with SYNC, visit **SyncMyRide.com** (U.S.) or **SyncMyRide.ca** (Canada), or your phone manufacturer's website.

Pairing Your Phone with SYNC

In order to use the many features of SYNC, such as making a phone call, you must first connect or pair your phone with SYNC.

To Pair Your Phone for the First Time

1. Make sure that your vehicle is in park (P) and you switch your ignition and radio on.
2. Press the phone button . When the display indicates **No Phone Found**, press **OK**.
3. When **Add Bluetooth Device?** appears in the display, press **OK**.
4. When **Find SYNC** appears in the display, press **OK**. When prompted on your phone's display, enter the PIN provided by SYNC into your phone.
5. The display indicates when the pairing is successful.

NOTE: The system may prompt you to —

- Set your phone as the **primary** or **favorite** (the primary phone receives messages and voicemail).
- Download your phone book (required to use the full set of voice commands).
- Switch 911 Assist® on.

Tips

- Make sure you accept the request from SYNC to access your phone.
- To pair subsequent phones, please refer to *Pairing Subsequent Phones* in the SYNC chapter of your *Owner's Manual*.
- If you experience pairing problems, try performing a clean pairing by deleting your services from SYNC, deleting the SYNC connection from your phone, and then repeating the process.

NOTE: If you have SYNC® with MyFord Touch®, see the pairing instructions on page 8.

USING YOUR PHONE WITH SYNC

NOTE: You must download your phone book to make phone calls with voice commands by name.

Making a Phone Call

Use SYNC to make a phone call to anyone in your phone book by pressing the voice button . When prompted, say any of the following voice commands:

Call <name>	Call <name> at work
Call <name> on cell	Call <name> at home

For example, you could say “Call Jake Smith at home”. SYNC repeats the command and dials the number.

NOTE: You can also make phone calls by pressing the voice button . When prompted, say the voice command “Dial”, then say the phone number.

Answering Incoming Calls

Whenever you have an incoming call, the name and number of the person calling appears in your display. Press the phone button to answer an incoming call. You can hang up at any time by pressing and holding the phone button .

Do Not Disturb Mode

This feature blocks incoming calls and text messages and saves them for later. You still have access to outgoing calls when this feature is active. Say the voice command “Do not disturb on” to enable and “Do not disturb off” to disable.

USING SYNC TO ACCESS DIGITAL MEDIA

SYNC has a media hub with multiple inputs allowing you to access personal media from your digital devices. Plug in your USB media devices such as phones and MP3 players and use SYNC to play all of your favorite music.

Using Voice Commands to Play Music

1. Plug your media player into your USB port.
2. Press the voice button . When prompted, say “USB”, then follow-up saying one of the following voice commands:

“Play all”	“Play next song”
“Play song <name>”	“Play album <name>”

3. The system repeats the command and then plays your selection.

SYNC® WITH MYFORD TOUCH®*

Get in Touch Using Your Four-Corner Touchscreen

Phone, Navigation*, Climate and Entertainment are the four main features of SYNC with MyFord Touch. Each feature has its own corner represented by its own color.



A REVOLUTIONARY WAY TO CONNECT WITH YOUR VEHICLE.

Use the four-corner, four-color touchscreen to explore and interact with your vehicle. The touchscreen works the same way traditional controls, knobs and buttons do. Press the various corners on your touchscreen to personalize the many features and settings of your vehicle all in one place, and press the home icon  at any time to return to your home screen. The system provides easy interaction with your cellular phone, multimedia entertainment, climate controls and navigation system*.

Pairing Your Phone with MyFord Touch

Pair your phone to SYNC before using MyFord Touch.

Make sure that your vehicle is in park (P) and you switch on both your ignition and radio.

1. Touch **Add Phone** in the upper left corner of the touchscreen.
2. Make sure to set your cellular phone's **Bluetooth ON**.
3. Select SYNC on your cellular phone and a six-digit PIN appears on your device.
4. You may be prompted to enter a PIN on your device. To pair, enter the PIN displayed on the touchscreen.
5. Confirm that the PIN provided by SYNC matches the PIN displayed on your cellular phone.
6. The display indicates when the pairing is successful.



PHONE



Voice-control your phone for hands-free calling with your phone securely tucked away. With SYNC, you do not need to know the phone number. Just say the name of the person you want from your contacts.

Your phone connects you with many other features:

- Automatically connects with a 911 operator in the event of an accident (you must switch this feature on prior to the event).
- Transfer calls seamlessly from SYNC to your phone as you get in or out of your vehicle.

Refer to the SYNC chapter of your *Owner's Manual* for complete details.



NAVIGATION*



Get started with your navigation system by pressing the upper-right green corner. The available, voice-activated navigation system includes:

- SiriusXM Traffic™
- SiriusXM Travel Link™
- GPS (Global Positioning System) technology
- 3-D mapping
- Turn-by-turn navigation

Some features require activation. Refer to the *MyFord Touch* chapter of your *Owner's Manual* for complete details.

Set a Destination

Set a destination on your touchscreen by using a street address, a city center, a place on the map or a point of interest (POI). The easiest way, however, is by voice.

1. Press the voice button . When prompted, say "Destination street address".
2. The system asks you to say the full address and then displays an example on-screen.
3. You can then speak the address naturally, such as: "One two three Main Street, Anytown".

You can also use the touchscreen to enter a destination and narrow your choices by city or street as you type.

You can choose from up to three different types of routes:

- **Fastest:** Uses the fastest moving roads possible.
- **Shortest:** Uses the shortest distance possible.
- **Eco (EcoRoute):** Uses the most fuel-efficient route.

Tips

- Save your favorite locations by touching **Save to Favorites**.
- Change your map views from Direction Headed, North Up or 3-D.

NOTE: Make sure the navigation SD card* is in the media port or your navigation system will not work.

SYNC® WITH MYFORD TOUCH®*



CLIMATE



SYNC with MyFord Touch controls the temperature, airflow direction, fan speed and other climate features like climate controlled front seats* and rear climate control* for you and your passengers.

To use voice commands to operate climate, say a voice command like “Climate temperature 72 degrees” and MyFord Touch will make that adjustment.

Set Your MyTemp

- Touch the lower-right blue corner on the touchscreen.
- Set your exact, desired temperature using the (+) or (–) buttons.
- Press and hold the **MyTemp** button until the background color goes solid.

Heat Your Steering Wheel*

Press the Climate corner of the touchscreen, and press to switch the feature on and off.

NOTE: Wood-trimmed steering wheels* will not heat between the 10 o'clock and 2 o'clock positions.

Access Your Rear Climate Control*

Touch the **Rear** button on the lower-right corner to activate and then adjust temperatures and fan speed, or give second-row passengers access to their independent control.



ENTERTAINMENT

No matter how you store your music, SYNC makes it yours to enjoy when you're behind the wheel. Just press the lower-left red corner of the touchscreen. From here, you can easily go between AM/FM, SiriusXM and other media sources.

Set Your Radio Presets

- Touch the lower-left corner on the touchscreen.
- Touch **FM**.
- Touch **Direct Tune**.
- Enter the desired station and touch **Enter**.

- Touch **Presets** and then touch and hold one of the memory preset buttons to save it. The sound mutes briefly and returns when the system saves the station.

Bring in Your Own Music

Gain access to any audio source by voice and even control how each operates, like changing radio stations, CD tracks or music on one of the following devices:

- CD
- USB
- **Bluetooth®** streaming
- Audio line in

Refer to the *MyFord Touch* chapter in your *Owner's Manual*, visit the website or call the toll-free number for more information. See the inside front cover of this guide for details.



*if equipped

CONVENIENCE

EASY FUEL® SYSTEM

With this system, push the fuel door to open, insert the nozzle and begin fueling. It is self-sealing and therefore protected against dust, dirt, water, snow and ice. Wait 10 seconds from the time the refueling nozzle shuts off until you remove the nozzle from the vehicle. This time allows residual fuel in the nozzle to drain into the tank.

NOTE: When using a portable fuel container, slowly insert the fuel funnel (located in the spare tire compartment), and pour the fuel into the funnel. Do not use aftermarket funnels as they will not work with the Easy Fuel system and may cause damage. Properly clean the funnel after each use.

INTELLIGENT ACCESS*



*if equipped

NOTE: Your intelligent access transmitter must be within 3 feet (1 meter) of the vehicle for intelligent access to function properly.

To unlock the driver's door, pull the front exterior door handle. To lock the doors, press and hold the door handle lock sensor. To unlock and open the liftgate, press the exterior liftgate release button underneath the liftgate handle. The intelligent access transmitter also contains a mechanical key blade, which can be used to unlock the driver's door or secure the locking* glovebox, if necessary. See your *Owner's Manual* for more information.

REMOTE START*

Remote start allows you to start the engine from outside your vehicle using your key. To start, press and then press twice within three seconds. Your vehicle will run for 5, 10, or 15 minutes, depending on the setting. See the *Information Displays* chapter in your *Owner's Manual* to select the duration of the remote start system. Once inside, apply the brake while pressing the **ENGINE START STOP** button. Shift into drive (D) and go. If you have an integrated keyhead transmitter, insert the key into the ignition and

switch the ignition on as you normally would before driving. To switch the engine off from outside the vehicle after using your remote start, press once.

MYKEY®

MyKey allows you to program certain driving restrictions in order to promote good driving habits. You can program things like speed restrictions, limited volume levels and safety belt reminders. For complete information, refer to the *MyKey* chapter in your *Owner's Manual*.

INTEGRATED KEYHEAD TRANSMITTER REMOTE ENTRY ICONS*

- Press once to lock all doors. Press again within three seconds to confirm all doors are locked.
- Press once to unlock the driver's door. Press again within three seconds to unlock all doors.
- Press to start the panic alarm. Press again or switch on the ignition to stop the alarm.
- Press twice within three seconds to open the liftgate.
- **Car finder:** Press twice within three seconds to locate your vehicle. The horn sounds and the lamps flash.

COMFORT

DUAL-PANEL MOONROOF AND POWER SUNSCREEN*

The feature includes a one-touch, express-opening and -closing feature. To open, press and release the **SLIDE** control. The sunscreen opens automatically and the moonroof opens to the first position. To open the moonroof fully, press and release the **SLIDE** control again. To close, pull and release the **SLIDE** control. Press and release the **TILT** control to vent the moonroof. Pull and release the **TILT** control to close the moonroof. To open the sunscreen, press and release . Pull and release  to close the sunscreen.

AUTOWIPERS*



When you switch this feature on, your wipers turn on automatically when moisture is on the windshield. The wiper speed varies based on the amount of

moisture detected and the sensitivity setting. To deactivate, switch your wiper controls off.

NOTE: Make sure that you switch this feature off before entering a car wash.

110-VOLT AC POWER POINT*



The power point is located on the rear of the center console and can be used to power your smaller electrical devices that do not exceed 150 watts. You can use this feature after you switch your ignition on and the battery voltage is above 11 volts. When the indicator light is on, the power point is working and ready to use.

POWER-ADJUSTABLE PEDALS*

The control is located on the left side of the steering column. Press the **▲** arrow to move the pedals closer to you or

the **▼** arrow to move the pedals further away from you. The pedals should only be adjusted when the vehicle is stopped and in park (P).

AMBIENT LIGHTING*



When activated, ambient lighting illuminates your vehicle's footwells and cupholders with a choice of colors. To access and make adjustments:

1. Press the **Settings** icon, then select **Vehicle** and **Ambient Lighting**.
2. Touch the desired color.
3. Use the scroll bar to increase or decrease the intensity.

To switch the feature on or off, press the power button.

CLIMATE CONTROLLED FRONT SEATS*



On touchscreen-equipped vehicles, press the Climate corner on your touchscreen. Press the  or  seat icon repeatedly to cycle through the various modes and off.

For non-touchscreen vehicles, use the hard button controls (indicated by the same symbols). Press the controls repeatedly to cycle through the various modes and off. More lights indicate warmer or cooler settings.

MEMORY FUNCTION*

Allows one-touch recall of memory positions for the driver seat, power mirrors, steering column* and power-adjustable pedals. Use the memory controls on the driver's door to program

and then recall memory positions. To program position 1, press and hold the **1** button until you hear a tone. Use this same procedure to set positions **2** and **3** using the respective buttons. You can now use these controls to recall the set memory positions.

TILTING HEAD RESTRAINTS*



You can adjust the front-row head restraints. Pull up to raise the head restraint. To lower, press the head restraint down while pressing and holding the guide sleeve adjust or release button. Tilt the head restraint for additional comfort by gently pulling the top of the head restraint forward. Once it is in the forward-most position, tilting it forward once more releases it to the upright position.

NOTE: Do not attempt to force the headrest backward after tilting it. Instead, continue tilting it forward until the headrest releases to the upright position.

SECOND-ROW HEATED SEATS*

To operate, press the button on the rear of the floor console to cycle through the various heat settings and off. More lights indicate warmer settings.

NOTE: The heated seats operate only when the ignition is on. If activated, they will turn off automatically when you switch the engine off.

ADAPTIVE CRUISE CONTROL*

When cruise control is active, this feature allows you to set and maintain a 'gap distance' between you and the vehicle in front of you in the same lane. To select a gap distance, press the GAP control up or down. See the *Cruise Control* chapter in your *Owner's Manual* for more details.

NOTE: Driving aids do not replace the need to watch where the vehicle is moving and brake where necessary. Refer to your *Owner's Manual* for more details.

*if equipped

*if equipped 13

COMFORT CONTINUED

FLAT-FOLDING THIRD-ROW SEAT*

NOTE: Make sure that the area under the seat is free of objects before stowing it.

To fold and stow the third-row seat:

1. Remove all objects from the seat and floor stowage tub area.
2. Fold the head restraint by pulling the head restraint release strap.



3. From the rear of the vehicle, fold the seatback by pulling and holding the red strap while pushing the seatback forward. Release the strap once the seatback starts rotating forward.



4. To fold the seat fully into the floor, release the seat latches by pulling two straps at the same time: the short black strap (next to the red strap) and the headrest release strap.



To unfold the third-row seat:

NOTE: Make sure that the area is free of objects before unstowing it.

1. Unlatch and lift the seat out of the tub in the floor by squeezing and pulling up on the handle. When the seat is in a vertical position, push the seat over, letting it fall onto the latches.
2. To return the seatback to the upright position, pull the red strap, then while holding the red strap, pull the long strap located on the seat back to raise the seatback.
3. Pull the head restraints up to their normal position.

NOTE: Push and pull on the seat to make sure it latches to the vehicle floor. An unlatched seat may become dangerous in the event of a sudden stop or crash.

FUNCTION

ACTIVE PARK ASSIST*

The system detects an available parallel parking space and automatically steers the vehicle into the space, hands-free, while you control the accelerator, gearshift and brakes. The system uses visual, audible or both types of alerts to instruct the driver to park the vehicle. To use, press the **AUTO |P|** button; the touchscreen displays a message and a corresponding graphic to indicate the system is searching for a parking space.

Use the direction indicator to indicate which side of the vehicle you want the system to search on.

NOTE: Driving aids do not replace the need to watch where the vehicle is moving and brake when necessary. Refer to your *Owner's Manual* for safety information, more details and limitations.

TRAILER SWAY CONTROL

This feature helps reduce trailer sway when it begins by applying your vehicle brakes at individual wheels and, if necessary, reducing engine power. For more complete information, see the *Towing* chapter of your *Owner's Manual*.



FUNCTION CONTINUED

BLIND SPOT INFORMATION SYSTEM (BLIS®) WITH CROSS TRAFFIC ALERT*



BLIS uses sensors to help you determine if a vehicle may be in your blind spot zone. The cross traffic alert feature alerts you if a car is coming toward you while you back out of a parking space. BLIS and cross traffic alert display a yellow indicator light in your exterior mirrors. Cross traffic alert also sounds an audible alarm and displays messages to warn you which direction vehicles are approaching. Refer to the *Driving Aids* chapter in your *Owner's Manual* for more information.

SECURICODE™ KEYLESS ENTRY SYSTEM*

Invisible until touched, the keypad allows you to lock or unlock the doors. You will need your five-digit factory code located on your owner's wallet card in the glove box. Refer to the *Locks* chapter in your *Owner's Manual* for more information.



DRIVER ALERT*



This system monitors your driving behavior and determines when the driver's alertness is reduced or insufficient.

When the system determines that driving ability is at risk, a tone sounds and a message appears in the information display. If you do not make a correction, then warnings continue to alert the driver. Press **OK** on the steering wheel to clear the warning.

REAR VIEW CAMERA*



This system provides a video image of the area behind the vehicle. The image automatically appears in the touchscreen when the vehicle is in reverse (R) and uses green, yellow and red guides to alert you of your proximity to objects. For non-touchscreen vehicles, the image appears in the 4.2-inch display.

REVERSE SENSING SYSTEM*

This system sounds a warning tone if there is an obstacle near the vehicle's rear bumper when the vehicle is in reverse (R) and is traveling less than 3 mph (5 km/h). The warning tone increases in frequency as the object gets closer.

NOTE: Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your *Owner's Manual* for safety information, more details and limitations.

SELECTSHIFT AUTOMATIC® TRANSMISSION*



Gives you the ability to manually change gears, if you'd like. To use, move the gearshift lever from drive (D) to manual (M). Depending on your vehicle, use the toggle switch on the gearshift or the paddles on the steering wheel to make shifts manually.

FUEL-EFFICIENT TRANSMISSION

Your vehicle has been designed to improve fuel economy by reducing fuel usage while coasting or decelerating. You may perceive this as a light to medium braking sensation when removing your foot from the accelerator pedal.

LANE KEEPING SYSTEM*

This system can notify you to stay in your lane through the steering system and the information display when the front view camera detects an unintentional drifting out of your lane is likely to happen. Select system settings as desired by choosing one of three notification modes from your information display:

- Alert:** Provides a steering wheel vibration.
- Aid:** Provides an assistance steering torque input toward the lane center.

Alert + Aid: Provides an assistance steering torque input toward the lane center. If the vehicle continues drifting out of the lane, a steering wheel vibration is also provided.



Switch the feature on and off by pressing the control on the headlamp or direction indicator lever.

NOTE: Driving aids do not replace the need to watch where the vehicle is moving and brake where necessary. Make sure you read your *Owner's Manual* for safety information, details and limitations before using these systems.

COLLISION WARNING SYSTEM*

This system can alert the driver of certain collision risks. Sensors detect if vehicles ahead of you, which are moving in the same direction, may be a collision risk. The system alerts you with an audible tone and red warning light that appears above the dash. If the risk of collision increases, the system increases brake support to help reduce collision speed.

SOS POST-CRASH ALERT SYSTEM™

Provides audible and visual alarms when a crash causes the deployment of airbags or the activation of the safety belt pretensioners. The direction indicators flash and the horn sounds. To deactivate, press the hazard flasher control or the panic button on your remote transmitter.

UNIVERSAL GARAGE DOOR OPENER*

Replaces your traditional garage door remote with a three-button transmitter integrated into the driver's sun visor.

You can program the transmitter to use with entry gate operators, security systems, entry door locks, and home or office lighting.



*if equipped

*if equipped 17

ESSENTIAL FEATURES

FUEL TANK CAPACITY AND FUEL INFO



Your vehicle has a 18.6 gallon (70.4L) fuel tank capacity. Use only UNLEADED gasoline or UNLEADED gasoline blended with a maximum of 15% ethanol. **Do not use E85 fuels because your vehicle was not designed to run on fuels with more than 15% ethanol.**

We recommend using fuels with a minimum octane rating of 87. Premium fuel will provide improved performance. Premium fuel can provide improved performance and is recommended for severe duty usage such as trailer tow.

TRAILER TOW*



Before you tow, refer to your *Owner's Manual* for complete information on weight, details and limitations, as well as safety information and the proper equipment to use while towing.

NOTE: Do not tow with the mini spare tire installed.

TOWING YOUR VEHICLE

Towing your vehicle behind an RV or any other vehicle may be limited. Refer to *Towing the Vehicle on Four Wheels* section in the *Towing* chapter of your *Owner's Manual*.

POWER LIFTGATE*

Your liftgate has an automatic open and closing feature. To open remotely, press twice on your keyhead within three seconds. Press twice again to close or reverse the movement.

You can also operate the liftgate by pressing the control located on the instrument panel.

You can also program a new liftgate height by opening the liftgate, adjusting the liftgate manually to your desired height and then pressing and holding the liftgate control button. The system sounds a tone once it saves the new liftgate height.



TERRAIN MANAGEMENT SYSTEM™*

This system optimizes driveability and comfort as well as maximizing traction. Turn the dial on the center console to select from the following modes:



***Grass/Gravel/Snow:** Use this mode where loose or slippery material covers a firm surface.



Sand: Use this mode on soft dry sand or deep gravel terrain.



Mud/Ruts: Use this mode on muddy, rutted, soft or uneven terrain.



Normal: Use this mode for on-road conditions.



HILL DESCENT CONTROL™*

Hill descent mode allows the driver to set and maintain vehicle speed, while descending steep grades on various surface conditions. To switch the system on, press the control located in the center of the terrain management dial. The icon lights up and a tone sounds when the system is on. Use your pedals to increase or decrease your speed as you normally would, until you reach your desired speed. Remove your feet from the pedals to maintain your speed. Press the control again to switch the system off.

NOTE: This system only operates between the speeds of 3 mph (5 km/h) and 20 mph (32 km/h).

REAR WINDOW BUFFETING

When one or both of your rear windows are open, you may hear a wind throb or buffeting noise. To alleviate this, lower a front window until the buffeting noise subsides.

LOCATION OF SPARE TIRE AND TOOLS

Your spare tire and tools are beneath the third row seats under the floor panel (you need to unstow the seats to access). Use the spare tire for emergency use only and replace it as soon as possible.

For complete details on changing your tire, refer to the *Changing a Road Wheel* section in the *Wheels and Tires* chapter of your *Owner's Manual*.

ROADSIDE ASSISTANCE

Your new Ford vehicle comes with the assurance and support of 24-hour emergency roadside assistance.

To receive roadside assistance in the United States, call **1-800-241-3673**. In Canada, call **1-800-665-2006**.