



FORTE

FEATURES & FUNCTIONS GUIDE

www.kia.com

Consumer - Roadside Assistance

1-800-333-4KIA (4542)

See Back Cover for Vehicle Maintenance Schedule

Always check the Owner's Manual for complete operating information and safety warnings.

GETTING TO KNOW YOUR **FORTE**

Congratulations on Your New Kia Purchase!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

Using This Guide

The information contained in this guide is a brief overview that will help you become familiar with the operation and features of your new Kia vehicle. The flipbook format facilitates information access, while the detailed illustrations ensure the instructions are easy to follow.

This **Features & Functions Guide** and the specific operational and safety information it provides is not a substitute for your Owner's Manual. In the interest of your safety and that of your family, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read your Owner's Manual in order to fully familiarize yourself with the important information it contains.

While the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance or after the fact, and assumes no liability in connection with such changes.

ESSENTIAL FEATURES

Active ECO System*	08
Air Conditioning / Climate Control	22
Audio System — Standard	18
Audio System — Navigation System*	20
Audio System — UVO eServices System*	19
Aux/USB/iPod® Port & Power Outlets	21
Bluetooth® Wireless Technology	16
Cruise Control*	15
Digital Clock	21
Folding Rear Seats*	26
Fuel Economy	07
Manual Gear Shift*	23
Passenger Airbag Off Indicator	36
Rear-Camera Display*	35
Smart Key*	32
Tire Pressure Monitoring System (TPMS)	07
Windshield Wipers & Washers	13

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.



FORTE FEATURES & FUNCTIONS GUIDE

VIDEOS & QR CODES	02
------------------------------	----

INSTRUMENT CLUSTER

Instrument Cluster Overview	03
Indicators & Warning Lights	04
LCD Instrument Cluster Modes	05
Trip Computer / Tripmeter	05
User Setting Mode	06
Service Mode	06
Fuel Economy	07
Tire Pressure Monitoring System (TPMS)	07

DRIVER'S PANEL

Active ECO System*	08
Instrument Panel Dimmer*	08
Electronic Stability Control (ESC)	09
Hill-start Assist Control	09
Heated Steering Wheel*	09
Engine Start/Stop Button*	10
Power Windows, Window Lock & Central Door Lock	11
Power/Folding Mirrors*	11
Power/Heated Outside Mirrors*	11
Automatic Door Lock/Unlock*	11

STEERING WHEEL CONTROLS

Headlights & High Beams	12
Turn Signals & Fog Lights*	12
Windshield Wipers & Washers	13
Rear Wiper & Washer*	13
Tilt/Telescoping Steering Wheel	14
FlexSteer™ Steering Wheel Mode*	14
Audio Controls	15
Cruise Control*	15
Bluetooth® Wireless Technology	16

AUDIO SYSTEM

Standard Audio System Overview/Operation*	18
UVO eServices System*	19
Navigation System*	20

CENTER PANEL

Digital Clock	21
Aux/USB/iPod® Port & Power Outlets	21
Automatic Climate Control*	22
Manual Climate Control*	23
Automatic Gear Shift with Sportmatic® Shifting*	24
Manual Gear Shift*	25

SEATING

Seat Warmers / Ventilated Seats*	26
6-Way Manual Adjustable Driver's Seat*	27
Front Seat Headrest Adjustment	27
10-way Power Adjustable Driver's Seat*	28
Driver Position Memory System*	28
Folding Rear Seats*	29

OTHER KEY FEATURES

Sunroof Operation*	30
Map/Room Lamps*	30
Remote Keyless Entry (Folding Key)*	31
Double-Turn Lock/Unlock All	31
Smart Key*	32
Hood Release Lever and Latch	33
Sunvisor	33
Trunk Release Button*	33
HomeLink® / Auto-Dimming Rearview Mirror*	34
Rear-Camera Display*	35
Fuel Cap / Malfunction Indicator (Check Engine Light)*	35
Child Safety Locks	35

SAFETY FEATURES

Seatbelts	36
Seatbelts Retractor Inertia Locks	36
Occupant Detection System (ODS) / Passenger Airbag Off Indicator	36

LEGAL DISCLAIMERS (See Back Inside Cover Page)

MAINTENANCE (See Back Cover)

*IF EQUIPPED

Kia provides a number of video resources at your disposal to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your smartphone/tablet (mobile devices) or by visiting the following website: www.KuTechVideos.com/yd13/2015. Continue reading for a more in-depth look at QR Codes and for instructions on how to use them.

What are QR Codes?

A QR Code is a square, 2-dimensional barcode that can be read by mobile devices loaded with an appropriate barcode or QR Code Reader App. The app reads the barcode image and then launches/uploads the specific information the code contains, such as URLs, text, photos, videos and so much more.

How to Use QR Codes

If you have a mobile device with a QR Code Reader App, you can snap the code with your phone and you'll be provided a video with additional information pertaining to the topic. For example, in the Fuel Cap section, if you would like additional information, just snap the code with your mobile device to view the selected Kia Features & Functions Video.

How to snap a QR Code

1. With your mobile device, download a QR Code Reader App. With many devices, you can do this through an app store or marketplace
2. Open the QR Code Reader App on your mobile device
3. The app will utilize your device's camera. Center the code in the camera viewing area:
 - With some apps, as soon as the app recognizes the code, it will launch the corresponding video
 - With other apps, you will have to snap or take a picture of the code. The app will then launch the corresponding video
 - For operation specifics, refer to the instructions that come with the QR Code Reader App

QR CODE

One Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.



www.KuTechVideos.com/yd13/2015

 
REMINDER: When accessing videos on your mobile device, standard cellular data rates may apply.

QUICK TIPS

1. If you're having trouble scanning codes, check the following:
 - The code should be centered and focused in your mobile device's camera screen
 - Consider moving your device closer to or farther away from the code
 - The code should be well lit, without significant shadow
 - Avoid scanning from a significant angle
 - Confirm that the device's app supports 2D QR Code scanning.
 - Try another QR Code Reader app; not all apps are created equal
2. After scanning, if a "connecting" message appears and then nothing happens or there's a "connection error" message, this typically indicates that your device is having trouble connecting to the Internet

Instrument Cluster Overview

- A** Tachometer
- B** Speedometer
- C** Turn Signal Indicators
- D** LCD Screen/Odometer/Tripmeter*
- E** Gear Shift Position Indicator*
- F** Fuel Gauge
- G** Engine Temperature Gauge

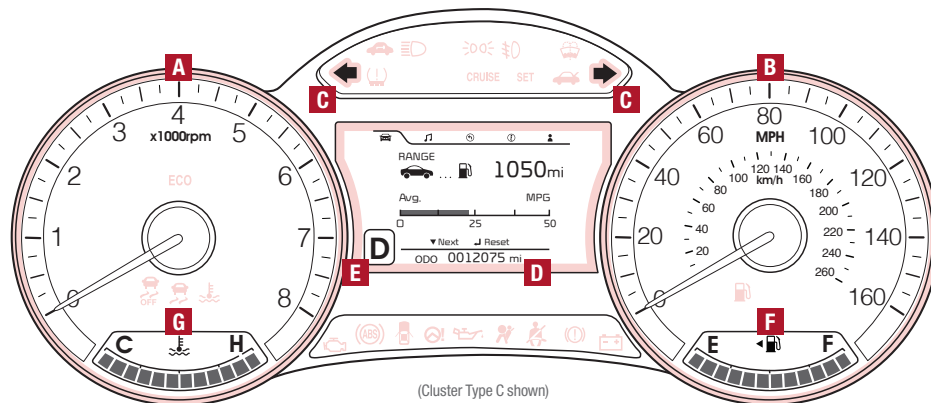


REMINDER: Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. See your Owner's Manual for more details.

LCD Warning Messages

- Check BRAKE SWITCH fuse*
- Door Open
- Key not detected
- Key not in vehicle
- Low key battery*
- Low Washer Fluid*
- Press brake pedal to start engine*
- Press clutch pedal to start engine*
- Press ENGINE START/STOP button while turning the Steering Wheel
- Press start button again*
- Press start button with Smart Key*
- Shift to "P" or "N" to start engine*
- Shift to "P" position
- Steering Wheel unlocked / Check Steering Wheel lock system*
- Sunroof Open*
- Trunk/Hatch Open
- Turn on "FUSE SWITCH"

REMINDER: For more information on the LCD Warning Messages, please refer to the Owner's Manual.

 Indicators & Warning Lights

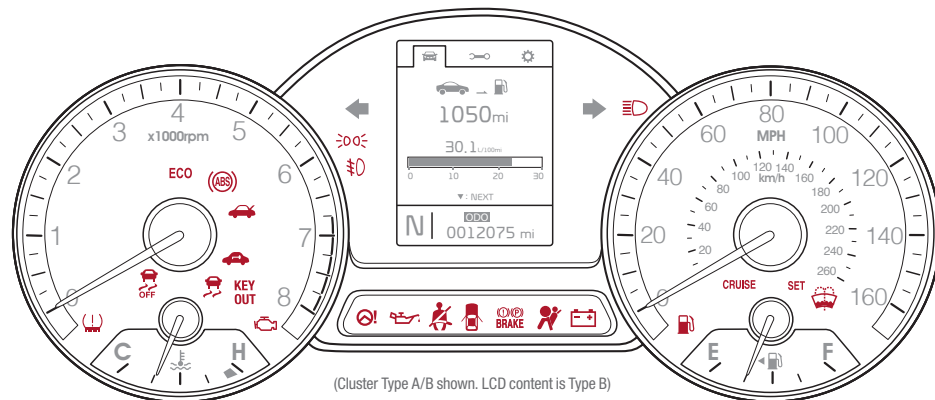

Low Tire Pressure Indicator / TPMS Malfunction Indicator

Electronic Stability Control OFF Indicator

ECO ECOMINDER™ (ECO) Indicator*

Anti-Lock Brake System (ABS) Indicator

Trunk/Hatch Open Indicator

Immobilizer Indicator

Electronic Stability Control Indicator

KEY OUT KEY OUT Indicator

Malfunction Indicator*

Light on Indicator

Fog Lights Indicator*

Electronic Power Steering (EPS) Warning Indicator*

Engine Oil Pressure Warning Indicator

Safety Belt Warning Indicator

Door Ajar Warning Indicator

Electronic Brake Force (EBD) System Warning Light

QUICK TIP

For more information on the function of all indicator and warning lights, please refer to the Owner's Manual.

REMINDER: Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. See your Owner's Manual for more details.

Parking Brake / Brake Fluid Warning Indicator

Airbag Warning Indicator

Charging System Warning Indicator

High Beam Indicator

Low Fuel Level Warning Indicator

CRUISE Cruise Control ON Indicator*

SET Cruise Control Set Indicator*

 
Washer Fluid Level Warning Indicator

LCD Instrument Cluster Modes

Press Mode button **A** to scroll through the different LCD modes:


-  **Trip Computer Mode:** Displays driving information for tripmeter, fuel economy, etc.
-  **A/V Mode*:** Displays the state of the A/V System
-  **Turn-by-Turn Mode*:** Displays the state of the navigation
-  **User Settings Mode:** Change settings of the doors, lamps and other features
-  **Information Mode:** Informs on service intervals and pressure status of each tire and other features

(Type C Instrument Cluster)

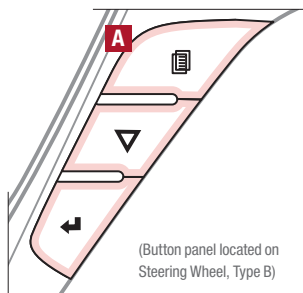


Trip Computer / Tripmeter

 
The Trip Computer is a driver information system that displays information related to driving on the display when the ignition switch or the ENGINE START/STOP button* is in the ON position.

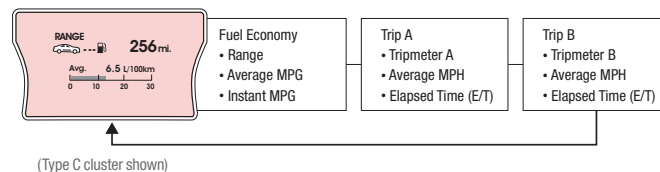

 Instrument Cluster Type A – To toggle through the different Trip Computer modes, press the Trip button **B**. To display the Tripmeter, press the Trip button **B** then select Trip A or Trip B. Press the Reset button **C** to reset the Tripmeter to zero.

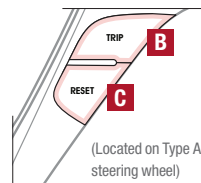

 Instrument Cluster Type B/C – To scroll through the different LCD Instrument Cluster modes, press the Mode button **D**. To display the Tripmeter, press the Mode button **D** and select Trip Computer . Then press the Next button **E** to scroll to the Trip A/B screens. Press the Select/Reset button **F** to reset the Tripmeter to zero.

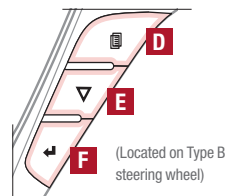

REMINDERS:

 
- Appearance of Tripmeter display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

User Settings Mode

(Type B/C settings)

To enter the User Settings mode on the LCD* screen, press the Mode button **A** when the vehicle is at a standstill and with the ignition or the ENGINE START/STOP button* in the ON position and select User Settings **A**.

You can navigate the selections on the display by pressing the Next button **B**, and then selecting the item by pressing the Select/Reset button **C**.

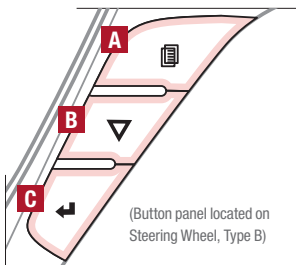

Doors:

- Auto Door Lock*
- Auto Door Unlock*
- Two Press Unlock*
- Horn Feedback*

Lamps:

- One-Touch Turn Lamp*
- Headlamp Delay*
- Welcome Light*

Settings:

- Shift Indicator*
- AVG Fuel Economy Reset
- Easy Seat Access*
- Welcome Sound

Service Interval:

- Service Interval On/Off
- Mileage/months setting

Service Mode

 
(Type B/C settings)

To enter Service Mode, press the Mode button **A**, scroll to the Service mode **A** and press Next button **B**. System will display number of miles remaining until next service is due, and type of service.

When service is required, the following screen will be displayed: **Service Required**.

To reset the Service Mode system, press and hold the Next button **B** for more than 1 second.

To turn Service In OFF, go to User Settings.

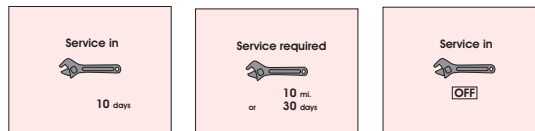

Service Interval Setting:

To set the service interval when in User Settings mode:

- Press the Next button **B** and scroll to Service Interval. Press the Select/Reset button **C** to enter.
- Press the Next button **B** and toggle to ON, then press the Select/Reset button **C**. Then press the Next button **B** to scroll and select the desired miles or months for your next service.
- Press the Select/Reset button **C** to enter.

QR CODE

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

LCD Display: Maintenance Video



www.KuTechVideos.com/yd13/2015

LCD Display Video



www.KuTechVideos.com/yd13/2015

Fuel Economy

Several factors contribute to your vehicle's fuel economy, including maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are tips on how to improve fuel economy:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicle
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

REMINDERS:

- Driving range can vary depending on your vehicle's fuel tank size, e.g. 12-gal. vs. 24-gal., even though the MPG may be the same
- See Owner's Manual for safety information

For more information on Fuel Economy, you can snap the QR code above to view a video or refer to the brochure "GETTING MORE OUT OF EVERY GALLON, FUEL-SAVING TIPS TO DRIVE BY" available at your local dealership.

Tire Pressure Monitoring System (TPMS)

The indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.

The TPMS indicator will illuminate if one or more tires is significantly underinflated, the vehicle has a spare tire without TPMS installed or the outside temperature becomes significantly colder.

- Inflate tire(s) to specifications to turn off Low Tire Pressure Light  using an accurate digital tire pressure gauge. See front driver's door jamb for PSI specification
- The TPMS Malfunction Indicator  will illuminate after it blinks for approximately one minute when there is a problem with the TPMS. See dealer for service

REMINDER: Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s).

ALWAYS CHECK THE OWNER'S MANUAL FOR COMPLETE OPERATING INFORMATION AND SAFETY WARNINGS.

QR CODE

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

Fuel Economy Video



www.KuTechVideos.com/yt13/2015

TPMS Video



www.KuTechVideos.com/yt13/2015

QUICK TIPS

 
- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires"
- For proper maintenance and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

Active ECO System*

Active ECO helps improve fuel efficiency by controlling several vehicle components. When activated, it optimizes drivetrain operations such as engine power and transmission to help improve fuel economy.

To turn ON, press the Active ECO button **A**. The button light will turn on and the green **ECO** indicator light in the instrument cluster will illuminate (indicating that you are getting optimal fuel economy). The Active ECO System will remain on even when the engine is turned off and restarted.

To turn Active ECO OFF, press the button **A** again.

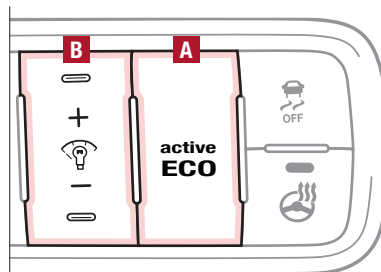

(Located left of steering wheel)

Ⓢ QUICK TIPS

To help improve your fuel economy:

- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Be sure the wheels are properly aligned

Instrument Panel Dimmer*

With parking lights/headlights ON, press button **B** (+) or (-) to adjust the brightness of the instrument panel illumination.

REMINDERS:

- Door Mood Lamp is a fixed brightness and cannot be adjusted (not to be confused with Advanced Mood Lighting Speaker)
- The Instrument Panel Dimmer does not adjust brightness on the Navigation System screen. Use Navigation setup to adjust brightness on the Navigation System

QR CODE

Active Eco System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



 
www.KuTechVideos.com/1d13/2015

Electronic Stability Control (ESC)

The ESC system is designed to help stabilize the vehicle during cornering maneuvers. It is a good idea to keep the ESC turned on for daily driving whenever possible. Press ESC button **A** to turn ESC OFF/ON.

REMINDERS:

- ESC is turned ON at vehicle start-up
- The ESC Indicator Light  In the instrument cluster will be lit momentarily whenever the ESC is active
- For more information on Electronic Stability Control (ESC) and it's specific features and operations, please refer to your Owner's Manual

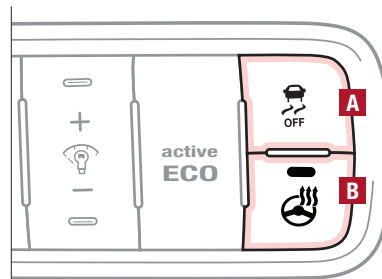

(Located left of steering wheel)

Hill-start Assist Control (HAC)*

HAC helps prevent the vehicle from rolling backwards when accelerating from a stop while on a steep incline. The HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

REMINDER: The HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position.

ⓘ QUICK TIPS

- When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator
- HAC provides a 2-second delay before the vehicle may start rolling backwards

Heated Steering Wheel*

Press button **B** to turn ON/OFF Steering Wheel Heater, while the Engine Start/Stop Button is in the ON position. Steering Wheel Heater will turn OFF automatically in 30 minutes or when button is pressed again to deactivate.

ⓘ QUICK TIPS

- If ignition is turned OFF, then ON again within 30 minutes of Steering Wheel Heater being turned ON, the system will remain in the ON position
- System does NOT turn off when ignition is cycled. To turn off system, press the seat warmer switch

Engine Start/Stop Button*

To start the engine:

 
 
1. Depress the brake pedal
2. Press the ENGINE START/STOP button while the gear shift is in Park (or while in Neutral for Manual Gear Shift)

To turn the vehicle OFF, press the ENGINE START/STOP button.

To use the ENGINE START/STOP button, you must have the Smart Key fob on your person or in the vehicle.

REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/STOP button for more than 2 seconds or 3 times successively within 3 seconds
- If Smart Key fob Battery is dead, hold the fob up against the Engine Start/Stop button and press

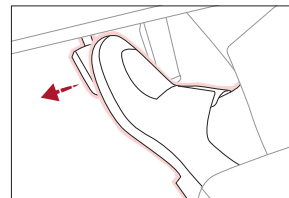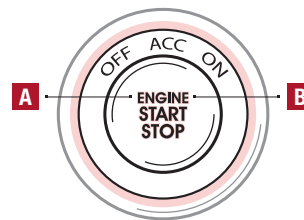

© QUICK TIPS

To use electrical accessories:

ACC position

- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button once (Orange light **A**)

ON position

- When already in the ACC position (orange light **A**) and without depressing the brake pedal, press the ENGINE START/STOP button again (green light **B**)
- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button twice (green light **B**)

Keeping the vehicle in ACC or the ON position without turning engine on may discharge the vehicle's battery.

QR CODE

Engine Start/Stop Button & Smart Key Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/yt13/2015

Power Windows, Window Lock & Central Door Lock

A Pull/Press to operate Driver's & Passenger's Window Auto Up/Down*

B Press to Unlock/Lock All Doors

ⓘ QUICK TIPS

- Auto Door Lock/Unlock* will engage when gear shift is moved in to or out of the P (Park) position
- To turn Auto Door Lock/Unlock* OFF, go to User Settings* in the LCD Instrument Cluster Modes

C Press to disable Rear Passenger Windows

REMINDER: Button configuration may vary depending on vehicle model.

Power/Folding Mirrors*

Toggle **D** left or right to select mirror. Then press one of the points to adjust mirror position.

 
Toggle button **E** left/right to unfold/fold the outside rearview mirrors.

Toggle to center of button **E** to fold/unfold mirrors automatically when:

- The key fob or Smart Key* Lock/Unlock buttons are pressed
- The door lock/unlock button is pressed (Smart Key* only)

The mirrors will automatically unfold when the Smart Key* is within close proximity to the vehicle.

REMINDER: To lock position of mirrors, toggle switch **D** to the neutral (center) position.

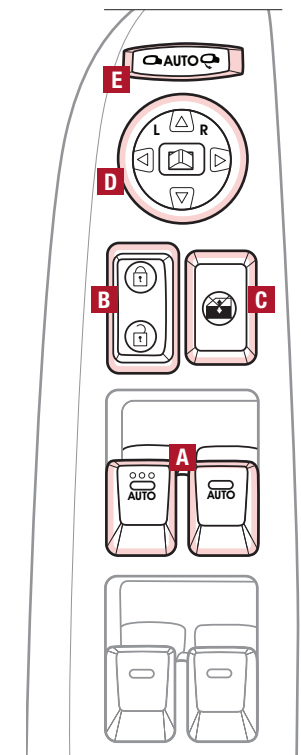

Power/Heated Outside Mirrors*

Mirror heaters automatically turn ON/OFF at the same time the Rear Window Defroster is turned ON/OFF. Rear Window Defroster button* is located on climate control system panel.

 
Automatic Door Lock/Unlock*

When the gear shift is moved into or out of P (PARK), all doors will Lock/Unlock. Refer to the User Settings on how to turn Auto Door Lock/Unlock ON/OFF.

Headlights & High Beams

To operate:

- Rotate lever to change the Headlight function
- Push lever to turn High Beams ON
- Pull lever to flash Headlights/High Beams

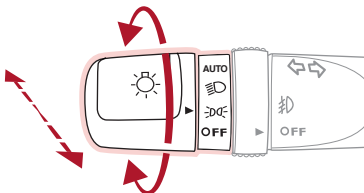

- AUTO*** Automatic Headlights position
- Headlight position
- Parking light position
- OFF** OFF position

 
AUTO Light* function — When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

Turn Signals & Fog Lights*

To operate:

- Move lever Up/Down for Right/Left Turn Signal
- Slightly move lever up/down to activate One-Touch Lane Change Signal
- Rotate lever ring to turn Fog Lights ON/OFF

REMINDER: Headlights must be ON for Fog Light operation. For more information on the User Settings Mode, please refer to your Owner's Manual.

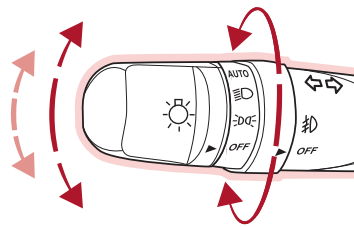


One-Touch Lane Change Signal is activated by moving the Turn Signal Lever slightly for less than 1 second and then releasing. The lane change signal will blink 3-7 times.

To change blinking settings, go to User Setting* in the LCD Modes*.

Windshield Wipers & Washers

To operate:

 - Move lever Up/Down to change Wiper modes
- Rotate lever to adjust Intermittent Wipe Speed
- Pull level to spray and wipe

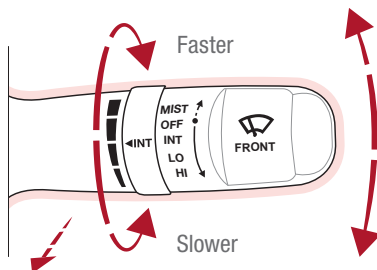

MIST: Single wipe

OFF: Wiper off

INT: Intermittent wipe

 
LO: Slow wipe

HI: Fast wipe

Rear Wiper & Washer* (5-door model)

To operate:

- Rotate REAR switch to change wiper modes
- Push lever for brief wipe

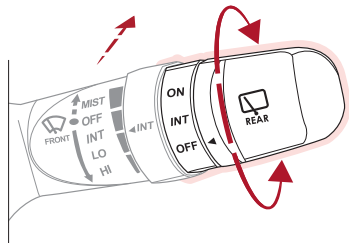

ON: Normal wipe

INT: Intermittent wipe*

OFF: Wiper off

QR CODE

Forte Windshield Wipers & Washer Controls Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/yd13/2015

 
Tilt/Telescoping Steering Wheel

To adjust the Steering Wheel, push down the Lock-Release Lever **A** and adjust to desired angle **B** and distance **C**.

When finished, pull up the Lock-Release Lever **A** to lock Steering Wheel in place.

Ⓢ QUICK TIP



It may be helpful to pull/push bottom of Steering Wheel towards/away from you to adjust desired distance.

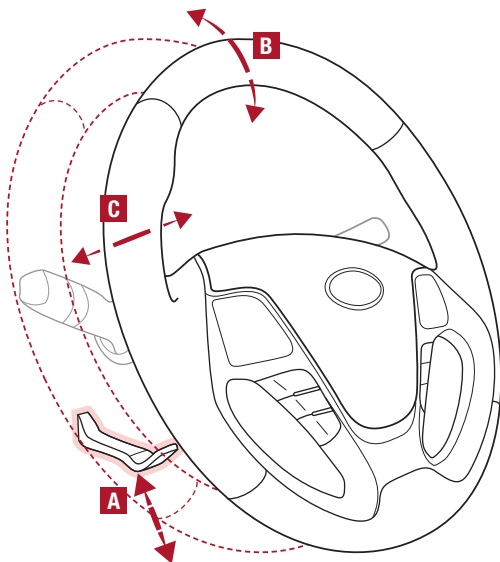

FlexSteer™ Steering Wheel Mode*

Select the desired steering mode by toggling through the steering modes.

  - Press FlexSteer™ Steering Wheel Mode button **D** to display the steering mode on the LCD display*
- Then press the button **D** again within 4 seconds to switch modes

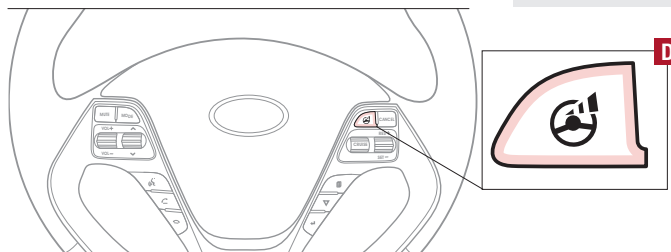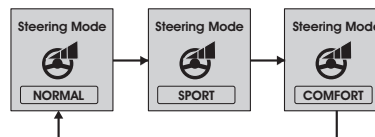

REMINDER: Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

QR CODE

FlexSteer™ Steering Wheel Mode Video

 
To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/lyd13/2015

Audio Controls*

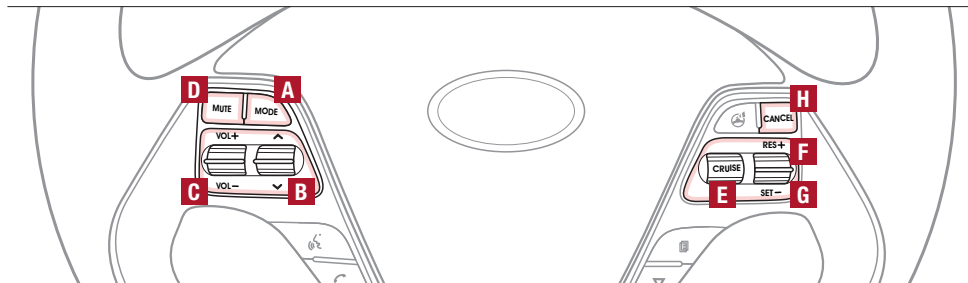

A Audio MODE button: Press to cycle through FM 1-2/AM/SAT 1-3/CD/USB/Aux/iPod®

B Seek/Preset button:
Radio Mode - Press to advance through the Preset Stations. Press and hold to Auto Seek CD/USB/Aux/iPod® Mode - Press to move track up/down. Press & hold to fast forward/rewind

C Volume button: Press up/down to raise/lower volume

D MUTE button: Press to mute all audio

ⓘ QUICK TIP

Pressing the Audio Mode button for more than 1 second will turn Audio Mode ON/OFF.

REMINDER: Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For further audio system operations, refer to pages 15 - 18.

Cruise Control*

E CRUISE Control ON/OFF button: Press to turn the Cruise Control ON/OFF

F Resume Cruising Speed button: Press to resume or increase Cruising Speed

G Set Cruising Speed button: Press to set or decrease Cruising Speed

 
H Cruise Control Cancel button: To cancel Cruise Control setting, do one of the following:

- Press the brake pedal
- Press the CANCEL button **H**

ⓘ QUICK TIPS

- Cruise Control is designed to function above 25 mph
- The Cruise Control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine start

REMINDER: Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

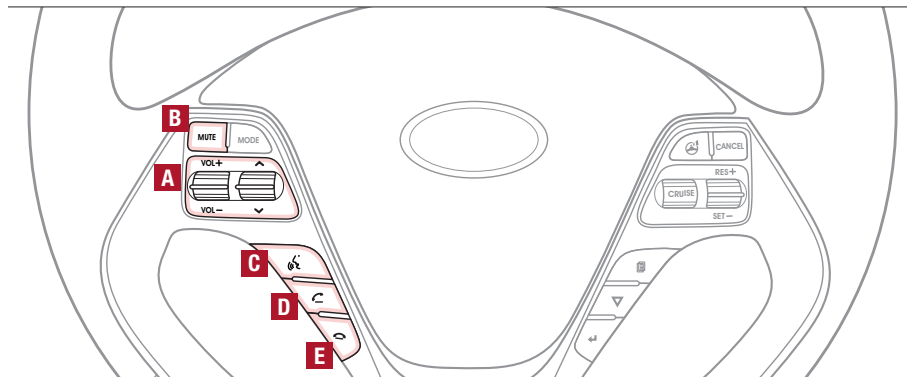Bluetooth® Wireless Technology

A Volume button: Press up/down to raise/lower speaker volume

B Mute button: Press to mute the microphone during a call

C Talk button: Press to activate voice recognition/bring up menus/place calls with minimal voice command prompts from the system

ⓘ QUICK TIP

When using the voice command feature, wait for the system BEEP before speaking the command.

D Receive/Place Call button: Press to receive/place/transfer calls.
Press to place a call using voice command prompts from the system, or to answer an incoming call

E End Call button: Press to end a call or cancel a function

ⓘ QUICK TIPS

- Phonebook transfer upload time varies by phone model and with number of phonebook entries
- Because of differences in phone quality, service providers and **Bluetooth®** Wireless Technology chip programming, functionality may differ from one phone to another
- Changing language setting may delete paired phones

REMINDERS:

- Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details
- Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving

For more information, if equipped, refer to the Car Multimedia System User's Manual or the UVO System User's Manual. For **Bluetooth®** Wireless Technology FAQs, go to www.kia.com, Owners section, or call Consumer Information for **Bluetooth®** Technology at (800) 333-4KIA. Refer to your Owner's Manual for more specific **Bluetooth®** Wireless Technology phone pairing and operation instructions.

Bluetooth® Wireless Technology

Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide or your vehicle's Quick Start Guide.

QUICK TIP

During the pairing process, be sure to accept the connection requests on the phone for phonebook download and to allow acceptance of all future **Bluetooth®** connection requests.

How to Place a Call

When using the voice command feature, wait for the system BEEP before speaking the command.

There are two options for placing a call:

Standard Audio System

- Option 1: Press the Receive/Place Call button **D** (system will prompt you through call process)
- Option 2: Press the Talk button **C** (system will BEEP to indicate it is ready for call placement). Then say the command "Call {name}" or "Dial {number}"

UVO eServices System

- Option 1: Press the Receive/Place Call button **D** (displays the phone screen with number keypad)
- Option 2: Press the Talk button **C**. Then say the command "Call {name}" or "Dial {number}"

Navigation System

- Option 1: Press the Receive/Place Call button **D** (displays the phone screen with number keypad)
- Option 2: Press the Talk button **C**. Then say the command "Call Name" or "Dial Number," followed by phone book name or number

Voice Recognition and Phone Contact Tips

The Kia Voice Recognition System may have difficulty understanding some accents or uncommon names. When using Voice Recognition to place a call, speak in a moderate tone, with clear pronunciation.

Help your **Bluetooth®** Wireless Technology Voice Recognition performance by making a few simple changes to your phone contacts:

- Use full names vs. short or single syllable names ("John Smith" vs. "Dad", "Smith Residence" vs. "Home")
- Avoid using special characters or hyphens (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms ("In Case Emergency" vs. "ICE")
- Spell words completely, no abbreviations ("Doctor Goodman" vs. "Dr. Goodman")

QUICK TIPS

Contacts Sync Tips

- If Contact Sync is set to ON, contacts stored in your phone will download each time your phone is connected. There may be a delay before the system is available to place a call
- If Contact Sync is set to OFF, your phone contacts will download only at the initial pairing. This allows you to make calls without waiting for your phone contact list to download

QR CODE

Voice Recognition Tips Video

 
To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/yd13/2015

Standard Audio System Overview/Operation with FM/AM/Sirius®/Media (CD, USB, iPod®, Aux, My Music, *Bluetooth*® Audio Streaming)*

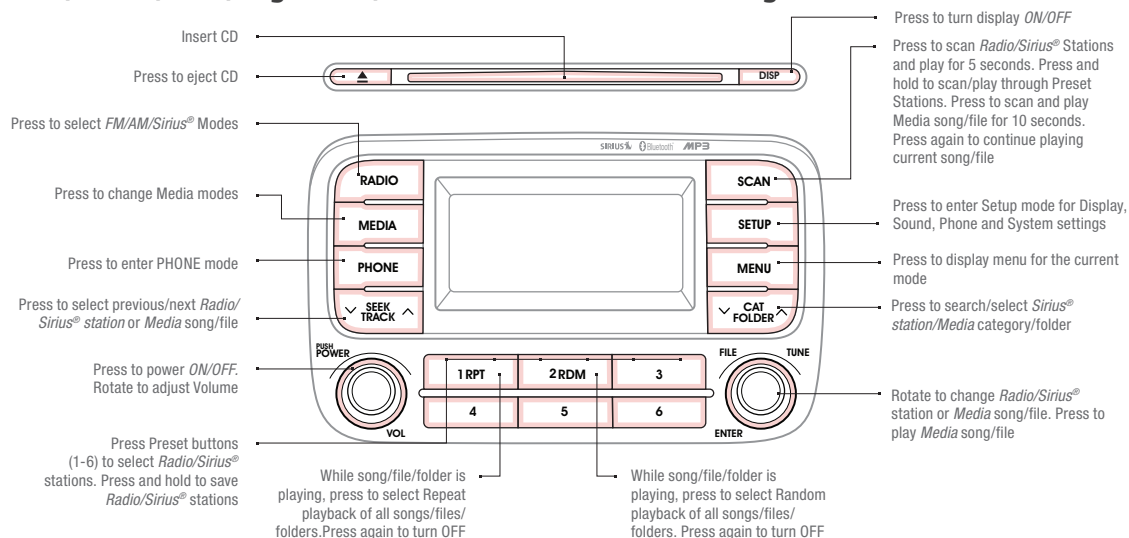

Audio System Setup Options

Press the SETUP button, then use the TUNE knob to cycle through the available settings for each equipped audio option. Press the TUNE knob to adjust the audio option selected. Audio options may include the following:

- **Display Setup** - Mode popup, text scroll, media display
- **Sound Setup** - Sound settings, speed dependant volume control, voice recognition volume
- **System Setup** - Memory information, prompt feedback, language

To adjust the sound settings (Bass, middle, treble, fader, balance), select Sound settings in the SETUP menu. Then use the TUNE knob to cycle to the selection and then press the TUNE knob to select. Turn the TUNE knob left/right to adjust sound setting.

QR CODE

Audio System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

 


http://kutechvideos.com/audio/base_system

REMINDER: Your vehicle's audio system may differ from that in the illustration. See your Owner's Manual for more details.

For further audio system operations, refer to pages 15 - 20.

UVO eServices System* with FM/AM/Sirius®/Media (CD, USB, iPod®, Zune®, Jukebox, Aux, *Bluetooth*® Audio Streaming)

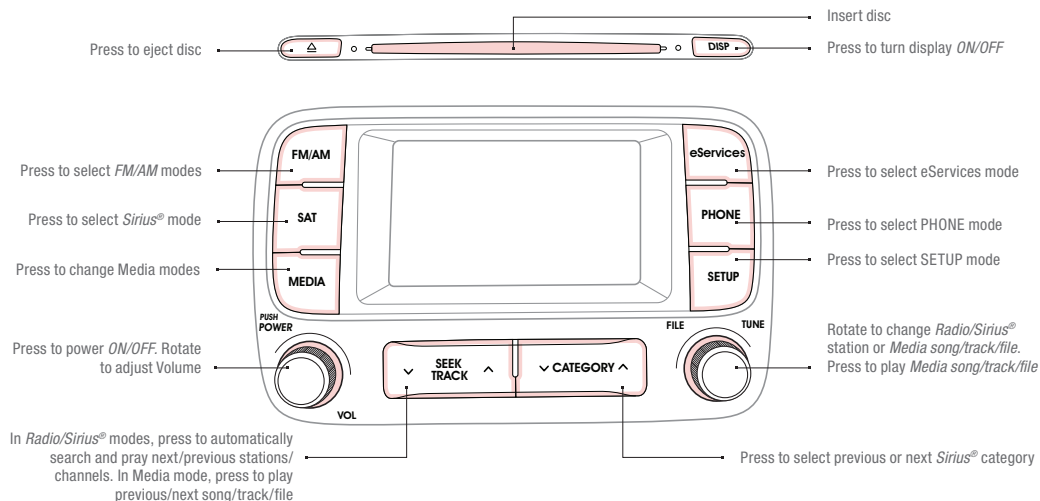

QR CODE

UVO System Videos

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



http://kutechvideos.com/audio/UVO_eServices

Sound Settings

To adjust the sound settings from any audio mode - Fader/Balance, Tone, Touch Screen Beep ON/OFF and Speed Dependent Volume Control ON/OFF:

1. Press the SETUP button on the Audio Control Unit
2. From any audio mode, press the on-screen SOUND button
3. Select the menu item to change settings
4. Use the on-screen buttons to adjust setting
5. Press return button  to exit

 
QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- Music can be copied to the UVO Jukebox from MP3, CDs or USB devices (MP3 or WMA files), but not from iPod®, Zune® or commercial CDs, due to copyright restrictions
- Prolonged use of the UVO eServices System in ACC mode may drain the vehicle's battery
- If equipped, HD Radio™ is available when selecting FM/AM mode

REMINDER: Your audio system buttons may differ from those in the illustrations. See your UVO system User's Manual for more details.

For further UVO eServices system operation, refer to the UVO System User's Manual.
For further audio system operations, refer to pages 15 - 20.

Navigation System with FM/AM/Sirius®/Media (CD, MP3, USB, iPod®, Aux, Bluetooth® Audio Streaming, My Music)*

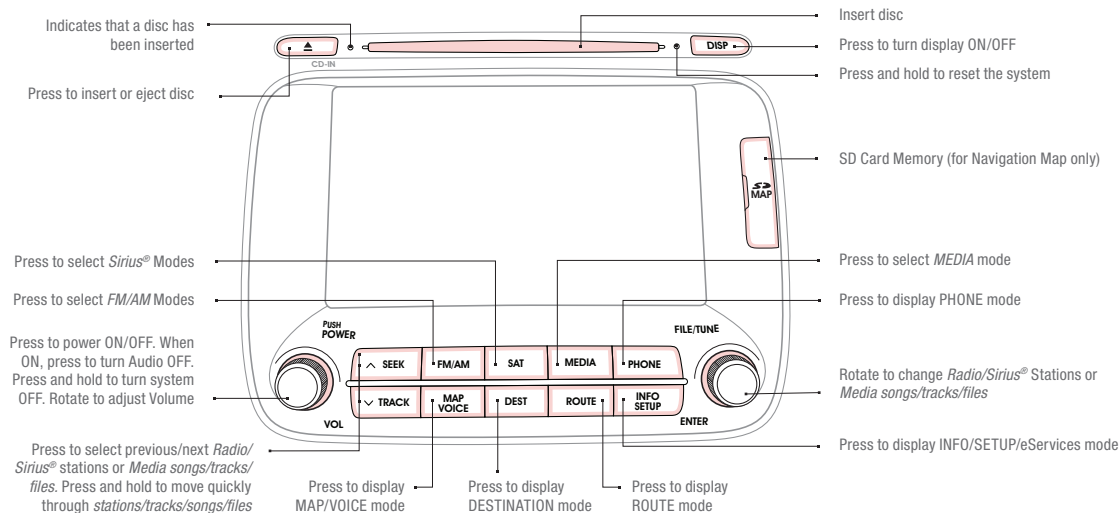

Sound Settings

To adjust the sound settings - Fader/Balance, Bass/Middle/Treble, Volume Ratio, Speed Dependent Volume Control and Beep sound ON/OFF:

1. Press the INFO/SETUP button on the Audio Control Unit
2. Press the on-screen SETUP button
3. Select the menu item to change settings
4. Use the on-screen buttons to adjust setting
5. Press DONE to save settings and exit

QR CODE

Navigation Audio System Videos

To view a video on your mobile device, snap this QR Code or visit the listed website.
Refer to page 2 for more information.



http://kutechvideos.com/audio/nav_eServices

 
QUICK TIPS

- Prolonged use of the Navigation System in ACC mode may drain the vehicle's battery. A warning screen may appear periodically to remind users that the Navigation System should be operated with the engine running to prevent battery discharge
- When using the voice command feature, wait for the system BEEP before speaking the command

REMINDER: Your audio system may differ from those in the illustrations. See your Car Multimedia System User's Manual for more details.

For further navigation system operation, refer to the Car Multimedia System User's Manual. For further audio system operations, refer to pages 15 - 19.

Digital Clock

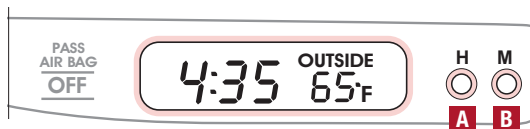

Center Panel Clock and Outside Temperature Setup*:

Press the H button **A** to advance the time by one hour. Press the M button **B** to advance the time by one minute.

QUICK TIPS

- Press and hold both buttons for more than 4 seconds to switch from 12- to 24-hour formats
- Press and hold both buttons for 1-2 seconds to switch temperature modes (Fahrenheit/Celsius)

Navigation System Clock Setup*:

 
Press the INFO/SETUP button on the Audio Control Unit. Then press the on-screen SETUP button and select the CLOCK. Use the on-screen buttons to navigate through setup.

QUICK TIP

Press the DONE button* on the navigation screen to ensure changes are saved.

REMINDER: The Center Panel Digital Clock and Navigation System Clock are not synchronized and may differ slightly.

Aux/USB/iPod® Port & Power Outlets

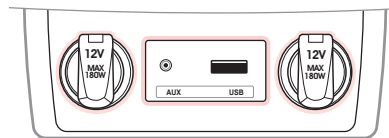

Aux/USB/iPod® Port

Use the Aux port to connect audio devices and the USB port to connect USB audio devices and an iPod® device

Power Outlets

QUICK TIP

The power outlets are inactive when ignition is in the OFF position.

REMINDER: Using the power outlet (accessory plug) for prolonged periods of time with the engine off could cause the battery to discharge.

For more information on the Aux/USB/iPod® Port & Power Outlets, refer to the Owner's Manual.

QR CODE

USB Port Video

 
To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/yt13/2015

Automatic Climate Control*

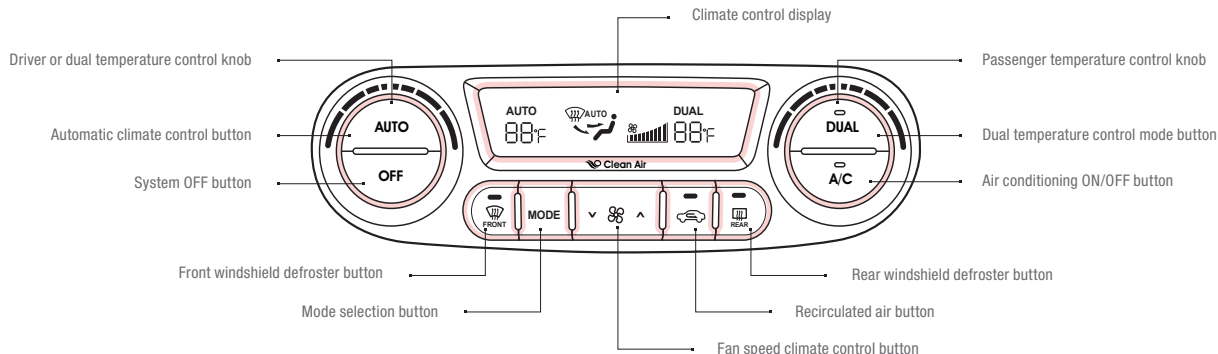

Air Flow Modes

To select Air Flow modes, press the MODE selection button:



Face-Level



Bi-Level



Floor-Level



Floor/Defrost-Level

Climate Control Auto Function:

1. Press AUTO to select Full Auto Operation
2. Press MODE button to control which vents air flows through
3. Press DUAL to select Dual Temperature Control Operation

Defrost Outside Windshield:

1. Set Fan Speed to the highest position
2. Set desired Temperature
3. Press the Defrost button 

Defrost Inside Windshield:

4. Set Fan Speed to desired position
5. Set desired Temperature
6. Press the Defrost button 

 
REMINDERS:

- Your Automatic Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details
- When in AUTO mode, Air Flow Mode and Fan Speed do not display on the Climate Control Display
- Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)

QUICK TIPS

- Defrost Mode  activates A/C and opens Fresh Air Vent to help dehumidify the air and improve Defroster performance
- During Auto Operation the A/C indicator will NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

Manual Climate Control*

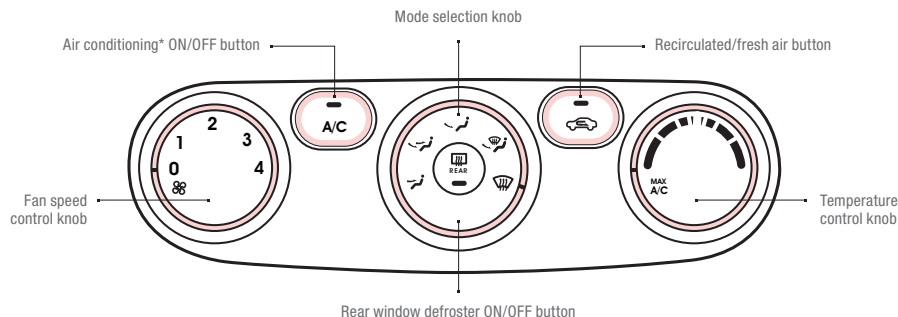

Air Flow Modes

To select Air Flow modes, press the MODE selection button:



Face-Level



Bi-Level



Floor-Level



Floor/Defrost-Level



Defrost/Defrost-Level

Defrost Outside Windshield:

1. Set Fan Speed to the highest position
2. Set desired Temperature
3. Select Defrost mode 

Defog Inside Windshield:

4. Set Fan Speed to desired position
5. Set desired Temperature
6. Select Defrost mode 

REMINDERS:

- Your Automatic Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details
- Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)

QUICK TIPS

- Defrost  Mode activates A/C and opens Fresh Air Vent
- MAX A/C Mode automatically engages Recirculated Air
- Keep inside glass as clean as possible to reduce window fogging

Automatic Gear Shift with Sportmatic® Shifting*

P: Park

R: Reverse

N: Neutral

D: Drive

 
[+]: Sport Mode Upshift

[-]: Sport Mode Downshift


Sport Mode: To enter Sport Mode, move shift lever from D to left gate.

To shift while in Sport Mode, move shift lever up [+] to upshift or down [-] to downshift.

Paddle Shifters: To use Paddle Shifters, move shift lever in the D position or in Sport Mode, then pull the [+] or [-] paddle shifters once to upshift or downshift one gear.

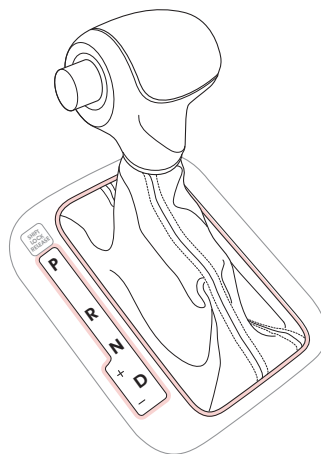

Paddle Shifters*

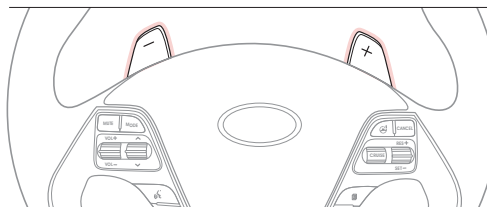 

REMINDERS:

- The Paddle Shifters can be operated when the vehicle speed is more than 6 mph
- When in Sport Mode, pulling the left and right paddle shifters at the same time will NOT shift gears

QUICK TIPS

- Press brake pedal and depress release button to move gearshift from N to P, N to R or from P to any gear
- Sport Mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

QR CODES

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

Sportmatic Shifting Video



www.KuTechVideos.com/yd13/2015

Paddle Shifters Video



www.KuTechVideos.com/yd13/2015

Manual Gear Shift*

Starting the Engine

 
 
 
 
 
1. Apply Parking Brake **A**
2. Depress Clutch fully **B**
3. Shift into Neutral **C**
4. Turn Ignition to Start

Shifting into Reverse

1. Depress Clutch fully **B**
2. Shift into Neutral **C**
3. Press Shift Lever button **D** up
4. Shift into Reverse **E**


ⓘ QUICK TIP

When shifting into gears 1-6, the Shift Lever can be moved without pulling the Shift Lever Knob.

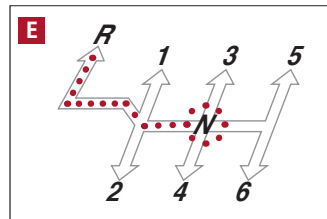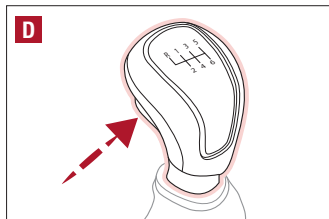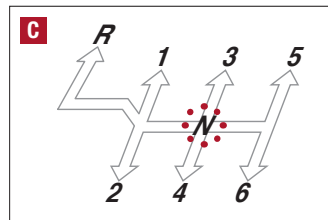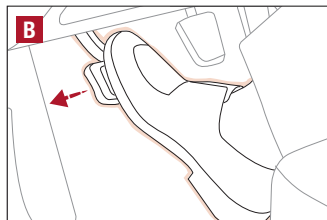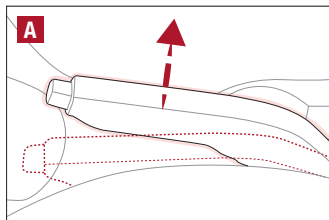


Seat Warmers / Ventilated Seats*

 Seat Warmers button - Press button once for high setting (3 LEDs lit). Press button twice for medium setting (2 LEDs lit). Press button a third time for low setting (1 LED lit) and again to turn OFF.

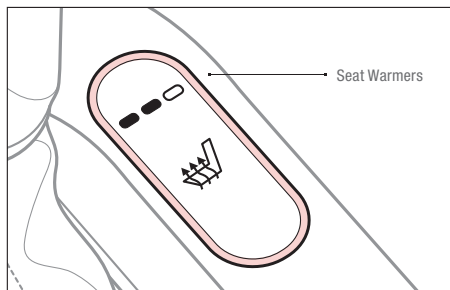

(Buttons located near Gear Shift Lever)

 Seat Warmers / Ventilated Seats* button - Press top/bottom of button once for high setting (3 LEDs lit). Press button twice for medium setting (2 LEDs lit). Press a third time for low setting (1 LED lit) and again to turn OFF.

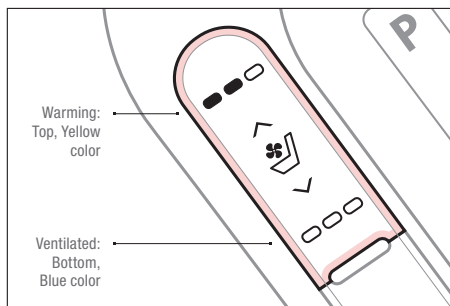

(Buttons located near Gear Shift Lever)

QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- System turns OFF when the ignition is cycled

QR CODE

Seat Warmers and Ventilated Seats Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/yt13/2015

 
6-Way Manual Adjustable Driver's Seat*

Pull lever **A** to slide Seat forward/backward.

Pull/press lever **B** to adjust Seat Cushion Height.

Pull lever **C** to adjust Seatback Recline.


REMINDER: Always ensure seat is locked into position before operating the vehicle.

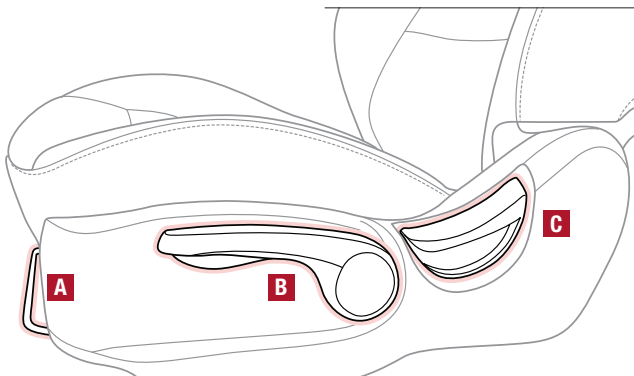

Front Seat Headrest Adjustment


To raise Headrest: Pull Headrest up.

 To lower Headrest: Press lock, then press the Headrest down.

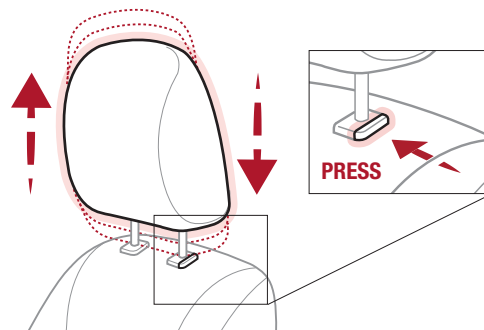


10-way Power Adjustable Driver's Seat*

 Move/Press controls to adjust Seat forward/backward, Seat Cushion height, Seatback recline and Lumbar support*.

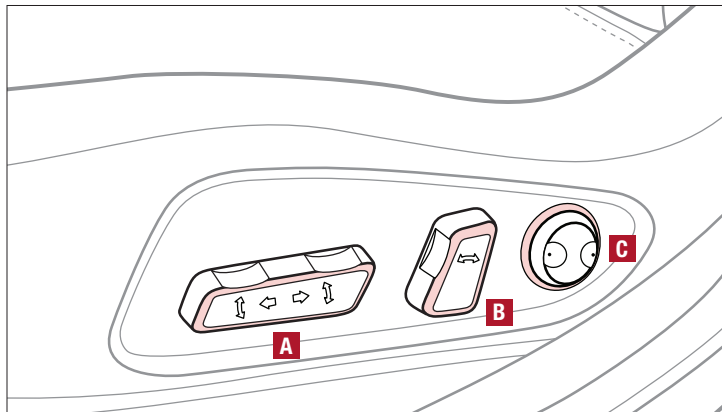


Driver Position Memory System*

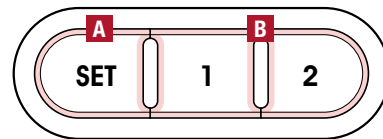 

To store a seating position into memory, first move the gear shift into P (Park) while the ignition is ON. Then:

 1. Adjust the Driver's Seat
2. Press the SET button **A** on the control panel. System will beep once
3. Press one of the memory buttons **B** within 5 seconds. The system will beep twice when memory has been stored

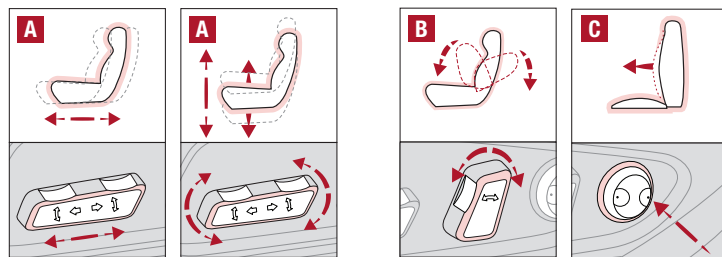

Seat forward/
backward

Seat Cushion

 
 
Seatback

Lumbar

Folding Rear Seats*



2- and 4-door model

1. Lower Rear Headrests to the lowest position
2. Ensure the Rear Seatbelt is secured into the guide
3. Pull Seatback Lock Release Lever **A** to release Rear Seatback (Lever located in trunk)
4. Fold Seatback **B** down

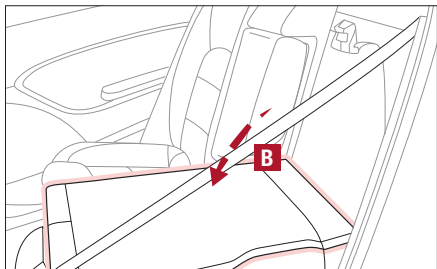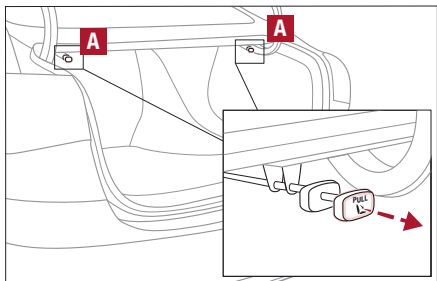

5-door model

  1. Lower the headrest **C** to the farthest position
2. Pull the Lock Release Lever **D**, located on Seatback shoulder
3. Fold the Seatback **E** forward

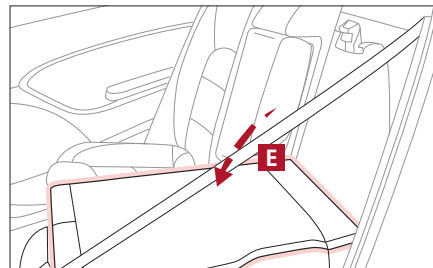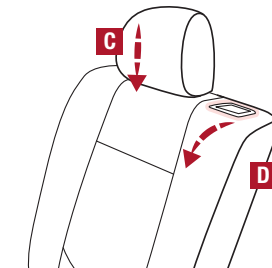

ⓘ QUICK TIP

It may be necessary to adjust the front Seatbacks, by sliding forward, to fully lower rear Seatbacks.

Sunroof Operation*

The Sunroof and Sunshade operation is controlled through a multidirectional switch/lever, and the ignition needs to be in the ON position to operate the Sunroof/Sunshade.

Slide the Sunshade and Sunroof:

 
- Auto Open: Slide lever **A** backward to the farthest position and release.
- Auto Close (Sunroof only): Slide the lever **A** forward to the farthest position and release.

Slide the Sunroof (with Sunshade open):

- Open: Slide the lever **A** backward and release.
- Close: Slide the lever **A** partially forward to the first detent position or pull the lever downward.

Tilt the Sunroof:

- Raise: Push lever **A** upward.
- Lower: Pull lever **A** downward.

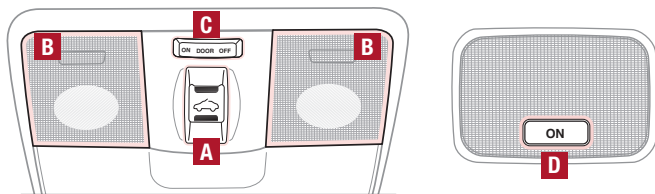

REMINDER: Sunshade needs to remain OPEN while Sunroof is open and vehicle is moving.

ⓘ QUICK TIP

To stop the Sunroof/Sunshade at any position, push or pull the Sunroof control lever in any direction.

Map/Room Lamps*

Map/Personal Lamp

Push the lens **B** to turn the map/personal lamp ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.

Map/Personal Lamp switch **C**

DOOR – In the DOOR position, the lamp turns on when any door is opened.

ON – In the ON position, the lamps stay on continuously.

OFF – In the OFF position, the lamp is off even if the door is opened.

Room Lamp switch **D**

Press the switch to turn Room Lamp ON/OFF.

If vehicle is not equipped with Map Lamp, the Room Lamp will operate as follows:

- The lamp turns ON when any door is opened, and turns OFF after 30 seconds
- The lamp turns ON, when doors are unlocked with a key fob or Smart Key
- The lamp stays ON continuously when the ignition is in the ON position and a door is open
- The lamp stays ON for about 20 minutes when the ignition is in the ACC or LOCK/OFF position and a door is open

ⓘ QUICK TIPS

 
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

Remote Keyless Entry (Folding Key)*

(Type A)


- A** Press the release button to unfold the key
- B** Lock All Doors
- C** To unlock Driver's Door, press once. Press twice in 4 seconds to unlock All Doors
- D** Press and hold more than 1 second to unlock Trunk / Rear Hatch*
- E** Press and hold more than 1 second for Panic Alarm*. To turn off Alarm, press any button

REMINDER: Remote button configuration may vary depending on vehicle options.

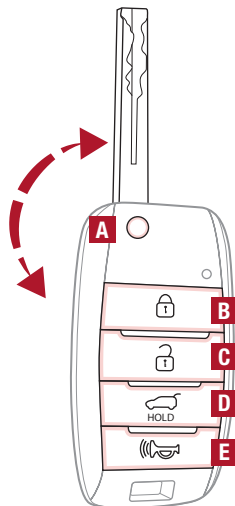

Double-Turn Lock/Unlock All

 - Turn clockwise once to unlock Driver's Door
- Turn clockwise again within 4 seconds to unlock All Doors
- Turn counterclockwise once to Lock All Doors

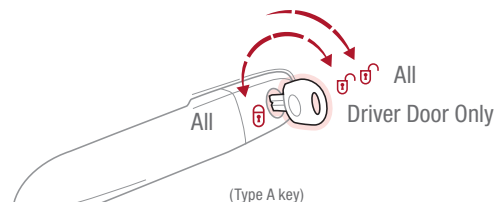

Smart Key*

Smart Key Fob:

- A** Press to lock All Doors
 - B** Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors
 - C** Press and hold to unlock Trunk / Hatch and manually open
- REMINDER:** The Trunk/Hatch unlocks when the Smart Key fob is within close proximity of the vehicle.
- D** Press and hold more than 1 second for Panic Alarm. To turn off Alarm, press any button
 - E** Press to release Mechanical Key (Button on reverse side of fob)

Mechanical Key **F**:

- Use to unlock Driver's Door
- Use to turn Child Safety Locks (page 32)

 
 
Driver's Door Lock/Unlock button **G**:

- Press button once to unlock Driver's Door
- Press again within 4 seconds to unlock All Doors
- Press again to lock All Doors

REMINDER: Remote button configuration may vary depending on vehicle options.

© QUICK TIPS

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start engine
- The Smart Key's signal can be blocked by the normal operation of a cellular phone or smartphone. To help prevent this, store each device separately

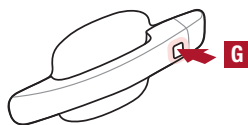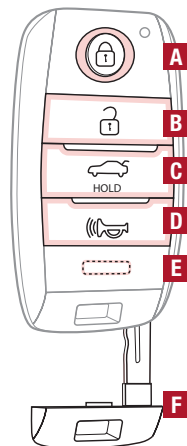

QR CODE

Engine Start/Stop Button & Smart Key Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

 


www.KuTechVideos.com/yt13/2015

Hood Release Lever and Latch

Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, pull the secondary Latch **B** inside of the Hood's center and lift the Hood

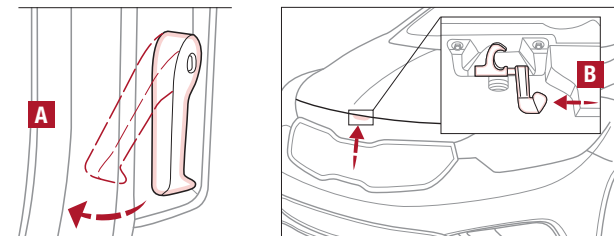


Closing the Hood:

Lower the Hood about halfway and then press down to securely lock in place.

Sunvisor

 Use the Sunvisor to shield direct light through the front or side windows.

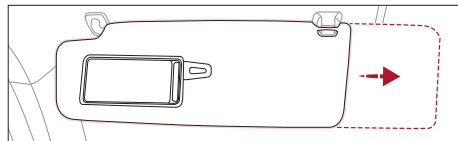


REMINDERS:

- Sunvisor may not shield all direct light
- Do not operate the vehicle if Sunvisor is impairing your visibility

Trunk Release Button*

 Located underneath the Trunk lid. With Trunk unlocked, press the Trunk Release Button and pull the Trunk up by the handle to open.

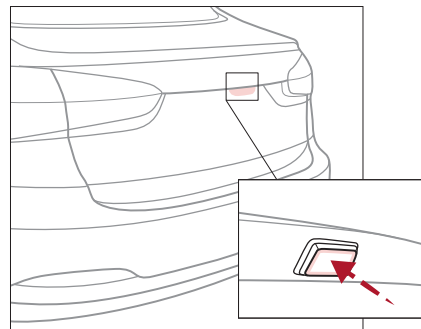


ⓘ QUICK TIPS

- The Trunk must be unlocked before it can be opened by the Trunk Release Button
- Smart Key* - The Trunk unlocks automatically, and can then be opened manually, when the Smart Key fob* is within close proximity to the vehicle

HomeLink® with Auto-Dimming Rearview Mirror*

 - A** HomeLink® button
- B** HomeLink® button
- C** Indicator light
- D** HomeLink® button
- E** Glare detection sensor
- F** Automatic dimming ON
- G** Automatic dimming OFF

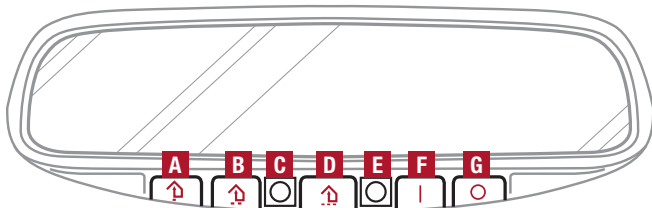

The HomeLink® / Auto-Dimming Rearview Mirror* is designed to reduce glare from a vehicle's headlights located in the rear and also connect up to three electronic transmitters into one location.

- To turn automatic dimming ON, press **I** button **F**
- To turn automatic dimming OFF, press **O** button **G**

REMINDER: Mirror indicator light **C** will illuminate when automatic dimming is ON.

Ⓢ QUICK TIPS

- You can reprogram a single HomeLink® button by repeating Step 2
- Erasing programmed buttons will delete all trained transmitters

How to Sync Transmitter with HomeLink®*

If programming for the first time, begin with Step 1 (repeating this step will delete all information).

To program non-rolling and rolling code garage door openers and other devices:

1. Press and hold the left **A** and center **D** buttons simultaneously until the indicator light **C** begins to flash (to reprogram buttons, skip this step)
2. Press and hold the desired button **A B D** and hold the button on the transmitter while it is approximately 1 to 3 inches away from the mirror. The HomeLink® Indicator light **C** will flash rapidly once the frequency signal has been successfully programmed

To finish programming rolling code garage door openers, complete these steps:

3. Locate the “learn” or “smart” button on the garage door’s motor head unit. Press and release the button and complete Step 4 within 30 seconds
4. Firmly press and release the programmed HomeLink® button up to three times

Operating HomeLink®:

Press one of the programmed HomeLink® buttons.

Erasing programmed buttons:

Press and hold the left **A** and center **D** buttons simultaneously for approximately 20 seconds, and then release both buttons within 30 seconds.

 
If your garage door opener was manufactured in 2011 or later, and you're unable to program your vehicle's HomeLink® system, you may need to purchase a HomeLink® Repeater Kit. For more information, go to www.HomeLink.com or call (800) 355-3515.

Rear-Camera Display*

The Rear-Camera Display system is not a safety device. It is a supplemental system that displays the view behind the vehicle through the Navigation System* or UVO eServices System* screen while the vehicle is in Reverse.

The Rear-Camera Display activates when the:

1. Engine Start/Stop* button is in the ON position (green Light)
2. Gear Shift Lever is in the R (Reverse) position

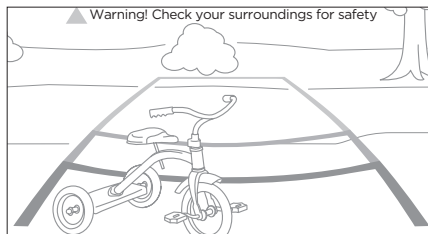

REMINDERS:

- The Rear-Camera Display is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The Rear-Camera Display may not detect every object behind the vehicle
- UVO eServices System - While camera is active, only the volume controls on the Audio System can be operated
- Navigation System - While camera is active, only the Audio System can be operated on the Steering Wheel and Audio Control Unit. Navigation features are disabled

Fuel Cap / Malfunction Indicator (Check Engine Light)

 
Tighten for ONE CLICK to prevent Malfunction Indicator  from illuminating.

REMANDER: The Fuel Filler Door Release lever is located on the lower part of the driver's door sill.



Child Safety Locks

Locate these locks on the rear edge of the rear passenger doors. Turn the safety lock to the LOCK position to disable the inner door handles from opening the rear doors.

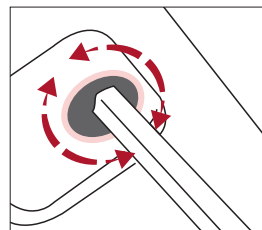

REMANDER: Child Safety Lock is located on rear passenger's door jamb.

QR CODE

One Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

 


www.KuTechVideos.com/yl13/2015

Seatbelts

To properly fasten your safety belts:

1. Insert the tongue belt plate **A** into the buckle **B** until it clicks
2. Position the lap portion of the belt across your lap as **LOW ON THE HIPS** as possible **C**. Adjust the belt to a **SNUG FIT** by pulling up on the shoulder portion **D**

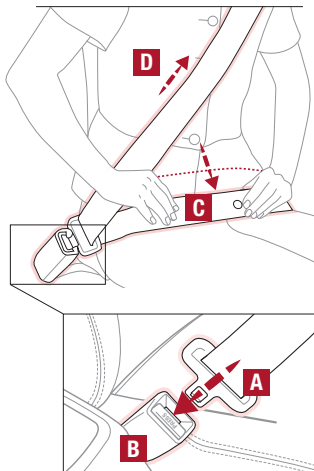

Ⓢ QUICK TIP

The Seatbelt warning chime operates for driver's seat only, lever in any direction.

REMINDER: For maximum protection, always wear your seatbelt.

Seatbelt Retractor Inertia Locks

Inertia locks allow lap/shoulder safety belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort

During a **STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS**, seatbelt retractors will automatically lock the belts

For more detailed information regarding your vehicle's safety belts, please refer to your Owner's Manual and the separate brochure titled "Understanding Your Safety Belt & Supplemental Restraint System."

Occupant Detection System (ODS) / Passenger Air Bag Off Indicator

ODS detects the presence of the front passenger.

Depending on the situation and type of accident, the system may:

- Deploy air bag (Adult)
- Not deploy the air bag (Unoccupied)

If the system determines that the air bag should not be deployed, the Passenger Air Bag Off light will illuminate.

**PASS
AIR BAG**

OFF

LEGAL DISCLAIMERS

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

Seatbelts: For maximum protection, always wear your seatbelt.

UVO eServices app: Apple iPhone® and select Android™ devices only are UVO eServices compatible. iPhone® is a registered trademark of Apple Inc. Android™ is a registered trademark of Google Inc. No subscription fee for UVO eServices. No charge for the UVO eServices app. App uses your smartphone cellular data service. Normal cellular service rates will apply.

TPMS: Even with the Tire-Pressure Monitoring System (TPMS), always check your tire pressure on a regular basis.

Back-Up Warning System (Rear Parking Assist System) / Rear-Camera Display: The Back-Up Warning System (Rear Parking Assist System) / Rear-Camera Display are not substitutes for proper and safe backing-up procedures. The Back-Up Warning System (Rear Parking Assist System) / Rear-Camera Display may not detect every object alongside or behind the vehicle. Always drive safely and use caution when backing up.

Navigation: GPS maps and directions are for information purposes only, and Kia does not make any warranties about the accuracy of that information. Kia is not responsible for loss or delay resulting from the use of the navigation system.

Caution: Do not enter information into the navigation system while the vehicle is moving. Failure to pay attention to travel conditions and vehicle operation while the vehicle is in motion could result in loss of vehicle control. Operate the system only when it is safe to do so.

Bluetooth® Wireless Technology: The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Kia is under license. Other trademarks and trade names are those of their respective owners. A Bluetooth® enabled cell phone is required to use Bluetooth® wireless technology.

SiriusXM®: SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com. Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. © 2014 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.

Sportmatic® is a registered trademark of Kia Motors America.

iPod® is a registered trademark of Apple Inc. iPod® mobile digital device sold separately.

HD Radio™ and the HD Radio logo are proprietary trademarks of iBiquity Digital Corporation.

HomeLink® is a registered trademark of Johnson Controls, Inc.



NORMAL MAINTENANCE SCHEDULE

When your vehicle requires service, remember that your dealer knows your vehicle best. Your dealer has factory-trained technicians, recommended special tools, genuine Kia replacement parts, and is dedicated to your complete satisfaction. For expert advice and quality service, see your authorized Kia dealer.

INTERVAL MAINTENANCE CHART									
7,500 miles	A	B	C						
15,000 miles	A	B	C	D					
22,500 miles	A								
30,000 miles	A	B		D	E				
37,500 miles	A								
40,000 miles						F			
45,000 miles	A	B	C	D					
52,500 miles	A								
60,000 miles	A	B		D	E		G		
67,500 miles	A								
75,000 miles	A	B	C	D				G	
80,000 miles						F			
82,500 miles	A								
90,000 miles	A	B		D	E		G		
97,500 miles	A								
105,000 miles	A	B	C	D				G	H
112,500 miles	A								
120,000 miles	A	B		D	E	F	G		I

A Inspect* — Intercooler, in/out hose and air intake hose (1.6L TGDl)

Replace — Engine oil and engine oil filter (1.8L MPI/2.0L GDI)¹

Perform — Rotate tires; add fuel additive²

B Inspect* — Air conditioning compressor, air conditioner refrigerant and performance³, cooling system³, battery condition, brake fluid/clutch^{**} fluid; brake lines, hoses and connections; brake pedal and operation, chassis/body nuts and bolts, drum brake and linings^{**}, disc brakes and pads^{**}, exhaust pipe and muffler, front suspension ball joints; parking brakes, steering operation and linkage and suspension mounting bolts

C Inspect* — Air cleaner element

D Replace — Climate control air filter^{**}

E Inspect* — Fuel filter⁴ and fuel tank air filter⁴; vapor hose and fuel filler cap

Replace — Air cleaner element

F Inspect* — Manual transaxle fluid^{**}

G Inspect* — Drive belt⁵ (First 60,000 miles / 72months. After, every 15,000 miles / 24 months)

H Replace — Spark plugs

I Replace — Engine coolant^{6,7}

* and, if necessary, adjust, clean, replace or correct

** If equipped

¹ 1.6L TGDl - At first replace engine oil and oil filter at 3,000 miles or 6 months, after that, every 5,000 miles or 6 months.

² If TOP TIER Detergent Gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

³ Inspect "Water Pump" when replacing the drive belt or timing belt.

⁴ Fuel filter & fuel tank air filter are considered to be maintenance free but periodic inspection is recommended for this maintenance schedule depends on fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem etc., replace the fuel filter immediately regardless of maintenance schedule and consult an authorized Kia dealer for details.

⁵ The drive belt should be replaced when cracks occur or tension is reduced excessively.

⁶ When replacing coolant, use only deionized water or soft water for your vehicle and never mix hard water in the coolant filled at the factory. An improper coolant mixture can result in serious malfunction or engine damage.

⁷ For your convenience, it can be replaced prior to it's interval when you do maintenance of other items.

Check tire pressure once a month or more.

See your owner's manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

Call 1-800-333-4kia (4542) for roadside assistance.

© 2014 Kia Motors America, Inc. All rights reserved.

Part Number: UD150-PS-004



FORTE CUSTOMER DELIVERY CHECKLIST

Owner's Name: _____ VIN: _____ Mileage: _____

Dealership Name: _____ Sales Consultant: _____ Date: _____

BEFORE DELIVERY

 
- ☐ Confirm "Good Battery" with Kia GR8-1299 battery tester
- ☐ Verify all tire pressures are to spec (see driver's door label) LF _____ LR _____ RF _____ RR _____
- ☐ Verify proper operation of Remote Keyless Entry and Smart Key lock/unlock
- ☐ Ensure floor mats are snapped into place (if applicable)
- ☐ Verify vehicle is clean (interior and exterior), in good condition and free of chips and scratches
- ☐ Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet and Features & Functions Guide and any supplemental audio user's guides)

KEY FEATURE WALKTHROUGH


- ☐ Air Conditioning / Climate Control – pages 22-23

Demonstrate Air Flow Modes, Defog and Defrosting Windshield.

Automatic*



Manual*

 


- ☐ Manual Gear Shift* – page 25

Demonstrate pressing reverse button for reverse gear.




- ☐ Windshield/Rear* Wipers & Washers - page 13

 Rotate lever to adjust Intermittent Wipe Speed.

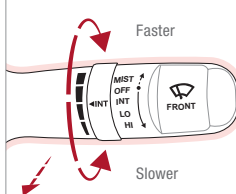

Pull to spray and wipe.

 Rotate REAR switch to change wiper modes.

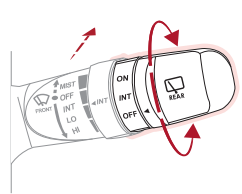

Push lever for brief wipe.

 


KEY FEATURE WALKTHROUGH

Demonstrate the following with the customer


- ☐ Standard Audio System* – page 18

For further operational information, refer to the Owner's Manual.

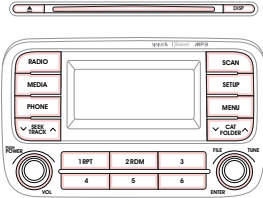


- ☐ Navigation System* – page 20

 For further operational information, refer to the Car Multimedia System User's Manual.

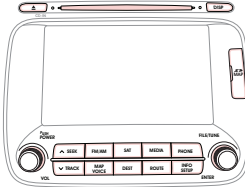


- ☐ UVO eServices System* – page 19

 For further operational information, refer to the UVO System User's Manual.

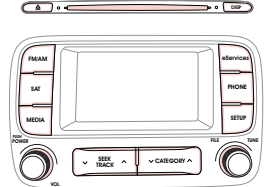


- ☐ Aux/USB/iPod® Port – page 21

 


- ☐ Cruise Control* – page 15

 Demonstrate operation.

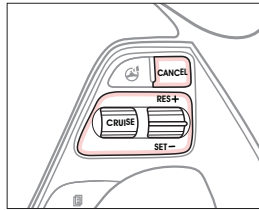

 - ☐ Bluetooth® Wireless Technology* – page 16
- Demonstrate operation.

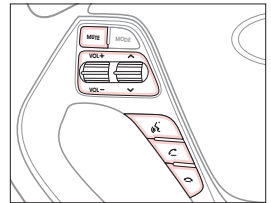

- ☐ Tire Pressure Monitoring System (TPMS) – page 7

- ☐ Active ECO System* – page 8

- ☐ Engine Start/Stop Button* – page 10

- ☐ Digital Clock – page 21

- ☐ Seat Warmers / Ventilated Seat* – page 26

- ☐ Folding Rear Seats* – page 29

- ☐ Sunvisor – page 33

- ☐ Smart Key* – page 32

- ☐ HomeLink® with Auto-Dimming Rearview Mirror* – page 30

- ☐ Rear-Camera Display* – page 35

- ☐ Passenger Air Bag Off Indicator – page 36

DURING DELIVERY

*if equipped

- ☐ Explain first service process and schedule first service appointment
- ☐ Tour Parts & Service departments, introduce staff and explain value of Kia Parts and Service
- ☐ Review recommended maintenance schedule and maintenance requirements to validate warranty
- ☐ Review business hours and Customer 360° Care
- ☐ Review the Kia 10-year/100,000-mile warranty program
- ☐ Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
- ☐ Confirm time and best contact number for initial dealer follow-up

Sales Consultant: _____ Date: _____

Sales Manager: _____ Date: _____

Customer: _____ Date: _____