

2015 Infiniti Q40

Quick Reference Guide



INFINITI.



- | | |
|--|---|
| 1 ADAPTIVE FRONT LIGHTING SYSTEM (AFS) SWITCH* | 10 VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH* |
| 2 INSTRUMENT BRIGHTNESS CONTROL SWITCHES* | 11 TRUNK LID RELEASE SWITCH |
| 3 HEADLIGHT AND TURN SIGNAL SWITCH | 12 INTELLIGENT KEY PORT |
| 4 TRIP RESET SWITCH* | 13 PARKING BRAKE |
| 5 VEHICLE INFORMATION DISPLAY | 14 CONTROL PANEL DISPLAY |
| 6 WINDSHIELD WIPER AND WASHER SWITCH | 15 AUDIO SYSTEM |
| 7 STEERING WHEEL SWITCHES FOR AUDIO* / BLUETOOTH® | 16 CLIMATE-CONTROL SYSTEM |
| 8 CRUISE CONTROL | 17 PASSENGER AIRBAG INDICATOR LIGHT |
| 9 PUSH BUTTON IGNITION SWITCH | 18 HEATED SEAT SWITCHES* |

*See your Owner's Manual for information.

table of contents

essential information

Tire Pressure Monitoring System (TPMS)	2
Loose Fuel Cap	2
Fuel-filler Door	3
Accessing the Front Cup Holders (if so equipped).....	3
Clock Set/Adjustment	4
NavTraffic and NavWeather	4

first drive features

INFINITI Intelligent Key System	5
Trunk Lid Release	6
Seat Adjustments	6
Outside Mirror Control Switch	7
Starting/Stopping the Engine	7
Headlight Control Switch	8
Windshield Wiper and Washer Switch	9
Climate Controls	9
FM/AM/SiriusXM® Satellite Radio with CD/DVD (if so equipped) Player ..	11
USB (Universal Serial Bus) Connection Port/iPod® Interface	12
Cruise Control	12

system guide

Trip Computer	13
Bluetooth® Hands-free Phone System	14
System Operating Tips	14
Bluetooth® System with Navigation (if so equipped)	15
Bluetooth® System without Navigation (if so equipped)	17
Navigation System (if so equipped)	18
DVD Player (if so equipped)	19
HomeLink® Universal Transceiver	19



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.



To view detailed instructional videos, go to www.infinitiownersinfo.mobi/2015/q40 or snap this barcode with an appropriate barcode reader.

 


Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.InfinityUSA.com.

Tire Pressure Monitoring System (TPMS)

- A **CHECK TIRE PRESSURE** warning message will appear in the vehicle information display **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.
- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **CHECK TIRE PRESSURE** warning message and low tire pressure warning light will extinguish.
- When the low tire pressure warning light flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by an INFINITI retailer.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.
- Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 9)" in your Owner's Manual for the location of the Tire and Loading Information label.


For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Maintenance and do-it-yourself (section 8)" of your Owner's Manual.

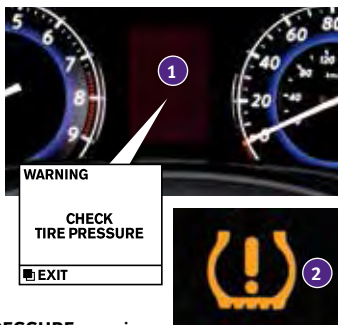

Loose Fuel Cap

- A **LOOSE FUEL CAP** warning message will appear in the vehicle information display **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the reset button **2** is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light **SERVICE ENGINE SOON** may illuminate.

 For more information, refer to the "Instruments and controls (section 2)" and the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

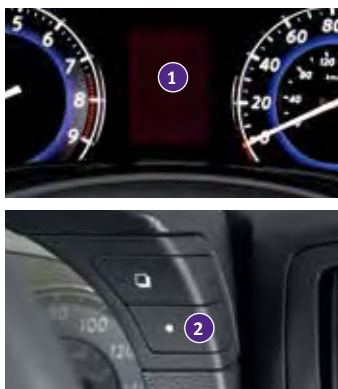

Fuel-filler Door

- The fuel-filler door is located on the right, rear side of the vehicle.
- Unlock the fuel-filler door using one of the following operations then push and release the right side of the door to open.
 - Push the door handle request switch while carrying the INFINITI Intelligent Key with you.
 - Press the UNLOCK button on the Intelligent Key.
 - Push the power door lock switch to the UNLOCK position.



For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

Accessing the Front Cup Holders (if so equipped)

- To open the cup holders, push the lid **1** down and release.
- The flap **2** will fold down when inserting a large container.



For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.

Clock Set/Adjustment

DIGITAL CLOCK ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:
 1. Press the **SETTING** button on the control panel.
 2. Touch the **Others** key.
 3. Touch the **Clock** key.
- The following settings can be adjusted:
 - **On-screen Clock:** The clock in the upper right corner of the display can be turned ON or OFF.
 - **Clock Format (24h):** The clock can be set to 12 hours or 24 hours.
 - **Offset (hour):** The time can be adjusted by increasing or decreasing per hour.
 - **Offset (min):** The time can be adjusted by increasing or decreasing per minute.
 - **Daylight Savings Time:** The application of daylight savings time can be turned ON or OFF.
 - **Time Zone:** Adjust the time zone. Choose a time zone from the available list.
- Press the **BACK** button to return to the previous screen.



For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

NavTraffic* and NavWeather* (if so equipped)

- Your vehicle's Navigation System is equipped with NavTraffic and NavWeather capabilities.
- NavTraffic enables your vehicle's Navigation System to display real-time traffic conditions, such as accidents or road construction, and may provide a detour to help avoid congestion.
- NavWeather tracks nationwide weather information, provides real-time weather reports and automatically alerts you to severe weather conditions around your current vehicle location.

*These features, SiriusXM® Satellite Radio, NavTraffic and NavWeather require an active subscription. Multiple subscriptions may be necessary to activate the various features.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.



INFINITI Intelligent Key System

The INFINITI Intelligent Key system allows you to lock or unlock the vehicle, open the trunk and start the engine.

- It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).
- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **1** once or press the  button **2** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **1** once; the corresponding door will unlock. Push the door handle request switch **1** again within 1 minute; all other doors will unlock, or
 - Press the  button **3** on the key fob to unlock the driver's side door. Press the  button again; all other doors will unlock.
- To release the trunk lid, press the  button **4** for more than 1 second. Lift the trunk lid to access the trunk.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **5** for more than 1 second. Once activated, the panic alarm and headlights will stay on for 25 seconds.



INFINITI INTELLIGENT KEY BATTERY DISCHARGE

- If the battery in the Intelligent Key is almost discharged, the guide lights **6** of the Intelligent Key port blink and the Intelligent Key battery discharge indicator **7** is displayed in the vehicle information display.
- To start the engine under these circumstances, insert the Intelligent Key into the key port with the buttons facing upward and the key ring end toward you until it latches into place. Then push the ignition switch to start the engine.
- To remove the Intelligent Key from the port, push the ignition switch to turn the engine off and then pull the Intelligent Key out of the port.
- The Intelligent Key port does not charge the Intelligent Key battery. If you see the low battery indicator **7**, replace the battery in the Intelligent Key.
- Do not insert the mechanical key or any other objects into the intelligent key port. Inserting any object other than the Intelligent Key will damage the Intelligent Key port.



 
For more information, refer to the “**Pre-driving checks and adjustments (section 3)**”, the “**Starting and driving (section 5)**” and the “**Maintenance and do-it-yourself (section 8)**” of your Owner’s Manual.

first drive features

Trunk Lid Release


Use one of the following methods to open the trunk:

- Push the trunk open request switch **1** for more than 1 second while carrying the INFINITI Intelligent Key with you.
- Press the trunk button  on the Intelligent Key for more than 1 second.

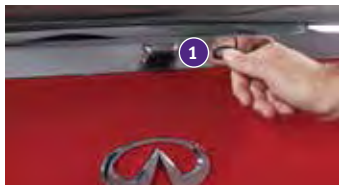

- From inside the vehicle, push down on the trunk lid release switch **2** on the instrument panel.

 For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

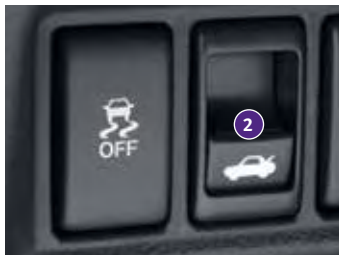

Seat Adjustments

POWER SEAT ADJUSTMENTS

- To slide the seat forward or backward, push the switch  **1** forward or backward.
- To recline the seatback, push the switch  **2** forward or backward.

 


SEAT LIFTER

- To adjust the angle of the front portion or height of the seat, push the front or rear end of the switch  **1** up or down.

MANUAL LUMBAR SUPPORT (driver’s seat only)

- To adjust the seat lumbar support, move the lever **3** forward or backward.

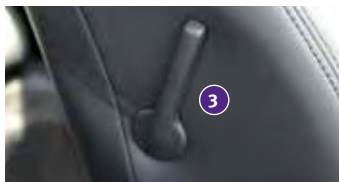

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

Outside Mirror Control Switch

- To select the right or left side mirror, turn the control switch ① right or left.
- To adjust the mirror angle, move the control switch ① up, down, right or left.
- To prevent accidentally moving the mirror, turn and set the switch to the middle (neutral) position.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

Starting/Stopping the Engine

TURNING THE ENGINE ON

- Depress the brake pedal.
- Press the ignition switch **START/STOP** button to start the engine.
- It is important to make sure the INFINITI Intelligent Key is with you (that is, in your pocket or purse).

TURNING THE ENGINE OFF

- To turn the engine off, move the shift lever to the **P (PARK)** position, apply the parking brake and push the ignition switch.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

first drive features

Headlight Control Switch

HEADLIGHT CONTROL

- Turn the headlight control switch to the **OFF** position **1** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the **ON** position **2** to turn on the headlights.



AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then push the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**, **ON** position **1** or **ON** position **2**.

HIGH BEAM SELECT

- Push the headlight control switch forward **4** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.



FOG LIGHT SWITCH

- The headlights must be on and the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the **ON** position **6** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

 
 


For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

Windshield Wiper and Washer Switch

- Move the lever to one of the following positions to operate the windshield wipers:

- 1 Mist (**MIST**) - One sweep operation of the wipers.
- 2 Intermittent (**INT**) - Operate the wipers intermittently. To increase or decrease the wiper speed, twist the time control ring 3.
- 4 Low (**LO**) - Wipers operate at a continuous low-speed.
- 5 High (**HI**) - Wipers operate at a continuous high-speed.
- 6 Pull the lever toward you to activate the washer. The wipers will operate several times.

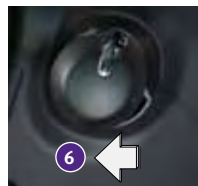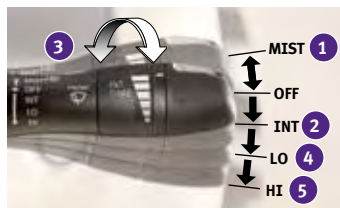

For more information, refer to the “Instruments and controls (section 2)” of your Owner’s Manual.



Climate Controls

1 AUTO BUTTON/DRIVER’S SIDE TEMPERATURE CONTROL DIAL

- The auto mode may be used year-round. Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver’s side temperature control dial to the left for cooler air or right for warmer air.

2 DUAL BUTTON/PASSENGER’S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger’s side temperature controls on or off. This will allow the passenger’s side temperature to be adjusted independently from the driver’s side by turning the passenger’s side temperature control dial.
- Turn the passenger’s side temperature control dial left for cooler air or right for warmer air.

3 FAN SPEED CONTROL BUTTONS

- To manually adjust the fan speed, press the **+** button to increase the fan speed or press the **-** button to decrease the fan speed.

first drive features

4 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the defroster button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Turn the temperature control dial **1** to set the desired temperature.
- To defrost the front and side windows quickly, set the temperature controls and fan speed controls to their maximum settings.

5 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:

 Air flows from the center and side vents.

 Air flows from the center, side and foot vents.

 Air flows mainly from the foot vents.

 Air flows from the defroster and foot vents.

6 REAR WINDOW AND OUTSIDE MIRRORS DEFROSTER SWITCH

- Press the rear window defroster switch  to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

7 INTAKE AIR CONTROL BUTTON

AIR RECIRCULATION

- Press the intake air control button to recirculate interior air inside the vehicle. The indicator light on the  side will illuminate. This system is used to avoid outside odors and help to adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot vent mode .

OUTSIDE AIR CIRCULATION

- Press the intake air control button to draw outside air into the passenger compartment. The indicator light on the  side will illuminate.

AUTOMATIC INTAKE AIR CONTROL

- In the auto mode, the intake air will be controlled automatically. To manually control the intake air, press the intake air control button. To return to the automatic control mode, press the intake air control button for about 2 seconds.

8 A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

9 OFF BUTTON

- Press the **OFF** button to turn the climate control system off.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



FM/AM/SiriusXM®* Satellite Radio with CD/DVD (if so equipped) Player

1 ON•OFF BUTTON/VOL (volume) CONTROL KNOB

- Press the **ON•OFF** button to turn the system on or off.
- Turn the **VOL** (volume) knob right or left to increase or decrease the volume.

2 SEEK•CAT AND TRACK BUTTONS

- To scan quickly through each broadcasting station, press the **SEEK•CAT** button or the **TRACK** button to stop at the next or previous broadcast station.
- For satellite radio, press the **SEEK•CAT** button or the **TRACK** button to switch to the first channel of the next or previous category.
- Press the **SEEK•CAT** button or the **TRACK** button to change tracks on a CD or device.
- Press and hold the **SEEK•CAT** button or the **TRACK** button to fast forward or rewind a track on a CD.

3 AUDIO BUTTON/TUNE/FOLDER CONTROL KNOB

- To manually tune the radio, turn the **TUNE/FOLDER** control knob left or right.
- Press the **AUDIO** button to access the audio settings screen.

4 STATION PRESET BUTTONS

- Twelve stations can be set for the FM band, 6 for the AM band and 18 for satellite radio.
- To store a station in a preset, you must first select the radio band by pressing the **AM•FM/SAT** button (5) and tune to the desired AM, FM or satellite radio station.
- Then press and hold the desired station select button (1-6) until the preset number is updated on the display and the sound is briefly muted. The channel indicator will then display, and the sound will resume. Programing is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (1-6).

*SiriusXM® Satellite Radio is only available on vehicles equipped with an optional satellite radio subscription service.
For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

first drive features

USB (Universal Serial Bus) Connection Port/iPod® Interface

- The USB port **1** is located in the center console under the arm rest.
- When a compatible USB memory device or iPod® is plugged into the USB port, compatible audio and video files stored on the device can be played through the vehicle's audio system and front display.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.



Cruise Control

 
 
- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **1**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** and release. The **CRUISE SET** indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4**.
- To turn off cruise control, push the **ON/OFF** switch **1**. The **CRUISE** indicator light in the instrument panel will extinguish.



For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

Trip Computer

- When the  button **1** is pressed, the following modes will appear on the vehicle information display **2**:
 - MPG** – Displays the current fuel consumption.
 - MPG/MPH** – Displays the average fuel consumption and speed since the last reset.
 - To reset the elapsed mpg/mph, press and hold the  button **3** for more than 1 second. Both elapsed mpg/mph will reset at the same time.
 - TIME/MILES** – Displays the elapsed time and total distance the vehicle has been driven since the last reset.
 - To reset the elapsed time and total distance, press and hold the  button **3** for more than 1 second. Both elapsed time and total distance will reset at the same time.
 - RANGE** – Displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
 - OUTSIDE TEMP** – Displays the exterior air temperature including a low temperature warning feature.
 - SETTING** – Allows you to set reminders for alerts and maintenance intervals or change the language and units used in the system.
 - Press the  button **3** to cycle through the various setting modes.
 - Press the  button **1** to choose the selected mode.
 - WARNING** – Displays when a warning is present.
- Push the  button **3** for approximately 1 second to reset the currently displayed trip odometer to zero.

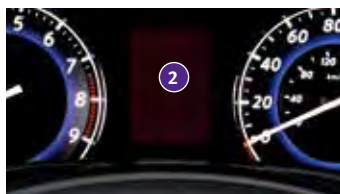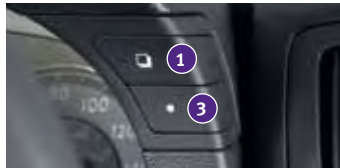


For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

Bluetooth® Hands-free Phone System

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

 - Press the  or  button to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  or  button and after the tone say “Call Redial”. If your vehicle is equipped with navigation refer to “Voice recognition (section 9)” for more information.
- The “Help” command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Say commands after the tone or press the  or  button to say a command at any time.
- Speak naturally without long pauses and without raising your voice. When speaking phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, “Michael Smith” may be spoken as “Smith Michael”.
- To cancel a Voice Recognition session, simply wait 5 seconds, say “Cancel” or “Quit”, or press and hold the  or  button for 5 seconds.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. See your Owner’s Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone’s Owner’s Manual and visit www.InfinitiUSA.com/bluetooth.

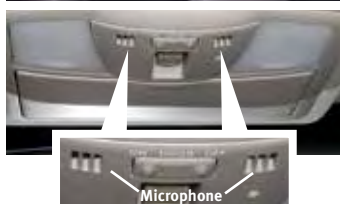

*Some jurisdictions prohibit the use of cellular telephones while driving.

Bluetooth® System with Navigation (if so equipped)

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the phone.
1. Press the **PHONE** button on the instrument panel or the  button on the steering wheel and select the “Connect Phone” key.
 2. Initiate connecting from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.InfinitiUSA.com/bluetooth.
 - When prompted for a PIN code, enter “1234” from the handset. (The PIN code is assigned by INFINITI and cannot be changed.)
 3. When the connecting is complete, the screen will return to the “Phone” menu display.



PHONEBOOK SETUP

- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, the vehicle phonebook may be set for up to 1,000 entries.
- To manually download entries:
 1. Press the  button and select the “Quick Dial” key.
 2. Select the “Add New” key at the top of the display. There are different methods to input a phone number. Select one of the following options:
 - “Copy from Call History” to save a number from the Outgoing, Incoming or Missed Calls lists.
 - “Copy from the Phonebook” to save a number that has been downloaded from your handset to the vehicle.
 - “Enter Number by Keypad” to input the number and name manually.



system guide

MAKING A CALL

 
To make a call, follow this procedure:

1. Press the  button on the steering wheel. The “Phone” menu will appear on the control panel display.
2. Select the “Vehicle Phonebook”, “Call History”, “Handset Phonebook” or “Dial Number” key.
3. Select the desired entry from the list.
4. Select “Call” to start dialing the number.



RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel or touch the “Answer” key.
- To reject the call, touch the “Reject Call” key.
- To hang-up, press the  button or touch the “Hang up” key.

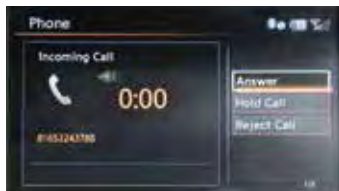

Bluetooth® System without Navigation (if so equipped)

PAIRING PROCEDURE

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say “Connect Phone”. The system acknowledges the command and announces the next set of available commands.
3. Say “Add Phone”. The system acknowledges the command and asks you to initiate connecting from the phone handset.
4. Initiate pairing from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit **www.InfinitiUSA.com/bluetooth**.
 - When prompted for a PIN code, enter “1234” from the handset. (The PIN code is assigned by INFINITI and cannot be changed.)
5. The system asks for a name for the cellular phone. You can give the cellular phone a name of your choice.



PHONEBOOK REGISTRATION

- When the cellular phone is connected to the in-vehicle module, the data stored in the cellular phone, such as phonebook, outgoing call logs, incoming call logs and missed call logs, is automatically transferred and registered to the system.
- The availability of this function depends on each cellular phone. The copying procedure also varies according to each cellular phone. See your cellular phone's Owner's Manual for more information.
- Up to 1,000 entries per registered cellular phone can be stored in the phonebook.

MAKING A CALL

1. Push the  button on the steering wheel. A tone will sound.
2. Say “Call”. The system acknowledges the command and announces the next set of available commands.
3. Say the registered person's name. The system acknowledges the command and announces the next set of available commands.
4. Say “Yes”. The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button on the steering wheel.
- To hang-up, press the  button on the steering wheel.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual or please visit **www.InfinitiUSA.com/bluetooth**.

system guide



Navigation System (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.

- 1 Touch-screen display.
- 2 **STATUS** - Push multiple times to display audio information with either the air conditioner status, fuel economy or navigation directions.
- 3 **(DEST)** Destination - Push to enter a destination.
- 4 **INFINITI CONTROLLER** - Turn to highlight an item on the screen and push **ENTER** to select the highlighted item. On the map screen, turn to adjust the map scale. To scroll the map, push the controller in the direction you want to scroll.
- 5 **ZOOM IN, ZOOM OUT** - Push to adjust the map scale.
- 6 **ROUTE** - Push to access the guidance control functions such as guidance cancellation, route priority or waypoint setting on the route.
- 7 **(INFO)** Information - Push to display the vehicle, traffic, weather or Voice Recognition information.
- 8 **☀/☾ OFF** - Push to switch between the day screen (bright) and the night screen (dark). Push and hold to turn off the display. Push again to turn on the display.
- 9 **MAP** - Push to display the map. While following a route, push multiple times to change the type of route information displayed.
- 10 **SETTING** - Press to access the system settings.
- 11 **BACK** - Press to return to the previous screen.
 - In a settings screen, press this button to apply the setting.
 - In a character input screen, press this button to delete a character incorrectly entered.
- 12 **VOICE** - Press to hear the current voice guidance for a programmed route.

For more information, please refer to your Navigation System Owner's Manual.

 
DVD Player (if so equipped)

- With this DVD Player, you can play video files via a DVD or CD from the front display.
- To view movies on the front display, stop the vehicle in a safe location, move the shift lever to the **P (PARK)** position and apply the parking brake.
- To reduce driver distraction, movies will not be shown on the front display while the vehicle is in any drive position.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



HomeLink® Universal Transceiver

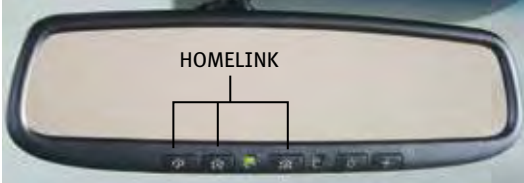- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- 
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
 - To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programming is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.
 - An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink button, press and release the “learn” or “smart” button (the name may vary by manufacturer but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed HomeLink button for 2 seconds and release.
 - You may have to repeat the previous 2 steps up to 3 times to complete the programming process. HomeLink should now activate your device.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.



To view detailed instructional videos,
go to www.infinitiownersinfo.mobi/2015/q40
or snap this barcode with an appropriate
barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the INFINITI website at <https://owners.infiniti-usa.com/iowners/navigation/manualsAndGuides>. If you have questions concerning any information in your Owner's Manual, contact INFINITI Consumer Affairs. See the INFINITI CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.