

2015 SENTRA

QUICK REFERENCE GUIDE





- 1** Trip Computer
- 2** Low Tire Pressure Warning Light
- 3** Headlight and Turn Signal Switch
- 4** Windshield Wiper and Washer Switch

- 5** Trip Computer Menu/Steering Wheel Switches for Audio*/Bluetooth®
- 6** Cruise Control
- 7** Instrument Brightness Control*
- 8** Outside Mirror Control Switch

- 9** Trunk Lid Release Switch
- 10** Tilt/Telescopic Steering Column*
- 11** Drive Modes (ECO and SPORT)
- 12** Vehicle Dynamic Control (VDC) OFF Switch
- 13** Fuel-filler Door Release

- 14** Hood Release*
- 15** Front Passenger Air Bag Status Light
- 16** Audio and Navigation System
- 17** Climate Controls

*See your Owner's Manual for information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

Drive Modes	2
RearView Monitor (if so equipped)	2
SiriusXM Travel Link and SiriusXM Traffic (if so equipped)	3

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS) with Easy Fill Tire Alert (if so equipped)	4
Loose Fuel Cap.	5
Fuel-filler Door.	5
Clock Set/Adjustment	5

FIRST DRIVE FEATURES

NISSAN Intelligent Key® System (if so equipped)	7
Trunk Lid Release Switch	7
Seat Adjustments	8
Outside Mirror Control Switch	8
Starting/Stopping the Engine	8
Headlight Control Switch.	9
Windshield Wiper and Washer Switch.	10
Automatic Climate Controls (if so equipped).	11
FM/AM/SiriusXM® Satellite Radio (if so equipped) with CD Player	12
USB (Universal Serial Bus) Connection Port/Aux Jack and iPod® Interface (if so equipped).	13
Cruise Control.	14

SYSTEM GUIDE

Trip Computer	15
Text Messaging (if so equipped)	15
NissanConnect SM Mobile Apps (if so equipped)	16
Bluetooth® Hands-free Phone System.	16
▪ System Operating Tips.	16
Bluetooth® System without Navigation (if so equipped).	17
Bluetooth® System with Navigation (if so equipped)	19
Navigation System (if so equipped)	21



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.nissanusa.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"**, the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** and the **"Starting and driving (section 5)"** of your Owner's Manual.

NEW SYSTEM FEATURES

DRIVE MODES

NORMAL

- Normal drive mode is recommended for normal, everyday driving and is the default mode of your vehicle.

ECO

- ECO drive mode is recommended to help maximize fuel economy. Performance may be reduced.
 - Press the **ECO** button **1** on the instrument panel to activate.
 - The **ECO** drive indicator light will illuminate on the instrument panel.



SPORT

- SPORT drive mode is recommended for an enhanced performance feel. Fuel economy may be reduced.
 - Press the **SPORT** button **2** on the instrument panel to activate.
 - The **SPORT** drive indicator light will illuminate on the instrument panel.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

REARVIEW MONITOR (if so equipped)

- When the shift lever is shifted into the **R (REVERSE)** position, the monitor display shows a rearward view from the vehicle.
- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).



For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

SiriusXM TRAVEL LINK* AND SiriusXM TRAFFIC* (if so equipped)

- Your vehicle's Navigation System is equipped with SiriusXM Travel Link and SiriusXM Traffic capabilities.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings, and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed when they are approached.

*These features, SiriusXM® Satellite Radio, Travel Link and Traffic, require an active subscription. Multiple subscriptions may be necessary to activate the various features.

 
For more information, refer to the "**Navigation (section 4)**" and the "**General system information (section 6)**" of your Navigation System Owner's Manual.



ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY FILL TIRE ALERT (if so equipped)

- A **CHECK TIRE PRES** warning message will appear in the trip computer **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.
 - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **CHECK TIRE PRES** warning message and low tire pressure warning light will extinguish.
- When adding air to an under-inflated tire, the TPMS with Easy Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended COLD tire pressure.
- To use the Easy Fill Tire Alert system (if so equipped):
 1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
 2. Place the ignition switch in the **ON** position. Do not start the engine.
 3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning lights will stop flashing.
 5. Repeat this procedure for any additional under-inflated tires.
- When the low tire pressure warning light flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressures (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 9)" in your Owner's Manual for the location of the Tire and Loading Information label.

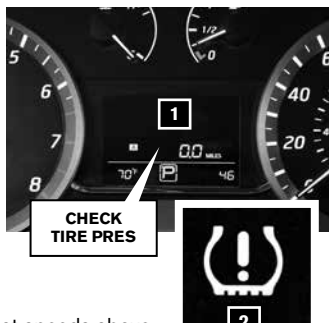

For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**" and the "**Maintenance and do-it-yourself (section 8)**" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will display in the trip computer **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the  button **2** on the steering wheel is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light  may also illuminate.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



FUEL-FILLER DOOR

- The fuel-filler door release is located to the left of the steering wheel below the instrument panel.
- To open the fuel-filler door, pull the release **1**.
- The fuel-filler door is located on the passenger's side at the rear of the vehicle.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:

 
WITH NAVIGATION

1. Press the **APPS**  button **1**.
2. Touch the “Settings” key.
3. Touch the “System” key.
4. Touch the “Clock” key.

- The following settings can be adjusted:

- **Time Format:** The clock can be set to 12 hours or 24 hours.
- **Date Format:** The date can be changed to one of five different formats.
- **Clock Mode:** From here, the clock mode options are:
 - **Manual:** Allows for the option “Set Clock Manually”. Touch this to begin setting the clock manually using the “+” or “-” to adjust the hours, minutes, day, and month up or down.
 - **Time Zone:** Touch the “Time Zone” key **2** to choose from the applicable time zone list and/or touch the “Daylight Savings Time” key to switch between ON and OFF.
 - **Auto:** Automatically sets the clock to the vehicle’s current location.

- Press the **BACK** button **3** to return to the previous screen.

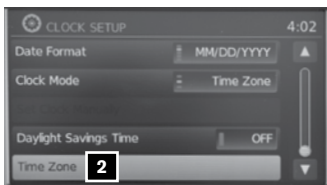

ESSENTIAL INFORMATION

WITHOUT NAVIGATION – FM/AM/SiriusXM® SATELLITE RADIO

- To adjust the time and the appearance of the clock on the display:
 1. Press the **ENTER/SETTING** button.
 2. Turn the **TUNE/SCROLL** control knob to select “CLOCK” and press the **ENTER/SETTING** button.
 3. Turn the **TUNE/SCROLL** control knob to select “Set Time” and press the **ENTER/SETTING** button.
- The following settings can be adjusted:
 - By turning the **TUNE/MENU** control knob, the hours can be adjusted. Pressing the **ENTER/SETTING** button will allow the minutes to be adjusted by the **TUNE/MENU** control knob.
 - Press the **ENTER/SETTING** button again to set the changes
 - Press the **BACK** button to finish.



WITHOUT NAVIGATION – FM/AM RADIO

- To adjust the time and the appearance of the clock on the display:
 1. Press the **SETUP** button.
 2. Turn the **TUNE/MENU** control knob to select “CLOCK” and press the **ENTER** button.
 3. Turn the **TUNE/MENU** control knob to select “Set Time” and press the **ENTER** button.
- The following settings can be adjusted:
 - By turning the **TUNE/MENU** control knob, the hours can be adjusted. Pressing the **ENTER** button will allow the minutes to be adjusted by the **TUNE/MENU** control knob.
 - Press the **ENTER** button to finish.
- The display will return to the regular display after 10 seconds.



For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.

FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM (if so equipped)

The NISSAN Intelligent Key® system allows you to lock or unlock the vehicle, open the trunk and start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- To lock the vehicle, push either door handle request switch **1** once or press the  button **2** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **1** once; the corresponding door will unlock. Push the door handle request switch **1** again within 60 seconds; all other doors will unlock, or
 - Press the  button **3** on the key fob to unlock the driver's side door. Press the  button **3** again; all other doors will unlock.
- To release the trunk lid, press the  **HOLD** button **4** for more than 1 second. Lift the trunk lid to access the trunk.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **5** for more than 0.5 seconds. Once activated, the panic alarm and headlights will stay on for a period of time.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

TRUNK LID RELEASE SWITCH

Use one of the following methods to unlatch the trunk lid then raise the lid to open the trunk:

- Push the trunk opener request switch **1**, located in the center under the trunk handle, for more than 1 second. The doors must be unlocked or the NISSAN Intelligent Key® must be with you (that is, in your pocket or purse).
- Press the trunk release  **HOLD** button **2** on the key fob for more than 1 second.
- Push the trunk lid release **3** down. The release is located to the left of the steering wheel.

 


For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

FIRST DRIVE FEATURES

SEAT ADJUSTMENTS

- To slide the front seat forward or backward, pull up on the center of the bar **1** under the front of the seat and slide forward or backward. Release the bar to lock the seat in position.
- To recline the seatback, pull up on the lever **2** and lean back. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.

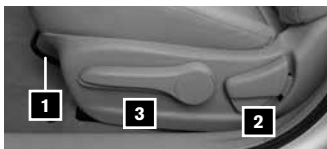

SEAT LIFTER (DRIVER'S SEAT)

- To adjust the seat height, pull up or push down on the adjusting lever **3** repeatedly.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner's Manual.

OUTSIDE MIRROR CONTROL SWITCH

- Move the switch **1** right or left to select the right or left side mirror.
- Adjust each mirror to the desired position using the switch **2**.
- Move the switch **1** to the middle (neutral) position to prevent accidentally moving the mirror.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

STARTING/STOPPING THE ENGINE

CONTINUOUSLY VARIABLE TRANSMISSION

(NISSAN Intelligent Key® models only - if so equipped)

- It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).
- Depress the brake pedal.
 - If the brake pedal is not depressed, pushing the ignition switch once enters the **ACC** mode.
 - If the ignition switch is pushed a second time, the vehicle will enter the **ON** mode.
- Move the shift lever to the **P (PARK)** position.
- Push the ignition switch to start the engine.



MANUAL TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Depress the clutch pedal to the floor.
- Move the shift lever to the **N (NEUTRAL)** position.
- Turn the key to the **START** position.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

TURNING THE ENGINE OFF

- For a Continuously Variable Transmission, apply the brake pedal, move the shift lever to the **P (PARK)** position, apply the parking brake and press the ignition switch.
- For a manual transmission, apply the brake pedal, depress the clutch pedal, place the vehicle in **1 (FIRST)** gear, apply the parking brake and turn the ignition off.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.

AUTOLIGHT SYSTEM (if so equipped)

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then push the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  position **1** or  position **2**.



HIGH BEAM SELECT

- Push the headlight control switch forward **4** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.



FOG LIGHT SWITCH (if so equipped)

- The headlights must be in the **AUTO** position or the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **6** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

FIRST DRIVE FEATURES

LANE CHANGE SIGNAL

 
 
- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch, and release the lever. The turn signal will automatically flash three times.
- Choose the appropriate method to signal a lane change based on road and traffic conditions.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

WINDSHIELD WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:

- 1** Mist (**MIST**) – One sweep operation of the wipers.
- 2** Intermittent (**INT**) – Wipers operate intermittently. The intermittent operation speed can be adjusted by twisting the time control ring **3** to increase or decrease wiper speed.
- 4** Low (**LO**) – Wipers operate at a continuous low-speed.
- 5** High (**HI**) – Wipers operate at a continuous high-speed.
- 6** Pull the lever toward you to activate the washer. The wipers will operate several times.

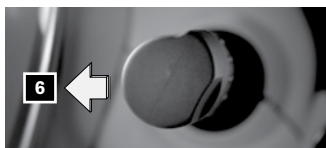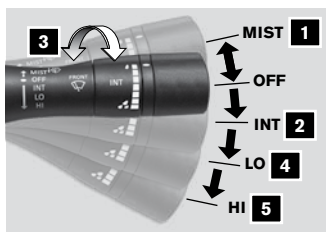

WIPER BLADE REPLACEMENT PROCEDURE

The windshield wipers must be in the service position in order to replace the wiper blades.

To move the wiper blades to the service position, follow this procedure:

- When the ignition switch is in the **ON** position or within 60 seconds of placing the ignition switch to the **OFF** position, lift the windshield wiper and washer lever up to the **MIST** position **1** two times in less than 0.5 seconds. The windshield wipers will move to the service position automatically, and the wiper blades can now be replaced.

To move the wiper blades back to the original position:

- Lift the windshield wiper and washer lever up for more than 1 second or lower the lever down to operate at any wiper speed.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Maintenance and do-it-yourself (section 8)**” of your Owner’s Manual.



AUTOMATIC CLIMATE CONTROLS (if so equipped)

1 AUTO BUTTON

- This mode may be used year-round. Press the **AUTO** button to turn the system on. The system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed. The A/C automatically turns on when **AUTO** is selected.

2 DUAL BUTTON

- Press the **DUAL** button to turn the passenger's side temperature controls on or off.
- When the indicator light is on, the climate control system is providing individual temperature controls for the driver's and passenger's side.
- When the indicator light is off, the climate control system turns off the individual temperature controls for the passenger side.

3 DRIVER'S SIDE TEMPERATURE CONTROL BUTTONS

- Buttons are used to control the driver's side temperature by pressing up for warmer air or down for cooler air.

4 PASSENGER'S SIDE TEMPERATURE CONTROL BUTTONS

- Buttons are used to control the passenger's side temperature by pressing up for warmer air or down for cooler air.

5 FAN SPEED CONTROL BUTTONS

- Press **-** to lower the fan speed and press **+** to raise the fan speed.

6 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the defroster button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air. To optimally defog the side windows, direct the side vents to the side windows.
- Press the temperature control buttons **3** or **4** to set the desired temperature.
- To quickly defrost ice that has formed on the outside of the windows, press the **+** fan speed button **5** until you have reached the maximum speed and set the temperature controls **3** and **4** to the highest temperature setting.

7 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the defroster and foot vents.

FIRST DRIVE FEATURES

8 REAR WINDOW AND OUTSIDE MIRROR DEFROSTER BUTTON

- Press the rear window defroster button  to turn the system on or off.
- This function automatically turns off after a period of time.

9 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate interior air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot vent mode .

10 FRESH AIR INTAKE BUTTON

- Press the fresh air intake button  to draw outside air into the passenger compartment. The indicator light on the button will illuminate.

11 A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off.

12 ON-OFF BUTTON

- Press the **ON-OFF** button to turn the system on or off.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.



FM/AM/SiriusXM®* SATELLITE RADIO (if so equipped) WITH CD PLAYER

1 ON-OFF BUTTON/VOL (volume) CONTROL KNOB

- Press the **ON-OFF** button to turn the system on or off.
- Turn the **VOL** (volume) control knob to the right or left to increase or decrease the volume.

*SiriusXM® Satellite Radio is only available on vehicles equipped with an optional satellite radio subscription service.

To view detailed instructional videos regarding these and other features,
please go to www.nissanownersinfo.mobi.

2 AUDIO BUTTON/TUNE CONTROL KNOB

- To manually tune the radio, turn the **TUNE** control knob left or right.
- Press the **AUDIO** button to go to the audio settings screen.

3 SEEK/CATEGORY BUTTONS

- To tune and stop at the previous or next broadcasting station, press the seek buttons **◀◀** or **▶▶**.
- For satellite radio to switch to the first channel of the previous or next category, press the seek buttons **◀◀** or **▶▶**.
- To change tracks on a CD, press the seek buttons **◀◀** or **▶▶**.
- When the seek buttons **◀◀** or **▶▶** are pressed and held while a CD is playing, the CD will rewind or fast forward. When the button is released, the CD will play at normal speed.

4 STATION SELECT KEYS

Twelve stations can be set for the FM band, 6 for the AM band and 18 for satellite radio.

- To store a station in a preset, first select a radio band by pressing the **FM-AM** button **5** or **SXM** button **6** then tune to the desired FM, AM or satellite radio station.
- Now select and hold the desired station memory key (**1-6**) until the preset number is updated on the display and a beep is heard. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station memory key (**1-6**).

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

USB (Universal Serial Bus) CONNECTION PORT/AUX JACK AND IPOD® INTERFACE

- The USB port/AUX jack **1** is located in the center console under the arm rest.
- When a compatible USB memory device, iPod® or auxiliary device is plugged into the USB port/AUX jack, compatible audio files stored on the device can be played through the vehicle’s audio system.



For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

FIRST DRIVE FEATURES

CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON-OFF** switch **1**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **4**.
- To turn off the cruise control, push the **ON-OFF** switch **1**. The **CRUISE** indicator light in the instrument panel will extinguish.



For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

SYSTEM GUIDE

TRIP COMPUTER

- With the ignition switch in the **ON** position, trip computer modes can be selected by pressing the  button **2** on the steering wheel.
- The following modes can be selected in the vehicle information display **1**:
 - **Odometer** (shown at all times) – records the total distance the vehicle has been driven.
 - **Trip A** – measures the distance of one specific trip.
 - **Trip B** – measures the distance of a second specific trip.
 - **Eco Pedal Indicator** – displays the recommended accelerator pedal position to optimize fuel consumption.
 - **MPG** – displays the instant fuel consumption.
 - **AVG/mpg** – displays the average fuel consumption since the last reset.
 - **AVG/mph** – displays the average vehicle speed since the last reset.
 - **dte** – displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
- To reset **Trip A**, **Trip B**, **AVG/mpg** or **AVG/mph**, go to the desired mode on the trip computer and hold the  button **2** for more than 3 seconds.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

TEXT MESSAGING* (if so equipped)

- This system allows for sending and receiving text messages through the vehicle’s interface.
- Using predefined or custom messages, send a text to a name or phone number stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display screen.
- Text messages have the option of being read aloud.
- Text messages are only displayed on the control panel display if the vehicle speed is less than 5 mph (8 km/h).
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone’s screen during Bluetooth® pairing. For some cellular phones, you may need to enable ‘Notifications’ in the phone’s Bluetooth® menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone’s Owner’s Manual.



*Laws in some jurisdictions may restrict the use of “Text-to-Speech”. Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

SYSTEM GUIDE

- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please visit www.nissanusa.com/bluetooth for compatibility information as well as your device's Owner's Manual.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

NISSANCONNECTSM MOBILE APPS (if so equipped)

- Integrates popular smartphone apps and services into your vehicle.
- The NissanConnect Mobile Apps companion app must be downloaded to your smartphone, and you must be enrolled.

FOR SYSTEM WITH NAVIGATION

- iPhone[®]: Please connect over USB when using an iPhone[®] with NissanConnect Mobile Apps.
- Android: Please connect over Bluetooth[®] when using an Android device with NissanConnect Mobile Apps.

FOR SYSTEM WITHOUT NAVIGATION

- iPhone[®]: Please connect over Bluetooth[®] when using an iPhone[®] with NissanConnect Mobile Apps.
- Android: Please connect over Bluetooth[®] when using an Android device with NissanConnect Mobile Apps.
- For more information on how to pair your phone and set up NissanConnect Mobile Apps, visit: www.nissanusa.com/connect/support.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

BLUETOOTH[®] HANDS-FREE PHONE SYSTEM

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

- Press the  button to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button and after the tone say "Call Redial".



*Some jurisdictions prohibit the use of cellular telephones while driving.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- The “Help” command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- When speaking phonebook names, please be aware some cellular phones require the last name to be spoken before the first name. For example, “Michael Smith” may be spoken as “Smith Michael”.
- If you experience difficulty with the Voice Recognition System recognizing a contact name, please try saying both the first and last name of the contact as this improves recognition accuracy.
- To cancel a Voice Recognition session, say “Exit” or press and hold the  button.
- To decrease or increase the volume of the voice prompts, push the volume control switches — or + on the steering wheel or turn the **VOL** (volume) control knob on the audio system while the system is responding.
- Voice commands can be used to operate various Bluetooth® system features using the NISSAN Voice Recognition system. See your Owner’s Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone’s Owner’s Manual and visit **www.nissanusa.com/bluetooth**.



BLUETOOTH® SYSTEM WITHOUT NAVIGATION (if so equipped)

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the phone.
1. Press the  button on the steering wheel. The system announces the available commands.
 2. Say: “Add Phone”. The system acknowledges the command and asks you to initiate connecting from the phone handset.
 3. Initiate connecting from the phone:
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit **www.nissanusa.com/bluetooth**.
 - When prompted, confirm that the PIN on the display matches the PIN shown on your device. If you are requested to manually input a PIN, please enter “1234” from your handset.



SYSTEM GUIDE

PHONEBOOK SETUP

- The phonebook stores up to 1,000 entries for each cellular phone paired with the system.
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.

MAKING A CALL FROM THE PHONEBOOK

1. Press the  button.
2. After waiting for the tone, say "Call".
3. After the next tone, speak a name of a phonebook entry. For example, "Michael Smith".
4. Confirm that the correct name is recognized by saying "Dial" after the tone.

MAKING A CALL BY PHONE NUMBER

1. Press the  button. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say: "Phone Number". The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- When you receive a phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button.
- To reject the call, press the  button.
- To hang-up the phone at the end of a call or to disconnect while making a call, press the  button.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual or please visit www.nissanusa.com/bluetooth.

 
BLUETOOTH® SYSTEM WITH NAVIGATION (if so equipped)

- Send predefined or custom text messages* through your vehicle's Bluetooth® system.
- Receive texts through your vehicle's Bluetooth® system that can be read to you.
- Bluetooth® Streaming Audio allows you to use a compatible Bluetooth® device to play audio files. Your compatible Bluetooth® device can be connected to the vehicle's audio system, allowing audio files to play through the vehicle's speakers.

CONNECTING PROCEDURE

1. Press the **APPS**  button on the control panel.


2. Select the "Settings" key **1**.

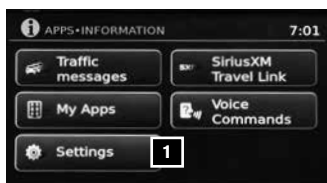

3. Select the "Phone & Bluetooth" key **2**.



 4. Select the "Connect New Device" key **3**.

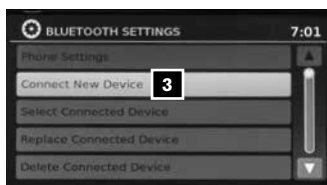

5. Initiate the connecting process from the handset.
The system will display the message:

"Is PIN XXXXXX displayed on your Bluetooth device?"

If the PIN is displayed on your Bluetooth® device, select "Yes" to complete the connecting process.

 
VEHICLE PHONEBOOK

To access the vehicle phonebook:

1. Press the  button on the control panel.

2. Select the "Phonebook" key **4**.

3. Choose the desired entry from the displayed list.

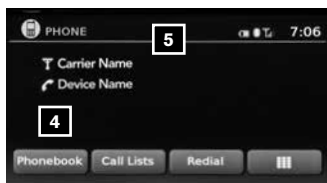

*Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

To view detailed instructional videos regarding these and other features,
please go to www.nissanownersinfo.mobi.

 
SYSTEM GUIDE

MAKING A CALL

1. Press the  button on the instrument panel. The “Phone” menu **5** will appear on the display.
2. Select one of the following options to make a call:
 - “Phonebook”: Select the name from an entry stored in the vehicle's phonebook.
 - “Call Lists”: Select the name from the incoming, outgoing or missed call history.
 - “Redial”: Dial the last outgoing call from the vehicle.
 -  : Input the phone number manually using the keypad displayed on the screen.

RECEIVING A CALL

- To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Select the  icon on the screen.
- To reject the incoming call, either:
 - Press the  button on the steering wheel, or
 - Select the  icon on the screen.
- To end a phone call, either:
 - Press the  button on the steering wheel, or
 - Select the  icon on the screen.

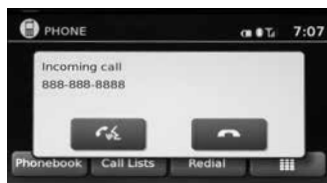

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle driving speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be "grayed-out" or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

- 1 NAV** button – Press to access the functions of the Navigation System.
- 2 MAP** button – Press to display the current location map screen.
- 3 VOL** (volume) control knob – Turn right to increase the volume or left to decrease the volume.
- 4** key – Select to zoom the map in.
- 5** key – Select to zoom the map out.
- 6 APPS** button – Press to access SiriusXM Traffic, MyApps, Settings, SiriusXM Travel Link and Voice Commands.
- 7** button – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **TUNE** knob. Press and hold to turn the display off. Press again to turn the display on.
- 8 BACK** button – Press to return to the previous screen.
- 9 TUNE** control knob – Turn to navigate the items in a list. Press to select a menu item.
- 10** Touch-screen display
- 11** SD-card location – An SD-card with map data must be inserted here for map functions to operate.

For more information, refer to your Navigation System Owner's Manual.



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- Navigation Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the iPhone App Store or Android Google Play Store for download to your smartphone)



To view detailed instructional videos,
go to www.nissanownersinfo.mobi/2015/sentra
or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

Nissan, the Nissan Brand Symbol, Z and Nissan model names are Nissan trademarks.

© 2015 Nissan North America, Inc.

QR15EA 0B17U2

Printing: August 2015 (08)

