 


2015 **TITAN**

QUICK REFERENCE GUIDE



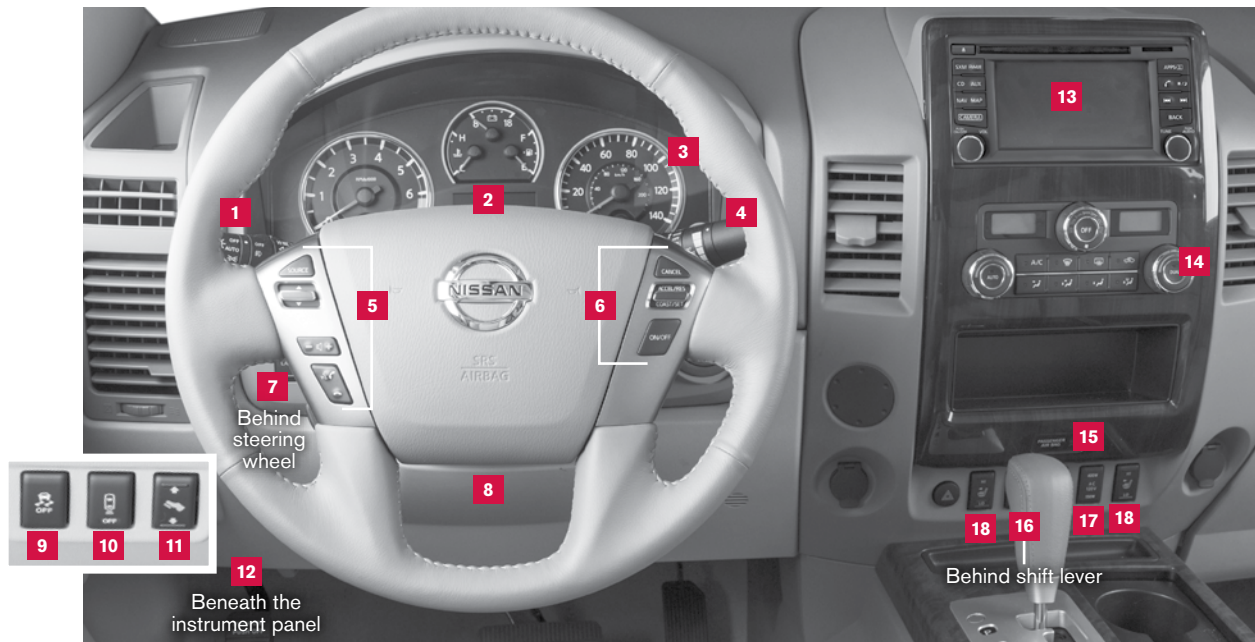

- 1** Headlight and Turn Signal Switch
- 2** Vehicle Information Display
- 3** Low Tire Pressure Warning Light
- 4** Windshield Wiper / Washer Switch
- 5** Steering Wheel Switches For Audio Control* / Bluetooth®

- 6** Cruise Control
- 7** Cargo Lamp Switch*
- 8** Steering Wheel Tilt Adjustment*
- 9** Vehicle Dynamic Control (VDC) Off Switch*
- 10** Rear Sonar System Off Switch*

- 11** Pedal Position Adjustment Switch*
- 12** Hood Release*
- 13** Audio and Navigation System
- 14** Automatic Climate Controls
- 15** Front Passenger Air Bag Status Light*

- 16** Tow Mode Switch*
- 17** Power Inverter Switch
- 18** Heated Seat Switches*

*See your Owner's Manual for information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

SiriusXM Travel Link and SiriusXM Traffic (if so equipped)	2
NissanConnect SM Mobile Apps (if so equipped)	2
USB (Universal Serial Bus) Connection Port/iPod [®] Interface (if so equipped)	3

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS)	4
Loose Fuel Cap	4
Fuel-filler Door	5
Wide Open Door (King Cab models only)	5
Clock Set/Adjustment	5

FIRST DRIVE FEATURES

Remote Keyless Entry System (if so equipped)	6
Opening the Tailgate	6
Power Seat Adjustments (if so equipped)	6
Automatic Drive Positioner (if so equipped)	7
Outside Mirror Control Switch (if so equipped)	7
Starting/Stopping the Engine	7
Headlight Control Switch	8
Windshield Wiper and Washer Switch	9
Automatic Climate Controls (if so equipped)	9
FM/AM/SiriusXM [®] Satellite Radio with CD Player (if so equipped)	11
Cruise Control (if so equipped)	12
Power Outlets	12

SYSTEM GUIDE

Vehicle Information Display (if so equipped)	14
Text Messaging (if so equipped)	14
Bluetooth [®] Hands-free Phone System (if so equipped)	15
▪ System Operating Tips	15
Bluetooth [®] System without Navigation (if so equipped)	16
Bluetooth [®] System with Navigation (if so equipped)	17
Navigation System (if so equipped)	19
HomeLink [®] Universal Transceiver (if so equipped)	20



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.nissanusa.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"**, the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** and the **"Starting and driving (section 5)"** of your Owner's Manual.

NEW SYSTEM FEATURES

SiriusXM TRAVEL LINK* AND SiriusXM TRAFFIC* (if so equipped)

- Your vehicle's Navigation System is equipped with SiriusXM Travel Link and SiriusXM Traffic capabilities.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed when they are approached.



*These features, SiriusXM® Satellite Radio, Travel Link and Traffic, require an active subscription. Multiple subscriptions may be necessary to activate the various features.

For more information, refer to the "**Navigation (section 4)**" and the "**General system information (section 6)**" of your Navigation System Owner's Manual.

NISSANCONNECTSM MOBILE APPS (if so equipped)

- Integrates popular smartphone apps and services into your vehicle.
- The NissanConnectSM App must be downloaded to your smartphone, and you must be enrolled.

FOR SYSTEM WITH NAVIGATION

- iPhone®: Please connect over USB when using an iPhone® with NissanConnectSM Apps.
- Android: Please connect over Bluetooth® when using an Android device with NissanConnectSM Apps.

FOR SYSTEM WITHOUT NAVIGATION

- iPhone®: Please connect over Bluetooth® when using an iPhone® with NissanConnectSM Apps.
- Android: Please connect over Bluetooth® when using an Android device with NissanConnectSM Apps.
- For more information on how to pair your phone and set up NissanConnectSM Mobile Apps, visit: **www.nissanusa.com/connect/support**.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

USB (Universal Serial Bus) CONNECTION PORT/iPod® INTERFACE (if so equipped)

- The USB port **1** is located in the center console under the armrest.
- When a compatible USB memory device or iPod® is plugged into the USB port, compatible audio files stored on the device can be played through the vehicle's audio system and front display.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

 


ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A **CHECK TIRE PRESSURE** warning message will appear in the vehicle information display

1 and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.

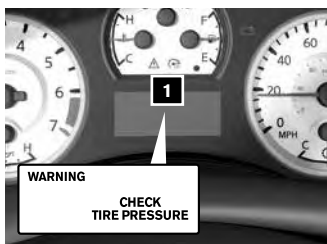

- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **CHECK TIRE PRESSURE** warning message and the low tire pressure warning light will extinguish.
- When the low tire pressure warning light flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 9)" in your Owner's Manual for the location of the Tire and Loading Information label.

For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**" and the "**Maintenance and do-it-yourself (section 8)**" of your Owner's Manual.

 
LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will display in the vehicle information display/odometer **1** when the fuel-filler cap is not tightened correctly.

- To tighten, turn the cap clockwise until a single click is heard.

- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the reset button **2** is pressed for about 1 second.

- If the cap is not properly tightened, the Malfunction Indicator Light  may also illuminate.

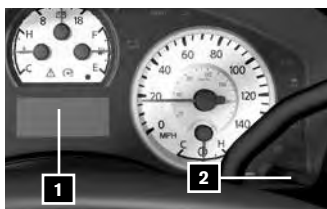

For more information, refer to the "**Instruments and controls (section 2)**" and the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FUEL-FILLER DOOR

- The fuel-filler door is located on the driver's side of the vehicle.
- To open the fuel-filler door, pull the lid open.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.



WIDE OPEN DOOR (King Cab models only)

- Do not open the driver's side Wide Open Door to the full open position while the fuel-filler door is open; only open it as far as the first detent.
- Opening the door to the full open position may damage the fuel-filler door and Wide Open Door.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

CLOCK SET/ADJUSTMENT

 
 
- To adjust the time and the appearance of the clock on the display:

1. Press the **APPS** button **1**.
2. Touch the “Settings” key.
3. Touch the “System” key.
4. Touch the “Clock” key.

- The following settings can be adjusted:

- **Time Format:** The clock can be set to 12 hours or 24 hours.
- **Date Format:** The date can be changed to one of five different formats.
- **Clock Mode:** From here, the clock mode options are:
 - **Manual:** Allows for the option “Set Clock Manually”. Touch this to begin setting the clock manually using the “+” or “-” to adjust the hours, minutes, day, and month up or down.
 - **Time Zone:** Touch the “Time Zone” key **2** to choose from the applicable time zone list and/or touch the “Daylight Savings Time” key to switch between ON and OFF.
 - **Auto:** Automatically sets the clock to the vehicle's current location.

- Press the **BACK** button **3** to return to the previous screen.

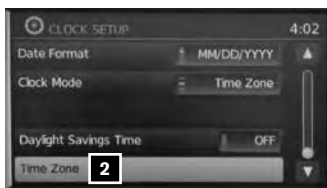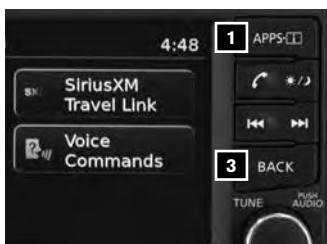

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.

FIRST DRIVE FEATURES

REMOTE KEYLESS ENTRY SYSTEM (if so equipped)

The Remote Keyless Entry System allows you to lock or unlock your vehicle and turn on the interior lights.

- To lock the vehicle, press the **1** button on your key fob.
- To unlock the driver's door, press the **2** button on your key fob.
- Press the **2** button again within 5 seconds and all doors will unlock.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

OPENING THE TAILGATE

 
- Pull the tailgate handle **1** upward and lower the tailgate. Support cables hold the tailgate open.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.



POWER SEAT ADJUSTMENTS (if so equipped)

- To slide the seat forward or backward, push the switch **1** forward or backward.
- To adjust the angle of the seatback, push the switch **2** forward or backward.

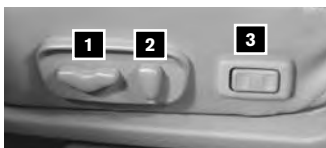

SEAT LIFTER (if so equipped for driver's seat)

- To adjust the angle and height of the seat cushion, push the front or rear end of the switch **1** up or down.

POWER LUMBAR SUPPORT (if so equipped for driver's seat)

- To adjust the lumbar area, push the front or back end of the switch **3**.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner's Manual.

AUTOMATIC DRIVE POSITIONER (if so equipped)

- Two positions for the driver's seat, accelerator and brake pedals and outside mirrors can be stored in the automatic drive positioner memory.
- Follow this procedures to set the memory positions:
 - Confirm the shift lever is in the **P (PARK)** position.
 - Place the ignition switch in the **ON** position.
 - Adjust the driver's seat, accelerator and brake pedals and outside mirrors to the desired positions using the adjusting switches for each feature.
 - Push the **SET** switch and within 5 seconds push the memory switch (**1** or **2**) for at least 1 second.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds.
 - The driver's seat, accelerator and brake pedals and outside mirror positions are now set to your preferences.
- These memorized positions can also be linked to your NISSAN Intelligent Key®. To link a memorized position to your NISSAN Intelligent Key, press the unlock button on the key fob after completing the previous step.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

OUTSIDE MIRROR CONTROL SWITCH (if so equipped)

- The outside mirror control switch is located on the driver's side door panel.
- To select the left or right mirror, move the switch **1**.
- Adjust each mirror to the desired position using the switch **2**.
- To prevent accidentally moving the mirror, move the switch **1** to the center (neutral) position.



POWER FOLDING OUTSIDE MIRRORS (if so equipped)

- To open or close the mirrors, push the switch **3**.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

STARTING/STOPPING THE ENGINE

- Depress the brake pedal.
- Move the shift lever to the **P (PARK)** position.
- Turn the ignition switch to the **START** position.

TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position, apply the parking brake and turn the ignition switch to the **LOCK** position.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FIRST DRIVE FEATURES

 
HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.


AUTOLIGHT SYSTEM (if so equipped)

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then turn the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  position **1** or  position **2**.

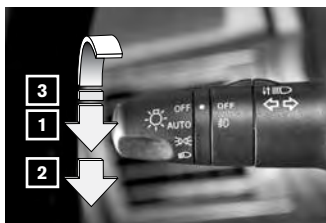


HIGH BEAM SELECT

 - Push the headlight control switch forward **4** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.

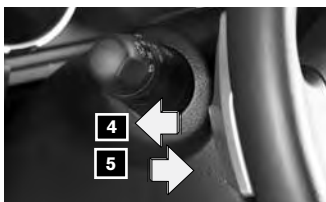

FOG LIGHT SWITCH (if so equipped)

 - The headlights must be on and the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **6** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

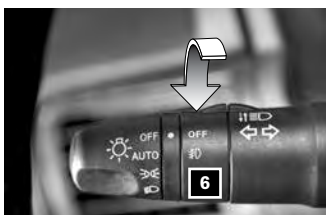

LANE CHANGE SIGNAL

 
- Move the lever up or down until the turn signal begins to flash, but the lever does not latch, to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash, but the lever does not latch, and release the lever. The turn signal will automatically flash 3 times.
- Choose the appropriate method to signal a lane change based on the road and traffic conditions.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



WINDSHIELD WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:

- 1 Mist (MIST)** - One sweep operation of the wipers.
- 2 Intermittent (INT)** - Wipers operate intermittently. The intermittent speed can be adjusted by twisting the time control ring **3** to increase or decrease wiper speed.
- 3**
- 4 Low (LO)** - Wipers operate at a continuous low-speed.
- 5 High (HI)** - Wipers operate at a continuous high-speed.
- 6 Washer**  - Pull the lever toward you to activate the washer. The wipers will operate several times.

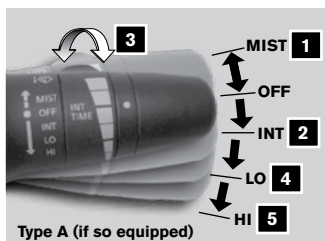

  For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

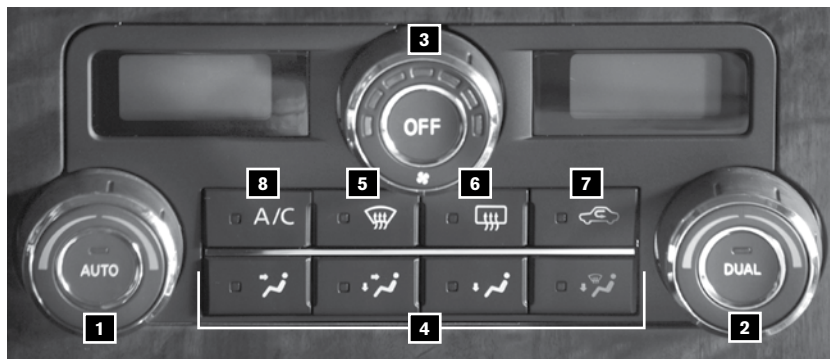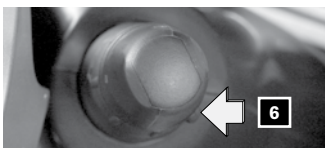

AUTOMATIC CLIMATE CONTROLS (if so equipped)

1 AUTO BUTTON/DRIVER’S SIDE TEMPERATURE CONTROL DIAL

- The auto mode may be used year-round. Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver’s side temperature control dial left for cooler air or right for warmer air.

FIRST DRIVE FEATURES

2 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

3 FAN SPEED CONTROL DIAL/OFF BUTTON

- Turn the dial to the left to decrease fan speed or to the right to increase fan speed.
- Push the button to turn the system off.

4 AIR FLOW CONTROL BUTTONS

- Press one of the air flow control buttons to manually control air flow.



Air flows from the center and side vents.



Air flows from the center, side and foot vents.



Air flows mainly from the foot vents.



Air flows from the defroster and foot vents.

5 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front window defroster button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Set the temperature control dial **1** and the fan speed control dial **3** to their maximum settings.

6 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER BUTTON

- Push the rear window defroster button  to turn the system on or off.
- The rear window defroster automatically turns off after approximately 15 minutes.

7 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more effectively.
- Press the air recirculation button  again to turn air recirculation off. This allows outside air to be drawn into the passenger compartment to prevent fogging in defroster, floor or defroster/floor modes.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot vent mode .

8 A/C BUTTON

- Press the **A/C** button to manually turn the A/C on or off.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.



FM/AM/SiriusXM®* SATELLITE RADIO WITH CD PLAYER (if so equipped)

1 ON-OFF BUTTON/VOL (volume) CONTROL KNOB

- To turn the system on or off, press the **ON-OFF** button.
- To increase or decrease the volume, turn the **VOL** (volume) control knob right or left.

2 AUDIO BUTTON/TUNE CONTROL KNOB

- Press the **AUDIO** button to go to the audio settings screen.
- To manually tune the radio, turn the **TUNE** knob left or right.

3 SEEK BUTTONS

- To tune and stop at the previous or next broadcast station, press the seek buttons ◀◀ or ▶▶.
- For satellite radio, to switch to the first channel of the previous or next category, press the seek buttons ◀◀ or ▶▶.
- To change tracks on a CD, press the seek buttons ◀◀ or ▶▶.
- To rewind or fast forward a track on a CD, press and hold the seek buttons ◀◀ or ▶▶.

4 STATION MEMORY KEYS

- Twelve stations can be set for the FM band, 6 for the AM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **5** or **SXM** button **6** then tune to the desired AM, FM or satellite radio station.
- Now select and hold the desired station memory key (**1-6**) until a chime is heard and the preset number is updated on the display. Programing is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then select the corresponding station memory key (**1-6**).

*SiriusXM® Satellite Radio is only available on vehicles equipped with an optional satellite radio subscription service.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

FIRST DRIVE FEATURES

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **1**. The **CRUISE** indicator light in the vehicle information display will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** and release. The **SET** indicator light in the vehicle information display will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4**.
- To turn off cruise control, push the **ON/OFF** switch **1**. Both the **CRUISE** indicator light and **SET** indicator light in the vehicle information display will extinguish.

 


For more information, refer to the “Starting and driving (section 5)” of your Owner’s Manual.

POWER OUTLETS

12V OUTLETS

- The 12 volt power outlets are not powered with the key off.
- The 12 volt power outlets are for powering electrical accessories such as cellular telephones.
- The power outlets located on the driver’s side of the instrument panel **1** and in the center console armrest **2** (if so equipped) are powered directly by the vehicle’s battery.
- The power outlets located on the passenger’s side of the instrument panel **3** and in the 2nd row **4** (if so equipped) are powered only when the ignition switch is placed in the **ACC** or **ON** position.
- To use a power outlet, open the cap.

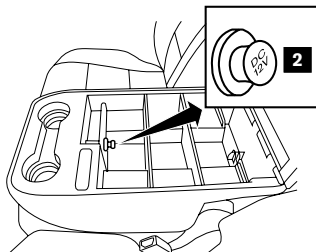

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

120V OUTLET (if so equipped)

- 120 volt power outlets are not powered directly to the battery and require the key to be on and the power inverter switch **7** is depressed.
- 400W mode is only available with the transmission in the **P (PARK)** position.
- The 120 volt power outlets are for powering electrical devices up to 120 volts.
- The power outlets located in the truck box **5** and the center console **6** are powered directly by the vehicle's battery.
- For devices that require power of 120V or more, the vehicle must be placed in the **P (PARK)** position.
- For powering devices that exceed 120V, first activate the power inverter switch **7**.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner's Manual.

SYSTEM GUIDE

VEHICLE INFORMATION DISPLAY (if so equipped)

- When the **INFO** button **1** is pressed, the following modes will appear in the vehicle information display **2**:
 - **MPG** – Displays the instant fuel economy.
 - **RANGE** – Displays the estimated distance the vehicle can be driven before refueling.
 - **WARNING** – Displays when a warning is present.
- Turn the **INFO** button **1** to highlight the desired menu within the selected mode.
- Press the **INFO** button **1** to enter the highlighted menu.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

TEXT MESSAGING* (if so equipped)

- This system allows for sending and receiving text messages through the vehicle interface.
- Using predefined or custom messages, send a text to a name or phone number stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display screen.
- Text messages have the option of being read aloud. Many phones require special permission to enable Text Messaging. Check the phone’s screen during Bluetooth pairing or phone Bluetooth Settings to enable messages or notifications.
- Text messages are only displayed on the control panel if the vehicle speed is less than 5 mph (8 km/h).
- Some phones do not support sending or reading messages over Bluetooth Message Access Profile (MAP). See your cellular phone’s Owner’s Manual for details and also visit www.nissanusa.com/bluetooth.



*Laws in some jurisdictions may restrict the use of “Text-to-Speech.” Some of the applications and features, such as social networking and texting may also be restricted. Check local regulations for any requirements before using these features.

 
For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

- Press the  button to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button and after the tone, say "Call Redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To cancel a voice recognition session, say "Cancel" or "Quit", or press and hold the  button for 5 seconds.
- To increase or decrease the volume of the voice prompts, push the volume control switches **+** or **-** on the steering wheel or turn the control dial on the audio system while the audio system is responding.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit **www.nissanusa.com/bluetooth**.

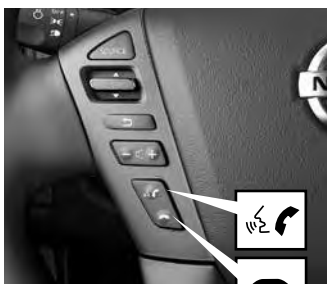

*Some jurisdictions prohibit the use of cellular telephones while driving.

SYSTEM GUIDE

BLUETOOTH® SYSTEM WITHOUT NAVIGATION* (if so equipped)

CONNECTING PROCEDURE

The vehicle must be stationary when connecting the phone.

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say: "Add phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.
3. Initiate connecting from the phone:
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and compatible phones, please visit **www.nissanusa.com/bluetooth**.
 - When prompted, confirm that the PIN on the display matches the PIN shown on the handset. If your handset does not support Secure Simple Pairing and requests you to input a PIN, enter "1234" from the handset.

PHONEBOOK SETUP

- The phonebook stores up to 1,000 entries for each phone paired with the system.
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.

MAKING A CALL FROM THE PHONEBOOK

1. Press the  button.
2. After waiting for the tone, say "Call".
3. After the next tone, speak the name of a phonebook entry. For example, "Michael Smith".
4. Confirm the correct name is recognized by saying "Dial" after the tone.

MAKING A CALL BY PHONE NUMBER

1. Press the  button. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say: "Phone Number". The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial". The system acknowledges the command and makes the call.

*Some jurisdictions prohibit the use of cellular telephones while driving.

To view detailed instructional videos regarding these and other features, please go to **www.nissanownersinfo.mobi**.

RECEIVING/ENDING A CALL

 
- When you receive a phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button.
- To reject the call, press the  button.
- To hang-up the phone at the end of a call or to disconnect during call placement, press the  button.

BLUETOOTH® SYSTEM WITH NAVIGATION* (if so equipped)

- Send predefined or custom text messages** through your vehicle's Bluetooth® system.
- Receive texts through your vehicle's Bluetooth® system that can be read to you.
- Bluetooth® Streaming Audio allows you to use a compatible Bluetooth® phone to play audio files on your device. Your compatible cellular phone can be connected to the vehicle's audio system, allowing audio files to play through the vehicle's speakers.

CONNECTING PROCEDURE

1. Press the **APPS**  button on the control panel.
2. Touch the "Settings" key **1**.

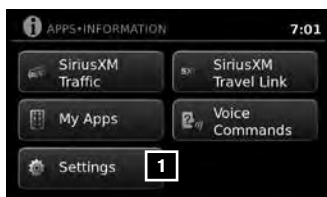

3. Touch the "Phone & Bluetooth" key **2**.



4. Touch the "Connect New Device" key **3**.
5. Initiate the connecting process from the handset.
The system will display the message:

"Is PIN XXXXXX displayed on your Bluetooth device?"

If the PIN is displayed on your Bluetooth® device, select "Yes" to complete the connecting process.



*Some jurisdictions prohibit the use of cellular telephones while driving.

**Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

SYSTEM GUIDE

VEHICLE PHONEBOOK

To access the vehicle phonebook:

1. Press the  button on the control panel.
2. Select the "Phonebook" key .
3. Choose the desired entry from the displayed list.

 


MAKING A CALL

1. Press the  button on the control panel. The "Phone" screen  will appear on the display.
2. Select one of the following options to make a call:
 - "Phonebook": Select the name from an entry stored in the vehicle phonebook.
 - "Call Lists": Select the name from the incoming, outgoing or missed call history.
 - "Redial": Dial the last outgoing call from the vehicle.
 -  — Input the phone number manually using the keypad displayed on the screen.

RECEIVING/ENDING A CALL

- To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Select the  icon on the screen.
- To reject the incoming call, either:
 - Press the  button on the steering wheel, or
 - Select the  icon on the screen.
- To end a phone call, either:
 - Press the  button on the steering wheel, or
 - Select the  icon on the screen.

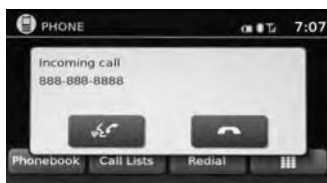

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle driving speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be "grayed-out" or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

- 1 NAV button** – Press to access the functions of the Navigation System.
- 2 MAP button** – Press to display the current location map screen.
- 3 VOL knob** – Turn right to increase the volume or left to decrease the volume.
- 4** key – Select to zoom the map in.
- 5** key – Select to zoom the map out.
- 6 APPS** button – Press to access SiriusXM Traffic, MyApps, Settings, SiriusXM Travel Link and Voice Commands.
- 7** button – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **TUNE** knob. Press and hold to turn the display off. Press again to turn the display on.
- 8 BACK button** – Press to return to the previous screen.
- 9 TUNE knob** – Turn to navigate the items in a list. Press to select a menu item.
- 10** Touch-screen display
- 11** SD-card location - An SD-card with map data must be inserted here for map functions to operate.

For more information, refer to your Navigation System Owner's Manual.

To view detailed instructional videos regarding these and other features,
please go to www.nissanownersinfo.mobi.

SYSTEM GUIDE



HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to 3 different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programming is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink button, press and release the learn or smart button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to 3 times to complete the programming process. HomeLink should now activate your device.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- Navigation System Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- **www.NissanUSA.com/bluetooth**
- **www.NissanUSA.com/connect**
- **www.youtube.com/user/NissanUSA**
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the iPhone App Store or Android Google Play Store for download to your smartphone)



To view detailed instructional videos,
go to **www.nissanownersinfo.mobi/2015/titan**
or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at **<https://owners.nissanusa.com/owners/navigation/manualsGuide>**. If you have questions concerning any information in the Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

Nissan, the Nissan Brand Symbol, Z and Nissan model names are Nissan trademarks.

© 2015 Nissan North America, Inc.

QR15EA 0A60U1

Printing: May 2015 (23)

