

CAR MULTIMEDIA SYSTEM

USER'S MANUAL

SEDONA



The Power to Surprise

Thank you for purchasing this multimedia system.

This user's manual explains how to use the Kia Motor multimedia system.

Before using the product, read the contents of this user's manual carefully and use this product safely.

- The screens shown in this manual may differ with the actual screens of the product.
- The design and specification of this product may change without prior notification for product improvement.
- When transferring the vehicle to another individual, include this user's manual so that the next driver can continue its use.



All Map Database cannot be copied without permission.

Important Notice: This is protected by U.S. copyright laws. All rights not expressly granted are reserved.

You may not otherwise reproduce, modify, and distribute the content without HYUNDAI MnSoft, Inc's prior written consent.

Precaution for safe usage

- Driving while distracted can result in a loss of vehicle control, that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.
- Do not operate the multimedia system while driving.
- Do not disassemble, assemble, or modify the multimedia system.
- Do not watch the screen for prolonged periods of time while driving.
- Set the volume to a level which allows the driver to be aware of external conditions.
- Do not operate the multimedia system for prolonged periods of time with the vehicle ignition in ACC. Such operations may lead to battery discharge.
- Be cautious not to spill water or introduce foreign objects into the device.
- Do not cause severe shock to the device. Direct pressure onto the front side of the monitor may cause damage to the LCD or touch panel.
- In case of product malfunction, please contact your place of purchase or service center.
- When cleaning the touch screen, make sure to turn off the device and use a dry and smooth cloth. Never use tough materials, chemical cloths, or solvents (alcohol, ammonia, benzene, thinners, etc.) as such materials may damage the device panel or cause color and quality deterioration.

- SiriusXM service requires a subscription, sold separately, after 3-month trial included with vehicle purchase. If you decide to continue your SiriusXM service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call Sirius XM at 1-866-635-2349 to cancel. See our Customer Agreement for complete terms at www.siriusxm.com. Programming subject to change. Sirius satellite service is available only to those at least 18 and older in the 48 contiguous USA, D.C., and PR (with coverage limitations). Traffic information not available in all markets. See siriusxm.com/traffic for details. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.

WARNING

- Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation

of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

- Infinity is a trademark of Harman International Industries, Inc.
- At launch, the Apple iPhone® will be the only UVO eServices compatible device. iPhone® is a registered trademark of Apple Inc. Apple iOS6 compatibility expected early 2013. Additional compatible devices expected late 2013.
- App Store is a service mark of Apple Inc. No charge for the UVO eServices app. App runs on your smartphone cellular data service. Normal data rates will apply.
- HD Radio™ and the HD Radio™ logo are proprietary trademarks of iBiquity Digital Corporation.

- 24-hour Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth within the cellular service coverage area is required.
- Vehicle Diagnostics do not take the place of regularly scheduled maintenance. Feature checks powertrain, chassis, and airbag systems only. For factory-recommended maintenance schedule, see the Maintenance Feature of UVO eServices or the Owner's Manual.
- 911 Connect activates after an airbag deployment. Feature requires a connected mobile phone via Bluetooth. Dependant on cellular service coverage.
- The rear-camera display is not a substitute for proper and safe backing-up procedures. The rear-camera display may not display every object behind the vehicle. Always drive safely and use caution when backing up.

Read the following safety cautions for your safety

Before using the product, read the contents of this user's manual carefully and use this product safely.

- ※ The design and specifications of this product may change without prior notification for product and service improvement. The actual features in the vehicle may differ from the illustrations. For more accurate information about the vehicle, please refer to the catalogue.
- ※ For more information on open licenses and legal notices, refer to the website below.
http://www.mobiszone.co.kr/front/mall/jsp/manual/avn_download_center_manual.jsp

Notations used within this User's Manual

WARNING

- Failure to observe the instructions within this category could result in damage to the vehicle.
-

CAUTION

- Information on matters that could potentially lead to injury or vehicle damage/malfunction Information that could lead to higher user safety
-

Information

- Information and tips that provide additional user convenience in using the product
-

NOTICE

- Information on specific features that facilitate proper product use and functional understanding
 - Information on terminology used within this manual
-

Table of Contents

1. Basic

Warnings and Cautions	1-2
Key Product Features.....	1-4
Component Names and Functions	1-5
Head Unit.....	1-5
Steering Wheel Remote Controller.....	1-7
Starting the System for the First Time	1-9
Turning the System On/Off	1-9
System Reset	1-9
Battery Warning Message	1-10
Restrictions on Features for Safety Measures	1-10
Home Screen	1-11
On-Screen Touch Controls	1-12

2. About Using AV

FM/AM Mode	2-2
Accessing FM/AM Mode	2-2
About HD Radio™ Technology ...	2-4
Basic Mode Screen (HD Radio™ reception ON)	2-5
SiriusXM™ Mode	2-5
SiriusXM™ Mode Hard Key Controls ...	2-5
SiriusXM™ Mode Display Controls ...	2-6
Selecting through Channel/Category List ...	2-8
Direct Tune	2-8
Viewing Menu	2-8
Media Mode	2-10
Starting Mode	2-10
About Disc	2-11
Precautions upon Handling Discs	2-11
Supported Disc Formats	2-12
Disc/Content Format Compatibility	2-12
Before Playing an MP3 Disc	2-14
CD Mode.....	2-16
Basic Mode Screen	2-16
Using MP3 Mode	2-19

Basic Mode Screen	2-19
About USB.....	2-22
Before Playing a USB MP3.....	2-22
Supported Image Specifications.....	2-24
USB Music	2-25
USB Image	2-28
About iPod	2-30
Using iPod Devices	2-30
iPod	2-34
AUX.....	2-37
Connecting an External Device	2-37
Bluetooth® Audio Mode	2-38
Bluetooth Audio	2-38
Bluetooth Connections Settings	2-39
My Music.....	2-40

3. Using Bluetooth

Before Using the Bluetooth®

Handsfree.....3-2

What is *Bluetooth*® Wireless Technology? ...3-2

Precautions for Safe Driving 3-2

CAUTIONS upon Connecting Bluetooth®

Phone 3-3

Bluetooth Connection.....3-4

Pairing a New Device 3-4

Connecting Bluetooth Devices 3-4

Disconnecting Bluetooth Devices 3-5

Deleting Bluetooth Devices..... 3-5

Bluetooth Phone3-6

Phone Status Icons 3-6

Dial 3-7

Accept/Reject Call 3-7

Using the Menu During a Phone Call... 3-8

Call History 3-9

Contacts3-10

Favorites3-11

4. UVO eServices

The 911 Connect feature may not operate in the following situations.. 4-2

About UVO eServices4-4

Before using UVO eServices.....4-5

Connecting Bluetooth.....4-5

Pair a device from Bluetooth-enabled phone4-5

Connecting to smartphone via USB.....4-6

Activating UVO eServices 4-6

911 Connect4-7

911 Connect 4-7

Initiating a 911 Call 4-7

Roadside Assist.....4-8

Roadside Assist 4-8

Vehicle Diagnostics.....4-9

Conducting Vehicle Diagnostics 4-9

Schedule Service4-10

Send Report4-10

Scheduled Diagnostics4-11

Automatic Diagnostics.....4-12

My Car Zone..... 4-12

Curfew Limit Alert4-13

Speed Alert4-14

Geo Fence Alert4-14

Parking Minder4-15

Sending Parking Location4-15

My POIs 4-16

Sending Points of Interest to Your Navigation System4-16

eServices Guide 4-16

eServices Guide4-16

UVO eServices Settings4-16

5. Navigation

Basic Features 5-2

Operating Navigation Screen	5-2
Changing Map View	5-3
Voice Guidance Volume On/Off	5-3
Zoom In /Zoom Out.....	5-3
Map Scale	5-4
Menu	5-4
Route Option	5-4
Detour	5-5
Navigation Volume	5-5
Nearby POIs	5-6

Search..... 5-14

Places	5-14
Address	5-15
Route Setting	5-24
Route Guidance	5-27

Route..... 5-29

Canceling Route	5-29
Display Route Information	5-29
Route Overview	5-30
Route Preview	5-30

Editing Route	5-31
Route Options	5-32
Avoid Street	5-32

Navigation Settings..... 5-33

General	5-33
Display	5-33
Guidance	5-34
Route	5-34
Traffic	5-34

Troubleshooting..... 5-35

6. Voice Recognition

What is Voice Recognition?6-2

Precautions Required for Successful Voice Recognition...6-2

Starting/Ending and Setting Voice Recognition6-3

Starting Voice Recognition	6-3
Ending Voice Recognition	6-3
Quick Run of Voice Recognition (Manual Mode)	6-3
Extending the Standby Time	6-4
Skipping Prompt Messages	6-5
Adjusting Voice Recognition Volume ...	6-5

Voice Recognition Screen

Overview6-6

Start Screen.....	6-6
Help Display.....	6-6
Instructions for Using Voice Recognition...	6-7

Voice Commands.....6-8

Types of Commands	6-8
Call Commands	6-8
Navigation Commands	6-9
Radio Commands	6-11

Media Commands	6-12
UVO eServices Commands List (Optional)	6-15
Other Commands List (Commands used in List / Help)	6-15
“Find the Nearest <Category>” List ...	6-16
UVO Voice Local Search	6-21
What is UVO Voice Local Search?	6-21
Starting UVO Voice Local Search	6-21
Siri Eyes Free.....	6-22
How to start Siri	6-22
How to use Siri.....	6-22

7. Info

Start Up.....	7-2
Pandora Radio Mode	7-2
Pandora Radio Mode	7-2
Pandora Radio Mode Screen Controls ...	7-3
Download Center	7-6
Apps List	7-6
My Apps	7-7
SiriusXM™ Data	7-8
About SiriusXM™ Data Service	7-8
Accessing SiriusXM™ Data	7-8
SiriusXM™ Weather Announcement... ..	7-8
SiriusXM™ Traffic Information.....	7-9
SiriusXM™ Fuel Price Information.....	7-10
SiriusXM™ Stock Information.....	7-11
SiriusXM™ Sports Information	7-12
SiriusXM™ Movie Information	7-14

8. Other Features

Climate Mode.....	8-2
Operating Climate Mode.....	8-2
Basic Mode Screen.....	8-2
Camera (Optional).....	8-4
About Rear Detection Camera	8-4
AVM (Around View Monitor)	8-4
Front AVM	8-5
Rear AVM	8-5
Parking Guidance Settings	8-6

9. Setup

Setup	9-2
Navigation Settings.....	9-3
Sound Settings.....	9-3
Display Settings	9-4
Phone Settings.....	9-4
Phone Settings	9-4
Bluetooth Connection Settings	9-4
Auto Connection Priority	9-6
Ringtone	9-6
System Bluetooth Information.....	9-7
UVO eServices Settings	9-8
911 Connect	9-8
Parking Minder.....	9-9
My Car Zone	9-9
Scheduled Diagnostics	9-12
Trip Info Sync Reminder	9-12
Voice Recognition Settings	9-13
Clock Settings	9-13

Wi-Fi Settings	9-13
Wi-Fi Settings Screen	9-13
How to Connect to a Network.....	9-14
Language Settings	9-14
Keyboard Settings	9-14
Downloaded Apps Settings	9-15
Screen Saver Settings.....	9-15
System Info	9-15
System Update	9-16

10. Appendix

Product Specification	10-2
Before Thinking the Product Has Malfunctioned	10-4
Troubleshooting.....	10-5
FAQ	10-7
About Pairing Mobile Phones	10-7
About Making/Answering Phone Calls ...	10-8
About <i>Bluetooth</i> ® Wireless Technology/ Head Unit Use Environment	10-8



CAUTIONS upon Using SD Cards

- **Ejecting and Inserting SD Cards**

- Ejecting and inserting SD cards while the multimedia system is operating may result in SD Card or System errors. To eject or insert the SD card, first turn off the multimedia system and the vehicle ignition.
- Eject/insert SD cards only to update the multimedia system with a new version.

- **Usage of SD Cards**

- The SD Card is formatted to include only Map and new system update files.
- The SD Card cannot be used to save and play Music.
- Do not add, delete, or format files within the SD Card.

iPod®

iPod® is a registered trademark of Apple Inc.

***Bluetooth®* Wireless Technology**

The *Bluetooth®* Wireless Technology word mark and logos are registered trademarks owned by *Bluetooth®* Wireless Technology SIG, Inc. and any use of such marks by Kia is under license.

A *Bluetooth®* Wireless Technology enabled cell phone is required to use *Bluetooth®* Wireless Technology. *Bluetooth®* Wireless Technology phone compatibility can be checked by visiting www.kia.com/us/bluetooth.

HD Radio™ Technology

HD Radio™ Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents.

HD Radio™ and the HD, HD Radio, and "Arc" logos are proprietary trademarks of iBiquity Digital Corp.



01

part.1 Basic

Warnings and Cautions

Key Product Features

Component Names and Functions

Starting the System for the First Time

Basic

Safety Warnings

- Even when receiving route guidance from the Multimedia system, please abide by actual traffic and road regulations. Following only the Navigation route guidance may lead to violations of actual traffic and road regulations and lead to traffic accidents.
- Do not stare at the screen while driving. Staring at the screen for prolonged periods of time could lead to traffic accidents.
- Do not operate the Multimedia system while driving, such as entering POIs or conducting route searches. Such acts could lead to accidents, fire, or electric shock. Park the vehicle before operating the device.
- Do not disassemble, assemble, or modify the Multimedia system. Such acts could result in accidents, fire, or electric shock.
- Heed caution not to spill water or introduce foreign objects into the device. Such acts could lead to smoke, fire, or product malfunction.
- If you use phone related functions while driving, you will find it difficult to concentrate on operating the vehicle and the current traffic conditions, so the possibility of an accident may increase. Please use phone related functions only when parked.
- Please refrain from use if the screen is blank or no sound can be heard as these signs may indicate product malfunction. Continued use in such conditions could lead to accidents (fires, electric shock) or product malfunctions.
- Do not touch the antenna during thunder or lightening as such acts may lead to lightning induced electric shock.
- Do not stop or park in parking-restricted areas to operate the product. Such acts could lead to traffic accidents.
- For most Audio and multimedia modes, the display will not operate when the vehicle is in motion. For your safety, first park the vehicle to watch or view the screen. (The screen will only operate when the parking brake is ON for manual transmission vehicles and when the parking brake is ON or the gearshift is in the P (PARK) position for automatic.)
- Some functions other than the one mentioned above cannot be used while driving. These functions operate only when the vehicle is parked.

Safety Cautions

Pay attention to traffic conditions while driving.

- In some instances, the navigation may provide guidance through re-stricted areas.
- Operating the device while driving could lead to accidents due to a lack of attention to external surroundings. First park the vehicle before operating the device. In addition, the touch screen may not work for some functions when the vehicle is in motion. The touch screen feature will be supported once the vehicle has stopped.
- Adjust the volume to levels that allow the driver to hear sounds from outside of the vehicle. Driving in a state where external sounds cannot be heard may lead to accidents.
- Pay attention to the volume setting when turning the device on. A sudden output of extreme volume upon turning the device on could lead to hearing impairment. (Adjust the volume to a suitable levels before turning off the device.)
- If you want to change the position of device installation, please inquire with your place of purchase or service maintenance center. Technical expertise is required to install or disassemble the device.
- Turn on the car ignition before using this device. Do not operate the Navigation system for long periods of time with the ignition turned off as such operations may lead to battery discharge.
- Upon using the Multimedia system for more than 10 minutes with the car engine turned off, the following warning will be displayed. After 10 minutes, the warning will be displayed for 5 seconds every 1 minute.
- Do not subject the device to severe shock or impact. Direct pressure onto the front side of the monitor may cause damage to the LCD or touch screen.
- When cleaning the device, make sure to turn off the device and use a dry and smooth cloth. Never use tough materials, chemical cloths, or solvents(alcohol, benzene, thinners, etc.) as such materials may damage the device panel or cause color/quality deterioration. When experiencing product malfunctions, inquire with your place of purchase or service maintenance center.
- Prevent caustic solutions such as perfume and cosmetic oil from contacting the dashboard because they may cause damage or discoloration.

Key Product Features

This device is a Multimedia system equipped with a multifunctional disc player that supports Radio (FM, AM), HD Radio™ technology, SiriusXM™, Audio CD, MP3, USB, iPod, Audio AUX, Bluetooth Audio and My Music features. The WIDE VGA LCD provides a high quality resolution while the powerful and rich sound system adds to the driving enjoyment.

Display	Wide TFT-LCD Display - Provides high quality video through a Wide TFT-LCD Display using an LED Back Light. - Touch screen for maximum user convenience.
Radio	Digital Tuner Feature - Digital Tuner using PPL method that supports memory of 12 broadcast stations for each AM and FM modes. Radio broadcast station name - Displays broadcast station names for key locations. HD Radio™/Satellite Radio feature - Supports HD Radio™ reception and Satellite Radio (SiriusXM™).

Multimedia Player	Support for various Media Formats - Support for various media formats, including Radio, Audio CD, MP3, USB, iPod, AUX and Bluetooth Audio Streaming modes My Music - Supports copying of music stored within USB devices into My Music (internal memory) mode
Navigation	Voice Guidance - Voice route guidance to safely and conveniently reach set destinations - Various map scales that enables drivers to accurately view map and surrounding areas Automatic Correction for Current Location - Automatically corrects current position using map matching and GPS information.
Miscellaneous	Bluetooth® Wireless Technology - Convenient use of Bluetooth® Handsfree by using buttons within the steering wheel remote controller Digital Screen Control Features - Easy control of features through touch screen options Steering Wheel Remote Controller - Control over audio features, voice recognition and Bluetooth® through the steering wheel remote controller for maximum convenience

Component Names and Functions

Head Unit



Name		Description
1	RADIO	Converts to FM/AM/SiriusXM™ mode Each time the key is pressed, the mode is changed in order of FM → AM → SiriusXM™ → FM
2	MEDIA	Converts to MEDIA mode - If the media is not connected or the CD player is not available for Model, MEDIA mode will not be activated. - Press this key to move to the last mode that you accessed in MEDIA Mode. Press it once again to display the screen where you can select a MEDIA mode.
3	UVO	Displays the UVO mode
4	SEEK TRACK	When key is pressed shortly. (under 0.8 seconds) - FM/AM mode : plays previous/next frequency - SiriusXM™ mode : plays the previous/next channel - MEDIA (Disc/USB/iPod/My Music) mode : changes the track, file or chapter (except USB Image and AUX) When key is pressed and held. (over 0.8 seconds) - FM/AM mode : continuously changes the frequency until the key is released - SiriusXM™ mode : continuously changes the channel until the key is released and plays the current channel - MEDIA (Disc/USB/iPod/My Music) mode : rewinds or fastforwards the track or file (except USB Image, Bluetooth Audio and AUX)
5	MAP VOICE	Displays the map for the current position
6	NAVI	Takes you to the menu screen where you can find your destination and set the route.

Component Names and Functions | 1-5

Head Unit



Name		Description
7	PHONE	Takes user to phone screen
8	INFO	Displays the information mode
9	SETUP	Displays the Setup mode
10	POWER/ VOL	- When power is off, press to turn power on - When power is on, press and hold (over 0.8 seconds) to turn power off - When power is on, press shortly (under 0.8 seconds) to turn Audio off - Turn left/right to control volume
11	TUNE	- FM/AM mode : changes the frequency - SiriusXM™ mode : changes the channel - MEDIA (Disc/USB/iPod/My Music) mode : changes the track, file or title (except USB Image, Bluetooth Audio and AUX)
12	RESET	Resets the system settings. (Preset radio channels and other data will not be deleted.)
13	SD MAP	SD Card insert slot

Steering Wheel Remote Controller



Name	Description
1 	When pressed shortly. (under 0.8 seconds) - Activates voice recognition When pressed and held. (over 0.8 seconds) - Ends voice recognition - Activates Siri Eyes Free
2 	- Each time this key is pressed, mode is changed in order of FM → AM → SiriusXM™ → Disc → USB Music or iPod → AUX → Bluetooth Audio → My Music - If the media is not connected, corresponding modes will be disabled - Press and hold the key (over 0.8 seconds) to turn the Audio system on/off - When power is off, press the key to turn power back on

Name	Description
3  	Controls the volume
4  	When keys are pressed shortly. (under 0.8 seconds) - FM/AM mode : searches broadcast frequencies saved to Presets - SiriusXM™ mode : searches broadcast channels saved to Presets - MEDIA(Disc/USB/iPod/My Music) mode : changes the track, file or chapter (except USB Image, AUX) When keys are pressed and held. (over 0.8 seconds) - FM/AM Mode : Automatically searches broadcast frequencies - SiriusXM™ mode : automatically searches broadcast channels - MEDIA(Disc/USB/iPod/My Music) mode : Quickly looks up songs (excluding USB images, AUX, and Bluetooth audio files)

Component Names and Functions | 1-7

Steering Wheel Remote Controller



Name		Description
5		When pressed shortly. (under 1.2 seconds) • When pressed in the dial screen, makes a call • When pressed in the incoming call screen, answers the call • When pressed during call waiting, switches to waiting call (Call Waiting)
		When pressed and held. (over 1.2 seconds) • When pressed in the Bluetooth® Handsfree, redials the last call • When pressed during a Bluetooth® Handsfree call, switches call back to mobile phone (Private) • When pressed while calling on the mobile phone, switches call back to Bluetooth® Handsfree (Operates only when Bluetooth® Handsfree is connected)
6		• When pressed during a call, ends the phone call • When pressed in the incoming call screen, rejects the call

※The actual feature in the vehicle may differ from the illustration.

Starting the System for the First Time

Turning the System On/Off

Press the engine start button or set the ignition key to On or ACC. Each time you turn on the system, a boot logo and safety warning will appear.



Pressing the power key on the head unit will display the user agreement screen. To change the system language between Korean and English, French, Spanish press the Change **Language** button.

NOTICE

- Cannot operate the system while it is booting up. It may take some time for all of features of the system, particularly the voice recognition system, to be ready for use.

Pressing and holding the power key on the head unit will turn off the system.

You can change Screen Saver Settings in Setup to display a clock or another chosen image on the Screen Saver.


Information

- If you turn off the system during a phone call using the hands-free feature, then the call will automatically switch to your mobile phone.

NOTICE

- Check the volume when turning on the system. Before turning on the system, adjust the volume to a reasonable level.

System Reset

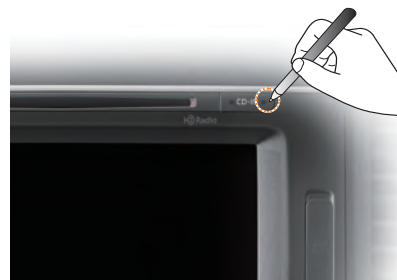

The System Reset function restores the system when it is malfunctioning. Press and hold the **RESET** key for a second or


longer. (It is recommended that you press the **RESET** key using a tool, such as a pin or a clip.)

NOTICE

- Resetting the system restores all existing settings and configurations (e.g. volume, display, etc.) back to their factory defaults. This is not a system defect. It occurs because the information stored in memory is reset back to factory settings as a normal process of resetting the system.

Battery Warning Message

Always use the system while the car engine is running. If you turn on the system while the engine is off, a battery warning message will appear. When the engine starts, the message will disappear.

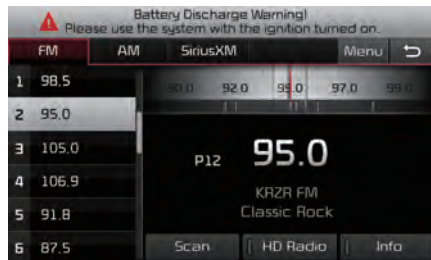


NOTICE

- If you use the system for a long time with the engine off, the battery may become completely empty.
-


Restrictions on Features for Safety Measures

The restriction screen will disappear when shifting gears into P or putting the parking brake on.

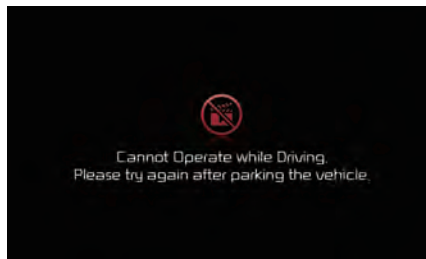

Home Screen

Controls Menu Configuration for the Home Screen

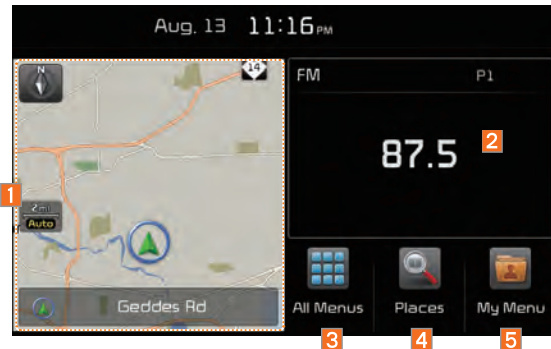

Features	Description
1 Navigation Widget	- Provides a brief view of the navigation map and the route screen. - Touch any area on the screen to move to the navigation screen.
2 AV Widget	- Shows brief information on the radio media currently playing. - Touch the area to move to the mode for what you are listening to.
3 All Menus	Shows all of the items in the system menu.
4 Places	Directly moves to the screen where you can search for your destination.
5 My Menu	- You can add and save up to eight menu items. - Add your favorite menu items to have quick and easy access to them.

Information Display on the Status Bar

Displays the date and time, along with the system status shown by the various icons to the right of the clock.

The icons in the following table indicate the various types of system status details and events.


	AV-Mute	Navigation-Mute	Making a call and Bluetooth connection			Wi-Fi
ICON						
Description	Mute AV sound	Mute Navigation sound	Bluetooth phone remaining battery	Handsfree connection	Making a call using BT phone	Bluetooth phone reception sensitivity
ICON						
Description				Connecting to music stream		Connecting to Wi-Fi
ICON						
Description				Handsfree+ streaming connection	Mute Bluetooth phone microphone	
ICON						
Description				Downloading contacts/recent calls		

Adding Your Favorite Menu Items to My Menu

From the Home screen, select **My Menu** and then **Edit**.

From the My Menu Settings screen, select menu items from the list on the right, then drag and drop them to a desired place on the left.

On the other hand, if you drag items from the left and drop them on the right, they will be deleted from My Menu instead.

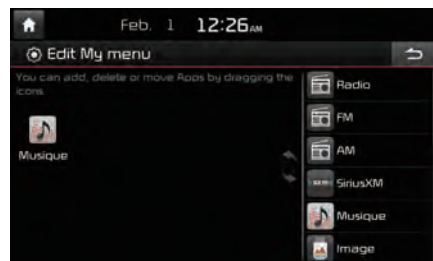

i Information

- Up to eight items can be added to My Menu.

On-Screen Touch Controls

Learn how to touch the screen to operate the system.

Select


Tap lightly on a menu or an item to select it.

NOTICE

- The system will not recognize your touch if you wear a glove or other non-conductive material. Touch the screen using your finger, an electrostatic touch-screen glove, or a stylus pen.

Drag & Drop

Select a menu or item you want, then drag and drop it to where you want to place it.

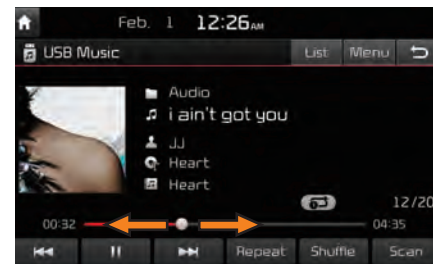


Drag or touch the slider along the play bar in the music screens to jump to the point that you want to play from. However, the CD player does not support drag function.

i Information

- Music screens for Disc CD and Disc MP3 do not support this function.




Drag the frequency bar to the left or right to move to the frequency that you want.

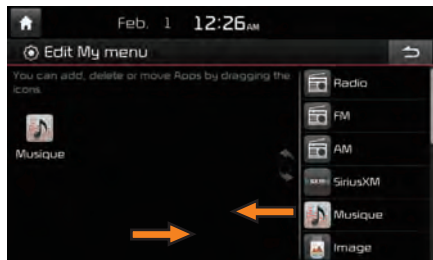

From the My Menu Settings screen, drag and drop icons to add, delete, or move to/from My Menu.


Flick (Quick Scrolling)

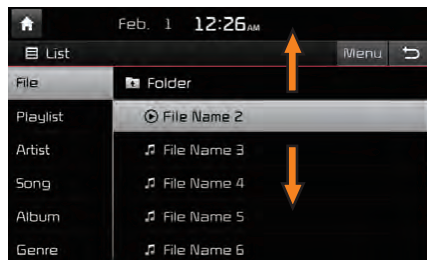

Quickly moves up and down in the list.

NOTICE

- Moving the list when there are many items will display a handler on the right of the display. You can easily move many items at a time with the handler

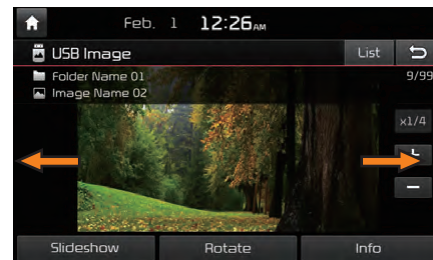


You can view the previous or next image by flicking left/right on an image on the USB Image screen.



Flick left/right on the frequency bar in the radio player to look up the previous/next frequency available.

Press and Hold

Pressing the  and  buttons in the music or video player will fast forward/rewind the music or video.

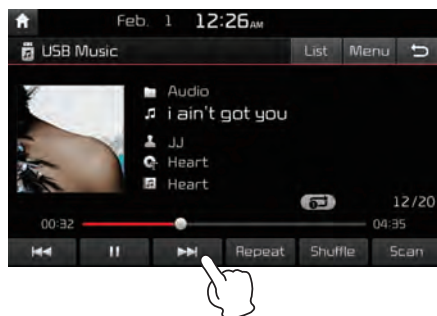

02

part.2 About Using AV


- FM/AM Mode
- About HD Radio™ Technology
- SiriusXM™ Mode
- Media Mode
- About Disc
- CD Mode
- Using MP3 Mode
- About USB
- About iPod
- AUX
- Bluetooth® Audio Mode
- My Music

About Using AV

FM/AM Mode

Accessing FM/AM Mode

You can access the radio player either by pressing the **RADIO** hard key or by selecting the Radio menu option from All Menus on the Home screen.

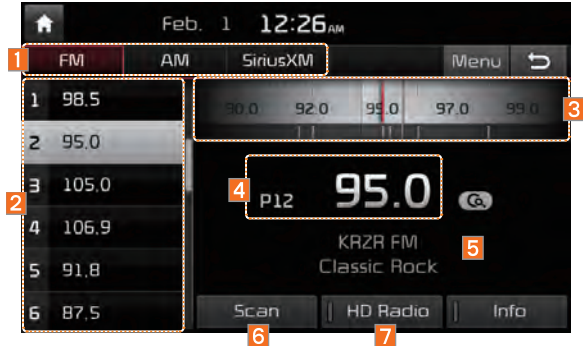

i Information

- If you press the **RADIO** hard key when the power is off, then the power will turn on and a radio broadcast will be tuned up.
- If you are in the FM/AM mode, select the FM/AM radio widget from the Home screen to access the radio player.

Features	Description
1 Mode Display	• Displays currently operating mode • If select wanted mode tap, it will change to selected mode in Radio.
2 Preset	• Shows saved presets for user selection • After selecting frequency → press and hold (over 0.8 seconds) the preset button. A 'beep' will sound and the frequency is saved to the selected preset button. i A total of 24 frequencies with 12 preset frequencies each for FM/AM modes can be saved.
3 Frequency Bar	• Flick the frequency bar left/right to search for available radio channels to the left or right of the current channel. • Dragging : Drag the frequency bar to the left/right to find the radio channel that you want.
4 Frequency	Displays the current frequency
5 Broadcast station	Displays the current broadcast station name.
6 Scan	Plays frequencies with superior reception for 5 seconds each
7 HD Radio	Used to set whether to turn HD Radio™ reception On/Off.



Features	Description
8 Info	Turns the Radio Text information on and off • If the ON Text On button is displayed (Text off state), information will not be displayed even if there is information being transmitted from the broadcast station. • If the Off Text Off button is displayed (Text on state), then broadcast information will be displayed. Information may not be displayed if there is no information being transmitted from the broadcast station.

Features	Description
9 Menu	• Autostore Saves frequencies with superior reception to Preset buttons • i While Auto Store is operating, pressing the Auto Store button again will cancel the function and play the previous frequency. • Preset Scan Plays preset frequencies for 5 or 10 seconds each • HD on : 10 seconds • HD off : 5 seconds
10 Scan/ Auto Scan/ Preset Scan	Displays an activated mode from the Scan/Auto Scan/Preset Scan modes.
11 SEEK/TRACK	• Pressing this button briefly (less than 0.8 seconds) : Seeks the previous/next frequency. • Pressing and holding this button (longer than 0.8 seconds) : Moves quickly through all of the frequencies. From the moment that you release the button, the system will seek the next available frequency.
12 TUNE	Turn the TUNE knob to manually seek available frequencies. • FM : Increment/decrement by 200 kHz • AM : Increment/decrement by 10 kHz

 
About HD Radio™ Technology



Program Service Data :

Contributes to the superior user experience of HD

Radio™ Technology. Presents song name, artist, station IDs, HD2/HD3 Channel Guide, and other relevant data streams.



Adjacent traditional main stations are extra local FM

channels. These HD2/HD3 Channels provide new, original music as well as deep cuts into traditional genre.



Digital, CD-quality sound. HD Radio™ Technology

enables local radio stations to broadcast a clean digital signal. AM sounds like today's FM and FM sounds like a CD.

If an HD Radio™ broadcast is received, the radio mode will switch from analog broadcast to HD Radio™ broadcast.

i Information

- The HD Radio™ screen is displayed only when a HD Radio™ broadcast is being received

Basic Mode Screen (HD Radio™ reception ON)



Name	Description
1 HD Radio™ Reception & Channel buttons	Displays main HD Radio™ channels and used to directly select the currently available channels i As HD Radio™ reception is included within Radio mode, the methods of moving between channels, saving presets, searching, or methods of searching frequencies are identical. However, while the HD Radio™ related icon display will become active when within regions where an HD Radio™ signal can be received.

Name	Description
2 HD Channel Number	HD Channel number saved in preset
3 Broadcast Info	Displays detailed information about the current broadcast
4 HD Radio	Used to set whether to turn HD Radio™ reception On/Off.

SiriusXM™ Mode


SiriusXM™ Mode Hard Key Controls

You can access the radio player either by pressing the **RADIO** hard key or by selecting the Radio menu option from All Menus on the Home screen. Select the SiriusXM™ tab from the radio player.

i Information

- If you press the **RADIO** hard key when the power is off, then the power will turn on and a radio broadcast will be tuned up.
- If you are in the SiriusXM™ mode, select the SiriusXM™ radio widget from the Home screen to access the radio player.
- When the power is off, pressing the **RADIO** key will turn the power on and play a SiriusXM™ Radio broadcast.

SiriusXM™ Mode Display Controls

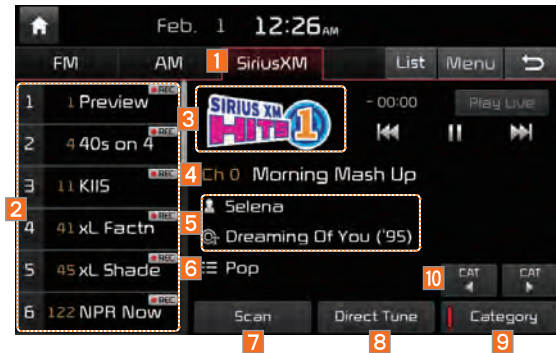



Features	Description
1 Mode Display	Displays currently operating mode. If select wanted mode tap, it will change to selected mode in Radio.
2 Preset	Shows saved presets for user selection After selecting frequency → press and hold (over 0.8 seconds) the preset button. A 'beep' will sound and the frequency is saved to the selected preset button. i A total of 18 frequencies for SiriusXM™ modes can be saved.
3 Channel Logo	Displays the current channel logo
4 Channel Info	Displays the current channel number and name
5 Contents Info	Displays the artist, title and other information-about the current playing song
6 Category Info	Displays the current playing category
7 Scan	Plays all receivable channels for 10 seconds each
8 Direct Tune	Used to search for channels by entering channel numbers
9 Category	If you press Category, when search channels through SEEK, Tune and Scan, search it in the current category.
10 Category Selection Buttons	Used to select the previous/next category



Features	Description
11 Play Live	It will change to listening live broadcast mode.
12 Skip Backward	Repeats the previously broadcasted program. • Holding for less than 2 seconds: Moves to the previous segment. • Holding for less than 0.8 seconds : Moves to the previous segment • Holding for longer than 0.8 seconds: Moves to the previous 5 seconds
13 Play/Pause	Pauses/plays the currently broadcasting program.
14 Skip Forward	Moves to the next segment.
15 List	Displays SiriusXM™ Radio Categories/Channel Lists
16 Menu	What's on My Preset? The program schedule saved in my preset. (For more details, see Section 2.5. Viewing Menu.) • Featured Favorite Theme channels recommended by SiriusXM™ . (For more details, see Section 2.5. Viewing Menu.) • Preset Scan Plays preset frequencies for 5 seconds each.
17 SEEK/TRACK	When key is pressed shortly,(under 0.8 seconds) Plays the previous/next channel When key is pressed and held.(over 0.8 seconds) Continuously changes the channel until the key is released and plays the current channel
18 TUNE	Changes the channel

Selecting through Channel/Category List


Press the **List** button ► Select the desired category and channel.

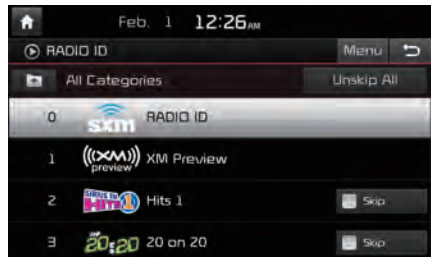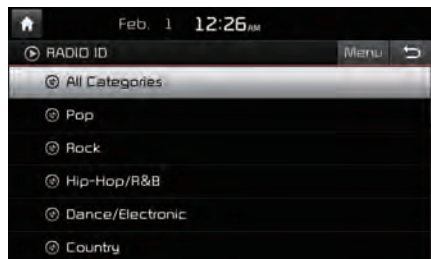

Select the desired category and the channel. Once selected, the previous screen will be restored and the selected channel will begin playing.

If you select the **Skip** button, you can scan channels using the **SEEK TRACK** key or the knob by **TUNE** skipping the channels that you chose to skip.


Direct Tune

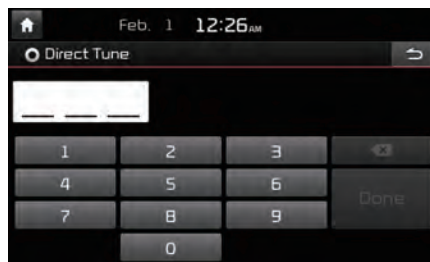


Enter the number of the channel you want to receive.

Viewing Menu


Using the **Menu** button on the right, you can view the program schedule and information about the Featured Favorites provided by SiriusXM™.

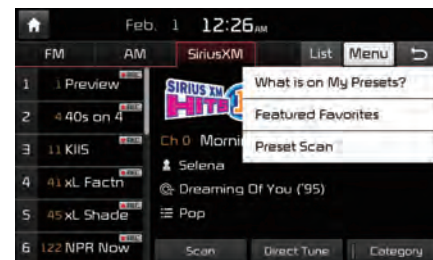

What's on My Preset? (Program Schedule)

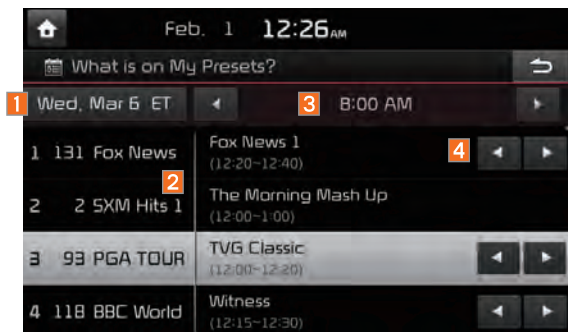


Menu → What's on My Preset? You can select Menu to see program information and the schedules of broadcast channels listed in the Preset.

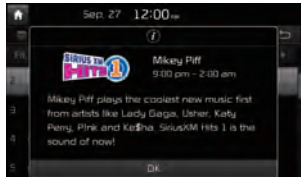Name	Description
1 Change Broadcast Date	By selecting this option, you can select a broadcasting date and time zone. Broadcast information will be provided for one week from the current date. 
2 Preset	Shows saved presets for user selection <i>i</i> A total of 18 frequencies for SiriusXM™ modes can be displayed
3 Broadcasting Time	You can select the time that you want.
4 Program Information	Shows you the program titles to be broadcasted at the time that you have chosen. Select a program to see more details.  <i>i</i> If there is more information on the program you selected, an arrow button will be displayed on the right of the list. You can see more program information by selecting the arrow button.

SiriusXM™ Mode I 2-9

Featured Favorites

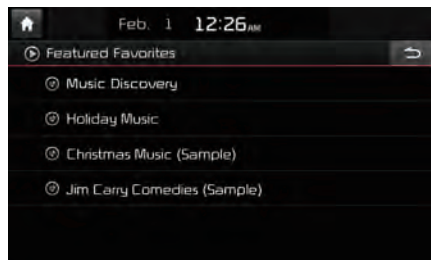

Featured Favorites feature allows SiriusXM™ to broadcast additional presets


- Example 1 : "Martha's Favorites" may represent Martha Stuart's favorites pre-sets on her radio
- Example 2 : During holidays, "Holiday Music" may represent all the SiriusXM™ channels that are playing the holiday music for easy access by users

Multiple sets Featured Favorites data can be broadcast by SiriusXM™ and can change from time to time

Media Mode

Starting Mode

1. From All Menu, select an icon you want from "Music, Image, AUX" to enter the last mode you used.

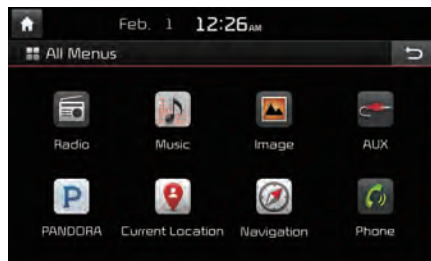

2. You can enter the Media mode that you recently used by pressing the Media hard key while in another mode.
3. To go to a different mode after you enter Media mode, press Media and choose the one you want from.



About Disc

Precautions upon Handling Discs

CAUTION

- After using a disc, put the disc back in its original case to prevent disc scratches.
 - Do not use abnormally shaped discs (8cm, heart-shaped, octagon-shaped) as such discs could lead to malfunctions.
 - Do not clean discs with chemical solutions, such as record sprays, antistatic sprays, antistatic liquids, benzene, or thinners.
 - Do not expose the disc to direct sunlight or high temperatures for prolonged periods of time. Such exposure may lead to disc deformation.
 - Upon playing a disc contaminated by dirt or other substances, the sound quality may deteriorate and result in skipping sounds. Writing on either side of the disc could result in damage to disc surfaces.
-
- Clean fingerprints and dust off the disc surface (coated side) with a soft cloth.
 - Copy-protected CDs, such as S-type CDs, may not properly operate in the device. DATA CDs cannot be played. (However, such discs may still abnormally operate.)
 - Do not disassemble the device. Contact a designated service center in case of malfunction. (Complete after service assistance will not be provided if the user disassembles the device.)
 - Do not use water to clean the device. Exposure to water could lead to product malfunction.
 - Do not introduce foreign substances into the disc insert/eject slot. Introducing foreign substances could damage the device interior.
 - The device may fail to properly operate in extremely hot or cold temperatures. (The operating temperature range is : 14°F ~ 150°F)
-
- Steam can become condensed on the fiber-optic lens due to rain, wet conditions, or upon operating the heating system. In such cases, discs may not be properly recognized. Remove the disc and wait until the moisture dries.
 - Skipping may occur during audio play when driving on bumpy roads for prolonged periods of time or upon severe shock to the vehicle. In case of severe shock, audio may not properly play.
-

Supported Disc Formats

This device supports the following disc formats.

Disc Type

Disc Type	Disc Format	Device Support
CD	3inch (8cm)	X
	5inch (12cm)	O
	CD	O
	CD-R	O (Read Only)
	CD-RW	O (Read Only)
	Multisession-CD	O (Read Only)
SACD	SACD	X
	(Single, SACD layer) SACD (Hybrid)	X (Only CD layer)

Disc Format

Disc Type	Disc Format	Device Support
CD	CD-DA	O
	MP3	O
	WMA	O
	MPEG4 AAC	X
	DTS-CD	X
	CD-ROM	O
	CD-G	X
	CD-EXTRA	O
	CD-TEXT	O

Disc/Content Format Compatibility

By Format according to Disc Type

Disc Type	Disc Format	Device Support
CD	LPCM	O
MP3	MPEG1, Layer3	O
	MPEG2, Layer3	O
	MPEG2.5	O
WMA	Ver9	O

Ordinary Disc Compatibility

This device has been designed/ manufactured to be compatible with software bearing the following logo marks.



Audio-CD

- CD-R/RW discs (Audio CD) created with CD recording devices or PCs may not properly operate in the device. This is a result of various causes, including disc format, recording method, and contamination to the disc or lens.

CD-R/RW Compatibility

- This device supports CD-R, CD-RW, and MP3 discs burned in Audio CD formats.
- The recording of CD-R and CD-RW discs with this device is not supported.
- CD-R/RW discs recorded as audio CDs that were not finalized are not supported by this device.

PC-created Disc Compatibility

- When burning a disc on a PC, the disc may not operate in this device depending on the software settings. In such cases, inquire with the software manufacturer.
- Additional information regarding compatibility is displayed on the CD-R/RW software disc box.
- DVD-R/W discs are not compatible with this device.

Cautions upon Writing CDs

- When a multi-session disc is being recorded, make sure to close the session before recording.
- If MP3/WMA file extensions are changed, such could result in malfunctions.
- In the case of MP3/WMA, write using only English. (Other languages are not supported)
- Unauthorized use of copy-protected music files is prohibited by law.
- Prolonged use of CD-R/CD-RW products that do not satisfy related specifications may result in product malfunction.
- When writing CDs, low-speed writing is recommended.

Compressed Audio Compatibility

- Physical formats of CD : Model 1, Model 2 XA format 1.
- This device supports audio file compressed through MPEG-1 audio stream layer 3 (MP3) using 8kbps ~ 320kbps. (CBR or VBR)
- For stable operation, the use of files in 95kbps~192kbps bit rate range and 44.1kHz SAMPLING frequency is recommended.
- This device supports WMA audio files using 20kbps ~ 320kbps. (CBR or VBR)
- Variable bit rate files may operate, but the play time information may not be properly displayed.
- This device only supports tracks with file extension of “.mp3” or “.wma”.
- This device does not support multisession discs.
- This device supports only 8 layer folders.

- This device supports MP3 ID3 tag versions of Ver. 1.0, Ver. 1.1, Ver. 2.2, Ver. 2.3, Ver. 2.4. When using discs with other versions, the ID3 info will not be displayed.
- Although this device has been designated to be compatible with various bit rates, playing low bit rate MP3 tracks may result in low quality sound.

Before Playing an MP3 Disc

Supported MP3 File Specification

- Acceptable standard: MPEG1 Audio Layer 3.
- Acceptable sampling frequency : 8, 11.025, 12, 16, 22.05, 24, 32, 44.1, 48(KHz).
- Acceptable bit rate : 8 ~ 320 (Kbps).

Recommended Bit Rates and Frequency

- Sampling frequency : 96 ~ 192 Kbps
fixed bit rate / 44.1 kHz.



NOTICE

- Supported ID3 tags : ID3v1.0, ID3v1.1, ID3v1.2, ID3v2.2, ID3v2.3, ID3v2.4.
 - Supported MP3 Media : CD-ROM.
 - Supported media formats : ISO9660 LEVEL1 and LEVEL2.
-

Detailed Specification


- Maximum directory layers : 8 layers.
- Maximum folder length : 64 bytes, file name length: 64 bytes.
- Supported characters for folder name/file name: 2350 characters for Alphanumeric character and Korean character sets, 4888 characters for Simplified Chinese character set.
- Maximum number of folders per disc : 256 folders. (including ROOT)
- Maximum number of files per disc : 512 files.

Precautions upon Burning MP3 Files


- The use of ISO 9660 LEVEL 2 JOLIET format is recommended.
- Up to 32 characters in Korean/Chinese are supported for file names and up to 20 characters in Korean/Chinese are supported for folder names.
- The use of CDs exceeding 700MB may result in faulty disc recognition or errors upon play.

MP3 File Structure

Recognition occurs through the same folder structure used within the disc.

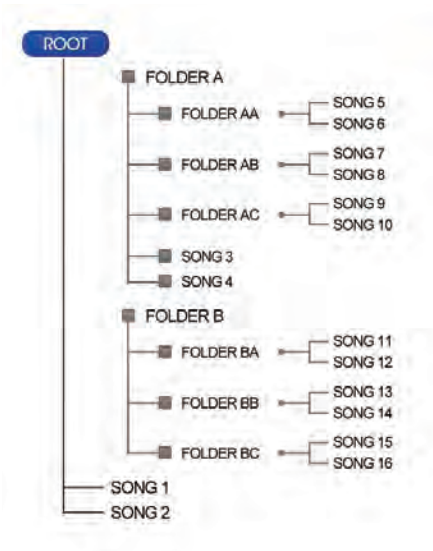


Folder structure as saved in CD-ROM

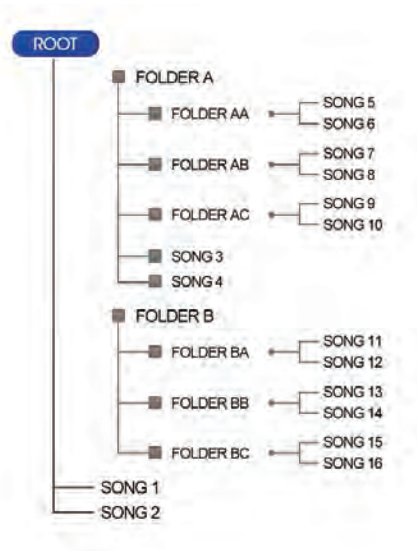

Folder structure as saved in the system

CD Mode


Basic Mode Screen

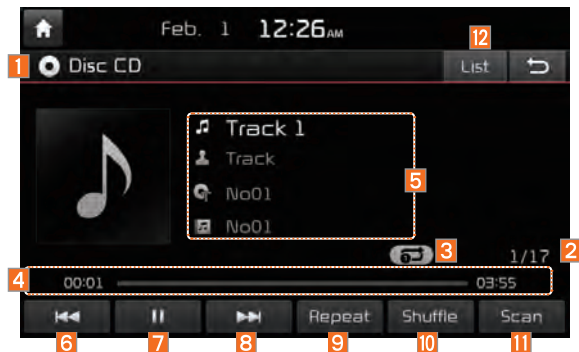

Name	Description
1 Mode	Displays currently operating mode
2 Track Index	Shows the current track/total tracks
3 Repeat/Shuffle/Scan	From Repeat/Shuffle/Scan, displays the currently operating function
4 Play Time	Displays the current play time
5 Play Info	Displays track/artist/title/album information
6 Previous Track	- When the play time is under 3 seconds the previous track - When the play time is over 3 seconds current song from the beginning
7 Play/Pause	Plays/pauses the current track
8 Next Track	Moves to the next track
9 Repeat	Repeats the current track Press the Repeat button to switch between repeating the current track  → and turning repeat off
10 Shuffle	Plays disc tracks in random order Press the Shuffle button to switch between shuffle all  → and turning shuffle off
11 Scan	Scans the beginning parts of disc tracks (approx. 10 seconds per track) Press the Scan button to switch between scan all  → and turning scan off
12 List	Moves to the track list screen




Name	Description
13 SEEK/TRACK	• If press button short (less than 0.8 seconds) moves to previous or next track • If press button long (over than 0.8 seconds) it rewinds or fast-forward the track i When pressed for 5 seconds, it will rewind or fast-forward the track at 4x speed. After that, it will rewind or fast-forward at 20x speed. Once released, the track will begin playing at normal speed.
14 TUNE	Turn the TUNE knob and search a desired track. When the track name is displayed, press the TUNE knob to play the track. i If the TUNE knob is not pressed within 5 seconds of searching tracks, the track info for the current track is restored.

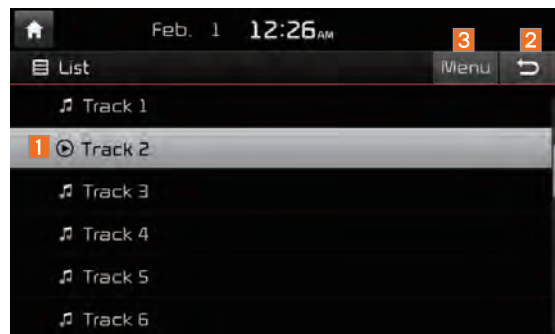

Name	Description
1 Current Track	Displays currently playing track name
2 Back Button	Converts to basic mode screen
3 Menu	When moving to a different list screen, moves to the list page where the current file is located (Becomes disabled when the current list includes the current file)
4 SEEK/TRACK	- If press button short (less than 0.8 seconds): Plays previous/next track - If press button long (over than 0.8 seconds): Moves to play screen, and then it will rewind or fast-forward the track. It will play the track normally if it is released.
5 TUNE	Turn the TUNE knob to move the focus to the next/previous track. If the desired track is selected, press the TUNE knob to play the track.


Using MP3 Mode

Basic Mode Screen

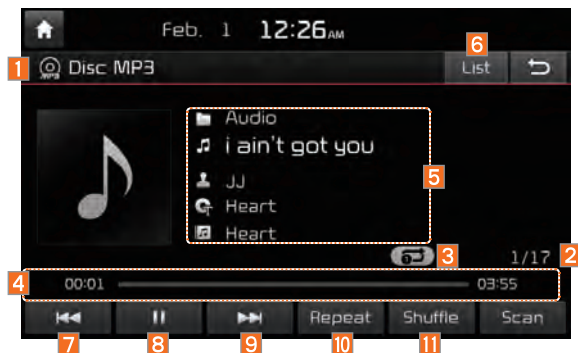

Name	Description
1 Mode	Displays currently operating mode
2 File Index	Shows the current MP3 file/total number of MP3 files
3 Repeat/ Shuffle/ Scan	From Repeat/Shuffle/Scan, displays the currently operating function
4 Play Time	Displays the current play time
5 Song Info	Displays folder/file/artist/title/album info for current song
6 List	Moves to the list screen
7 Previous File	- If play time is less than 3 secs, moves to previous file - If play time is over than 3 secs, play the current file from the beginning
8 Play/Pause	Plays/pauses the current track
9 Next File	Moves to the next song
10 Repeat	Repeats the current song or all songs in the folder Press the Repeat button to switch between repeating 1 song (🔁) → repeating folder (🔁) → and turning repeat off i Repeat 1 song: Repeats the current song Repeat Folder: Repeats songs in the folder
11 Shuffle	Plays files in the folder or in the disc in random order Press the Shuffle button to switch between shuffle folder (🔀) → shuffle all (🔀) → and turning shuffle off i Shuffle folder : Plays songs in the folder in random order Shuffle All : Plays songs in the disc in random order.

Using MP3 Mode | 2-19

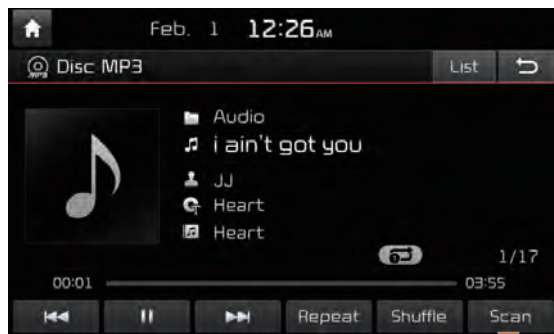

Name	Description
12 Scan	Scans the beginning parts of MP3 files (approx. 10 seconds per file) Press the Scan button to switch between scan folder Scan → scan all Scan → and turning scan off i Scan Folder : Scans tracks in the current folder Scan All : Scans all tracks in the disc
13 SEEK/TRACK	• If press short (less than 0.8 seconds): Plays previous/next track • If press long (over than 0.8 seconds): Moves to play screen, and then it will rewind or fast-forward the track.
14 TUNE	Turn the TUNE knob to search a desired track. If the desired track is displayed, press the TUNE knob to play the track. i If the TUNE knob is not pressed within 5 seconds of searching tracks, the track info for the current track is restored.



Name	Description
1 Folder Name	Displays folder name for current file
2 Current Song	Displays currently playing file name
3 Back Button	Converts to basic mode screen
4 Upper Folder	Moves to Root Folder
5 Menu	When moving to a different list screen, moves to the list page where the current file is located (Becomes disabled when the current list includes the current file)
6 SEEK/TRACK	- If press short (less than 0.8 seconds) : Plays previous/next track - If press long (over than 0.8 seconds) : Moves to play screen, and then it will rewind or fast-forward the track.
7 TUNE	Turn the TUNE knob to move the focus to the previous/next track. If the desired track is displayed, press the TUNE knob to play the track.

About USB

Before Playing a USB MP3

Connect the USB device after turning on the engine. The USB device may become damaged if it is already connected when the ignition is turned on.

- Files that are not standard format music/image files will not be played.
- For MP3/WMA/OGG files, only music files with compression rates between 8Kbps ~ 320Kbps can be played.
- Heed caution to static electricity when connecting/disconnecting external USB devices.
- Encoded MP3 Players will not be recognized when connected as an external device.
- When connecting an external USB device, the device may not properly recognize the USB in some states.
- Only products formatted with byte/sectors under 64Kbyte will be recognized.
- This device recognizes USB devices formatted in FAT 12/16/32 file formats. This device does not recognize files in NTFS file format.
- Some USB devices may not be supported due to compatibility issues.

- Take caution so that the USB connector does not come in contact with body parts or objects.
- Repeated connecting/disconnecting of USB devices within short periods of time may result in product malfunction.
- Make sure to connect/disconnect external USB devices with the audio power turned off.
- The amount of time required to recognize the external USB device may differ depending on the type, size, or file formats stored on the USB. Such differences in required time are not indications of malfunction.
- The use of USB devices for purposes other than playing music and image files is prohibited.
- Do not use the USB I/F to charge batteries or USB accessories that generate heat. Such acts may lead to worsened performance or damage to the device.
- The device may not recognize the USB device if separately purchased USB hubs and extension cables are being used. Connect the USB directly with the multimedia terminal of the vehicle.
- When using mass storage USB devices with separate logical drives, only files saved to the root drive can be played.
- When application programs are installed to specific USBs, files may not properly play.

- The device may not operate normally if MP3 Players, cellular phones, digital cameras, or other electronic devices (USB devices not recognized as portable disk drives) are connected with the device.
- Charging through the USB may not work for some mobile devices.
- The device may not support normal operation when using a USB memory type besides Metal Cover Type USB Memory.
- The device may not support normal operation when using formats such as HDD Type, CF, or SD Memory.
- Upon playing iPods, please use a dedicated iPod car cable.
- Normal operations cannot be guaranteed when other cables are being used.
- The device will not support files locked by DRM. (Digital Rights Management)
- USB memory sticks used by connecting an Adaptor (SD Type or CF Type) may not be properly recognized.
- Only use Plug type connector products, as shown in the figure below.



Plug Type Connector

Product Name	Manufacturer
XTICK	LG
BMK	BMK Technology
SKY-DRV	Sky Digital
TRANSCEND JetFlash	Transcend
Sandisk Cruzer	SanDisk
Micro ZyRUS	ZyRUS
NEXTIK	Digiworks

i Information

- Problems that occur through use of USB devices not listed within the above table are not covered by the product warranty.

Supported Image Specifications

Name	Description
Image format	JPG, GIF, BMP, PNG (animated GIF, etc. are not supported)
Supported image resolution	5M pixels for JPG, BMP, PNG (1M pixels maximum for GIF)
Supported image file size	5M pixels for JPG, BMP, PNG (1M pixels maximum for GIF)


USB MP3 Information and Precautions

Name	Description
MP3 File Specification	Specification : MPEG1 AUDIO LAYER 3
Recommended Bit Rates and Sampling Frequency	Acceptable sampling frequency : 32, 44.1, 48 (kHz) Acceptable bit rate : 32, 40, 48, 56, 64, 80, 96, 112, 128, 160, 192, 224, 256, 320 (Kbps) 96, 128, 192 Kbps fixed bit rate/44.1kHz
ID3 Tag	Supports ID3v1.0 and ID3v1.1, ID3v2.2, ID3v2.3, ID3v2.4 ID3 tags
Detailed Specifications	Maximum directory layers : 20 layers Maximum length of folder name/file name : 255Bytes Supported characters for folder name/file name : Alphanumeric characters, Korean standard character set 2,350 characters, Simplified Chinese 4888 characters Maximum number of folders which can be stored onto one USB : 2000 folders (including ROOT) Maximum number of files which can be stored onto one USB : 8000

i Information

- The sound quality of MP3 files that use bitrates exceeding 192 Kbps cannot be guaranteed. When using files without fixed bit rates, some features (FF/REW features) may not properly operate.


USB Music

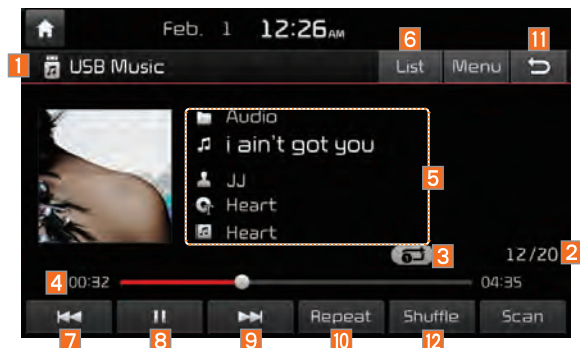


Features	Description
1 Mode	Displays currently operating mode
2 File Index	Shows the current file/total files within the USB
3 Repeat/ Shuffle/ Scan	From Repeat/Shuffle/Scan, displays the currently operating function
4 Play Time	Displays the current play time/total play time
5 Song Info	Displays the information of the current track - When a track in the file tab on the list screen is selected : Displays folder, file, title, artist, album info - When a track in the other tabs on the list screen is selected : Displays artist, title, album info
6 List	Moves to the list screen

Features	Description
7 Previous File	If press button short (less than 0.8 seconds) : - Moves to the previous file or play the current file from the beginning (Depends on the play time) - If play time is less than 3 seconds, moves to previous file - If play time is over than 3 seconds, play the current file from the beginning If press button long (over than 0.8 seconds) it rewinds the track
8 Play/Pause	Plays/pauses the current file
9 Next File	- If press button short (less than 0.8 seconds) : Moves to the next file - If press button long (over than 0.8 seconds) : It fast-forwards the track
10 Repeat	Repeats the current file - If select the song in the file tab on the list screen : Press the Repeat button to switch between repeating one song (🔁), repeating folder (🔁), and turning repeat off (🔁) - If select the song in the other tabs (Playlist, Artist, Song, Album, Genre) on the list screen : Press the Repeat button to switch between repeating one song (🔁) and turning repeat off (🔁)
11 Back Button	Converts to basic mode screen
12 Shuffle	Plays files in random order - If select the song in the file tab on the list screen : Press the Shuffle button to switch between Shuffle Folder (🔀), Shuffle All (🔀), and turning shuffle off (🔀) - If select the song in the other tabs (Playlist, Artist, Song, Album, Genre) on the list screen : Press the Shuffle button to switch between Shuffle Category (🔀) and turning shuffle off (🔀)

About USB | 2-25

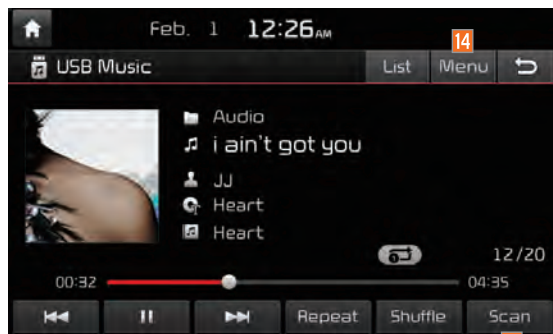


Features	Description
13 Scan	Scans the beginning parts of USB files (approx. 10seconds per file) - If select the song in the file tab on the list screen : Press the Scan button to switch between Scan Folder (), Scan All (), and turning scan off - If select the song in the other tabs (Playlist, Artist, Song, Album, Genre) on the list screen : Press the Scan button to switch between Scan category () and turning scan off ()
14 Menu	- Add to Playlist: Add the current track to the Playlist. Playlist is placed on the left tab in the list - Save to My Music: You can save the current track to My Music. You can play saved track from My Music without USB. Access to My Music in the Media mode.
15 SEEK/TRACK	If press button short (less than 0.8 seconds) moves to previous/next file or play the current track from the beginning - If play time is less than 3 seconds, moves to previous/next file - If play time is over than 3 seconds, play the current file from the beginning If press button long (over than 0.8 seconds) it will rewind/fast-forward the track
16 TUNE	Turn the TUNE knob to search a desired track. If the desired track is displayed, press the TUNE knob to play the track.

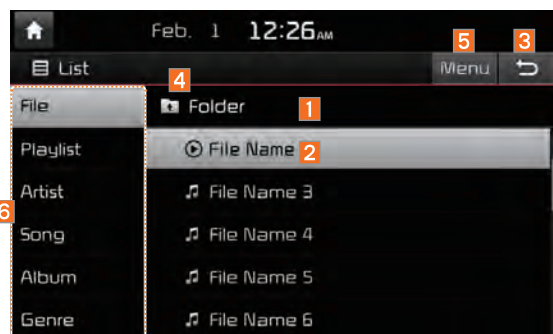

Features	Description
1 Folder/ Category Name	Displays folder/category name in the list
2 Current Song	Displays currently playing file name
3 Back Button	Converts to basic mode screen
4 Upper Folder	Moves to Upper Folder

Features	Description
5 Menu	• Add to Playlist : Adds the current track to the Playlist: Playlist is placed on the left tab in the list (Maximum 100 files) Select a desired track and press “Add to Playlist” to add the track in the playlist. • Delete from Playlist : Select a track you want to delete from the playlist and press “Delete from Playlist” to delete the track in the playlist • Now Playing : When moving to a different list screen, moves to the list page where the current file is located (Becomes disabled when the current list includes the current file)
6 Search Menu	Search tracks by the list type. Search songs according to Playlist, Artist, Song, Album, and Genre. i If access the search menu while playing a track, it moves to the previous search mode.
7 SEEK/TRACK	If press short (less than 0.8 seconds): Plays previous/next track • If play time is less than 3 seconds, moves to previous/next file • If play time is over than 3 seconds, play the current file from the beginning If press long (over than 0.8 seconds): Moves to play screen, and then it will rewind or fast-forward the track. It will play the track normally if button released.
8 TUNE	Turn the TUNE knob to move the focus to the previous/next list. If the desired track is displayed, press TUNE knob to play the track.

USB Image

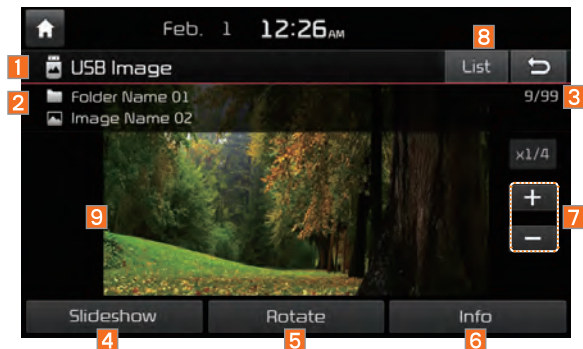

Features	Description
1 Mode	Displays currently operating mode
2 Folder/File Name	Displays folder name where image is located
3 File Index	Shows the current file/total files within the USB
4 Slideshow	images as slideshow in 5, 10, 20, 30 second intervals
5 Rotate	Rotate image in clockwise direction
6 Info	Shows the file name, resolution and file type of current image
7 Adjust Image Size	Enlarge/reduce (zoom-in/zoom-out) image size
8 List	Moves to the list screen
9 Previous/Next Image	Swipe image left or right to see previous/next image



Features	Description
1 Current File	Displays currently playing file name
2 Back Button	Converts to basic mode screen
3 Menu	Now Playing : When moving to a different list screen, moves to the list page where the current file is located (Becomes disabled when the current list includes the current file)
4 SEEK/TRACK	Controls background mode - Radio mode : Changes Frequency and Channel - Media mode : Changes Track (excluding AUX)
5 TUNE	Controls background mode - Radio mode : Changes Frequency and Channel - Media mode : Changes track (excluding AUX). If a desired track is displayed, press the knob to move to the track.

About iPod

Using iPod Devices

- iPod is a registered trademark of Apple Inc.
 - iPod mode will not operate if the connected iPod cannot be recognized due to operation of unsupported versions that do not support related protocols, iPod abnormalities, or iPod device defects. Some iPods with unsupported communication protocols may not properly operate with the Multimedia system.
 - For fifth generation iPod Nano devices, the iPod may not be recognized when the battery level is low. Please charge the iPod for use.
 - Search/play orders shown within the iPod device may differ with the orders shown within the Multimedia system.
 - If the iPod malfunctions due to an iPod device defect, reset the iPod and try again. (To learn more, refer to your iPod manual)
 - If repeatedly connect and disconnect iPod/iPhone to the Multimedia system with USB cable in short time, it may cause malfunction.
 - The time for recognition of iPod/iPhone may vary depending on device type, firmware version and iOS version.
 - For some iPod Touch and iPhone devices, connecting Bluetooth® while the iPod is operating may result in discontinued iPod sound. When such devices with Bluetooth® support are connected, this problem occurs as the sound source is changed from the Dock Connector (USB connector cable) to Bluetooth.
 - To prevent this symptom, Bluetooth Audio function in the Multimedia system is limited if iPod/iPhone is connected to the system through both cable and Bluetooth. To listen to the iPod sound, use either iPod menu with USB connection or Bluetooth Audio with Bluetooth connection.
 - To listen to the iPod sound, reconnect the USB cable or change the audio output settings in iPod/iPhone to Dock.
 - In order to use the iPod while operating the keys, you must use a dedicated iPod cable. (the cable that is supplied when purchasing iPod/ iPhone products)
- ※ During ACC ON state, connecting the iPod through the iPod cable (The cable that is supplied when purchasing iPod/ iPhone product.) will charge the iPod through the head unit.
- ※ The use of genuine iPod cables supplied by Apple is recommended. (The use of other products may result in noise or abnormal operation.)

- When connecting with the iPod cable, make sure to fully insert the jack to prevent communication interference. If the iPod is connected to the vehicle while it is playing, a high pitch tone may sound for about 1~2 seconds immediately after connection. If possible, connect the iPod to the vehicle with the iPod stopped/paused.
- Within iPhones, streaming audio and iPod control may occasionally conflict. If problems persist, remove the iPhone and connect again.
- When connecting to iPod Nano /Classic, the Kia Motor logo appears on the Apple device. For the iPod Nano 6 generation, however, the logo image does not appear since it is not supported. Also, all iPhone and iPod Touch products do not support this function.
- In Apple's iOS 6.0 version or later, Podcast and Audiobook media files are designed to be played with the Podcasts and iBooks applications spe-

cifically designed for Apple products. If the Apple device does not provide the Podcast and Audiobook lists, the playlist may not be displayed and played in the AVN iPod mode.

- If the Apple Podcasts and iBooks apps are not installed on the Apple device, but the Apple device provides the Podcast and Audiobook lists, you can play files in other categories in AVN iPod mode.

Caution

- While using a connected iPhone/iPod Touch device, it may not operate normally if the user changed some functions in the device.
- When calling with an iPhone connection, song may stop playing due to an Apple device feature. If sound does not resume after the call is terminated, check the device status.
- If lots of songs have the same information, skipping may occur when previous/next song is executed due to an Apple device feature. Also problems may occur depending on device type or iOS version.
- If lots of songs have the same information, it may occur difference of playing songs between the Multimedia system and Apple device. Reset the device or delete the same songs in the Apple device using iTunes.

- If you control pause, repeat, shuffle, or seek songs when the play time is when the play time is less than 3s before finished playing, it may occur difference of playing song between the Multimedia system and Apple device. Access to iPod music from another mode or pause a song and then play a song again in Apple device.

- We recommend that your Apple device uses the latest firmware since some problems may occur due to an outdated firmware or a product defect.



Type	1G	2G	3G	4G	5G	6G	6.5G	7G
iPod Mini	Not Supported							
iPod shuffle	Not Supported							
iPod Nano	○	○	○	○	○	○	Not released	○
iPod Touch	○ (iOS 1.1 not supported)	○	○	○	○	Not released		
iPad	○ (Unable to charge, Not verified, Normal working not guaranteed)							
iPad Mini	○ (Unable to charge, Not verified, Normal working not guaranteed)							
iPod Classic	Not Supported				○ (iPod with Video)	○ (iPod Classic)	○ (iPod Classic)	Not released

Type	3G	3GS	4G	4GS	5G
iPhone	Not verified, Normal working not guaranteed	○	○	○	○


Caution

- If the iPhone/iPod Touch supports Bluetooth, it is unable to use Bluetooth Audio if the Apple device that is connected to the Multimedia system through both USB connection and Bluetooth. Disconnect the USB connection then use Bluetooth Audio
- If iPod/iPhone connected to the Multimedia system through both USB and AUX. iPod/iPhone keeps output sound via AUX, thus it may occur sound will not output in iPod mode.
- If AUX cable connected to iPod/iPhone but not connect to the Multimedia system, it may occur sound will not output in iPod mode due to iPod/iPhone's feature. Especially, if you use AUX cable like pictures, this problem may occur.
- Disconnect AUX cable from iPod/iPhone first, then connect to the Multimedia system via USB. Or change settings to "Dock" in iPod/iPhone.

- If connect to the Multimedia system while podcast or iTunes music downloading to iPod/iPhone, it may occur some problems when you select song in the list. Reconnect iPod/iPhone to the Multimedia system when downloading is finished or the file deleted.
- If connect to the Multimedia system while sync, it may occur some problems. Try to use iPod/iPhone connection after sync complete. (To learn more, refer to your iPod manual)
- iPhone and iPod Touch devices are guaranteed to work normally on iOS 7.0.6 or below. However, they may not work normally on future iOS versions as their operations have not yet been tested.

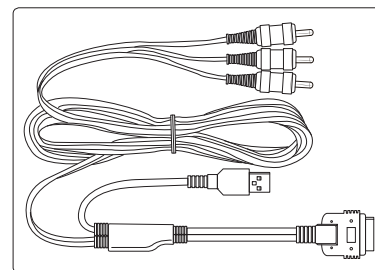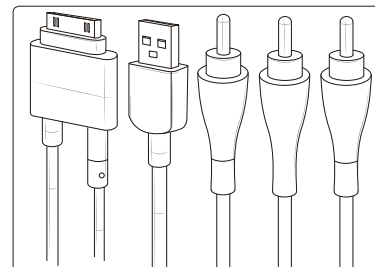

iPod

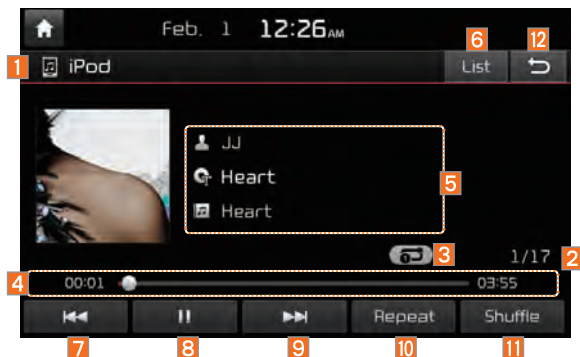


Features	Description
1 Mode	Displays currently operating mode
2 Song Index	Shows the current song/total songs
3 Repeat/Shuffle	From Repeat/Shuffle, displays the currently operating function
4 Play Time	Displays the current play time/total play time
5 Song Info	Displays the artist/song title/album info
6 List	Moves to the list screen

Features	Description
7 Previous File	If press button short (less than 0.8 seconds): Moves to the previous file or play the current file from the beginning (Depends on the play time) - If play time is less than 3 seconds, moves to previous file - If play time is over than 3 seconds, play the current file from the beginning If press button long (over than 0.8 seconds) it rewinds the track.
8 Play/Pause	Plays/pauses the current file
9 Next File	- If press button short(less than 0.8 seconds), Moves to the next file - If press button long(over than 0.8 seconds), it does fast-forward the track.
10 Repeat	Repeats the current file Press the Repeat button to switch between repeating 1 track , and turning repeat off
11 Shuffle	Plays files in random order When pressing Shuffle button, it changes to shuffle category → deactivate shuffle then repeat Shuffle Category: Shuffle song in the current category
12 Back Button	Move to home/previous mode screen



Features	Description
13 SEEK/TRACK	If press button short (less than 0.8 seconds) moves to previous/next file or play the current song from the beginning • If play time is less than 3 seconds, moves to previous/next file • If play time is over than 3 seconds, plays the current file from the beginning If press button long (over than 0.8 seconds) it will rewind/fast-forward the track
14 TUNE	Turn the  TUNE knob to search a desired track. If the desired track is displayed, press the  TUNE knob to play the track.  If the  TUNE knob is not pressed within 5 seconds of searching tracks, the track info for the current track is restored.

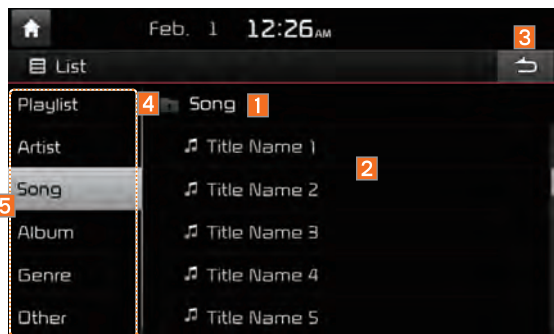


Features	Description
1 Category Name	Displays the category name
2 Category List	Displays the contents of selected category i If there are many items in the list, items are added in order and the scroll bar on the right is adjusted accordingly.
3 Back Button	Converts to basic mode screen
4 Upper Folder	Moves to Upper Folder
5 Search Menu	Search tracks by the list type. Search songs according to Playlist, Artist, Song, Album, and Genre. i If access the search menu while playing a track, it moves to the previous search mode.
6 SEEK/TRACK	If press button short (less than 0.8 seconds) moves to previous/next file or play the current song from the beginning • If play time is less than 3 seconds, moves to previous/next file • If play time is over than 3 seconds, plays the current file from the beginning If press button long (over than 0.8 seconds) it will rewind/fast-forward the track.
7 TUNE	Turn the TUNE knob to search a desired track. If the desired track is displayed, press the TUNE knob to play the track. If you do not anything with the knob for 5 seconds, the TUNE search will be terminated.

AUX

Connecting an External Device

If an external device connector is connected with the AUX terminal, then AUX mode will automatically operate. Once the connector is disconnected, the previous mode will be restored.

- AUX mode can be used only when an external audio player (camcorder, car VCR, etc.) has been connected.
- The AUX volume can also be controlled separately through the connected device.

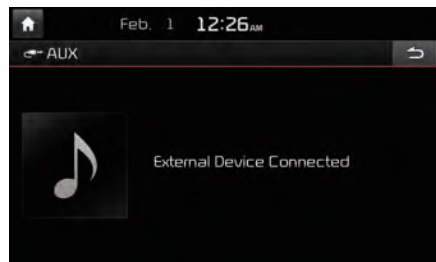


NOTICE

- If only cable connected to the AUX without an external device, the mode changed to AUX, but noise may occur. When an external device is not being used, remove the connector jack.
- When the external device power is connected to the power jack, playing the external device may output noise. In such cases, disconnect the power connection before use.



Bluetooth® Audio Mode

Bluetooth Audio

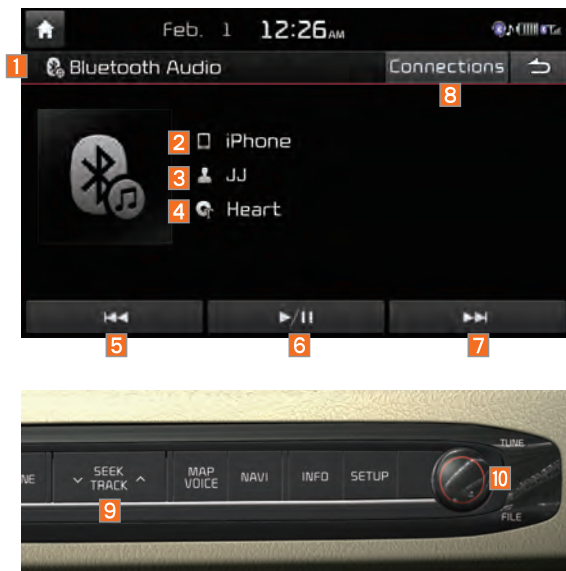


Features	Description
1 Mode	Displays currently operating mode
2 Phone Name	Displays name of connected phone
3 Artist Info	Name of current artist
4 Title	Name of current song
5 Previous File	- If play time is less than 3 seconds, moves to the previous file - If play time is over than 3 seconds, plays the current file from the beginning <i>i</i> This function may differ depending on the model of mobile phone
6 Play/Pause	Plays/Pauses Bluetooth Audio
7 Next File	Moves to the next file
8 Connections	Moves to the Bluetooth Settings screen. You can pair a new device or change/delete paired device(s)
9 SEEK/TRACK	Plays the previous/next file
10 TUNE	● TUNE is not supported.

i Information

- Artist info and Title may not supported by mobile phone

Bluetooth Connections Settings

Settings for pairing, connection and disconnection of a Bluetooth device.

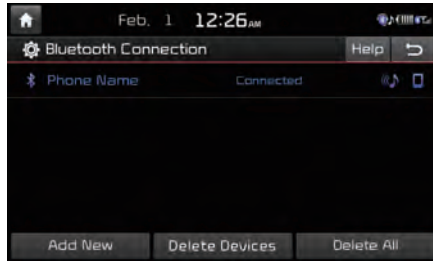


- In Bluetooth Audio play screen, Select **Connections**
- Select **SETUP** key in the head unit. ▶
Select **Phone**. ▶ Select **Bluetooth connection**

i Information


- If the music in the mobile phone is not played after changing to audio streaming mode, press the play button. Thus check if the music is playing in the Bluetooth device after changing to audio streaming mode. Audio streaming may not be supported for some mobile phones.
- Please check the Bluetooth compatibility in below website:
- Kia Motors Corporation <http://www.kia.com/us/bluetooth>

My Music

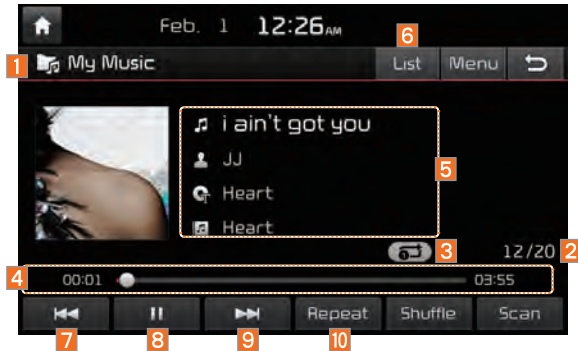


Features	Description
1 Mode	Displays currently operating mode
2 File Index	Shows the current file/total files
3 Repeat/Shuffle/Scan	From Repeat/Shuffle/Scan, displays the currently operating function
4 Play Time	Displays the current play time/total play time
5 Song Info	Displays the information about the current track - When a track in the file tab on the list screen is selected : Displays file, artist, title, album info - When a track in the other tab on the list screen is selected : Displays artist, title, album info
6 List	Moves to the list screen

Features	Description
7 Previous File	If press button short (less than 0.8 seconds): Moves to the previous file or play the current file from the beginning (Depends on the play time) - If play time is less than 3 seconds, moves to previous file - If play time is over than 3 seconds, play the current file from the beginning If press button long (over than 0.8 seconds) it rewinds the track
8 Play/Pause	Plays/pauses the current file
9 Next File	- If press button short (less than 0.8 seconds): Moves to the next file - If press button long (over than 0.8 seconds) it will fast-forward the file
10 Repeat	Repeats the current file - If select the song in the file tab on the list screen : Press the Repeat button to switch between repeating one song  and turning repeat off. - If select the song in the other tabs (Playlist, Artist, Song, Album, Genre) on the list screen : Press the Repeat button to switch between repeating one song  and turning repeat off 

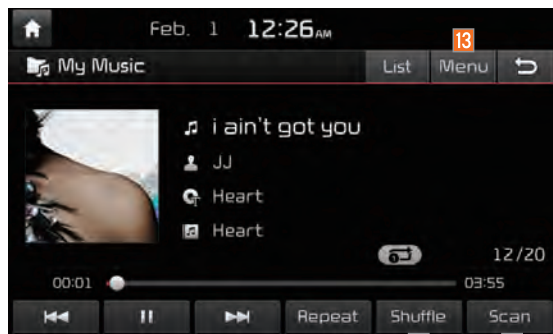

Features	Description
11 Shuffle	Plays files in random order - If select the song in the file tab on the list screen : Press the Shuffle button to switch between shuffle and turning shuffle off - If select the song in the other tabs (Playlist, Artist, Song, Album, Genre) on the list screen : Press the Shuffle button to switch between shuffle and turning shuffle off

Features	Description
12 Scan	Scans the beginning parts of USB files (approx. 10seconds per file) - If select the song in the file tab on the list screen : Press the Scan button to switch between scan and turning scan off - If select the song in the other tabs (Playlist, Artist, Song, Album, Genre) on the list screen : Press the Scan button to switch between scan and turning scan off
13 Menu	- Add to Playlist: Adds the current song to the Playlist Playlist is placed on the left tab in the list - Delete Current File: Deletes the current track from My Music.
14 SEEK/ TRACK	If press button short (less than 0.8 seconds) moves to previous/next file or play the current song from the beginning - If play time is less than 3 seconds, moves to previous/next file - If play time is over than 3 seconds, plays the current file from the beginning If press button long (over than 0.8 seconds) it will rewind/fast-forward the track
15 TUNE	Turn the TUNE knob to search a desired track. If the desired track is displayed, press the TUNE knob to play the track. i If the TUNE knob is not pressed within 5 seconds of searching tracks, the track info for the current track is restored.

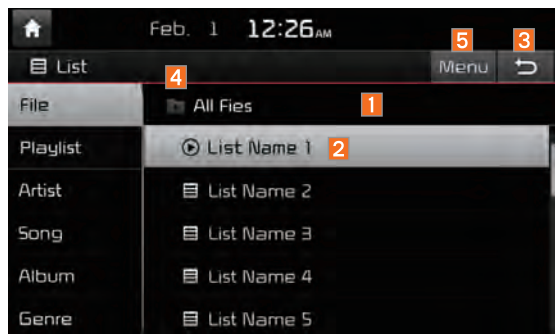

Features	Description
1 Folder/Category Name	Displays folder/category name in the list
2 Category List	Displays currently playing file name
3 Back Button	Converts to basic mode screen
4 Upper Folder	Moves to Root Folder

Features	Description
5 Menu	• Add to Playlist : Adds the current track to the Playlist : Playlist is placed on the left tab in the list (Maximum 100 files) Select a track and press “Add to Playlist” to add the track in the playlist • Delete from Playlist : Select a track from the playlist and press “Delete from Playlist” to delete the track in the playlist • Delete Files: Deletes files from My Music • If delete file from My Music, the information related to song also deleted in the list. • Now Playing : When moving to a different list screen, moves to the list page where the current file is located (Becomes disabled when the current list includes the current file)
6 SEEK/ TRACK	If press button short (less than 0.8 seconds) moves to previous/next file or play the current song from the beginning • If play time is less than 3 seconds, moves to previous/next file • If play time is over than 3 seconds, plays the current file from the beginning If press button long (over than 0.8 seconds) it will rewind/fast-forward the track
7 TUNE	Turn the TUNE knob to move the focus to previous/next file. If the file you want to play is displayed, press TUNE knob to play the track. If the TUNE knob is not pressed within 5 seconds of searching tracks, Tune search will be terminated.

03

part.3 Using Bluetooth

Before Using the Bluetooth[®] Handsfree
Bluetooth Connection
Bluetooth Phone

Using Bluetooth

Before Using the Bluetooth® Handsfree

What is *Bluetooth*® Wireless Technology?

- *Bluetooth*® Wireless Technology refers to a short-distance wireless networking technology which uses a 2.45GHz frequency to connect various devices within a certain distance.
- Supported within PCs, external devices, Bluetooth® phones, PDAs, various electronic devices, and automotive environments, *Bluetooth*® Wireless Technology to be transmitted at high speeds without having to use a connector cable.
- Bluetooth® Handsfree refers to a device which allows the user to conveniently make phone calls with Bluetooth® mobile phones through the Multimedia system.

- The Bluetooth® Handsfree feature may not be supported in some mobile phones. For more information on mobile phone compatibility, visit the Kia Motor website
- Kia Motors Corp : <http://www.kia.com/us/bluetooth>

Precautions for Safe Driving

- Bluetooth® Handsfree is a feature that enables drivers to practice safe driving. Connecting the head unit with a Bluetooth® phone allows the user to conveniently make calls, receive calls, and manage the phone book. Before using *Bluetooth*® Wireless Technology, carefully read the contents of this user's manual.
- Excessive use or operations while driving may lead to negligent driving practices and be the cause of accidents. Do not operate the device excessively while driving.
- Viewing the screen for prolonged periods of time is dangerous and may lead to accidents. When driving, view the screen only for short periods of time.

CAUTIONS upon Connecting Bluetooth® Phone

- Before connecting the head unit with the mobile phone, check to see that the mobile phone supports Bluetooth® features
- Even if the phone supports *Bluetooth*® Wireless Technology, the phone will not be found during device searches if the phone has been set to hidden state or the Bluetooth® power is turned off. Disable the hidden state or turn on the Bluetooth® power prior to searching/connecting with the head unit.
- If Auto Connection is used, the Bluetooth® phone is automatically connected when the ignition is turned on, making it unnecessary to have to connect the phone with the head unit every time.
- If you do not want automatic connection with your Bluetooth® device, turn the Bluetooth® feature off of the Bluetooth® device.
- Park the vehicle when connecting the head unit with the mobile phone.
- Bluetooth® connection may become intermittently disconnected in some mobile phones. Follow these steps to try again.
 1. Turn the Bluetooth® function within the mobile phone OFF/ON and try again.
 2. Turn the mobile phone power OFF/ON and try again.
 3. Completely remove the mobile phone battery, reboot, and then again.
 4. Reboot the Audio Multimedia system and try again.
 5. Delete all paired devices from both of Phone and Head Unit sides and then try again
- The Handsfree call volume and quality may differ depending on the mobile phone.
- Pairing Bluetooth® devices and use of other Bluetooth® features are not supported when the vehicle is in motion. For safety, please first park your vehicle.
- When downloading contacts, phenomenon not described within this user's manual may be related with the mobile device. When such occurs, inquire within the mobile phone manufacturer.

Before Using the Bluetooth® Handsfree | 3-3

Bluetooth Connection

Pairing a New Device

Before you can use the Bluetooth feature, you must first pair/connect your mobile phone to your car.

Up to 5 Bluetooth devices can be paired.


Only one Bluetooth device can be connected at a time.

Pairing a New Device by Selecting Phone/Call

Select **PHONE** key in the head unit or  key in the steering wheel remote control. ▶ Select **Yes**. ▶ Pair your car after your mobile phone detects the Bluetooth device. ▶ Enter the passkey or accept the authorization popup. ▶ Connect Bluetooth.

Pairing a New Device Through the Phone Settings

Select **SETUP** key in the head unit. ▶ Select **Phone**. ▶ Select **Bluetooth Connection**. ▶ Select **Add New**. ▶ Pair your car after your mobile phone detects the Bluetooth device. ▶ Enter the passkey or accept the authorization popup. ▶ Connect Bluetooth.

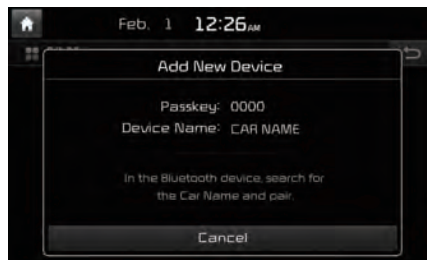

The default passkey is 0000.


The device name above is an example. Check the actual information on the product.

Connecting Bluetooth Devices

Connects the Bluetooth devices that you add.


Connecting Devices by Selecting Phone/Call

Select **PHONE** key in the head unit or  key in the steering wheel remote control. ▶ Select the name of the device to connect. ▶ Connect Bluetooth.

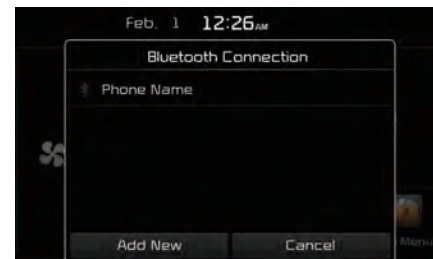

Connecting Devices Through the Phone Settings


Select **SETUP** key in the head unit. ► Select **Phone**. ► Select **Bluetooth Connection**. ► Select the name of the device to connect. ► Connect Bluetooth.

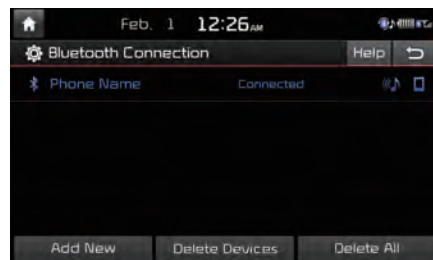

Disconnecting Bluetooth Devices

Disconnects Bluetooth devices that are connected.


Select **SETUP** key in the head unit. ► Select **Phone**. ► Select **Bluetooth Connection**. ► Select the name of the device to disconnect.

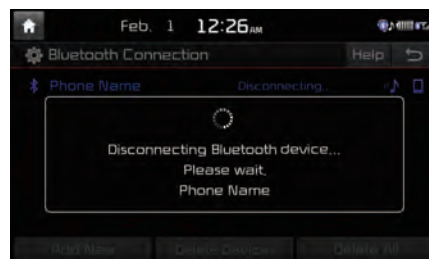

Deleting Bluetooth Devices

Deletes the Bluetooth devices that you added. Note that deleting a Bluetooth device will delete all Call History and Contact Info downloaded along with it.

Select **SETUP** key in the head unit. ► Select **Phone**. ► Select **Bluetooth Connection**. ► Select **Delete Devices**. ► Select the device name to delete. ► Select **Delete**.

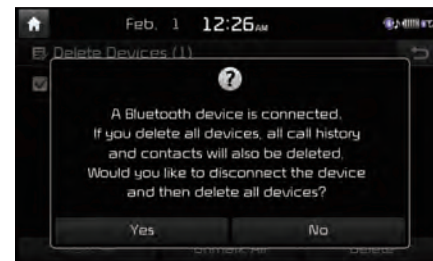

Bluetooth Phone

Phone Status Icons

Shows the current phone status in the right top of the display.




Icons	Description
	You can use Bluetooth phones when a Bluetooth hands-free connection is established.
	You can use Bluetooth audio features when a Bluetooth audio connection is established.
	You can use Bluetooth phones and audio features when both Bluetooth Hands-free and audio connections are established.
	Call signal strength indicator
	Battery level of the Bluetooth devices connected
	Downloading Call History list
	Downloading Contacts
	In a Bluetooth phone call
	Microphone muted

- i Information**
- The battery level icon and the call signal strength indicator may not be supported in some Bluetooth devices.
 - The battery level may differ from the actual level remaining

Dial

Dials a call after the Bluetooth devices are connected.

- Select **PHONE** key in the head unit or **☎** key in the steering wheel remote control.
- You can also select **All Menus** from the full screen display ► **Phone**.

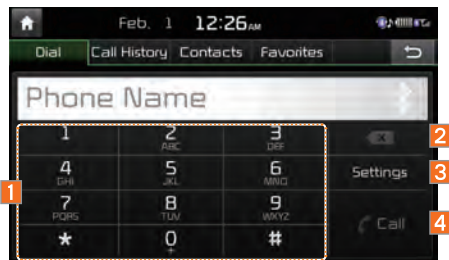


Name	Description
1 Keypad	Use the keypad to enter the phone number that you want to call. Press and hold the last number of a speed dial to dial a number that you added to the Speed Dial list in the phone
2 Delete	Delete the numbers that you entered.
3 Settings	Moves to a screen of Phone Settings.
4 Call	Makes a call after you dial a number and select CALL. If the number is listed in Dialed Calls, you can select the number and press CALL to automatically dial that number again.

i Information

- Some types of mobile phones may not support the Speed Dial function.

Accept/Reject Call

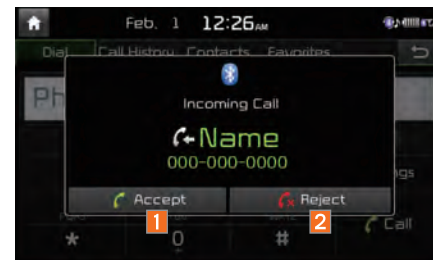


If there is an incoming call after you made a Bluetooth connection, a popup message will appear.

Name	Description
1 Accept	Answers the call.
2 Reject	Ignores the call.

i Information

- In some mobile phones, the caller's number may not be displayed, and the Ignore feature may not be supported.

Using the Menu During a Phone Call

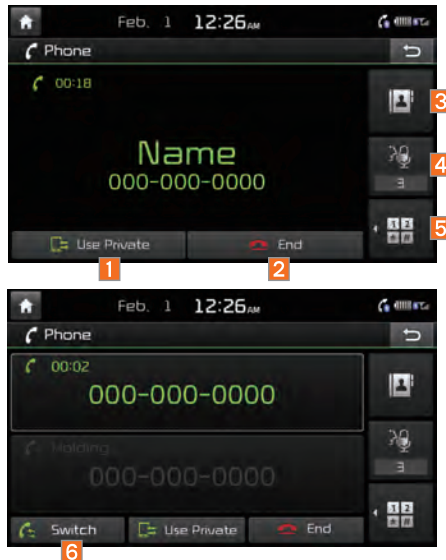

When making a call, you can use the following menu items.


Name	Description
1 Use Private	Switches a voice call from the car hands-free to the mobile phone.
2 End	Ends a call.
3 Contacts	Displays the Contacts list.
4 Outgoing Volume	Displays the Mic Volume settings. You can adjust the in-call volume that the other party hears (level 1 - 5).
5 Keypad	Moves to a screen for entering ARS numbers.
6 Switch	Switches to a call on hold, if any. You can also switch calls by selecting the number in the Information Display. The Switch function switches the current call to a waiting call in order to answer a new incoming call.

i Information

- If the caller's number is listed in Contacts, the caller's name will be displayed. Otherwise, only the number will be displayed. In some mobile phones, the phone number may not be displayed.
- In some Bluetooth devices, the Use Private feature may not be supported.
- In some Bluetooth devices, the Switch feature may not be supported.
- During a phone call on a Bluetooth Hands-free, you cannot access other modes, such as AV and Settings. You can switch to in-call volume control and navigation modes only.
- Depending on handset types, the in-call volume the other party hears may differ. If the other party hears your voice too low or too loud, adjust the mic volume.

Call History

Select **PHONE** key in the head unit ► and then **Call History** .

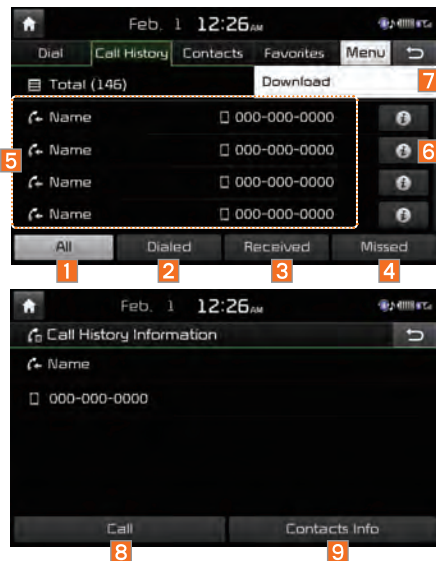


Name	Description
1 All	Lists the all call history.
2 Dialed	Lists the calls that you made.
3 Received	Lists the calls that you have received.
4 Missed	Lists the calls you missed.
5 Call History	Displays all of your call history. Select from the list to dial the number.
6 Information	Displays the details of your call history information.
7 Download	Downloads the call history information from your mobile phone.
8 Call	Dials the selected number in your Call History Information.
9 Contacts Info	Goes to the Contact Information screen if the number has been stored.

i Information

- In some mobile phones, call records may not be added to your Call History.
- Calls from restricted ID's are not added to your Call History Information.
- Up to 50 calls can be added in each Dialed Calls/Received Calls/Missed Calls list.
- The durations of each dialed/received call are not displayed in your car's Call History list.
- While the call history download is in progress, the status bar displays an icon ().
- If the call history download is turned off with the Bluetooth device, the call history download will fail.
- Some devices require a device authentication for downloading your call history. If download fails, check if the Bluetooth settings or display status are normal.
- Some devices do not support call history downloading. Check if your Bluetooth device supports downloading. For details regarding Bluetooth-supported devices and their functional compatibility, visit the following web sites:
- Kia Motors Corp : <http://www.kia.com/us/bluetooth>

Contacts

Select **PHONE** key in the head unit ► and then **Contacts**

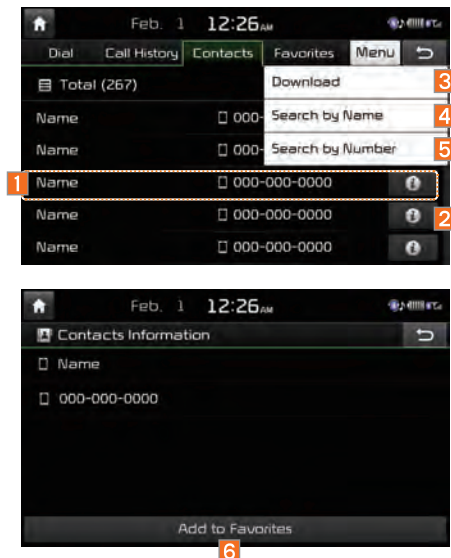

Name	Description
1 Contacts List	The list of Contacts. Select from the list to dial the number.
2 Information	Displays contact information.
3 Download	Downloads contacts from your mobile phone.
4 Search by Name	Searches Contacts for the name that you enter.
5 Search by Number	Searches Contacts for the number that you enter.
6 Add to Favorites	Adds a phone number to Favorites.

i Information

- Up to 5000 phone numbers can be downloaded from a single, paired Bluetooth device.
- You cannot edit or delete downloaded phone numbers from your car.
- Contacts can be viewed only when the Bluetooth device is connected.
- Even if the Bluetooth device is disconnected, the downloaded data will remain. (Note that deleting a paired phone will also delete all downloaded Contacts and Call History data)
- Downloaded phone numbers may be lost depending on the condition of the head unit. Keep your important data in a safe place.
- contacts from both the SIM card and your mobile phone are downloaded at the same time by default.
- the status bar displays a () while downloading contacts.
- the download will not be available if the contacts download function is turned off on your Bluetooth device.
- Some devices require a device authentication for downloading your contacts. If download fails, check your phone screen and confirm the download if necessary.

- Some devices do not support contacts download feature. Check if your Bluetooth device supports contacts downloading. For Bluetooth supporting devices details and compatibility, visit <http://www.kia.com/us/bluetooth>

Favorites

Select **PHONE** key in the head unit ► and then **Favorites** .

Name	Description
1 Favorites	Lists the phone numbers saved as Favorites. Select from the list to dial the number.
2 Add New	Adds a new number to Favorites.
3 Delete Items	Deletes numbers that you select from Favorites.
4 Delete All	Deletes all of the numbers from Favorites.

MEMO

3-12 | Using Bluetooth

04

part.4 UVO eServices

The 911 Connect feature may not operate in the following situations

Using UVO eServices and Cautions

About UVO eServices

Before using UVO eServices

Connecting Bluetooth

Pair a device from Bluetooth-enabled phone

Connecting to smartphone via USB

911 Connect

Roadside Assist

Vehicle Diagnostics

My Car Zone

Parking Minder

My POIs

eServices Guide

UVO eServices

The 911 Connect feature may not operate in the following situations

- ❑ When the vehicle ignition is not turned on
- ❑ When the phone Bluetooth® feature is set to off
- ❑ When the phone Bluetooth® cannot be connected or becomes disconnected
- ❑ When there are no phones paired with the vehicle
- ❑ When cellular service is unavailable
- ❑ When the power turns off due to phone power (battery) issues
- ❑ When a Bluetooth® device without phone feature support has been connected, such as an MP3 device
- ❑ When the system is booting
- ❑ When the system power supply is unstable
- ❑ When the attempted call is blocked due to user operations
- ❑ When the 9-1-1 call is unstable due to phone or other communication network issues
- ❑ When the call feature is not operating due to phone settings set by the user
- ❑ When the phone cannot be controlled via Bluetooth® due to phone specifications or characteristics

Using UVO eServices and Cautions

- ▣ Download the UVO eServices App and install it on your smartphone. The app can be downloaded from your smartphone's app store.
- ▣ For using UVO eServices call features such as 911 Connect, Roadside Assist and eServices Guide, smartphone must be connected with the vehicle via Bluetooth.
Pair and connect your smartphone with the vehicle. For information on connecting your Bluetooth device, refer to the smartphone user's manual and instructions on the Phone Help screen on your radio. Up to 5 Bluetooth devices can be "Pair and connect your smartphone with the vehicle" and only 1 device can be connected at a time.
- ▣ For using data communication of Vehicle Diagnostics, Parking Minder, My Car Zone and My POIs, smartphone must be connected with the vehicle via USB cable.
 - ※ The use of genuine cable is recommended. (The use of other products may result in abnormal or non-proper operation.)
- ▣ Login and activate the UVO eServices App on your smartphone.
- ▣ Some UVO eServices features will only be available when the your smartphone is connected with the vehicle via USB and the UVO eServices App is running.
- ▣ UVO eServices is fully compatible within some smartphones but may not operate properly within incompatible smartphones. To view the list of compatible smartphones, please visit MyUVO.com.
- ▣ Communication between the vehicle and smartphone app may temporarily disconnect depending on the phone state.
- ▣ If the feature is not operating properly, you may need to reset the UVO eServices App or the smartphone and try again according to the following steps.
 1. Try feature again
 2. Reset smartphone app
 3. Re-connect Bluetooth and USB cable.
 4. Reset smartphone
 5. Delete Device and pair again
- ▣ Since some services use the customer's mobile phone data plan for data communication. And thus the features will function in accordance with the cellular plan.
- ▣ Use of the most up-to-date app version is recommended.
- ▣ For smartphone related inquiries, please visit MyUVO.com.

Using UVO eServices and Cautions | 4-3

About UVO eServices

UVO eServices provides the following features through Bluetooth and through USB connection to your smartphone.

Name	Connection	Description
1 911 Connect	BT	If an airbag deploys, your vehicle automatically initiates a call to 9-1-1 and sends your vehicle's location information to the 9-1-1 operator.
2 Roadside Assist	BT & USB	If a diagnostic issue exists, you can connect with a Roadside Assist agent.
3 Vehicle Diagnostics	USB	Informs you if a diagnostic issue is found in your vehicle. If an issue is found, you can contact a call center through Roadside Assistance or reserve an appointment with your preferred Kia dealer through Schedule Service.
5 My Car Zone	USB	Keep track of pre-defined triggered alerts such as Speed Alert, Curfew Limit Alert or Geo Fence Alert from the My Car Zone feature.
5 Parking Minder	USB	Save the location of your parked vehicle on your UVO eServices smartphone app. You can check where your vehicle is parked through the UVO eServices App on your smartphone.
6 My POIs	USB	Downloads Points of Interest to your multimedia system from Google Maps and MyUVO.com
7 eServices Guide	BT	Receive guidance on how to use UVO eServices.

4-4 | UVO eServices

i Information

- 24-hour Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth within the cellular service coverage area is required.

To use UVO eServices, the following conditions must be met.

1. The UVO eServices smartphone app must be installed and you must log in using your MyUVO account credentials.
2. The smartphone must be connected via Bluetooth and USB cable to the vehicle.
3. Once this is complete, eServices must be activated.

Before using UVO eServices

Installing the UVO eServices App on your smartphone

1. Download and install the UVO eServices App on your smartphone.

The app can be downloaded from the Apple App Store or Google Play.

2. Register your vehicle and account at MyUVO.com

Note: MyUVO.com is accessible from your phone's browser.

3. Start the UVO eServices App on your smartphone and log in.


Connecting Bluetooth

Press the  key on the steering wheel or press the **PHONE** key on the UVO eServices system.

Press **SETUP** ► **PHONE** ► **Bluetooth Connection**.



Press **Yes** on the touch screen when prompted to pair a phone.

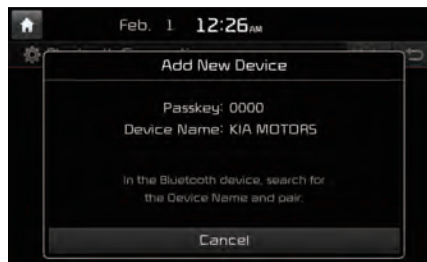

Pair a device from Bluetooth-enabled phone

1. Turn on the Bluetooth feature on your smartphone's Bluetooth settings screen.
2. Wait for "KIA MOTORS" to appear on your smartphone's Bluetooth settings screen. Note: "KIA MOTORS" may differ depending on your vehicle.

3. Select "KIA MOTORS" from your phone and verify the passkey shown on the touch screen.

The default passkey is "0000".

If phone supported SSP, check the passkey on your Bluetooth[®] device and confirm the authentication.



Pair a device from Bluetooth-enabled phone | 4-5

Connecting to smartphone via USB

1. Connect your smartphone with the vehicle via USB cable.



NOTICE

- For smartphone related inquiries, please visit MyUVO.com.


Activating UVO eServices

Press the **UVO** key, then press the

Vehicle Diagnostics or **My Car Zone** or **Parking Minder** or **My POIs** button.

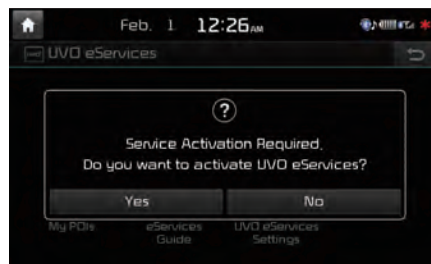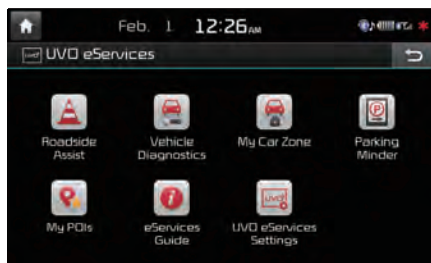

Press the **Yes**, then UVO eServices activation process will begin.

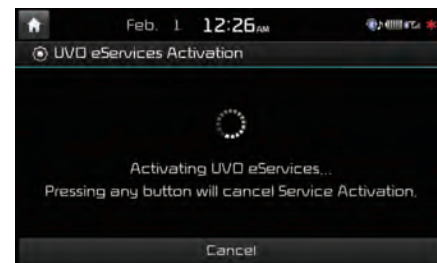

NOTICE

- Before activating UVO eServices, ensure your phone is connected to vehicle's USB input via USB cable

911 Connect


911 Connect

If an airbag deploys, your vehicle automatically initiates a call to 9-1-1 and sends your vehicle's location information to the 9-1-1 operator.

The 911 Connect feature is available only when the mobile phone is connected via Bluetooth.

By default, this feature is turned off. To turn it on, you must turn it on in the eServices Settings menu. By enabling this feature, you are agreeing the 911 Connect terms of use.

An  icon is displayed at the top of the touch screen as shown below when phone is connected to UVO eServices system via Bluetooth.

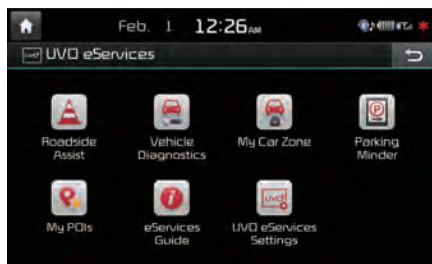

Initiating a 911 Call

If an airbag deploys, the following screen is displayed and a call is automatically placed to 9-1-1 after 10 seconds.



Once a call is connected with a 9-1-1 operator, it is possible to request emergency services to be dispatched to your location.



911 Connect | 4-7

The 9-1-1 operator may request information on the current location of your vehicle. When the 9-1-1 operator requests your vehicle location, “Sending Location” is displayed on the screen and the vehicle location is automatically sent to the 9-1-1 operator.



When the 9-1-1 operator attempts to call the driver again, the call time is displayed and allows the driver to speak with the 9-1-1 operator.




Roadside Assist

Roadside Assist

If there is any issues in the vehicle, you can connect with a Roadside Assist agent. The Roadside Assist feature can be used only when your phone is connected via Bluetooth.

Press the **UVO** key ▶ **Roadside Assist**

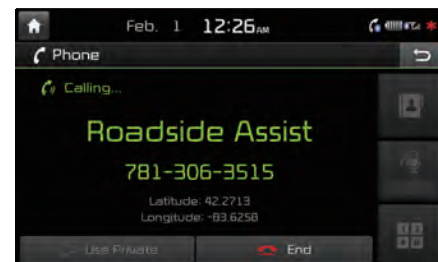


Vehicle Diagnostics

Conducting Vehicle Diagnostics

Vehicle Diagnostics is available only when the ignition is turned on and the vehicle is parked.


It also requires that UVO eServices is activated, and the Phone is connected via USB cable before starting Vehicle Diagnostics.

Press the **UVO** key ▶ **Vehicle Diagnostics**

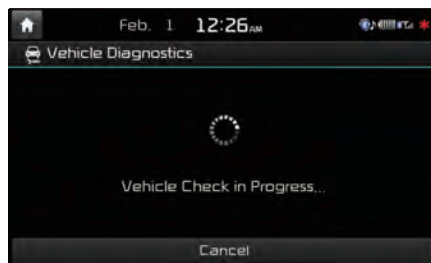

The Vehicle Diagnostics process will begin.

When a diagnostics check is in progress, keep the vehicle in park with the ignition on. To cancel diagnostics, press the **Cancel** button on the touch screen or any hardkey.

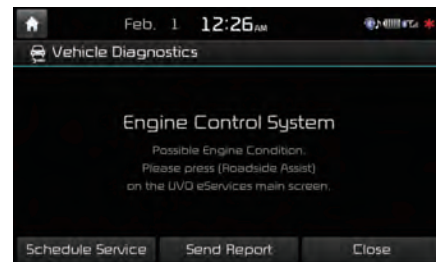


If diagnostic issues are found, press the **Send Report** button to send to your MyUVO account or press the **Schedule Service** button to schedule an appointment with your preferred or nearby Kia dealer.


Schedule Service

When scheduling an appointment using the **Schedule Service** button, pressing the **Preferred** button will allow you to request an appointment with your preferred Kia dealer and send your vehicle's diagnostics information.


Pressing the **Nearest** button will allow you to request an appointment with the nearest Kia dealer send your vehicle's diagnostics information.

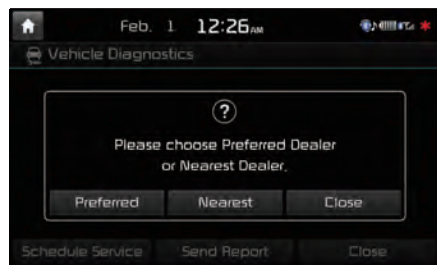

Press the **Preferred** or **Nearest** button.

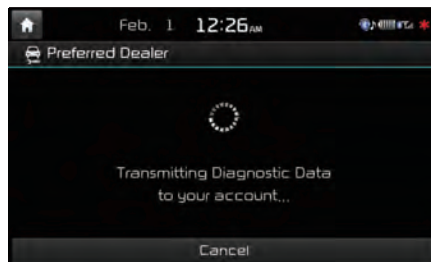


Request an appointment with Preferred or Nearest Kia Dealer and send your vehicle's diagnostics data.

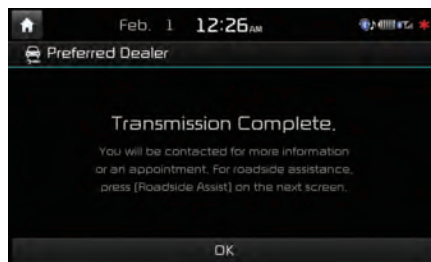

Send Report


Press the **Send Report** in the vehicle diagnostics result screen.

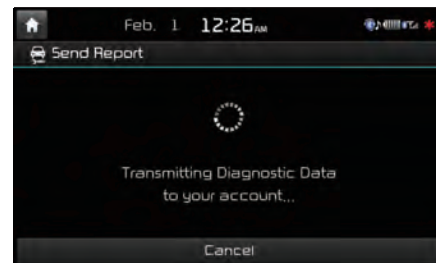

Vehicle Diagnostics Data is transmitted to your account and you can see the report on MyUVO.com




Even if diagnostic issues are not found after Vehicle Diagnostics, it is recommended that you send the diagnostic results to your MyUVO account. Press the **Send Report** button to send the diagnostics results to your MyUVO account.

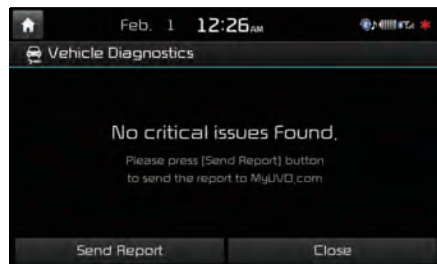


Scheduled Diagnostics

If you have set up Scheduled Diagnostics on your UVO eServices App, a vehicle diagnostics check will automatically start on the day you selected.

On the date of the Scheduled Diagnostics, the following window will be displayed.

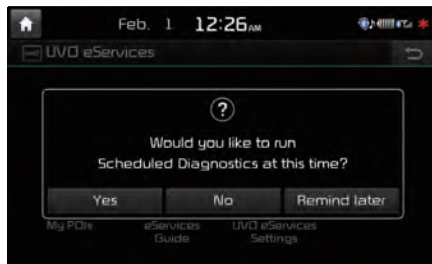

Press the **Yes** button on the touch screen to proceed with diagnostics.

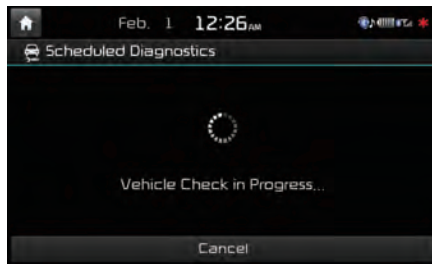


Press the **Send Report** to see the Vehicle Health Report on MyUVO.com.



Automatic Diagnostics

If a critical diagnostics issue with your vehicle's powertrain is detected, Automatic Diagnostics will be notified.

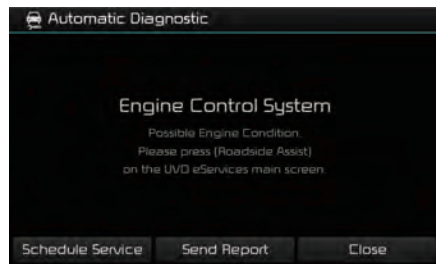

NOTICE

- The screen messages differ from vehicle diagnostics severity. Ensure your phone is connected to UVO eServices system via USB cable before using **Schedule Service** and **Send Report**.

4-12 | UVO eServices

My Car Zone

My Car Zone is a feature that provides alerts and driving history for Curfew Limit Alerts, Speed Alerts, and Geo Fence Alerts set by the user.

Name	Description
Curfew Limit Alert	Curfew Limit Alerts are alerts that are triggered when a driver is driving within a predefined time range.
Speed Alert	Speed Alerts are alerts that are triggered when a driver exceeds the predefined maximum speed.
Geo Fence Alert	Geo Fence Alerts are alerts that are triggered when a driver enters into a pre-defined geographical location.

My Car Zone feature is supported only when UVO eServices has been activated.

Press the **UVO** key ► **My Car Zone**

Curfew Limit Alerts History



Speed Alerts History




Geo Fence Alerts History



When a driver does not keep the pre-defined driving conditions, popup is displayed with voice guidance and save alerts in the My Car Zone history.


Curfew Limit Alert

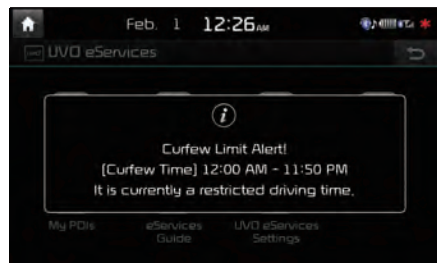

Speed Alert




Geo Fence Alert

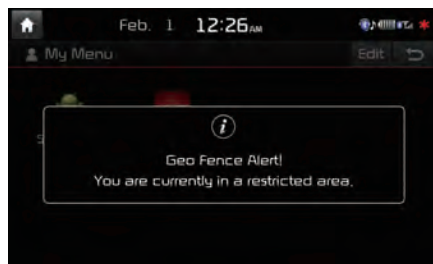

Curfew Limit Alert

You can check the Curfew Limit Alert history for a list of past triggered curfew alerts.

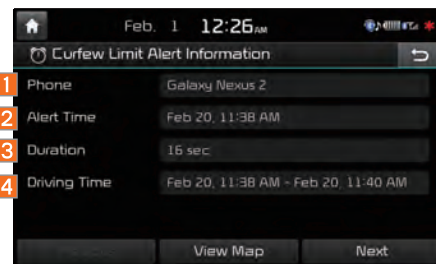

Name	Description
1 Phone	Name of phone connected upon triggered curfew limit
2 Alert Time	Initial alert time
3 Duration	Total duration of driving while curfew limit was triggered
4 Driving Time	Total driving time from turning ignition on until turning ignition off

Speed Alert


You can check the Speed Alert history for triggered speed limit alerts of the vehicle.



Name	Description
1 Phone	Name of phone connected upon triggered speed limit alert
2 Max Speed	Maximum vehicle speed upon triggered speed limit alert
3 Alert Time	Time from first triggered alert until last triggered alert
4 Duration	Total triggered alert time from turning ignition on to turning ignition off

Geo Fence Alert

You can check the Geo Fence Alert history for triggered Geo Fence alerts of the vehicle.

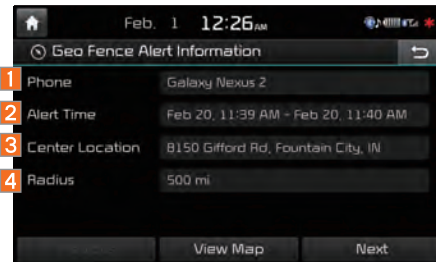


Name	Description
1 Phone	Name of phone connected upon triggered geo fence alert
2 Alert Time	Initial alert time
3 Center Location	Radius from set center location address
4 Radius	Radius from set geo fence address

To check My Car Zone alert history from your smartphone, you must first send the alert history to your MyUVO account.



From the Menu tab, Press the **Send Data** button on the touch screen.

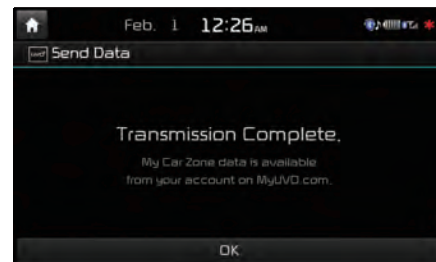

NOTICE

- Before using **Send Data**, ensure your phone is connected to the UVO eServices system via Bluetooth.

Parking Minder

Sending Parking Location

The location where your vehicle is currently parked can be sent to your smartphone.

The Parking Minder feature is only available when the ignition is turned on and the vehicle is parked.

Ensure that the UVO eServices system is activated via USB with the UVO eServices App running on your smartphone before using this feature.

After parking the vehicle, press the **UVO** key ► **Parking Minder** to send the vehicle's location to your smartphone.



Once the parking location has been sent, you can view your vehicle's location from the UVO eServices App on your smartphone.




NOTICE

- When the parking location is being sent, do not drive the vehicle or turn off the ignition. Ensure that you have logged in to the UVO eServices App, and your phone is connected to multimedia system through USB cable.
- When ignition is turned off while phone is connected via USB, Parking Minder can be transferred automatically if the option is set up in UVO eService Settings

My POIs


Sending Points of Interest to Your Navigation System

Press the **UVO** key ▶ **My POIs**

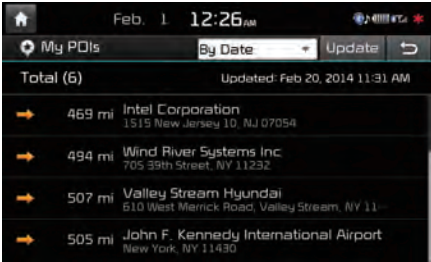

Press **Update** button on the touch screen.

UVO eServices system will attempt to download the POIs from MyUVO via your smartphone.

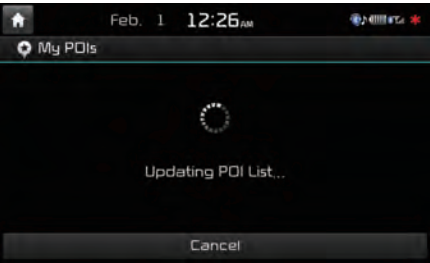

- NOTICE**
- Ensure that you have logged in to the UVO eServices App, and your phone is connected to the UVO eServices system via USB cable.

Once the POIs have been downloaded, select a POI from the list to see more details.

eServices Guide


eServices Guide

eServices Guide provides guidance on how to use UVO eServices.

This feature is only available when the mobile phone is connected via Bluetooth.

Press the **UVO** key ▶

eServices Guide

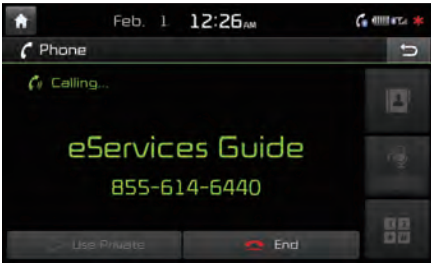

UVO eServices Settings

Refer to **SETUP** ▶ **UVO eServices Settings**

05

part.5 Navigation

Basic Features

Search

Route

Navigation Settings


Troubleshooting

Navigation

Basic Features


Operating Navigation Screen

Basic features on the map screen.

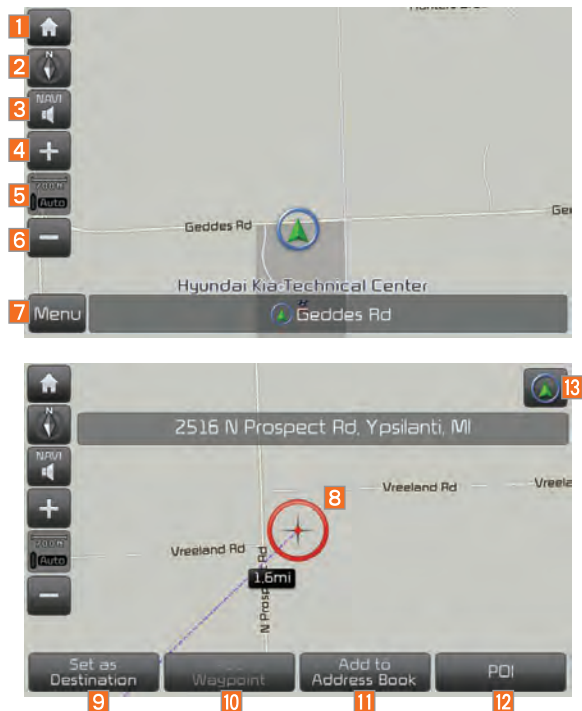

	Name	Description
1		Go to the Home screen.
2		Change the map view mode.
3		Voice Guidance On/Off.
4		Zoom in the map.
5		Set the zoom level automatically according to the guidance.
6		Zoom out the map.
7		Quick and easy selection of a destination and options.
8		Touch to scroll the map.
9		Quick and easy selection of a destination from the map screen.
10		Set a waypoint to the current route.
11		Save frequently used address to address book.
12		Find a POI(Point Of Interest) around the current position.
13		View the vehicle's current position on the map screen.


Changing Map View

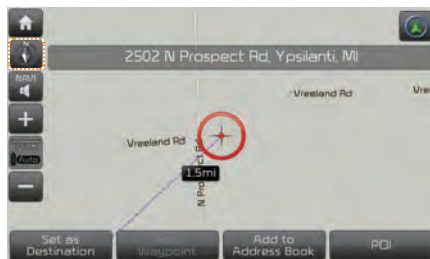

Touch the compass arrow icon to toggle between a map oriented to the North, or oriented parallel to the vehicle's heading.

Voice Guidance Volume On/Off


Press the NAVI sound button to turn the volume on and off.

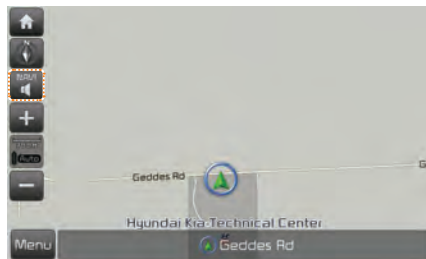

Zoom In /Zoom Out

Zoom the map view screen in and out.

Zoom In and Zoom Out

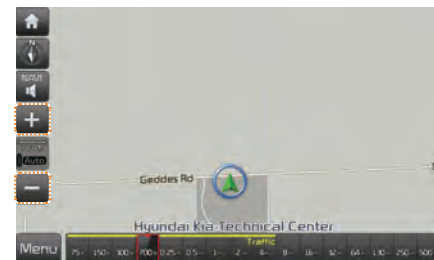

Press **+** or **-** to set the zoom level.

Map Scale

Sets the zoom level automatically according to the road class.



Name	Description
 Scale Fix	Manually adjust the map scale.
 Auto Scale	Change the map scale automatically depending on the road class.

Menu


Route

Press **Menu** button on the bottom left of the screen ► Press **Route** button.




Press the **Route** button to set **Route Options** or **Detour**.

Route Option

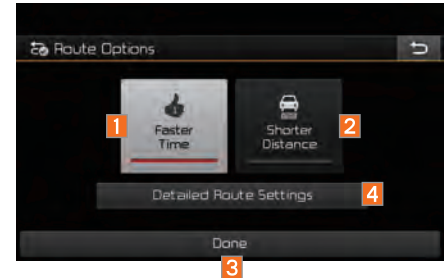

Name	Description
1 Faster Time	Calculates the fastest time of arrival.
2 Shorter Distance	Calculates the shortest distance to destination.
3 Done	Save the option. Route will be calculated based on the selected option when setting a destination.
4 Detailed Route Settings	Set more route options.

Detour

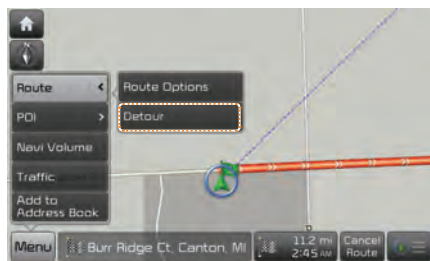

The **Detour** button is active only when the route is planned.



Selected distance is detoured from the current location.




Press the **Using Map** button to select the distance ahead to avoid. (Highlighted grey indicates distance to avoid)

Name	Description
1 Shorter	Reduce the length of the section to avoid.
2 Longer	Increase the length of the section to avoid.
3 Detour	Confirm detour.

Navigation Volume

Press the **Navi Volume** button to adjust the volume.

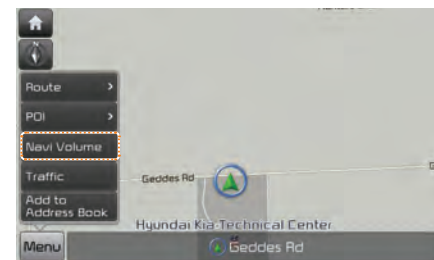

Press the **Navi Volume** button.



Name	Description
1	Set the volume to mute.
2	Turn the volume down.
3	Turn the volume up.
4	Slide to set the volume.

Nearby POIs

Display nearby POIs on the map.


View Nearby POIs

Select the **Menu** on the bottom of the left screen. ► Select the **POI** button.




Press **ON**, **OFF** button to set whether to show nearby POIs or not. When categories are selected, they will appear on the map. (ex. Gas Station)

The lists of nearby gas station are displayed.

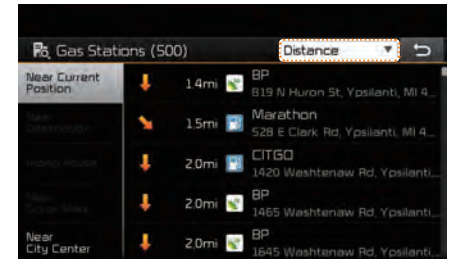

Display in order of distance, name, and price.

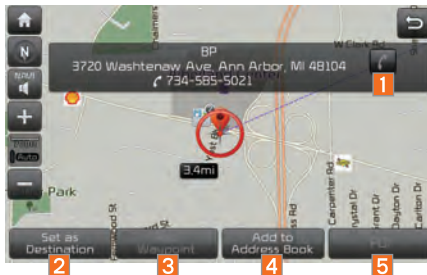


Name	Description
1	Call to the selected location (Phone needs to be connected via Bluetooth).
2	Set the place as a destination.
3	Set the location as a waypoint.
4	Save the location.
5	Search nearby POIs.

• Editing




Change the shortcut POIs to display (ex. Gas Station)

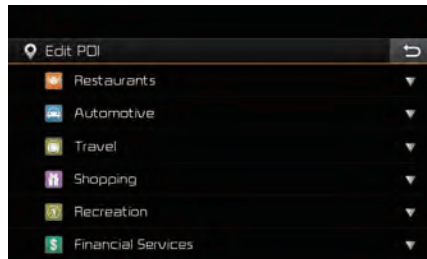

Select the desired category to change. (ex Restaurants)




Select new category to display (ex. American)

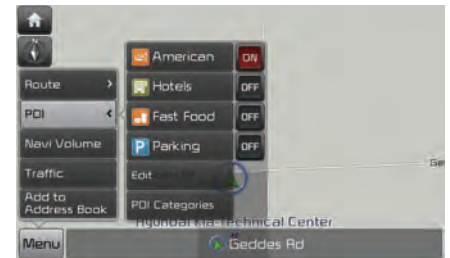

Gas Stations is changed to American.


• Searching POI categories

Select the **Menu** button on the bottom left of the screen. ► Select the **POI** button. ► Select the **POI Categories** button. ► Select the desired item.


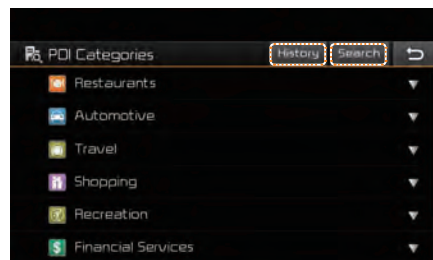


Select the item to search.

Press the **History** button to check the previous search result.

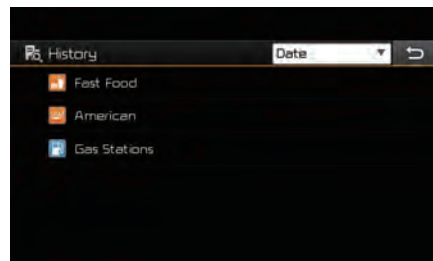

Press the **Search** button to search the POI category by name.

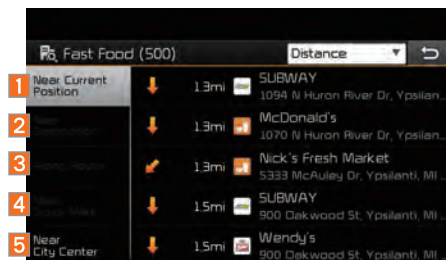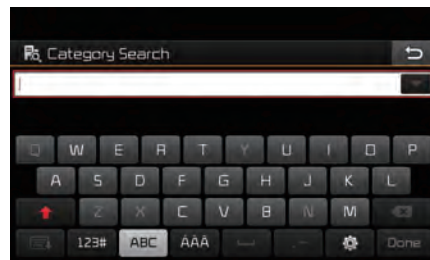


Select the desired POI to check the location and for detailed information.

Name	Description
1	Search POI around the current position.
2	Search POI around the destination. i Active only when a route's planned.
3	Search POI along route. i Active only when a route's planned.
4	Search POI around the current cursor when the map scrolled. i Active only when the cursor position is different from the vehicle position.
5	Search POI around the city selected.

Traffic List


Press the **Menu** button. ► Select the **Traffic** button.

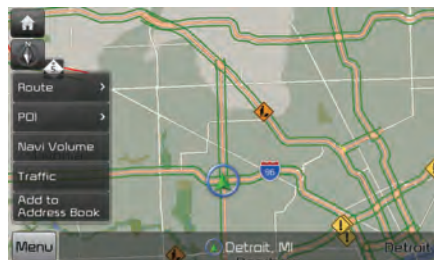

On the traffic list, the current traffic/road event information is displayed in order of distance.

Name	Description
1	Direction from the current location.
2	Distance from the current location (mi or km).
3	Displays traffic info symbol based on the type of event.
4	Description of traffic event.


Additional traffic information may be displayed upon clicking on the button **Category**.

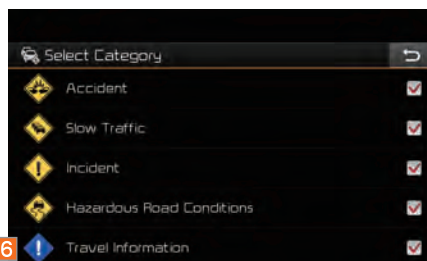

Name	Description
1	Display 'Road Construction' information.
2	Display 'Accident' information.
3	Display 'Slow Traffic' information.
4	Display 'Incident' information.
5	Display 'Hazardous Road Conditions' information.
6	Display 'Travel Information'.

When On Route is activated, only traffic information on your route is displayed.



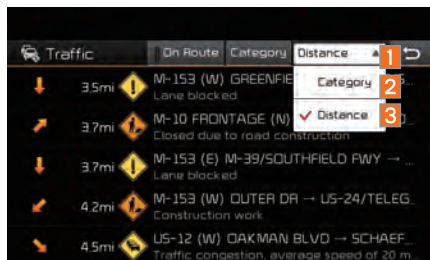


On the traffic list, the current basic traffic/road event information is displayed in order of distance.

Select the combo box to change the arrangement in order of distance/category.

Name	Description
1	Select the combo box to arrange.
2	Arrangement by category : Display traffic information arranged in order of traffic information event type.
3	Arrangement by distance : Display the traffic information in order of distance closer to the current location.

Traffic detail

Press the **Menu** button on the bottom left of the screen. ► Select the **Traffic** button.

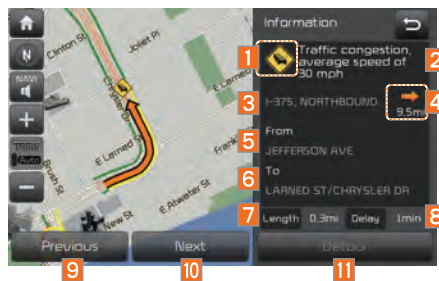

Select the traffic information on the traffic list to display the detailed screen as shown in the screen.

Display the symbol of traffic event and arrow which indicates the road from start to end of the traffic event. Detailed information is available on the right screen.

Name	Description
1	Symbol of traffic event.
2	Event name of traffic information.
3	Road name / road number including direction.
4	Direction and distance from the current location.
5	Intersection where traffic event starts.
6	Intersection where traffic event ends.
7	Total distance of traffic event.
8	Estimated delay time.
9	Check the previous traffic information.
10	Check the next traffic information.
11	Detour the route based on the traffic information.

Traffic detour


Press the **Menu** button on the bottom left of the screen. ► Select the **Traffic** button.

If there is traffic information on the route, it is possible to detour the route with traffic information and search other routes.



When the **Detour** button is enabled in the View Traffic Detail, press the **Detour** button to detour.



Select the desired section.

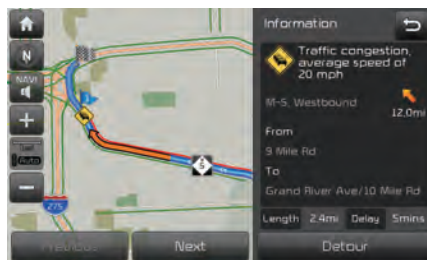


Check the information and press the **Detour** button.

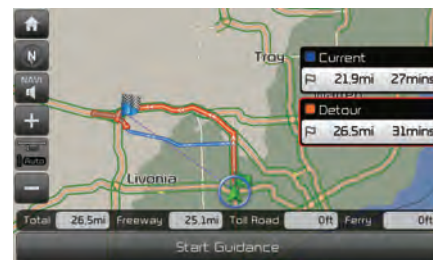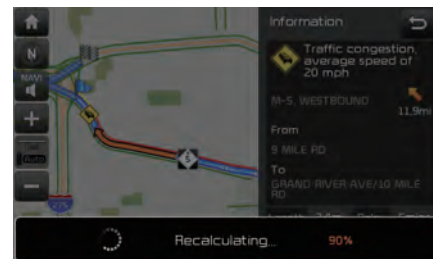

Press the **Start Guidance** button to apply the detoured sections and search other routes.

Traffic Pop-up

Press the **Menu** button on the bottom left of the screen. ► Select the **Traffic** button.

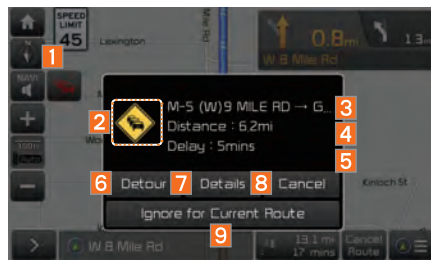


If there is “red traffic flow” on the route, a traffic information pop-up is displayed.


On the traffic information pop-up window, brief information is displayed and Details and Detour can be selected.

If you do not want to pop up anything on the current route, select Do not show for this route.


Name	Description
1	Pop-up Icon
2	Symbol of traffic event
3	Road Name / Road Number
4	Distance from current location.
5	Estimated delay time.
6	Search detour route.
7	View the detailed information regarding traffic event.
8	Close the pop-up message.
9	Set not to display pop-up on the current route. (Maintained until the destination is reset)

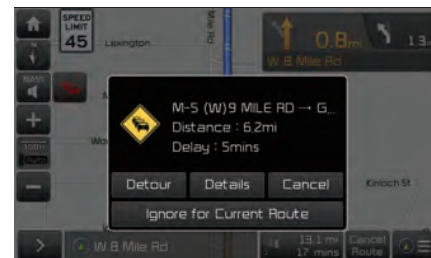

On the traffic information pop-up, select detour or details to perform action.

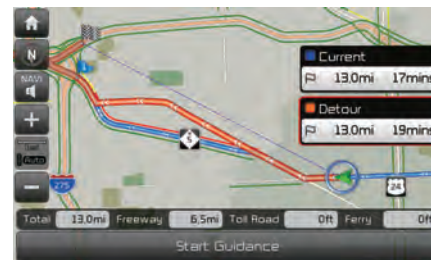


Press **Detour** to change the route.

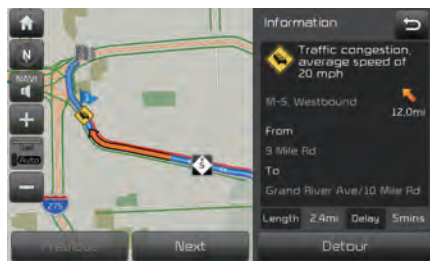


Press **Details** for further information.

Add to Address Book

Press the button on the left bottom of the screen. ► Select the **Add to Address Book**

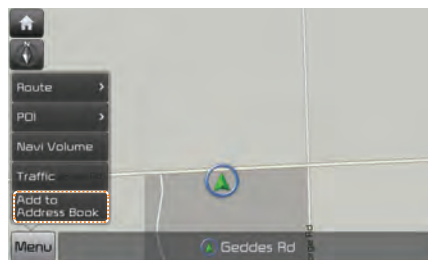

To store the location on the current map to the address book.

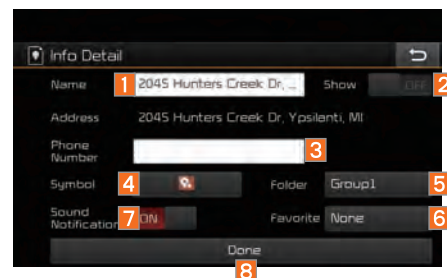



Name	Description
1	Change the name.
2	Press the ON , OFF button to display on the map.
3	Enter the phone number.
4	Possible to register Symbol .
5	Change the stored Folder .
6	Designate to the Favorite item. When the favorite is designated, press the button on the bottom of the Destination menu and request the route guide immediately.
7	Press the ON , OFF button to set the sound notification.
8	Save the setting.

Search

Places


You can enter POI Name, Address, or Coordinates that you wish to search by.

Press the **NAVI** head unit key. ▶ Select the **Destination** tab. ▶ Select the **Enter Search** Search Bar.

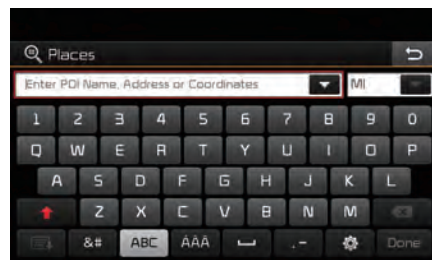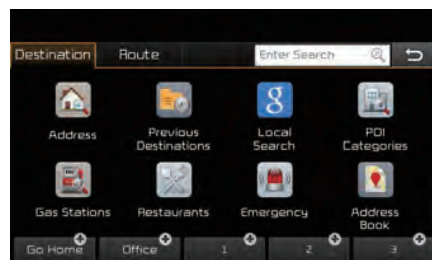


5-14 I Navigation


Enter the POI Name, Address and Coordinates of the location you want in the input window above, and press the **Done** button.

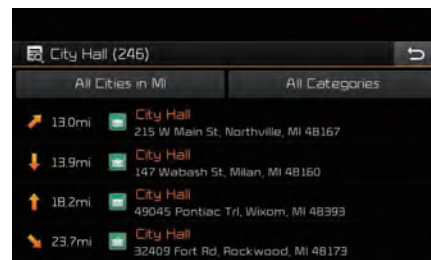


If you select a location from the search result list, it will bring you to the point.

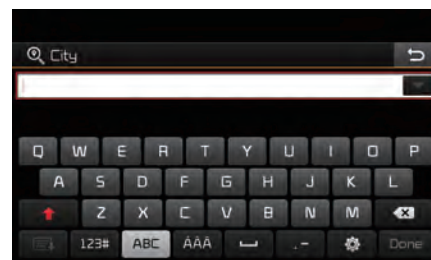

If you press the **All Cities in MI** button on the search result screen, it will bring you to the City search screen where you can filter the search results by city names.

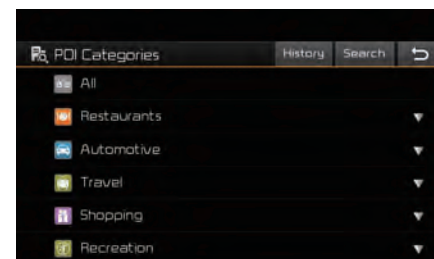

If you press the **POI Categories** button from the search result screen, it will bring you to the POI Categories screen where you can filter the search results by POI Categories.

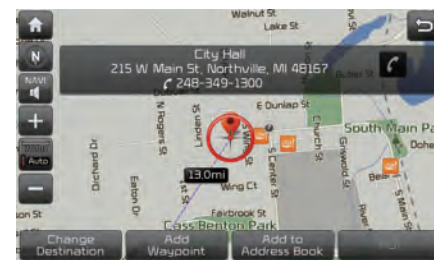


It will bring you from the search result screen to the screen of the point where you can set a destination or a waypoint, or register the current position to the address book.

Address

Set destination by address search.


Press the **NAVI** head unit key. ▶ Select the **Destination** tab. ▶ Select the **Address** icon.

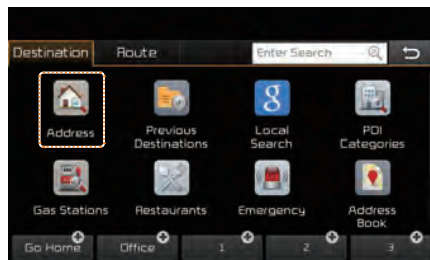

How to Search Address



Name	Description
1	Select state to search.
2	Enter house number. If you don't know the house number, press Skip button.
3	Enter the street name. Entering exact street name is required. The letters on the keyboard are automatically enabled and disabled based on the search result, and words are automatically completed. When same street names are available in other cities, the lists of city are displayed.
4	Select a city before entering the street name. Addresses are searched only from the selected city.

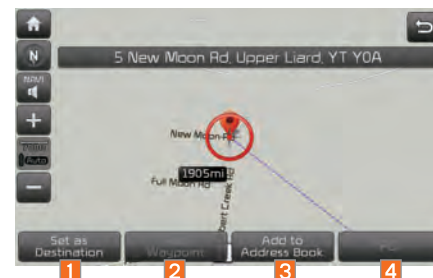



Enter the address to check the location information on the map.

Name	Description
1 Set as Destination	Set the location as a destination.
2 Add Waypoint	Set the location as a waypoint.
3 Add to Address Book	Save the location.
4 POI	Search nearby POIs.

Previous Destination


Select from previously inputted addresses and POIs.

Press the **NAVI** head unit key. ▶ Select the **Destination** tab. ▶ Select the **Previous Destinations** icon.

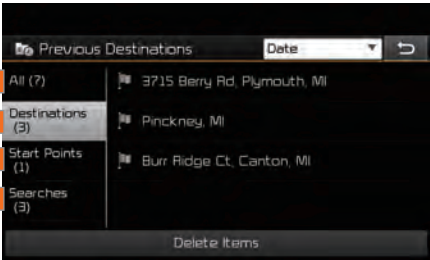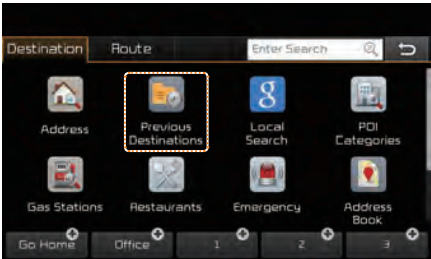

Arrange by all, latest destinations, latest searched places and latest departing places. Arrange in order of date and time.

Name	Description
1 All	Display all destinations, departing places, and searched places.
2 Destinations	Display previous destination places for route guidance.
3 Start Points	Display previous departing places for route guidance.
4 Searches	Display previously searched places for route guidance. i But, not displayed when the searched places are set as destination.

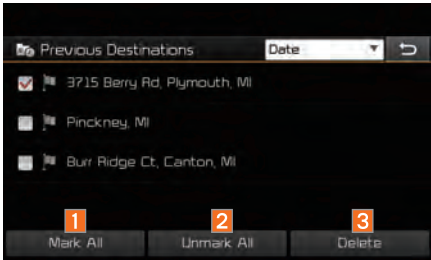


Press the **Delete** button to delete the information.


Name	Description
1 Mark All	Select all.
2 Unmark All	Deselect all.
3 Delete	Delete the selected item(s).

Local Search


Press the **NAVI** head unit key. ▶ Select the **Destination** tab. ▶ Select the **Local Search** icon.

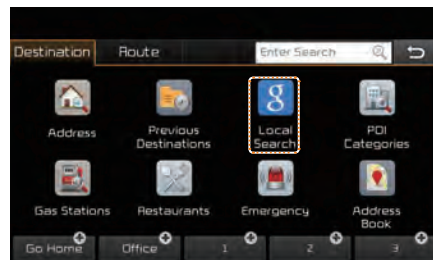


Runs Google Local Search.

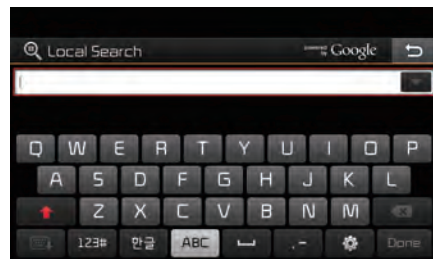

Enter the desired keywords and press the **Done** button.

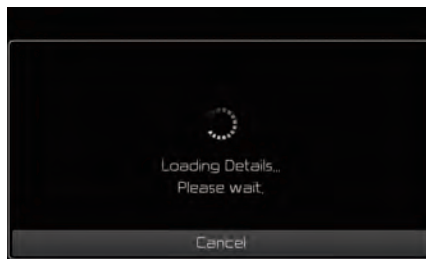


Searching is in progress.

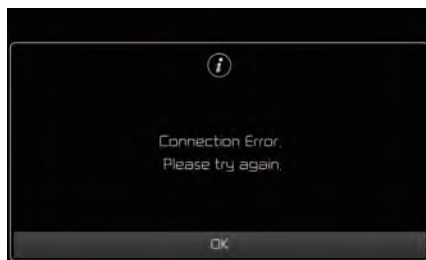

If search failed, the above screen is displayed. Please try again.





Search result displayed. Select one of the search results.

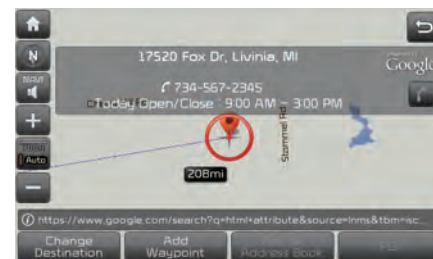


Press the **Set as Destination** button to start guidance.

POI Categories


Press the **NAVI** head unit key. ▶ Select the **Destination** tab. ▶ Select the **POI Categories** icon.

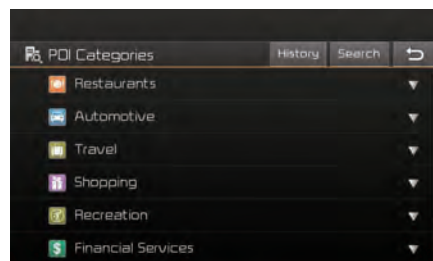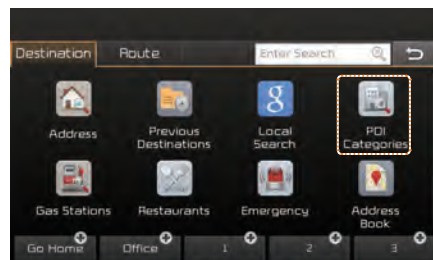

Select the desired item.

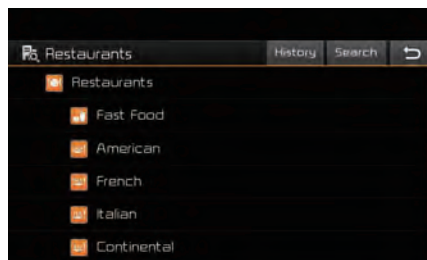

Select the desired item in the sub-categories.


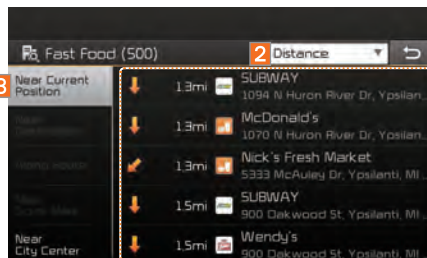


Name	Description
1	Select the desired destination among the searched items and add it as a way point.
2	Arrange in order of Distance and Name .
3	Arrange in order of Near Current Position , Near Destination Along Route , Near Scroll Mark and Near City Center .

Gas Station

Search gas stations.

Press the **NAVI** head unit key. ▶ Select the **Destination** tab. ▶ Select the **Gas Stations** icon.

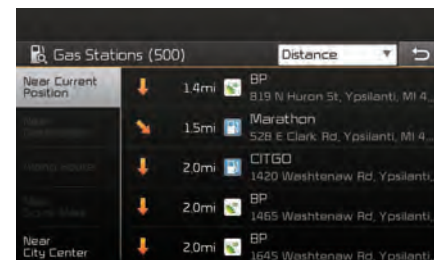
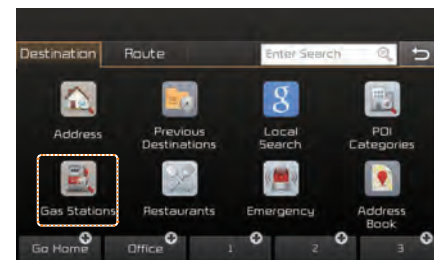


Select the desired destinations among the search items.

Restaurants

Search restaurants.

Press the **NAVI** head unit key. ▶ Select the **Destination** tab. ▶ Select the **Restaurants**

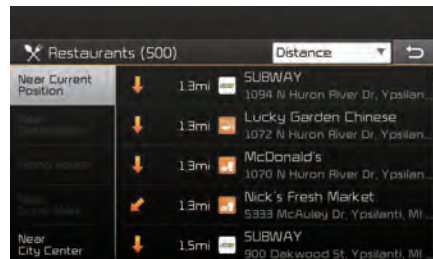
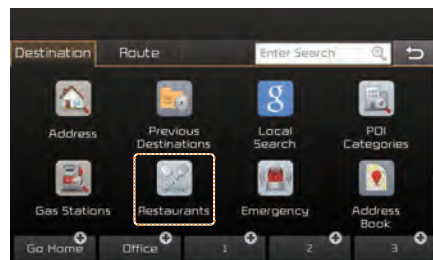


Select the desired destination among the searched items.


Emergency

Search emergency facilities.

Press the **NAVI** head unit key. ▶ Select the **Destination** tab. ▶ Select the **Emergency**

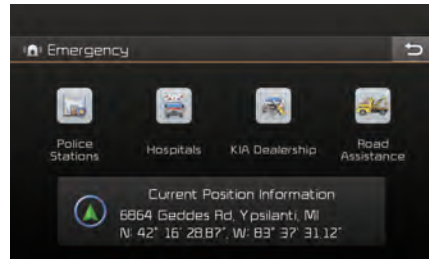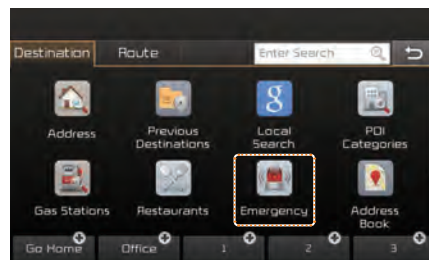

Check the current location information and select the desired item in the sub menu (ex. Police Station)


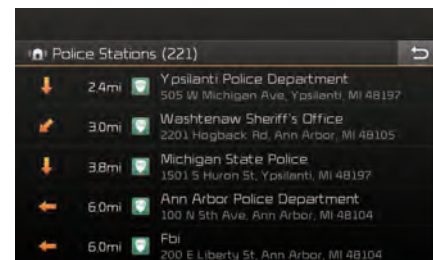


Select the desired destination among the searched items.


Address Book

Search the destination with the address book.

Press the **NAVI** head unit key. ▶ Select the **Destination** tab. ▶ Select the **Address Book**

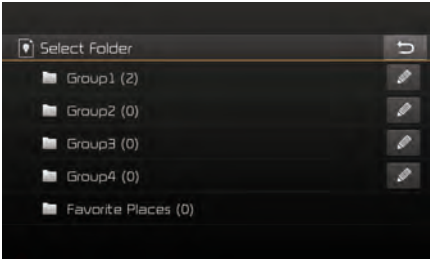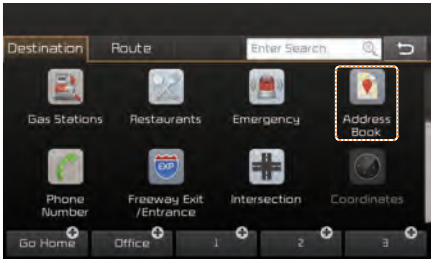

Select the desired group.
Save in the Favorite Places, then route can be set easily by using 3 buttons such as **Go Home** and **Office** on the button of the menu.

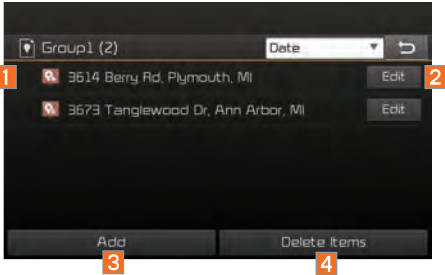


Name	Description
1	Select the desired destination from the searched items.
2	Edit the destination.
3	Register a new destination.
4	Delete the desired item.

Phone Number


Press the **NAVI** head unit key. ▶ Select the **Phone Number** to search POI by phone.




Search destination by phone number.

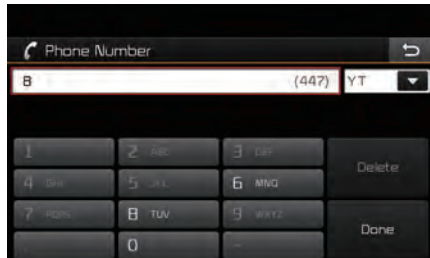

Type phone number to search. To search for a list of numbers, press **Done** when results are narrowed and the button **Done** is activated.

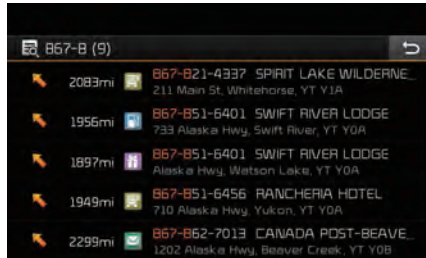



Select the desired destination among the searched items.

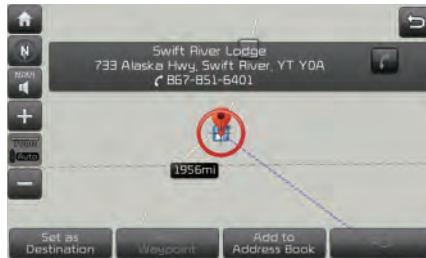


Press the **Set as Destination** button to start guidance.

Freeway Exit / Entrance

Press the **NAVI** head unit key. ▶ Select the **Freeway Exit/Entrance** to search by freeway exit/entrance.

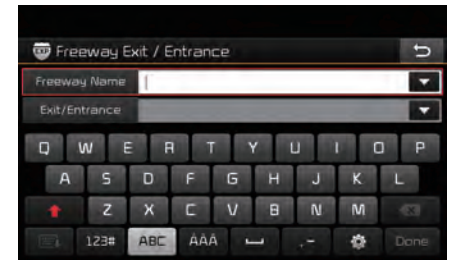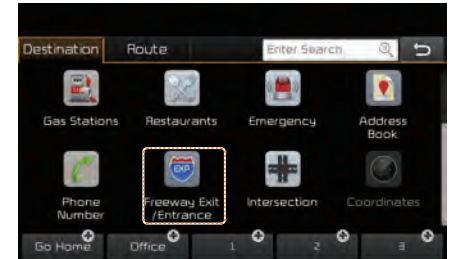


Type freeway name and exit/entrance.

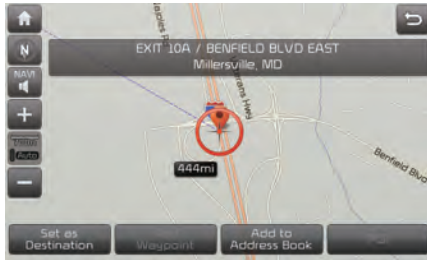

Press the **Set as Destination** button to start guidance.

Intersection

Press the **NAVI** head unit key. ▶ Select the **Intersection** to search by intersection.

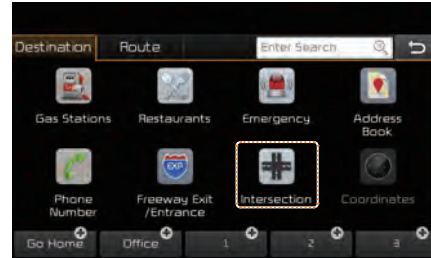


Type 1st Street name, the State, 2nd Street name.



Press the **Set as Destination** button to start guidance.

Coordinates

Press the **NAVI** head unit key. ► Select the **Coordinates** to search by coordinates.

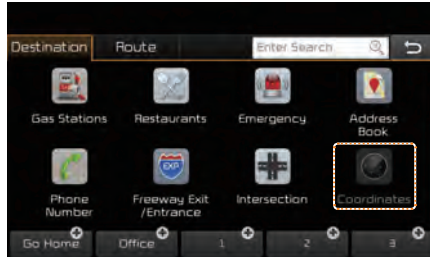


There are two ways to search by coordinates (D.M.S or Decimal degrees). After typing coordinates, press the **Done** button to search.




Press the **Set as Destination** button to start guidance.

Favorite Places


Set the route using your favorite places. Press the **NAVI** head unit key. ► Select the **Destination** tab. ► Select from our favorite places.

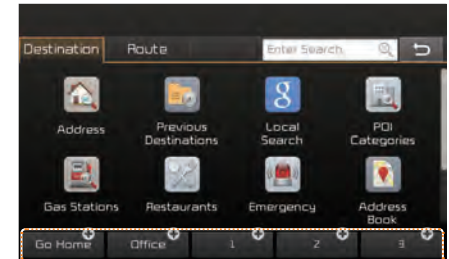


On the button where locations are not registered, the **+** icon is displayed. When a location is registered, the **+** button disappears and the buttons 1 to 3 are displayed as your favorite places.

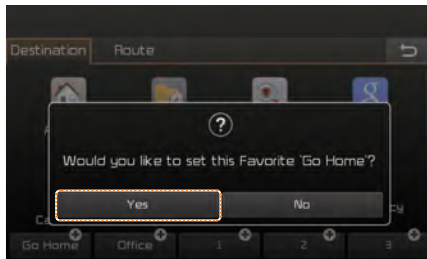

Press the **Go Home** button and then popup appears. Press the **Yes** button for setting.

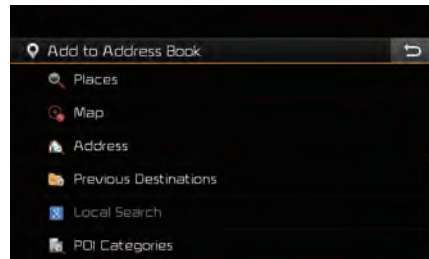


Register **Go Home** in various searching methods. By using the same methods, possible to register Office, Special 1, Special 2, and Special 3.

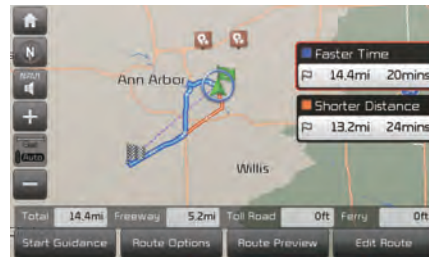

Route guidance starts by pressing one of favorite place buttons.

Route Setting

After searching the destination, possible to set a route.

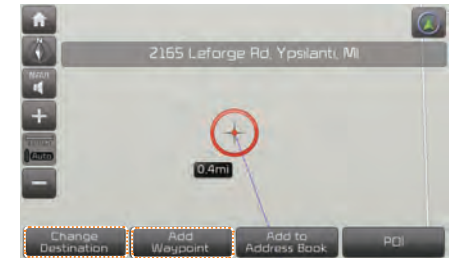


While the destination is set, the buttons **Change Destination** and **Add Waypoint** appear. Press each button to change a destination or add a waypoint.

Destination Setting(Change)



After searching the destination, press the **Set as Destination** button to set the location as a destination and search a route.

All Routes

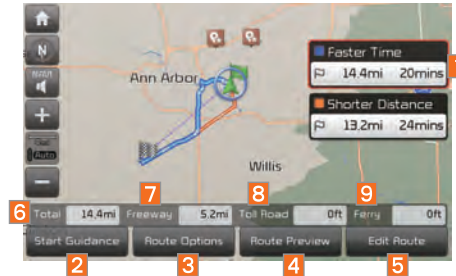


When the alternative routes option is enabled in navigation setting, two routing options are displayed based on faster time and shorter distance.

- **Faster Time** : Select time-optimized route, being the fastest roads.
- **Shorter Distance** : Select short distance, irrespective of how fast or slow progress will be

Name	Description
1 Faster Time	Display total distance, travel time, and toll fees. Select the desired route.
2 Start Guidance	Start the guidance with the route.
3 Route Options	Change the route option.


Name	Description
4 Route Preview	Preview turn-by-turn list.
5 Edit Route	Edit the route.
6 Total	Display total distance of the route.
7 Freeway	Display length of freeway on the route.
8 Toll Road	Display length of toll road on the route.
9 Ferry	Display length of Ferry route on the route.

The route will be calculated using the option "Faster Time" by default.

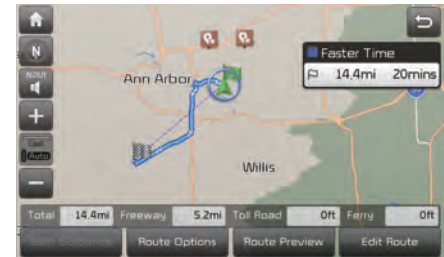


Search | 5-25

Alternative routes can be suggested if necessary, **SETUP** key ► **Navigation** Icon
► **Route** ► **Alternative : ON**

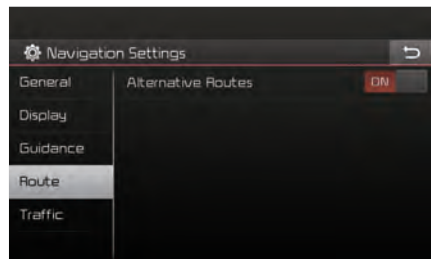


Adding Waypoint

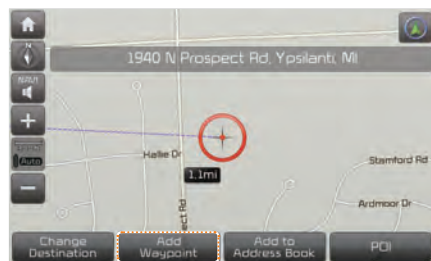


Press the **Add Waypoint** button to set the position as a waypoint and search the route.

5-26 | Navigation

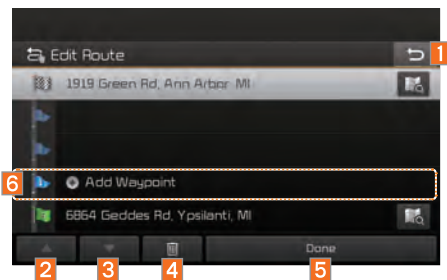


Name	Description
1	Display the selected point on the map screen.
2	Move the selected item up.
3	Move the selected item down.
4	Delete the selected item.
5 Done	Press the button to finish editing.
6 Add Waypoint	Press the button to add waypoint.

Registering Location

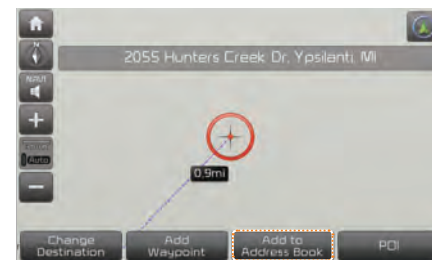

Press **Add to Address Book** at the desired location to register the location.


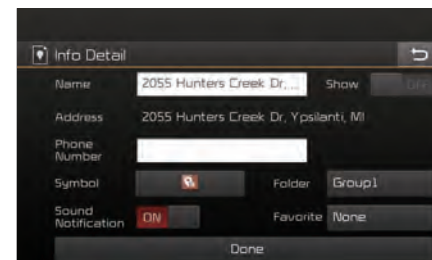


Enter the detailed information of the location to save.


Route Guidance

Possible to get the detailed information on route guidance.

Route Guidance Screen

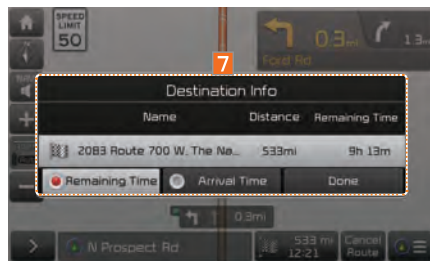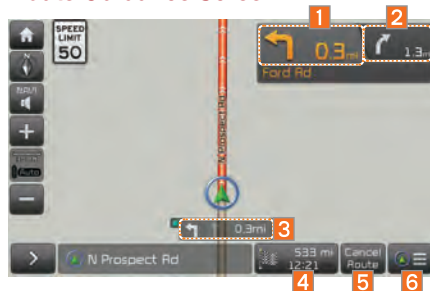

Remaining Time : Display the time remaining until destination.

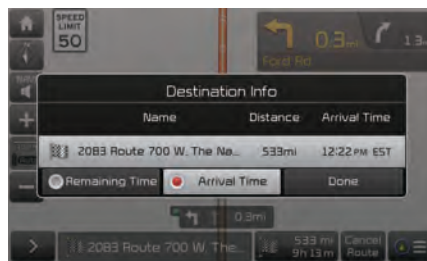


Arrival Time : Display the estimated time of arrival.

Name	Description
1	Displays the distance and direction to the first turn point.
2	Displays the distance and direction to the second turn point.
3	Displays the lane information at the current location. Display the recommended direction in white, travelable direction in white, and the non-travelable direction in grey.
4	Displays the distance to the destination and the estimated time of arrival. Press the button to check the detailed information.
5	Cancel the route.
6	Possible to change to preliminary guidance, TBT guidance, and zoom-on guidance screens.
7	Displays the destination information.



Search I 5-27

Split Screen during Route Guidance

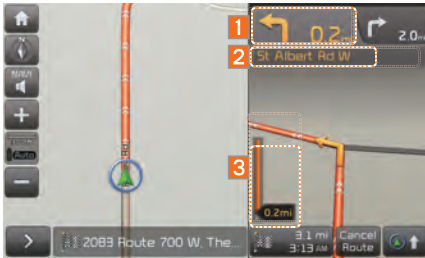

Approaching the turning point, the detailed road and travel information is automatically displayed on the right side of the screen.

Name	Description
1	- Turn Point : Display direction and shape to turn shortly. - Distance to turn : Display distance to next turn point.
2	Road name to maneuver : Info of the road.
3	Detail Distance Bar : Display distance to next turn point.

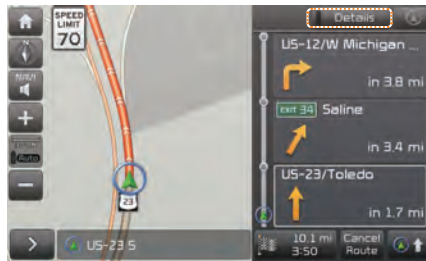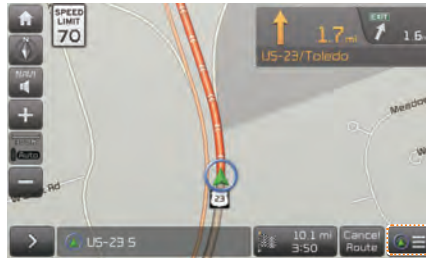

Touch the  button to change display view mode as below.


Name	Description
	Display the full map screen.
	Junction View, Split screen. (Active only when images are available)
	Display Turn-by-turn information.

 additional info can be displayed on Freeway.



Additional info of Freeway exit or Rest area can be displayed by pressing the  button.

Detailed information for POIs around freeway exit is listed by pressing POI symbols.

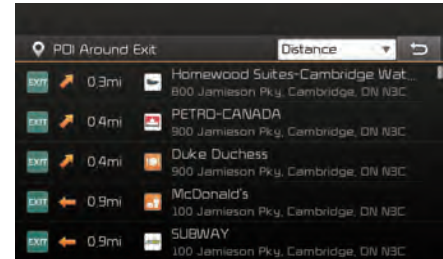


Route


Canceling Route

Cancel the route.

Press the **NAVI** head unit key ► Press the **Route** tab. ► Select **Cancel Route**.

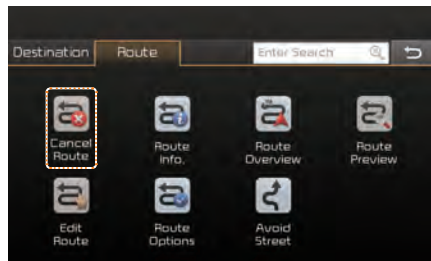

Click **Cancel Route** the icon.

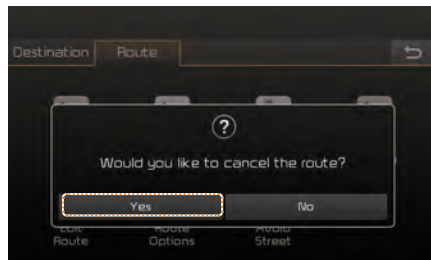


Press the **Yes** button to cancel the route.

Display Route Information

Press the **NAVI** head unit key ► Press the **Route** tab. ► Select **Route Info.**




Press the **Route Info.** icon.

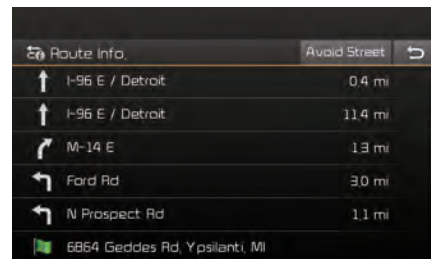

Check the information on the map. Select the desired item to see the map information.

Avoiding a road


Click the **Avoid Street** button to avoid the street or road.

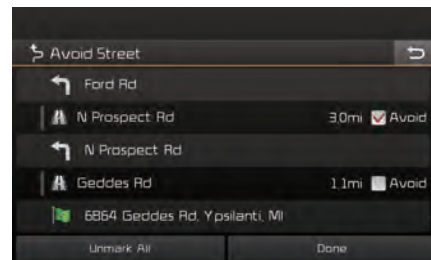


Check the desired item and press the **Done** button to finish.

Route Overview

Check the information on route including the distance, Estimated time, toll fees, etc.
Press the **NAVI** head unit key ► Press the **Route** tab. ► Select **Route Overview** .

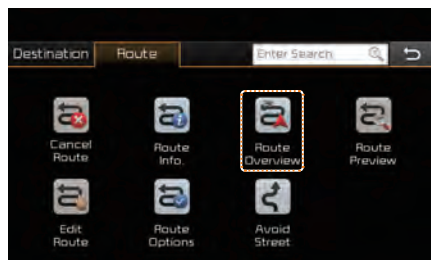


Press the **Route Overview** icon.

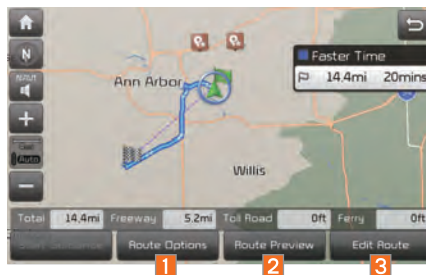


Name	Description
1 Route Options	Change the search option.
2 Route Preview	Preview turn-by-turn list.
3 Edit Route	Provide information on surrounding facilities.

Route Preview

Check the detailed turn-by-turn list.
Press the **NAVI** head unit key ► Press the **Route** tab. ► Select **Route Preview** .

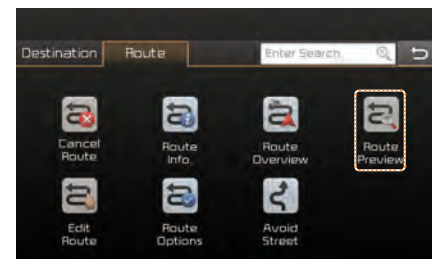

Press the **Route Preview** icon.

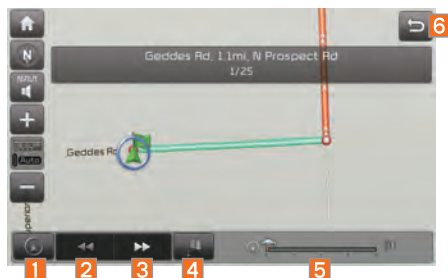


Name	Description
1 Departure Place	Move to the departure location.
2 Previous	Move to the previous maneuver.
3 Forward	Move to the next maneuver.
4 Destination	Move to the destination location.
5 Section Displaying Bar	Touch bar to move to the specific position.
6 ↶	Close the route preview.


Editing Route

Edit the current route.


Press the **NAVI** head unit key ► Press the **Route** tab. ► Select **Edit Route**.

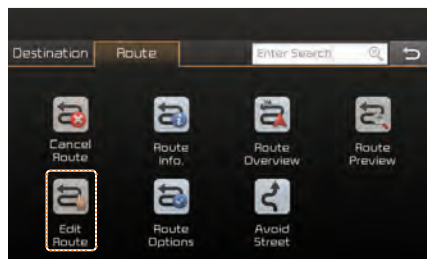

Press the **Edit Route** icon.

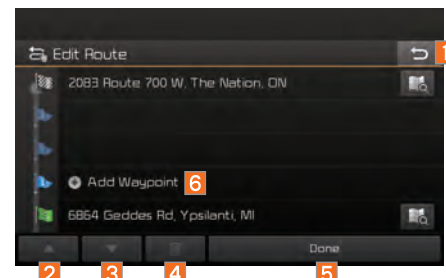


Name	Description
1 ↶	Display the selected point on the map screen.
2 ▲	Move the selected item up.
3 ▼	Move the selected item down.
4 🗑️	Delete the selected item.
5 Done	Press the button to finish editing.
6 Add Waypoint	Press the button to add a waypoint.

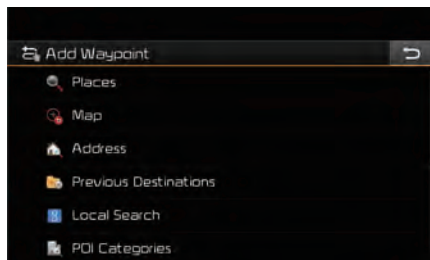


Add the waypoint through various searching methods.

Route Options

Press the **NAVI** head unit key ► Press the **Route** tab. ► Select **Route Options**.

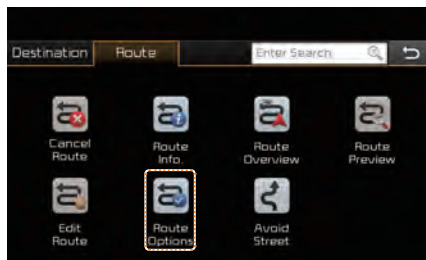

Press the **Route Options** icon.

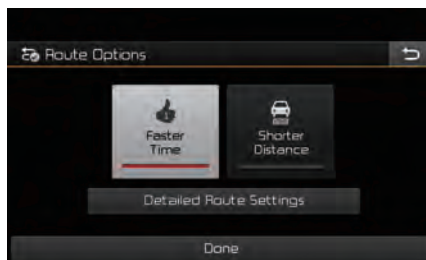


Choose between faster time or shorter distance.

Avoid Street

Search new route by avoiding the selected street(s).

Press the **NAVI** head unit key ► Press the **Route** tab. ► Select **Avoid Street**.

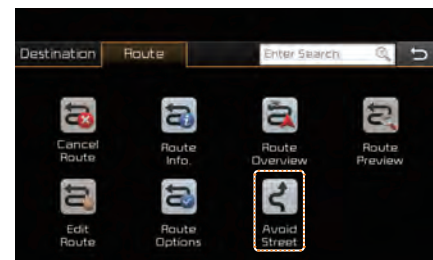

Press the **Avoid Street** icon.




Press the **Done** to plan new route after selecting the street(s) that you want to avoid.

Navigation Settings

General

Change general settings.

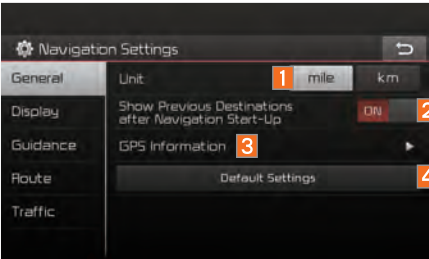

Name	Description
1	Change the unit of mile , km .
2	Press the ON , OFF button to change the previous destination view setting when starting the navigation.
3	Check the GPS information.
4	Press the Default Settings button to initialize.




Press the GPS Information to display the detail GPS satellites information.

Name	Description
1 Receiving	Active when current position is being calculated.
2 Speed	Display current speed of the vehicle.
3 Location	Display current position of the vehicle.
4 Elevation	Display current elevation of the vehicle.
5 Time	Display time.
6 Date	Display date.

Display

Change the display environment settings.

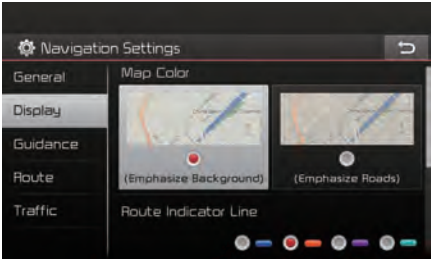


Change the map colors and the route guidance line colors.



Change the vehicle symbol.

Guidance


Change the guidance setting.

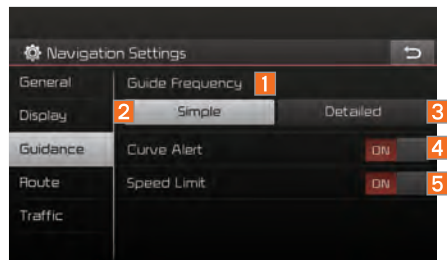

Name	Description
1	Set the frequency of guidance.
2	Route guidance is given less frequently.
3	Guidance will be provided frequently.
4	Change whether to turn curve alert ON and OFF .
5	Change whether to show speed limit by pressing ON and OFF .

Route

Change the route setting.

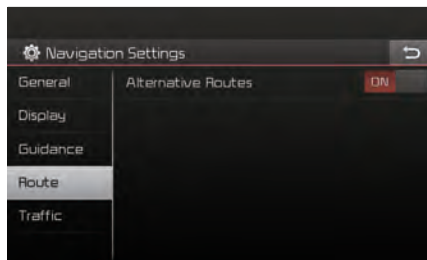

Press the **ON** or **OFF** button to change the **Alternative Routes** setting.

- Alternative on : Alternative routes will be suggested(depending on the route preference between “Faster time” and “Shorter Distance”).




NOTICE

- Alternative routes can be shown only while the vehicle is not moving.
- Alternative off : No alternative routes will be suggested. Guidance will start right after calculating with the route preference (Faster time or Shorter distance).

Traffic

Change the traffic information setting.

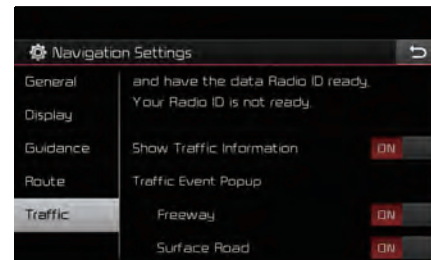

Press the **ON** or **OFF** button to change the settings.

- Show Traffic Information On/Off : Select whether to display traffic information or not.
- Traffic Event Pop-up Freeway On/Off : Select whether to display Pop-up message for traffic information on freeway.
- Traffic Event Pop-up Surface Road On/Off : Select whether to display Pop-up message for traffic information on surface road.

Troubleshooting

The current position as shown on the navigation may differ from the actual position under the following conditions.

The following occurrences are not malfunctions :

- | | |
|--|--|
| <ul style="list-style-type: none"> When driving on Y-shaped roads with narrow angles the current position may be displayed in the opposite direction Within city streets, the current position may be displayed on the opposite side or on an off-road position When changing the zoom level from maximum to a different level, the current position may become displayed on a different road If the vehicle is loaded onto a ferry or a car transport vehicle, the current position may become stalled on the last position prior to loading When driving on a spiral-shaped road When driving in mountain regions with sharp turns or sudden brakes When entering a road after passing an underground parking structure, building parking structure, or roads with many rotations When driving in heavy traffic with frequent starts and stops | <ul style="list-style-type: none"> When driving under slippery conditions, such as heavy sand, snow, etc. When driving on spiral-shaped roads When the tires have recently been replaced (Especially upon use of spare or studless tires). When using tires of improper size When the tire pressure for the 4 tires are different When the replacement tire is worn or used (Especially studless tires having passed a second season). When driving near high-rise buildings When a roof carrier has been installed When a long distance route is calculated while driving on an expressway In such cases, continued driving will automatically enable the system to conduct map matching or use updated GPS information to provide the current position (In such cases, up to several minutes may be required) |
|--|--|

Correct route guidance may not occur due to search conditions or driving position.

The following occurrences are not malfunctions :

- | | |
|---|--|
| <ul style="list-style-type: none"> Guidance to go straight may be given while driving on a straight road Guidance may not be given even when having turned at an intersection There are certain intersections in which guidance may not occur A route guidance signaling for a u-turn may occur in some No u-turn intersections | <ul style="list-style-type: none"> Route guidance signaling entrance into a No-entry zone may occur (No-entry zone, road under construction, etc.) Guidance may be given to a position that is not the actual destination if roads to reach the actual destination do not exist or are too narrow Faulty voice guidance may be given if the vehicle breaks away from the designated route. (e.g. if a turn is made at an intersection while the navigation provided guidance to go straight.) |
|---|--|

These situations may occur after conducting route calculation.

The following occurrences are not malfunctions :

- | | |
|---|---|
| <ul style="list-style-type: none"> Guidance may be given to a position differing from the current position when turning at an intersection When driving in high speeds, route recalculation may take a longer period of time Route guidance signaling for a u-turn may occur in some No u-turn intersections | <ul style="list-style-type: none"> Route guidance signaling entrance into No-entry zone may occur. (No-entry zone, road under construction, etc.) Guidance may be given to a position removed from the actual destination if roads to reach the actual destination do not exist or are too narrow Faulty voice guidance may be given if the vehicle breaks away from the designated route (e.g. If a turn is made at an intersection while the navigation provided guidance to go straight.) |
|---|---|

Navigation Settings I 5-35

END USER LICENSE AGREEMENT

PLEASE READ THIS END USER LICENSE AGREEMENT (“EULA”) CAREFULLY BEFORE USING THE NAVIGATION SYSTEM.

This is a license agreement between you and Hyundai MnSoft, INC. including its affiliates (“Kia”) regarding a copy of the Kia navigable map database together with associated software, media and explanatory printed documentation published by Kia(jointly the “Product”). The Product is provided for your personal, internal use only and not for resale. It is protected by copyright and is subject to the following terms which are agreed to by you, on the one hand, and Kia and its licensors (and their licensors and suppliers) (collectively, “Licensors”) on the other hand.

By using the Product, you accept and agree to all terms and conditions in this End User License Agreement (“EULA”). IF YOU DO NOT AGREE TO THE TERMS OF THIS EULA, YOU MUST PROMPTLY EXIT THE PRODUCT OPERATION PROGRAM AND DO NOT USE OR ACCESS TO THE PRODUCT. YOU AGREE THAT YOUR RIGHTS UNDER THIS EULA MAY BE TERMINATED AUTOMATICALLY WITHOUT NOTICE IF YOU FAIL TO COMPLY WITH ANY TERM(S) OF THIS EULA.

Terms and Conditions

Personal Use Only. You agree to use this Product together with Kia authorized application for the solely personal, non-commercial purposes for which you were licensed, and not for service bureau, time-sharing or other similar purposes. Accordingly, but subject to the restrictions set forth in the following paragraphs, you agree not to otherwise reproduce, copy, modify, decompile, disassemble, create any derivative works of, or reverse engineer any portion of this Data, and may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws. You may not assign this EULA or any of the rights or licenses granted under this EULA, except when installed in the system for which it was created.

Restrictions. Except where you have been specifically licensed to do so by Kia, and without limiting the preceding paragraph, you may not use the Product (i) with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications; or (ii) with or in communication with any positioning devices or any mobile or wireless-connected electronic or computer devices, including without limitation cellular phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs.

COPYING OR USE OF THE PRODUCT EXCEPT AS PERMITTED BY THIS EULA IS UNAUTHORIZED AND IS COPYRIGHT INFRINGEMENT UNDER THE LAWS OF YOUR COUNTRY. IF YOU COPY OR USE THE PRODUCT WITHOUT KIA PERMISSION, EXCEPT AS PERMITTED BY THIS EULA, YOU ARE VIOLATING THE LAW AND LIABLE TO KIA AND ITS LICENSORS FOR DAMAGES, AND YOU MAY BE SUBJECT TO CRIMINAL PENALTIES.

THE PRODUCT MAY INCLUDE ENFORCEMENT TECHNOLOGY DESIGNED TO PREVENT (i) UNAUTHORIZED COPYING OF THE PRODUCT ONTO PHYSICAL STORAGE MEDIA OR VIA TRANSFER OVER THE INTERNET OR OTHER ELECTRONIC COMMUNICATION MEANS AND/OR (ii) ILLEGAL USAGE OF THE PRODUCT OTHER THAN BY A SPECIFICALLY AHTORIZED DEVICE. YOU AGREE THAT KIA MAY USE THESE MEASURES TO PROTECT KIA AND THE LICENSORS AGAINST COPYRIGHT INFRINGEMENT.

Uploads. The Product may provide functionality through which you are able to upload certain information about your use of the Product (collectively, “Uploads”) to Kia servers or receive other services from Kia (collectively, the “Services”). If you use such functionality, you authorize Kia to retain your Uploads on its servers. Kia will have no obligation to provide any Services, may change the form and nature of any Services at any time with or without notice to you, will have no liability whatsoever to you for any failure of the Product or Services to transmit your Uploads to or from Kia servers, may cease providing any Services at any time with or without notice to you, and will have no obligation to retain your Uploads (or any other materials you may provide to Kia) on its servers or return your Uploads (or any other materials you may provide to Kia) to you before deleting them from its servers.

Storage. The Product may provide functionality through which you are able to store information (such as images) on the device on which you are using the Product. Kia will have no liability whatsoever to you or any third party for any failure of the Product to store any such information on such device.

Personal Information. By using the Product, you agree to the collection, retention and processing of your personal data (including the location of your mobile device) by Kia and to the storage and processing of such personal information on computers located outside of the country in which you reside. Even though Kia has taken steps intended to protect your personal information from being intercepted, accessed, used, or disclosed by unauthorized persons, Kia cannot fully eliminate security risks associated with your personal information and cannot guarantee that its systems will not be breached. See [*] for additional information regarding Kia use of your personal information.

WARNING. THE PRODUCT REFLECTS REALITY AS EXISTING BEFORE YOU RECEIVED THE PRODUCT AND IT COMPRISES DATA AND INFORMATION FROM GOVERNMENT OTHER SOURCES. ACCORDINGLY, THE PRODUCT MAY CONTAIN INACCURATE OR INCOMPLETE INFORMATION DUE TO THE PASSAGE OF TIME, CHANGING CIRCUMSTANCES, SOURCES USED AND THE NATURE OF COLLECTING COMPREHENSIVE GEOGRAPHIC PRODUCT, ANY OF WHICH MAY LEAD TO INCORRECT RESULTS. THE PRODUCT AND SERVICES MAY NOT TO BE USED FOR SAFETY OF LIFE APPLICATIONS, OR FOR ANY OTHER APPLICATION IN WHICH THE ACCURACY OR RELIABILITY OF THE PRODUCT OR SERVICES COULD CREATE A SITUATION WHERE PERSONAL INJURY OR DEATH MAY OCCUR. **DO NOT ATTEMPT TO CONFIGURE THE PRODUCT OR INPUT INFORMATION WHILE DRIVING. FAILURE TO PAY FULL ATTENTION TO THE OPERATION OF YOUR VEHICLE COULD RESULT IN DEATH, SERIOUS INJURY, OR PROPERTY DAMAGE. BY USING THE PRODUCT, YOU ASSUME ALL RESPONSIBILITY AND RISK.**

Disclaimer of Warranty. THE PRODUCT IS PROVIDED TO YOU “AS IS,” AND YOU AGREE TO USE IT AT YOUR OWN RISK. SUBJECT TO THE APPLICABLE LAWS, KIA AND THE LICENSORS MAKE NO GUARANTEES, REPRESENTATIONS OR WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, ARISING BY LAW OR OTHERWISE, INCLUDING BUT NOT LIMITED TO, CONTENT, QUALITY, ACCURACY, COMPLETENESS, EFFECTIVENESS, RELIABILITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT, USEFULNESS, USE OR RESULTS TO BE OBTAINED FROM THE PRODUCT, OR THAT THE PRODUCT OR SERVER WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT ERRORS IN THE PRODUCT OR NONCONFORMITY TO ITS DOCUMENTATION CAN OR WILL BE CORRECTED. YOU ACKNOWLEDGE THAT THE PROVISIONS OF THIS SECTION ARE A MATERIAL INDUCEMENT AND CONSIDERATION TO KIA AND THE LICENSORS TO GRANT THE LICENSE CONTAINED IN THIS EULA AND TO PROVIDE YOU WITH ACCESS TO THE SERVICES.

Limitation of Liability: TO THE MAXIMUM EXTENT PERMITTED UNDER THE APPLICABLE LAWS, KIA AND THE LICENSORS SHALL NOT BE LIABLE TO YOU: IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, INCURRED BY YOU OR ANY THIRD PARTY WHICH MAY ARISE IN CONNECTION WITH OR RESULT FROM THE USE OR POSSESSION OF THE PRODUCT; OR FOR ANY LOSS OF DATA, PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THE PRODUCT, ANY DEFECT IN THE PRODUCT, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF KIA OR THE LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES AND NOTWITHSTANDING THE FAILURE OF ANY LIMITED REMEDY PROVIDED HEREIN.

Exclusions. Some jurisdictions do not allow certain warranty exclusions or the limitation or exclusion of liability, so to that extent the above exclusion may not apply to you. To the extent that Kia may not, as a matter of applicable law, disclaim any implied warranty or limit its liabilities, the scope and duration of such warranty and the extent of Kia liability shall be the minimum permitted under such applicable law. The disclaimer of warranty and limitation of liability set forth in this EULA does not affect or prejudice your statutory rights where you have acquired the Product otherwise than in the course of business.

Third-Party Copyright Notices. The third-party sourced data has been incorporated into or made a part of the Product and is being sub-licensed to you subject to the terms and conditions of this EULA. In this regard, you shall not remove or tamper with any intellectual property rights notice attached or used in relation to data supplied by the Licensors.

Entire Agreement. This EULA is the entire agreement between Kia (and the Licensors) and you pertaining to the subject matter hereof, and supersedes in their entirety any and all previous written or oral communications or documents (including, if you are obtaining an update, any agreement that may have been included with an earlier version of the Product) with respect to such subject matter.

Governing Law. This EULA shall be governed by the laws of the jurisdiction in which you reside at the date of acquisition of the Product. Should you at that moment reside outside the European Union or Switzerland, the law of the jurisdiction within the European Union or Switzerland where you acquired the Product shall apply. In all other cases, or if the jurisdiction where you acquired the Product cannot be defined, the laws of the Republic of Korea shall apply. This EULA will not be governed by the U.N. Convention on Contracts for the International Sale of Goods. The courts competent at your place of residence at the time you acquired the Product shall have jurisdiction over any dispute arising out of, or relating to this EULA, without prejudice to Kia right to bring claims at your then current place of residence.

About Map Updates

- You can contact your Kia dealer or call at 888-757-0010.

Information

- This product requires regular updates for new functions and map updates. Updating may require up to 1 hour depending on the data size.
- Turning off the power or ejecting the SD card during the update process may result in data loss. Make sure to keep the ignition on and wait until updating is complete.

CAUTION

- Please use only the SD card that was included with the vehicle purchase.
- The use of a separately purchased SD card may result in damage due to heat related deformation.
- Product malfunctions caused by the use of separately purchased SD cards shall not be covered within the product warranty.
- Repeatedly connecting/disconnecting the SD card in a short period of time may cause damage to the device.

part.6 Voice Recognition

What is Voice Recognition?

Precautions Required for Successful Voice Recognition

Starting/Ending and Setting Voice Recognition

Voice Recognition Screen Overview

Voice Commands

UVO Voice Local Search

Siri Eyes Free

06

Voice Recognition

What is Voice Recognition?

Voice recognition technology runs the system as ordered by recognizing your voice command to ensure the safe operation of multimedia while you are driving the car.

Regretfully, not all possible voice commands are recognized by the system due to technological limitations. To make up for these limitations, the system displays the voice commands that are available for you to use.

There are errors in communication between people. Likewise, voice recognition sometimes misunderstands your voice command in some circumstances. If this happens, either check the screen for the available options and say the command again, or manually select and press the button for the corresponding command on the screen.

Precautions Required for Successful Voice Recognition

1. Voice recognition supports only the commands that are displayed on the screen and written in the User's Guide.
2. To ensure the correct recognition and execution of your command, say your command when you hear the beep after a voice prompt.
3. Voice recognition automatically ends if:
 - 1) A call is incoming or outgoing
 - 2) A media (USB or iPod, etc.) is connected or disconnected
 - 3) The front or rear view camera is operated (optional)
 - 4) The car engine starts or stops
 - 5) A system key, such as **RADIO** or **MEDIA** is selected
 - 6) An emergency occurs, for example re-searching for the route after the navigation route has been lost
4. The microphone that recognizes your voice is located over the head part in the driver's seat. To make your commands better understood, keep your body straight in the driver's seat when speaking the command.
5. Speaking naturally and clearly will ensure better recognition of your voice commands.
6. In the following cases voice recognition will be affected by ambient noise.
 - 1) The sound of the wind if any window or the sun roof is open.
 - 2) A strong wind blowing from the air vents. Set climate control to blow softer than level 3.
 - 3) Vibrations from passing through a tunnel.
 - 4) Vibrations from driving on an uneven road.
 - 5) Storms and heavy rain.

Starting/Ending and Setting Voice Recognition

Starting Voice Recognition

Press the  key briefly (less than 0.8 seconds) on the steering wheel remote control to activate voice recognition.



Ending Voice Recognition

1. Select "Exit" to the left of the bottom to end voice recognition.
2. Press and hold (over 0.8 seconds) the  key on the steering wheel remote control to end voice recognition.



Quick Run of Voice Recognition (Manual Mode)

Usually, you are supposed to say a command to execute the desired operation after the voice guidance. However, it takes a little time to wait for the voice guidance. If you would like to activate the desired operation more quickly, you can just touch the commands displayed on the screen.

This feature is useful when you feel the voice guidance is too long or voice commands do not work as you desired.



Extending the Standby Time

When the system is waiting for your command, after the voice prompt and beep have been heard, if you press the voice recognition icon less (shorter than 0.8 seconds), then the beep will sound again and standby mode will restart.


When activated, voice recognition waits for your command for 5 seconds. If you say nothing for 5 seconds, a voice prompt will ask for your command.



Skiping Prompt Messages

When you hear the prompt message, lightly touch the voice recognition icon on the steering wheel remote control to skip the message and go directly to standby mode to say your command.

This results in faster operation when you feel the message is too long or you already know the command to use.

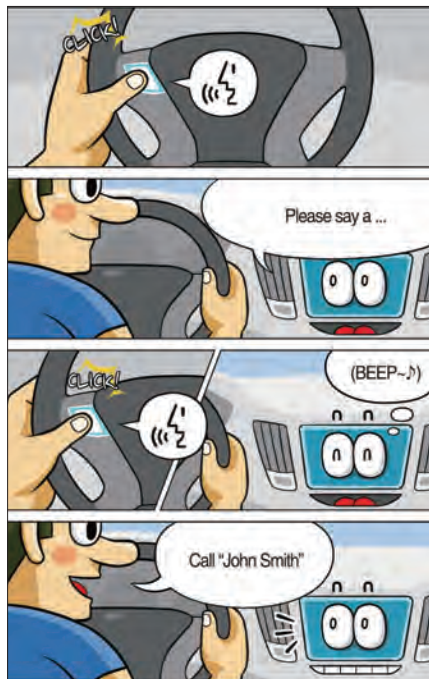

Adjusting Voice Recognition Volume

During voice recognition, turn the volume knob to the left/right to adjust the message volume.



Voice Recognition Screen Overview


Start Screen



Name	Description
1 Most frequently used commands	Displays the six most frequently used commands.
2 Not available command	Displays commands that are not available due to a failure in meeting the conditions for using them and thus need additional settings. The conditions required for using them will be described briefly under each command.


Name	Description
3 Voice recognition status icons	Standby Voice guidance Voice command process
4 User's speaking volume being recognized	Displays the voice command volume in real time.
5 Recognized results	Displays the voice recognition result.
6 Help	Displays all available help commands in a tree format.
7 Exit	Ends the voice recognition.

Help Display

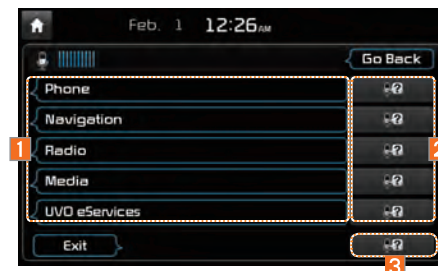

Name	Description
1 Command list	- Shows the available commands. - Select or say a command to display additional commands in detail.
2 How to use for selected item	This section shows how to use voice recognition for the selected item.
3 How to use in general	This section displays how to use voice recognition in general.

Instructions for Using Voice Recognition

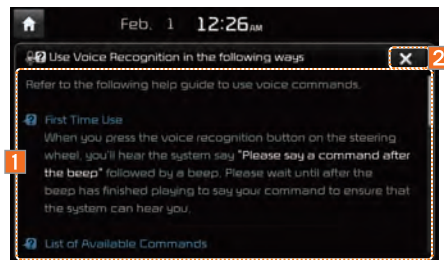

Name	Description
1 Detail instruction	This section describes how to use voice recognition in detail.
2 Close button	Closes the screen and restarts voice recognition.

i Information

- In the instructions screen, no voice is recognized, so you must manually issue commands. Because the instructions screen displays a lot of content, you can not view it while driving for safety precautions.

Voice Commands

Types of Commands

Voice recognition commands are classified as "Global Commands" and "Local Commands."

1. Global Commands (●): Commands that can be used immediately after activating voice recognition.
2. Local Commands (○): Commands that can be used when a multimedia, navigation, or Bluetooth call is running, or displayed on the screen, after activating voice recognition.

Call Commands

* Check the following before using call commands :

1. Voice commands related to phone calls can be used after connecting the Bluetooth device.
2. To call a person, for example "Call <John Smith>" whose name is listed in Contacts, you must first download the Contacts list. For details on downloading contacts, see "Part 3. Using Bluetooth > Chapter 3. Bluetooth Phone > 3.6 Contacts".
3. After downloading the Bluetooth contacts, it will take some time to convert the Contacts into voice data during which time you cannot make a call by name yet. The time takes to convert voice data may vary depending on the number of Contacts downloaded.

	Command	Operation
●	Call	Displays downloaded Contacts, after this you can make a call by saying the name.
●	Call <Name>	You can directly call a person by <Name> in the downloaded Contacts.
●	Call <Name> on Mobile	You can call a person directly <Name> to the number that is saved as "Mobile" in the downloaded Contacts. e.g.) Call "John Smith" on Mobile
●	Call <Name> in Office	You can call a person directly <Name> to the number that is saved as "Office" in the downloaded Contacts. e.g.) Call "John Smith" in Office
●	Call <Name> at Home	You can call a person directly <Name> to the number that is saved as "Home" in the downloaded Contacts. e.g.) Call "John Smith" at Home
●	Call <Name> on Other	You can call a person directly <Name> to the number that is saved as "other" than "Mobile, Home, or Office" in the downloaded Contacts. e.g.) Call "John Smith" on Other
●	Dial Number	Displays a screen where you can say a phone number to dial.
●	Dial <Phone #>	You can directly say the number to call. e.g.) Dial 111 555 1234
●	Redial	Directly calls at the number that you last dialed.
●	Call History	Displays your Call History, where you can say the list number to make a call.

Navigation Commands

* Check the following before you use navigation commands :

1. Search for and find addresses located in the state or province your car is currently in.

If you want to search in another state, say the name of state/province and then look it up.

Find Address is classified by states/provinces to provide you with faster service.

2. Some commands such as "Cancel Route" are available only when the destination is fixed.

Command		Operation
●	Find Address in <State>	• Finds the address in <State> and sets it as the destination. e.g.) Find Address in California • To find an address, you should say "House Number → Street → City" (in order, excluding the state). e.g.) 300 (Three Zero Zero) Main Street, Almond
●	Find Address	Finds the address and sets it as the destination.
●	Find the Nearest POI	Find the nearest points of interest from your current location. After this command, you can find the name of a location step-by-step.
●	Find the Nearest <Category>	Immediately finds <Category> nearest to your current location. For details of <Category>, see "6-16~20 Find the Nearest <Category> list". e.g.) Find the Nearest "Banks"

Command		Operation
●	POIs Near Destination	Finds POIs near the destination. After this command, you can find the name of a location step-by-step.
●	<Category> Near Destination	Find <Category> near the destination. For details of <Category>, see "6-16~20 Find the Nearest <Category> list". e.g.) "Banks" Near Destination
●	Map	Moves to the current position on the navigation map
●	Previous Points	Displays a list combining Previous Destinations, Previous Searches, and Previous Starting Points all together. You can then set a destination by saying the list number.
●	Previous Destinations	Displays a list of recent destinations that you can return to by saying the number in the list.
●	Previous Searches	Displays a list of recent searches, where you can set a destination by saying the number in the list.
●	Previous Starting Points	Displays a list of recent starting points that you can return to by saying the number in the list.
●	Traffic Information	Moves to the Traffic Information menu screen.
●	Go Home	Set the destination to your home. Your home must first be set in the Navigation system.
●	Go to Office	Set the destination to your office/work. Your office/work must first be set in the Navigation system.

Voice Commands | 6-9

Command		Operation
●	Turn Guidance On	Turns on the voice guidance system.
●	Turn Guidance Off	Turns off the voice guidance system.
●	Zoom All the Way Out	Zooms out from the navigation map to the fullest.
●	Zoom All the Way In	Zooms in on the navigation map to the fullest.
●	Cancel Route	Cancels the route to the fixed destination and exits guidance.
●	Destination Information	Tells you the remaining distance and time to your destination.
●	Route Options	Restarts the route to your destination. You can then select either “Faster Time” or “Shorter Distance”.
●	Find Faster Time Route	Starts a new route to your destination that will take the least amount of time.
●	Find Shorter Distance Route	Starts a new route to your destination that will use the shortest distance.
●	Emergency Services	Displays a list of nearest Police Station, Hospital, Dealership, or Road Assistance. You can then set a destination by saying the list number.
●	Police Station	Displays a list of the nearest police stations. You can then set a destination by saying the list number.

Command		Operation
●	Hospital	Displays a list of the nearest hospitals. You can then set a destination by saying the list number.
●	Dealership	Displays a list of the nearest car dealerships. You can then set a destination by saying the list number.
●	Road Assistance	Displays a list of the nearest road assistance locations. You can then set a destination by saying the list number.
●	Show Route	Displays a map overview of the entire route to your destination.

Radio Commands

Command		Operation
●	Radio	Plays the most recent radio channels from FM, AM, and SiriusXM™.
●	FM	Plays FM radio.
●	FM <87.5~107.9>	Tunes to FM <Frequency> according to what you say. e.g.) FM 87.5: FM eighty seven point five
●	SiriusXM™	Plays SiriusXM™ radio.
●	SiriusXM™ Channel <0~999>	Tunes to SiriusXM™ Channel <Channel Number> according to what you say. e.g.) SiriusXM™ Channel 23: SiriusXM™ Channel twenty three
●	AM	Plays AM radio.
●	AM <530~1710>	Tunes to AM <Frequency> according to what you say. e.g.) AM 530: AM five thirty
●	Preset <1~18>	Tunes to your preset stations (1 to 18).
●	Channel <0~999>	In SiriusXM™ Radio mode, turns on the <Channel Number> that you say.

Media Commands

* Check the followings before you use media commands.

1. If no media is connected or if no playable files exist at the time when you use these commands, a voice message will tell you that this is not available at present.
2. If you say the name of the media that is currently playing again, then that media will continue playing.
e.g.) Saying “USB” while USB content is playing.

Command		Operation
●	Music	Continues the last media you played.
●	iPod	Plays the iPod currently connected. This will work the same when an iPhone is connected. If a USB is connected, then it will be played instead of the iPod.
●	USB	Plays the music on the USB currently connected. If an iPod is connected, then the iPod will be played instead of the USB.
●	Bluetooth Audio	Plays the music on the Bluetooth phone currently connected. This may not be supported depending on the Bluetooth connection status.
●	AUX	Plays external devices that are currently connected.
●	My Music	Plays My Music files stored in the system.
●	Pandora Radio	Plays Pandora Radio that is currently connected. Pandora Radio operates according to the iPod currently connected.

1. Audio CD Command

Command		Operation
●	Play	Plays a paused track. Maintains the current settings during playback.
●	Pause	Pauses a track that is currently playing. Maintains current settings while paused during playback.
●	Track <1~99>	Plays a desired track number.
●	Shuffle	Plays tracks or files randomly. Maintains current settings during shuffled playback.
●	Shuffle Off	Cancels Shuffle and plays tracks sequentially. Maintains current settings during sequential playback.
●	Repeat	Plays the current track repeatedly. Maintains the current settings during repeat playback.
●	Repeat Off	Cancels Repeat and plays multiple tracks or files. Maintains current settings during multiple track playback.

2. MP3 CD / USB Music / iPod / My Music Command

Command		Operation
●	Play	Plays a selected file. Maintains the current settings during playback.
●	Pause	Pauses a file that is playing. Maintains current settings while paused during playback.
●	Shuffle	Plays tracks or files randomly. Maintains current settings during shuffled playback.
●	Shuffle Off	Cancels Shuffle and plays tracks sequentially. Maintains current settings during sequential playback.
●	Repeat	Plays the current track or file repeatedly. Maintains the current settings during repeat playback.
●	Repeat Off	Cancels Repeat and plays multiple tracks or files. Maintains current settings during multiple track playback.

3. Pandora Radio command

Command		Operation
●	Skip	Moves to the next track.
●	Thumbs up	If you like the genre of the music currently playing, say “Thumbs up” so that more similar music will play.
●	Thumbs down	If you don’t like the music currently playing, say “Thumbs down” to minimize the number of playbacks of similar genre music.

4. Bluetooth Audio / AUX Command

- Bluetooth Audio supports different functions according to connected devices, therefore some commands are unavailable, including Play, Stop, Previous Song, and Next Song.
- For external devices (AUX) and some commands are unavailable, including Play, Stop, Previous, and Next.

UVO eServices Commands List (Optional)

Command	Operation
● Roadside Assist	Connect with a Roadside Assist agent.
● Vehicle Diagnostics	Informs you if a diagnostic issue is found in your vehicle
● My POIs	Show Points of Interest list which downloaded from Google Maps and MyUVO
● eService Guide	Provides guidance on how to use UVO eServices

Other Commands List (Commands used in List / Help)

Command	Operation
● Help	Moves to the voice recognition help screen. All available commands can then be identified and used.
● Line 1~5 (One~Five)	When you cannot select a certain name, such as in Call History, you can select it using numbers. Simple numbers can be recognized, such as "One" or "Two."
● Yes / No	When voice recognition is activated, this command is used when an answer is requested for a confirmation question.
● Previous Page / Next Page	When five or more searched items are listed, you can move to the previous or next page using a voice command.
● Manual Input	When Dial or POI Name search results are displayed, this command is used to search manually, rather than to search with a voice command. Voice recognition stops after this command is used.
● Go Back	Moves to the previous screen.

“Find the Nearest <Category>” List

Navigation location names can be changed after an update.

1. Restaurants

Restaurants	SONIC	Outback Steakhouse	Continental
Fast Food	SUBWAY	Ponderosa	Mexican
Arby's	Taco Bell	Publix	Cantina Laredo
Boston Market	Taco John's	Seasons 52	Chevys
BURGER KING	Wendy's	Sheetz	El Chico
Carl's Jr	White Castle	Silver Fox	Japanese
Church's Chicken	American	Texas Roadhouse	Chinese
Dairy Queen	Applebee's	TGI Friday's	PF Chang's China Bistro
Firehouse Subs	Bahama Breeze	The Capital Grille	Korean
Fleming's	Boston's Restaurant & Sports Bar	French	Vegetarian Food
Hardee's	Cheeseburger in Paradise	Italian	Seafood
In-N-Out Burger	Chili's Grill & Bar	Bonfish Grill	Red Lobster
Jack in the Box	Cool River	Carrabba's Italian Grill	Latin American
Jimmy John's	Denny's	Chuck E Cheese's	Asian
KFC	Frisch's Big Boy	Domino's	African
McAlister's Deli	Good Eats	Olive Garden	Coffee Shop
McDonald's	Ill Forks	Papa John's	Starbucks
Panera Bread	Lee Roy Selmon's	Papa Murphy's	Dunkin' Donuts
Popeyes	Lone Star Steakhouse & Saloon	Pizza 73	Others
Quiznos Sub	Longhorn Steakhouse	Pizza Hut	Auntie Anne's
Schlottzsky's	Luckys Cafe	pizza pizza	Baskin-Robbins

2. Automotive

Restaurants
Haagen-Dazs
Hooters
Roy's
TCBY
VAN DER VALK

Automotive
Kia Dealerships
Gas Stations
ampm
ARCO
BP
Canadian Tire
Chevron
CITGO
Conoco
Esso
Exxon
Fleetfuels
GetGo
Giant Gasoline
GTO
Gulf
Husky
Ingles Gas Express
Martin's Gasoline
Meijer
Mobil
Murphy Express

Murphy USA
Petro Stopping Centers
PETRO-CANADA
Phillips 66
Pioneer
QuikTrip
Rutter's
Sheetz
Shell
Sinclair
Sunoco
Sunoco Canada
TEXACO
TravelCenters of America
Ultramar
Valero
Wawa
Parking
Auto Services
America's Tire
BOSCH Car Service
Certigard
Discount Tire

Kal Tire
Napa
Sears Auto Center
Roadside Assistance
Automobile Dealerships
Auto Parts
Car Washes
Motorcycle Dealerships

3. Travel

Travel			
Airports	Embassy Suites	Microtel Inns & Suites	Thriftlodge Canada
Hotels	Grand Residences by Marriott	Motel 6	Travelodge
Americas Best Value Inn	Hampton Inn	NOVOTEL	Travelodge Canada
AmericInn	Hampton Inn & Suites	Omni Hotels	VAN DER VALK
Andaz	Hawthorn Suites	Park Inn	WALDORF ASTORIA COLLECTION
Ascend Collection	Hilton	Park Plaza	Wingate by Wyndham
Baymont Inn & Suites	Hilton Garden Inn	QUALITY INN	Wyndham
Best Western	Hilton Grand Vacations	Radisson	Rest Area
Cambria Suites	Holiday Inn	Radisson SAS	Tourist Information
Canadas Best Value Inn	Holiday Inn Express	RAMADA	Tourist Attractions
Candlewood Suites	Homewood Suites	Red Roof Inn	Travel Agents
Clarion Hotel	Hotel Indigo	Regent Hotels & Resorts	City Centers
Comfort INN	Howard Johnson	Renaissance	Rental Car Agencies
Comfort Suites	Hyatt Place	Residence Inn	Alamo
CONRAD	Hyatt	Ritz-Carlton Club	AVIS
Country Inn & Suites by Carlson	Hyatt Summerfield Suites	Rodeway Inn	Budget
COURTYARD by Marriott	Intercontinental	Sheraton	Dollar Rent A Car
Crowne Plaza	JW Marriott	Sleep Inn	National
Days Inn	LA QUINTA INN	SOFITEL	Thrifty
DELTA	Lexington	Staybridge Suites	Campgrounds
Doubletree	Mainstay Suites	Studio 6	Ferry Terminals
Econo Lodge	Marriott	Suburban Extended Stay	Bus Stations
	Marriott VACATION CLUB	Super 8	

4. Shopping

Travel
Local Transit
Train Stations

Shopping
Department Stores
Canadian Tire
Kmart
Kohl's
Nordstrom
Sears
Sears Hometown Store
T.J. Maxx
Walmart
Convenience Stores
7-Eleven
ampm
BP
Circle K
Fleetfuels
GetGo
GTO
Murphy Express
Murphy USA
Petro Stopping Centers
QuikTrip
Rutter's

Sunoco Canada
TravelCenters of America
Wawa
Shopping Centers
Grocery Stores
Giant Eagle
Giant Food Stores
IGA
Ingles Markets
Martin's Food Markets
Meijer
Publix
Sav-Mor Foods
Save-A-Lot
SuperValu
Music Stores
Bookstores
Barnes & Noble
Electronics
Best Buy
Future Shop
Staples
OfficeMax

Gifts
Sporting Goods
Dick's Sporting Goods
Sports Authority
Home Specialty Stores
ABC Fine Wine & Spirits
Costco
Home Depot
Clothing
Mark's Work Wearhouse
Shoe Stores
Pharmacies
Giant Drugstore
Ingles Pharmacy
Kmart Pharmacy
Martin's Drugstore
Meijer Pharmacy
Rite Aid
Shoppers Drug Mart
Walgreens

Voice Commands | 6-19

5. Recreation

Recreation
Amusement Parks
Museums
Cinemas
Golf Courses
Sports Complexes
Sports Activities
Wineries
Video & Game Rental
Ski Resorts
Recreation Areas
Other Recreation Areas

6. Financial Services

Financial Services
Banks
Chase
RBC Bank
Wells Fargo
ATMs
Check Cashing Services
Money Transfer

7. Community

Community
Police Stations
Post Offices
Libraries
Schools
Fire Departments
Convention Centers
City Halls
Civic Centers
Court Houses
Government Offices
Waste & Sanitary
Utilities
Business Facilities


8. Services

Services
Hospitals
Medical Services
Physicians
Tax Services
Attorneys
Funeral Homes
Hair & Beauty
Cleaning & Laundry
Social Services
Communication
Dentists
Photography
Tailor & Alteration
Movers

UVO Voice Local Search

What is UVO Voice Local Search?


With UVO network service, you can search for Google-provided place names with your voice.

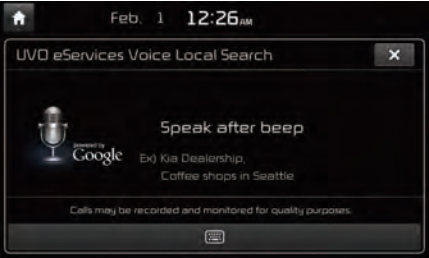

The search is done through network services; it is only available when connected to a communication network.

Starting UVO Voice Local Search

Press the  key briefly (less than 0.8 seconds) on the steering wheel control to activate voice recognition and say “Local Search”

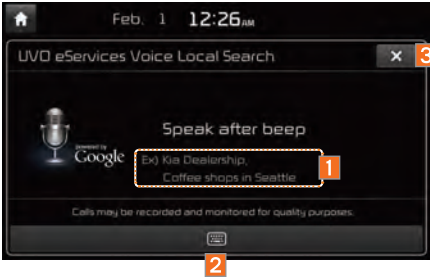

Name	Description
1 Example command	Shows an example to ask for place search
2 Manual switch button	Switches the UVO Voice Local Search screen to search.
3 End button	Ends UVO Voice Local Search.

Siri Eyes Free

How to start Siri


If you want to use Siri, you have to connect your iOS device to Multimedia system through Bluetooth.

(Please check whether your iOS device supports Siri and turning Siri On)

Then you can use Siri while pressing and holding  key on the steering wheel.

How to use Siri

When you access the Siri screen while pressing and holding  key on the steering wheel, you can press  button and then you can speak what you want. Please see the Multimedia system only supports “Phone” related functions. Other functions will be performed in your iOS device. If you press voice key quickly, Siri would re-start. If you hold down voice key, Siri would be terminated and the screen would go back to the previous screen. Eyes-Free mode would be activated automatically while you are driving. When shifting gears into P or putting the Parking break on, Eyes-Free mode would be deactivated automatically.

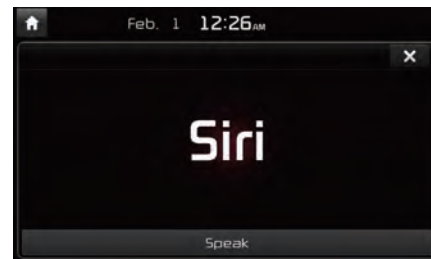

Information

- Functions and feedbacks from voice commands via Siri are executed in iOS device. If iOS version changed, functions and feedbacks can be changed according to iOS device.

07

part.7 Info

Start Up
Pandora Radio Mode
Download Center
SiriusXM™ Data

Info

Start Up


Press the **INFO** key on head unit to enter the information screen. The screen is composed of : “Pandora” to listen to Pandora Radio by connecting a smart phone; “Quick Guide” to provide information about how to controls and major functions; “Climate” to show air-conditioning and heating information for the car; “SiriusXM Data” to show weather, traffic, stock, gas station, sports, and movie information provided by SiriusXM™ Travel Link.

Pandora Radio Mode


Pandora Radio Mode

Press the “Pandora” icon after selecting All Menus or the **INFO** hard-key to enter Pandora Radio mode.


Pandora Radio Mode Screen Controls

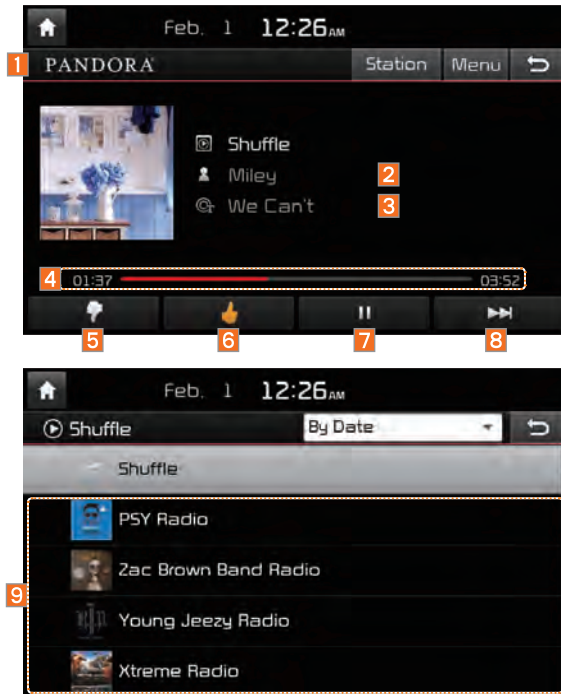

Name	Description
1 Mode	Displays currently operating mode.
2 Station Info	Shows the station name currently playing.
3 Track Info	Shows the artist/title information currently playing.
4 Play Time	Displays the current play time.
5 Thumb Down	If you don't like the music currently playing, press this button to move to the next music and to minimize the number of playbacks of similar genre music. i You can move to next song up to specific times which pandora allows
6 Thumb up	If you like the genre of the music currently playing, press this button to send a "Thumb Up" signal to Pandora so that more similar music will play.
7 Play/Pause	Plays/pauses the current song
8 SKIP	Moves to the next track i You can move to next song up to specific times which pandora allows
9 Station List	Moves to the station list screen.

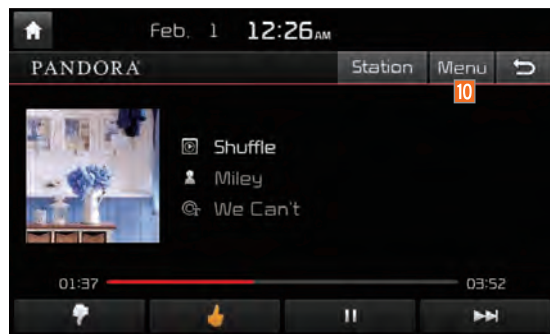

Name	Description
10 Menu	• Bookmark Track Adds the music currently playing to the bookmarks list. • Bookmark Artist Adds the artist of the music currently playing to the bookmarks list. i You can view your bookmarked artists and songs from your Pandora profile online. Go to pandora.com, then click on the “Your Profile” button above the player. That will bring up a page with your stations, bookmarked artists, and bookmarked songs.
11 SEEK/ TRACK	Press briefly to play the next song.
12 TUNE	Rotate the TUNE knob to search for a station. Press the TUNE knob to play the station when you find the name that you want.

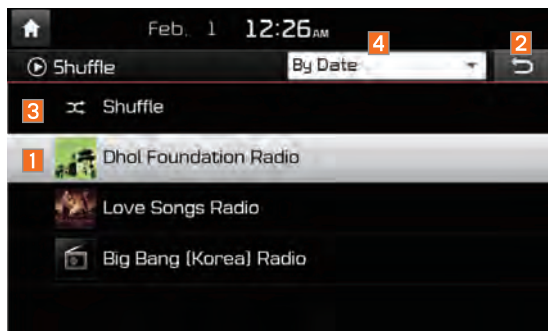

Name	Description
1 Current Station	Shows the name of the station currently displayed.
2 Previous	Switches to the play mode screen.
3 Shuffle	Shuffling your stations provides a more diverse mix of music by randomly playing songs from the stations in your list.
4 Search Menu	Sorts stations by the items in the menu. • A-Z: Sorts stations in alphabetical order. • By Date: Sorts stations in the order they were generated.
5 SEEK/ TRACK	Press briefly to play the next song.
6 TUNE	Rotate the TUNE knob to move to the previous/next list. Press the TUNE knob to play a selected file.


Download Center

With Download Center, you can install paid/free applications or check for related information. Only UVO center verified applications can be installed.

You can use Download Center after agreeing to the User Agreement and Privacy Policy. (Only 1 time for initial launch)

NOTICE

- To use Download Center, your vehicle must be connected to Wi-Fi.
- Details on how to connect to a Wi-Fi network can be checked within the “Wi-Fi Settings” in Part 9.
- Apps available for download may vary depending on the environment.


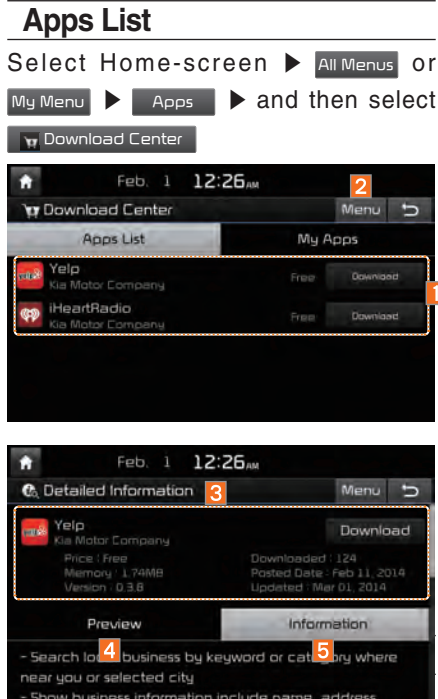


Name	Description
1 Application Download and Run buttons	Button state changes according to the application state.
Download	Downloads free applications.
Purchase	Downloads paid applications.
Re-download	Downloads deleted applications after previously installing them.
Retry	Downloads the applications that failed to download due to network or system errors.
Run	Runs installed applications.
Cancel	Cancels any downloads and updates.

Name	Description
2 Menu	Updates and refreshes the menu.
Update	After installation, it shows applications requiring updates. The update screen shows the Update All button to update all applications that need updates.
Refresh	Refreshes the app list status.
3 Detailed Information	When the application list area is pressed, it moves to the Detailed Information screen.
4 Preview	Displays application images.
5 Information	Displays application information.

My Apps

Select **All Menus** or **My Menu** from Home screen ► **Apps** ► followed by **Download Center** and then ► **My Apps**.

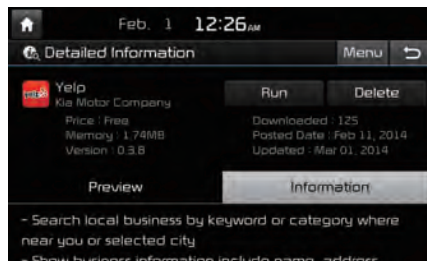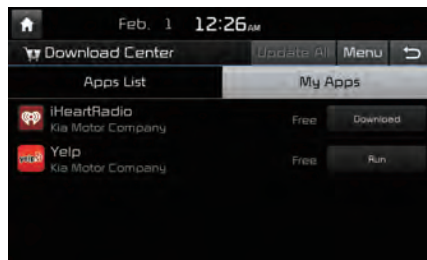

The **My Apps** menu displays the **Re-download**, **Update**, **Run** options for downloaded applications. All functions of **My Apps** are the same as those in the app list.

i Information

- You can update applications already running only after closing them.
- Details on downloaded apps can be checked within the Download Center.

SiriusXM™ Data


About SiriusXM™ Data Service

The SiriusXM™ Data Service is a paid membership Satellite radio service which provides users with traffic, stock, sports, and weather information.

However, weather information is not supported for vehicles purchased in Canada.

Accessing SiriusXM™ Data

Press the “SiriusXM Data” icon after selecting **All Menus** or the **INFO** head unit key to enter the SiriusXM™ Data mode.

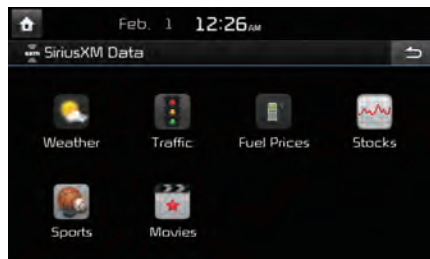


SiriusXM™ Weather Announcement

At the “SiriusXM Data” screen, press the “Weather” icon to enter the Weather Announcement mode.


Weather Forecast

This service provides current weather information and weather forecasts for the next five days in your region. To change the region, press the **Other City** button and select the desired region.

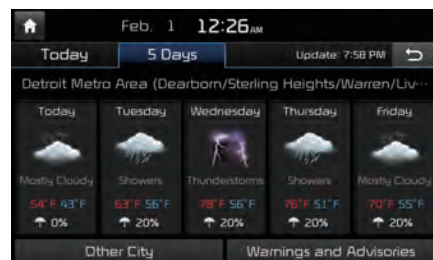

Warnings and Advisories

This service provides weather warnings and advisories, such as tornado, storm, Floodflood, etc. as symbols on the Navigation map.

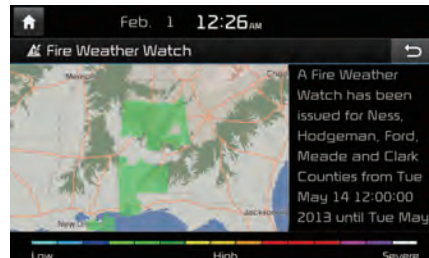


SiriusXM™ Traffic Information

At the “SiriusXM Data” screen, press the “Traffic” icon to enter the Traffic Announcement mode.

SiriusXM™ Fuel Price Information


At the “SiriusXM Data” screen, press the “Fuel Prices” icon to enter the Fuel Prices Information mode.

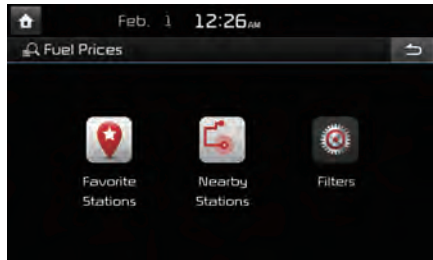


Search for Nearby Stations, and Register Key Locations as Favorite Stations

Search for nearby stations with the “Nearby Stations” menu.

It shows station locations, starting from the nearest one, and select “Nearest” menu on the top right side to further sort them by price or brand name.

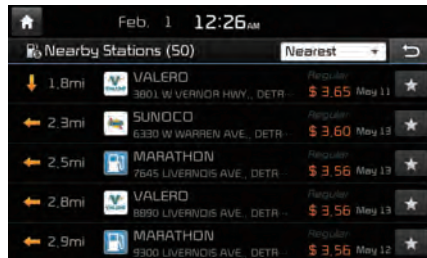

Select the ★ button to the right of the list to register key locations as a Favorite Station so that you can go there again with the “Favorite Stations” menu. Select the list to move to navigation destination select screen to receive guidance.

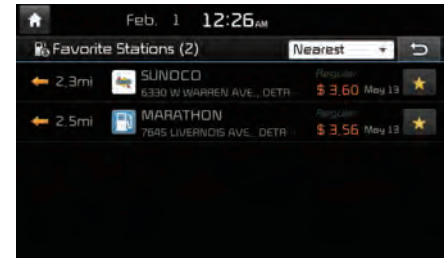

My Fuel Type Settings

With the “Filters” menu, you can select fuel types and favorite brands.

When searching for Nearby Stations, the results will reflect selected fuel types and brand information.



SiriusXM™ Stock Information


In the “SiriusXM Data” screen, press the “Stocks” icon to enter the Stocks mode.

Stocks is a feature that shows the current value and change of stocks.

For symbols which you are interested in, press the icon to save the symbol as a part of Saved symbols can be viewed from the My Favorites button on the Stock Main screen.

My Favorites


My Favorites shows a list of stocks added by the user. When entering the Stocks menu for the first time, a screen is displayed for you to add your favorite stock information. Press the **Add** button to move to the stock search screen.

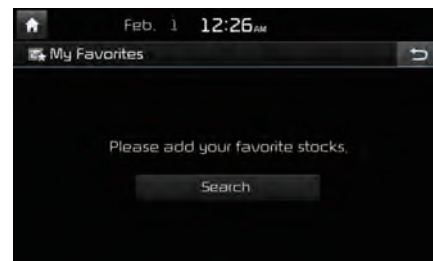


Stock Search

Use the Stock Search menu to search for specific stocks.

Press the  button after searching for your favorite stocks to save them in “My Favorite”.

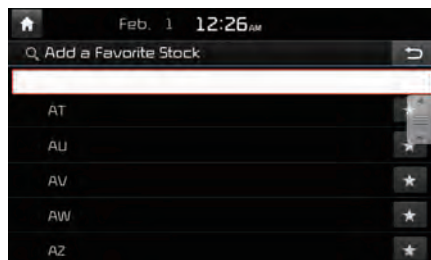


In the My Favorites screen, you can find the selected stock information that you registered.

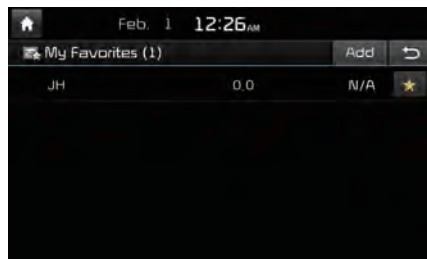

SiriusXM™ Sports Information

Press the “Sports” icon to enter the Sports mode.

This service provides real-time updated information on scores and schedules for major sports, such as NFL, NBA, NCAA football, NCAA basketball, NHL, MLB, NASCAR and more.


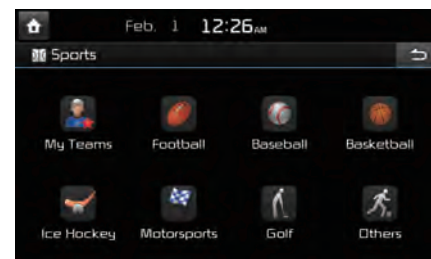


My Teams


You can save teams which you are interested in as part of My teams to easily view related scores and schedules.

Select the My Teams menu and then press the **Add** button to search for and register your favorite teams.



Search for your favorite teams and press the **★** button on the right to add it to the “My Teams” list.

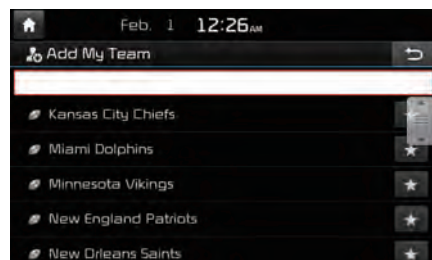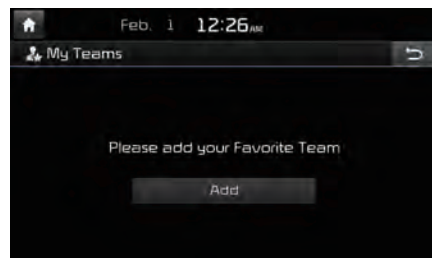

You can always check the list of teams that you added in the “My Teams” menu. Press the **★** button on the right side of the team name to delete the team from “My Teams” or press the **Add** button to add other teams.

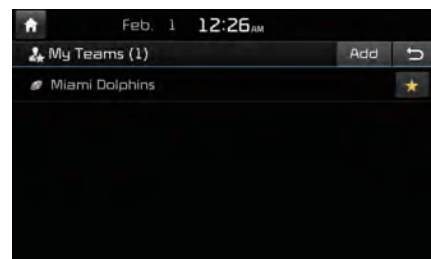

Press the team name to check daily results and recent schedules for that team.

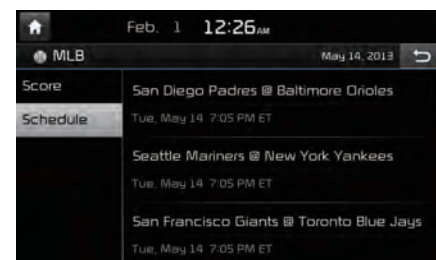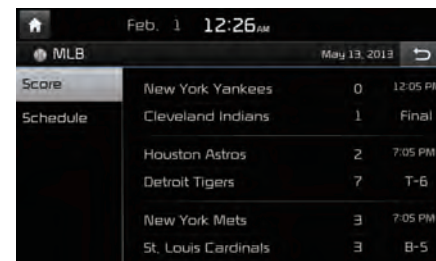



Feb. 1 12:26 AM

Kingsmill Champ

Name	Score	Ranking
Cristie Kerr	-12 (0)	1
Suzann Pettersen	-12 (0)	2
Arjya Jutanugarn	-10 (66)	T3
Ilhee Lee	-10 (67)	T3
Angela Stanford	-9 (69)	T5



Feb. 1 12:26 AM


Itaipava Sao Paulo Indy 300

- * Sao Paulo Street Circuit
- Sun, May 5 11:40 AM ET
- 75 Laps
- James Hinchcliffe

SiriusXM™ Movie Information

Press the “Movies” icon to enter the Movie mode.



You can check recent movies and nearby theaters, and also register your favorite theater locations.

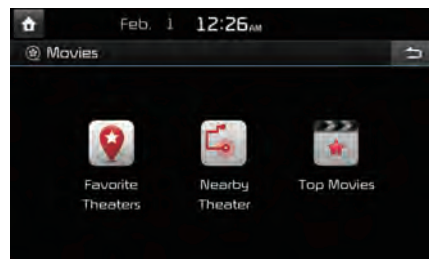


Search for Nearby Theaters, and Register Any Key Locations as Favorite Theaters

In the “Nearby Theaters” menu, you can search for any nearby theaters.


It shows theaters, starting from the nearest one, and selecting the “Nearest” menu at the top right side will sort them by name.

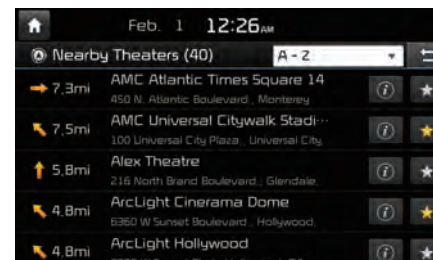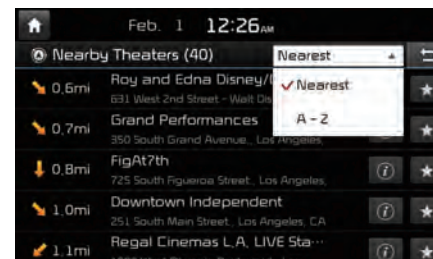

Select the  button to the right of the list to register your favorite theater so that you can always check it again using the “Favorite Theaters” menu and selecting the  button to view the current movie information for that theater.

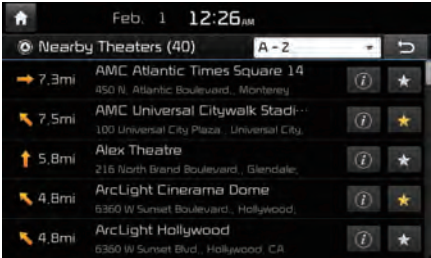

Select from the list to move to the select navigation destination screen and receive directions.

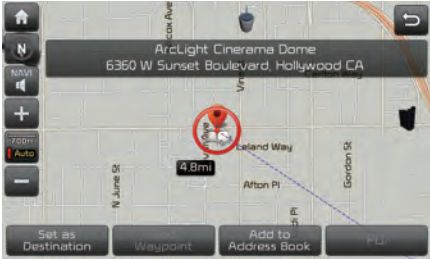

In the “Top Movies” menu, you can check for any movies that are currently popular. Press  button to the right of a movie title to view the plot summary and any other detailed information.



MEMO

part.8 Other Features

Climate Mode
Camera (Optional)

08

Other Features

Climate Mode

Operating Climate Mode


Press the **CLIMATE** key for the climate system to see status information in the full screen display.

While multimedia or navigation is in use, the climate system information will be displayed over top when you control the temperature (TEMP) or turn on the air conditioner (A/C).

Basic Mode Screen



Name	Description
1 Set the temperature of the driver's seat and passenger seats	Displays the configured temperature settings for the driver's seat and the passenger seats. Cooling or heating will continue until the temperature matches the configured temperature settings. i The internal temperature can be controlled in increments of 1°F within a range of 63°F to 89°F. i LOW is displayed when the temperature is set to anything below 63°F, and HIGH is displayed when it is set to anything above 89°F.
2 Air volume	Displays the configured air volume settings
3 Air direction	Displays the configured air direction settings.
4 Rear seat air volume	Displays the rear seat's configured air volume settings.
5 Set the temperature of the rear seat	Displays the configured temperature settings for the rear seat. Cooling or heating will continue until the temperature matches the configured temperature settings.

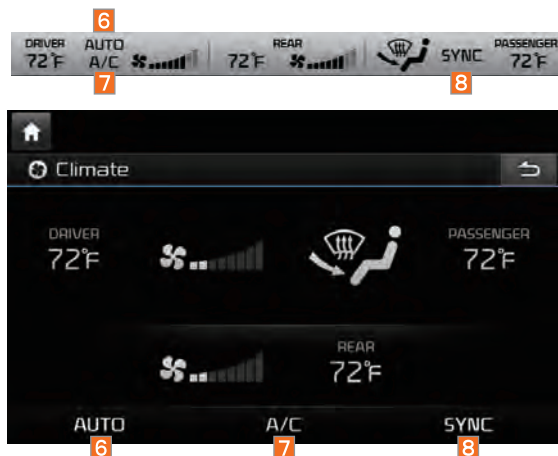

Name	Description
6 Cooling/heating control status (AUTO)	Displayed when the AUTO key is pressed and cooling/heating operates automatically according to the configured temperature settings i AUTO will be turned off when you try to do the following with AUTO on: - Control the air volume - Control the air direction - Turn the air conditioning (A/C) on/off - Turn on the moisture removal function for the windshield
7 Air conditioning control status	Displayed when the A/C key is pressed and the air conditioning starts cooling/heating.
8 Simultaneous temperature settings for the driver's seat and the passenger seats (SYNC)	Press the SYNC key to control the driverside, passenger-side and rear-side temperatures simultaneously. Pressing the SYNC key again will disable SYNC temperature mode and enable you to control the driver-side, passenger-side and rear-side temperatures separately.

Camera (Optional)

About Rear Detection Camera

- This device is connected to a rear detection camera to see behind the car for safe reversing.
- When the engine starts, shift the gear to "R" to activate the rear detection camera.
- Shift the gear to another position to deactivate the rear detection camera.

i Information

- While the device boots up, shift the gear to "R" to activate the rear detection cameras.
- A separate chipset is used for the camera screen while booting up, so it may be different after booting up.
- When booted up, blinking may occur when you switch to a UI screen.



⚠ CAUTION

- A wide-angle lens is installed as the rear detection camera to get a wider view, so there may be some difference between the actual distance and the distance that appears on-screen. For safety, make sure to view the back, right, and left sides of the car for yourself.

AVM (Around View Monitor)

With the power on, the AVM is connected to the AVM camera to see the front, rear, and back of the car when driving at low speeds (10km/h or less). It is optional.

- The AVM-camera front detection mode will be activated when driving at low speeds (10km/h or less). When the car drives over 10km/h, the AVM camera screen is disabled.
- When the  key is pressed and the gear is in a position other than P or R while the engine is running, the AVM camera automatically starts when the car accelerates.
- Shift gears to P or R and turn off the  key to disable the front detection camera screen.
- The rear detection mode of the AVM camera is activated with the gear is positioned to R.

Front AVM

Select  the key after starting the engine.

If the gear is in a position other than P or R, it automatically switches to the front detection AVM camera mode when the car accelerates.



Name	Description
1 AVM	Displays all of the images around the car.
2 Front	Displays the front image
3 Front left	Displays the front-left image.
4 Front right	Displays the front-right image.
5 Settings	Displays the Parking Guidance Settings screen.


Rear AVM

If the gear is positioned to R, the rear AVM camera is automatically switched to the operational mode.



Name	Description
1 AVM	Displays all of the images around the car.
2 Rear	Displays the rear image.
3 Rear left	Displays the rear-left image..
4 Rear right	Displays the rear-right image.
5 Settings	Displays the Parking Guidance Settings screen.

Parking Guidance Settings

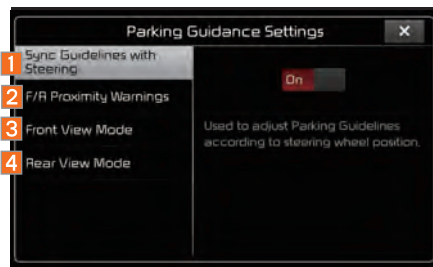

CAUTION

- A wide-angle lens is installed for the front detection camera to get a wider view, so there may be some difference between the actual distance and the distance that appears onscreen. For safety, make sure to check the front, right, and left sides for yourself.

Name	Description
1 Sync Guidelines with Steering	Used to adjust the Parking Guidelines according to the steering wheel position.
2 F/R Proximity Warnings	Provides a warning when an object is in close proximity to the front or rear of the vehicle.
3 Front View Mode	Displaying the front AVM, select the basic display mode of the camera screen. (AVM, Front left, Front right, and Front.)
4 Rear View Mode	Displaying the rear AVM, select the basic display mode of the camera screen. (AVM, Rear left, Rear right, and Rear.)

09

part.9 Setup

- Setup
- Navigation Settings
- Sound Settings
- Display Settings
- Phone Settings
- UVO eServices Settings
- Voice Recognition Settings
- Clock Settings
- Wi-Fi Settings
- Language Settings
- Keyboard Settings
- Downloaded Apps Settings
- Screen Saver Settings
- System Info

Setup

Setup

Setup is the screen to control system settings of the AVN.

To enter the screen, select the **SETUP** key of the device or the **Setup** button in All Menus.



Features	Description
1 Navigation	Provides Normal/Screen/Guidance/Route/Safety Setting.
2 Sound	Provides the sound control options for Position, Bass, Mid, Treble, Volume, Ratio and Advanced settings.
3 Display	Provides the Adjust/Mode settings.
4 Phone	Provides the Bluetooth Connection/Auto Connection Priority/Phone Ringtone/System Bluetooth Information settings.
5 UVO eServices	Provides the Activation/Modem Information settings.
6 Voice Recognition	Provides the Guidance and Priority settings.




Features	Description
7 Clock	Provides the Time and View settings.
8 Wi-Fi	Provides the Wi-Fi On and Network Connection settings.
9 Language	Provides the Change Language settings.
10 Keyboard	Provides settings to switch keyboard layouts.
11 Downloaded Apps	Provides the removal settings for downloaded and installed apps.
12 Screen Saver	Provides the Clock/None settings.
13 System Info	Provides software and storage space information.
14 Display Off	Provides the Display Off (touch activation) function.

Navigation Settings

For more details, refer to part 5. Navigation Settings.

Sound Settings

Adjusts the sound effects for the whole system.

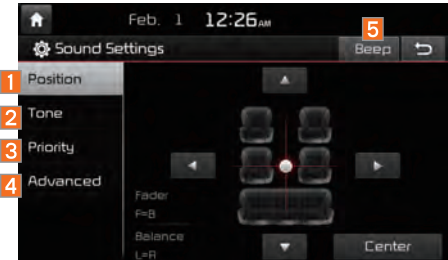

Features	Description
1 Position	Select the Up/Down/Left/Right button to control sound positioning. Press Center to concentrate the sound on the center of vehicle.
2 Tone	Drag the slide bar to control bass/mid/treble settings. Press Center to initialize the settings.


Features	Description
3 Priority	You can adjust the volume ratio between navigation announcements and regular audio.
4 Advanced	You can select [Speed Dependent VolumeControl] to automatically control the volume by the vehicle's speed.
5 Beep	Select to activate a beep when pressing buttons.

i Information

- Advanced sound settings may differ according to selected AMP option.
- The seat shape may differ according to vehicle model.

Display Settings

Controls the display brightness and image rate for the whole system.

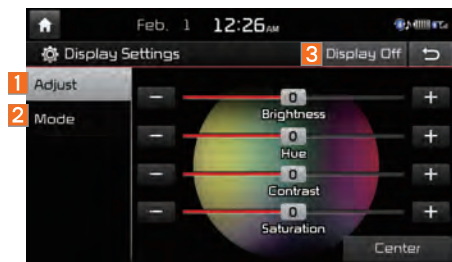


Features	Description
1 Adjust	Drag the slide bar to control the Brightness/Hue/Contrast/Saturation settings. Press Center to initialize the settings.
2 Mode	You can select Daylight/Night/Automatic options for the display brightness according to mode changes.
3 Display Off	Provides the Display off (touch activation) function.

Phone Settings

Changes Bluetooth phone settings.


Phone Settings

- Select the head unit **SETUP** key ▶
Select **Phone**.
- Home screen ▶ Select **All Menus** ▶
Select **Setup** ▶ Select **Phone**.

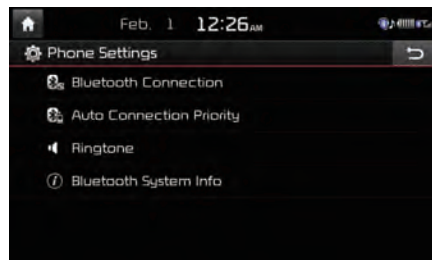

Bluetooth Connection Settings

- Select the **SETUP** key in the head unit ▶
Select **Phone** ▶ Select **Bluetooth Connection**

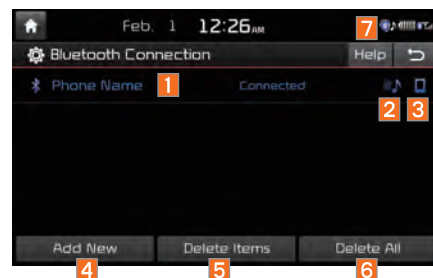

Features	Description
1 Paired Device List	Displays the paired Bluetooth device list. When selecting from the list, the device is connected or disconnected.
2 Bluetooth Audio Connection Status	An icon appears when you make a Bluetooth Audio connection.
3 Bluetooth Hands-Free Connection Status	An icon appears when you make a Bluetooth hands-free connection.
4 Add New	Register a new Bluetooth device.
5 Delete Items	Select and delete a paired device.
6 Delete All	Delete all paired devices.
7 Help	Switches to the Bluetooth Connection Help screen.

i Information


- Up to 5 Bluetooth devices can be paired.
- Only one Bluetooth device can be connected at a time.
- During a Bluetooth device connection, another device cannot be paired.
- When you delete a paired device, the Call History and Contacts stored in the head unit are also completely deleted.
- Bluetooth Hands-free and Bluetooth Audio functions are supported.
- Hands-free and audio-supported devices, such as a Bluetooth smartphone or audio, will function normally.
- When a Bluetooth device is connected, if the Bluetooth connection is unexpectedly disconnected, due to being out of communication range, the device powering off, or a Bluetooth communication error, the Bluetooth device automatically searches for and connects to nearby Bluetooth devices.
- If the system is not stable, due to a vehicle-Bluetooth device communication error, restore the Default Factory Settings.

- For Default Factory Settings, the bluetooth settings are reset to factory settings
- Select the **SETUP** key ► Select **Phone** ► select **System Bluetooth Info** ► Select **Default Factory Settings**

Auto Connection Priority

Select the **SETUP** key in the head unit ►

Select **Phone** ► Select **Auto Connection Priority** .

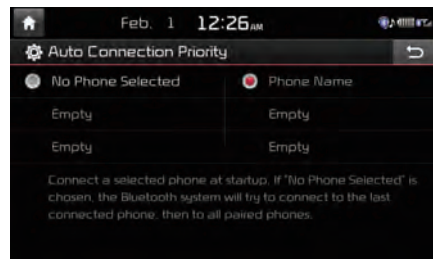

When the engine is running, the selected Bluetooth device is automatically connected. If you fail to connect the selected device, the previously-connected device is automatically connected, and if it also fails, then it tries to connect all paired devices sequentially.

Depending on auto connection priority, connection to a device may take time.

Ringtone

Select the **SETUP** key in the head unit ►

Select **Phone** ► Select **Ringtone** .




Features	Description
1 Use Mobile Ringtone	The configured mobile ringtone comes out through the vehicle speakers when you receive a call. When a mobile device doesn't support it, the basic ringtone of the vehicle will be used.
2 Use System Ringtone	The system ringtone will be used.
3 Settings	Changes the ringtone.
4 Ringtone Type	Selects a ringtone by name.
5 Preview	Previews the available ringtones.

System Bluetooth Information

Select the **SETUP** key in the head unit ►

Select **Phone** ► Select **Bluetooth System Info** .

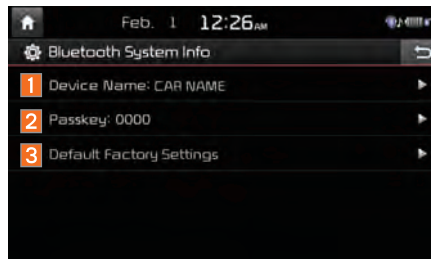

i Information

- The device name above is an example. Check the actual information on the product.


Features	Description
1 Device Name	You can change the Bluetooth device name of the vehicle.
2 Passkey	You can change the passkey used for Bluetooth device authentication. the initial passkey is 0000.
3 Default Factory Settings	You can delete all paired devices and restore the Default Bluetooth Settings. For Default Factory Settings, all paired devices are deleted, and the system is reset to factory settings.

UVO eServices Settings

Within the eServices Settings screen, UVO eServices related features can be set, such as activating 911 Connect, Parking Minder and setting the My Car Zone.


For safety reasons, My Car Zone Settings can not be adjusted while driving. Park the vehicle before making any changes to your settings.

Press the **SETUP** key ► **UVO eServices**

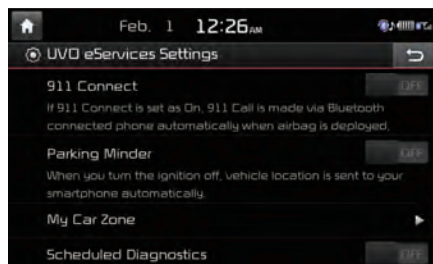

911 Connect


This feature is used to turn on or off the 911 Connect feature.

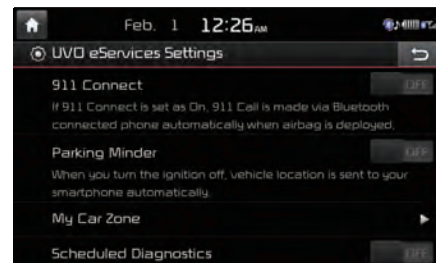

To enable 911 Connect, ensure that the **ON** button is selected. To disable this feature, ensure the **OFF** button is selected.


When enabling this feature, you must first agree to the 911 Connect terms of use.

After reading the terms of use, press the **Agree** button on the touch screen to accept.

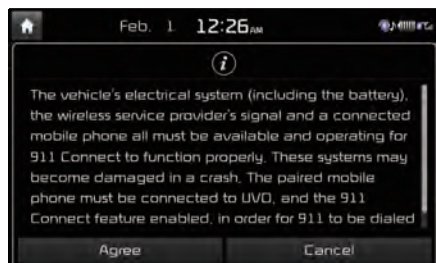

Parking Minder

If you want to send vehicle location to your smartphone automatically when you turn the ignition off, turn the Parking Minder feature **ON**.

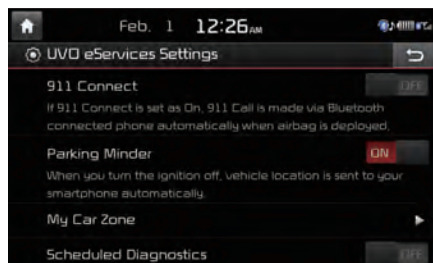


My Car Zone

This feature is used to set My Car Zone (Curfew Limit, Speed, Geo Fence) alert conditions.

My Car Zone Settings is unavailable when UVO eServices has not been activated or GPS signals cannot be received.



Press the **SETUP** key ► **UVO eServices** ► **My Car Zone**.

The PIN must be entered to use My Car Zone Settings.

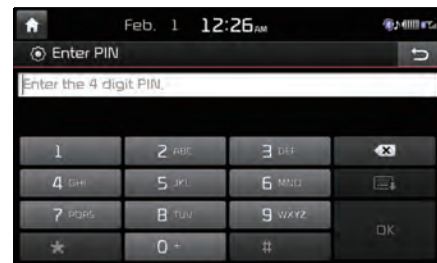


This screen is used to turn Curfew Limit, Speed, and Geo Fence Alert features On/Off.

Set the alert conditions **ON** ► **Settings**.

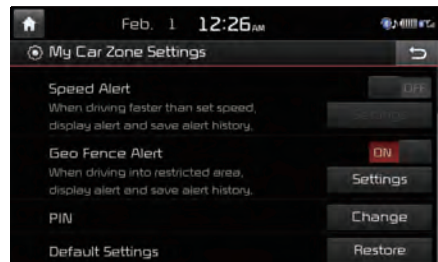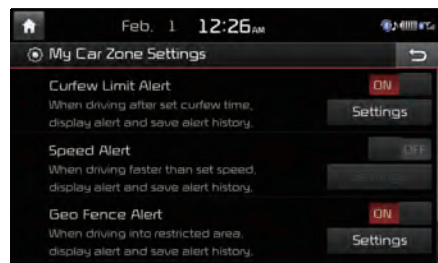

Curfew Limit Alert Settings

Within Curfew Limit Alert Settings, you can set the Curfew Limit Alert Start and End Time. You can also set the Alert Interval of alerts upon Curfew Limit.

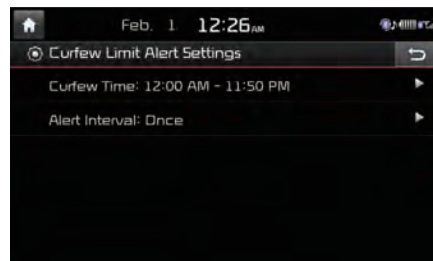

Speed Alert Settings

Within Speed Alert Settings, you can set the vehicle speed limit and Alert Interval of alerts upon overspeeding.



Geo Fence Alert Settings

Within Geo Fence Alert Settings, you can set entry-restricted areas. Press Add Geo Fence and set the center point and radius of the desired Geo Fence on the Map screen. You can also set the Alert Interval of alerts upon Geo Fence alerts.




NOTICE


- Geo Fence Alert cannot be set if there is no SD card with Maps. At least one Geo Fence must be added to turn on Geo Fence Alert Settings.

PIN

This feature is used to change the PIN to enter My Car Zone Settings.

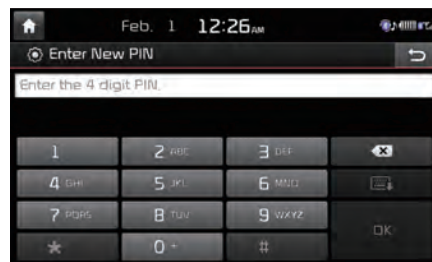

Press the **OK** button to transmit the new PIN to your My UVO com account.

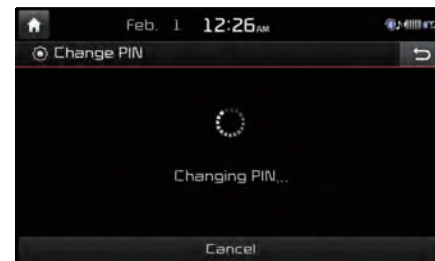


NOTICE

- Before pressing **OK**, ensure your smartphone is connected to UVO eServices system via USB cable.

Restore Factory Settings


This feature is used to restore all My Car Zone alert history and settings back to default state.

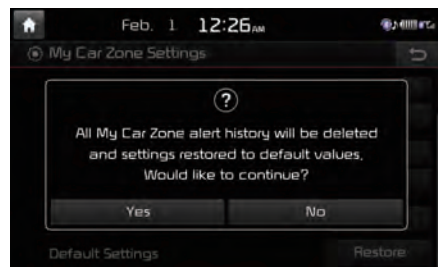

Scheduled Diagnostics

This feature is for setting when scheduled diagnostics alert displays.

Press **SETUP** key ▶ **UVO eServices** ▶
Scheduled Diagnostics **ON** ▶ **Settings**

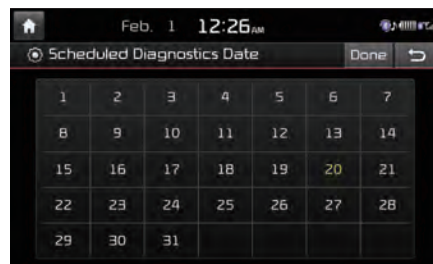

NOTICE


- For months without the corresponding day, the last day of the month will automatically be set as the scheduled diagnostics date.

Trip Info Sync Reminder

Trip Info is a feature used to set whether system displays alert when trip info(Driving Distance, Driving Speed, Driving Time, etc). reaches 90% of memory.


UVO eServices must be activated to use this feature.

Press **SETUP** key ▶ **UVO eServices** ▶
Trip Info Sync Reminder **ON**.

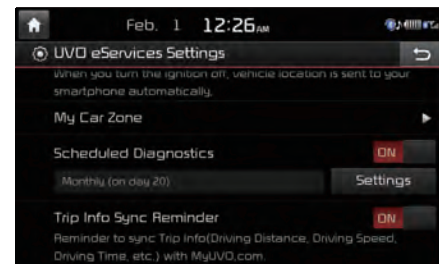

Voice Recognition Settings


Configure how to make a call with Voice Recognition Guidance and Voice Recognition.

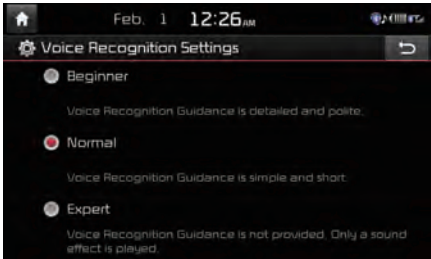

Features	Description
Guidance	Select an option from Beginner, Normal, or Expert.

Clock Settings

Provides the time and date settings.

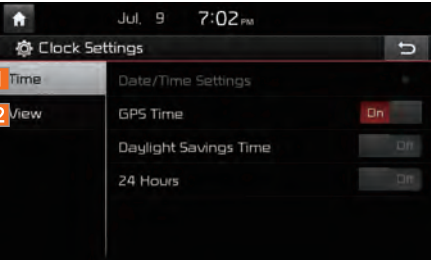

Features	Description
1 Time Settings	Provides the GPS Time, Date/Time Settings, Daylight Savings Time, and 24 Hours options. Time Zone Menu is displayed only when there is no memory card.
2 View Settings	Provides options to select a digital or analog clock widget for the screen saver or home screen, and to select the Display Date settings.

Wi-Fi Settings

You can share a digital-device network with the vehicle device through Wi-Fi.

Wi-Fi Settings Screen




Features	Description
1 Wi-Fi	Turn on/off Wi-Fi.
2 MAC Address	Displays the MAC address.
3 Refresh	Searches available networks near the vehicle.
4 Wi-Fi Network	Displays available network AP (Access Point) names.
5 Add Wi-Fi Network	Enter the network ID/ password to connect to a hidden network AP (Access Point).

How to Connect to a Network

1. In the Wi-Fi settings of a digital device, activate Internet sharing (hot spot).
2. In the vehicle network list, select the desired device to connect to. Enter the password to connect, if any.

Language Settings

You can configure the displayed system language.

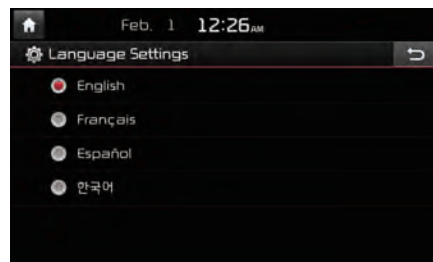

When the language is changed, the system language is automatically changed.

Unique data including MP3 file name is not changed and some languages don't support voice recognition.

Keyboard Settings

You can configure the keyboard layout for each language.




You can configure ABCD or QWERTY keyboards for the system.

i Information

- Configured keyboard layouts are applied to all input modes.

Downloaded Apps Settings


Displays the applications that were downloaded through the Download Center. View the memory status of installed applications or delete them.

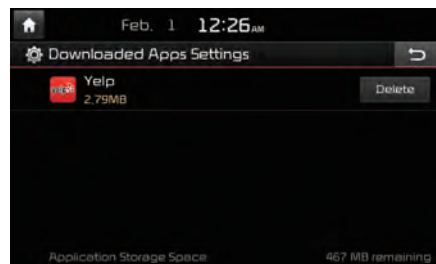

You can delete downloaded applications in the Download Center. To recover a deleted application, you can re-install the application with the re-download function in the Download Center.


Screen Saver Settings

Configures a screen to be displayed when the system is powered off.

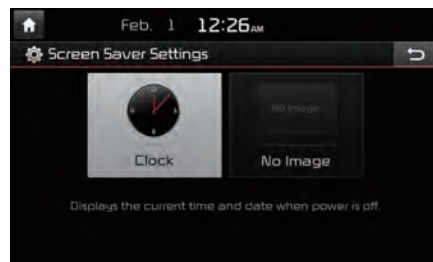

System Info

At the System Info screen, software version information, updates, and storage status details are available.

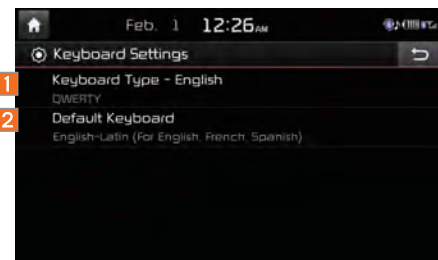

Features	Description
1 SW Info	System version information and update details are available. Select the Update button to update the system. After update is complete, the system will reboot automatically.
2 Storage	Displays the memory space available for media files and applications.

System Update

At the System Info screen, insert the updated memory (USB or SD card) with the latest file downloaded, and then select the **Update** button to begin updating. The system will then reboot automatically.

Information

- This product needs supplemented software updates, additional new functions, and renewed maps, which collectively may take some time to complete, depending on the amount of data.

CAUTION

- If the power is disconnected or the USB or SD card is removed during an update, the data might be damaged. Please wait until the update is complete while the engine is on.
-

10

part.10 Appendix

Product Specification
Before Thinking the Product Has Malfunctioned
Troubleshooting
FAQ

Appendix

Product Specification

TFT-LCD

Screen Size	Navigation Device - 8 inch(176.4 x 99.36mm)
Resolution	Navigation Device - 384,000 pixels (Resolution: 800 x 480)
Operating Method	TFT(Thin Film Transistor) Active Matrix
Viewing Angle	Left/Right, Top/Bottom : ALL 89°
Internal Lighting	LED

Radio

Channels	FM : 87.5 MHz ~ 107.9 MHz(Step : 200 kHz)
	AM : 530 kHz ~ 1710 kHz(Step : 10 kHz)
Sensitivity	FM : Under 10dBu/AM : Under 35dBu
Distortion Factor	Within 2%

Common

Name	Car TFT LCD Display Navigation Unit		
Power Supply	DC 14.4V	Operating Power	DC 9V ~ DC 16V
Current Consumption	2.5A	Sleep Current	0.5mA (Head Unit Only)
Operating Temperature	-20 ~ +70℃ (-4 ~ +158℉)	Storage Temperature	-40 ~ + 85℃ (-40 ~ +185℉)
Dimensions	178 X 102 X138mm (Main BOX)		
Weight	3.0 kg		

Wi-Fi Details

Frequency	2412 ~ 2462MHz
Specification	802.11b/g/n
Number of Channels	11 channels
Operating Temperature	-20 ~ + 70°C (-4 ~ +158°F)

Bluetooth® Wireless Technology

Frequency Range	2402 ~ 2480 MHz	Supported Bluetooth® Specification	3.0
Supported Profile	Handsfree(1.6), A2DP(1.2), AVRCP(1.4), PBAP(1.0)		
Output	0.125mW		
Number of Channels	79 channels		

CAUTION

- The producer and installer cannot provide services related to life safety as the concerned radio equipment is liable to radio interference.

Before Thinking the Product Has Malfunctioned

1. Errors which occur during the operation or installation of the device may be mistaken as a malfunction of the actual device.
2. If you are having problems with the device, try the suggestions listed below.
3. If the problems persist, contact your Kia dealer.

Problem	Possible Cause
There are small red, blue, or green dots on the screen	• Because the LCD is manufactured with technology requiring high point density, a pixel or lighting deficiency may occur within 0.01% of total pixels
The sound or image is not working	• Has the Switch for the vehicle been turned to [ACC] or [ON]? • Has the SYSTEM been turned OFF?
The screen is being displayed but sound is not working	• Has the volume been set to a low level? • Has the volume been muted?
When the power is turned on, the corners of the screen are dark	• The display appearing somewhat dark after prolonged periods of use is normal with LCD panels. It is not a malfunction • If the screen is very dark, contact your nearest Kia dealer for assistance
Sound is working from only one speaker	• Are the positions of Fader or Balance sound controls adjusted to only one side?

Problem	Possible Cause
Sound does not work in AUX mode	• Are the audio connector jacks fully inserted into the AUX terminal?
The external device is not working	• Is the external device connected with a standard connector cable?
Upon turning power on, the most recent mode screen is not displayed	Within modes that play files by reading external sources, such as discs, USB, iPod, or Bluetooth® streaming mode, the most recently played mode screen prior to turning off power may not properly load • If there is no disc or the corresponding device is not connected, the mode operated prior to the most recent mode will operate • If the previous mode still cannot be properly played, the mode operated prior to that will operate

Troubleshooting

Problem	Possible Cause	Countermeasure
The power does not turn on	The fuse is disconnected	- Replace with a suitable fuse - If the fuse is disconnected again, please contact your point of purchase or service center
	Device is not properly connected	Check to see that the device has been properly connected
The system does not play	The vehicle battery is low	Charge the battery If the problem persists, contact your point of purchase or service center

Problem	Possible Cause	Countermeasure
The image color/tone quality is low	The brightness, saturation, hue, and contrast levels are not set properly	Properly adjust the brightness, saturation, hue, and contrast levels through Display Setup
Sound does not work	- The volume level is set to the lowest level - The connection is not proper - The device is currently fast-forwarding, rewinding, scanning, or playing in slow mode	- Adjust the volume level - Check to see that the device has been properly connected - The sound will not work when the device is fast-forwarding, rewinding, scanning, or playing in slow mode
The sound or image quality is low	- Vibration is occurring from where the conversion switch has been installed - Image color/tone quality is low	- The sound may be short-circuited and the image distorted if the device vibrates - The device will return to normal once vibrations stop

Problem	Possible Cause	Countermeasure
The USB does not work	• USB memory is damaged • USB memory has been contaminated • A separately purchased USB HUB is being used • A USB extension cable is being used • A USB which is not a Metal Cover Type USB Memory is being used • An HDD type, CF, SD Memory is being used • There are no music files which can be played	• Please use after formatting the USB into FAT 12/16/32 format • Remove any foreign substances on the contact surface of the USB memory and multimedia terminal • Directly connect the USB memory with the multimedia terminal on the vehicle • Use standard USB Memory • Only MP3, WMA file formats are supported. Please use only the supported music file formats

The iPod is not recognized even though it has been connected	• There are no titles which can be played • The iPod firmware version has not been properly updated • The iPod device does not recognize downloads	• Use iTunes to download and save MP3 files into the iPod • Use iTunes to update the firmware version and reconnect the iPod with the device • Reset the iPod and reconnect with the device
--	--	---

i Information

- While operating the device, if an abnormality occurs that cannot be corrected with the above described measures, press the RESET key to reset the system.
- Press and hold the RESET key (over 1 seconds). The device power will turn off and the system will reset.

FAQ

About Pairing Mobile Phones

Q I cannot pair my mobile phone. What is the cause?

A Check to see that the mobile phone supports Bluetooth® function. Verify if Bluetooth on the cell phone is set to OFF. If so, set it to ON. If the cell phone still can't be registered, try again after turning Bluetooth off and on, or delete the device registration on the AVN and cell phone and then register the cell phone again.

Q What is the difference between pairing a mobile phone and connecting a mobile phone?

A Pairing occurs through authenticating the head unit and mobile phone. Mobile phones paired to the head unit can be connected and disconnected until the paired mobile phone is deleted from the system. Bluetooth® Handsfree features, such as making/answering calls or managing contacts, are supported only in mobile phones connected with the head unit.

Q What is a Passkey?

A A passkey is the password used to authenticate the connection between the head unit and mobile phone. The passkey only needs to be entered once when pairing the mobile phone for the first time.

The initial passkey is 0000. You can change it with

SETUP ► Phone ► Bluetooth System Info ► Passkey menu options.

About Making/Answering Phone Calls

Q How can I answer a call?

A When there is an incoming call, a notification pop-up will become displayed. To answer the incoming call, press the **Accept** button on the screen or the  key on the steering remote controller. To reject the call, press the **Reject** button on the screen or press the  key on the steering remote control.

Q What should I do if I am talking on the Handsfree but want to switch the call to the mobile phone?

A While on a call, press and hold (over 0.8 seconds) the  key on the steering remote controller or press the **Private** button at the bottom of the Phone screen to switch the call to your mobile phone.

About Bluetooth® Wireless Technology/ Head Unit Use Environment

Q What is the range of my wireless connection?

A The wireless connection can be used within 15 yards.

Q How many mobile phones can be paired?

A It is possible to pair up to five mobile phones.

Q Why is call quality sometimes poor?

A Check the reception sensitivity of the mobile phone when call quality becomes worsened. The call quality may deteriorate when the signal strength is low. Call quality may also worsen if metal objects, such as beverage cans, are placed near the mobile phone. Check to see if there are metal objects in the vicinity of the mobile phone. The call sound and quality may differ depending on the type of mobile phone.

Index

0~9

911 Connect 4-7, 9-8

A

About *Bluetooth*® Wireless Technology/
Head Unit Use Environment 10-8
AVM (Around View Monitor) 8-4
About Disc 2-11
About HD Radio™ Technology 2-4
About iPod 2-30
About Making/Answering Phone Calls ... 10-8
About Pairing Mobile Pphones 10-7
About Rear Detection Camera 8-4
About SiriusXM™ Data Service 7-8
About USB 2-22
About Using AV 2-1
About UVO eServices 4-4
Accept/Reject Call 3-7
Accessing FM/AM Mode 2-2
Accessing SiriusXM™ Data 7-8
Activating UVO eServices 4-6
Address 5-15
Adjusting Voice Recognition Volume ... 6-5

Appendix 10-1
Apps List 7-6
Audio Streaming 9-7
Auto Connection Priority 9-6
Auto Download 9-5
Automatic Diagnostics 4-12
AUX 2-37
Avoid Street 5-32

B

Basic 1-1
Basic Features 5-2
Basic Mode Screen
(HD Radio™ reception ON) 2-5
Basic Mode Screen 2-16, 2-19, 8-2
Battery Warning Message 1-10
Before Playing a USB MP3 2-22
Before Playing an MP3 Disc 2-14
Before Thinking the Product Has
Malfunctioned 10-4
Before Using the *Bluetooth*® Handsfree ... 3-2
Before using UVO eServices 4-5
Bluetooth Audio 2-38
Bluetooth Connection Settings 9-4

Bluetooth Connection 3-4
Bluetooth Connections Settings 2-39
Bluetooth Phone 3-6
Bluetooth® Audio Mode 2-38

C

Call Commands 6-8
Call History 3-9
Camera (Optional) 8-4
Canceling Route 5-29
CAUTIONS upon Connecting *Bluetooth*®
Phone 3-3
CD Mode 2-16
Changing Map View 5-3
Climate Mode 8-2
Clock Settings 9-13
Component Names and Functions ... 1-5
Conducting Vehicle Diagnostics 4-9
Connecting an External Device 2-37
Connecting *Bluetooth* Devices 3-4
Connecting *Bluetooth* 4-5
Connecting to smartphone via USB ... 4-6
Contacts 3-10
Curfew Limit Alert 4-13

Index I 10-9

D

Deleting Bluetooth Devices.....	3-5
Detour	5-5
Dial	3-7
Direct Tune	2-8
Disc/Content Format Compatibility.....	2-12
Disconnecting Bluetooth Devices	3-5
Display Route Information	5-29
Display Settings	9-4
Display	5-33
Download Center	7-6
Downloaded Apps Settings	9-15

E

Editing Route	5-31
Ending Voice Recognition	6-3
eServices Guide	4-16
Extending the Standby Time	6-4

F

FAQ	10-7
Favorites	3-11

Find the Nearest <Category> List	6-16
FM/AM Mode	2-2
Front AVM	8-5

G

General	5-33
Geo Fence Alert	4-14
Guidance	5-34

H

Head Unit.....	1-5
Help Display.....	6-6
Home Screen	1-11
How to Connect to a Network.....	9-14
How to start Siri	6-22
How to use Siri.....	6-22

I

Info	7-1
Initiating a 911 Call	4-7
Instructions for Using Voice Recognition ...	6-7
iPod	2-34

K

Key Product Features	1-4
Keyboard Settings	9-14

L

Language Settings	9-14
-------------------------	------

M

Map Scale	5-4
Media Commands	6-12
Media Mode.....	2-10
Menu	5-4
My Apps	7-7
My Car Zone	4-12, 9-9
My Music	2-40
My POIs	4-16

N

Navigation	5-1
Navigation Commands	6-9
Navigation Settings	5-33, 9-3
Navigation Volume	5-5

Nearby POIs 5-6

O

On-Screen Touch Controls 1-12

Operating Climate Mode 8-2

Operating Navigation Screen 5-2

Other Commands List (Commands used in List / Help) 6-15

Other Features 8-1

P

Pair a device from Bluetooth-enabled phone 4-5

Pairing a New Device 3-4

Pandora Radio Mode Screen Controls ... 7-3

Pandora Radio Mode 7-2

Parking Guidance Settings..... 8-6

Parking Minder..... 4-15, 9-9

Phone Settings 9-4

Phone Status Icons 3-6

Places 5-14

Precautions for Safe Driving 3-2

Precautions Required for Successful Voice Recognition 6-2

Precautions upon Handling Discs 2-11

Product Specification 10-2

Q

Quick Run of Voice Recognition (Manual Mode) 6-3

R

Radio Commands 6-11

Rear AVM 8-5

Restrictions on Features for Safety Measures 1-10

Ringtone 9-6

Roadside Assist 4-8

Route Guidance 5-27

Route Option 5-4

Route Options 5-32

Route Overview 5-30

Route Preview 5-30

Route Setting 5-24

Route 5-29, 5-34

S

Schedule Service 4-10

Scheduled Diagnostics 4-11, 9-12

Screen Saver Settings..... 9-15

Search 5-14

Selecting through Channel/Category List ... 2-8

Send Report 4-10

Sending Parking Location 4-15

Sending Points of Interest to Your Navigation System 4-16

Setup 9-1, 9-2

Siri Eyes Free 6-22

SiriusXM™ Mode Display Controls ... 2-6

SiriusXM™ Data 7-8

SiriusXM™ Fuel Price Information..... 7-10

SiriusXM™ Mode Hard Key Controls ... 2-5

SiriusXM™ Mode 2-5

SiriusXM™ Movie Information 7-14

SiriusXM™ Sports Information 7-12

SiriusXM™ Stock Information..... 7-11

SiriusXM™ Traffic Information..... 7-9

SiriusXM™ Weather Announcement... 7-8

Skipping Prompt Messages 6-5

Sound Settings 9-3

Speed Alert 4-14

Start Screen..... 6-6

Index I 10-11

Starting Mode	2-10
Starting the System for the First Time ...	1-9
Start Up	7-2
Starting UVO Voice Local Search	6-21
Starting Voice Recognition	6-3
Starting/Ending and Setting Voice Recognition	6-3
Steering Wheel Remote Controller.....	1-7
Supported Disc Formats	2-12
Supported Image Specifications.....	2-24
System Bluetooth Information.....	9-7
System Info	9-15
System Reset	1-9
System Update	9-16

T

The 911 Connect feature may not operate in the following situations.....	4-2
Traffic	5-34
Trip Info Sync Reminder	9-12
Troubleshooting	5-35, 10-5
Turning the System On/Off	1-9
Types of Commands	6-8

U

USB Image	2-28
USB Music	2-25
Using Bluetooth	3-1
Using iPod Devices	2-30
Using MP3 Mode	2-19
Using the Menu During a Phone Call...	3-8
UVO eServices	4-1
UVO eServices Commands List (Optional)	6-15
UVO eServices Settings	4-16, 9-8
UVO Voice Local Search.....	6-21

V

Vehicle Diagnostics	4-9
Viewing Menu	2-8
Voice Commands	6-8
Voice Guidance Volume On/Off	5-3
Voice Recognition	6-1
Voice Recognition Screen Overview ...	6-6
Voice Recognition Settings	9-13

W

Warnings and Cautions	1-2
What is <i>Bluetooth</i> ® Wireless Technology? ...	3-2
What is UVO Voice Local Search?	6-21
What is Voice Recognition?	6-2
Wi-Fi Settings Screen	9-13
Wi-Fi Settings	9-13

Z

Zoom In /Zoom Out.....	5-3
------------------------	-----

Important Safety Information

Before using your Multimedia system, read and follow all instructions and safety information provided in this end user manual ("User's Guide"). Not following precautions found in this User's Guide can lead to an accident or other serious consequences.

Keep User's Guide in Vehicle

When kept in the vehicle, the User's Guide will be a ready reference for you and other users unfamiliar with the Multimedia system. Please make certain that before using the system for the first time, all persons have access to the User's Guide and read its instructions and safety information carefully.

Warning:

Operating certain parts of this system while driving can distract your attention away from the road, and possibly cause an accident or other serious consequences. Do not change system settings or enter data non-verbally (using your hands) while driving. Stop the vehicle in a safe and legal manner before attempting these operations. This is important since while setting up or changing some functions you might be required to distract your attention away from the road and remove your hands from the wheel.

General Operation

Voice Command Control

Functions within the Multimedia system may be accomplished using only voice commands. Using voice commands while driving allows you to operate the system without removing your hands from the wheel.

Prolonged Views of Screen

Do not access any function requiring a prolonged view of the screen while you are driving. Pull over in a safe and legal manner before attempting to access a function of the system requiring prolonged attention. Even occasional short scans to the screen may be hazardous if your attention has been diverted away from your driving task at a critical time.

Volume Setting

Do not raise the volume excessively. Keep the volume at a level where you can still hear outside traffic and emergency signals while driving. Driving while unable to hear these sounds could cause an accident.

Navigation Features

Any navigation features included in the system are intended to provide turn by turn instructions to get you to a desired destination. Please make certain all persons using this system carefully read and follow instructions and safety information fully.

Distraction Hazard

Some navigation features may require manual (non-verbal) setup. Attempting to perform such set-up or insert data while driving can seriously distract your attention and could cause an accident or other serious consequences. Stop the vehicle in a safe and legal manner before attempting these operations.

Let Your Judgment Prevail

Any navigation features are provided only as an aid. Make your driving decisions based on your observations of local conditions and existing traffic regulations. Any such feature is not a substitute for your personal judgment. Any route suggestions made by this system should never replace any local traffic regulations or your personal judgment or knowledge of safe driving practices.

Route Safety

Do not follow the route suggestions if doing so would result in an unsafe or illegal maneuver, if you would be placed in an unsafe situation, or if you would be directed into an area that you consider unsafe. The driver is ultimately responsible for the safe operation of the vehicle and therefore, must evaluate whether it is safe to follow the suggested directions.

Potential Map Inaccuracy

Maps used by this system may be inaccurate because of changes in roads, traffic controls or driving conditions. Always use good judgment and common sense when following the suggested routes.

Emergency Services

Do not rely on any navigation features included in the system to route you to emergency services. Ask local authorities or an emergency services operator for these locations. Not all emergency services such as police, fire stations, hospitals and clinics are contained in the map database for navigation features.

Use of Speech Recognition Functions

Speech recognition software is inherently a statistical process which is subject to errors. It is your responsibility to monitor any speech recognition functions included in the system and address any errors.

FCC Warning

U.S.FEDERAL COMMUNICATIONS COMMISSION RADIO FREQUENCY INTERFERENCE STATEMENT INFORMATION TO THE USER

NOTE : This equipment has been tested and founded to comply with the limits for a
Class B digital device pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular Installation.

If this equipment dose cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encourage to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet of a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

The users manual or instruction manual for an unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the Internet, the information required by this section may be included in that alternative form, provided the user can reasonably be expected to have the capability to access information in that form.

This equipment complies with FCC radiation exposure set forth for an uncontrolled environment

This equipment should be installed and operated with minimum 20 cm between the radiator and your body. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter unless authorized to do so by the FCC.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IC Warning

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause interference, and

(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Toute modification non expressément approuvée par la partie responsable de la conformité pourrait annuler l'autorisation accordée à l'utilisateur d'utiliser cet équipement.

MEMO

MEMO

MEMO

MEMO



A9MS7-B5001

A9ENE09