



SORENTO

FEATURES & FUNCTIONS GUIDE

www.kia.com

Consumer - Roadside Assistance
1-800-333-4KIA (4542)

See Back Cover for Vehicle Maintenance Schedule

Always check the Owner's Manual for complete operating information and safety warnings.

GETTING TO KNOW YOUR **SORENTO**

Congratulations on Your New Kia Purchase!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

Using This Guide

The information contained in this guide is a brief overview which will help you become familiar with the operation and features of your new Kia vehicle. The flipbook format facilitates information access, while the detailed illustrations ensure the instructions are easy to follow.

This **Features & Functions Guide** and the specific operational and safety information it provides is not a substitute for your Owner's Manual. In the interest of your safety and that of your family, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read your Owner's Manual in order to fully familiarize yourself with the important information it contains.

While the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance or after the fact, and assumes no liability in connection with such changes.

ESSENTIAL FEATURES

Active ECO System*	06
Air Conditioning / Climate Control	22
Audio System - Standard*	17
Audio System - Navigation System*	20
Audio System - UVO eServices System*	19
Aux/USB/iPod® Port & Power Outlets	21
Bluetooth® Wireless Technology	14
Cruise Control	13
Digital Clock	21
Folding 2 nd & 3 rd Row Seats*	27
Front Active Headrests	28
Front Windshield/Rear Wipers & Washers*	11
Fuel Economy	04
PASSENGER AIR BAG OFF Indicator	36
Rear-Camera Display*	34
Smart Key*	29
Tire Pressure Monitoring System (TPMS)	06

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.



VIDEOS & QR CODES	02
-------------------	----

INSTRUMENT CLUSTER

Instrument Cluster Overview / Indicators & Warning Lights	03
Trip Computer / Tripmeter*	04
Fuel Economy	04
User Settings Mode	05
Service Mode	05
Tire Pressure Monitoring System (TPMS)	06
Active ECO System*	06

DRIVER'S PANEL

Electronic Stability Control (ESC)	07
Hill-Start Assist Control (HAC)	07
Blind Spot Detection (BSD) System*	07
Instrument Panel Dimmer*	08
All-Wheel-Drive (AWD) Transfer Mode*	08
Fuel Door and Hatch Release Buttons	08
Heated Steering Wheel Button*	08
Power Windows, Window Lock & Central Door Lock	09
Electric/Folding Mirrors*	09
Power/Heated Outside Mirrors*	09
ENGINE START/STOP Button*	09

STEERING WHEEL CONTROLS

Headlights & High Beams	10
Turn Signals & Fog Lights*	10
Windshield Wipers & Washers	11
Rear Wiper & Washer*	11
Tilt/Telescopic Steering Wheel	12
LCD Instrument Cluster Modes*	12
Audio Controls	13
Cruise Control	13
Bluetooth® Wireless Technology	14
FlexSteer™ Steering Wheel Mode*	16

AUDIO SYSTEM

Standard Audio System*	17
UVO eServices System*	19
Navigation System*	20

CENTER PANEL

Digital Clock	21
Aux/USB/iPod® Port & Power Outlets	21
Automatic Climate Control*	22
Manual Climate Control*	23
3 rd Row Air Conditioning Control*	23
Automatic Gear Shift with Sportmatic® Shifting	24

SEATING

Seat Warmers/Ventilated Seats*	25
Driver Position Memory System*	25
Power Adjustable Driver's Seat*	26
6-Way Manual Adjustable Driver's Seat*	26
Folding 2 nd & 3 rd Row Seats*	27
Front Active Headrests	28
Front Seat Headrest Adjustment	28

OTHER KEY FEATURES

Remote Keyless Entry (Folding Key)*	29
Double-Turn Lock/Unlock All*	29
Smart Key*	29
HomeLink® with Auto-Dimming	
Rearview Mirror*	30
Power Tailgate*	31
Fuel Cap / Malfunction Indicator (Check Engine Light)	31
Manual Rear Hatch Release Button	31
Map/Room/Dome Lamps	32
Sunvisor	32
Sunroof Operation*	33
Roof Rack*	33
Rear-Camera Display*	34
Back-Up Warning System*	34
Hood Release Lever and Latch	35
Child Safety Locks	35

SAFETY

Safety Belts	36
Occupant Detection System (ODS) / PASSENGER AIR BAG OFF Indicator	36

LEGAL DISCLAIMERS (See Back Inside Cover Page)

MAINTENANCE (See Back Cover)

Kia provides a number of video resources at your disposal to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your smartphone/tablet (mobile devices) or by visiting the following website: **www.KuTechVideos.com/xm13/2015**. Continue reading for a more in-depth look at QR Codes and for instructions on how to use them.

What are QR Codes?

A QR Code is a square, 2-dimensional bar code that can be read by mobile devices loaded with an appropriate bar code or QR Code Reader app. The app reads the bar code image and then launches/uploads the specific information the code contains, such as URLs, text, photos, videos, and so much more.

How to Use QR Codes

If you have a mobile device with a QR Code Reader app, you can snap the code with your phone and you'll be provided a video with additional information pertaining to the topic. For example, in the Kia One-Click Fuel Cap section, if you would like additional information, just snap the code with your mobile device to view the selected Kia Features & Functions Video.

Ⓢ QUICK TIPS

1. If you're having trouble scanning codes, check the following:
 - The code should be centered and focused in your mobile device's camera screen
 - Consider moving your device closer to or farther away from the code
 - The code should be well lit, without significant shadow
 - Avoid scanning from a significant angle
 - Confirm that the device's app supports 2-D QR Code scanning. Try another QR Code app; not all apps are created equal
2. After scanning, a "connecting" message appears and then nothing happens or there's a "connection error" message: These messages typically indicate that your device is having trouble connecting to the Internet

📱 QR Code

Kia One Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

 


www.KuTechVideos.com/xm13/2015

How to snap a QR Code

1. With your mobile device, download a QR Code reader app. With many devices, you can do this through an App Store or Marketplace
2. Open the QR Code reader app on your mobile device
3. The app will utilize your device's camera. Center the code in the camera viewing area:
 - With some apps, as soon as the app recognizes the code, it will launch the corresponding video
 - With other apps, you will have to snap or "take a picture" of the code. The app will then launch the corresponding video
 - For operation specifics, refer to the instructions that come with the QR Code reader app

Instrument Cluster Overview / Indicators & Warning Lights

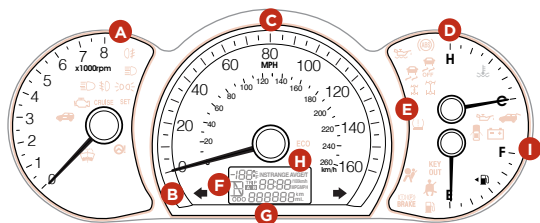


(Type A Cluster)

- A** Tachometer
- B** Turn Signal Indicators
- C** Speedometer
- D** Engine Temperature Gauge
- E** Indicator & Warning Lights
- F** Gear Shift Position Indicator*
- G** Odometer
- H** Trip Computer*/Tripmeter
- I** Fuel Gauge

REMINDER: Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. See your Owner's Manual for more details.

QUICK TIPS

 For more information on the function of all indicator and warning lights, please refer to the Owner's Manual.

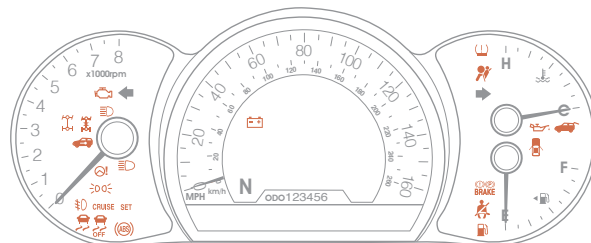

(Type B Cluster)

 
- Low Windshield Washer Warning Light
- Light on Indicator
- AWD System Warning Light*
- AWD LOCK Indicator*
- ECO Active ECO Indicator
- Immobilizer Indicator*
- High Beam Indicator
- Electronic Stability Control (ESC) Indicator*
- Electronic Stability Control (ESC) OFF Indicator*
- Low Tire Pressure Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator
- Malfunction Indicator
- Tailgate Open Warning Light
- Front Fog Light Indicator
- Seat Belt Warning Light
- Parking Brake & Brake Fluid Warning Light
- Door Ajar Warning Light
- Airbag Warning Light
- Anti-lock Braking System (ABS) Warning Light
- Charging System Warning Light
- SET Cruise SET Indicator
- CRUISE Cruise Indicator
- Engine Oil Pressure Warning Light
- Low Fuel Level Warning Light
- Electronic Brake Force Distribution (EBD) System Warning Light
- Electronic Power Steering Warning Light

Trip Computer / Tripmeter*

The Trip Computer is a driver information system that displays information related to driving – such as Odometer, Tripmeter, Range, Average Fuel Consumption and Driving Time – on the display when the ignition switch is in the ON position.

To cycle through the LCD instrument cluster modes, press the Mode/Select button **A**.

When in the Trip Computer mode , press the Move/Reset button **B** to cycle through the screens. When displaying Trip A or Trip B screens, press and hold the Move/Reset button **B** to reset the Tripmeter to zero.

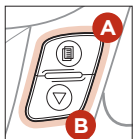

REMINDER: Appearance of Tripmeter display may differ as equipped.

REMINDER: All stored driving information (except Odometer and Distance to Empty) is reset if the battery is disconnected.

(Buttons located on Steering Wheel)

 
Instant Fuel Consumption Mode*

When in the Trip Computer mode, cycle to the first screen which displays Range, Average MPG and Instant MPG. The Instant Fuel Consumption (Instant MPG) display calculates fuel consumption during the past few seconds. Not to be used in calculation or as a reference for AVERAGE fuel economy.

1. Keep your vehicle in good condition with regular maintenance
2. Travel lightly, without carrying unnecessary weight in your vehicles
3. Don't let the engine idle longer than necessary

REMINDER: Not to be used in calculating or as a reference for AVERAGE fuel economy.

REMINDER: If the vehicle speed exceeds 1 MPH (1.6 km/h) after being refueled with more than 1.6 gallons (6 liters), the average fuel economy will be cleared to zero (---).

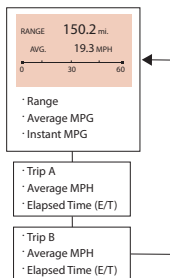

(Type B Cluster)

Fuel Economy

There are several factors that contribute to your vehicle's fuel efficiency, including maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are tips on how to help improve fuel economy:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

REMINDER: Driving range will vary depending on your vehicle's fuel tank size, e.g. 12-gal. vs. 24-gal., even though the MPG may be the same.

For more information on Fuel Economy, you can snap the QR Code above to view a video or refer to the brochure, "Getting More Out Of Every Gallon, Fuel-Saving Tips To Drive By" available at your local dealership.

 **QR Code**

Fuel Economy Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/xm13/2015

User Settings Mode

To enter the User Settings mode on the LCD* cluster, press the Mode/Select button **A** when the vehicle is at a standstill and with the ENGINE START/STOP button in the ON position or the engine running and select User Settings .

You can navigate the selections on the display by pressing the Move/Reset button **B**, and then selecting the item by pressing the Mode/Select button **A**.

Doors:

- Auto Door Lock*
- Auto Door Unlock*
- Two Press Unlock*
- Horn Feedback*

Lamps:

- One-Touch Turn Lamp*
- Headlamp Delay*
- Welcome Light*

Settings:

- Language
- Temperature
- AVG Fuel Economy Reset
- Easy Seat Access*
- Welcome Sound

Service Interval:

- Service Interval On/Off

Service Interval Setting:

To set up the maintenance schedule when in User Settings mode:

- Press the Move/Reset button **B** and toggle to Service Interval. Press the Mode/Select button **A** to enter.
- Press the Move/Reset button **A** and toggle to ON, then press the Mode/Select button **A**. Then press the Move/Reset button **B** to scroll and select the desired miles or months for your next service.
- Press the Mode/Select button **A** to enter.

Service Mode

To enter Service Mode, press the Mode/Select button **A**, scroll to the Service mode  and press Move/Reset button **B**. System will display number of miles remaining until next service is due, and type of service.

 
 
When service is required, the following screen will be displayed: Service Required.

To reset the Service Mode system, press and hold the Move/Reset button **B** for more than 1 second.

To turn Service In OFF, go to User Settings.



(Located on Steering Wheel)



QR Code

LCD Display: Maintenance Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/xml13/2015

LCD Display Video



www.KuTechVideos.com/xml13/2015

Tire Pressure Monitoring System (TPMS)

The indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.

The TPMS indicator will illuminate if one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS or the outside temperature becomes significantly colder.

Inflate tire(s) to specifications to turn off Low Tire Pressure Light  by using an accurate **digital** tire pressure gauge. See driver's door jamb for PSI specification.

The TPMS Malfunction Indicator  will illuminate after it blinks for approximately one minute when there is a problem with the TPMS. See dealer for service.

Active ECO System*

Active ECO helps to improve fuel efficiency by controlling several vehicle components. When activated, it optimizes drivetrain operations such as engine power and transmission to help improve fuel economy.

 
To turn ON, press the Active ECO button . The button light will turn on and the green ECO indicator light  in the instrument cluster will illuminate (indicating that you are getting optimal fuel efficiency). The Active ECO System will remain on even when the engine is turned off and restarted.

To turn Active ECO OFF, press the button  again.

QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust Tire Pressure on "cold tires"
- For proper maintenance, safety, and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

REMINDER: Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s).

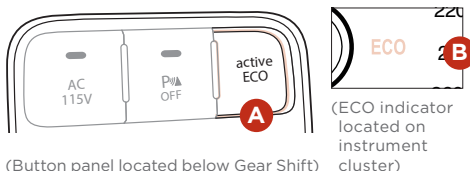

QUICK TIPS

To help improve your fuel efficiency:

- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Be sure the wheels are properly aligned

For more information on Active ECO, refer to your Owner's Manual or contact your local dealership.

QR Code

Kia Tire Pressure Monitoring System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/xm13/2015

Active ECO Indicator Video



www.KuTechVideos.com/xm13/2015

Electronic Stability Control (ESC)

The ESC system is designed to help stabilize the vehicle during cornering maneuvers. It is a good idea to keep the ESC turned on for daily driving whenever possible.

Press ESC button **A** to turn ESC OFF/ON.

REMINDER: ESC is turned ON at vehicle start-up.

REMINDER: The ESC Indicator Light in the instrument cluster will be lit momentarily whenever the ESC is active.

Hill-Start Assist Control (HAC)

HAC helps prevent the vehicle from rolling backwards when accelerating from a stop while on a steep incline.

The HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

 
REMINDER: The HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position.

QUICK TIPS

- When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator
- HAC provides a 2-second delay before the vehicle may start rolling backwards

Blind Spot Detection (BSD) System*

The system uses a radar sensor to help alert the driver while driving. The BSD indicator on the button **B** will illuminate when turned ON.

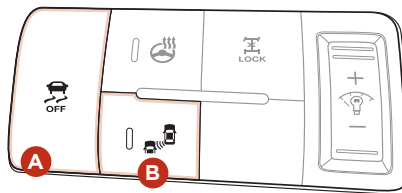

(Button panel located left of Steering Wheel)

The system will become active when the vehicle is traveling more than 19 mph and will alert the driver when another vehicle is detected by the radar sensor.

1st stage alert: When another vehicle is detected within the BSD System boundary, a yellow light will illuminate on the outside rearview mirrors.

2nd stage alert: When 1st stage alert is on and a turn signal is turned on, the 2nd-stage alert will sound.

REMINDER: The Blind Spot Detection System is not a substitute for proper and safe driving practices. Always drive safely and use caution when changing lanes or backing up. The system may not detect every object alongside the vehicle.

QR Code

 
Blind Spot Detection Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/xm13/2015

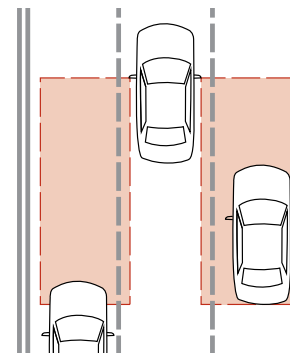


Instrument Panel Dimmer*

With parking lights/headlights ON, toggle switch **A** up or down to adjust display brightness of the instrument panel illumination.

REMINDER: When brightness reaches a maximum or minimum level, an alert will sound.

 REMINDER: The Instrument Panel Dimmer does not adjust brightness on the Navigation System screen. Use Navigation setup to adjust brightness on the Navigation System.

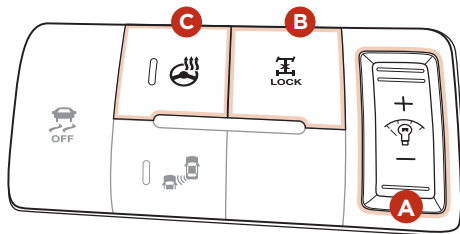

(Buttons located on Driver's panel)

All-Wheel-Drive (AWD) Transfer Mode*

Press the AWD Mode selector button **B** to activate or deactivate AWD Lock mode.

AWD Auto Mode:



The vehicle operates similar to conventional 2WD vehicles. If the system determines that there is a need for the AWD mode, the engine's driving power is distributed to all four wheels automatically without driver intervention.

AWD Lock Mode:

 


Activates AWD for climbing or descending sharp grades, off-road driving, driving on sandy and muddy roads, etc., to help provide optimal traction given the terrain.

Fuel Door and Hatch Release Buttons

Press the button **D** to release the fuel door.

Press the button **E** to unlock the rear hatch.

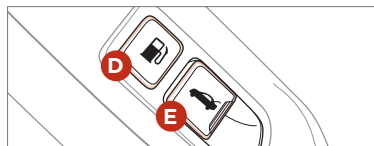

(Buttons located on lower door panel)

Heated Steering Wheel Button*

 
Press **C** to turn ON/OFF Steering Wheel Heater, while the ENGINE START/STOP Button is in the ON position. Steering Wheel Heater will turn OFF automatically in 30 minutes, or when button is pressed again to deactivate.

⚡ QUICK TIPS

If ignition is turned OFF, then ON again within 30 minutes of Steering Wheel Heater being turned ON, the system will remain in the ON position.

DRIVER'S PANEL

Power Windows, Window Lock & Central Door Lock

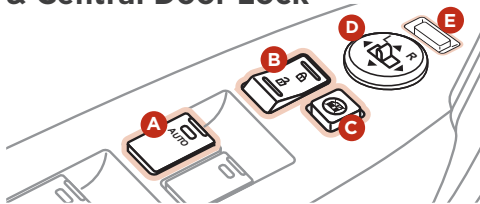

A Pull/Press to operate Driver's Window Auto Up/Down*

B Press to Lock/Unlock All Doors

C Press to disable rear Passenger Windows

REMINDER: When pressed **C**, window controls for the Rear Passenger Windows are disabled, including from the driver's controls.

ⓘ QUICK TIPS

Auto Door Lock/Unlock* will engage when gear shift is moved in to or out of the P (Park) position.

Electric/Folding Mirrors*

Toggle switch **D** left or right to select mirror. Then press arrows to adjust power outside mirror position.

To both fold and unfold the power outside rearview mirror, press the folding mirror button **E** as pictured.

ⓘ QUICK TIPS

Mirrors do not automatically unfold when using Driver's Door Lock/Unlock button on door handle.

REMINDER: To automatically fold mirrors when exiting vehicle, press the LOCK button twice on the Smart Key.

REMINDER: To lock position of mirrors, toggle switch to the neutral (center) position.

Power/Heated Outside Mirrors*

Mirror heaters controlled with Rear Defroster.

ENGINE START/STOP Button*

To start the engine:

1. Depress the brake pedal
2. Press the ENGINE START/STOP button while in Park



To turn the vehicle OFF, press the ENGINE START/STOP button.

To use the ENGINE START/STOP button, you must have the Smart Key fob on your person or in the vehicle.

REMINDER: In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/ STOP button for more than 2 seconds or 3 times successively within 3 seconds.

ⓘ QUICK TIPS

To use electrical accessories:

ACC position

- When in the OFF position (no light) and without depressing the brake pedal, press the ENGINE START/STOP button once (Orange light **A**).

On position

- When already in the ACC position (Orange light **A**) and without depressing the brake pedal, press the ENGINE START/STOP button again (Reddish Orange light **B**).
- When in the OFF position (no light) and without depressing the brake pedal, press the ENGINE START/STOP button twice (Reddish Orange light **B**).

Keeping the vehicle in ACC or ON position too long can discharge the vehicle's battery

QR Code

Kia ENGINE START/STOP Button and Smart Key Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

 


www.KuTechVideos.com/xm13/2015

Headlights & High Beams

AUTO Light* function — When the light switch is in the AUTO light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

Push lever to turn High Beams ON.
Pull lever to flash Headlights / High Beams.

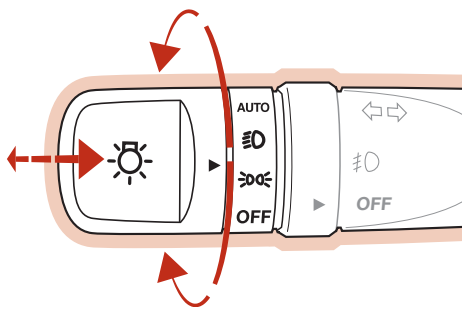

Rotate lever to change the Headlight function:

 
- AUTO*** : Automatic Headlights position
-  : Headlight position
-  : Parking light position
- OFF** : OFF position

Turn Signals & Fog Lights*

One-Touch Lane Change Signal is activated by moving the Turn Signal Lever slightly up/down for less than 1 second and then releasing. The lane change signal will blink 3 times.

Move lever Up/
Down for Right/Left
Turn Signal.

Slightly move
lever up/down to
activate One-
Touch Lane
Change Signal.

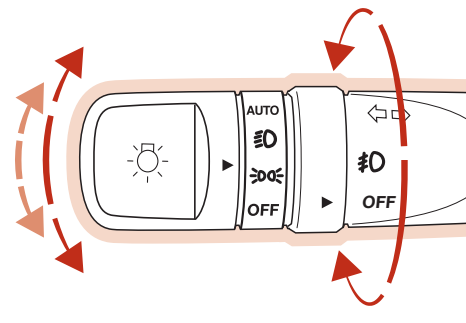


Rotate lever ring to turn Fog Lights ON/OFF.

REMINDER: Headlights must be ON for Fog Light operation.

Windshield Wipers & Washers

 Move lever Up/Down to change Wiper modes.
Rotate lever to adjust Intermittent Wipe Speed.

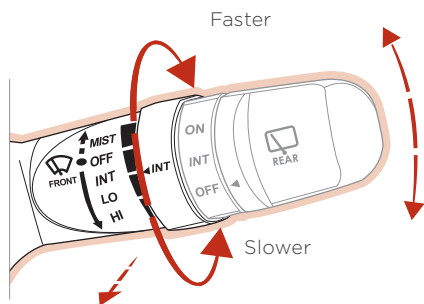


- MIST:** Single wipe
- OFF:** Wiper off
- INT:** Intermittent wipe
- LO:** Slow wipe
- HI:** Fast wipe

Rear Wiper & Washer*

Rotate Rear Wiper switch to change Wiper modes.

 Push to spray and wipe.

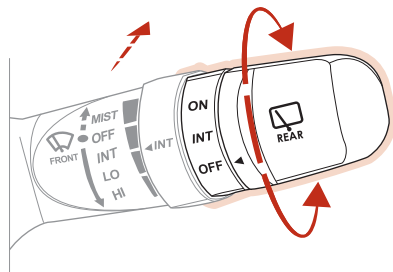


- ON:** Normal wipe
- INT:** Intermittent wipe*
- OFF:** Wiper off

Tilt/Telescopic Steering Wheel

To adjust the Steering Wheel, press the Lock-Release Lever **A** down and adjust **B** to desired angle and **C** distance.

 
When finished, pull the Lock-Release Lever **A** up to lock Steering Wheel in place.

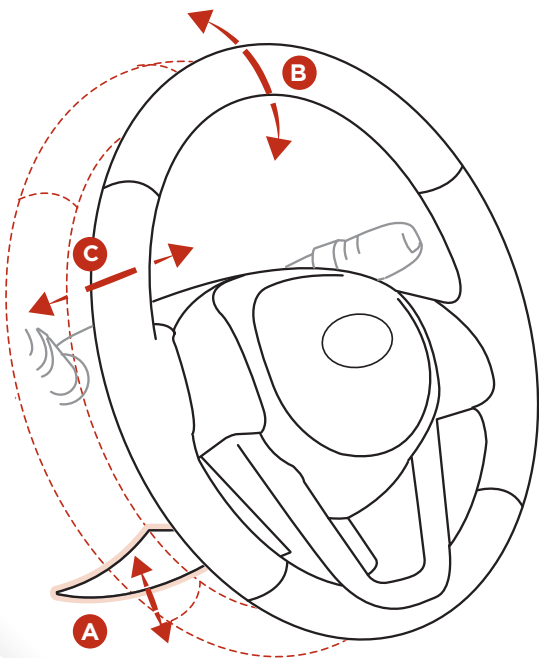

LCD Instrument Cluster Modes* (Type B Instrument Cluster)

Press Mode/Select button **D** to change/select the different LCD modes. Then press the Move/Reset button **E** to enter the select the item.

 Refer to page 5 for more information on User Settings and Service modes.

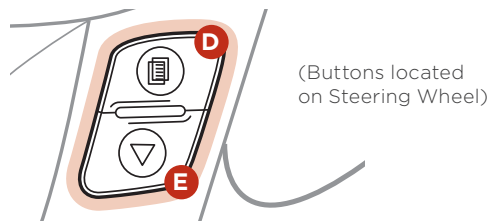

Modes:



Trip Computer Mode: Displays driving information for tripmeter, fuel economy, etc.



Service Mode: Informs on upcoming service intervals



User Settings Mode: Change settings of the doors, lamps and other features



A/V Mode*: Displays the state of the A/V System



Turn-by-Turn Mode*: Displays the state of the Navigation System

QR Code

LCD Display Video

 
To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/xm13/2015

Audio Controls

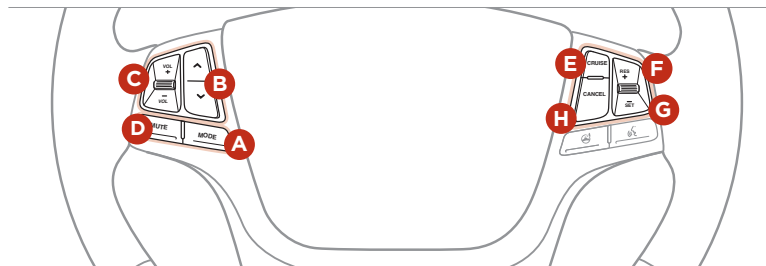

- A Audio Mode button:** Press to cycle through FM1-2/AM/SAT 1-3/CD/USB/AUX/iPod®
- B Seek/Preset button**
 - *Radio Mode:* Press to advance through Preset Stations. Press and hold to AUTO SEEK
 - *CD/USB/iPod® Mode:* Press to move TRACK UP/DOWN. Press and hold to FF/REW
- C Volume button:** Press up/down to raise/lower volume
- D Mute button:** Press to mute all audio

ⓘ QUICK TIPS

Pressing the Audio Mode button for more than 1 second will turn Audio Mode ON/OFF.

REMINDER: Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

For further audio system operations, refer to pages 17-20.

Cruise Control

 
- E Cruise Control ON/OFF button:** Press to turn the Cruise Control ON/OFF
- F Resume Cruising Speed button:** Press to Resume or increase Cruising Speed
- G Set Cruising Speed button:** Press to set or decrease Cruising Speed
- H Cruise Control Cancel button:** To cancel Cruise Control setting, do one of the following:
 - Press the brake pedal
 - Press the CANCEL button

ⓘ QUICK TIPS

- Cruise Control is designed to function only above 25 mph
- The Cruise Control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine starting

REMINDER: Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Bluetooth® Wireless Technology

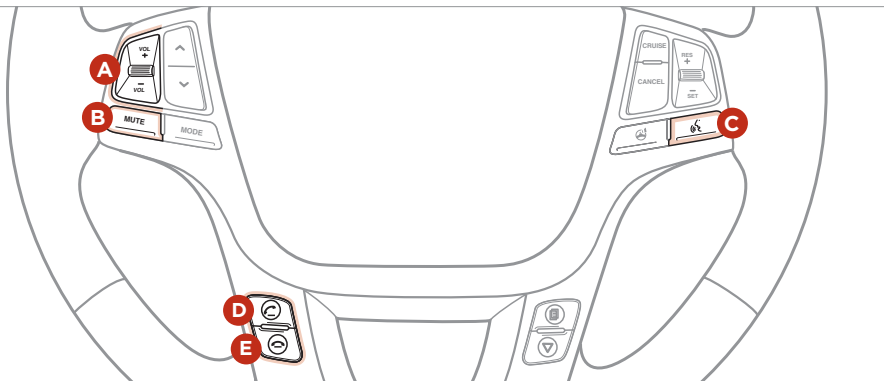

- A Volume button:** Press up/down to raise/lower speaker volume
- B Mute button:** Press to mute the microphone during a call
- C Talk button:** Press to activate voice recognition / bring up menus / place calls with minimal voice command prompts from the system

ⓘ QUICK TIPS

When using the voice command feature, wait for the system BEEP before speaking the command.

- D Receive/Place Call button:** Press to receive/transfer calls. Press to place a call using vocal command prompts from the system, or to answer an incoming call
- E End Call button:** Press to end a call or cancel a function

ⓘ QUICK TIPS

- Phone book transfer upload time varies by phone model and with number of phone book entries
- Because of differences in phone quality, service providers and **Bluetooth®** Wireless Technology chip programming, functionality may differ from one phone to another
- Changing language may delete paired phones

REMINDER: Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

For more information, refer to the *Digital Navigation Systems User's Guide* or the *UVO System User's Manual*.

For **Bluetooth®** Wireless Technology FAQs, go to www.kia.com, Owners section. Refer to your Owner's Manual for more specific **Bluetooth®** Wireless Technology phone pairing and operation instructions.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Bluetooth® Wireless Technology

Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide or your vehicle's Quick Start Guide.

ⓘ QUICK TIPS

During the pairing process, be sure to accept the connection requests on the phone for phonebook download and to allow acceptance of all future **Bluetooth®** connection requests.

How to Place a Call

When using the voice command feature, wait for the system BEEP before speaking the command.

There are two options for placing a call:

Standard Audio System

- **Option 1:** Press the Receive/Place Call button **D** (system will prompt you through call process)
- **Option 2:** Press the Talk button **C** (system will BEEP to indicate it is ready for call placement). Then say the command "Call {name}" or "Dial {number}"

UVO System

- **Option 1:** Press the Receive/Place Call button **D** (displays the phone screen with number keypad)
- **Option 2:** Press the Talk button **C**. Then say the command "Call {name}" or "Dial {number}"

Navigation System

- **Option 1:** Press the Receive/Place Call button **D** (displays the phone screen with number keypad)
- **Option 2:** Press the Talk button **C**. Then say the command "Call Name" or "Dial Number", followed by phone book name or number

Voice Recognition and Phone Contact Tips

The Kia Voice Recognition System may have difficulty understanding some accents or uncommon names. When using Voice Recognition to place a call, speak in a moderate tone, with clear pronunciation.

Help your **Bluetooth®** Wireless Technology Voice Recognition performance by making a few simple changes to your phone contacts:

- Use full names vs. short or single syllable names ("John Smith" vs. "Dad", "Smith Residence" vs. "Home")
- Avoid using special characters or hyphens (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms ("In Case Emergency" vs. "ICE")
- Spell words completely, no abbreviations ("Doctor Goodman" vs. "Dr. Goodman")

ⓘ QUICK TIPS

Contacts Sync Tips

- If Contact Sync is set to ON, contacts stored in your phone will download each time your phone is connected. There may be a delay before the system is available to place a call
- If Contact Sync is set to OFF, your phone contacts will download only at the initial pairing. This allows you to make calls without waiting for your phone contact list to download

📱 QR Code

Voice Recognition Tips Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.

 


www.KuTechVideos.com/xm13/2015


FlexSteer™ Steering Wheel Mode*

Select the desired steering mode by toggling through the steering modes.

- Press the FlexSteer™ Steering Wheel Mode button **A** to display the steering mode on the LCD display (Type B instrument cluster).
- Then press the button again **A** within 4 seconds to switch modes.

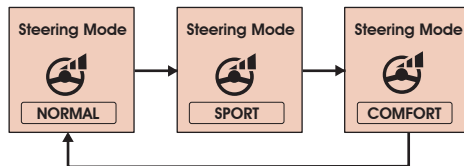

 REMINDER: Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

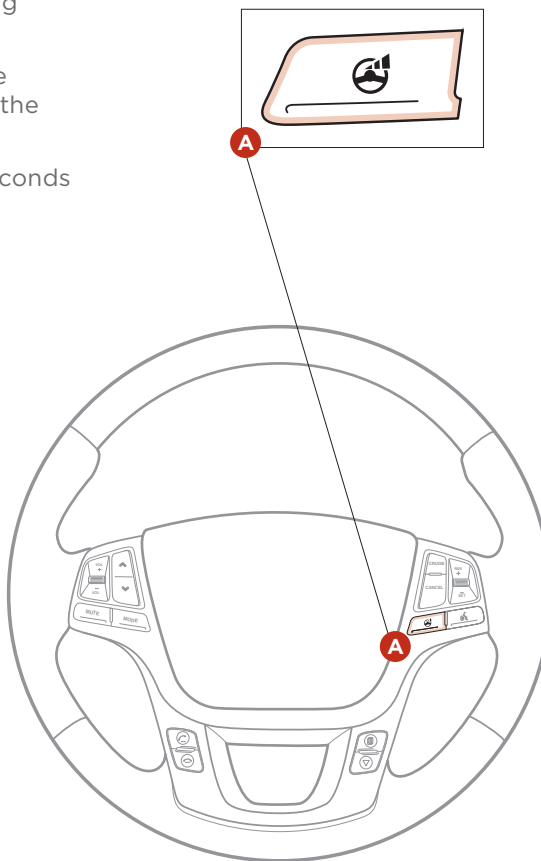

QR Code

FlexSteer™ Steering Wheel Mode Video

 
To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/xm13/2015

Standard Audio System Overview/Operation — FM/AM/SiriusXM®/Media (CD, USB, iPod®, Aux, My Music, BT Audio)*

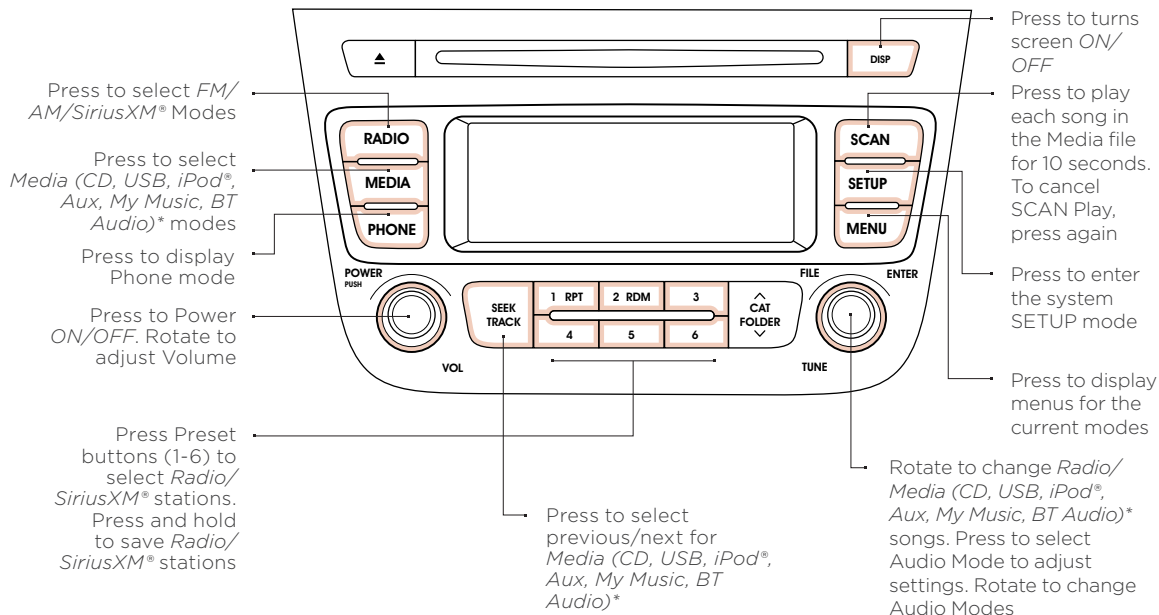

QR Code

Standard Audio System Videos

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



http://kutechvideos.com/audio/base_system

REMINDER: Your vehicle's audio system may differ from that in the illustration. See your Owner's Manual for more details.

Audio System Setup Options

 
Press the SETUP button, then use the TUNE knob to cycle through the available settings for each equipped audio option. Press the TUNE Knob to adjust the audio option selected. Audio options may include the following:

- Display Settings
- Sound Settings
- System Settings

To adjust the sound settings (Bass, middle, treble, fader, balance), select **Sound** settings in the SETUP menu. Then use the TUNE knob to cycle to the selection and then press the TUNE knob to select. Turn the TUNE knob left/right to adjust sound setting.

For further audio system operations, refer to pages 18-20.


Standard Audio System Operation — Media (CD, USB, iPod®, Aux, My Music, BT Audio)*

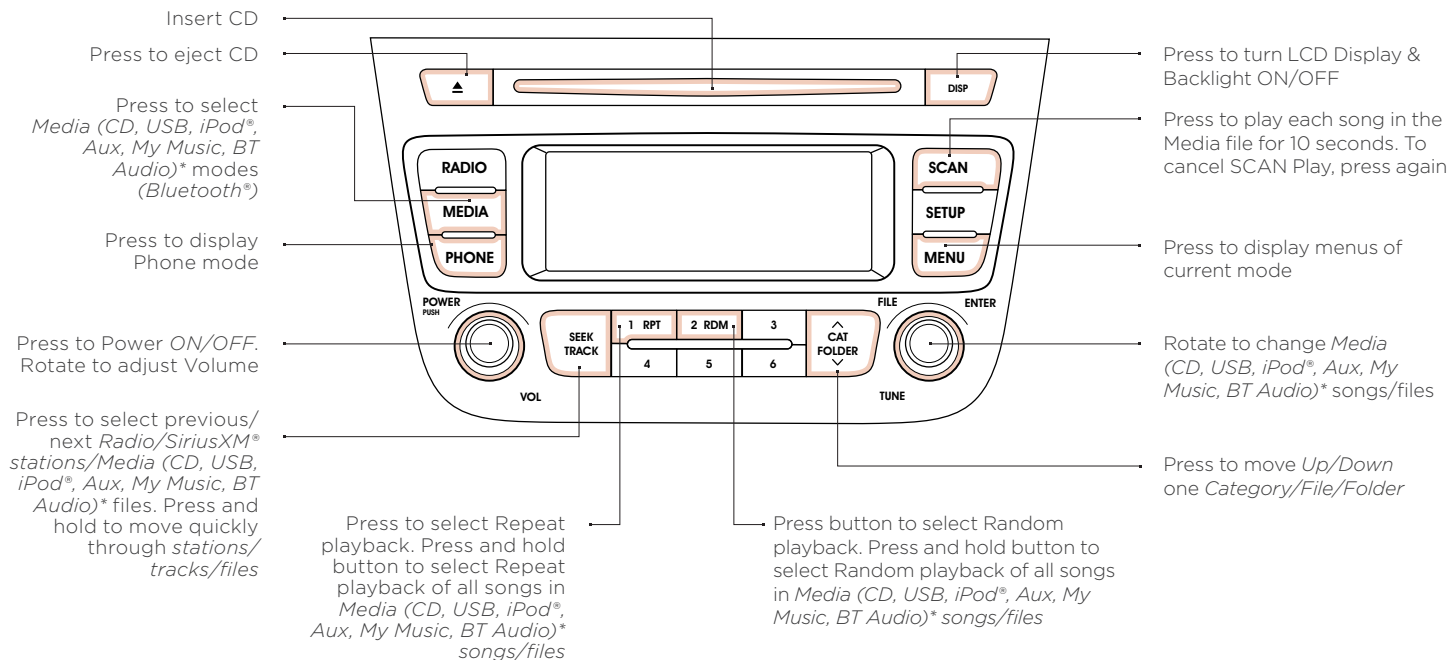

REMINDER: Your vehicle's audio system may differ from that in the illustration. See your Owner's Manual for more details.

For further audio system operations, refer to pages 17-20.

 UVO eServices System*

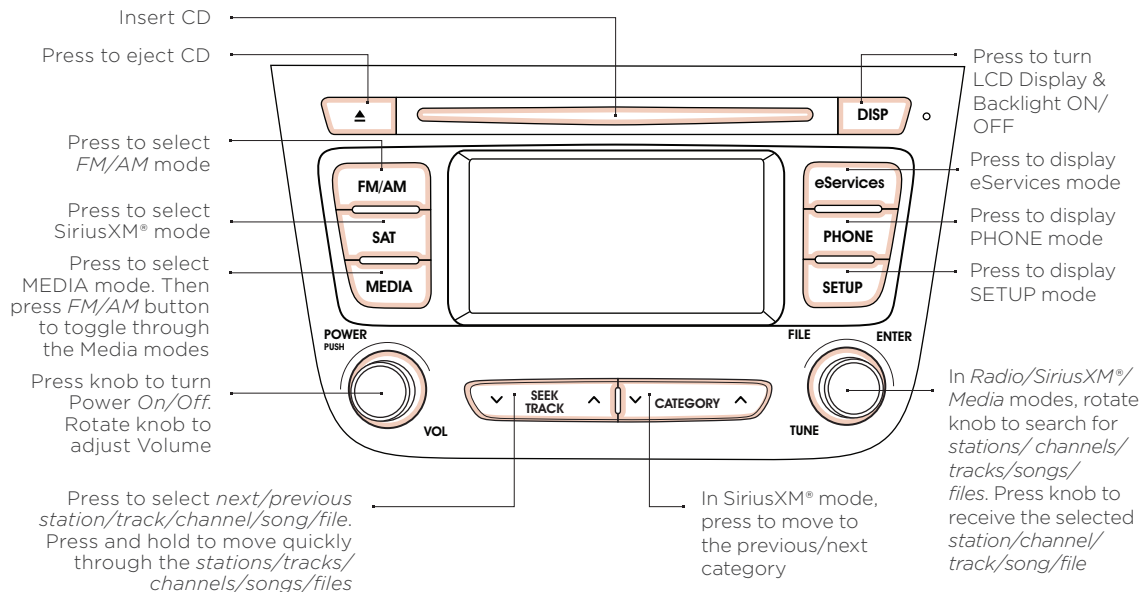

QR Code

UVO eServices Sytem Videos

To view a video on your mobile device, snap this QR Code or visit the listed website. Refer to page 2 for more information.



http://kutechvideos.com/audio/UVO_eServices

REMINDER: Your vehicle's audio system may differ from that in the illustration. See your Owner's Manual for more details.

 
QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- Only MP3 or WMA files may be played or copied to Jukebox. Commercial CDs or CDs with a CDDA (compact disc digital audio) cannot be copied to Jukebox
- At any time you can interrupt UVO System Command Feedback by pressing the TALK button
- Prolonged use of the UVO system in ACC mode may drain the vehicle's battery
- If equipped, HD Radio™ is available when selecting FM/AM Mode

For further UVO System information, refer to the UVO System User's Manual.

For further audio system operations, refer to pages 17-20.

Navigation System with FM/AM/SiriusXM®*/Media (CD, MP3, USB, iPod®, Aux, BT Audio, My Music) Modes

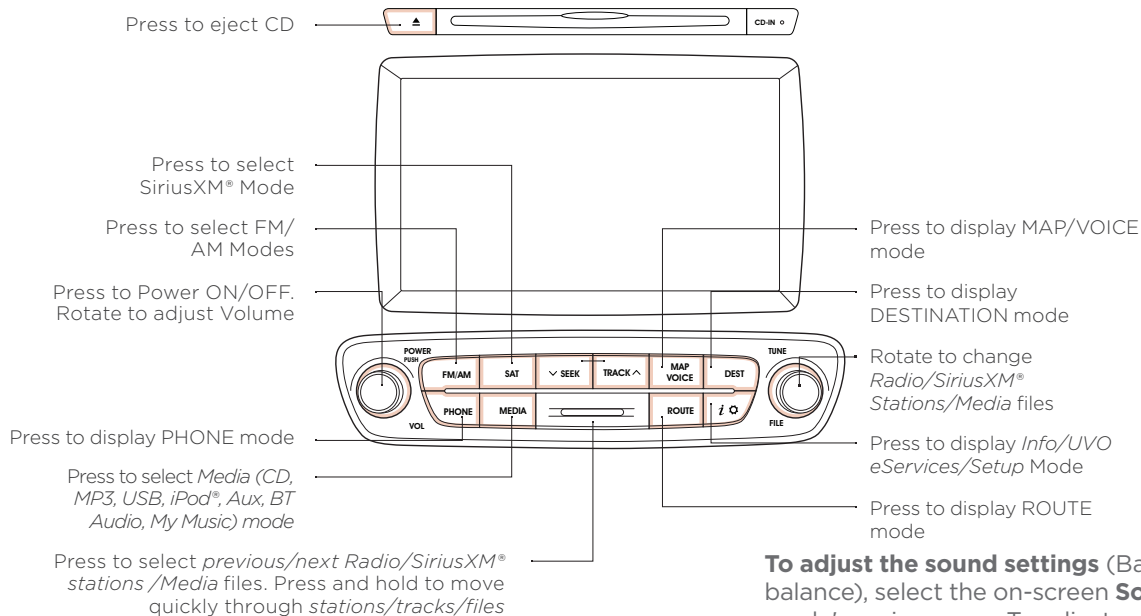

ⓘ QUICK TIPS

Prolonged use of the Navigation System in ACC mode may drain the vehicle's battery. A warning screen may appear periodically to remind users that the Navigation System should be operated with the engine running to prevent battery discharge.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

For further navigation system operation, refer to the *Digital Navigation System User's Manual*.

For further audio system operations, refer to pages 17-19.

QR Code

Navigation Audio System Videos

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



http://kutechvideos.com/audio/nav_eServices

To adjust the sound settings (Bass, middle, treble, fader, balance), select the on-screen **Sound** button on the audio mode's main screen. To adjust, press the on-screen arrows.

ⓘ QUICK TIPS

When using the voice command feature, wait for the system BEEP before speaking the command.

REMINDER: Your vehicle's audio system may differ from that in the illustration. See your Owner's Manual for more details.

CENTER PANEL

Digital Clock



Center Panel Clock Setup*:

Press the **H** button **A** to advance the time by one hour.
Press the **M** button **B** to advance the time by one minute.

ⓘ QUICK TIPS

Press and hold both for more than 5 seconds to switch from 12 to 24 hour formats

Navigation System Clock Setup*:

 
Press the Info/Settings key on the Audio Control Unit. Then press the on-screen Setup button and select the Clock icon. Then use the on-screen buttons to navigate through setup.

ⓘ QUICK TIPS


Press the DONE button* on the Navigation screen to ensure changes are saved.

REMINDER: The Center Panel Digital Clock and Navigation System Clock are not synchronized and may differ slightly.

Aux/USB/iPod® Port & Power Outlets

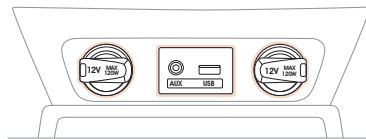

(Driver/Front Passenger)

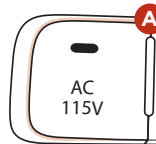 

(Button located below Gear Shift)



(2nd Row AC Power Outlet)

Press button **A** to turn the 2nd Row Power Outlet ON (LED lit).

ⓘ QUICK TIPS

- The power outlets are inactive when the ignition is in the OFF position
- The 115 volt AC outlet operates only when vehicle engine is ON

QR Code

Kia USB Port Video

 
To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/xm13/2015

Automatic Climate Control*

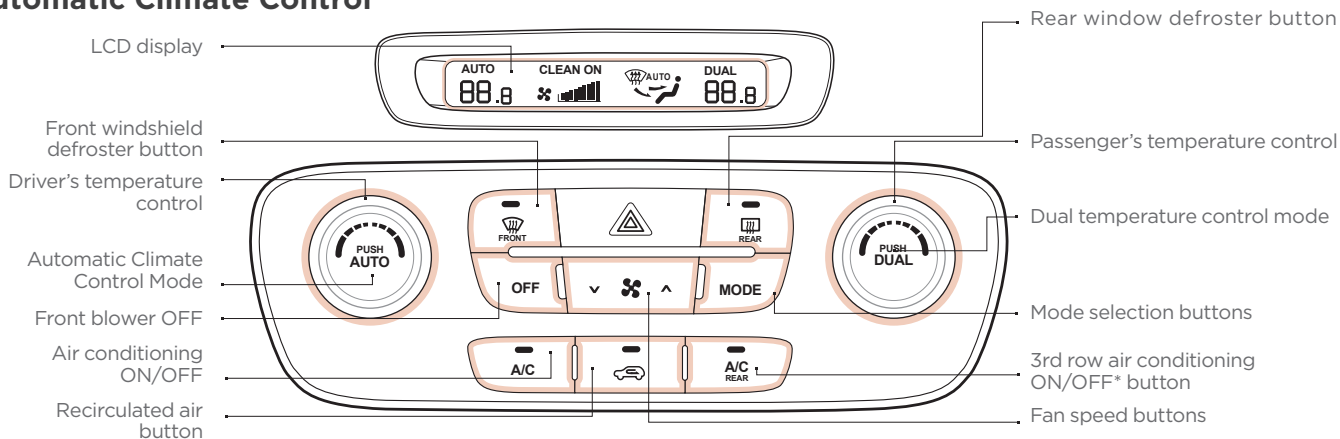

Climate Control Auto Function:

1. Press **AUTO** to select Full Auto Operation
2. Press **MODE** buttons to control which vents air flows through
3. Press **DUAL** to select Dual Temperature Control Operation

Defrost Outside Windshield:

1. Set **Fan Speed** to the highest position
2. Set **Temperature** to **Hot**
3. Press the **Front Defrost** button

Defog Inside Windshield:

1. Set desired **Fan Speed**
2. Set desired **Temperature**
3. Press the **Front Defrost** button

ⓘ QUICK TIPS

- The A/C Rear button indicator will not illuminate unless the 3rd Row Air Conditioning Fan Speed switch is turned ON (see page 23, 3rd Row Air Conditioning Control).
- Keep inside glass as clean as possible to help reduce window fogging
- Defrost Mode activates A/C and opens Fresh Air Vent
- During Auto Operation the A/C indicator will NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically engage at any time to reach desired temperature and reduce humidity

Air Flow Modes

 
To select Air Flow Modes, rotate the Mode selection knob:



REMINDER:

- Your Automatic Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details.
- When in AUTO mode, Air Flow Mode and Fan Speed do not display on the Climate Control Display.
- Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit).

Manual Climate Control*

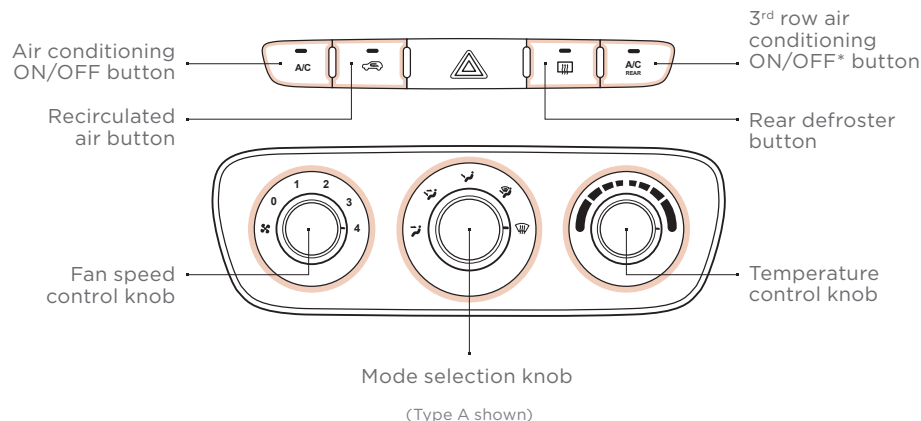

Defrost Outside Windshield:

1. Set **Fan Speed** to the highest position
2. Set **Temperature** to **Hot**
3. Select **Defrost** mode

REMINDER: Your Manual Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details.

REMINDER: Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit).

Defog Inside Windshield:

 
1. Set **Fan Speed** to desired position
2. Set desired **Temperature**
3. Select **Defrost** mode

Ⓢ QUICK TIPS


- The 3rd Row A/C ON/OFF button indicator will not illuminate unless the 3rd Row Air Fan Speed switch **A** is turned ON
- Defrost Mode activates A/C and opens Fresh Air Vent
- MAX A/C Mode automatically engages Recirculated Air

Air Flow Modes

To select Air Flow Modes, rotate the Mode selection knob:

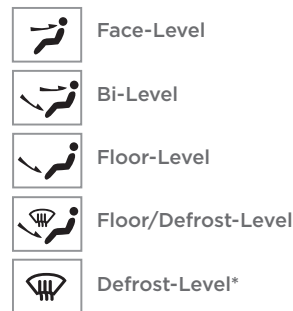

3rd Row Air Conditioning Control*

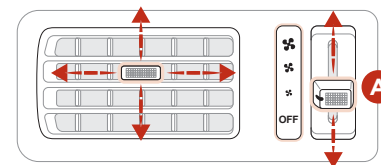 

To turn ON the 3rd Row Air Conditioning Control:

1. Press the 3rd Row A/C button
2. Set the fan speed **A** to the desired position.

REMINDER: Included in Manual & Automatic Climate Control Systems.

REMINDER: Your Manual Climate Control system may differ from those in the illustration. See your Owner's Manual for more details.

Automatic Gear Shift with Sportmatic® Shifting

P: Park

R: Reverse

N: Neutral

 
D: Drive

[+]: Sport Mode Upshift

[-]: Sport Mode Downshift

Sport Mode: To enter Sport Mode, move shift lever from **D** to left gate

Sport Mode Shifting: Move shift lever up **[+]** to Upshift or down **[-]** to Downshift

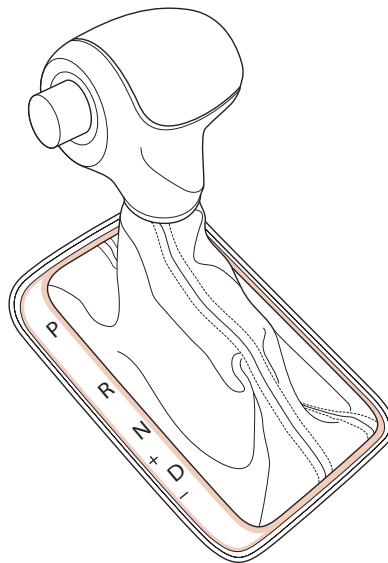

QR Code

Kia Sportmatic® Shifting Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/xm13/2015

QUICK TIPS

- Press brake pedal and depress release button to move gear shift from N to P, N to R or from P to any gear
- Sport mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

Seat Warmers/Ventilated Seats*

Seat Warmers only*



 
(Located on Center Panel)

Press button once for high setting (3 LEDs lit). Press button twice for medium setting (2 LEDs lit). Press button a third time for low setting (1 LED lit) and again to turn OFF.


QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- System turns OFF when ignition is cycled. To turn system ON, press the seat warmer switch

Driver Position Memory System*

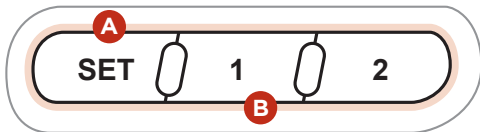

Seat Warmers/Ventilated Seats*

 

(Located on Center Panel)

Ventilating (Blue LED)

Warming (Yellow LED)

Seat Warmers – Press right side of button once for high setting (3 LEDs lit). Press button twice for medium setting (2 LEDs lit). Press a third time for low setting (1 LED lit) and again to turn OFF.

Ventilated Seats – Press left side of button once for high setting (3 LEDs lit). Press twice for medium setting (2 LEDs lit). Press a third time for low setting (1 LED lit) and again to turn OFF.

QR Code

Seat Warmers and Ventilated Seats Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



 
www.KuTechVideos.com/xm13/2015

To store a seating position into memory, first place the gear shifter into P (Park) while the ignition switch is on. Then:


1. Adjust the driver's seat and outside rearview mirror.
2. Press the SET button **A** on the control panel. System will beep once
3. Press one of the memory buttons **B** within 5 seconds. The system will beep twice when memory has been stored

Power Adjustable Driver's Seat*


Move/Press controls to adjust Seat forward/backward, Seat Cushion, Seatback or Lumbar

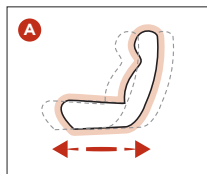


Seat forward/
backward

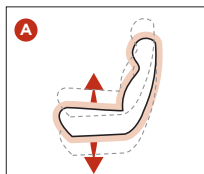 




Seat Cushion

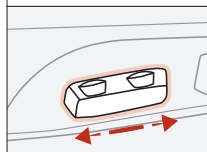 

Seatback

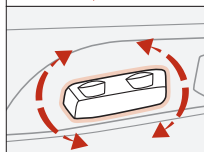 

Lumbar

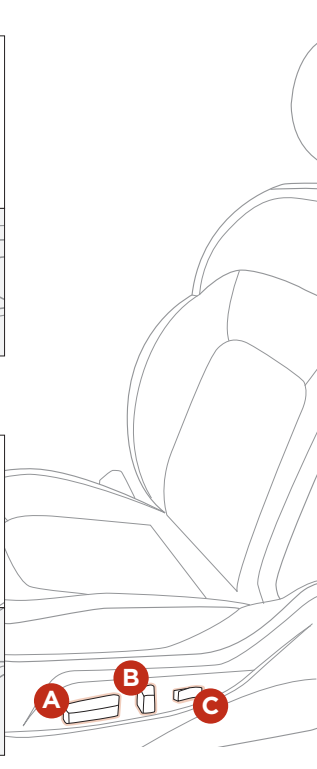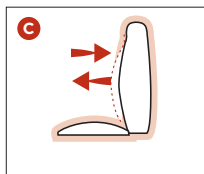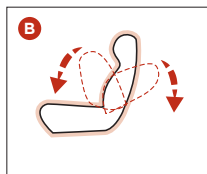   


6-Way Manual Adjustable Driver's Seat*

Pull lever **A** to slide Seat forward/backward

Pull/press lever **B** to adjust Seat Height

Pull lever **C** to adjust Seatback Recline

 
Press button **D** to adjust Lumbar Support*

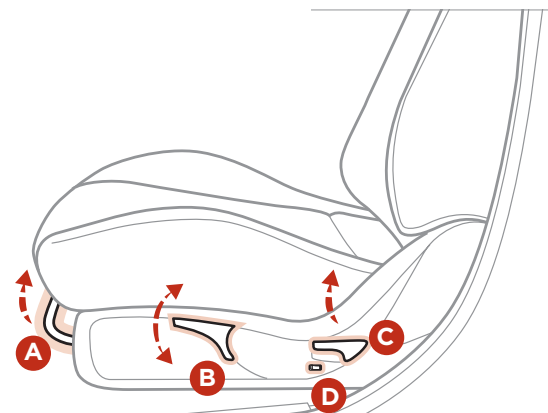

Folding 2nd & 3rd Row Seats*

2nd Row Seat — Folding Flat:

 1. Insert the Rear Seat Belt strap into the guide* next to the Rear Seatback
2. Set the Front Seatback to the most upright position and lower the rear seat headrests to the lowest position
3. Pull the Seatback Folding Lever **A**
4. Fold the Rear Seatback flat **B**

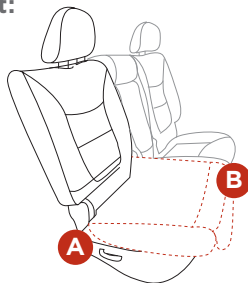


ⓘ QUICK TIPS

It may be necessary to slide the Front Seat forward and to slide the Rear Seatback backward to fully lower seats

2nd Row Seat — Walk-In Fold*:

 1. Insert the Rear Seat Belt strap into the guide* next to the Rear Seatback
2. Lift the Walk-In Lever **C** on the Rear Seatback and slide the seat forward to the farthest position

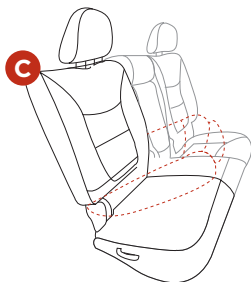

ⓘ QUICK TIPS

The right side of the 2nd Row Seat has more clearance to access the 3rd Row Seat*

2nd Row Seat - Unfolding:

 
1. Pull Seatback to an upright position. Then lift Seatback Folding Lever **A** again to adjust Seatback for use

ⓘ QUICK TIPS

When returning Seat to its original position, ensure that it's locked into position, unfold the Headrest, and return Seatbelt to its proper position.

3rd Row Seat* Folding:

1. Insert the Rear Seat Belt buckle into the pocket* between the Rear Seatback and Seat Cushion then insert the Seat Belt into the guide
2. Set the 2nd Row Seatback to the upright position
3. Pull the Seatback folding strap **D** and fold Seat forward

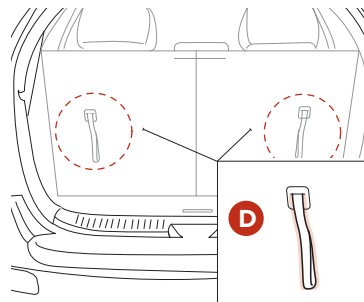


ⓘ QUICK TIPS

It may be necessary to slide the 2nd Row Seat forward to fully lower 3rd Row Seats

Front Active Headrests*

Moves forward in the event of certain impact collisions to help protect the driver's and front passenger's heads from moving backward, thus helping to minimize neck injuries.

 To reset the headrest back: Pull forward at an upward angle to the farthest position and release.

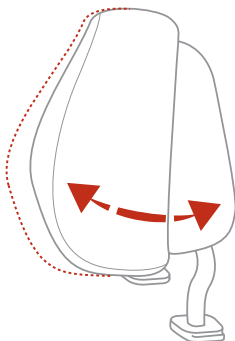

ⓘ QUICK TIPS

For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest up from underneath

 
Front Seat Headrest Adjustment

To adjust headrest forward: Pull bottom of headrest forward at an angle

To adjust headrest back: Push bottom of headrest backward at an angle


To raise headrest: Pull headrest up

To lower headrest: Press lock **A**, then press the headrest down

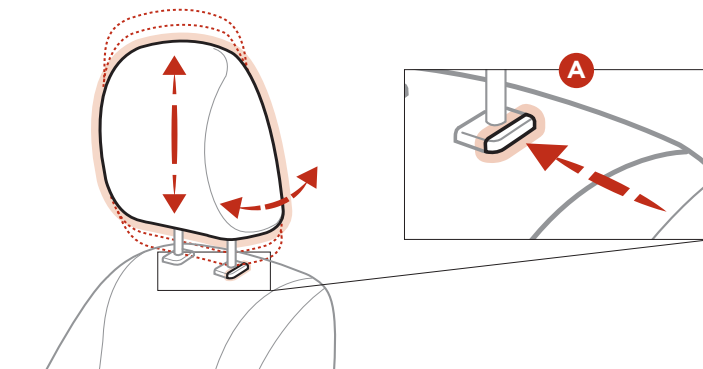

Remote Keyless Entry (Folding Key)*

 
- A** Press the release button to unfold the key
- B** Press to lock All Doors
- C** Press to unlock Driver's Door: Press twice in 4 seconds to unlock All Doors and Rear Hatch, and manually open
- D** Press and hold for more than 1 second to unlock Rear Hatch and manually open
- E** Press and hold more than a half second for Panic Alarm. To turn OFF Alarm, press any button

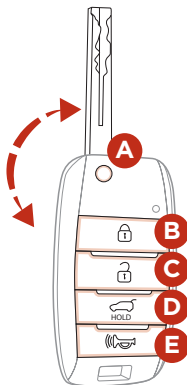

REMINDER: Remote button configuration may vary depending on vehicle options.

Double-Turn Lock/Unlock All

 - Turn clockwise once to unlock Driver's Door
- Turn clockwise again within 4 seconds to unlock All Doors
- Turn counterclockwise once to lock All Doors

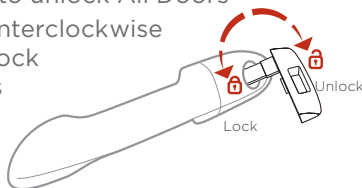


Smart Key*

- A** Press to lock All Doors
- B** Press to unlock Driver's Door. Press twice within 4 seconds to unlock All Doors
- C Manual Rear Hatch:** Press and hold to unlock Rear Hatch and manually open

REMINDER: The Rear Hatch does not automatically open when the **C** button is pressed.

REMINDER: The Rear Hatch unlocks when the Smart Key fob is within close proximity of the vehicle.

 - C Power Tailgate*:** Press and hold for Power Tailgate to open automatically. Press again at any time to stop. Press again to automatically close
- D** Press and hold more than a half second for Panic Alarm. To turn off Alarm, press any button
- E** Press to release Mechanical Key



Mechanical Key **F**:

- Use to unlock driver's door
- Use to enable/disable Child Safety Locks (page 35)
- Use to lock glove box

Driver's Door Lock/Unlock button **G**:

- Press button once to unlock driver's door
- Press again within 4 seconds to unlock all doors
- Press again to lock all doors



QR Code

Kia Engine Stop/Start Button and Smart Key Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



 
www.KuTechVideos.com/xm13/2015

QUICK TIPS

The Smart Key's signal can be blocked by the normal operation of a cellular phone or smartphone. To help prevent this, store each device separately.

REMINDER: Remote button configuration may vary depending on vehicle options.

HomeLink® with Auto-Dimming Rearview Mirror*

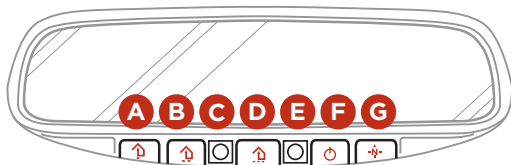

- A** HomeLink® button
- B** HomeLink® button
- C** Indicator light
- D** HomeLink® button
- E** Glare detection sensor
- F** Automatic dimming ON/OFF
- G** Compass control button

The Auto-Dimming Rearview Mirror is designed to help reduce glare from a vehicle's headlights located in the rear and also connect up to three electronic transmitters in one location.

To turn automatic dimming ON or OFF, press button **F**

REMINDER: Mirror indicator light **C** will illuminate when automatic dimming is ON.

QUICK TIPS

- You can reprogram a single HomeLink® button by repeating Step 2
- Erasing programmed buttons will delete all trained transmitters

If your garage door opener was manufactured in 2011 or later, and you're unable to program your vehicle's HomeLink® system, you may need to purchase a HomeLink® Repeater Kit. For more information, go to www.HomeLink.com or call (800) 355-3515.

How to Sync Transmitter with HomeLink**

If programming for the first time, begin with Step 1 (repeating this step will delete all information).

To program non-rolling and rolling code garage door openers and other devices:

1. Press and hold the left **A** and center **D** buttons simultaneously until the indicator light **C** begins to flash (to reprogram buttons, skip this step)
2. Press and hold the desired button **A** **B** **D** and hold the button on the transmitter while it is approximately 1 to 3 inches away from the mirror. The HomeLink® Indicator light **C** will flash rapidly once the frequency signal has been successfully programmed

To finish programming rolling code garage door openers, complete these steps:

3. Locate the “learn” or “smart” button on the garage door's motor head unit. Press and release the button and complete Step 4 within 30 seconds
4. Firmly press and release the programmed HomeLink® button up to three times

Operating HomeLink®:

Press one of the programmed HomeLink® buttons.

Erasing programmed buttons:

Press and hold the left **A** and center **D** buttons simultaneously for approximately 20 seconds, and then release both buttons within 30 seconds.

 
Power Tailgate*

Inside the Vehicle:

Press the Power Tailgate Open/Close button **A** to automatically open/close the tailgate

Press the Power Tailgate OFF button **B** to disable

REMINDER: If Power Tailgate button is pressed OFF, the Power Tailgate button on the Smart Key will be disabled

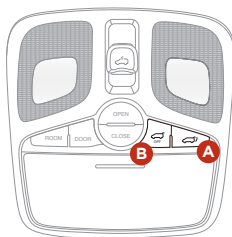


Outside the Vehicle:

To open Power Tailgate automatically, press the Rear Hatch Release button **C**.

Close by pushing Power Tailgate Close button **D**.



 (Located inside Rear Hatch)

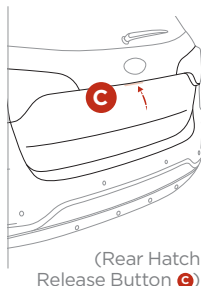

(Rear Hatch Release Button **C**)

Smart Key:

To open the Power Tailgate, press and hold the tailgate **E** until the tailgate begins opening. Press again to close.

REMINDER: Pulling the Rear Hatch upward by the handle or pressing the button a second time will interrupt the automatic opening of the Power Tailgate.



Fuel Cap/Malfunction Indicator (Check Engine Light)

Tighten for *ONE CLICK* to prevent Malfunction Indicator  from illuminating.



REMINDER: The Fuel Filler Door Release button is located on the lower part of the driver's door panel.

Manual Rear Hatch Release Button

Located underneath the Rear Hatch. With Rear Hatch unlocked, press the Rear Hatch Release button **C** and pull the Rear Hatch up by the handle to open.

QR Code

Kia One Click Fuel Cap Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/xm13/2015

QUICK TIPS

- The Rear Hatch must be unlocked before it can be opened by the Rear Hatch Release Button
- The Rear Hatch unlocks automatically and then can be opened manually when the Smart Key fob* is within close proximity to the vehicle

OTHER KEY FEATURES

Map/Room/Dome Lamps

Automatic turn off function*

The interior lights automatically turn off approximately 30 seconds after the ignition switch or the Engine System Start/Stop button* is OFF.

Map/Room/Personal Lamp

Press the lens **A** to turn the Map Lamp ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.

The Map Lamp turns ON when any door is opened or the ignition is turned OFF. When all doors are locked or the ignition is ON, the Map Lamp will turn OFF immediately.

 
ROOM button B - When pressed, the Map and Room Lamps remain ON until pressed again to turn OFF.

DOOR button C - When pressed and a door is opened, or doors are unlocked from the key fob, the Map and Room Lamps turn ON for approximately 30 seconds.

Dome/Room Lamp


DOOR button D (Type A only)- When the DOOR button is pressed, the lamp turns ON when any door is opened.

ON button E - When the ON button is pressed, the lamp stays on continuously. Press again to turn OFF.

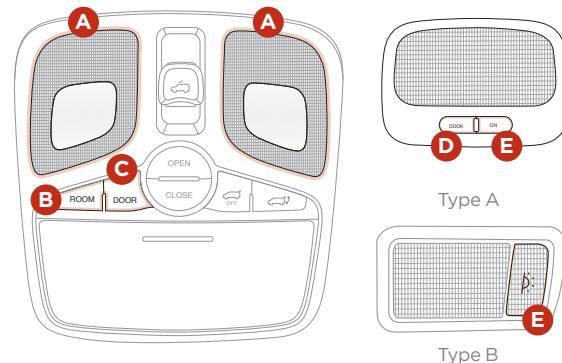

Sunvisor

 Use the Sunvisor to shield direct light through the front or side windows. To use the Sunvisor extension, pull the extension out and adjust as needed.

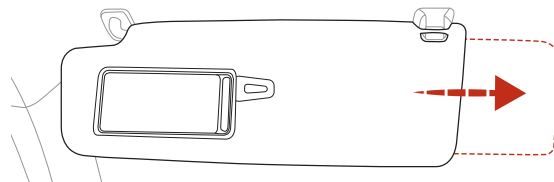

REMINDER: Sunvisor may not shield all direct light.

REMINDER: The Sunvisor may impair visibility if not adjusted properly.

ⓘ QUICK TIPS

- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

Sunroof Operation*

The sunroof and sunshade operation is controlled through a multidirectional switch/lever and the ignition needs to be in the ON position to operate the sunroof/sunshade.

Slide the Sunshade and Sunroof:

- **Auto Open:** Slide lever **A** backward and release.
- **Auto Close:** Slide the lever **A** forward and release.

Slide the Sunshade:

 
- **Open:** Press the OPEN button **B**.
- **Close:** Press the CLOSE button **B**.

Slide the Sunroof (with sunshade open):

- **Open:** Slide the lever **A** backward and release.
- **Close:** Slide the lever **A** forward or pull the lever downward.

Tilt the Sunroof:

- **Raise:** Push lever **A** upward.
- **Lower:** Pull lever **A** downward.
- **Auto Close:** Slide the lever **A** forward.

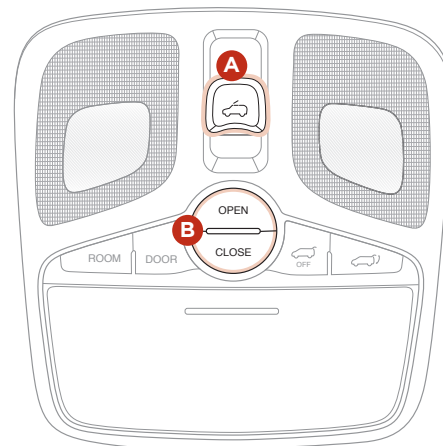

Roof Rack*

Crossbars can be attached to the Roof Rack to carry cargo. See your local Kia dealership to order crossbars. For more information on Roof Rack, please see the Owner's Manual.

Ⓢ QUICK TIPS

- To stop the Sunroof/Sunshade at any position, push or pull the sunroof control lever in any direction

REMINDER: Sunshade needs to remain OPEN while Sunroof is open and vehicle is moving.

Ⓢ QUICK TIPS

Be sure to position cargo to distribute weight evenly and in such a way to not interfere with the Sunroof operation.

REMINDER: When carrying cargo on the roof, avoid operating the Sunroof and ensure that cargo is secured safely.

REMINDER: The maximum evenly distributed weight of the cargo loaded on the Sorento Roof Rack cannot exceed 220lbs.

Rear-Camera Display*

The Rear-Camera Display system is not a safety device. It is a supplemental system that displays the view behind the vehicle through the Navigation* or UVO* screen while the vehicle is in Reverse.

The Rear-Camera Display activates when the:

1. ENGINE START/STOP button* is in the ON position (Reddish Orange Light)
2. Gear Shift Lever is in the R (Reverse) position



REMINDER: UVO System - While camera is active, only the volume controls on the Audio System can be operated.

 
REMINDER: Navigation System - While camera is active, only the Audio System can be operated on the Steering Wheel and Audio Control Unit. Navigation features are disabled.

REMINDER: The Rear-Camera Display and Back-Up Warning System are not substitutes for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The Rear-Camera Display and Back-Up Warning System may not detect every object behind the vehicle.

Back-up Warning System (Rear-Parking Assist System)*

The Back-up Warning System is not a safety device. The Back-up Warning System is a supplemental system that assists the driver by chiming if any object is detected within the sensing area to the rear and side of the vehicle when backing up.

To turn the Backup Warning System OFF, press the button **A** (LED will be lit).

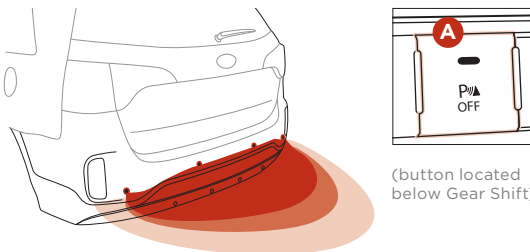

(button located below Gear Shift)

REMINDER: If the vehicle is moving at speeds over 3 mph (5 kmh), the system may not activate correctly.

REMINDER: When more than two objects are sensed at the same time, the closest one will be recognized first.

QR Code

Sorento Rear Parking Assist System Video

To view a video on your mobile device, snap this QR Code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/xm13/2015

 
QUICK TIPS

Press the Back-up Warning System OFF button to deactivate the system


Hood Release Lever and Latch

Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood

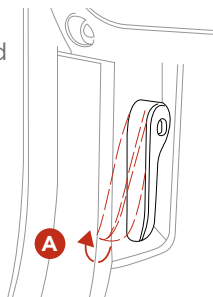

 2. In the front of the vehicle, lift the Hood slightly and pull the secondary Latch **B** inside of the Hood's center and lift the Hood

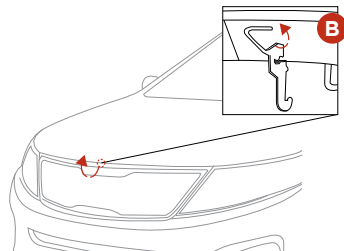



Closing the Hood:

Lower the Hood about halfway and then press down to securely lock in place.

Child Safety Locks

Located on the rear edge of the rear passenger doors, push the Child Safety Lock to the lock position **A** to disable the inner door handles from opening the rear doors.

  
REMINDER: Child Safety Lock is located on rear passenger's door jamb.

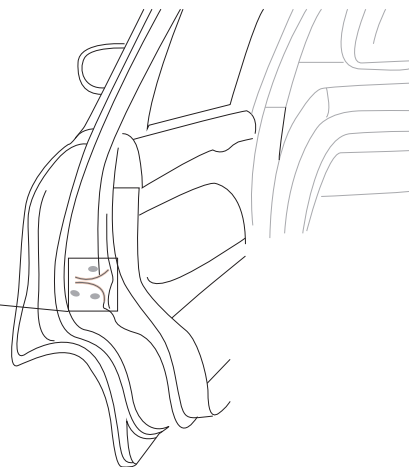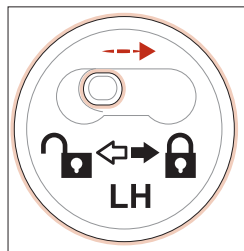

Safety Belts

To properly fasten your safety belts:

 1. Insert the tongue belt plate **A** into the buckle **B** until it clicks
2. Position the lap portion of the belt across your lap as **LOW ON THE HIPS** as possible **C**. Adjust the belt to a **SNUG FIT** by pulling up on the shoulder portion **D**

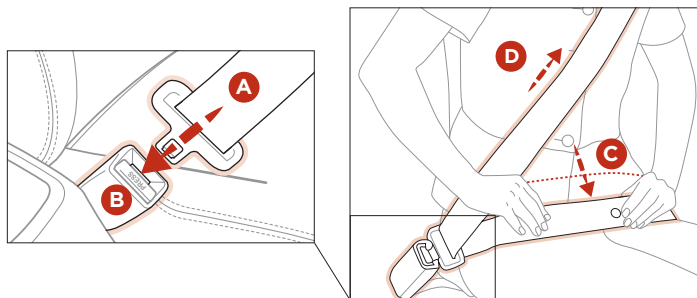

Safety Belt Retractor Inertial Locks

- Inertial locks allow lap/shoulder safety belts to remain unlocked during normal vehicle operation, for freedom of movement and increased comfort
- During a **STRONG STOP, SUDDEN TURN OR CERTAIN COLLISION**, Safety Belt Retractors will automatically lock the belts

REMINDER: For maximum protection, always wear your seat belt.

ⓘ QUICK TIPS

The Safety Belt warning chime operates for driver's seat only.

Occupant Detection System (ODS) / PASSENGER AIRBAG OFF Indicator

ODS detects the presence of the front passenger and adjusts or turns off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the "PASSENGER AIRBAG OFF" light will illuminate.



Please refer to your Owner's Manual and the separate brochure titled "Understanding Your Safety Belt & Supplemental Restraint System" for more detailed information regarding your vehicle's airbags.



NORMAL MAINTENANCE SCHEDULE

When your vehicle requires service, remember that your dealer knows your vehicle best. Your dealer has factory-trained technicians, recommended special tools, genuine Kia replacement parts, and is dedicated to your complete satisfaction. For expert advice and quality service, see your authorized Kia dealer.

INTERVAL MAINTENANCE CHART										
7,500 miles (or 6 months)	A	B								
15,000 miles (or 12 months)	A	B	C							
22,500 miles (or 18 months)	A									
30,000 miles (or 24 months)	A		C	D	E					
37,500 miles (or 30 months)	A					F				
45,000 miles (or 36 months)	A	B	C							
52,500 miles (or 42 months)	A	B								
60,000 miles (or 48 months)	A	B	C	D	E		G	H	I	
67,500 miles (or 54 months)	A	B								
75,000 miles (or 60 months)	A	B	C			F	G			
82,500 miles (or 66 months)	A	B								
90,000 miles (or 72 months)	A		C	D	E		G		I	
97,500 miles (or 78 months)	A	B								
105,000 miles (or 84 months)	A	B	C				G			J
112,500 miles (or 90 months)	A	B				F				
120,000 miles (or 96 months)	A		C	D	E		G	H	I	

A Inspect* — Battery condition, vacuum hose

Change — Engine oil and oil filter

Perform — Rotate tires; add fuel additive¹

B Inspect* — Air cleaner filter

C Inspect* — Air conditioner refrigerant and performance**, brake lines, hoses and connections; drive shaft and boots, exhaust pipe and muffler, front/rear disc brakes and pads**, propeller shaft (AWD)**, front suspension ball joints, steering operation and linkage and suspension mounting bolts,

Replace — climate control air filter**

D Inspect* — Brake fluid and parking brake**

E Inspect* — Fuel filter² and fuel tank air filter²; vapor hose and fuel filler cap, fuel tank, cap, lines and hoses

Replace — Air cleaner filter, climate control air filter

F Inspect* — Rear axle oil and transfer case oil (AWD)**

G Replace — Drive belt³

H Inspect — Valve clearance⁴

I Replace — Engine coolant⁵

J Replace — Spark plugs (iridium coated)

* and, if necessary, adjust, clean, replace or correct.

** If equipped.

¹ If TOP TIER Detergent Gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

² Fuel filter & fuel tank air filter are considered to be maintenance free, but periodic inspection is recommended for this maintenance schedule depends on fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem, etc, replace the fuel filter immediately regardless of maintenance schedule and consult an authorized Kia dealer for details.

³ The drive belt should be replaced when cracks occur or tension is reduced excessively.

Inspect "Water Pump" when replacing the drive belt or timing belt.

⁴ Inspect for excessive tappet noise and/or engine vibration and adjust if necessary.

⁵ When replacing coolant, use only a qualified coolant additive for your vehicle and never mix hard water in the coolant filled at the factory. An improper coolant mixture can result in serious malfunction or engine damage.

Check tire pressure at least once a month or more.

See your owner's manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.
Call 1-800-333-4KIA (4542) for roadside assistance.

LEGAL DISCLAIMERS

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

UVO eServices app: Apple iPhone® and select Android devices only are UVO eServices compatible. iPhone® is a registered trademark of Apple Inc. Android™ is a registered trademark of Google Inc. No subscription fee for UVO eServices. No charge for the UVO eServices app. App uses your smartphone cellular data service. Normal cellular service rates will apply.

Blind Spot Detection: The Blind Spot Detection System is not a substitute for proper and safe driving practices. Always drive safely and use caution when changing lanes or backing up. The system may not detect every object alongside the vehicle.

TPMS: Even with the Tire-Pressure Monitoring System (TPMS), always check your tire pressure on a regular basis.

Back-Up Warning System (Rear Parking Assist System) / Rear-Camera Display: The Back-Up Warning System (Rear Parking Assist System) / Rear-Camera Display are not substitutes for proper and safe backing-up procedures. The Back-Up Warning System (Rear Parking Assist System) / Rear-Camera Display may not detect every object alongside or behind the vehicle. Always drive safely and use caution when backing up.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

Seatbelts: For maximum protection, always wear your seatbelt.

Navigation: GPS maps and directions are for information purposes only, and Kia does not make any warranties about the accuracy of that information. Kia is not responsible for loss or delay resulting from the use of the navigation system. Caution: Do not enter information into the navigation system while the vehicle is moving. Failure to pay attention to travel conditions and vehicle operation while the vehicle is in motion could result in loss of vehicle control. Operate the system only when it is safe to do so.

Bluetooth® Wireless Technology: The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Kia is under license.

Other trademarks and trade names are those of their respective owners. A Bluetooth® enabled cell phone is required to use Bluetooth® wireless technology.

SiriusXM®: SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com. Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. © 2013 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.

Sportmatic is a registered trademark of Kia Motors America.

iPod® is a registered trademark of Apple Inc. iPod® mobile digital device sold separately.

HD Radio™ and the HD Radio logo are proprietary trademarks of iBiquity Digital Corporation.

HomeLink® is a registered trademark of Johnson Controls, Inc.



SORENTO CUSTOMER DELIVERY CHECKLIST

Owner's Name: _____ VIN: _____ Mileage: _____

 
Dealership Name: _____ Sales Consultant: _____ Date: _____

BEFORE DELIVERY


- ☐ Confirm "Good Battery" with Kia GR8-1299 battery tester
- ☐ Verify all tire pressures are to spec (see driver's door label) LF _____ LR _____ RF _____ RR _____
- ☐ Verify proper operation of Remote Keyless Entry and Smart Key* lock/unlock
- ☐ Ensure floormats are snapped into place (if applicable)
- ☐ Verify vehicle is clean (interior and exterior), in good condition, free of chips and scratches
- ☐ Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet, Features & Functions Guide and any supplemental audio user's guides)

KEY FEATURE WALKTHROUGH


- ☐ Air Conditioning / Climate Control - pages 22-23 - Demonstrate Air Flow Modes, Defog and Defrosting Windshield Fan Speed

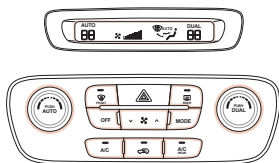

Automatic*

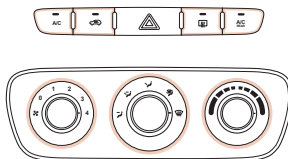 


Manual*

 


3rd Row Air Conditioning Control*

- ☐ Front Active Headrests - page 28

 Moves forward in the event of certain impact collisions to help protect the driver's and front passenger's heads from moving backward, thus helping to minimize neck injuries.



 
- ☐ Front Seat Headrest Adjustment - page 28

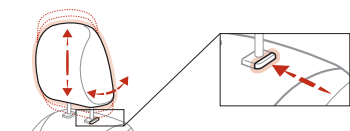

- ☐ Windshield/Rear Wipers & Washers* - page 11

Rotate Rear Wiper switch to change Wiper modes.

 Push to spray and wipe rear window.

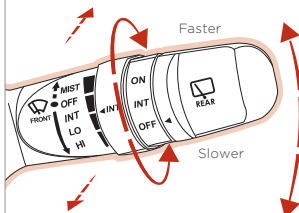

Pull to spray and wipe front windshield.

Move lever Up/Down to Change Front Windshield Wiper modes

ON: Normal Wipe

MIST: Single wipe

OFF: Wiper off

INT: Intermittent wipe

LO: Slow wipe

HI: Fast wipe

 


SORENTO CUSTOMER DELIVERY CHECKLIST

KEY FEATURE WALKTHROUGH

Demonstrate the following with the customer


- ☐ Standard Audio System
Overview/Operation* – pages 17-18

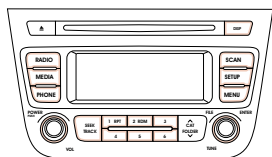


- ☐ Navigation System* – page 20
For further navigation system operation, refer to the Digital Navigation System Owner's Manual.



 
- ☐ UVO eServices System* – page 19
For further UVO System information, refer to the Kia UVO System User's Manual.

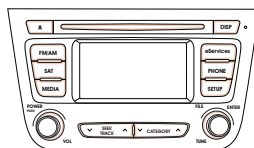


- ☐ Aux/USB/iPod® Port – page 21

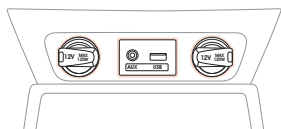 

 - ☐ Cruise Control – page 13
Demonstrate operation

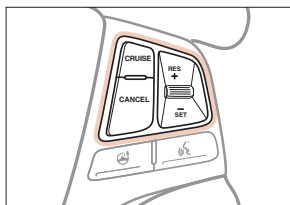

 - ☐ Bluetooth® Wireless Technology – pages 14-15
Demonstrate operation

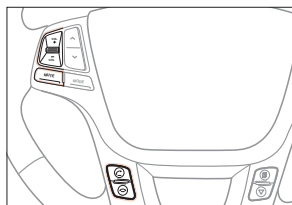

- ☐ Tire Pressure Monitoring System (TPMS) – page 6
☐ ENGINE START/STOP button* – page 9
☐ Digital Clock – page 21
☐ Seat Warmers/Ventilated Seats* – page 25
☐ Folding 2nd & 3rd Row Seats* – page 27
☐ Front Active Headrests – page 28
☐ Smart Key* – page 29
☐ HomeLink® with Auto-Dimming Rearview Mirror* – page 30

- ☐ Sunvisor – page 32
☐ Sunroof Operation* – page 33
☐ Roof Rack* – page 33
☐ Rear-Camera Display* – page 34
☐ Back-Up Warning System* – page 34
☐ PASSENGER AIR BAG OFF Indicator - page 36

*if equipped

DURING DELIVERY

- ☐ Explain first service process and schedule first service appointment
☐ Tour Parts & Service departments, introduce staff and explain value of Kia Parts and Service
☐ Review recommended maintenance schedule and maintenance requirements to validate warranty
☐ Review business hours and Customer 360° Care
☐ Review the Kia 10-year/100,000-mile warranty program
☐ Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
☐ Confirm time and best contact number for initial dealer follow-up

Sales Consultant: _____ Date: _____

Sales Manager: _____ Date: _____

Customer: _____ Date: _____