

2016

Cadillac

ESCALADE

CONVENIENCE/PERSONALIZATION GUIDE

Review this guide for an overview of some important features in your Cadillac Escalade. Some optional equipment described in this guide (denoted by ♦) may not be included in your vehicle. More detailed information can be found in your Owner Manual.

INSTRUMENT PANEL

Instrument Panel
Illumination Control/
Exterior Lamp
Control

4WD
Control

Head-Up
Display
Controls♦

Windshield
Wipers Lever

Instrument
Cluster/Driver
Information
Center

Power Assist
Steps♦/Adjustable
Pedals/Magnetic
Ride Control Buttons

Cadillac
CUE
Touch
Screen

Glove Box/Parking Assist/
Lane Keep Assist♦/Lane
Departure Warning♦/
Traction Control and
StabiliTrak Buttons



Power Mirror
Control/Door
Lock Switch/
Window Buttons

Cruise Control/
Voice Recognition/
Heated Steering
Wheel Buttons

Power Tilt/
Telescope
Steering Wheel
Control

Audio Steering
Wheel Controls/
5-way Control

Engine Start/
Stop Button

Heated/
Cooled Seat
Buttons

Climate
Controls

Audio
System
Controls

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)



Lock

Press to lock all doors.



Unlock

Press to unlock the driver's door. Press again to unlock all doors. Press and hold for 4 seconds to open all windows.



Liftglass

Press twice to open the liftglass.



Power Liftgate

Press twice to open or close the power liftgate.



Remote Start

Use to start the engine from outside the vehicle. See Adaptive Remote Start on page 4.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The turn signal lamps flash and the horn sounds.

Press and hold for 3 seconds to activate the alarm. The turn signal lamps flash and the horn sounds for 30 seconds or until the  button is pressed again.

Door Key

Press the button (A) on the side of the transmitter to pull the door key out of the transmitter. Use the key to lock/unlock the driver's door if needed.

Note: To change the Remote Keyless Entry settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.



KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors, liftgate and ignition without removing the Remote Keyless Entry transmitter from your pocket or purse. **The transmitter must be within 3 feet of the door being unlocked or the liftgate.**

Keyless Unlocking

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the lock button on a passenger door handle to unlock all doors.
- ▶ Press the touch pad on the liftgate handle to open the power liftgate.



Keyless Locking

With the ignition off, the transmitter out of the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay once all doors are closed.

Note: To change the door lock and unlock settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

See Keys, Doors and Windows in your Owner Manual.

See Keys, Doors and Windows in your Owner Manual.

PUSHBUTTON START

Start

- ▶ With the vehicle in Park or Neutral, press the brake pedal and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.

Note: The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition. If the transmitter battery is weak, place the transmitter in the pocket in the center console storage compartment to enable the engine to start. Replace the transmitter battery as soon as possible.

Stop/Off

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof until any door is opened.

Accessory

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the Accessory mode. The yellow indicator on the button will illuminate.



ADAPTIVE REMOTE START

Starting the Vehicle

1. Press and release the **Lock** button on the Remote Keyless Entry transmitter.
2. Immediately press and hold the **Remote Start** button until the turn signal lamps flash (about 4 seconds).

When the vehicle starts, the doors remain locked and the parking lamps will light and remain on while the engine is running. The engine will continue running for 10 minutes. Repeat these steps for a 10-minute time extension. Remote start can be extended only once.

3. Before driving, press the brake pedal and then press the **ENGINE START/STOP** button to turn on the ignition.

Canceling a Remote Start

- ▶ Press and hold the **Remote Start** button until the parking lamps turn off.

Heated/Cooled Seat Operation

The heated/cooled seats will turn on during a remote start (if selected in the Vehicle Settings menu) when outside temperatures warrant. The seat button indicators do not illuminate during a remote start.

Note: To change the heated/cooled seat settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

See Keys, Doors and Windows in your Owner Manual.

See Driving and Operating in your Owner Manual.

STEERING WHEEL CONTROLS

Voice Recognition

Push to Talk

Press to interact with the OnStar, Bluetooth or Cadillac CUE system. Wait for the beep before speaking.

End Call/Mute

Press to end/decline a call or mute the audio system.

See Instruments and Controls in your Owner Manual.

Cruise Control

On/Off

SET Set Speed

With Cruise Control on, press the control bar down fully to set the cruise speed.

RES Resume Speed

With Cruise Control on, press the control bar up fully to resume the previous set speed.

+ – Adjust Speed

When active, press the control bar up (+) or down (–) lightly to increase or decrease the set speed by 1-mph increments; press up or down fully to increase or decrease the set speed to the next 5-mph interval on the speedometer.



Cancel

Press to cancel cruise control without erasing the set speed from memory.

Adaptive Cruise Control

Follow Distance Gap

Press repeatedly to set a following gap of Far, Medium, or Near.

Adaptive Cruise Control (ACC) enhances traditional cruise control by maintaining a driver-selected following gap between your vehicle and a vehicle detected directly ahead. Once a speed is set using the Cruise Control buttons on the steering wheel, the vehicle will maintain the selected gap distance by braking or accelerating.

When a slower vehicle is detected ahead, the  **Vehicle Ahead** symbol is displayed and the vehicle brakes moderately to maintain the selected following gap. The ACC system may slow your vehicle to a stop behind the detected vehicle. When the ACC system is holding the vehicle at a stop, always be prepared to manually apply the brakes.

If driver action is required to apply sufficient braking behind a detected vehicle, a visual alert flashes on the windshield and the Safety Alert Seat pulses. See Safety Alert Seat on page 14.

Note: Changing the gap settings automatically changes the alert timing sensitivity for the Forward Collision Alert system.

See Driving and Operating in your Owner Manual.

Heated Steering Wheel

On/Off

See Instruments and Controls in your Owner Manual.

STEERING WHEEL CONTROLS

5-Way Control

Moves left/right, up/down, and in.

<> Left/Right

Press to move between the display zones on the instrument cluster.
Press the left < to exit a center display menu.



^ v Up/Down

Press the control bar up or down to scroll through a menu.

SEL Select

Press to select a highlighted menu item.

See Instruments and Controls in your Owner Manual.

Audio Controls

⏮+ ⏭- Volume

Press the ⏮+ or ⏭- to increase or decrease the volume.

⏮ ⏭ Next/Previous

Press ⏮ or ⏭ to go to the next or previous favorite radio station or track.

See your Cadillac CUE Infotainment System Manual.

INSTRUMENT CLUSTER



Cluster Display Zones

Use the 5-way control on the steering wheel to move between the different display zones and scroll through the different menus in each cluster configuration.

Cluster Configurations

1. Use the five-way control on the steering wheel to view the Options page in one of the display zones on the cluster.
2. Press **SEL** (Select) to enter the Options menu.
3. Scroll down to highlight Display Layout; press **SEL**.
4. Scroll up or down to highlight one of the cluster displays; press **SEL**.
5. Press < to exit the menu.

See Instruments and Controls in your Owner Manual.

DRIVER INFORMATION CENTER



The Driver Information Center (DIC) on the instrument cluster can be set to display a variety of vehicle information.

DIC Menus

Use the 5-way control on the steering wheel to view the menus:

-  **Info** – display trip and fuel information
-  **Audio** – browse music or change the audio source
-  **Phone** – view active call and scroll through contacts
-  **Navigation** – view active route or change prompts

Info Menu

1. Use the 5-way control on the steering wheel to display the Options page in one of the display zones. Press **SEL** to enter the Options menu.
2. Scroll  down to highlight Info Pages; press **SEL**.
3. Scroll  up or  down to move through the Info items.
4. Press **SEL** to select or deselect an item to display.

See Instruments and Controls in your Owner Manual.

HEAD-UP DISPLAY



The Head-Up Display (HUD) projects some operating information onto the windshield. The HUD controls are located on the left side of the instrument panel.

HUD

Lift up or press down to adjust the position of the image on the windshield. It cannot be adjusted side-to-side.

INFO

Press to select from four displays: Speed View, Audio/Phone View, Navigation View, and Performance View.

+ – Brightness

Lift up or press down to brighten or dim the display.
Hold down to turn off the display.

See Instruments and Controls in your Owner Manual.

TOUCH SCREEN AND CONTROLS

Applications:
Touch the screen icon to access the desired application.

VOLUME
Touch arrows or swipe finger on or above the chrome bar.

Power/Mute:
Press and hold to turn Cadillac CUE On/Off. Press to mute audio.

Driver's Temperature Control

OFF
Climate Control Power Off

**Driver's Heated/
Cooled Seat Control**

AUTO
Automatic Climate Control Operation

Defrost Mode



Additional Pages:
Touch to view additional pages of applications.

Interaction Selector:
Touch to display the favorites list.

Home Page

Passenger's Temperature Control

Climate Control Fan Speed

**Passenger's Heated/
Cooled Seat Control**

Recirculation Mode

Rear Window Defog

Storage Compartment with USB Port:
Press and hold the bright bar to open/close.

The controls use capacitive technology – simply touch the icon/text to access a feature or adjust a function.

CADILLAC CUE MENUS

Refer to your Owner Manual for important safety information about using the infotainment system while driving.

Cadillac CUE uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone, cell phone, USB flash drive or portable audio player/iPod®. It offers a variety of entertainment options, including streaming audio from the Internet through a smartphone, and features enhanced hands-free voice control. For assistance, call 1-855-4-CUE-NOW (1-855-428-3669) or visit my.cadillac.com/learn. You can use simple gestures on the Cadillac CUE touch screen just as you would on a smartphone, such as tap, drag, pinch and spread, to interact with the Cadillac CUE system. Touch an application icon on the touch screen to access the following items.



Audio

- Radio Band
- Media
- Seek Up/Down
- Tune
- Browse
- Menu



Navigation

- Zoom Out
- Zoom In
- Reset
- Destination
- Map Menu
- Seek Up/Down



Phone

- Voice Recognition
- Contacts
- Recent
- Keypad
- Voice Mail
- Phones



Climate

- Driver/Vehicle and Passenger Set Temperature
- Sync Temperature Settings
- AC Mode
- Auto Climate On/Off
- Air Distribution Settings
- Front Settings/Rear Settings
- Fan Speed



Settings

- Time and Date
- Language
- Valet Mode
- Radio
- Vehicle
- Bluetooth
- Phone Integration
- Voice
- Display
- Rear Camera
- Return to Factory Settings

CADILLAC CUE FEATURES

Setting the Time

1. Touch **Settings** on the Home page.
2. Touch **Time** and **Date**.
3. Touch **Set Time**.
4. Touch + or – to adjust the hours, minutes, and AM or PM.
5. Touch **< BACK** to exit the menu.

If the Auto Set feature is enabled, the time will be updated automatically as the system obtains time information from the cellular network.

Storing Favorites

Radio stations from all bands (AM, FM or XM♦), media (song, artist, album and genre with device connected to a USB port), phone contacts and navigation destinations can be stored in any order.

1. Display or select the desired radio station, media favorite, navigation destination or contact.
2. Touch and drag up the  **Interaction Selector** at the bottom of the screen to display the favorite screen buttons.
3. Touch and hold a favorite screen button until a beep is heard.
4. Repeat the steps to store another favorite item.

Portable Audio Devices

USB ports are located in the console front storage bin and inside the console.

- ▶ Connect an iPod®, iPhone®, MP3 player, a USB flash drive or a USB mass storage device to a USB port.
- ▶ Touch  **Media** until the connected device is shown. Search for music on-screen or by voice commands.

PANDORA® Internet Radio

Listen to radio stations based on favorite artists or genres. Requires an Internet-connected device with the Pandora app.

1. Download the Pandora app to your smartphone. Restart the smartphone and sign in to Pandora.
2. Create a station on your smartphone.
3. Connect your smartphone/device to the system by Bluetooth or, for Apple devices, by a USB cable.
4. Touch the **Pandora** icon on the touch screen to access Pandora. A slight delay may occur when loading a song or changing a station.

Apple CarPlay™ and Android Auto™♦

Apple CarPlay or Android Auto capability may be available through a compatible smartphone. If available, a  Projection icon will appear on the home page of the infotainment display.

1. No app is required for Apple CarPlay. Download the Android Auto app to your phone from the Google Play store.
2. Connect your compatible Apple iPhone or Android phone to a USB data port in the console front storage bin or inside the console. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The  Projection icon will change to Apple CarPlay or Android Auto, depending on the phone. Apple CarPlay or Android Auto may launch automatically upon USB connection. If not, touch the Apple CarPlay or Android Auto icon on the home page.

For more information on using Apple CarPlay or Android Auto, call 1-855-4-CUE-NOW (1-855-428-3669) or visit my.cadillac.com/learn.

See your Cadillac CUE Infotainment System Manual.

VOICE RECOGNITION

Control the music source and navigation destination, and make phone calls hands-free (after pairing your Bluetooth-enabled phone), using the voice recognition system.

1. Press the **Push to Talk** button on the steering wheel.
2. The radio will say "Command please," followed by a tone.
3. After the tone, say what you want it to do using natural speech. (Example: "Call Amanda" or "Tune FM 104.3.")

Handset Voice Recognition

Handset Voice Recognition pass-thru allows access to the voice recognition commands on a compatible, paired cell phone; i.e. Siri or Voice Command. For more information, visit my.cadillac.com/learn.

- ▶ To activate Handset Voice Recognition, press and hold the **Push to Talk** steering wheel button.

See your Cadillac CUE Infotainment System Manual.

ONSTAR® WITH 4G LTE AND WI-FI®

With OnStar 4G LTE and Wi-Fi, up to seven devices (smartphones, tablets and laptops) can be connected to high-speed Internet through the vehicle's built-in Wi-Fi hotspot.

- ▶ To retrieve the SSID and password for the hotspot, press the OnStar Voice Command button on the rearview mirror, wait for the prompt, and then say "Wi-Fi settings." The information will be displayed on the screen. Or touch the OnStar icon on the touch screen and select Settings.

For more information and assistance, press the blue OnStar button, call 1-888-466-7827 or go to onstar.com.

◆ Optional equipment

See your Cadillac CUE Infotainment System Manual.

BLUETOOTH® SYSTEM

Refer to your Owner Manual for important safety information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. For more information, visit my.cadillac.com/learn.

Pair a Phone

1. To use voice recognition, press the **Push to Talk** button; after the tone, say "Pair Phone," or
Use the touch screen to select **Phone > Pair Device**.
2. Start the pairing process on the phone. Locate Cadillac CUE on the phone.
3. Enter the four-digit code that appears on the touch screen into the phone or, if a six-digit code appears on the phone, confirm it on the touch screen.
4. If your phone prompts you to accept the connection or phone book download, select Always Accept and Allow.



Streaming Audio

- ▶ With a paired device connected via Bluetooth, touch **Media** until Bluetooth is displayed on the touch screen to stream audio from the device.

Control operation using the device controls. For full control of the mobile device, it may be necessary to connect the device to a USB port.

See your Cadillac CUE Infotainment System Manual.

WIRELESS CHARGING◆

The Wireless Charging system is located on the storage tray on top of the center console. To check mobile device compatibility, visit my.cadillac.com/learn.

1. The vehicle must be On.
2. Remove all objects from the charging pad.
3. Place the device, face up, on the  symbol on the pad, aligned with the rear rib.
4. Move the device slowly until the battery charging symbol displays on the Cadillac CUE screen. If not charging, remove the device for 3 seconds, and rotate it 180 degrees.

See your Cadillac CUE Infotainment System Manual.

VEHICLE PERSONALIZATION◆

Many vehicle features can be customized in the Vehicle Settings menu on the Cadillac CUE touch screen.

1. Touch **Settings** on the Home page.
2. Touch **Vehicle** from the Settings menu.
3. Touch the desired menu item.
4. Touch the desired feature and setting. Settings are saved automatically.
5. Touch **< Back** to exit each menu.



See Instruments and Controls in your Owner Manual.

NAVIGATION◆



Enter a destination using the Single Line Destination feature. Approximate your desired destination and the auto-fill function will enter the necessary information.

Using the Touch Screen

1. Touch **Navigation** on the Home page.
2. Touch **Destination**.
3. Type the address, intersection or road.
4. Touch **Go**.
5. Select the desired name from the generated list.
6. Touch **Go**.

Using Voice Commands

1. Press the  **Push to Talk** button.
2. Say "Destination Address" to enter a specific address.
3. Say the entire address consisting of the house number, street name, city and state.

See your Cadillac CUE Infotainment System Manual.

LIGHTING

 **Off/On**

AUTO Automatic Light Control

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions, including the IntelliBeam® automatic high-beam system.



 **Parking Lamps**

 **Headlamps**

 **Instrument Panel Brightness**

Rotate the thumbwheel to adjust the instrument panel lighting.

Dome Lamps

OFF

Press to turn off the dome lamps at all times, even when a door is open.

DOOR

Press to have the dome lamps turn on automatically when a door is open.

ON

Press to turn on all dome lamps.



See Lighting in your Owner Manual.

◆ Optional equipment

WINDSHIELD WIPERS

 **Fast Wipes**

 **Slow Wipes**

 **INT Intermittent**

Rotate the band to adjust the delay between wipes. The wipers activate more often as the band is rotated upward.



 **AUTO - Rainsense™ On/Off**

Press to turn the Rainsense wipers on/off. Use the  **INT** band to adjust the wiper cycling based on the amount of moisture on the windshield. Rotate the band upward to increase the moisture sensitivity setting and the wipers will cycle more frequently.

OFF

 **Single Wipe**

 **Washer Fluid**

Push the paddle forward to wash the windshield.

 **Rear OFF-INT-ON**

Slide the switch to activate the rear wiper.

 **Rear Washer Fluid**

Press the button on the end of the lever.

See Instruments and Controls in your Owner Manual.

DRIVER ASSISTANCE SYSTEMS

The driver assistance systems use advanced technologies to help avoid collisions by providing visual, audible and/or tactile (vibration) alerts under some imminent collision conditions.

Forward Collision Alert♦ – The  **Vehicle Ahead** indicator illuminates in green on the instrument cluster when a vehicle is detected and illuminates in amber when following a vehicle ahead too closely.

When approaching a vehicle directly ahead much too rapidly, a visual alert flashes on the windshield and the driver's seat pulses. See Safety Alert Seat.

- ▶ Press the  **Collision Alert** button on the steering wheel to set the alert sensitivity to Far, Medium, Near or Off.

Lane Keep Assist♦ – The  **Lane Keep Assist** indicator is green on the instrument cluster when a lane is detected ahead. If the vehicle is leaving the lane unintentionally, the indicator turns amber and the system gently turns the steering wheel back into the lane. Turn the steering wheel to override Lane Keep Assist.

Lane Departure Warning♦ – If active driver steering is not detected when crossing a detected lane marking without using a turn signal, the  **Lane Departure Warning** symbol flashes on the instrument cluster and the left or right side of the driver's seat pulses. See Safety Alert Seat.

- ▶ To turn Lane Keep Assist and Lane Departure Warning systems on or off, press the  **Lane Keep Assist** button on the right side of the Cadillac CUE touch screen. The button illuminates when the system is on.

Safety Alert Seat♦ – The driver's seat pulses, left side, right side, or simultaneously, to alert the driver of potential hazards.

- ▶ Audible notification may be selected instead of Safety Alert Seat pulsing notification. To change the alert setting, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

Side Blind Zone Alert♦ – While driving, a  warning symbol displays on the left or right side mirror when a vehicle is detected in that side blind spot area. The symbol flashes if a turn signal is activated when a vehicle has been detected.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Side Blind Zone Alert.

Lane Change Alert♦ – While driving, a  warning symbol displays on the left or right side mirror when a vehicle is rapidly approaching that side blind zone area. The symbol flashes if a turn signal is activated when a vehicle has been detected.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.


Front and Rear Automatic Braking♦ – Applies the brakes in potential collision situations to help reduce damage or help avoid collisions at lower speeds.

Automatic Collision Preparation♦ – Prepares the brakes or applies the brakes if an emergency collision appears imminent or the driver does not react to previous alerts.

Automatic Safety Belt Tightening♦ – While driving, the front safety belts automatically tighten during emergency braking or steering maneuvers, and release when driving conditions return to normal.

SURROUND VISION◆

When the vehicle is in Reverse, the Surround Vision System displays a bird's-eye view of the vehicle along with the front or rear camera views on the touch screen.

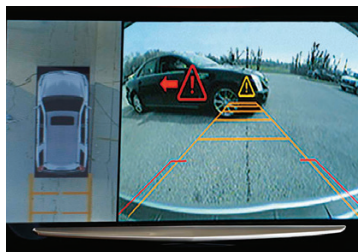

Rear Cross-Traffic Alert

When the vehicle is in Reverse, the Rear Cross-Traffic Alert system warns of traffic coming in either direction by displaying a visual alert on the touch screen and the left or right side of the driver's seat pulses. See Safety Alert Seat on page 14.

- To turn the Surround Vision System Guidelines or Rear Park Assist Symbols on or off, go to Settings > Rear Camera.

See Driving and Operating in your Owner Manual.

FRONT AND REAR PARKING ASSIST

During low-speed parking maneuvers, the system provides "distance-to-closest object" information in the Driver Information Center and a caution symbol on the Rear Vision Camera.

When the vehicle should be stopped immediately to avoid a collision, a continuous audible tone sounds or the Safety Alert Seat pulses. See Safety Alert Seat on page 14.

- To turn the system on or off, press the **P**  **Parking Assist** button on the right side of the Cadillac CUE touch screen.

See Driving and Operating in your Owner Manual.

◆ Optional equipment

AUTOMATIC TRANSMISSION

Range Selection Mode

Range Selection Mode allows the driver to select the range of gears for the current driving conditions.

1. Move the shift lever to the Manual (M) position.
2. Press the **+** (plus) or **-** (minus) button (A) on the shift lever to select a lower or higher gear. An M and the current gear will be displayed on the Driver Information Center.

The transmission will be limited to the gear selected and lower gears. If vehicle speed is too high or too low for the requested gear, the shift will not occur.



Tow/Haul Mode

The Tow/Haul Mode adjusts the transmission shifts to reduce shift cycling, such as when towing or hauling heavy loads or driving on steep grades.

- To turn the system on or off, press the  **Tow/Haul Mode** button (B) on the end of the shift lever.

See Driving and Operating in your Owner Manual.

MAGNETIC RIDE CONTROL

The Magnetic Ride Control monitors the suspension system and automatically adjusts to provide the best handling while providing a smooth ride.

- Press the  **Magnetic Ride Control** button on the left side of the Cadillac CUE touch screen to view the menu on the Driver Information Center. Press the button again to select the Tour or Sport mode.



See Driving and Operating in your Owner Manual.

TIRE PRESSURE MONITOR

The  **Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures. The proper tire pressures for the vehicle are listed on the Tire and Loading Information label, located below the driver's door latch. **Current tire pressures can be viewed in the Driver Information Center.**

Tire pressure is affected by cold weather and distance driven. If the low tire pressure warning light illuminates when the vehicle is first started in cooler temperatures and then turns off as the vehicle is driven, check for the proper tire pressures.

Refer to your Owner Manual for additional information about normal monthly tire maintenance.

See Vehicle Care in your Owner Manual.

STABILITRAK®/TRACTION CONTROL SYSTEMS

The Traction Control system limits wheelspin and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

Turn off Traction Control if the vehicle is stuck and rocking the vehicle is required.

- Press the  **Traction Control/StabiliTrak OFF** button on the right side of the Cadillac CUE touch screen to turn Traction Control off or back on. The  **Traction Control Off** light will illuminate on the instrument cluster when the system is off.

See Driving and Operating in your Owner Manual.



COOL BOX

The Cool Box (Platinum model only) in the center console provides cooled storage for beverages or other items.

- Press the  **Cool Box** button on the left side of the front storage bin to turn the Cool Box on or off.


See Storage in your Owner Manual.



POWER LIFTGATE

Open/Close the Power Liftgate

- ▶ Press the  **Power Liftgate** button on the RKE transmitter twice.
- ▶ Press the **Power Liftgate** knob on the overhead console.
- ▶ Press the touchpad (A) on the liftgate handle to open the liftgate.
- ▶ Press the button (B) next to the liftgate latch to close the liftgate.

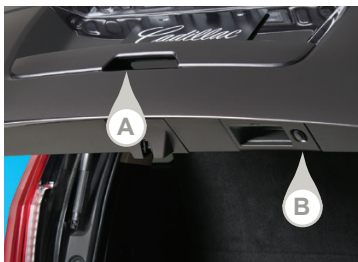

Programming the Liftgate Height

1. Turn the **Power Liftgate** knob to the 3/4 mode position.
2. Open the liftgate.
3. Adjust the liftgate manually to the desired height.
4. To save the setting, press and hold the  button next to the liftgate latch (B) for 3 seconds. The turn signals will flash when the setting is saved.



Hands-Free Operation

- ▶ To open or close the liftgate hands-free, kick your foot straight in and out under the center of the rear bumper. Do not swing your foot side-to-side.

The RKE transmitter must be within 3 feet of the liftgate.

See Keys, Doors and Windows in your Owner Manual.

◆ Optional equipment

POWER ASSIST STEPS

The power assist steps lower automatically when a door is opened and retract after the doors are closed.

- ▶ To deploy the steps for cleaning and car washes, with the ignition on and the vehicle in Park or with the vehicle running and in Neutral, press the  **Power Assist Steps** button on the left side of the Cadillac CUE touch screen. Press the button again to retract the steps.
- ▶ To lock/disable the steps or to unlock/enable the steps, with the ignition on and the vehicle in Park or Neutral, press and hold the  button for 4 seconds.

See Keys, Doors and Windows in your Owner Manual.

SUNROOF

Open/Close the Sunroof

- ▶ Press the rear of the  **Sunroof Tilt** switch to vent the sunroof.
- ▶ Fully press the rear of the  **Sunroof Slide** switch to express-open the sunroof.
- ▶ Fully press the front of either  **Sunroof** switch to express-close the sunroof.



See Keys, Doors and Windows in your Owner Manual.

POWER FRONT SEATS

Seat Adjustments

A. Seat Cushion Adjustment

Move the front horizontal control to move the seat forward or rearward, or to tilt, raise or lower the seat.

B. Seatback Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Adjustment

Move the rear control fore/aft to increase/decrease lumbar support or up/down to raise/lower the lumbar location.



Additional Seat Adjustments (Platinum Model)

D. Feature Select Control

Press and release the control to display the seat adjustment features on the Cadillac CUE screen. Press and hold to scroll through the adjustments.

E. 4-Way Control Pad

Use the 4-way control pad to make adjustments up, down, forward, or rearward to the selected feature.



F. Massage On/Off

With the ignition on, press to recall the last massage type and intensity.

Set Memory Positions

With the vehicle in Park and the ignition On or in Accessory mode:

1. Adjust the power driver's seat, power adjustable pedals, power outside mirrors, and power tilt/telescopic steering column to the desired positions.
2. Press and release the **SET** button. A beep will sound. Immediately press and hold button **1** until two beeps sound.
3. Repeat the steps using button **2** for a second driver.

To store driver's seat, adjustable pedals and steering column positions for more clearance when exiting the vehicle, repeat steps 1 and 2 using the **EXIT** button.



Recall Positions

- Press button **1**, **2** or **EXIT**. Depending on vehicle state, the button may need to be held down until the seat, pedals, mirrors and steering column reach the set position.

The memory/exit positions can be programmed to be recalled automatically when the ignition is turned On/Off (for exit recall, the driver's door must be opened).

- To set the Auto Memory Recall or Easy Exit Options, go to Settings > Vehicle > Comfort and Convenience > Auto Memory Recall or Easy Exit Options.

See Seats and Restraints in your Owner Manual.

REAR SEATS

Folding 2nd-Row Seats

The 2nd-row seats fold and tumble to provide more cargo space and access to the 3rd-row seats.

1. Lower the head restraint, unbuckle the safety belt, make sure nothing is under or in front of the seat, and move the front seat forward enough to allow room for the folded seat.
2. Lift the lever on the lower outboard side of the 2nd-row seat. The seatback will fold forward.
3. Lift the lever again to tumble the seat forward.



Power Folding 2nd-Row Seats♦

1. Lower the head restraint, unbuckle the safety belt, make sure nothing is under or in front of the seat, and move the front seat forward enough to allow room for the folded seat.



2. Press the  **Seat Release** button (A) on the panel behind the rear doors or the  **x2** button (B) in the rear cargo area to fold the seat forward. Press either button again to tumble the seat forward.

Unfolding 2nd-Row Seats

1. Pull down the seat until it latches to the floor.
2. Lift up the seatback until it locks in place.

Power Folding/Unfolding 3rd-Row Seats

1. With the vehicle in Park, lower the head restraint, unbuckle the safety belt, and make sure nothing is on the seat.
2. Press and hold the bottom of the  **Seat Release** button (C) in the rear cargo area to fold the seat flat.
3. Press and hold the top of the  button to raise the seatback.



See Seats and Restraints in your Owner Manual.

OWNER PRIVILEGES™

ROADSIDE ASSISTANCE

1-800-224-1400

TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump-starting, lock-out service, fuel delivery and flat tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

Roadside Assistance and OnStar®: If you have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

CUSTOMER ASSISTANCE

1-800-458-8006

Should you need to ask a question, make a comment, or request additional information, Cadillac Customer Assistance is available anytime.

CADILLAC ONLINE OWNER CENTER

Visit my.cadillac.com for access to the Cadillac Owner Center, which features online owner manuals, maintenance information, service records, and more.

MOBILE APPS

The myCadillac mobile app connects owners to a variety of vehicle information and services, such as a searchable Owner Manual, real-time fuel information and Roadside Assistance.



OnStar RemoteLink Key Fob Services include Remote Start, Remote Door Lock and Remote Horn and Lights (on equipped vehicles). Services are available for five years from date of vehicle delivery. To learn more about OnStar services, press the OnStar button, refer to your Owner Manual, call 1-888-466-7827 or visit onstar.com.

Download the mobile apps from your compatible mobile device's app store.

CADILLAC CUE SUPPORT

For information or assistance operating the Cadillac CUE infotainment system, call 1-885-4-CUE-NOW (1-855-428-3669).

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2015 by General Motors. All rights reserved.

