



## Getting to Know Your **2016 Spark**



[www.chevrolet.com](http://www.chevrolet.com)

*Review this Quick Reference Guide for an overview of some important features in your Chevrolet Spark. More detailed information can be found in your Owner Manual. Some optional equipment described in this guide may not be included in your vehicle. For easy reference, keep this guide with your Owner Manual in your glove box.*

# Instrument Panel

Exterior Lamps Control/  
Instrument Panel  
Illumination Control

Turn Signal Lever/  
Driver Information  
Center Controls

Driver  
Information  
Center

Windshield  
Wipers Lever



Power Mirror♦/  
Window  
Switches♦

StabiliTrak/Lane  
Departure Warning♦  
Buttons

Cruise Control/  
Forward  
Collision Alert♦  
Buttons

Tilt Steering  
Wheel Lever

Audio Steering  
Wheel Controls♦

## Symbols



Low Fuel



Traction Control Off

**BRAKE** Brake System



Cruise Control Set



StabiliTrak Active



StabiliTrak Off



Security



Fog Lamps




Airbag Readiness



Check Engine



Charging System

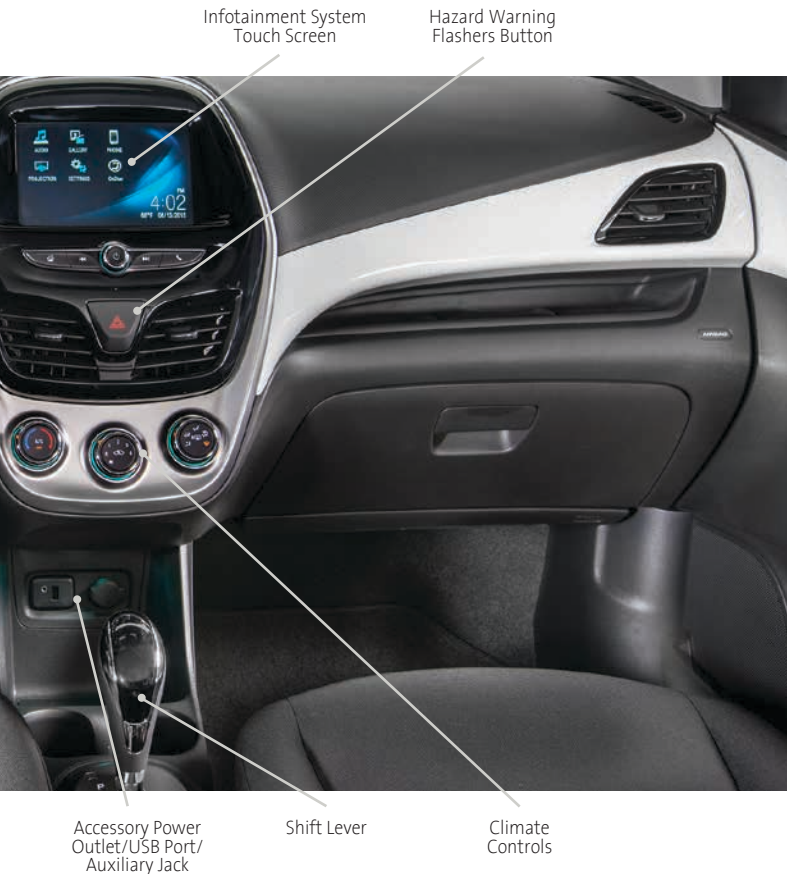

Safety Belt Reminder



Lane Departure Warning



Forward Collision Alert

*Refer to your Owner Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.*

**See In Brief in your Owner Manual.**

## Remote Keyless Entry Transmitter◆



### **Unlock**

Press to unlock the driver's door.  
Press again to unlock all doors and liftgate.

### **Lock**

Press to lock all doors and liftgate.

### **Panic Alarm**

Press and release to locate your vehicle.  
The turn signal lamps will flash and the horn will sound.

Press and hold to activate the alarm.

**Note:** To change the remote lock and unlock settings, go to *Vehicle > Remote Lock, Unlock, Start* in the Settings menu.

**See Keys, Doors and Windows in your Owner Manual.**

## Keyless Access System◆

The Keyless Access System enables operation of the doors, liftgate and ignition without removing the Remote Keyless Entry transmitter from a pocket or purse. The transmitter must be within 3 feet of the door being unlocked or the liftgate.

### **Keyless Unlocking**

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors and the liftgate.
- ▶ Press the lock button on the passenger's door handle to unlock all doors and the liftgate.
- ▶ Pull the handle above the license plate to open the liftgate.

### **Keyless Locking**

With the ignition off, the transmitter out of the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors and the liftgate immediately.
- ▶ If Passive Locking is turned on, all doors and the liftgate will lock automatically after a short delay once all doors and the liftgate are closed.

**Note:** To change the door lock settings, go to *Vehicle > Power Door Locks* in the Settings menu.

**See Keys, Doors and Windows in your Owner Manual.**

## Pushbutton Start♦

The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition.

### Starting the Engine

- ▶ With the transmission in Park or Neutral, press the brake pedal (automatic transmission) or the clutch pedal (manual transmission) and then press the **ENGINE START/STOP** button. The green button indicator will illuminate.

### Stopping the Engine

- ▶ Shift to Park (automatic transmission only) and press and hold the **ENGINE START/STOP** button.


### Accessory Mode

- ▶ With the engine off and the brake pedal (automatic transmission) or clutch pedal (manual transmission) not depressed, press the **ENGINE START/STOP** button to place the vehicle in accessory mode. The amber button indicator will illuminate.

*See Driving and Operating in your Owner Manual.*

## Driver Information Center (DIC)

The DIC on the instrument cluster displays a variety of vehicle system information and warning messages.

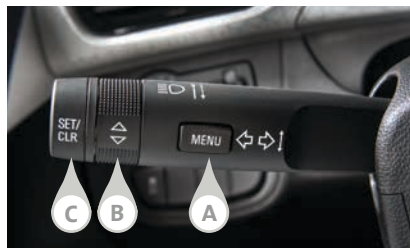

### DIC Controls

#### A. MENU

Press to display the:

**Vehicle Information menu** – may include remaining oil life, units and tire learn or tire pressure.

**Trip/Fuel menu♦** – may include digital speedometer, trip odometers, fuel range, average fuel economy, instantaneous fuel economy, average vehicle speed, timer and navigation.

#### B.

Rotate the band to scroll through the items of each menu.

#### C. SET/CLR

Press the button on the end of the lever to set or clear the displayed menu item.

*See Instruments and Controls in your Owner Manual.*

## Steering Wheel and Seat Adjustments

### Steering Wheel and Driver's Seat



#### A. Steering Wheel Adjustment

Pull down the lever to unlock the wheel and adjust its position. Lift the lever back up securely to lock the wheel.

#### B. Seat Fore/Aft Adjustment

Lift the handle under the front of the seat to slide the seat forward or rearward.

#### C. Seat Height Adjustment

Ratchet the middle lever up or down repeatedly to raise or lower the seat.

#### D. Seatback Recline Adjustment

Lift the rear lever to recline or raise the seatback.

### Folding Rear Seats



1. Unbuckle the safety belts.
2. Press the button on each post to remove the rear head restraints.
3. Slide the front seats forward.
4. Pull up the front of the rear seat cushion. Rotate the cushion up and forward.
5. Pull up the release knob (A) on top of the seatback. The red marking is visible when the seatback is unlatched.
6. Fold down the seatback.
7. Before unfolding the seat, place the safety belt in the retainer clip (B) so it doesn't cross the locking mechanism.

***See Seats and Restraints in your Owner Manual.***

## Lighting

### Exterior Lamps

Rotate the knob to activate the exterior lamps.



 **Off/On**

### AUTO Automatic Headlamp System

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

 **Parking Lamps**

 **Headlamps**

 **Fog Lamps\***

Press to turn the fog lamps and parking lamps on or off.

### Instrument Panel Lighting

 **Instrument Panel Brightness**


Rotate and hold the thumbwheel to adjust the instrument panel lighting.

*See Lighting in your Owner Manual.*

## Wipers and Washers

### Windshield Wipers and Washer

Move the lever up or down to operate the windshield wipers.

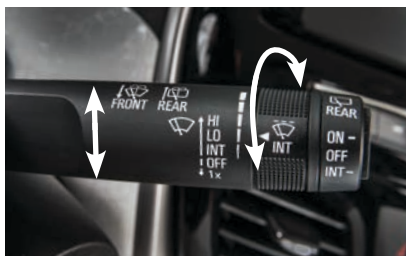

**HI Fast Wipes**

**LO Slow Wipes**

**INT Intermittent**

Rotate the band to adjust the delay between wipes. The wipers activate more often as the band is rotated upward.

**OFF**

**1x Single Wipe**

 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield.

### Rear Wiper and Washer

Press the switch on the end of the lever to operate the rear wiper.

**Note:** The rear wiper will automatically activate when the vehicle is in Reverse and the windshield wipers are turned on.

**ON Continuous Wipes**

**OFF**

**INT Intermittent**

 **Washer Fluid**

Push the lever away from you to spray washer fluid on the rear window.

## Chevrolet MyLink Infotainment System

Refer to your Owner Manual for important information about using the infotainment system while driving.



Applications:  
Touch the screen  
icon to access the  
application

  
Home  
screen

  
SEEK  
Previous radio  
station or track

  
Power/Volume

  
SEEK  
Next radio  
station or track

  
Press to view  
Phone screen or  
answer a call

### Chevrolet MyLink

Chevrolet MyLink uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone, cell phone, USB flash drive or portable audio player/iPod®. For assistance with the MyLink system, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit [www.chevrolet.com/mylink](http://www.chevrolet.com/mylink).

*See Infotainment System in your Owner Manual.*

# Chevrolet MyLink Infotainment System


## Setting the Time

1. Touch **Settings** on the home screen.
2. Touch **Time and Date**.
3. Touch **Set Time**.
4. Touch the screen buttons to adjust the hours, minutes and AM or PM.
5. Touch  to exit the menu.

## Storing Favorites

Radio stations from all bands (AM, FM or SiriusXM<sup>®</sup>) can be stored in any order.

1. Select Audio on the Home screen.
2. Tune in the desired radio station.
3. Select the desired page of favorite screen buttons.
4. Touch and hold one of the favorite screen buttons until a beep is heard.
5. Repeat the steps to store another favorite item.

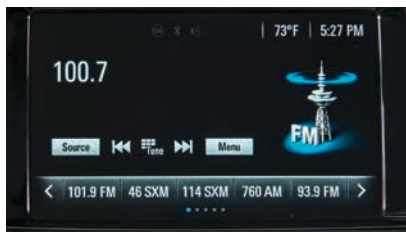

## Portable Audio Devices

A USB port and an auxiliary jack are located at the front of the center console to connect portable audio devices.

- ▶ An iPod<sup>®</sup>, iPhone<sup>®</sup>, MP3 Player, a USB flash drive or a USB mass storage device can be connected to the USB port. Search for music on-screen.
- ▶ Touch Audio > Source to select a portable device as the audio source.

*See Infotainment System in your Owner Manual.*

## Apple CarPlay<sup>™</sup> and Android Auto<sup>™</sup>

Apple CarPlay or Android Auto<sup>\*</sup> capability may be available through a compatible smartphone. If available, a  Projection icon will appear on the home page of the infotainment display.

1. No app is required for Apple CarPlay. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your Apple iPhone or Android phone by plugging the compatible phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The  Projection icon will change to Apple CarPlay or Android Auto, depending on the phone. Apple CarPlay or Android Auto may launch automatically upon USB connection. If not, touch the Apple CarPlay or Android Auto icon on the home screen.

For more information on using Apple CarPlay or Android Auto, call 1-855-4-SUPPORT (1-855-478-7767) or visit [my.chevrolet.com/learn](https://my.chevrolet.com/learn).

*See Infotainment System in your Owner Manual.*


## Bluetooth® System

Refer to your Owner Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit [my.chevrolet.com/learn](http://my.chevrolet.com/learn) for more information.

### Pair a Phone

1. Select the Phone screen and touch Search Device.
2. Start the pairing process on the phone. Locate Your Vehicle or Chevrolet MyLink on the phone.
3. Confirm the codes that appear on the touch screen and the phone.
4. If your phone prompts you to accept the connection or phone book download, select Always Accept and Allow.

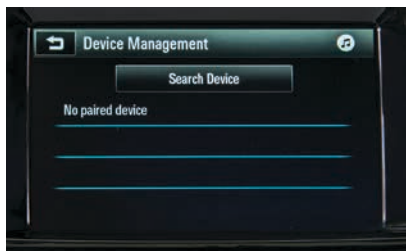

*See Infotainment System in your Owner Manual.*

## Audio Steering Wheel Controls♦



### ► Volume

Press the + or – button to adjust the volume.

### SRC Source

Press to select an audio source.

### △▽ Next/Previous Favorite Station

Rotate the thumbwheel up or down to go to the next or previous favorite radio station or track.

### 📞 Push to Talk

Press to answer an incoming call or to use voice recognition with the Bluetooth or OnStar® system.

### 📞 End Call/Mute

Press to end or decline a call.

Press to mute/unmute the vehicle speakers.

*See Instruments and Controls in your Owner Manual.*

## OnStar® with 4G LTE and Wi-Fi®

If equipped with OnStar 4G LTE and Wi-Fi, up to seven devices (smartphones, tablets and laptops) can be connected to high-speed Internet through the vehicle's built-in Wi-Fi hotspot.

- ▶ To retrieve the SSID and password for the hotspot, press the OnStar Voice Command button on the overhead console or rearview mirror, wait for the prompt, and then say "Wi-Fi settings." The information will be displayed on the screen.

For assistance, press the blue OnStar button or call 1-888-4-ONSTAR (1-888-466-7827).

**Note:** See [onstar.com](http://onstar.com) for a detailed instruction guide, vehicle availability, details, and system limitations.

*See Infotainment System in your Owner Manual.*

## Vehicle Personalization

Some vehicle features can be customized using the audio controls and menus. The Settings may include Time and Date, Language, Radio, Vehicle, Bluetooth, Apple CarPlay, Android Auto, USB Auto Launch, Rear Camera and Return to Factory Settings.

1. Press the  **Home** button.
2. Touch **Settings**.
3. Touch the desired screen menu to access the various menu items and settings.
4. Touch the  screen button to move back within a menu.



*See Instruments and Controls in your Owner Manual.*


## Sunroof♦

The sunroof control is located on the overhead console.

- ▶ Press and hold the  **Sunroof** switch to vent the sunroof. Press the  switch again to express-open the sunroof.
- ▶ Press and hold the  **Sunroof** switch to close the sunroof.

*See Keys, Doors and Windows in your Owner Manual.*

## Climate Controls

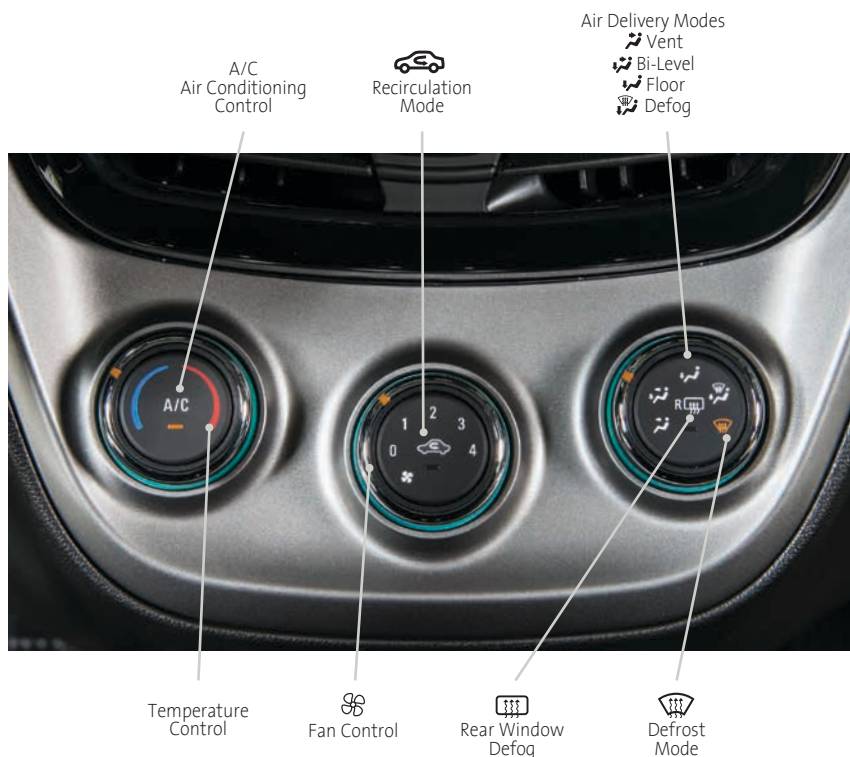

### Recirculation Mode

- Press  **Recirculation Mode** to quickly cool the air inside the vehicle or prevent outside odors from entering the vehicle.

**Note:** When the Recirculation Mode is used without air conditioning, the air humidity increases and the windows may fog.

**See Climate Controls in your Owner Manual.**

## Cruise Control

### Setting Cruise Control

1. Press the  **On/Off** button. The Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the switch down to the **SET-** position to set the speed. The symbol will illuminate in green on the instrument cluster.



### Adjusting Cruise Control

#### **RES+ Resume/Accelerate**

Press the switch up to resume a set speed. When the system is active, press the switch up to increase speed.

#### **SET- Set/Coast**

When the system is active, press the switch down to decrease speed.

#### **Cancel**

Press to cancel the cruise control without erasing the set speed from memory.

Pressing the brake pedal also will cancel the cruise control.

The cruise control set speed is erased when cruise control or the vehicle ignition is turned off.

*See Driving and Operating in your Owner Manual.*

## Traction Control and StabiliTrak Systems

The traction control system limits wheel-spin and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- Press the  **StabiliTrack/Traction Control** button on the left side of the instrument panel to turn off traction control. The  Traction Control Off light will illuminate on the instrument cluster. Press the button again to turn on traction control.



*See Driving and Operating in your Owner Manual.*

## Driver Assistance Systems

### Lane Departure Warning<sup>◆</sup>

The  Lane Departure Warning indicator on the instrument cluster is green when a lane marking is detected. If a detected lane marking is crossed without using a turn signal, the system flashes an amber  indicator and sounds three low-pitched beeps on the right or left, depending on the lane departure direction.

- ▶ Press the  **Lane Departure Warning** button on the left side of the instrument panel to turn the system on or off.

### Forward Collision Alert<sup>◆</sup>

The  Vehicle Ahead indicator on the instrument cluster is green when a vehicle is detected. When approaching a vehicle directly ahead too rapidly, the system flashes a visual alert and sounds several high-pitched beeps. The visual alert will stay illuminated when tailgating a vehicle ahead.

- ▶ Press the  **Forward Collision Alert** button on the left side of the steering wheel to set the alert timing to Far, Medium, Near, or Off.

### Rear Vision Camera

When the vehicle is in Reverse, a view of the area behind the vehicle appears on the infotainment screen.

- ▶ To turn the Rear Camera Guidance Lines or Rear Park Assist Symbols on or off, go to Rear Camera in the Settings menu.

**Note:** Clean the camera lens, located above the license plate, with water and a soft cloth.

### Rear Park Assist<sup>◆</sup>

When the vehicle is in Reverse, detected objects are indicated by audible beeps. The interval between beeps becomes shorter as the vehicle gets closer to an object. When the distance is less than 16 in. (40 cm), the beeps are continuous for 5 seconds. The system operates only at speeds less than 5 mph.

- ▶ To turn the system on or off, go to Vehicle > Collision/Detection Systems in the Settings menu.

*See Driving and Operating in your Owner Manual.*

## Hill Start Assist

When stopped on a steep hill, the Hill Start Assist feature prevents the vehicle from rolling before driving off, whether facing uphill or downhill. During the transition between when the driver releases the brake pedal and starts to accelerate, Hill Start Assist holds the brake pressure (for up to 2 seconds) to ensure the vehicle doesn't roll.

**Note:** Hill Start Assist will not operate if StabiliTrak is disabled.

*See Driving and Operating in your Owner Manual.*

## Refueling the Vehicle

1. Unlock the vehicle to unlock the fuel door.
2. Pull up the fuel door release handle on the floor near the driver's seat.
3. The fuel door will pop open. Pull the door open to refuel the vehicle.

*See Driving and Operating in your Owner Manual.*



## Engine Oil Life System

The Oil Life System calculates oil life based on vehicle use and displays a Change Engine Oil message on the Driver Information Center when it's necessary to change the engine oil and filter. The system should reset to 100% only following an oil change.

*See Vehicle Care in your Owner Manual.*

## Tire Pressure Monitor

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label located below the driver's door latch. Current tire pressures can be viewed in the Driver Information Center (DIC).

*See Vehicle Care in your Owner Manual.*

## Recreational Towing

Recreational towing means towing the vehicle behind another vehicle. Vehicles with an automatic transmission should be towed from the front with the two rear wheels on the ground and the two front wheels on a dolly. Vehicles with a manual transmission can be towed from the front with all four wheels on the ground (dinghy towing) or with the two rear wheels on the ground and the two front wheels on a dolly. See your Owner Manual for the proper towing procedure.

*See Vehicle Care in your Owner Manual.*

## Roadside Assistance

**1-800-CHEV-USA  
(1-800-243-8872)**

**TTY Users: 1-888-889-2438**

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. Chevrolet's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

### Roadside Assistance and OnStar®

If you require roadside service and have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

## myChevrolet and OnStar® Mobile Apps



The myChevrolet mobile app connects owners to a variety of vehicle information and services, such as a searchable Owner Manual, real-time fuel information and Roadside Assistance.

Download the OnStar RemoteLink mobile app and enjoy select features for 5 years from date of vehicle delivery. With a compatible mobile device, OnStar subscribers can access many services, including locking/unlocking the doors, and locating the vehicle on a map (on properly equipped vehicles). To learn more about OnStar services, press the blue OnStar button, call 1-888-466-7827, visit **onstar.com** or refer to your Owner Manual.



Download the mobile apps from your compatible mobile device's app store.

## Chevrolet Owner Center

Get to know your vehicle inside and out with the Chevrolet Owner Center. Check out personalized information, including an online Owner Manual and helpful how-to videos, track your service history and warranty status, review your current OnStar Vehicle Diagnostics report (active OnStar account required) and more. Create an account today at **my.chevrolet.com**.

**We recommend always using ACDelco or genuine GM service parts.**

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2015 General Motors. All rights reserved.



23420623 B