

2016 Infiniti QX60 Hybrid

Quick Reference Guide



INFINITI.



- 1 INSTRUMENT BRIGHTNESS CONTROL SWITCH*
- 2 BACKUP COLLISION INTERVENTION (BCI) SWITCH*
- 3 TWIN TRIP ODOMETER RESET SWITCH*
- 4 VEHICLE INFORMATION DISPLAY
- 5 HEADLIGHT AND TURN SIGNAL SWITCH
- 6 EV INDICATOR LIGHT
- 7 LOW TIRE PRESSURE WARNING LIGHT
- 8 WIPER AND WASHER SWITCH
- 9 VEHICLE INFORMATION DISPLAY SWITCH
- 10 STEERING WHEEL SWITCHES FOR AUDIO*/BLUETOOTH®/NAVIGATION
- 11 INTELLIGENT CRUISE CONTROL
- 12 VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH*
- 13 POWER LIFTGATE SWITCH
- 14 POWER LIFTGATE MAIN SWITCH
- 15 DYNAMIC DRIVER ASSISTANCE CONTROL SWITCH*
- 16 TILT/TELESCOPIC STEERING WHEEL SWITCH*
- 17 HEATED STEERING WHEEL SWITCH*
- 18 WARNING SYSTEMS SWITCH
- 19 HEADLIGHT AIMING CONTROL SWITCH*
- 20 POWER INVERTER SWITCH
- 21 HOOD RELEASE*
- 22 CONTROL PANEL DISPLAY SCREEN*
- 23 HEATER AND AIR CONDITIONER (automatic)
- 24 AUDIO SYSTEM
- 25 FRONT PASSENGER AIR BAG STATUS LIGHT*
- 26 POWER OUTLET
- 27 DRIVER'S CLIMATE-CONTROLLED SEAT SWITCH*
- 28 INFINITI DRIVE MODE SELECTOR*
- 29 PASSENGER'S CLIMATE-CONTROLLED SEAT SWITCH*

*See your Owner's Manual for information.

new system features

Warning Systems Switch (if so equipped)	2
Approaching Vehicle Sound for Pedestrians (VSP)	2

essential information

Direct Response Hybrid™ Warning Light and Hybrid Awareness.	3
Tire Pressure Monitoring System (TPMS) with Tire Inflation Indicator.	3
Loose Fuel Cap and Fuel-filler Door	4
Towing Your Vehicle.	5
Accessing the Front Cup Holders	5
Front Armrest/Center Console Storage Box	5
Clock Set/Adjustment	5

first drive features

Around View® Monitor (AVM) with Moving Object Detection (MOD) (if so equipped)	6
Infiniti Intelligent Key System.	8
Infiniti Connection™ (if so equipped)	9
INFINITI Mobile Entertainment System (MES) (if so equipped)	11
Power Liftgate.	12
Power Seat Adjustments	13
2 nd Row Seats	13
3 rd Row Manual Reclining Seatback	14
3 rd Row Manual Folding Seats	14
Assist Charge Gauge	14
Automatic Drive Positioner (if so equipped)	15
Outside Mirror Control Switch.	15
Starting/Stopping the Hybrid System.	16
Headlight Control Switch.	16
Wiper and Washer Switch	17
Heater and Air Conditioner (automatic)	18
Rear Climate Controls	20
FM/AM/SiriusXM® Satellite Radio with CD/DVD Player (if so equipped)	20
Conventional (Fixed Speed) Cruise Control	21
Intelligent Cruise Control (ICC) (if so equipped)	22
USB (Universal Serial Bus) Connection Port/iPod® Interface.	23
Power Outlets.	23

system guide

Vehicle Information Display	24
Bluetooth® Hands-free Phone System	25
System Operating Tips	25
Bluetooth® System without Navigation (if so equipped)	26
Bluetooth® System with Navigation (if so equipped)	27
Bluetooth® Streaming Audio with Navigation (if so equipped)	30
Navigation System (if so equipped)	31
HomeLink® Universal Transceiver.	33



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.



To view detailed instructional videos, go to www.infinitiownersinfo.mobi/2016/qx60 or snap this barcode with an appropriate barcode reader.



 
Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.InfinitiUSA.com.

new system features

Warning Systems Switch (if so equipped)

- The warning systems switch **1** will turn on and off the systems enabled in the vehicle information display. The systems controlled by the warning systems switch **1** include:
 - Lane Departure Warning (LDW)
 - Blind Spot Warning (BSW)
 - Forward Collision Warning (FCW)
- When the warning systems switch **1** is turned off, the indicator **2** on the switch is off. If the warning systems switch **1** is illuminated, the system is on. The indicator **2** will also be off if all of the warning systems are deactivated using the Settings menu.
- To enable or disable these systems, perform the following operation:
 - Press the  button **3** on the steering wheel multiple times until you reach the Settings menu.
 - Press up or down on the  button **4** on the steering wheel to select the “Driver Assistance” **5** and “Driving Aids” **6** menu items.
 - Press the **ENTER** button **4** on the steering wheel to change a menu item.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

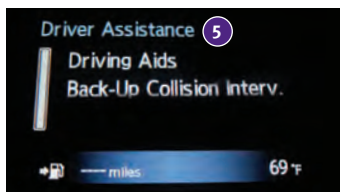

Approaching Vehicle Sound for Pedestrians (VSP)

- The VSP system helps alert pedestrians to the presence of the vehicle when it is being driven at a low-speed.
- When the vehicle starts to move, it produces a sound. The sound stops when the vehicle speed reaches approximately 19 mph (30 km/h) while accelerating.
- This sound will activate again when decelerating to a speed of less than 16 mph (25 km/h).

For more information, refer to the “**HEV Overview (section HEV)**” of your Owner’s Manual.

Direct Response Hybrid™ Warning Light and Hybrid Awareness

DIRECT RESPONSE HYBRID WARNING LIGHT

- This light will illuminate when the ignition switch is in the ON position and will extinguish when the hybrid system is started.
- The light will also illuminate when a malfunction occurs in the electric motor or hybrid system.
- When this light illuminates while driving, immediately stop the vehicle in a safe location and contact an INFINITI retailer.
- If the hybrid system warning light blinks while driving, it may indicate that the Li-ion battery charge is low and you cannot continue to drive.



HYBRID AWARENESS

- Your vehicle is virtually silent in the electric mode. If you exit your vehicle while it is on but the engine is not running, the engine will automatically start, informing you that the car is still on.
- Do not store your Infiniti Intelligent Key within the detection range of the vehicle. This may cause welcome lights and other functions to activate, creating unwanted battery drain.
- The hybrid system is designed for optimum efficiency and performance. Activation of the electric mode may vary with driving conditions and driver input. A full battery display does not indicate the vehicle should be in the electric mode.

For more information, refer to the “HEV Overview (section HEV)” and the “Instruments and controls (section 2)” of your Owner’s Manual.

Tire Pressure Monitoring System (TPMS) with Tire Inflation Indicator

- A **Tire Pressure Low - Add Air** warning message will appear in the vehicle information display **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.
- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- When adding air to an under-inflated tire, the TPMS with Tire Inflation Indicator provides visual and audible signals to help you inflate the tire to the recommended COLD tire pressure.



To use the Tire Inflation Indicator:

1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
2. Place the ignition switch in the ON position. Do not start the hybrid system.
3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.

essential information

 
4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop flashing.
 5. Repeat this procedure for any additional under-inflated tires.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **Tire Pressure Low - Add Air** warning message and low tire pressure warning light ② will extinguish.
 - When the low tire pressure warning light ② flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended you visit an INFINITI retailer for this service.
 - Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light ② to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
 - The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 9)" of your Owner's Manual for the location of the Tire and Loading Information label.

For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**" and the "**Maintenance and do-it-yourself (section 8)**" of your Owner's Manual.

Loose Fuel Cap and Fuel-filler Door

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will appear in the vehicle information display ① when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the reset button ② on the steering wheel is pressed for about 1 second.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.

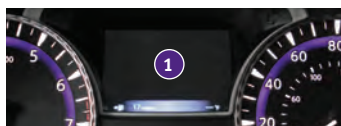

FUEL-FILLER DOOR

The fuel-filler door is located on the driver's side of the vehicle.

- The fuel-filler door automatically locks or unlocks when the driver's door is locked or unlocked.
- To open the fuel-filler door, push the right side of the fuel-filler door and release.



For more information, refer to the "**Instruments and controls (section 2)**" and the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

Towing Your Vehicle

 
- All-Wheel Drive (AWD) vehicle
 - An all-wheel drive vehicle must be towed with all wheels off the ground even if the vehicle is placed in the Front Wheel Drive (FWD) mode.
- For proper towing and to avoid accidental damage to your vehicle, INFINITI recommends that a service operator tow your vehicle after carefully reading the Owner's Manual precautions.

For more information, refer to the “**In case of emergency (section 6)**” of your Owner's Manual.

Accessing the Front Cup Holders

- To open the cup holders, push the lid **1** down and release.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner's Manual.

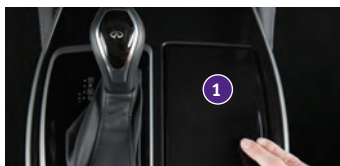

Front Armrest/Center Console Storage Box

- To access the top storage bin, pull up on the driver's side **UPPER** lever **1**.
- To access the bottom storage bin, pull up on the passenger's side **LOWER** lever **2**.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner's Manual.



Clock Set/Adjustment

- To adjust the time and the appearance of the clock on the display:

1. Press the **SETTING** button on the control panel.
2. Select the “Others” key.
3. Select the “Clock” key.

- The following settings can be adjusted:

- **On-screen Clock:** The clock in the upper right corner of the display can be turned ON or OFF.
- **Clock Format (24h):** The clock can be set to 12 hours or 24 hours.
- **Offset (hour):** The time can be adjusted by increasing or decreasing per hour.
- **Offset (min):** The time can be adjusted by increasing or decreasing per minute.
- **Daylight Savings Time:** The application of Daylight Savings Time can be turned ON or OFF.
- **Time Zone:** Adjust the time zone. Choose a time zone from the available list.
- Press the **BACK** button to return to the previous screen.

 


For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.


first drive features

Around View® Monitor (AVM) with Moving Object Detection (MOD) (if so equipped)


- With the ignition switch in the ON position, the Around View Monitor® is activated by pressing the **CAMERA** button **1**, located on the control panel, or by moving the shift lever to the **R (REVERSE)** position. The control panel displays various views of the position of the vehicle.
- When the shift lever is in the **P (PARK)**, **N (NEUTRAL)** or **D (DRIVE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

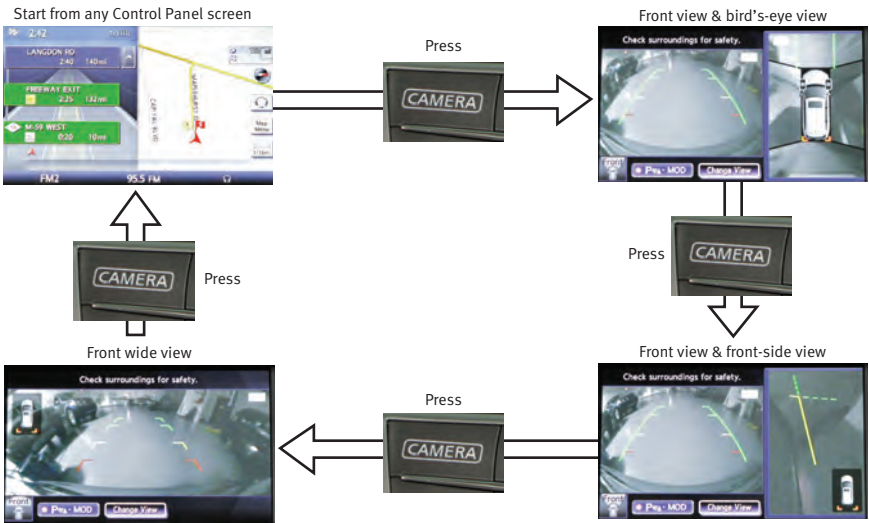

 - When the shift lever is in the **R (REVERSE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

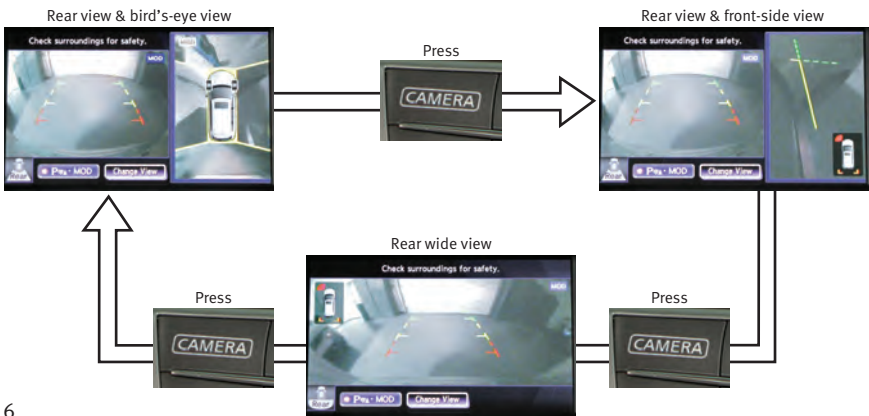


- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).
- There are some areas where the system will not show objects.
 - When in the front or the rear view display, an object below the bumper or on the ground may not be viewed **2**.
 - When in the bird's-eye view, a tall object near the seam of the camera viewing areas **3** will not appear in the monitor.
- The distance between objects viewed on the Around View Monitor differs from the actual distance.
- Objects in the bird's-eye view will appear further than the actual distance.

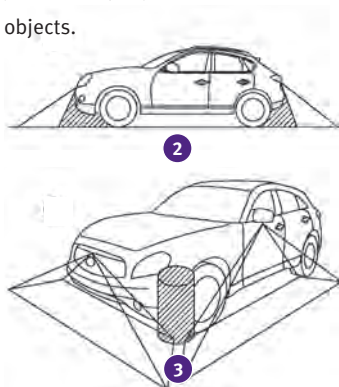 

MOVING OBJECT DETECTION (MOD)

 - If the MOD system detects moving objects surrounding the vehicle, a yellow frame **1** will be displayed on the camera image and a chime will sound.
- In the bird's-eye view, a yellow frame is displayed on those camera images (front, rear, right, left) where moving objects are detected.
- When the following are displayed:
 - Blue **MOD** icon **2**; the system is operative in this view.
 - Gray **MOD** icon **3**; the system is not operative in this view.
 - No **MOD** icon; the system is off.
- To temporarily turn the system on or off, touch the MOD key **4**.

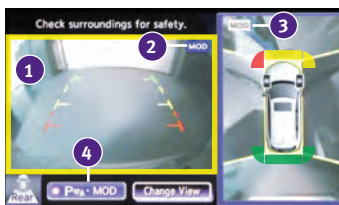

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual.

first drive features

Infiniti Intelligent Key System

The Infiniti Intelligent Key system allows you to lock or unlock your vehicle, open your liftgate and remotely start the hybrid system. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

LOCKING AND UNLOCKING THE VEHICLE

- The lock and unlock operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **1** once or press the **L** button **2** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **1** once; the corresponding door will unlock. Push the door handle request switch **1** again within 1 minute; all other doors will unlock, or
 - Press the **L** button **4** on the key fob to unlock the driver's side door. Press the **L** button **4** again; all other doors will unlock.



REMOTE HYBRID SYSTEM START* (if so equipped)

- The remote hybrid system start must be enabled in the vehicle settings within the vehicle information display.
- The remote hybrid system start operating range is approximately 200 ft (60 m) from the vehicle. The effective operating range may be shorter due to environmental conditions or obstacles between you and the vehicle.
- For the remote hybrid system start to function, the vehicle must be in the **P (PARK)** position with the ignition off and all the doors closed and locked.
- To start your vehicle remotely:
 1. Press the **L** button **2**.
 2. Within 5 seconds, press and hold the remote hybrid system start **Ω** button **3** for at least 2 seconds.
- The hybrid system will start, and the parking lights will turn on.
- Automatic climate control will begin heating or cooling the vehicle depending on the outside ambient temperature.
- The hybrid system will run for 10 minutes and then turn off.
- Repeat steps 1 and 2 to extend the time for an additional 10-minute period.
 - After two remote starts, the ignition switch must be cycled before the remote start can be used again.
- To start driving, depress the brake pedal and press the ignition switch **START/STOP** button.



*Laws in some communities may restrict the use of remote starters. Check local regulations before using this feature.

LIFTGATE RELEASE

 
- To open the rear liftgate, press the  button **5** for longer than 1 second.
- To close the rear liftgate, press the  button **5** again for longer than 1 second.

PANIC ALARM

- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **6** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.

INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the hybrid system according to the following procedure:
 1. Move the shift lever to the **P (PARK)** position.
 2. Firmly apply the foot brake.
 3. Touch the ignition switch with the Intelligent Key and a chime will sound.
 4. Within 10 seconds after the chime sounds, press the ignition switch **START/STOP** button while depressing the brake pedal and the hybrid system will start.

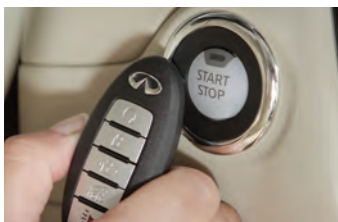

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**”, the “**Starting and driving (section 5)**” and the “**Maintenance and do-it-yourself (section 8)**” of your Owner’s Manual.

Infiniti Connection™ * (if so equipped)

 
Infiniti Connection™ combines personalized convenience, concierge settings and personal security features to compliment the Total Ownership Experience®. For more details on Infiniti Connection or to enroll your vehicle, please visit www.InfinitiConnection.com or call 855-444-7244.

To access Infiniti Connection:

1. Press the **INFO** button **1** on the control panel.
2. Select the “Infiniti Connection” key **2** on the display.

Available services include:

- Automatic Collision Notification – In case of air bag deployment, a signal is sent containing the vehicle location and customer information to notify the proper authorities.
- Emergency Call – This service provides emergency assistance by connecting the subscriber to an Infiniti Connection Specialist.

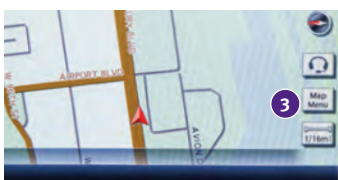

*INFINITI Connection™ is only available on vehicles equipped with an optional INFINITI Connection™ subscription service.

first drive features

- In case of an emergency, press the in-vehicle telematics **SOS** button **4**.
- A Response Specialist will provide assistance based on the situation described by the vehicle's occupant.
- Enhanced Roadside Assistance – Roadside Assistance can be accessed by touching the “Infiniti Connection” key **2** on the Info menu or the  key **3** on the map screen.
- This service allows subscribers to receive assistance for a non-emergency incident, such as towing, or a third party response.
- My Schedule – Access your personal online Google Calendar™, hear details read via text-to-speech** and select a location as a destination via the Navigation System.
- Report Stolen Vehicle – A Response Specialist will attempt to obtain location information from a reported stolen vehicle and provide that information to a local law enforcement agency.
- Remote Door Lock/Unlock – Remotely access your vehicle via an Infiniti Connection Response Specialist or the designated website to remotely lock or unlock your vehicle.
- Alarm Notification – This system will notify you when the factory-installed vehicle alarm system has been activated.
- Scheduled Maintenance Notification – Receive scheduled maintenance notifications based on mileage data provided by your vehicle.
- Maintenance Alert – Receive notification of a vehicle system malfunction that triggers instrument panel warning lights.
- Destination Assistance – Receive point-of-interest assistance via a guided IVR (Interactive Voice Response) or a Response Specialist by pressing the  key **3** on the map screen or the Infiniti Connection™ web portal.
- Destination Send-to-Vehicle – Find and download point-of-interest information from Google Maps™ mapping service.
- Connected Search – Select “Connected Search” from the Destination menu on the vehicle's Navigation System to conduct a point-of-interest search within a certain distance of the vehicle's location.
- Drive Zone – Monitor the movement of your vehicle within a specified region. Set up boundaries in the Monitoring section of the Infiniti Connection™ web portal.
- Max Speed Alert – Set a maximum speed on the Infiniti Connection™ web portal. You will receive notifications if your vehicle exceeds the maximum speed setting.
- Mobile Information Service – Receive the latest news headlines, stock quotes and sports scores by setting up preferences on the Mobile Information Service page in the Infiniti Connection™ web portal.
- Valet Alert – Use to set up a 0.2-mile radius around your vehicle.



**Laws in some communities may restrict the use of text-to-speech. Check local regulations before using this feature.

- Activate alerts by pressing the “Connect to Voice Menu” key on the “Infiniti Connection” screen or by pressing the  key **3** on the map screen.
- At the prompt, say “Valet Alert” and then “Activate” or “Deactivate”.

Driving is serious business. Only use Infiniti Connection™ and Infiniti Connection Plus services when safe to do so. Services, including automatic crash notification and SOS, require an active subscription and are dependent upon the telematics device being in an operative condition, its ability to connect to a wireless network, compatible wireless network availability, navigation map data, and GPS satellite signal receptions, the absence of which can limit or prevent the ability to reach Infiniti Connection Customer Care or receive support. Services require compatible 2G GSM/GPRS cellular network provided by AT&T. 2G cellular network not available in all areas and/or available at all times. Cellular technology is evolving, and changes to cellular networks provided by independent companies are not within Infiniti’s control. **AT&T has announced that on December 31, 2016 AT&T will terminate 2G network availability. AT&T has advised that, if purchased/leased vehicle prior to March 31, 2016, you must enroll by March 31, 2016 to have the services on the 2G network through December 31, 2016.** Like other devices that rely on 2G network coverage, once the 2G network is terminated, Infiniti Connection and Infiniti Connection Plus services will not function unless equipment replacements, upgrades, or alternative 2G network coverage are available at that time, which Infiniti cannot guarantee. Infiniti is not responsible for associated costs that may be required for continued operation due to cellular network termination (including equipment upgrades, if available, or roaming charges on alternative networks). Certain vehicle services, including Google® compatible services, provided by independent companies are not within Infiniti’s control and are subject to change without notice or liability to Infiniti and its affiliates and agents. Complimentary 12-month subscription begins on your date of purchase. Subsequently, your credit card (if on file) will be charged at the then current subscription rate and your service will continue for 1-year periods under the terms of your Subscription Agreement, or until 2G coverage is terminated on December 31, 2016 (if equipment upgrades or roaming charges are not available by that date). Text rates and/or data usage may apply.

For more information, refer to the “**Viewing technical information (section 7)**” of your Navigation System Owner’s Manual.

INFINITI Mobile Entertainment System (MES) (if so equipped)

- With this entertainment system, you can play video files via a DVD or CD, providing images and sound from the front and rear display screens.

WATCHING A DVD

1. Insert a DVD into the DVD slot **1**.
2. The DVD will play automatically.
 - To watch or control videos on the front display, make sure the vehicle is in the **P (PARK)** position and the parking brake is applied.



REAR DISPLAYS

- To turn the rear displays on or off from the front seats:
 1. Press the **SETTING** button **2** on the control panel.
 2. Select the “Rear Display” key on the display.
 3. Toggle the “L” (left) or “R” (right) display **3** ON or OFF.
- To access standard DVD controls on the front display while playing a DVD on the rear display, press the **DISC•AUX** button on the control panel while the vehicle is in the **P (PARK)** position and the parking brake is applied.
- To turn the rear displays on or off from the rear seats:
 1. Select the desired seat by sliding the **DISPLAY SELECT** switch **4** on the remote control to the **L** (left) or **R** (right) position.
 2. Press the **POWER**  button **5** on the remote control.



first drive features

- To control the DVD from the rear seats, use the remote control.

OPERATING TIPS

 
- You can also connect auxiliary devices, such as video games, camcorders or portable video players, to the auxiliary jacks. (Your device will be controlled through its own control panel.)
- Rear Auxiliary Mode allows rear seat passengers to independently display different sources on each screen.
- Use the headphones, also provided with the system, to listen to audio wirelessly and independently.
- For the best audio sound quality, please make sure you are facing the monitor directly in front of you.
- To reduce driver distraction, movies will not be shown on the front display while the vehicle is in any drive position.



For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

Power Liftgate

- When the liftgate is closed and locked, the liftgate will open automatically by:
 - Pushing the power liftgate switch **1** on the instrument panel.
 - Pushing the liftgate opener switch **2**; the liftgate must be unlocked, or you must have the Intelligent Key with you (that is, in your pocket or purse).
 - Pressing the  button **3** on the Infiniti Intelligent Key for more than 1 second.
- The power liftgate operation can be turned on or off by the power liftgate main switch **4** on the instrument panel.
 - When the power liftgate main switch **4** is pushed to the **OFF** position, power operation is not available using the liftgate close switch **5** or the liftgate opener switch **2**.

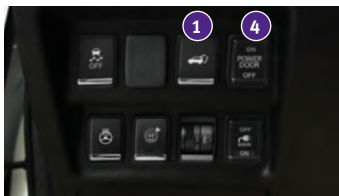

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

Power Seat Adjustments

- To slide the seat forward or backward, push the  switch **1** forward or backward.
- To recline the seatback, push the  switch **2** forward or backward.



SEAT LIFTER

- To raise or lower the front portion or height of the seat, push the front or back end of the  switch **1** up or down.

POWER LUMBAR SUPPORT (if so equipped for driver's seat)

- To adjust the seat lumbar support, push the front or back end of the  switch **3**.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"** of your Owner's Manual.

2nd Row Seats

- To slide the seat forward or backward, pull the center of the bar **1** up and hold it while you slide the seat forward or backward to the desired position. Release the bar to lock the seat in position.
- To recline the seatback, pull up on the recline handle **2** and lean back. To bring the seatback forward, pull the recline handle up and lean your body forward. Release the recline handle to lock the seatback in position.



MULTI-MODE/CHILD SEAT ACCESS FUNCTION

- This feature is not available on the driver's side of the 2nd row seat.
- If a child safety seat is installed on the passenger's side of the 2nd row seat, the 3rd row can be accessed without removing the child safety seat.
- To access the 3rd row from outside the vehicle, lift up on the seatback release lever **3**.

EZ ENTRY MODE

- To enter the 3rd row from outside the vehicle, lift up fully on the seatback release lever **3**. This will release the back of the seat and fold up the seat cushion.
- For access to the rear seat, slide the entire seat forward by pushing on the upper seatback area.
- To return the seat to a locked position, push the upper seatback rearward until the seatback and track are locked. Push the seat cushion down. Locking the seatback will also lock the track.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"** of your Owner's Manual.

first drive features

3rd Row Manual Reclining Seatback

- To recline the seatback, pull up on the latch **1** located on the outside corner of each seatback. Lean back until the desired angle is obtained.
- To bring the seatback forward again, pull up on the latch **1** and move your body forward. The seatback will move forward.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.



3rd Row Manual Folding Seats

- The 3rd row seats can be folded flat for maximum cargo hauling or extra storage space.
- Before folding down the 3rd row seats:
 - The vehicle’s shift lever must be in the **P (PARK)** or **N (NEUTRAL)** position.

MANUAL SEAT FOLD DOWN

- To fold the 3rd row seats flat:
 1. Pull the strap to release the head restraint forward **1**.
 2. Stow the 3rd row seat belts in the seat belt hooks **2** found in the cargo area.
 3. Pull up on the latch located on the corner of each seatback and lower the seatback forward over the seat base **3**.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.



Assist Charge Gauge

- This shows the power consumed **2** or generated **1** by the electric motor.

For more information, refer to the “**HEV Overview (section HEV)**” and the “**Instruments and controls (section 2)**” of your Owner’s Manual.



Automatic Drive Positioner (if so equipped)

- Two positions for the driver's seat, steering column and outside mirrors can be stored in the automatic drive positioner **1** memory.
- Follow this procedure to set the memory positions:
 - Confirm the shift lever is in the **P (PARK)** position.
 - Push the ignition switch to the ON position.
 - Adjust the driver's seat, steering column and outside mirrors to the desired positions using the adjusting switches for each feature.
 - Push the **SET** switch, and within 5 seconds, push the memory switch (**1** or **2**).
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds, and a chime will sound (if so equipped) when the memory is stored correctly.
 - The driver's seat, steering column and outside mirror positions are now set to your preferences.
- These memorized positions can also be linked to your Infiniti Intelligent Key. To link a memorized position to your Infiniti Intelligent Key, press the unlock button on the key fob after completing the previous step.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

Outside Mirror Control Switch

- To select the right or left side mirror, move the control switch **1** right or left.
- Adjust each mirror to the desired position using the control switch **2**.
- To fold the outside rearview mirrors, push the control switch **3** to the  position. To unfold the outside rearview mirrors, push the control switch **3** to the  position.



REVERSE TILT-DOWN FEATURE (if so equipped)

- The reverse tilt-down feature will turn both outside mirror surfaces downward to provide better rear visibility close to the vehicle.
 1. Push the ignition switch to the ON position.
 2. Choose the right or left outside mirror by operating the control switch **1**.
 3. Move the shift lever to the **R (REVERSE)** position.
 4. The outside mirror surfaces will move downward. (The control switch **1** must be out of the center [neutral] position.)
- The outside mirror surfaces will return to their original positions when one of the following conditions has occurred:
 - The shift lever is moved to any position other than **R (REVERSE)**.
 - The control switch **1** is set to the center (neutral) position.
 - The ignition switch is placed in the OFF position.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

first drive features

Starting/Stopping the Hybrid System

- It is important to make sure the Infiniti Intelligent Key is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Press the ignition switch **START/STOP** button to start the hybrid system.



TURNING THE HYBRID SYSTEM OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Press the ignition switch **START/STOP** button to turn the hybrid system off.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

Headlight Control Switch

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.



AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then push the ignition switch to ON. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  position **1** or  position **2**.



HIGH BEAM SELECT

- With the headlights ON (either in the **AUTO** or  position), push the headlight control switch forward **4** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.

FOG LIGHT SWITCH

- The headlights must be switched to **AUTO** or the low beams  must be selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **6** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.



LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

 
Choose the appropriate method to signal a lane change based on the road and traffic conditions.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

Wiper and Washer Switch

- Move the lever to one of the following positions to operate the windshield wipers:

- 1** Mist (**MIST**) – One sweep operation of the front wipers.
- 2** Auto (**AUTO**) – Operates the speed-sensing and rain-sensing (if so equipped) front wipers intermittently. To increase or decrease wiper sensitivity, twist the control ring **3**.
- 4** Low (**LO**) – Front wipers operate at a continuous low-speed.
- 5** High (**HI**) – Front wipers operate at a continuous high-speed.
- 6** Pull the lever toward you to activate the front washer. The front wipers will operate several times.

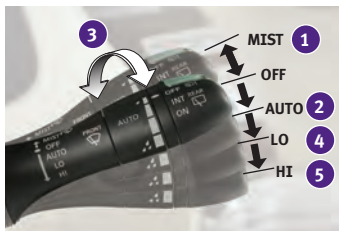

REAR WIPER AND WASHER

- 7** Intermittent (**INT**) – Rear wiper operates intermittently.
- 8** Low (**ON**) – Rear wiper operates at a continuous low-speed.
- 9** Push the lever forward to activate the rear washer. The rear wiper will operate several times.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

first drive features



Heater and Air Conditioner (automatic)

1 AUTO BUTTON

- The auto mode may be used year-round. Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.

2 CLIMATE BUTTON

- Press the **CLIMATE** button to adjust your automatic climate controls using the climate settings on the control panel display screen.

3 DRIVER'S SIDE TEMPERATURE CONTROL BUTTONS

- Press the driver's side temperature control buttons up ▲ for warmer air or down ▼ for cooler air.

4 DRIVER'S SIDE MANUAL AIR FLOW CONTROL BUTTON

- Press the driver's side manual air flow control button to manually control the driver's side air flow modes.
- The following air flow modes will display on the control panel display screen:
 - Air flows from the center and side vents.
 - Air flows from the center, side and foot vents.
 - Air flows mainly from the foot vents.
 - Air flows from the front defroster and foot vents.

5 PASSENGER'S SIDE TEMPERATURE CONTROL BUTTONS

- To manually adjust the passenger's side temperature, press the passenger's side temperature control buttons up ▲ for warmer air or down ▼ for cooler air.

6 DUAL BUTTON

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by pressing the passenger's side temperature control buttons.

7 FAN SPEED CONTROL BUTTONS

- Press the left 🌀 button to decrease the fan speed or press the right 🌀 button to increase the fan speed.

8 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front defroster button  to turn the system on. The A/C automatically turns on when the front defroster mode is selected. This feature removes humidity from the air.
- To defrost the front and side windows, set the temperature controls **3** and fan speed controls **7** to their maximum settings.

9 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS

- Push the rear window defroster switch  **REAR** to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

10 REAR AIR CONDITIONER

- To control the rear automatic air conditioning system with the front air conditioner control panel:
 - Turn on the front climate control system by pressing the **AUTO** button **1**.
 - Press the **REAR** button.
- When the rear automatic air conditioning system is on, the indicator light on the **REAR** button will illuminate and the front display will switch to the “Rear Air-conditioning” screen. Use the driver’s temperature and fan speed buttons to adjust the settings.
- To adjust the front air conditioning system, press the **REAR** button again.
- To turn off the rear automatic air conditioning system from the front controls, press the **REAR** button until the “Rear Air-conditioning” screen is displayed. Then press the **OFF** button **12**.
- The rear controls are unavailable when the “Rear Air-conditioning” screen is shown on the front display.



11 AIR RECIRCULATION BUTTON

- Press the intake air control  button to recirculate interior air inside the vehicle. The  indicator light on the button will illuminate. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode .
- Press the intake air control  button again to change the air circulation from the intake air to the outside air. The  indicator light on the button will extinguish.

12 OFF BUTTON

- Press the **OFF** button to turn the climate control system off.

 
For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

first drive features

Rear Climate Controls

- To activate the system:

1. Turn on the front climate control system by pressing the **AUTO** button **1**.
2. Press the **REAR** button **2** on the front control panel until the “Rear Air-conditioning” screen is displayed.

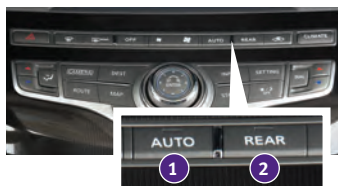

- The indicator light will illuminate.
- The **OFF** **3**, fan speed **4**, temperature **5** and **AUTO** **6** buttons will now control the rear climate control system.

3. Press the **REAR** button **2** again, and the screen will return to what was previously displayed.

- The indicator light will stay illuminated to indicate that the rear climate control system is active.



- **OFF** button **3** – Turns off the rear climate control system and **REAR** button indicator light.
- Fan speed control buttons **4** – Press **+** or **-** to increase or decrease fan speed.
- Temperature increase and decrease buttons **5** – Adjust the rear temperature up **▲** or down **▼**.
- **AUTO** button **6** – The system automatically works to keep air flow and fan speed at a constant temperature.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



FM/AM/SiriusXM®* Satellite Radio with CD/DVD Player (if so equipped)

1 ON•OFF BUTTON/VOL (volume) CONTROL KNOB

- Press the **ON•OFF** button to turn the system on or off.
- Turn the **VOL** (volume) control knob right or left to increase or decrease the volume.

2 AUDIO BUTTON/TUNE/FOLDER KNOB

- Press the **AUDIO** button to access the audio “Settings” screen.
- To manually tune the radio, turn the **TUNE/FOLDER** knob left or right.

*SiriusXM® Satellite Radio is only available on vehicles equipped with an optional satellite radio subscription service.

3 SEEK•CAT/TRACK BUTTONS

- To scan quickly and stop at the previous or next broadcast station, press the ◀◀ or ▶▶ end of the **SEEK•CAT/TRACK** button.
- For satellite radio, press the ◀◀ or ▶▶ end of the **SEEK•CAT/TRACK** button to switch to the first channel of the previous or next category.
- To change tracks on a CD, press the ◀◀ or ▶▶ end of the **SEEK•CAT/TRACK** button.
- To rewind or fast forward a track on a CD, press and hold the ◀◀ or ▶▶ end of the **SEEK•CAT/TRACK** button.

4 STATION PRESET BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM•AM** 5 or **XM** 6 button, then tune to the desired FM, AM or satellite radio station.
- Next press and hold the desired station preset button (1-6) until the preset number is updated on the display and the sound is briefly muted. The channel indicator will then display, and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (1-6).

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

Conventional (Fixed Speed) Cruise Control

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **CRUISE ON/OFF** switch 1 on the steering wheel. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch 2 on the steering wheel and release. The **SET** indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch 3 on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch 2 on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch 4 on the steering wheel.
- To turn off cruise control, push the **CRUISE ON/OFF** switch 1 on the steering wheel. Both the **CRUISE** indicator light and the **SET** indicator light in the instrument panel will extinguish.



 
For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

first drive features

Intelligent Cruise Control (ICC) (if so equipped)

VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set Vehicle-To-Vehicle Distance Control mode, press the **CRUISE ON/OFF** button **1** on the steering wheel for less than 1.5 seconds. The **CRUISE** indicator light **2** will illuminate.
- Accelerate to the desired speed.
- Push down on the **COAST/SET** switch **3** on the steering wheel and release it. Cruise control will be set to the desired speed.
- Press the distance button **4** on the steering wheel repeatedly to change the set distance between long, middle and short.
- When a vehicle is not detected ahead of you in the lane, the set distance and set vehicle speed indicator lights will illuminate **5** in set mode.
- When a vehicle is detected ahead of you in the lane, the vehicle ahead detection, set distance and set vehicle speed indicator lights will illuminate **6** in set mode.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **7** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **3** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **8** on the steering wheel or tap the brake pedal. The set vehicle speed indicator **5** will extinguish.
- To turn off cruise control, press the **CRUISE ON/OFF** button **1** on the steering wheel. The **CRUISE** indicator light **2** in the instrument panel will extinguish.



To set conventional (fixed speed) cruise control mode:

- While cruise control is off, press the **CRUISE ON/OFF** button **1** on the steering wheel and hold it down for more than 1.5 seconds. The **CRUISE** indicator light will illuminate.
- Accelerate to the desired speed.
- Push down on the **COAST/SET** switch **3** on the steering wheel and release it. The **SET** indicator light will illuminate. Cruise control will be set to the desired speed.

To switch between the two cruise control modes:

- When one of the two cruise modes is in use, you must turn the system off, and then turn it on again to select the other cruise control mode.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

USB (Universal Serial Bus) Connection Port/iPod® Interface

- The USB port **1** is located in the center console under the armrest.
- When a compatible USB memory device or iPod® is plugged into the USB port, compatible audio and video files stored on the device can be played through the vehicle's audio system and front display.

 
For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.



Power Outlets


12V OUTLETS

- The power outlets are for powering electrical accessories such as cellular phones. They are rated at 12V, 120W (10A) maximum.
- To use a power outlet, open the cap.
- The power outlets on the control panel **1**, inside the center console **2**, on the back of the center console **3** and in the cargo area **4** are powered only when the ignition switch is in the ACC or ON position.



120V OUTLET (if so equipped)

 - The 120V outlet **5** is located on the back of the center console.
- To use the outlet for devices that require 120V power, place the ignition switch in the ON position and push the power inverter switch **6**.
- The switch will illuminate when enabled.

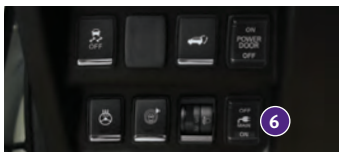

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.

system guide

Vehicle Information Display

The vehicle information display **1** displays items such as:

- Vehicle settings
- Trip computer information
- Energy flow meter
- Drive system warnings and settings (if so equipped)
- Cruise control system
- Intelligent Cruise Control (ICC) (if so equipped) information
- Intelligent Key operation information
- Indicators and warnings
- Tire pressure information

USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display modes can be changed using the  button **2** and **ENTER** button **3** on the steering wheel.

1. Press the  button **2** on the steering wheel to enter the vehicle information display menu items.
2. Press the  button **4** on the steering wheel to navigate through the items in the vehicle information display.
3. Press the **ENTER** button **3** on the steering wheel to change or select an item in the vehicle information display.
4. Press the  button **5** on the steering wheel to go back to the previous menu.

START-UP DISPLAY

When the ignition switch is placed in the ON or ACC position, the screens that display in the vehicle information display include:

- Active system status (if so equipped)
- Tire pressure information
- Fuel economy
- Trip computer
- Warnings (displays when a warning is present)

 
RESETTING THE TRIP COMPUTER

1. Press the  button **2** on the steering wheel until you reach the trip computer mode **6**.
2. Press the  button **2** on the steering wheel again for more than 1.5 seconds to reset average fuel consumption, average speed, distance to empty and journey time.

SETTINGS

The setting mode allows you to change the information displayed in the vehicle information display:

- Driver Assistance (if so equipped)
- Main Menu Selection
- Maintenance
- Unit
- Vehicle Settings
- Body Color
- Alarms
- Welcome Effects
- Language
- Factory Reset

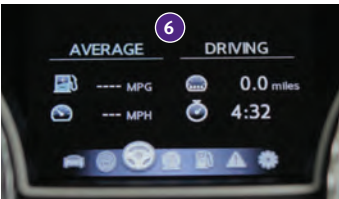


For more information, refer to the “Instruments and controls (section 2)” of your Owner’s Manual.

Bluetooth® Hands-free Phone System

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

 - If the Voice Recognition system does not recognize your voice commands:
 1. Be sure to wait for the tone/beep before speaking a command.
 2. Reduce background noise as much as possible by closing the windows and moonroof.
 3. Make sure there are no other conversations in the vehicle at the same time.
 4. Lower HVAC blower fan speed and point vents away from the ceiling microphone.
 5. Speak naturally. Speaking too fast, too slow, too soft, or too loud makes voice recognition more difficult.
 6. Confirm that the correct voice commands are being used. Glance at the screen to see the currently available commands.
 7. Train the system using the Voice Adaptation Mode. See your Owner's Manual for detailed information.
- Press the  or  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- For vehicles not equipped with Navigation:
 - To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  or  on the steering wheel button, and after the tone, say "Call Redial".
- For vehicles equipped with Navigation:
 - Refer to the "Voice recognition (section 9)" of your Navigation System Owner's Manual for more information.
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- When speaking phonebook names, please be aware some cellular phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".

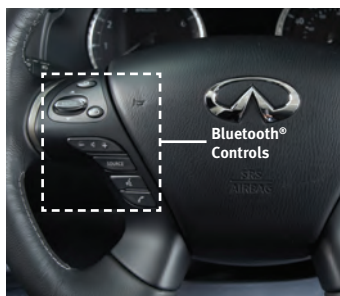

*Some jurisdictions prohibit the use of cellular telephones while driving.

 
system guide

- To cancel a Voice Recognition session, say “Cancel” or “Quit” or press and hold the  or  button on the steering wheel for 5 seconds.
- To go back to the previous command, say “Go back” or “Correction”.
- For more detailed information and instructions, refer to your cellular phone’s Owner’s Manual and visit www.InfinitiUSA.com/bluetooth.

Bluetooth® System without Navigation (if so equipped)

CONNECTING PROCEDURE

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say: “Connect Phone”. The system acknowledges the command and announces the next set of available commands.
3. Say: “Add Phone”. The system acknowledges the command and asks you to initiate connecting from the cellular phone handset.
4. Initiate connecting from the cellular phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.InfinitiUSA.com/bluetooth.
 - When prompted for a PIN, enter “1234” from the handset. (The PIN is assigned by INFINITI and cannot be changed.)
 - For cellular phones that support Simple Secure Pairing (SSP), confirm that the PIN on the vehicle display matches the PIN displayed on the cellular phone.
5. Say the name of the cellular phone when the system asks you to provide one. You can give the cellular phone a name of your choice.

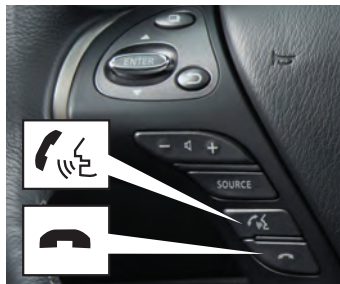

PHONEBOOK

- Depending on your cellular phone, the system may automatically download the entire phonebook. For more information, please visit www.InfinitiUSA.com/bluetooth or refer to the cellular phone’s Owner’s Manual.
- If the phonebook does not download automatically, 40 entries can be individually downloaded.
- To manually download entries:
 1. Press the  button on the steering wheel.
 2. After the tone, say “Phonebook”.
 3. After the next tone, say “Transfer Entry”.
 4. Using the cellular phone, select an entry to send to the vehicle. Please consult the website above or your cellular phone’s Owner’s Manual for specific steps to transfer an entry from the cellular phone to the vehicle.

5. The system will speak the transferred entry. Confirm the entry by saying “Yes” after the tone.

MAKING A CALL BY PHONEBOOK ENTRY

- In some cases, names stored using all UPPERCASE letters may not be recognized by the Voice Recognition system.
1. Press the  button on the steering wheel.
 2. After waiting for the tone, say “Call”.
 3. After the next tone, speak the name of a phonebook entry. For example, “Michael Smith”.
 4. Confirm that the correct name is recognized by saying “Dial” after the tone.

MAKING A CALL BY PHONE NUMBER

1. Press the  button on the steering wheel.
 2. After waiting for the tone, say “Call”.
 3. After the next tone, say “Phone Number”.
 4. After the next tone, say “123-456-7890”.
- You may also say the digits in groups of 3, 3 and 4, respectively. To use this group dialing method, say only the first 3 digits of the phone number instead of all 10 digits. After the system recognizes the digits, it will request the next 3 digits and finally the last 4 digits.
5. After the system speaks the correct number and sounds the tone, say “Dial”.

 
RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button on the steering wheel.
- To hang up, press the  button on the steering wheel.

Bluetooth® System with Navigation (if so equipped)

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the cellular phone.
1. Press the **SETTING** button on the control panel and select the “Bluetooth” key on the display.

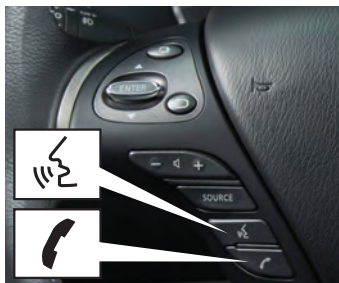


system guide

2. Select the “Connect Bluetooth” key.
3. A pop-up box will appear on the screen, prompting you to confirm that the connection is for the cellular phone system. Select the “Yes” key.
4. Initiate connecting from the cellular phone.

- The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.InfinitiUSA.com/bluetooth.
- When prompted for a PIN, enter “1234” from the handset. (The PIN is assigned by INFINITI and cannot be changed.)
- For cellular phones that support Simple Secure Pairing (SSP), confirm that the PIN on the vehicle display matches the PIN displayed on the cellular phone.

 
5. When connecting is complete, the screen will return to the Bluetooth® “Settings” screen.

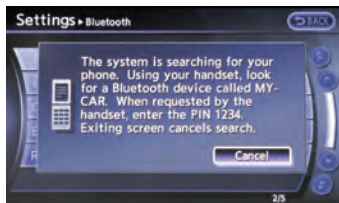

- Some cellular phones may require you to accept certain permissions in order to enable features on your Bluetooth® system. During the Bluetooth® pairing process, please check your cellular phone's display for a pop-up with the request to grant phonebook access.
- Granting phonebook access permission will allow your contacts to be downloaded to the vehicle's Bluetooth® system. A pop-up may display on your cellular phone stating that the Bluetooth® system would like to access your contacts and call history. Please select “Allow” or “Yes” to grant this permission. If your cellular phone presents the option to not show the message again, please make sure that this item is checked. Doing so will ensure that any changes to your phonebook will be synced with the Bluetooth® system automatically.


PHONEBOOK SETUP

 - Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, the vehicle phonebook may be set for up to 1,000 entries.

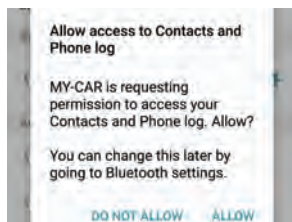

- To manually download entries:

 1. Press the  button on the steering wheel and select the “Quick Dial” key.
2. Select the “Add New” key at the top of the display. There are different methods to input a phone number. Select one of the following options:
 - “Copy from Call History” to save a number from the Outgoing, Incoming or Missed Calls lists.
 - “Copy from the Handset” to save a number that has been downloaded from your handset to the vehicle.
 - “Enter Number by Keypad” to input the number and name manually.

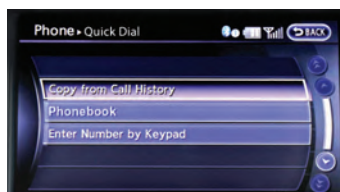

MAKING A CALL

To make a call, follow this procedure:

1. Press the  button on the steering wheel. The “Phone” menu will appear on the control panel display screen.
2. Select the “Quick Dial”, “Call History”, “Phonebook” or “Dial Number” key.
3. Select the desired entry from the list.
4. Dialing begins when the entry is selected or when the “OK” key is selected.



RECEIVING/ENDING A CALL

 
 
 
- To accept the call, press the  button on the steering wheel or touch the “Answer” key.
- To reject the call, touch the “Reject Call” key.
- To hang up, press the  button on the steering wheel or touch the “Hang up” key.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual or please visit www.InfinitiUSA.com/bluetooth.



Bluetooth® Streaming Audio with Navigation (if so equipped)

- If you have a compatible Bluetooth® device with streaming audio (A2DP and AVRCP profiles), you can set up the wireless connection between your Bluetooth® device and your vehicle's audio system. This connection allows you to listen to audio from the Bluetooth® device using your vehicle's speakers.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*
- To use your connected Bluetooth® device to stream audio, it will need to be connected as an audio device. The following procedure will initially connect a Bluetooth® device as an audio player and allow you to switch between devices.
 1. Press the **SETTING** button on the control panel and touch the "Bluetooth" key on the display.
 2. Select "Connected Devices".
 3. Select "Audio Player".
 4. Select the name of the device that you are attempting to connect as an audio player.
 5. Select "Select".
 6. Verify that the system confirms that the device has been selected as an audio player.
- Once your Bluetooth® device has been connected as an audio device, press the **DISC•AUX** button on the control panel to select the Bluetooth® Streaming Audio player.
- Bluetooth® connectivity issues can usually be resolved with a reboot of your cellular phone if you do not regularly turn off your cellular phone. Otherwise, try updating your cellular phone with the latest software.

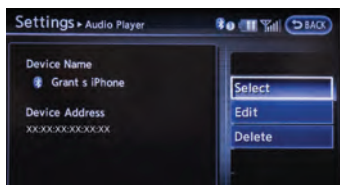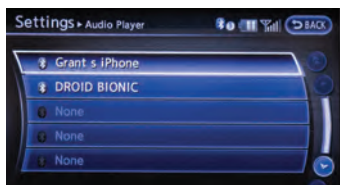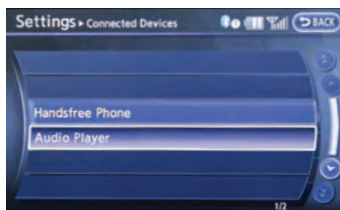

*Some jurisdictions prohibit the use of cellular telephones while driving.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual or visit www.InfinitiUSA.com/bluetooth.



Navigation System (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.

SYSTEM OPERATION

 
- Move through the menus and on-screen keys by sliding or rotating the Infiniti controller **1** to highlight an item on the screen and pressing the **ENTER** button **2** to select the highlighted item, or touch the desired key on the touch-screen display.
- Press the **BACK** button **3** to return to the previous screen. In a "Settings" screen, this button can also be used to apply the setting. In a character input screen, this button can also delete the characters that have been entered.
- Press the **MAP** button **4** to display the map. While following a programmed route, press multiple times to change the type of route information.
- To display the vehicle, traffic (if so equipped), weather (if so equipped) or Voice Recognition information, press the **INFO** (information) button **5**.
- Press the **OFF** button **6** to switch between the day screen (bright) and the night screen (dark). Press and hold the button to turn the display off. Press again to turn the display on.
- To display the system settings, press the **SETTING** button **7**.

system guide

SETTING A ROUTE


- To set a route, first ensure that the correct region is selected on the touch-screen.

- Press the **DEST** (destination) button **8** on the control panel.
- Select the “Change Region” key **9**.
- Select the preferred region.

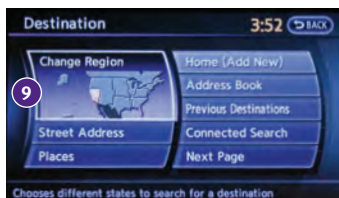

- Once this is complete, select your destination:

 - Press the **DEST** (destination) button **8** on the control panel.
- Select the preferred destination setting method.
- Enter the address number, street name, and city as prompted by the screen.

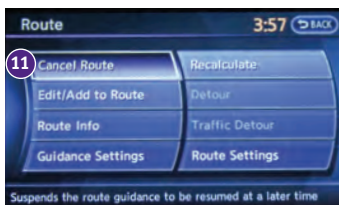

CANCELING A ROUTE

- Press the **ROUTE** button **10** on the control panel.
- Select the “Cancel Route” key **11**.

ZOOMING IN AND OUT

- On the map screen, turn the Infiniti controller **1** right or left to zoom in or out.

MOVING AROUND THE MAP

- To scroll the map, slide the Infiniti controller **1** in the direction you want to scroll.

CHANGING THE MAP VIEW

- It is possible to switch between two different map views: 2D and bird's-eye view (3D).

- To switch to the preferred map view:

 
- With the map displayed, press the **ENTER** button **2** on the control panel.
- Select the “Change View” key **12** to change the view to 2D or bird's-eye view (3D).
- Select the “Map Settings” key **13** to change the orientation of the map.



VOICE GUIDANCE

- To activate voice guidance:

- Press the **ROUTE** button **10** on the control panel.
- Select the “Guidance Settings” key **14**.
- To ensure that voice guidance is activated, select the “Guidance Voice” key **15**.
The indicator illuminates if voice guidance is activated.

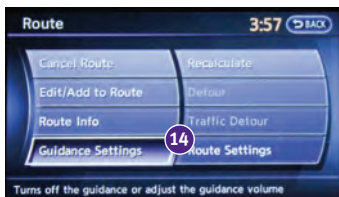

- To adjust the guidance volume, select the

- “Guidance Volume” key **16**.

- To hear the current guidance during a programmed route, press the **VOICE** button **17**.





HomeLink® Universal Transceiver

- The HomeLink® Universal Transceiver system can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programming is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink button, press and release the “learn” or “smart” button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to three times to complete the programming process. HomeLink should now activate your device.

For more information, refer to the **“Instruments and controls (section 2)”** of your Owner's Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.



INFINITI.



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- **Vehicle Owner's Manual**
- **Infiniti Client Support**
1-800-662-6200
Support is always available if your Infiniti retailer cannot assist you or you would like to provide Infiniti directly with comments or questions.
- **Infiniti Roadside Assistance**
1-800-662-6200 (option 1)
As part of the Infiniti Total Ownership Experience®, Roadside Assistance is available to you, 24 hours a day 365 days a year, for emergency roadside assistance.
- **Infiniti Elite® Extended Protection Program**
1-800-662-6200
Infiniti Elite® Assurance Products provide you with quality long-term protection and enhanced peace of mind.
- **Infiniti Financial Services Client Support**
1-800-627-4437
For client support with your Infiniti Financial Services loan or lease.
- **Infiniti Financial Services**
www.infinitifinance.com
Use the IFS Online Account Manager to check your account status, schedule recurring payments and access important forms.
- **Owner Portal**
1-855-444-7244
www.owners.InfinitiUSA.com/iowners
Your Infiniti Owner Portal account contains your personal preferences, vehicle information and links to key vehicle features and services.
- **Infiniti Connection™**
1-800-334-7858
www.InfinitiUSA.com/intouch/connection
The suite of digital alerts and remote services is your direct link to personal security, convenience and confidence.
- **SiriusXM Radio**
1-877-447-0011
For support with your SiriusXM subscription.
- **Infiniti USA.com**
www.InfinitiUSA.com/bluetooth
Reference this site for a list of compatible cellular phones and instructions on how to pair your cellular phone to your vehicle.
- **Infiniti Electronic Quick Reference Guide**
(use Quick Response (QR) code or URL below)



To view detailed instructional videos, go to www.infinitiownersinfo.mobi/2016/qx60 or snap this barcode with an appropriate barcode reader.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. INFINITI reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, INFINITI may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by INFINITI to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the INFINITI website at <https://owners.infinitiusa.com/iowners/navigation/manualsAndGuides>. If you have questions concerning any information in your Owner's Manual, contact INFINITI Client Support (see contact information listed above).