

2016 Infiniti QX80

Quick Reference Guide



INFINITI.



- | | |
|--|---|
| 1 INSTRUMENT BRIGHTNESS CONTROL SWITCH* | 12 POWER LIFTGATE MAIN SWITCH* |
| 2 TRIP COMPUTER SWITCHES | 13 HOOD RELEASE* |
| 3 HEADLIGHT AND TURN SIGNAL SWITCH | 14 CONTROL PANEL DISPLAY SCREEN* |
| 4 WIPER AND WASHER SWITCH | 15 AUDIO SYSTEM |
| 5 STEERING WHEEL SWITCHES FOR AUDIO*/
BLUETOOTH®/NAVIGATION | 16 HEATER AND AIR CONDITIONER (automatic) |
| 6 CRUISE CONTROL | 17 CLIMATE-CONTROLLED SEAT SWITCHES* |
| 7 POWER LIFTGATE SWITCH | 18 TIP-UP 2 ND ROW SEAT SWITCHES |
| 8 WARNING SYSTEMS SWITCH* | 19 HEATED STEERING WHEEL SWITCH* |
| 9 BACKUP COLLISION INTERVENTION
(BCI) SWITCH* | 20 POWER OUTLET* |
| 10 TILT/TELESCOPIC STEERING WHEEL SWITCH* | 21 FRONT PASSENGER AIR BAG STATUS LIGHT* |
| 11 DYNAMIC DRIVER ASSISTANCE SWITCH* | 22 FOUR-WHEEL DRIVE (4WD) SHIFT SWITCH* |

*See your Owner's Manual for information.

new system features

Around View® Monitor with Moving Object Detection (MOD)	2
Blind Spot Warning (BSW) and Blind Spot Intervention® (BSI) (if so equipped)	2

essential information

Tire Pressure Monitoring System (TPMS) with Tire Inflation Indicator.	3
Loose Fuel Cap	4
Fuel-filler Door	4
Clock Set/Adjustment	5

first drive features

Infiniti Connection™	6
Theater Package (if so equipped)	8
INFINITI Intelligent Key System	9
Power Liftgate	10
Front Seat Adjustments	11
Automatic Drive Positioner	11
2 nd Row Seats	12
3 rd Row Power Folding Seats	13
Outside Mirror Control Switch	14
Starting/Stopping the Engine	14
Headlight Control	15
Wiper and Washer Switch	16
Heater and Air Conditioner (automatic)	17
Rear Heater and Air Conditioner	18
FM/AM/SiriusXM® Satellite Radio with CD/DVD Player.	19
Conventional (Fixed Speed) Cruise Control (if so equipped)	20
Intelligent Cruise Control (ICC) (if so equipped)	21

system guide

Trip Computer	22
Bluetooth® Hands-free Phone System	22
• System Operating Tips	22
Bluetooth® Streaming Audio	25
Navigation System	26
HomeLink® Universal Transceiver	28



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.



To view detailed instructional videos, go to www.infinitiownersinfo.mobi/2016/qx80 or snap this barcode with an appropriate barcode reader.



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.InfinitiUSA.com.

new system features

Around View® Monitor with Moving Object Detection (MOD)

- MOD operates only with the Around View® Monitor activated.
- To temporarily turn the system on or off, select the “MOD” key on the bottom of the control panel display.
- When the **CAMERA** button is pressed and the vehicle speed is less than 6 mph (10 km/h) or the shift lever is moved to the **R (REVERSE)** position, the display screen will automatically change to view the area surrounding the vehicle.
- With the Around View® Monitor displayed, the corner sonar system can detect objects near the vehicle and warn the driver by sounding a tone and showing an indicator on the display screen.



For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

Blind Spot Warning (BSW) and Blind Spot Intervention® (BSI) (if so equipped)

- The BSW system alerts the driver when another vehicle moves into the vehicle’s detection zone.
- An indicator light located near the outside mirrors **1** will illuminate if the radar sensors detect a vehicle in the detection zone.
- Push the warning systems switch **2** to temporarily turn the system off. When the system is off, the indicator light **3** on the switch is off.
- The indicator light **3** will also be off if all of the warning systems are deactivated using the Settings menu.
- The indicator light **3** will illuminate after the ignition switch is placed in the ON position and the BSW system is enabled.




For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

Tire Pressure Monitoring System (TPMS) with Tire Inflation Indicator

- A **CHECK TIRE PRESSURE** warning message will appear in the vehicle information display **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.
 - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- When adding air to an under-inflated tire, the TPMS with Tire Inflation Indicator provides visual and audible signals to help you inflate the tire to the recommended COLD tire pressure.
- To use the Tire Inflation Indicator:
 1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
 2. Place the ignition switch in the ON position. Do not start the engine.
 3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop.
 5. Repeat this procedure for any additional under-inflated tires.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **CHECK TIRE PRESSURE** warning message and low tire pressure warning light **2** will extinguish.
- When the low tire pressure warning light **2** flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by an INFINITI retailer.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 9)" of your Owner's Manual for the location of the Tire and Loading Information label.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Maintenance and do-it-yourself (section 8)" of your Owner's Manual.

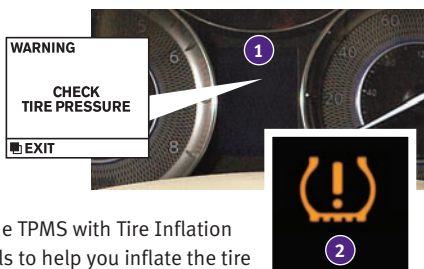

essential information

Loose Fuel Cap

- A **LOOSE FUEL CAP** warning message will appear in the vehicle information display **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the reset button **2** is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light **SERVICE ENGINE SOON** may illuminate.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



Fuel-filler Door

The fuel-filler door is located on the driver’s side of the vehicle.

- When the doors of the vehicle are locked or unlocked, the fuel-filler door is automatically locked or unlocked at the same time.
- To open the door once it is unlocked, push the right side of the door.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



Clock Set/Adjustment

DIGITAL CLOCK ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:
 1. Press the **SETTING** button on the control panel.
 2. Touch the “Others” key.
 3. Touch the “Clock” key.
- The following settings can be adjusted:
 - **On-screen Clock:** The clock in the upper right corner of the display can be turned on or off.
 - **Clock Format (24h):** The clock can be set to 12 hours or 24 hours.
 - **Offset (hour):** The time can be adjusted by increasing or decreasing per hour.
 - **Offset (min):** The time can be adjusted by increasing or decreasing per minute.
 - **Daylight Savings Time:** The application of Daylight Saving Time can be turned ON or OFF.
 - **Time Zone:** Adjust the time zone to one of the following:
 - Pacific • Atlantic • Mountain • Newfoundland
 - Central • Hawaii • Eastern • Alaska
- Select the **BACK** key to return to the previous screen.



ANALOG CLOCK ADJUSTMENT

- To set the clock backward, press the button **1**.
- To set the clock forward, press the button **2**.
- To move forward or backward faster, press and hold the button for more than 5 seconds.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



first drive features

Infiniti Connection™*




Infiniti Connection™ combines personalized convenience, concierge settings and personal security features to compliment the Total Ownership Experience®. For more details on Infiniti Connection or to enroll your vehicle, please visit www.InfinitiConnection.com or call 855-444-7244.

To access Infiniti Connection™:

1. Press the **INFO** button **1** on the control panel.
2. Select the “Infiniti Connection” key **2** on the display.

Available services include:

- Infiniti Personal Assistant – To access Infiniti Personal Assistant, select “Connect to Voice Menu” from the Infiniti Connection menu or touch the key **3** on the map screen. At the voice prompt, say “Infiniti Personal Assistant” to be connected.
- Your Infiniti Personal Assistant can send destination information directly to your vehicle.
- Automatic Collision Notification – In case of air bag deployment, a signal is sent containing the vehicle location and customer information to notify the proper authorities.
- Emergency Call – This service provides emergency assistance by connecting the subscriber to an Infiniti Connection Specialist.
 - In case of an emergency, press the in-vehicle telematics **SOS** button **4**.
 - A Response Specialist will provide assistance based on the situation described by the vehicle’s occupant.
- Enhanced Roadside Assistance – Roadside Assistance can be accessed by touching the “Infiniti Connection” key **2** on the Info menu, the **ENTER** key **3** on the map screen.
 - This service allows subscribers to receive assistance for a non-emergency incident, such as towing, or a third party response.
- My Schedule – Access your personal online Google Calendar™, hear details read via text-to-speech** and select a location as a destination via the Navigation System.

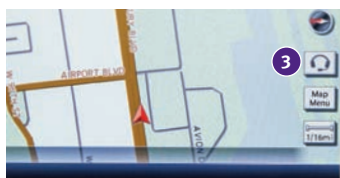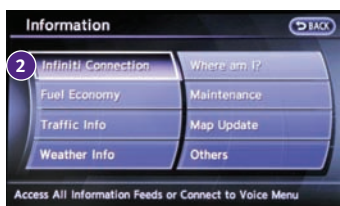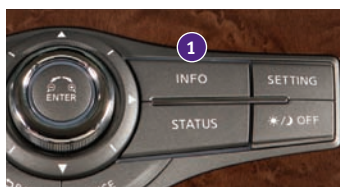

*Infiniti Connection™ is only available on vehicles equipped with an optional Infiniti Connection™ subscription service.

**Laws in some communities may restrict the use of text-to-speech. Check local regulations before using this feature.

- Report Stolen Vehicle – A Response Specialist will attempt to obtain location information from a reported stolen vehicle and provide that information to a local law enforcement agency.
- Remote Door Lock/Unlock – Remotely access your vehicle via an Infiniti Connection Response Specialist or the designated website to remotely lock or unlock your vehicle.
- Alarm Notification – This system will notify you when the factory-installed vehicle alarm system has been activated.
- Scheduled Maintenance Notification – Receive scheduled maintenance notifications based on mileage data provided by your vehicle.
- Maintenance Alert – Receive notification of a vehicle system malfunction that triggers instrument panel warning lights.
- Destination Assistance – Receive point-of-interest assistance via a guided IVR (Interactive Voice Response) or a Response Specialist by pressing the  key **3** on the map screen or the Infiniti Connection™ web portal.
- Destination Send-to-Vehicle – Find and download point-of interest information from Google Maps™ mapping service.
- Connected Search – Select “Connected Search” from the Destination menu on the vehicle’s Navigation System to conduct a point-of-interest search within a certain distance of the vehicle’s location.
- Drive Zone – Monitor the movement of your vehicle within a specified region. Set up boundaries in the Monitoring section of the Infiniti Connection™ web portal.
- Max Speed Alert – Set a maximum speed on the Infiniti Connection™ web portal. You will receive notifications if your vehicle exceeds the maximum speed setting.
- Mobile Information Service – Receive the latest news headlines, stock quotes and sports scores by setting up preferences on the Mobile Information Service page in the Infiniti Connection™ web portal.
- Valet Alert – Use to set up a 0.2-mile radius around your vehicle.
 - Activate alerts by pressing the “Connect to Voice Menu” key on the Infiniti Connection screen or by pressing the  key **3** on the map screen.
 - At the prompt, say “Valet Alert” and then “Activate” or “Deactivate”.

For more information, refer to the **“Viewing technical information (section 7)”** of your Navigation System Owner’s Manual.

first drive features

Theater Package (if so equipped)

- With this entertainment system, you can play video files via a DVD or CD, providing images and sound both from the front and rear display screens.

WATCHING A DVD


1. Insert a DVD into the DVD slot **1**.
2. The DVD will play automatically.
 - To watch or control videos on the front display, make sure the vehicle is in the **P (PARK)** position and the parking brake is applied.

REAR DISPLAYS

- To turn the rear displays on or off from the front seats:
 1. Press the **SETTING** button **2** on the control panel.
 2. Select the “Rear Display” key on the display.
 3. Toggle the “L” (Left) or “R” (Right) Display **3** on or off.
- To access standard DVD controls on the front display while playing a DVD on the rear display, press the **DISC•AUX** button on the control panel while the vehicle is in the **P (PARK)** position and the parking brake is applied.
- To turn the rear displays on or off from the rear seats:
 1. Select the desired seat by sliding the **DISPLAY SELECT** switch **4** on the remote control to the **L** (Left) or **R** (Right) position.
 2. Press the **POWER** **5** button on the remote control.
- To control the DVD from the rear seats, use the remote control.

OPERATING TIPS

- You can also connect auxiliary devices, such as video games, camcorders or portable video players, to the auxiliary jacks. (Your device will be controlled through its own control panel.)
- Rear Auxiliary Mode allows rear seat passengers to independently display different sources on each screen.
- Use the headphones, also provided with the system, to listen to audio wirelessly and independently.
- For the best audio sound quality, please make sure you are facing the monitor directly in front of you.
- To reduce driver distraction, movies will not be shown on the front display while the vehicle is in any drive position.

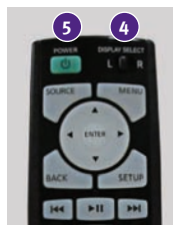

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

INFINITI Intelligent Key System

The INFINITI Intelligent Key system allows you to lock or unlock your vehicle, open your liftgate and start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

LOCKING AND UNLOCKING YOUR VEHICLE



- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **1** once or press the **lock** button **2** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **1** once; the corresponding door will unlock. Push the door handle request switch **1** again within 1 minute; all other doors will unlock, or
 - Press the **lock** button **3** on the key fob to unlock the driver's side door. Press the **unlock** button **3** again; all other doors will unlock.
- To open the liftgate, press the **HOLD** button **4** for more than 1 second.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the **panic** button **5** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.



REMOTE ENGINE START*


- The remote engine start system must be enabled in the vehicle settings within the vehicle information display.
- The remote engine start operating range is approximately 200 ft (60 m) from the vehicle. The effective operating range may be shorter due to environmental conditions or obstacles between you and the vehicle.
- For the remote engine start to function, the vehicle must be in the **P (PARK)** position with the ignition off and all of the doors closed and locked.
- To start your vehicle remotely:
 1. Press the **lock** button **2**.
 2. Within 5 seconds, press and hold the remote engine start **button** **6** for at least 2 seconds.
- The engine will start, and the parking lights will turn on.
- Automatic climate control will begin heating or cooling the vehicle depending on the last used mode.
- The engine will run for 10 minutes and then turn off.
- Repeat steps 1 and 2 to extend the time for an additional 10-minute period.
 - After two remote starts, the ignition switch must be cycled before the remote start can be used again.
- To start driving, depress the brake pedal and press the ignition switch **START/STOP** button.

*Laws in some communities may restrict the use of remote starters. Check local regulations before using this feature.

first drive features

INTELLIGENT KEY BATTERY DISCHARGE


- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Move the shift lever to the **P (PARK)** position.
 2. Firmly apply the foot brake.
 3. Touch the ignition switch with the Intelligent Key, and a chime will sound.
 4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.

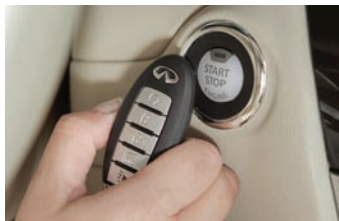

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**”, the “**Starting and driving (section 5)**” and the “**Maintenance and do-it-yourself (section 8)**” of your Owner’s Manual.

Power Liftgate


- When the liftgate is closed and locked, the liftgate will open automatically by:
 - Pushing the power liftgate switch **1** on the instrument panel.
 - Pushing the liftgate opener switch **2**; the liftgate must be unlocked, or you must have the Intelligent Key with you (that is, in your pocket or purse).
 - Pressing the  button **3** on the INFINITI Intelligent Key for more than 1 second.
- The power liftgate operation can be turned on or off by the power liftgate main switch **4** on the instrument panel.
 - When the power liftgate main switch **4** is pushed to the **OFF** position, power operation is not available using the power liftgate switch located on the lower part of the liftgate or the liftgate opener switch **2**.

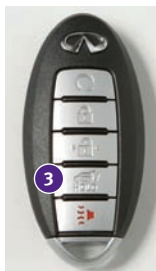

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

Front Seat Adjustments

- To slide the seat forward or backward, push the  switch **1** forward or backward.
- To recline the seatback, push the  switch **2** forward or backward.

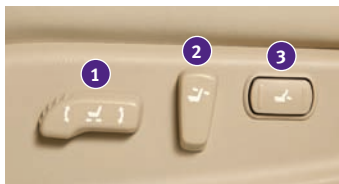

SEAT LIFTER

- To raise or lower the front portion or height of the seat, push the front or back end of the  switch **1** up or down.

LUMBAR SUPPORT

- To adjust the seat lumbar support, push the front or back end of the  switch **3**.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

Automatic Drive Positioner

- Two positions for the driver’s seat, steering column and outside mirrors can be stored in the automatic drive positioner memory.
- Follow this procedure to set the memory positions:
 - Confirm the shift lever is in the **P (PARK)** position.
 - Push the ignition switch to the ON position.
 - Adjust the driver’s seat, steering column and outside mirrors to the desired positions using the adjusting switches for each feature.
 - Push the **SET** switch, and within 5 seconds, push the memory switch (**1** or **2**) for at least 1 second.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds.
 - The driver’s seat, steering column and outside mirror positions are now set to your preferences.
- These memorized positions can also be linked to your INFINITI Intelligent Key. To link a memorized position to your INFINITI Intelligent Key, press the unlock button on the key fob after completing the previous step.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

first drive features


2nd Row Seats

- The 2nd row seat can be tipped forward for easy entry to or exit from the 3rd row seat and can be folded flat for maximum cargo hauling/extra storage space.

TIPPING THE 2ND ROW SEATS FORWARD FOR ENTRY TO THE 3RD ROW



MANUAL CONTROLS

1. Lift up on the seatback release latch **1** or the reclining lever **2**. The seatback will tip forward.
2. Lift up on the lower rear corner of the seat bottom and tip the seat forward.

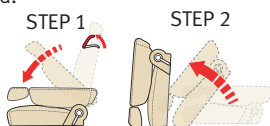


To return the 2nd row seat to the standard position:

1. Push back on the seat to return it to its original position and lock it in place.
2. Pull up and push back on the seatback to lock it in place.
3. Use the seat reclining lever **2** to adjust the seat to the desired position.

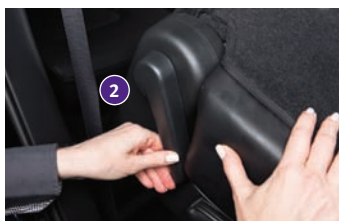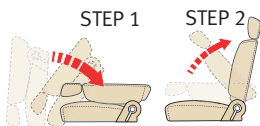

POWER REMOTE CONTROLS (if so equipped)

- To fold down and tip forward the 2nd row seatback, push and hold the remote tip-up 2nd row seat switch **3** located on the instrument panel.
- The lower corner of the seat base will lift and the 2nd row seat will tip forward.

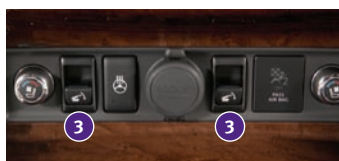

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

3rd Row Power Folding Seats

- The 3rd row seats can be folded flat for maximum cargo hauling or extra storage space.
- Before folding down the 3rd row seats:
 - Apply the parking brake.
 - The shift lever must be in the **P (PARK)** or **N (NEUTRAL)** position.
 - Place the seat belt buckles in the storage of the seat cushion **1** to avoid dropping them under the seat cushion or causing damage to your leather seats.
 - Disconnect and secure the center seat belt and tongues into the retractor base **2**.
 1. To release the seat belt connector tongue, insert a suitable tool (a key, for example) into the opening on the side of the connector buckle.
 2. Retract the seat belt up to the retractor base located in the rear ceiling storage area.
 3. Insert the seat belt tongue into the fabric sleeve so that it will lay flat.
 4. Secure the connector tongue into the retractor base.
 5. Always reconnect the center seat belt when the seat is returned to the upright position.
 - Make sure that there are no objects on the seat cushion.
 - Lower the 3rd row head restraints.
- To lower the seat, push and hold the front portion **3** of the right or left 3rd row power folding seat switch.
- To return the seat to an upright position, push the back portion **4** of the right or left 3rd row power folding seat switch.



For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

first drive features

Outside Mirror Control Switch

- Move the control switch **1** right or left to select the right or left side mirror.
- Adjust each mirror to the desired position using the switch **2**.
- Move the switch **1** to the center (neutral) position to prevent accidentally moving the mirror.



POWER FOLDING OUTSIDE MIRRORS

- To fold the outside rearview mirrors, push the switch **3** to the  position. To unfold the outside rearview mirrors, push the switch **3** to the  position.
- If the mirrors are manually operated or bumped, the mirror body can become loose at the pivot point.
- To correct the electronic mirror operation, cycle mirrors by pushing the outside rearview mirror folding switch **3** to the  position until it is completely closed, then push the switch **3** to the  position until the mirror is completely open.

REVERSE TILT-DOWN FEATURE

- When backing up the vehicle, the right or left outside mirror will turn downward automatically to provide better rear visibility.
 1. Push the ignition switch to the ON position.
 2. Move the shift lever to the **R (REVERSE)** position.
 3. Choose the right or left outside mirror by operating the outside mirror control switch **1**.
 4. The outside mirror surface will move downward.
- When one of the following conditions has occurred, the outside mirror surface will return to its original position:
 - The shift lever is moved to any position other than **R (REVERSE)**.
 - The outside mirror control switch **1** is set to the center (neutral) position.
 - The ignition switch is pushed to the OFF position.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

Starting/Stopping the Engine

- It is important to make sure the INFINITI Intelligent Key is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Press the ignition switch **START/STOP** button to start the engine.



TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Press the ignition switch **START/STOP** button to turn the engine off.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

Headlight Control

- Turn the headlight control switch to the  position **1** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.



AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then push the ignition switch to ON. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  position **1** or  position **2**.

HIGH BEAM SELECT

- With the headlights on (either in the **AUTO** or  position), push the headlight control switch forward **4** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.




HIGH BEAM ASSIST

- The High Beam Assist system will operate when the vehicle is driven at approximately 22 mph (35 km/h) and above. If an oncoming vehicle or leading vehicle appears in front of your vehicle when the high beam is on, the headlights will automatically be switched to the low beam.
- Following the procedure below only activates the High Beam Assist system. This does not necessarily turn on the high beam even if there is no other traffic. Both ambient light and traffic conditions have to be correct for the high beam to illuminate.
- To activate High Beam Assist, turn the headlight control switch to the **AUTO** position **3** and push the headlight control switch forward **4** to turn on the high beam. The High Beam Assist indicator light  will illuminate.

FOG LIGHT SWITCH

- The headlights must be on and the low beams selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **6** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

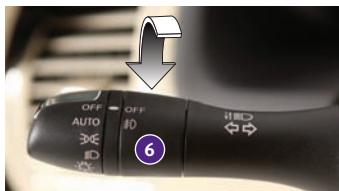

first drive features

LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash 3 times.

Choose the appropriate method to signal a lane change based on the road and traffic conditions.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

Wiper and Washer Switch


- Move the lever to one of the following positions to operate the windshield wipers:

- 1 Mist (**MIST**) — One sweep operation of the front wipers.
- 2 Auto (**AUTO**) — Operates the rain-sensing wipers intermittently. To increase or decrease wiper sensitivity, twist the control ring 3.
- 4 Low (**LO**) — Front wipers operate at a continuous low-speed.
- 5 High (**HI**) — Front wipers operate at a continuous high-speed.
- 6 Pull the lever toward you to activate the front washer. The front wipers will operate several times.



REAR WIPER AND WASHER

- 7 Intermittent (**INT**) — Rear wiper operates intermittently.
- 8 Low (**ON**) — Rear wiper operates at a continuous low-speed.
- 9 Push the lever forward to activate the rear washer. The rear wiper will operate several times.

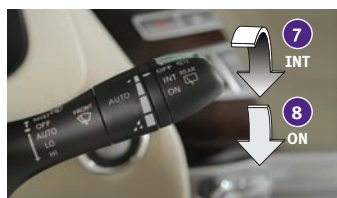

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



Heater and Air Conditioner (automatic)

1 AUTO BUTTON/TEMPERATURE CONTROL DIAL

- Press the **AUTO** button, and the system will automatically control air flow distribution and fan speed to achieve and maintain the temperature setting (automatic cooling and/or dehumidified heating).
- Turn the driver's side temperature control dial to set your desired temperature.
- Automatic mode may be used year-round and will work to reach a comfortable temperature quickly. For example on a very hot day, the system will initially operate at maximum air flow for rapid cool down.

2 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side control by turning the passenger's side control.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

3 FAN SPEED CONTROL BUTTONS

- Press the fan speed control buttons to manually decrease the fan speed  or increase the fan speed .

4 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the front defroster and foot vents.

5 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front defroster button  to turn the system on. The A/C automatically turns on when the front defroster mode is selected. This feature removes humidity from the air.
- Use the temperature control dial **1** to set the desired temperature.
- To set the front defroster on high, press the fan speed control button  to increase the fan speed to the maximum setting.

6 REAR WINDOW AND OUTSIDE MIRROR DEFROSTER SWITCH

- Push the rear window and outside mirror defroster switch  to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

first drive features

7 AUTOMATIC INTAKE AIR CONTROL

- In the automatic mode, air intake will be controlled automatically.
- This mode helps to adjust the inside vehicle temperature more effectively.
- To manually control air recirculation inside the vehicle, press the air recirculation button  8. The indicator light on the button will illuminate.
- To return to the automatic control mode, press and hold the auto-recirculation button  7 until the indicator light on the button illuminates.

9 UPPER VENT BUTTON

- When the upper vent button  is pressed, the air flow against the driver's or passenger's upper body becomes gentle. The indicator light on the button will illuminate.
- In this mode, air from the upper vent flows to control the cabin temperature without blowing air directly on the occupants.

10 A/C BUTTON

- Press the **A/C** button to manually turn the A/C on or off.
- When on, this system not only provides cooler air but also removes humidity from the air to help avoid window fogging.

11 REAR BUTTON

- This button will allow the front controls to operate the front or rear climate control systems.
- To operate the rear climate control system from the front, press the **REAR** button so that the light illuminates and the "Rear Air-conditioning" screen is displayed.
- To adjust the front climate control system, press the **REAR** button again.




For more information, refer to the "Instrument and controls (section 2)" and the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

Rear Heater and Air Conditioner

- To activate the system:
 1. Press the **REAR** button 1 on the front control panel until the "Rear Air-conditioning" screen is displayed.
 - The indicator light will illuminate.
 - The fan speed, temperature, **AUTO** and **OFF** buttons will now control the rear climate control system.
 2. Press the **REAR** button 1 again, and the screen will return to what was previously displayed.
 - The indicator light will stay illuminated to indicate that the rear climate control system is active.



- **OFF** button **2** — Turns off the rear climate control system and **REAR** button indicator light.
- Fan speed control buttons **3** — Press **+** or **-** to increase or decrease fan speed.
- Temperature increase and decrease buttons **4** — Adjusts the rear temperature up **▲** or down **▼**.
- **AUTO** button **5** — System automatically works to keep air flow and fan speed at a constant temperature.
- **MODE** button **6** — Changes the air flow mode. The air flow modes are:
 -  The air outlet is fixed at foot level.
 -  The air outlet is fixed at the head and foot level.
 -  The air outlet is fixed at the head level.

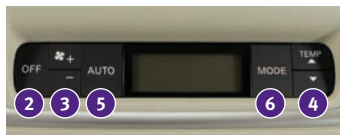

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



FM/AM/SiriusXM®* Satellite Radio with CD/DVD Player

1 ON•OFF BUTTON/VOL (volume) CONTROL KNOB

- Press the **ON•OFF** button to turn the system on or off.
- Turn the **VOL** (volume) control knob right or left to increase or decrease the volume.

2 SEEK•CAT AND TRACK BUTTONS

- To scan quickly and stop at the previous or next broadcast station, press the **◀◀ SEEK•CAT** button or the **TRACK ▶▶** button.
- For satellite radio, press the **◀◀ SEEK•CAT** button or the **TRACK ▶▶** button to switch to the first channel of the previous or next category.
- To change tracks on a CD, press the **◀◀ SEEK•CAT** button or the **TRACK ▶▶** button.
- To rewind or fast forward a track on a CD, press and hold the **◀◀ SEEK•CAT** button or the **TRACK ▶▶** button.

*SiriusXM® Satellite Radio is only available on vehicles equipped with an optional SiriusXM® Satellite Radio subscription service.

first drive features

3 AUDIO BUTTON/TUNE/FOLDER KNOB

- Press the **AUDIO** button to go to the audio settings menu.
- To manually tune the radio, turn the **TUNE/FOLDER** knob left or right.

4 STATION PRESET BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM•AM** **5** or **XM** **6** button then tune to the desired FM, AM or satellite radio station.
- Next press and hold the desired station preset button (**1-6**) until the preset number is updated on the display and the sound is briefly muted. The channel indicator will then display, and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (**1-6**).

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

Conventional (Fixed Speed) Cruise Control (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **1**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **4**.
- To turn off cruise control, push the **ON/OFF** switch **1**. The **CRUISE** indicator light in the instrument panel will extinguish.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.


Intelligent Cruise Control (ICC) (if so equipped)

- The ICC automatically maintains a selected distance from the vehicle traveling in front of you according to that vehicle's speed (up to the set speed) or the set speed when the road ahead is clear.
- This system may not function properly due to road conditions when direct sunlight, rain, mud, snow or other road spray causes the sensor to become blocked.



VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set Vehicle-To-Vehicle Distance Control mode, press the **CRUISE ON/OFF** button **1** on the steering wheel for less than 1.5 seconds. The indicator light **2** will illuminate.
- Accelerate to the desired speed.
- Push down on the **COAST/SET** switch **3** on the steering wheel and release it. Cruise control will be set to the desired speed.
- Press the distance button **4** on the steering wheel repeatedly to change the set distance between long, middle and short.
- When a vehicle is not detected ahead of you in the lane, the set distance and set vehicle speed indicator lights will illuminate **5** in set mode.
- When a vehicle is detected ahead of you in the lane, the vehicle ahead detection, set distance and set vehicle speed indicator lights will illuminate **6** in set mode.

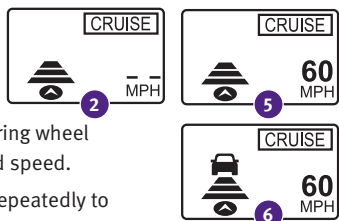

TO SET CONVENTIONAL FIXED SPEED CRUISE CONTROL MODE

- While cruise control is off, press the **CRUISE ON/OFF** button **1** on the steering wheel and hold it down for more than 1.5 seconds. The **CRUISE** indicator light will illuminate.
- Accelerate to the desired speed.
- Push down on the **COAST/SET** switch **3** on the steering wheel and release it. The **SET** indicator light will illuminate. Cruise control should be set to the desired speed.

TO SWITCH BETWEEN THE TWO CRUISE CONTROL MODES


- When one of the two cruise modes is in use, you must turn the system off and then turn it on again to select the other cruise control mode.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

system guide

Trip Computer

- When the  button **1** is pressed, the following modes will appear on the vehicle information display **2**:
 - MPG** – Displays the current and average fuel consumption since the last reset.
 - MPG/MPH** – Displays the average fuel consumption and speed since the last reset.
 - TIME/MILES** – Displays the elapsed time and distance driven since the last reset.
 - RANGE** – Displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
 - OUTSIDE TEMP** – Displays the temperature outside your vehicle.
 - SETTING** – Allows you to set reminders for alerts and maintenance intervals or change the language and units used in the system.
 - Press the  button **3** to cycle through the various setting modes.
 - Press the  button **1** to choose the selected mode.
 - WARNING** – Displays when a warning is present.
- Press the  button **3** for approximately 1 second to reset the currently displayed trip odometer to zero.

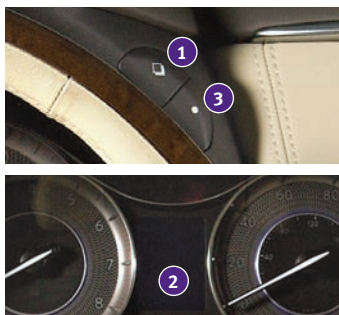

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

Bluetooth® Hands-free Phone System

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

- If the Voice Recognition system does not recognize your voice commands:
 - Be sure to wait for the tone/beep before speaking a command.
 - Reduce background noise as much as possible by closing the windows and moonroof.
 - Make sure there are no other conversations on going in the car at the same time.
 - Lower HVAC blower fan speed and point vents away from the ceiling microphone.
 - Speak naturally. Speaking too fast, too slow, too soft, or too loud makes voice recognition more difficult.
 - Confirm the correct voice commands are being used. Glance at the screen to see the currently available commands.
 - Train the system using the Speaker Adaptation Mode. See your Owner’s Manual for detailed information.





*Some jurisdictions prohibit the use of cellular telephones while driving.

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- This system has an “Alternate Command Mode” setting that allows the total number and length of prompts to be reduced. When activated, you may speak second level commands with the main menu command. For example, press the  button on the steering wheel, and after the tone, say “Call” followed by a stored name. Refer to the “Voice recognition (section 9)” of your Navigation System Owner’s Manual for more information.
- The “Help” command can be used to hear a list of available commands at any time.
- When speaking phonebook names, please be aware some cellular phones require the last name to be spoken before the first name. For example, “Michael Smith” may be spoken as “Smith Michael”.
- To cancel a Voice Recognition session, simply wait 5 seconds, say “Cancel” or “Quit” or press and hold the  button on the steering wheel for 5 seconds.
- For more detailed information and instructions, refer to your cellular phone’s Owner’s Manual and visit www.InfinitiUSA.com/bluetooth.

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the cellular phone.
1. Press the **SETTING** button on the control panel and touch the “Bluetooth” key on the display.
 2. Touch the “Connect Bluetooth” key.
 3. A pop-up box will appear on the screen, prompting you to confirm that the connection is for the cellular phone system. Touch the “Yes” key.
 4. Initiate connecting from the cellular phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.InfinitiUSA.com/bluetooth.
 - When prompted for a PIN, enter “1234” from the handset. (The PIN is assigned by INFINITI and cannot be changed.)
 - For cellular phones that support SSP (Simple Secure Pairing), confirm that the PIN on the vehicle display matches the PIN displayed on the cellular phone.
 5. When the connecting is complete, the screen will return to the “Phone” menu display.
- Some phones may require you to accept certain permissions in order to enable features on your Bluetooth® system. During the Bluetooth® pairing process, please check your cellular phone’s display for a pop-up with the request to grant phonebook access.
 - Granting phonebook access permission will allow your contacts to be downloaded to the vehicle Bluetooth® system. A pop-up may display on your phone stating that the Bluetooth® system would like to access your contacts and call history. Please select “Allow” or “Yes” to grant this permission. If your phone presents the option to not show the message again, please make sure that this item is checked. Doing so will ensure that any changes to your phonebook will be synced with the Bluetooth® system automatically.

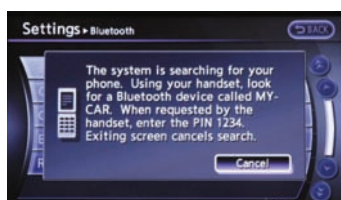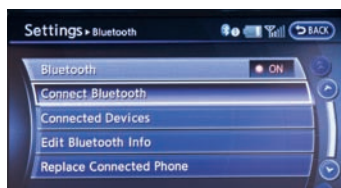

system guide



PHONEBOOK SETUP

- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, 1,000 entries can be individually downloaded.
- To manually download entries:
 1. Press the  button on the steering wheel and select the "Quick Dial" key.
 2. Select the "Add New" key at the top of the display.

There are different methods to input a phone number.

Select one of the following options:


- "Copy from Call History" to save a number from the Outgoing, Incoming or Missed Calls lists.
- "Copy from the Phonebook" to save a number that has been downloaded from your handset to the vehicle.
- "Enter Number by Keypad" to input the number and name manually.

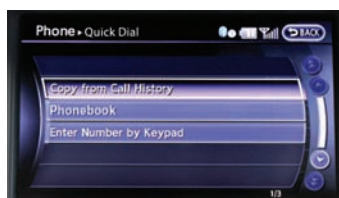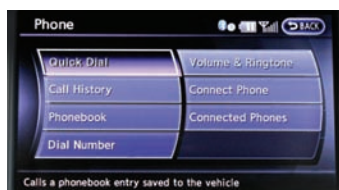

DIALING A CONTACT USING VOICE RECOGNITION

To make a call using Voice Recognition, follow this procedure:


1. Press the  button on the steering wheel. After the tone, say "Phone".
2. After the system confirms your command, wait for the tone and say "Phonebook".
3. The system will prompt you to speak a name. After the tone, say a name from your phonebook. Be aware that for some cellular phones it will be necessary to say the name in the last name, first name format.
4. The system will give you a list of close matches. After the tone, select the correct match by saying the number next to the correct match.
5. The system will confirm your selection. After the tone, say "Dial".

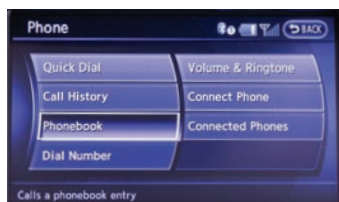

RECEIVING/ENDING A CALL




- To accept the call, press the  button on the steering wheel or touch the "Answer" key.
- To reject the call, touch the "Reject Call" key.
- To hang-up, press the  button on the steering wheel or touch the "Hang up" key.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or please visit www.InfinityUSA.com/bluetooth.

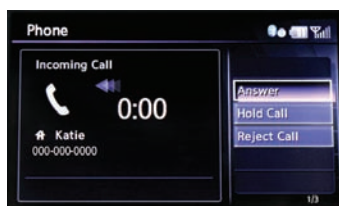

Bluetooth® Streaming Audio

- If you have a compatible Bluetooth® device with streaming audio (A2DP and AVRCP profiles), you can set up the wireless connection between your Bluetooth® device and your vehicle's audio system. This connection allows you to listen to audio from the Bluetooth® device using your vehicle's speakers.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*
- To use your connected Bluetooth® device to stream audio, it will need to be connected as an audio device. The following procedure will initially connect a Bluetooth® device as an audio player and allow you to switch between devices.
 1. Press the **SETTING** button on the control panel and touch the "Bluetooth" key on the display.
 2. Select "Connected Devices".
 3. Select "Audio Player".
 4. Select the name of the device that you are attempting to connect as an audio player.
 5. Select "Select".
 6. Verify that the system confirms that the device has been selected as an audio player.
- Once your Bluetooth® device has been connected as an audio device, push the **DISC•AUX** button on the control panel to select the Bluetooth® Streaming Audio player.
- Bluetooth® connectivity issues can usually be resolved with a reboot of your cellular phone, if you don't regularly turn off your cellular phone. Otherwise, try updating your phone with the latest software.

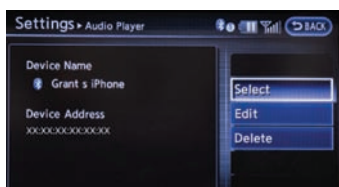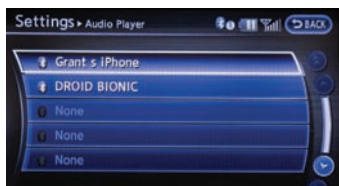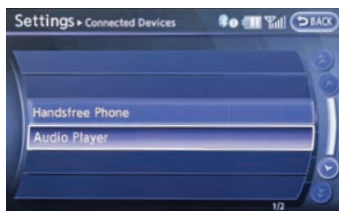

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual or visit www.InfinitiUSA.com/bluetooth.

*Some jurisdictions prohibit the use of cellular telephones while driving.



Navigation System


- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.

SYSTEM OPERATION

- Move through the menus and on-screen keys by sliding or rotating the INFINITI controller **1** to highlight an item on the screen and pressing the **ENTER** button **2** to select the highlighted item, or by touching the desired key on the touch-screen display.
- Press the **BACK** button **3** to return to the previous screen. In a settings screen, this button can also be used to apply the setting. In a character input screen, this button can also delete the characters that have been entered.
- Press the **MAP** button **4** to display the map. While following a programmed route, press multiple times to change the type of route information.
- To display the vehicle, traffic (if so equipped), weather (if so equipped) or Voice Recognition information, press the **INFO** (information) button **5**.
- Press the **OFF** button **6** to switch between the day screen (bright) and the night screen (dark). Press and hold the button to turn the display off. Press again to turn the display on.
- To display system settings, press the **SETTING** button **7**.

SETTING A ROUTE

- To set a route, first ensure that the correct region is selected on the touchscreen.
 1. Push the **DEST** button **8** on the control panel.
 2. Select the "Change Region" key **9**.
 3. Select the preferred region.

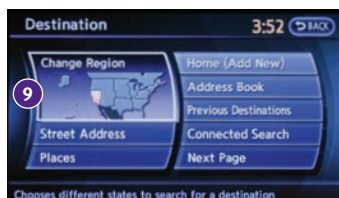

- Once this is complete, select your destination:
 - Push the **DEST** button **8** on the control panel.
 - Select the preferred destination setting method.
 - Enter the address number, street name, and city as prompted by the screen.

CANCELLING A ROUTE

- Push the **ROUTE** button **10** on the control panel.
- Select the “Cancel Route” key **11**.

ZOOMING IN AND OUT


- On the map screen, turn the INFINITI controller **1** right or left to zoom in or out.

MOVING AROUND THE MAP

- To scroll the map, slide the INFINITI controller **1** in the direction you want to scroll.


CHANGING THE MAP VIEW

- It is possible to switch between two different map views: 2D and bird’s eye view (3D).
- To switch to the preferred map view:
 - With the map displayed, press the **ENTER** button **2** on the control panel.
 - Select the “Change View” key **12** to change the view to 2D or bird’s eye view (3D).
 - Select the “Map Settings” key **13** to change the orientation of the map.

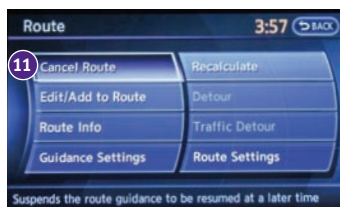

VOICE GUIDANCE


- To activate voice guidance:
 - Push **ROUTE** button **10** on the control panel.
 - Select the “Guidance Settings” key **14**.
 - To ensure that voice guidance is activated, select the “Guidance Voice” key **15**. The indicator illuminates if voice guidance is activated.
- To adjust the guidance volume, select the “Guidance Volume” key **16**.
- To hear the current guidance during a programmed route, push the **VOICE** button **17**.

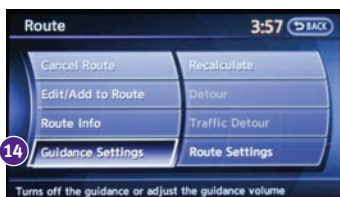

For more information, refer to your Navigation System Owner’s Manual.

HomeLink® Universal Transceiver

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programming is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink button, press and release the “learn” or “smart” button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to three times to complete the programming process. HomeLink should now activate your device.

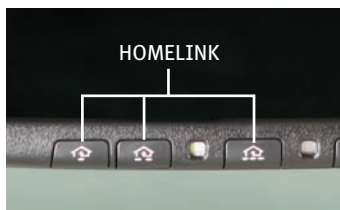

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.



INFINITI



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- **Vehicle Owner's Manual**
- **Infiniti Client Support**
1-800-662-6200
Support is always available if your Infiniti retailer cannot assist you or you would like to provide Infiniti directly with comments or questions.
- **Infiniti Roadside Assistance**
1-800-662-6200 (option 1)
As part of the Infiniti Total Ownership Experience®, Roadside Assistance is available to you, 24 hours a day 365 days a year, for emergency roadside assistance.
- **Infiniti Elite® Extended Protection Program**
1-800-662-6200
Infiniti Elite® Assurance Products provide you with quality long-term protection and enhanced peace of mind.
- **Infiniti Personal Assistant**
1-888-774-1411
www.infinitipersonalassistant.com
Infiniti Personal Assistant™ provides Infiniti owners 24-hour access to an entire team of professional live personal assistants.
- **Infiniti Financial Services Client Support**
1-800-627-4437
For client support with your Infiniti Financial Services loan or lease.
- **Infiniti Financial Services**
www.infinitifinance.com
Use the IFS Online Account Manager to check your account status, schedule recurring payments and access important forms.
- **Owner Portal**
1-855-444-7244
www.owners.infinitiusa.com/iowners
Your Infiniti Owner Portal account contains your personal preferences, vehicle information and links to key vehicle features and services.
- **Infiniti Connection™**
1-800-334-7858
www.infinitiusa.com/intouch/connection
The suite of digital alerts and remote services is your direct link to personal security, convenience and confidence.
- **SiriusXM**
1-888-601-6296
For support with your SiriusXM subscription.
- **Infiniti USA.com**
www.infinitiusa.com/bluetooth
Reference this site for a list of compatible cellular phones and instructions on how to pair your cellular phone to your vehicle.
- **Infiniti Electronic Quick Reference Guide**
(use Quick Response (QR) code or URL below)



To view detailed instructional videos, go to **www.infinitiownersinfo.mobi/2016/qx80** or snap this barcode with an appropriate barcode reader.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. INFINITI reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, INFINITI may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by INFINITI to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the INFINITI website at **<https://owners.infinitiusa.com/iowners/navigation/manualsAndGuides>**. If you have questions concerning any information in your Owner's Manual, contact INFINITI Client Support (see contact information listed above).