

# K 900

ENGLISH



CAR NAVIGATION SYSTEM OWNER'S MANUAL



The Power to Surprise

# Thank you for purchasing this DIS Navigation system.

This user's manual explains how to use the KIA Motors DIS Navigation system.

Before using the product, read the contents of this user's manual carefully and use this product safely.

- The screens shown in this manual may differ with the actual screens of the product.
- The design and specification of this product may change without prior notification for product improvement.
- When transferring the vehicle to another individual, include this user's manual so that the next driver can continue its use.



Maps for Life

 
All Map Database cannot be copied without permission.

**Important Notice:** This is protected by U.S. copyright laws. All rights not expressly granted are reserved.

You may not otherwise reproduce, modify, and distribute the content without Hyundai MnSoft, Inc's prior written consent.

# Precautions for Safety

## Notations used within this User's Manual

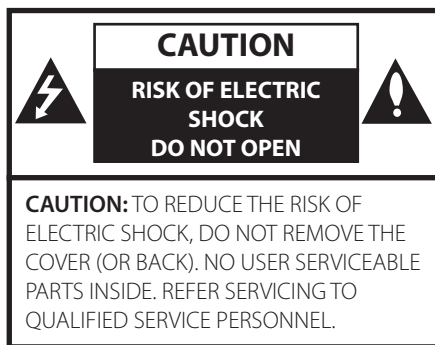

The lightning flash with the arrowhead symbol within an equilateral triangle is intended to alert the user about the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



Always operate the vehicle in a safe manner. Do not become distracted by the vehicle while driving and always be fully aware of all driving conditions. Do not change settings or any functions.

Pull over in a safe and legal manner before attempting such operations.

To promote safety, certain functions are disabled unless the parking brake is on.



To reduce the risk of electric shock, do not remove the cover or back of this product. There are no user-serviceable parts inside. Refer servicing to qualified service personnel.



To reduce the risk of fire or electric shock, do not expose this product to dripping or splashing water, rain, or moisture.



When driving your vehicle, be sure to keep the volume of the unit low enough to allow you to hear sounds coming from the outside.




Do not drop it and avoid heavy impacts at anytime.



The driver should not watch the monitor while driving. If the driver watches the monitor while driving, it may lead to carelessness and cause an accident.

# Precautions for Safety
 
## CAUTION:



This product uses a Laser System.

To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Should the unit require maintenance, contact an authorized service center. Performing controls, adjustments, or carrying out procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. DO NOT STARE INTO BEAM.

## WARNING:

- Don't use a cellular phone when you are driving. You must stop at a safe place to use a cellular phone.
- The use of the navigation radio by no means relieves the driver of his/her responsibilities. The highway code must always be observed. Always observe the current traffic situation.
- The applicable traffic regulations and the prevailing traffic situation always take precedence over the instructions issued by the navigation system if they contradict one another.
- For traffic safety reasons, use the navigation system menus only before starting a journey or when the vehicle is stationary.
- In certain areas, one-way streets and turn off and entry prohibitions (e.g. pedestrian zones) are not recorded. In areas such as these the navigation system will issue a warning. Pay particular attention to one-way streets and turn off and entry restrictions.
- The navigation system does not take the relative safety of the suggested routes into consideration. Road blocks, building sites, height or weight restrictions, traffic or weather conditions or other influences which affect the route safety or travel time are not taken into consideration for the suggested routes. Use your own discretion in order to decide on the suitability of the suggested routes.
- The current legal road traffic speed limit always takes priority over the values saved on the data. It is impossible to provide an assurance that the speed values of the navigation system will always match those of the current traffic regulations in every situation.
- Always observe the applicable legal speed limits the traffic regulations. The vehicle speedometer must always be given priority for display of the vehicle speed.
- Do not rely exclusively on the navigation system when attempting to locate an emergency service (hospital, fire service etc.). It cannot be guaranteed that all available emergency services in your vicinity are saved in the database. Use your own discretion and abilities to secure help in such situations.

# Precautions for Safety

---

## CAUTION:

- Do not keep the navigation system running with the engine stopped. Doing so may discharge the vehicle battery. When you use the navigation system, always keep the engine running.
- When the driver wants to operate the navigation system, first park the vehicle in a safe location and set the parking brake. Operating the system while driving can distract the driver and may result in a serious accident.
- Do not disassemble or modify this system. If you do, it may result in accidents, fire, or electrical shock.
- Some states/provinces may have laws limiting the use of video screens while driving. Use the system only where it is legal to do so.
- Do not use your phone in private mode when you are driving. You must stop at a safe location to use it.

## WARNING:

This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. ***Wash hands after handling.***

## FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

# Table of Contents

## Precautions for Safety 3

|                                                   |   |
|---------------------------------------------------|---|
| Notations used within this User's Manual. . . . . | 3 |
| FCC Warning. . . . .                              | 5 |

## Table of Contents 6

## General Information 13

|                                                   |    |
|---------------------------------------------------|----|
| About Disc . . . . .                              | 13 |
| Recommended Practices for Handling Discs. . . . . | 13 |
| Types of Playable Discs. . . . .                  | 13 |
| COPYRIGHTS. . . . .                               | 14 |
| DVD Region Code. . . . .                          | 14 |
| PBC: Playback Control (Video CD Only). . . . .    | 14 |
| If "Ⓢ" symbol appears. . . . .                    | 14 |
| About USB . . . . .                               | 14 |
| MP3 file Information. . . . .                     | 15 |
| Image file Information . . . . .                  | 15 |
| Video file Information. . . . .                   | 15 |
| Using iPod® Devices . . . . .                     | 16 |
| Precautions upon using iPod®. . . . .             | 16 |
| Supported iPod® devices. . . . .                  | 16 |
| Using SD Cards. . . . .                           | 16 |
| Ejecting and Inserting SD Cards. . . . .          | 16 |
| Usage of SD Cards. . . . .                        | 16 |

## Name of Each Component 17

|                                                                  |    |
|------------------------------------------------------------------|----|
| Head unit. . . . .                                               | 17 |
| Driver Information System (DIS) Control (USA - Option) . . . . . | 19 |
| Driver Information System (DIS) Control (USA - Option) . . . . . | 20 |
| Steering wheel remote control . . . . .                          | 21 |

## Basic Operation 22

|                                                 |    |
|-------------------------------------------------|----|
| Starting the system for the first time. . . . . | 22 |
| Turning the system off . . . . .                | 22 |
| AV OFF . . . . .                                | 22 |
| AV ON . . . . .                                 | 22 |
| Adjusting the volume . . . . .                  | 22 |
| Resetting the System . . . . .                  | 23 |
| Using the controller . . . . .                  | 23 |
| Using the Touch screen. . . . .                 | 23 |

## Radio Operation (FM/AM) 24

|                                           |    |
|-------------------------------------------|----|
| Listening to FM/AM radio. . . . .         | 24 |
| Listening to HD Radio™ . . . . .          | 24 |
| HD Radio™ screen . . . . .                | 24 |
| HD Radio™ On/Off . . . . .                | 25 |
| Tag . . . . .                             | 25 |
| Saving FM/AM preset . . . . .             | 26 |
| Scanning FM/AM broadcast station. . . . . | 26 |
| Scanning preset stations. . . . .         | 26 |
| Scanning all stations . . . . .           | 26 |

|                                   |    |
|-----------------------------------|----|
| Reordering FM/AM preset . . . . . | 27 |
| Autostore. . . . .                | 27 |
| Radio Text On/Off. . . . .        | 27 |
| Sound Settings . . . . .          | 27 |

## Radio Operation (SiriusXM™) 28

|                                                                |    |
|----------------------------------------------------------------|----|
| SiriusXM™ screen . . . . .                                     | 28 |
| Listening to SiriusXM™ radio . . . . .                         | 29 |
| Selecting SiriusXM™ broadcast channel. . . . .                 | 29 |
| Selecting a channel through manual search . . . . .            | 29 |
| Selecting with channel up/down. . . . .                        | 29 |
| Selecting a channel through preset . . . . .                   | 29 |
| Selecting channel through channel/category list . . . . .      | 29 |
| Adding to Favorites. . . . .                                   | 30 |
| Program Guide . . . . .                                        | 30 |
| Scanning SiriusXM™ broadcast channel . . . . .                 | 31 |
| Direct Tune . . . . .                                          | 31 |
| Sound Settings . . . . .                                       | 31 |
| Featured Favorites. . . . .                                    | 31 |
| Favorites . . . . .                                            | 32 |
| Viewing Active Alert. . . . .                                  | 32 |
| Deleting the song or artist saved in [Favorites] menu. . . . . | 32 |
| Favorites Alert On/Off . . . . .                               | 33 |
| Storing SiriusXM™ preset. . . . .                              | 33 |
| Reordering SiriusXM™ preset. . . . .                           | 34 |
| Game Zone . . . . .                                            | 34 |

# Table of Contents

|                                       |           |
|---------------------------------------|-----------|
| Setting Team.....                     | 34        |
| Viewing Active Alert.....             | 35        |
| Alert On/Off.....                     | 35        |
| <b>Subscription Status . . . . .</b>  | <b>35</b> |
| <b>Go to SiriusXM™ Data . . . . .</b> | <b>36</b> |

## Audio CD/MP3 CD Operation 37

|                                             |           |
|---------------------------------------------|-----------|
| <b>Playing an Audio CD/MP3 CD . . . . .</b> | <b>37</b> |
| Pause .....                                 | 37        |
| Skip.....                                   | 37        |
| Search.....                                 | 37        |
| Seek .....                                  | 38        |
| List .....                                  | 38        |
| Shuffle .....                               | 38        |
| Repeat .....                                | 39        |
| Scan .....                                  | 39        |
| Sound Settings .....                        | 39        |

## DVD/VCD Operation 40

|                                     |           |
|-------------------------------------|-----------|
| <b>Playing a DVD/VCD . . . . .</b>  | <b>40</b> |
| Switching to Menu display or Full   |           |
| Screen Display.....                 | 40        |
| Pause .....                         | 40        |
| Skip.....                           | 40        |
| Search.....                         | 41        |
| Seek .....                          | 41        |
| Title Menu/Disc Menu (DVD Only) ... | 41        |
| Caption Language (DVD Only) .....   | 42        |
| Voice Language (DVD Only) .....     | 42        |
| Angle (DVD Only) .....              | 42        |
| DVD Settings (DVD Only) .....       | 43        |
| Repeat (VCD Only) .....             | 43        |
| Shortcut (VCD Only) .....           | 43        |
| PBC On/Off (VCD Only).....          | 44        |
| Display Settings .....              | 44        |
| Sound Settings .....                | 44        |
| DVD language code.....              | 45        |

## Jukebox Operation 47

|                                        |           |
|----------------------------------------|-----------|
| <b>Playing Jukebox Music . . . . .</b> | <b>47</b> |
| Pause .....                            | 47        |
| Skip.....                              | 47        |
| Search.....                            | 47        |
| Seek .....                             | 47        |
| Cover Flow View .....                  | 47        |
| List .....                             | 48        |

|                      |    |
|----------------------|----|
| Shuffle .....        | 48 |
| Scan .....           | 48 |
| Sound Settings ..... | 48 |
| Repeat .....         | 48 |

## Playing Jukebox Video . . . . . 49

|                                   |    |
|-----------------------------------|----|
| Switching to Menu display or Full |    |
| Screen Display.....               | 49 |
| Pause .....                       | 49 |
| Skip.....                         | 49 |
| Search.....                       | 49 |
| Seek .....                        | 49 |
| List .....                        | 49 |
| Shuffle .....                     | 49 |
| Repeat .....                      | 49 |
| Caption Settings.....             | 50 |
| Voice Settings.....               | 50 |
| Display Settings .....            | 50 |
| Sound Settings .....              | 50 |
| DivX® VOD .....                   | 50 |

## Viewing Jukebox Image . . . . . 51

|                                   |    |
|-----------------------------------|----|
| Switching to Menu display or Full |    |
| Screen Display.....               | 51 |
| Skip.....                         | 51 |
| Zoom in/out.....                  | 51 |
| Slideshow .....                   | 52 |
| List .....                        | 52 |
| Slideshow Settings.....           | 52 |
| Display Settings .....            | 52 |

# Table of Contents

## USB Operation 53

### Playing USB Music . . . . . 53

|                                               |    |
|-----------------------------------------------|----|
| Pause .....                                   | 53 |
| Skip.....                                     | 53 |
| Search.....                                   | 53 |
| Seek .....                                    | 53 |
| Cover Flow View .....                         | 53 |
| List .....                                    | 54 |
| Shuffle .....                                 | 54 |
| Repeat .....                                  | 54 |
| Copying the USB music file to<br>Jukebox..... | 54 |
| Scan .....                                    | 54 |
| Sound Settings .....                          | 54 |

### Playing USB Video . . . . . 55

|                                                          |    |
|----------------------------------------------------------|----|
| Switching to Menu display or Full<br>Screen Display..... | 55 |
| Pause .....                                              | 55 |
| Skip.....                                                | 55 |
| Search.....                                              | 55 |
| Seek .....                                               | 55 |
| List .....                                               | 56 |
| Shuffle .....                                            | 56 |
| Repeat .....                                             | 56 |
| Copying the USB video file to<br>Jukebox.....            | 56 |
| Caption Settings.....                                    | 56 |
| Voice Settings.....                                      | 56 |
| DivX® VOD .....                                          | 56 |

|                                                          |    |
|----------------------------------------------------------|----|
| Display Settings .....                                   | 56 |
| Sound Settings .....                                     | 56 |
| <b>Viewing USB Image . . . . . 57</b>                    |    |
| Switching to Menu display or Full<br>Screen Display..... | 57 |
| Skip.....                                                | 57 |
| Zoom in/out.....                                         | 57 |
| Slideshow.....                                           | 57 |
| List .....                                               | 57 |
| Slideshow Settings.....                                  | 57 |
| Copying the USB image file to<br>Jukebox.....            | 57 |
| Display Settings .....                                   | 57 |

## iPod® Operation 58

### Playing iPod®. . . . . 58

|                      |    |
|----------------------|----|
| Pause .....          | 58 |
| Skip.....            | 58 |
| Search.....          | 58 |
| Seek .....           | 58 |
| List .....           | 58 |
| Shuffle .....        | 58 |
| Repeat .....         | 58 |
| Scan .....           | 58 |
| Sound Settings ..... | 58 |

## Pandora® Radio Operation 59

### Playing Pandora® . . . . . 59

|                              |    |
|------------------------------|----|
| Pause .....                  | 59 |
| Skip.....                    | 59 |
| Seek .....                   | 59 |
| Station List .....           | 59 |
| Feature of this Track.....   | 60 |
| Sound Settings .....         | 60 |
| Thumbs Up / Thumbs Down..... | 60 |
| Bookmark.....                | 60 |

## Aha Radio Operation 61

### Playing Aha Radio. . . . . 61

|                                                                  |    |
|------------------------------------------------------------------|----|
| Pause .....                                                      | 61 |
| Skip.....                                                        | 61 |
| Seek .....                                                       | 61 |
| Search.....                                                      | 61 |
| Stations .....                                                   | 62 |
| Sound Settings .....                                             | 62 |
| Tracks.....                                                      | 62 |
| Thumbs Up / Thumbs Down.....                                     | 62 |
| Making a call to place near current<br>position.....             | 63 |
| Finding a place near current position<br>through Navigation..... | 63 |

# Table of Contents

## Auxiliary Device Operation 64

|                                         |    |
|-----------------------------------------|----|
| Playing an AUX source .....             | 64 |
| Switching to Menu display or Full       |    |
| Screen Display during video playback .. | 64 |
| Display Settings .....                  | 64 |
| Sound Settings .....                    | 64 |

## Bluetooth® Audio 65

|                                        |    |
|----------------------------------------|----|
| Playing Bluetooth® Audio .....         | 65 |
| Before playing the Bluetooth® audio .. | 65 |
| Starting the Bluetooth® audio .....    | 65 |
| Pause .....                            | 65 |
| Skip .....                             | 65 |
| Sound Settings .....                   | 65 |

## Getting Started with Navigation 66

|                                     |    |
|-------------------------------------|----|
| Navigation use restrictions .....   | 66 |
| What is GPS? .....                  | 66 |
| About satellite signals. ....       | 66 |
| Acquiring satellite signals. ....   | 66 |
| Operating Navigation Screen .....   | 67 |
| Map screen .....                    | 67 |
| Zoom In / Zoom Out .....            | 70 |
| Map scale .....                     | 70 |
| Changing the route conditions ..... | 70 |
| Searching for POI .....             | 71 |
| Adding the position to address book |    |
| .....                               | 73 |

|                                           |    |
|-------------------------------------------|----|
| Scrolling map .....                       | 74 |
| Traffic information list .....            | 74 |
| Navigation volume .....                   | 74 |
| Settings .....                            | 75 |
| Making a call to POI .....                | 75 |
| Guidance to Previous Destinations ..      | 75 |
| General operations of quick menu. . .     | 76 |
| General operations of [Navigation] menu . | 76 |

## Searching for Destination of Navigation 77

|                                      |    |
|--------------------------------------|----|
| Places .....                         | 77 |
| Address Search .....                 | 78 |
| Previous Destinations .....          | 79 |
| Address Book .....                   | 79 |
| Adding to Address Book .....         | 80 |
| Deleting Address Book .....          | 80 |
| Editing Address Book .....           | 80 |
| POI .....                            | 81 |
| Searching for POI by category .....  | 81 |
| Searching for POI by phone number .. | 81 |
| Emergency .....                      | 81 |
| Local Search .....                   | 82 |
| Intersection .....                   | 82 |
| Freeway Exit / Enter .....           | 82 |
| Coordinates .....                    | 83 |
| Home / Office .....                  | 83 |
| Registering Home or Office .....     | 83 |
| Finding your Home or Office .....    | 83 |

## Using the Route Menu 84

|                           |    |
|---------------------------|----|
| Route menu overview ..... | 84 |
| Cancel Route .....        | 84 |
| Route Options .....       | 84 |
| Edit Route .....          | 85 |
| Route Info / Avoid .....  | 86 |
| Route Overview .....      | 86 |
| Route Preview .....       | 86 |

# Table of Contents

## Bluetooth® Wireless Technology 97

### Before Using the Bluetooth Handsfree 97

|                                                |    |
|------------------------------------------------|----|
| What is Bluetooth Wireless Technology? .....   | 97 |
| Precautions for Safe Driving .....             | 97 |
| Cautions upon Connecting Bluetooth Phone ..... | 97 |

### Pairing and connecting the unit and a Bluetooth phone ..... 97

|                                         |     |
|-----------------------------------------|-----|
| When no phones have been paired .....   | 97  |
| When a phone is already paired .....    | 99  |
| Disconnecting the connected phone ..... | 100 |
| Deleting Bluetooth Devices .....        | 100 |

### Making a call by entering phone number .. 100

### Making a call by redialing ..... 101

### Making a call with speed dial numbers 101

### Answering/Rejecting a call ..... 101

### Switching call to the mobile phone .. 101

### Ending a call ..... 101

### Using the menu during a phone call .. 102

### Call history ..... 102

|                                       |     |
|---------------------------------------|-----|
| Making a call from call history ..... | 102 |
| Downloading call history .....        | 102 |

### Contacts ..... 103

|                                      |     |
|--------------------------------------|-----|
| Downloading mobile phone contacts .. | 103 |
| Searching for contacts .....         | 103 |
| Adding as a Favorite .....           | 104 |

### Favorites ..... 104

|                         |     |
|-------------------------|-----|
| Calling Favorites ..... | 104 |
|-------------------------|-----|

|                                    |     |
|------------------------------------|-----|
| Adding as a Favorite .....         | 104 |
| Deleting Favorites .....           | 105 |
| Setting Bluetooth Connection ..... | 105 |

## Voice Recognition System 106

### What is voice recognition? ..... 106

### Voice recognition features by language .. 106

### Operating voice command ..... 106

|                                                      |     |
|------------------------------------------------------|-----|
| Condition for voice command system .....             | 106 |
| Starting voice recognition .....                     | 106 |
| Skipping prompt messages .....                       | 107 |
| Re-starting voice recognition .....                  | 107 |
| Ending voice recognition .....                       | 107 |
| Adjusting voice recognition volume ..                | 107 |
| Basic operation for voice command (Setting FM) ..... | 107 |

### Voice recognition quick start (Manual Control) ..... 107

### About voice command "Help" ..... 107

### Voice command list ..... 108

|                                                        |     |
|--------------------------------------------------------|-----|
| Phone commands .....                                   | 108 |
| Radio commands .....                                   | 109 |
| Media commands .....                                   | 110 |
| Audio CD commands .....                                | 111 |
| MP3 CD/ USB music/ Jukebox music/ iPod® commands ..... | 112 |
| Bluetooth audio/ AUX commands .....                    | 112 |
| Navigation commands .....                              | 113 |

|                                                           |     |
|-----------------------------------------------------------|-----|
| Other Commands (Commands used in List / Help/ etc.) ..... | 116 |
| List of Nearest Locations .....                           | 117 |

## Siri® 121

### Operating Siri® command ..... 121

|                              |     |
|------------------------------|-----|
| What is Siri®? .....         | 121 |
| Starting Siri® .....         | 121 |
| Re-starting Siri® .....      | 121 |
| Ending Siri® .....           | 121 |
| Adjusting Siri® volume ..... | 121 |

## SiriusXM™ Data 122

### About SiriusXM™ Data ..... 122

### Accessing SiriusXM™ Data ..... 122

### SiriusXM™ Weather Information .... 122

|                                                |     |
|------------------------------------------------|-----|
| Current weather information .....              | 122 |
| Weather forecast .....                         | 122 |
| Weather information in other region ..         | 123 |
| Weather information at ski resorts .....       | 123 |
| Searching for other region or ski resort ..... | 124 |
| Favorites .....                                | 124 |
| Weather & Security Alerts .....                | 125 |
| Weather Map .....                              | 126 |

### SiriusXM Traffic Information. .... 126

### SiriusXM™ Fuel Prices Information .. 126

|                           |     |
|---------------------------|-----|
| Finding gas station ..... | 126 |
|---------------------------|-----|

# Table of Contents

|                                                      |            |
|------------------------------------------------------|------------|
| Searching for gas station .....                      | 127        |
| Favorites .....                                      | 127        |
| <b>SiriusXM™ Stocks Information . . . . .</b>        | <b>129</b> |
| Favorites .....                                      | 129        |
| <b>SiriusXM™ Sports Information . . . . .</b>        | <b>130</b> |
| Favorites .....                                      | 131        |
| <b>SiriusXM™ Movie Information . . . . .</b>         | <b>132</b> |
| Finding theater by searching for<br>movie .....      | 132        |
| Viewing movie list by searching for<br>theater ..... | 133        |
| Favorites .....                                      | 134        |

## Settings 135

|                                |     |
|--------------------------------|-----|
| [Settings] menu overview ..... | 135 |
|--------------------------------|-----|

## Navigation 135

|                |     |
|----------------|-----|
| General .....  | 135 |
| Display .....  | 135 |
| Guidance ..... | 136 |
| Route .....    | 136 |
| Traffic .....  | 136 |

## Sound 137

|                               |     |
|-------------------------------|-----|
| Volume Ratio .....            | 137 |
| Fade/Balance .....            | 137 |
| Treble/Middle/Bass .....      | 137 |
| Surround Sound (option) ..... | 138 |
| Variable EQ (option) .....    | 138 |
| Speed Dependent Vol .....     | 138 |
| Touch Tone .....              | 138 |

|                          |            |
|--------------------------|------------|
| Reset .....              | 138        |
| <b>Display . . . . .</b> | <b>139</b> |
| Set Video Image .....    | 139        |
| Set LCD Brightness ..... | 139        |
| Mode .....               | 139        |
| Display Ratio .....      | 140        |
| Reset .....              | 140        |

## Bluetooth 140

|                                |     |
|--------------------------------|-----|
| Bluetooth Connection .....     | 140 |
| Auto Connection Priority ..... | 141 |
| Device Information .....       | 141 |
| Customer Center .....          | 142 |

## Voice Recognition 143

## Clock 143

|                             |     |
|-----------------------------|-----|
| GPS Time .....              | 143 |
| Time Settings .....         | 143 |
| Daylight Savings Time ..... | 144 |
| Time Zone .....             | 144 |
| Clock Type .....            | 144 |
| Time Format .....           | 145 |

## General 145

|                          |     |
|--------------------------|-----|
| Language .....           | 145 |
| Keyboard .....           | 145 |
| Distance Unit .....      | 146 |
| Screen Saver .....       | 146 |
| Lock Rear Controls ..... | 146 |

## E-Manual 147

|                   |     |
|-------------------|-----|
| Skip .....        | 147 |
| Zoom In/Out ..... | 147 |
| Search .....      | 147 |

|                              |            |
|------------------------------|------------|
| Go to page .....             | 147        |
| <b>System Info . . . . .</b> | <b>148</b> |
| Version .....                | 148        |
| Jukebox Info .....           | 148        |
| Update .....                 | 148        |
| Reset All .....              | 149        |

## Using Rear Camera - Option 150

### About Rear Camera 150

|                                  |     |
|----------------------------------|-----|
| Turning on the rear camera ..... | 150 |
|----------------------------------|-----|

### Backing Up & Using Camera 150

## Using PGS (Parking Guide System) - Option 151

### About PGS (Parking Guide System) 151

|                                  |     |
|----------------------------------|-----|
| PGS screen .....                 | 151 |
| Normal View .....                | 151 |
| Top View .....                   | 151 |
| Rear view angle conversion ..... | 151 |

# Table of Contents

## SVM (Surround View Monitor)

### - Option 152

About SVM (Surround View Monitor) 152

Operating front SVM ..... 152

Operating rear SVM ..... 152

SVM setting ..... 153

Warning display. .... 153

Driver's door open indicator ..... 153

Front passenger's door open

indicator..... 153

Trunk open indicator ..... 153

Side mirror folding indicator..... 153

## Climate Mode 154

Operating Climate Mode ..... 154

## UVO eServices [USA (Option)]155

Before using UVO eServices ..... 155

What is UVO eServices?..... 155

What is Telematics? ..... 155

About Transmission and Reception of

Radio Waves ..... 155

Getting Started with UVO eServices . 155

Rear view mirror key function. .... 156

UVO eServices Voice Local Search . . 156

What is UVO eServices Voice Local

Search?..... 156

UVO eServices Voice Local Search156

UVO eServices ..... 157

Roadside Assist..... 157

Vehicle Diagnostics (Manual

Diagnostics)..... 157

Vehicle Diagnostics (Auto Diagnostics)..159

My POIs.....159

Deleting My POIs.....160

eServices Guide .....160

Apps ..... 161

Download Center .....161

Apps Settings.....162

Alert Services ..... 163

Geo Fence Alert.....163

Curfew Limit Alert.....163

Speed Alert.....163

Oil Change Alert.....163

UVO Settings ..... 164

Service Activation (when the service is

not activated) ..... 164

Service Activation (when the service is

expired)..... 165

911 Connect. .... 166

Wi-Fi Settings.....166

Modem Information..... 168

## Before Thinking the Product has

### Malfunctioned 169

## Troubleshooting 172

## Trademarks and Licenses 174

DivX®..... 174

iPod®..... 174

Pandora®..... 174

Aha radio ..... 174

SiriusXM™ ..... 174

DOLBY®..... 174

DTS®..... 174

Bluetooth® Wireless Technology ..... 174

Gracenote®..... 174

HD Radio™ Technology..... 175

## Specification 176

AV/Navigation product specification . 176

UVO terminal product specification. . 178

# General Information

## About Disc

### Recommended Practices for Handling Discs

- After using a disc, put the disc back in its original case to prevent disc scratches.
- Do not use abnormally shaped discs (8cm, heart-shaped, octagon-shaped) as such discs could lead to malfunctions.
- Do not clean discs with chemical solutions, such as record sprays, antistatic sprays, antistatic liquids, benzene, or thinners.
- Do not expose the disc to direct sunlight or high temperatures for prolonged periods of time. Such exposure may lead to disc deformation.
- Upon playing a disc contaminated by dirt or other substances, the sound quality may deteriorate and result in skipping sounds. Writing on either side of the disc could result in damage to disc surfaces.
- Clean fingerprints and dust off the disc surface (coated side) with a soft cloth.
- Copy-protected CDs, such as S-type CDs, may not properly operate in the device. DATA CDs cannot be played. (However, such discs may still abnormally operate.)

- Skipping may occur when driving on bumpy roads for prolonged periods of time or upon severe shock, audio may not play properly.
- Do not attach sticker or label on the disc. Sticker or label may fall off and damage the system.
- Do not insert two or more discs into the disc slot simultaneously. It may damage the disc player.
- While disc is being inserted to the disc player by its self-loading mechanism, do not hold the disc or forcefully pull the disc. It may damage the disc player and the disc.
- Non-genuine discs may cause defective recognition or product disorder.

### CAUTION: Servicing Compact Disc Player

- Do not disassemble the device. Contact a designated service center in case of malfunction. (Complete after service assistance will not be provided if the user disassembles the device.)

### CAUTION - Cleaning Compact Disc Player

- Do not use water to clean the device. Exposure to water could lead to product malfunction.
- Do not introduce foreign substances into the disc insert/eject slot. Introducing foreign substances could damage the device interior.
- The device may fail to properly operate in extremely hot or cold temperatures.

- Steam can become condensed on the fiber-optic lens due to rain, wet conditions, or upon operating the heating system. In such cases, discs may not be properly recognized. Remove the disc and wait until the moisture dries.

### Types of Playable Discs

|                                                                                     |                        |
|-------------------------------------------------------------------------------------|------------------------|
|  | DVD-VIDEO (12 cm disc) |
|  | Video CD (12 cm disc)  |
|  |                        |
|  | Audio CD (12 cm disc)  |
|  | CD-R/RW                |
|  |                        |

In addition, this unit can play a DVD±R, DVD±RW, CD-R or CD-RW that contains audio titles, MP3 or WMA files.

Depending on the conditions of the recording equipment or the CD-R/RW (or DVD-RW, DVD+RW) disc itself, some CD-R/RW (or DVD-RW, DVD+RW) discs may not be played on the unit.

# General Information

---

## COPYRIGHTS

It is forbidden by law to copy, broadcast, show, broadcast via cable, play in public, or rent copyrighted material without permission.

This product features the copy protection function developed by Macrovision. Copy protection signals are recorded on some discs. When playing the pictures of these discs on a unit, picture noise will appear. This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

## DVD Region Code

This instrument is manufactured according to the region code number recorded in the DVD. If the DVD region code number does not match the region number of this instrument, DVD may not be played. Use the DVD corresponding to your region.

## PBC: Playback Control (Video CD Only)

Playback control is available for Video CD (VCD version 2.0 disc formats). PBC allows you to interact with the system via menus, search functions, or other typical computer-like operations. Moreover, still pictures of high resolution can be played if they are included in the disc. Video CDs not equipped with PBC (Version 1.1) operate in the same way as audio CDs.

## If "Ⓢ" symbol appears

If "Ⓢ" symbol is displayed on the screen, the current screen will not be operated during the driving.

## About USB

Connect the USB device after turning on the engine. The USB device may become damaged if it is already connected when the ignition is turned on.

- Files that are not standard format files will not be played.
- For MP3/WMA files, only music files with compression rates between 8 Kbps ~ 320 Kbps can be played.
- Heed caution to static electricity when connecting/disconnecting external USB devices.
- Encoded MP3 Players will not be recognized when connected as an external device.
- When connecting an external USB device, the device may not properly recognize the USB is in some states.
- Only USB devices formatted as FAT 12/16/32 are supported, and NTFS file system is not supported.
- Some USB devices may not be supported due to compatibility issues.
- Avoid contact between the USB connector with bodily parts/foreign objects.

# General Information

---

- Repeated connecting/disconnecting of USB devices within short periods of time may result in product malfunction.
- Insert USB device after starting the car. If the car is started while USB device is inserted, it may damage USB device.
- The amount of time required to recognize the external USB device may differ depending on the type, size, or file formats stored on the USB. Such differences in required time are not indications of malfunction.
- The device may not recognize the USB device if separately purchased USB hubs and extension cables are being used. Connect the USB directly with the multimedia terminal of the vehicle.
- When application programs are installed to specific USBs, files may not properly play.
- The device may not operate normally if MP3 Players, cellular phones, digital cameras, or other electronic devices (USB devices not recognized as portable disk drives) are connected with the device.
- Charging through the USB may not work for some mobile devices.
- The device may not support normal operation when using a USB memory type besides Metal Cover Type USB Memory.
- The device may not support normal operation when using formats such as HDD Type, CF, or SD Memory.
- The device will not support files locked by DRM (Digital Rights Management).
- USB memory sticks used by connecting an Adaptor (SD Type or CF Type) may not be properly recognized.

## MP3 file Information

- Sampling frequency: 8 ~ 48 KHz (MP3), 22.5 ~ 48 KHz (WMA).
- Bit rate: 8 ~ 320 Kbps (MP3), 20 ~ 320 Kbps (WMA).
- Version: v2, v7, v8, v9.
- Playable file format: ".mp3"/".wma".

## Image file Information

- Playable file format: ".bmp", ".jpg", ".gif", ".png", ".tif" (Max 5MB).
- It may not properly operate depending on the storage type.

## Video file Information

- Video Resolution: 720 x 576 pixels (DivX), 1280 x 720 pixels (except DivX).
- Playable file format: ".avi", ".mpg", ".mpeg", ".divx", ".mp4".
- Subtitle format: ".smi".
- Video Codec: "DIVX3.11", "DIVX4", "DIVX5", "DIVX6".
- Audio Codec: "PCM", "MP3", "WMA", "WAV".
- If video and caption file names are different, caption may not be displayed.
- If DivX file format does not match main unit, it may not be played properly.

# General Information

---

## Using iPod® Devices

### Precautions upon using iPod®

- Some iPods with unsupported communication protocols may not properly operate with the system.
- If the iPod malfunctions due to an iPod device defect, reset the iPod and try again. (To learn more, refer to your iPod manual.)
- During ACC ON state, connecting the iPod through the iPod cable (The cable that is supplied when purchasing iPod/iPhone product.) will charge the iPod through the system.
- The use of genuine iPod cables supplied by Apple is recommended. (The use of other products may result in noise or abnormal operation.)
- Within iPhones, streaming audio and iPod control may occasionally conflict. If problems persist, remove the iPhone and connect again.
- Use iPod with complete synchronization to iTunes. Unauthorized song addition may cause abnormal operation.
- If iPod and Bluetooth are connected simultaneously with the same iPhone, you cannot use Bluetooth audio function.
- If iPod touch or iPhone is used, iOS4.2 or greater is recommended.

### Supported iPod® devices

iPhone 5  
iPhone 4S  
iPhone 4  
iPhone 3GS  
iPod Touch (1st through 5th generation)  
iPod Nano  
iPod Classic

## Using SD Cards

### Ejecting and Inserting SD Cards

- Ejecting and inserting SD cards while the system is operating may result in SD Card or System errors. To eject or insert the SD card, first turn off the system and the vehicle ignition.
- Eject/insert SD cards only to update the Map, Navi application and Navi S/W with a new version.
- When an SD Card with the new version is inserted, then the system will reboot automatically.

### Usage of SD Cards

- The SD Card is formatted to include only Map and Navi S/W.
- The SD Card cannot be used to save and play Music.
- Do not add, delete, or format files within the SD Card.

# Name of Each Component

## Head unit



### 1. Disc slot

Insert a disc into the disc slot.

### 2. Disc eject () button

Press to insert or eject disc.

### 3. DISC IN indicator light

When a disc is inserted, the indicator is illuminated.

### 4. • POWER PUSH button

- Power on  
Press this button in power OFF status.
- Power off  
Press and hold this button in power ON status.

### • Volume control knob (VOL)

Turn left/right to control volume.

### • AV on/off button

Press this button to turn AV on or off in power on status.

### 5. FM/AM Button

Selects the FM/AM band.

 
### 6. SXM Button

Selects the SiriusXM band.

### 7. MEDIA button

Press this button to move to the [Media] menu in media playing screen. Press this button again to display the media playing screen.

## Name of Each Component

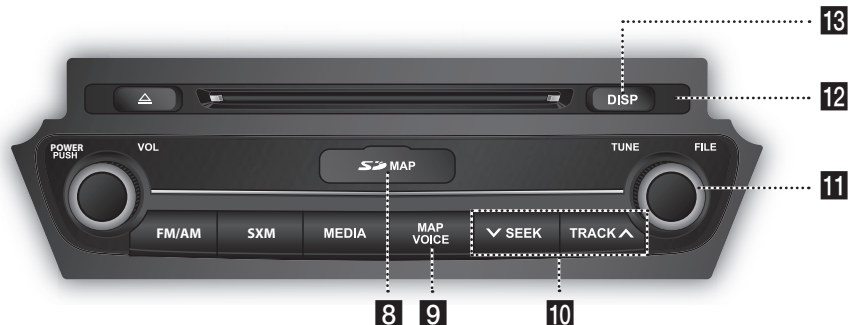

### 8. SD map card slot

Insert the SD card into the slot.

### 9. MAP/VOICE button

- Press to display the map screen of the current location.
- Press to repeat the voice guidance.

### 10. VSEEK/TRACK button

- When pressed momentarily (less than 0.8 sec.)
  - FM/AM/SiriusXM mode: plays previous/next station.
  - MEDIA mode: changes the track, file, or chapter.
- When pressed and held (0.8 sec. or longer)
  - FM/AM/SiriusXM mode: changes the station until the button is released.
  - MEDIA mode: rewinds or fast forwards the track, file, or chapter.

### 11. TUNE/FILE button

- FM/AM/SiriusXM mode: Turn to change the station.
- CD/DVD/VCD/Jukebox/USB/iPod mode: Turn to search for the desired track, file or chapter.

### 12. RESET hole

 
Press to reset the unit.

### 13. DISP button

- Press to turn the screen on or off.
- Press and hold to move to the [Display] menu screen.

# Name of Each Component

## Driver Information System (DIS) Control (USA - Option)

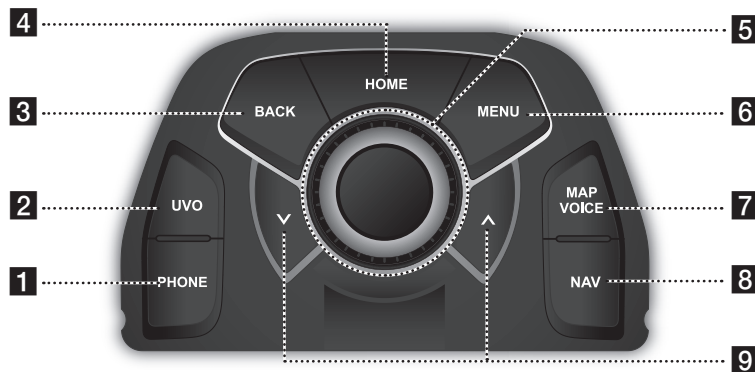

### 1. PHONE button

Press to move to the Phone menu screen.

### 2. UVO button

Press to move to the [UVO] menu screen.

### 3. BACK button

Press to move to the previous screen.

### 4. HOME button

Press to move to the [HOME] menu screen.

### 5. Controller

Tap or rotate to navigate through the menu screens. For more details, refer to "Using the controller" on Page 23.

### 6. MENU button

Press to move to the pop-up menu in each mode.

### 7. MAP/VOICE button

- Press to display the map screen of the current location.
- Press to repeat the voice guidance.

### 8. NAV button

 
Press to move to the [Navigation] menu screen.

### 9. V/Λ button

- When pressed momentarily (less than 0.8 sec.)
  - FM/AM/SiriusXM mode: plays previous/next preset station.
  - MEDIA mode: changes the track, file, or chapter.
- When pressed and held (0.8 sec. or longer)
  - FM/AM/SiriusXM mode: changes the station until the button is released.
  - MEDIA mode: rewinds or fast forwards the track, file, or chapter.

# Name of Each Component

## Driver Information System (DIS) Control (USA - Option)

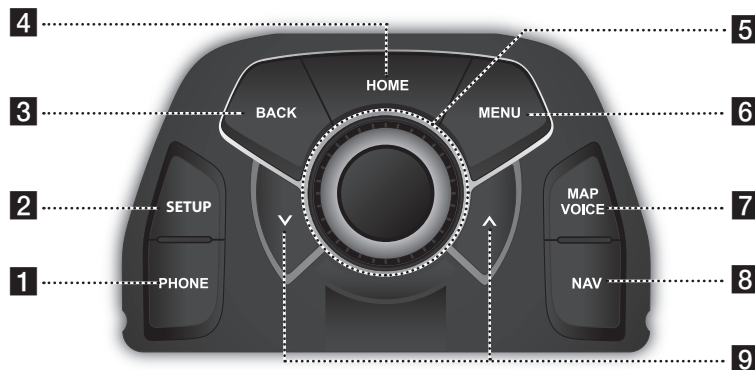

### 1. PHONE button

Press to move to the Phone menu screen.

### 2. SETUP button

Press to move to the [Settings] menu screen.

### 3. BACK button

Press to move to the previous screen.

### 4. HOME button

Press to move to the [HOME] menu screen.

### 5. Controller

Tap or rotate to navigate through the menu screens. For more details, refer to "Using the controller" on page 23.

### 6. MENU button

Press to move to the pop-up menu in each mode.

### 7. MAP/VOICE button

- Press to display the map screen of the current location.
- Press to repeat the voice guidance.

### 8. NAV button

 
Press to move to the [Navigation] menu screen.

### 9. V/Δ button

- When pressed momentarily (less than 0.8 sec.)
  - FM/AM/SiriusXM mode: plays previous/next preset station.
  - MEDIA mode: changes the track, file, or chapter.
- When pressed and held (0.8 sec. or longer)
  - FM/AM/SiriusXM mode: changes the station until the button is released.
  - MEDIA mode: rewinds or fast forwards the track, file, or chapter.

# Name of Each Component

## Steering wheel remote control

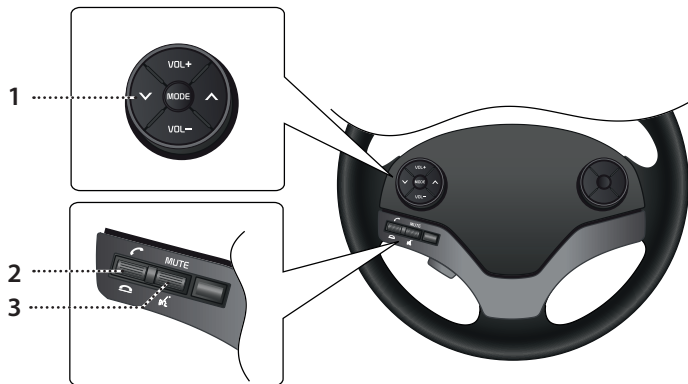

### 1. MODE button

- Each time this button is pressed, the mode is changed.
- If no media or disc is inserted, the mode will be skipped.
- Press and hold the button (over 0.8 seconds) to turn the AV on/off.
- When power is off, press the button to turn power back on.

### VOL+/VOL- button

Increases or decreases the volume level.

### V/A button

- When pressed momentarily (less than 0.8 sec.)
  - FM/AM/SiriusXM mode: plays previous/next preset station.
  - MEDIA mode: changes the track, file, or chapter.
- When pressed and held (0.8 sec. or longer)
  - FM/AM/SiriusXM mode: changes the station until the button is released.
  - MEDIA mode: rewinds or fast forwards the track, file, or chapter.

### 2. button

Press to operate Bluetooth Hands-Free function.

- Press to accept a call.
- Press to make a call from last calls.
- Press and hold for redialing.

### button

Press to hang up a call.

### 3. MUTE button

Press to mute the sound.

### button

- Press the button (under 0.8 seconds) to activate voice recognition mode.
- Press and hold the button (over 0.8 seconds) to cancel voice recognition.
- Press and hold the button (over 0.8 seconds) to activate or end the Siri function if an iPhone is paired to the system.

# Basic Operation

## Starting the system for the first time

1. Press the engine start button.

Once the system is turned on, the booting process will start and the safety warning page is displayed.



2. Press [Confirm].

If you want to change the system language, press [Language]. For more details, refer to "Language" on page 145.

### Note

- You cannot operate the system while it is booting up. It may take some time for all of features of the system boot up.
- The safety warning page is displayed every time the ignition is turned on. The displayed warnings are related to safety, please closely read and comply with the safety warnings.

## Turning the system off

Press and hold "POWER PUSH" on the head unit.

To turn the system on again, press "POWER PUSH" on the head unit.

### Note

Check the volume when turning on the system. Before turning on the system, adjust the volume to a reasonable level.

## AV OFF

Press "POWER PUSH" on the head unit when the AV is ON.

## AV ON

Press "POWER PUSH" on the head unit when the AV is OFF.

## Adjusting the volume

Rotate the volume control knob (VOL) on the head unit.

### Note

When you turn the unit off, the current volume level is automatically memorized. Whenever you turn the system on, it operates at the memorized volume level.

# Basic Operation

## Resetting the System

This feature is used to reset the system in the occurrence of an unforeseen error or problem. Press "RESET" button. (The use of a clip or pin is recommended when resetting the system.)



## Using the controller

This control is used to move and select menus.

| Controller                                                                        | Description                                                            |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------|
|  | Move in the menu by turning the controller left/right.                 |
|  | Push the controller up/down/left/right/diagonally to move in the menu. |
|  | Press the controller to select menu.                                   |

## Using the Touch screen

Press the desired menu on the screen to select a menu.

- Type 1



- Type 2



# Radio Operation (FM/AM)

## Listening to FM/AM radio

1. Press "FM/AM" on the head unit. Or press [HOME] > [FM/AM].
2. Press [FM] or [AM] on the screen.  
The FM/AM screen of the most recent listened station is displayed.



3. **Auto tuning:**  
Press "VSEEK/TRACK" on the head unit.  
- When a station is received, searching stops.

### Manual tuning:

- Turn "TUNE/FILE" on the head unit in clockwise or counter-clockwise direction.  
- The stations move up and down step by step.

### Preset tuning:

From the 12 presets, select the station you want to listen to.



## Listening to HD Radio™

You can turn HD radio on from the menu and listen to HD Radio Broadcasts.

The HD Radio screen is displayed only when a HD Radio broadcast is being received.

### HD Radio™ screen



- 1 HD Radio Reception & Channel buttons  
Displays main HD Radio channels and used to directly select the currently available local channels.

# Radio Operation (FM/AM)

## 2 HD Channel Number

- HD Channel number saved in preset.
- Preset tuning: From the 12 presets, select the HD Channel you want to listen to.

## 3 Broadcast Information

Displays detailed information about the current broadcast. (Album Cover Art, Artist name, Song title, HD radio channel, Frequency, PTY, etc...)

## 4 Frequency controller

 
When controller is focused, it moves to center of screen. Turn the controller to search for frequency and move the red line.

### ! Note

HD Radio reception is included with the vehicle is in Radio mode. Methods used to reorder between channels, save preset stations, or other methods of searching frequencies used for standard radios are identical for HD Radios. The HD Radio icon will be displayed when the vehicle is within regions where HD Radio signals can be received.

## HD Radio™ On/Off

1. Select the band (FM, AM) you want.  
If an HD Radio broadcast is received, the radio mode will switch from analog broadcast to HD Radio broadcast.

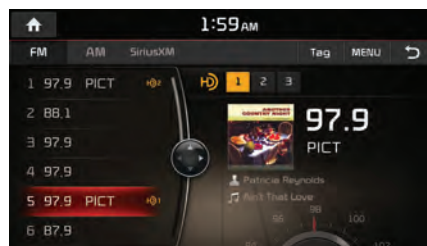

Press [MENU] > [HD Radio] on the screen.

The HD radio will be off and switch to analog broadcast.

### ! Note

- The default setting of [HD Radio] is set to on.
- HD radio Technology is a digital radio technology used by FM and AM radio stations to transmit audio and data via a digital signal in conjunction with their analog signals.
- While listening to the radio, the HD Radio icon will become displayed if receiving an HD radio broadcast.

## Tag

If HD radio broadcast includes Tag information, then the tag information is displayed on the screen.

1. Press [Tag] on the HD radio screen.



### ! Note

When the HD radio is off, the [Tag] button is deactivated.

# Radio Operation (FM/AM)

## Saving FM/AM preset

12 preset stations each for FM/AM mode can be saved manually.

1. Select the band (FM, AM) you want to store a station into.
2. Select the desired station.
3. Press [MENU] > [Save as Preset].
4. Press the desired preset number.



The station is saved.

### ! Note

When the station is saved on a number of which another station has already been saved, the previously saved station is erased.

## Scanning FM/AM broadcast station

### Scanning preset stations

This function scans the 12 stations saved as preset numbers in the current band for 10 seconds each.

1. Select the band (FM, AM) you want.
2. Press [MENU] > [Preset Scan].



### ! Note

When the scan is operating, pressing the controller will stop the function and remain on the stopped station.

## Scanning all stations

This function scans all stations and plays only stations with superior reception for 5 seconds each.

1. Select the band (FM, AM) you want.
2. Press [MENU] > [Scan All Channels].



### ! Note

When the scan is operating, pressing the controller will stop the function and remain on the stopped station.

# Radio Operation (FM/AM)

## Reordering FM/AM preset

This function reorders the station saved to presets.

1. Select the band (FM, AM) you want.
2. Press [MENU] > [Reorder Presets].
3. Press the desired preset from the list with controller.



4. Move and press the selected preset up and down.



## Autostore

A total of 24 stations with twelve preset stations each for FM/AM mode can be saved.

1. Select the band (FM, AM) you want.
2. Press [MENU] > [Autostore] to save automatically receivable stations to Preset list.



### ! Note

While Autostore is operating, pressing [Autostore] again will cancel the function and play the previous frequency.

## Radio Text On/Off

If current broadcast includes Radio Text information, the text information is displayed on the screen.

1. Select the band (FM, AM) you want.
2. Press [MENU] > [Radio Text].



 
Pressing the [Radio Text] again will cancel the function.

## Sound Settings

1. Press [MENU] > [Sound Settings] in the radio screen.
2. For more details, refer to "Sound" on page 137.

# Radio Operation (SiriusXM™)

## SiriusXM™ screen

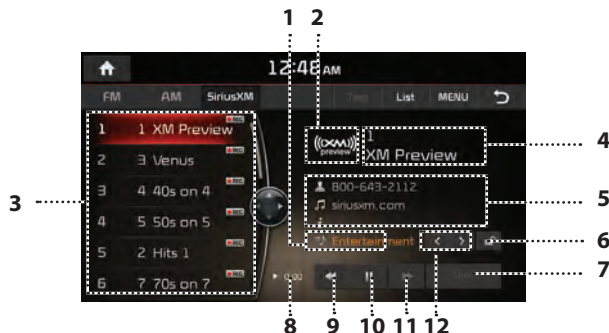

### 1. Category Info

Displays the category currently playing.

### 2. Channel Logo

Displays the logo of the channel currently playing.

### 3. Preset list

Displays the channels saved in the Preset list.

#### Smart Favorites (REC)

SXM supports 6 smart favorites. It is buffered 1 hour for the currently tuned channel (Instant Replay) and at least 1/2 hour for each of the 6 smart favorites.

### 4. Channel Info

Displays the current channel number and name.

### 5. Contents Info

Displays the artist, title and other information about the song currently playing.

### 6. (Category Lock)

If the Category Lock is Off, you can change or search all channels. If the Category Lock is On, you can change or search only the channels of the currently active category.

### 7. Live

Changes to the Live Broadcast mode.

### 8. 0:00 (Time difference)

Displays the time difference between the song playing and the Live broadcast.

### 9. ⏮

Repeats the previously broadcasted program.

- When it is pressed shortly (less than 0.8 sec.): Moves to the previous item.
- When it is pressed and held (0.8 sec. or longer): Searches backwards until the button is released.

### 10. ▶/⏸ (Play/Pause)

Plays/Pauses the currently broadcasting program.

### 11. ⏭

- When it is pressed shortly (less than 0.8 sec.): Moves to the next item.
- When it is pressed and held (0.8 sec. or longer): Searches forward until the button is released.

### 12. ⏪ / ⏩ (Category Selection Buttons)

 
This feature is used to select the Previous/Next category.

# Radio Operation (SiriusXM™)

## Listening to SiriusXM™ radio

1. Press "SXM" on the head unit. Or press [HOME] > [SiriusXM].

The SiriusXM radio screen of the most recent listened channel will be displayed.

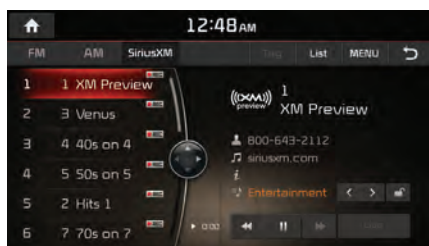

2. Select the desired broadcast channel.

For more details, Refer to "Selecting SiriusXM broadcast channel".

## Selecting SiriusXM™ broadcast channel

### Selecting a channel through manual search

Turn "TUNE/FILE" on the head unit clockwise or counter-clockwise to display the previous or next channel information.

### Selecting with channel up/down

Press "VSEEK/TRACK" on the head unit.

- The previous or next channel will be selected.

### Selecting a channel through preset

Press the preset button of the desired channel.



## Selecting channel through channel/category list

1. Press [List] on the screen.  
Or press [MENU] > [Channel List].



2. Select the desired category and channel.  
Press [MENU] > [Now Listening] to return to the current playing channel.  
Press [MENU] > [Featured Favorites] to move to the [Featured Favorites] menu.  
If you want to skip a channel, press [MENU] > [Skip]. After press the channel to skip, press [↵] to confirm your selection.

### ! Note

 
The channel list may be different according to the region.

# Radio Operation (SiriusXM™)


## Adding to Favorites

You can add the artist or song in the [Favorites] menu.

1. Press [MENU] > [Add to Favorites] on the screen.

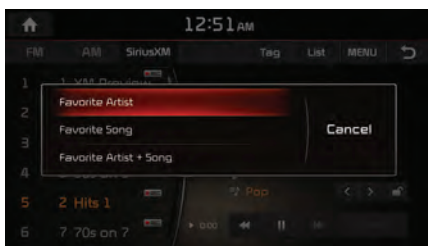

 2. Select the artist or song to add to [Favorites] menu.

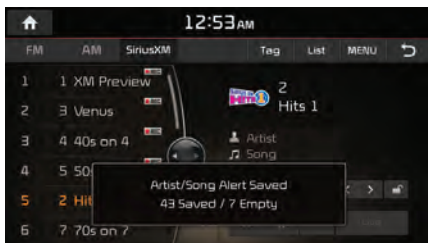

It displays the number of the saved favorites and the number of remaining favorites.


## ! Note

 You can play the song or artist by selecting the desired item when the song or artist added in [Favorites] menu is playing on other channel. For more details, refer to "Favorites Alert On/Off" on page 33.


## Program Guide

You can check the program information and the schedules of broadcast channels.


1. Press [MENU] > [Program Guide] on the screen.

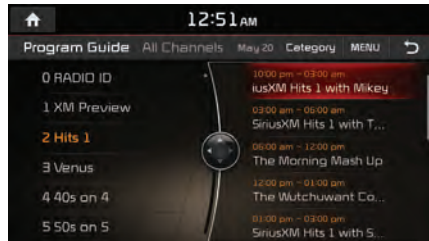

 - Press [Category] to search for category. Or Press [MENU] > [Category list].
- Press [MENU] > [Now Listening] to return to the current playing channel.
2. Select the desired broadcast channel.
  - 1) When you select the current broadcast channel

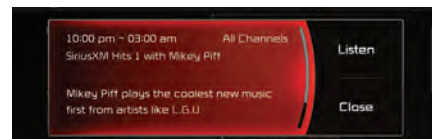

 - 2) When you select the other broadcast except the current broadcast channel

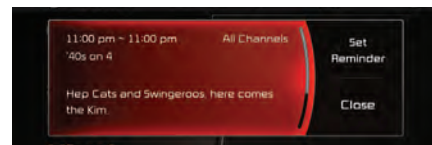

3. Select the desired item.
  - Press [Listen] to listen to the current broadcast.
  - Press [Set Reminder] to reserve the broadcast.
  - Press [Close] to close the function.

## ! Note

Reminder time may be different from time set by user.

# Radio Operation (SiriusXM™)

## Scanning SiriusXM™ broadcast channel

1. Press [MENU] on the SiriusXM radio screen.



### 2. Preset Scan:

Press [Preset Scan].

- scans the 18 preset channels for 5 seconds each.

### Scan All Channels:

Press [Scan All Channels].

- scans all receivable channels for 5 seconds each.



 
### Note

When the scan is operating, pressing the controller will cancel the function and return to the previous channel.

## Direct Tune

This feature is used to search for channels by entering channel numbers.

1. Press [MENU] > [Direct Tune] on the SiriusXM radio screen.

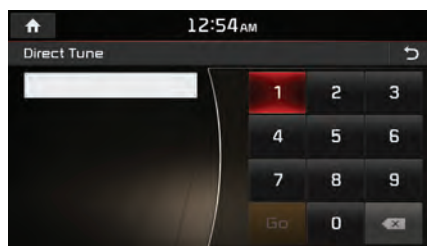

2. Enter the number of the channel you want to receive and press [GO].


## Sound Settings

 1. Press [MENU] > [Sound Settings] in the SiriusXM radio screen.
2. For more details, refer to "Sound" on page 137.

## Featured Favorites

Featured Favorites allows SiriusXM to broadcast additional presets.

1. Press [MENU] > [More Features] > [Featured Favorites] on the SiriusXM radio screen.

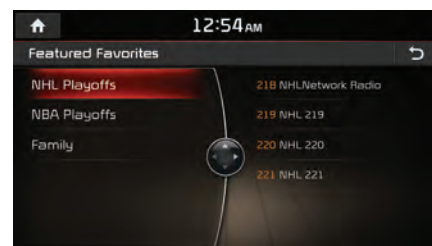

- Example 1 : "Martha's Favorites" may represent Martha Stuart's favorites presets on her radio.
- Example 2 : During holidays, "Holiday Music" may represent all the SiriusXM channels that are playing the holiday music for easy access by users

Multiple sets Featured Favorites data can be broadcast by SiriusXM and can change from time to time.

# Radio Operation (SiriusXM™)

 
## Favorites

You can check the song or artist added in [Favorites] menu.

Add the song or artist in the [Favorites] menu. Refer to “Adding to Favorites” on page 30.

1. Press [MENU] > [More Features] > [Favorites] on the SiriusXM radio screen.

The Favorites menu is displayed on the screen.

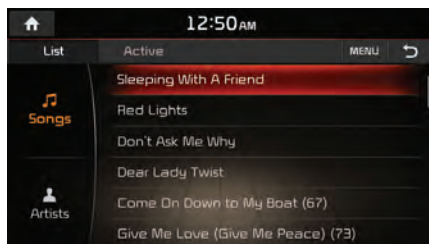

<Favorites list>


### ! Note

 When the song or artist added in [Favorites] menu is playing on other channel, the pop-up is displayed on the screen. For more details, refer to “Favorites Alert On/Off” on page 33.

## Viewing Active Alert

You can listen to live broadcast by selecting the channel when the song or artist added in [Favorites] menu is playing on other channel.

1. Press [Active] on the favorites list.

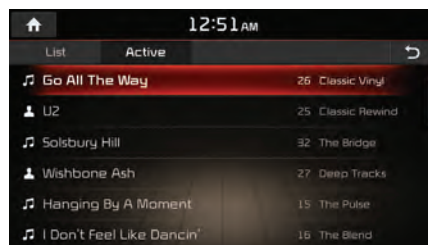

2. Listen to live broadcast by selecting the desired item.

## Deleting the song or artist saved in [Favorites] menu

1. Press [MENU] > [Delete] on the favorites menu.



2. Select the desired item, then press [Delete].
  - [Delete]: Deletes the selected items.
  - [Delete All]: Deletes all items.
  - [Unmark All]: Unmarks all items.
  - [Cancel]: Exits delete screen.

# Radio Operation (SiriusXM™)

## Favorites Alert On/Off

 
This feature sets whether to display the pop-up on the screen when the song or artist added in [Favorites] menu is playing on other channel.

1. Press [MENU] > [More Features] > [Favorites Alert] on the SiriusXM radio screen.



Pressing the [Favorites Alert] again will cancel the function.

2. When the song or artist saved in [Favorites] menu is playing on other channel, the pop-up is displayed on the screen.

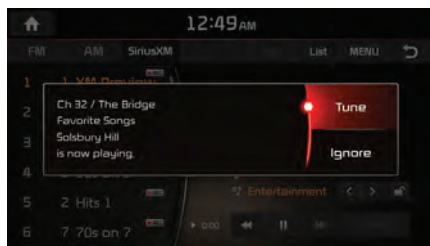

- [Tune]: Moves to the selected channel.
- [Ignore]: Moves to the previous screen.

## Storing SiriusXM™ preset

A total of 18 SiriusXM channels can be saved.

1. Select the desired channel.
2. Press [MENU] > [More Features] > [Save as Preset].
3. Press the desired preset number.



The channel is saved.

### ! Note

 
When the channel is preset on a number of which another channel has already been preset, the previously preset channel is erased.

# Radio Operation (SiriusXM™)


## Reordering SiriusXM™ preset

The 18 SiriusXM channels can be reordered.

1. Press [MENU] > [More Features] > [Reorder Presets] on the SiriusXM radio screen.
2. Press the desired preset from the list.

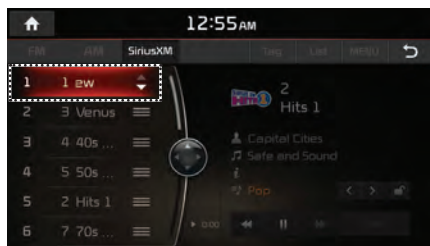

 
3. Move up and down and press the selected preset, or drag it to the desired position.

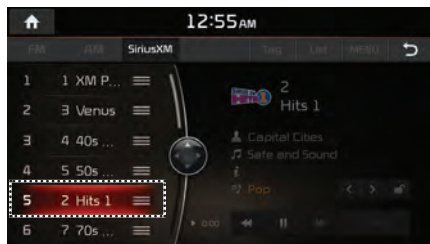

## Game Zone

You can check the list of sports leagues and games for selected league. (League : NFL, MLB, NBA, NHL, CFB, CBK, WCBK)

 1. Press [MENU] > [More Features] > [Game Zone] on the SiriusXM radio screen.

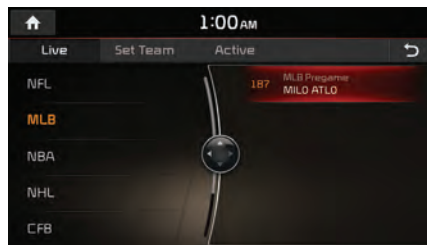


<Live broadcast mode>

2. Listen to live broadcast by selecting the desired league and game.

## Setting Team

 You can listen to the game of the favorite team by marking the favorite team.

1. Press [Set Team] on the live broadcast mode.
2. Select the desired league and mark the desired team.

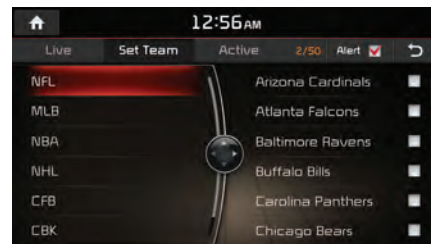

### ! Note

 
When the marked team is playing on other channel, the pop-up is displayed on the screen. For more details, refer to "Alert On/Off".

# Radio Operation (SiriusXM™)

## Viewing Active Alert

You can listen to live broadcast by selecting the channel when the marked team is playing on other channel.

1. Press [Active] on the live broadcast mode.

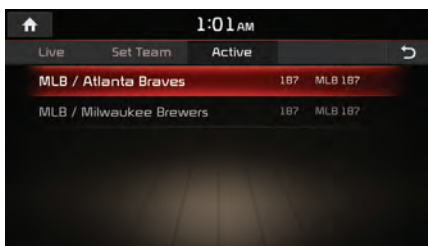


2. Listen to live broadcast by selecting the desired item.


## Alert On/Off

 This feature sets whether to display the pop-up on the screen when the marked team is playing on other channel.

1. Press [Alert] on the [Set Team] menu.

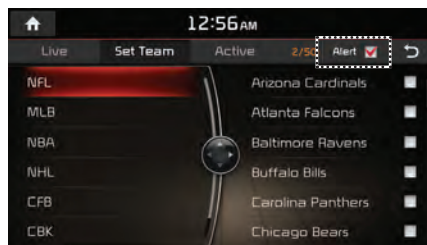

 2. When the marked team is playing on other channel, the pop-up is displayed on the screen.

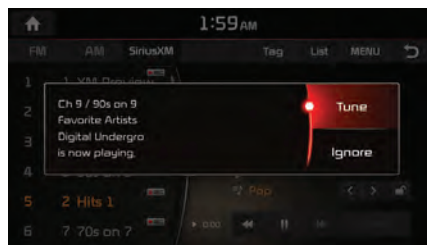

- [Tune]: Moves to the selected channel.
- [Ignore]: Moves to the previous screen.

## Subscription Status

This feature is used to check the Subscription status of SiriusXM.

 
1. Press [MENU] > [More Features] > [Subscription Status] on the SiriusXM radio screen.
2. If you have not subscribed to the SiriusXM service, press [Call] to enable Services.

# Radio Operation (SiriusXM™)

## Go to SiriusXM™ Data

The SiriusXM Data Service is a paid Satellite radio service which provides users with Weather, Traffic, Fuel prices, Stocks, Sports, and Movie times information.

1. Press [MENU] > [More Features] > [Go to SiriusXM Data] on the SiriusXM radio screen.

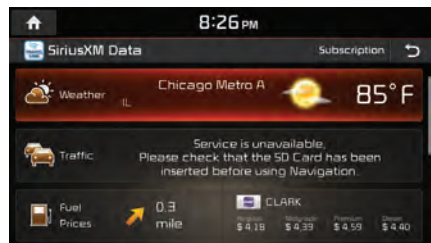

2. For more details, refer to "SiriusXM Data" on pages 122~134.


### ! Note

 If you want to subscribe to the SiriusXM Data Service, press [Subscription] > [Call] to enable Services.


# Audio CD/MP3 CD Operation

## Playing an Audio CD/MP3 CD

Insert a disc into the disc slot and playback will start automatically.

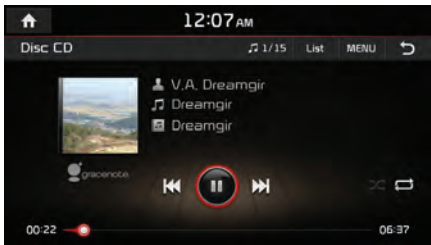

Audio CD

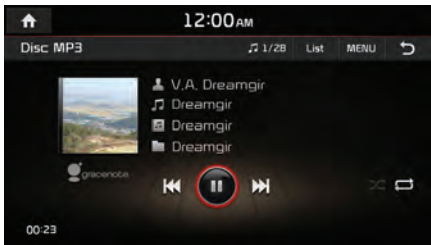 

MP3 CD

### ! Note

To play the Audio CD or MP3 CD while a different source is playing, press [HOME] > [Media] > [Disc CD] or [Disc MP3].

## Pause

Press [II] on screen or with the controller.

Press [▶] on screen or with the controller to play it again.

## Skip

You can play the previous or next track/file.

| Position   | Description                                                                                                                                                                                           |
|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen     | <ul style="list-style-type: none"><li>Press [◀◀/▶▶].</li><li>Pressing [◀◀] after 3 seconds of playback time plays the current track/file from the beginning.</li></ul>                                |
| Head unit  | <ul style="list-style-type: none"><li>Press "VSEEK/TRACKΛ".</li><li>Pressing [VSEEK] after 3 seconds of playback time plays the current track/file from the beginning.</li></ul>                      |
| Controller | <ul style="list-style-type: none"><li>Push the controller left or right.</li><li>Push the controller left after 3 seconds of playback time plays the current track/file from the beginning.</li></ul> |

## Search

You can rewind/fast forward to a specific point of a track/file.

| Position   | Description                                                                        |
|------------|------------------------------------------------------------------------------------|
| Screen     | Press and hold [◀◀/▶▶] and then release at the point you want.                     |
| Head unit  | Press and hold "VSEEK/TRACKΛ" and then release at the point you want.              |
| Controller | Push and hold the controller left or right and then release at the point you want. |

# Audio CD/MP3 CD Operation

## Seek

 
You can play the track/file directly by searching for the desired music.

| Position   | Description                                                                                                                                  |
|------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| Head unit  | Turn "TUNE/FILE" to search for a desired track/file. If the desired track/file is displayed, press the "TUNE/FILE" to play the track/file.   |
| Controller | Turn the controller to search for a desired track/file. If the desired track/file is displayed, press the controller to play the track/file. |

## List

You can play the desired track/file by searching the track/file list included in the disc.

1. Press [List].  
Or press [MENU] > [List].

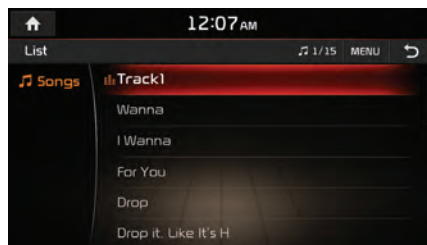

For example: Audio CD

- Press [MENU] > [Now Playing] to move to the current playing screen.
2. Press the desired track/file.

## Shuffle

All tracks/files can be played randomly.

1. Press [MENU] > [Shuffle].



For example: Audio CD

2. Press [On] or [Off].

### Note

You can set or cancel the Shuffle function by pressing  on the playing screen.

# Audio CD/MP3 CD Operation

## Repeat

The current playing track/file or folder is played repeatedly.

1. Press [MENU] > [Repeat].



For example: MP3 CD

2. Press the desired item.
  - [Repeat All]: Repeats all tracks/files.
  - [Repeat Folder]: Repeats all files within the current folder. (MP3 CD Only)
  - [Repeat One]: Repeats the current track/file.

### Note

You can change the Repeat function by pressing [⏮]/[⏪]/[⏩] on the playing screen.

⏮: Repeat All, ⏪: Repeat Folder (MP3 CD Only), ⏩: Repeat One

## Scan

This function scans the beginning of each track/file for 10 seconds.

1. Press [MENU] > [Scan].

 


For example: MP3 CD

2. Press the desired item.

| CD       | Menu    | Description                                                                |
|----------|---------|----------------------------------------------------------------------------|
| Audio CD | -       | Scans the beginning of each track for 10 seconds.                          |
| MP3 CD   | All     | Scans the beginning of each file for 10 seconds.                           |
|          | Folders | Scans the beginning of all files within the current folder for 10 seconds. |

3. Press [■] to cancel the Scan function.

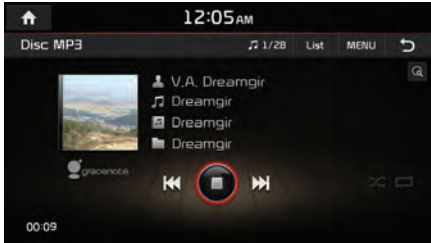

## Sound Settings

1. Press [MENU] > [Sound Settings].
2. For more details, refer to “Sound” on page 137.

# DVD/VCD Operation

 
## Playing a DVD/VCD

Insert a disc into the disc slot, with the label facing up.

Playback will start automatically. In some cases, the disc menu might appear.

### ! Note

- To play the DVD or VCD while a different source is playing, press [HOME] > [Media] > [DVD] or [VCD].
- If a menu screen is displayed, select the desired option by using the controller.
- Video is not available while driving. (Because of traffic regulations, video is only available while the vehicle is stopped.)

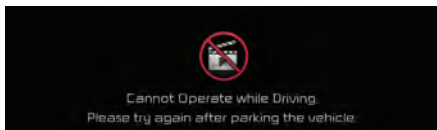

## Switching to Menu display or Full Screen Display

| Position   | Description                                                 |
|------------|-------------------------------------------------------------|
| Screen     | Press the screen.                                           |
| Controller | Push the controller up or down on full screen display mode. |

### ! Note

Press [MENU] > [Full Screen Display] or wait 5 seconds to display full screen mode.

## Pause

Press [II] on screen or with the controller.

Press [▶] on screen or with the controller to play it again.

## Skip

You can play the previous or next chapter/track.

| Position   | Description                                                                                                                                                                                                  |
|------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Screen     | <ul style="list-style-type: none"><li>• Press [◀◀/▶▶].</li><li>• Pressing [◀◀] after 3 seconds of playback time plays the current chapter/track from the beginning.</li></ul>                                |
| Head unit  | <ul style="list-style-type: none"><li>• Press "VSEEK/TRACK▲".</li><li>• Pressing [VSEEK] after 3 seconds of playback time plays the current chapter/track from the beginning.</li></ul>                      |
| Controller | <ul style="list-style-type: none"><li>• Push the controller left or right.</li><li>• Push the controller left after 3 seconds of playback time plays the current chapter/track from the beginning.</li></ul> |

# DVD/VCD Operation

## Search

You can rewind/fast forward to a specific point of a chapter/track.

| Position   | Description                                                                        |
|------------|------------------------------------------------------------------------------------|
| Screen     | Press and hold [◀◀/▶▶] and then release at the point you want.                     |
| Head unit  | Press and hold "VSEEK/ TRACK▲" and then release at the point you want.             |
| Controller | Push and hold the controller left or right and then release at the point you want. |

## Seek

 
You can play the chapter/track directly by searching for the desired chapter/track.

| Position   | Description                                                                                                                                           |
|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| Head unit  | Turn "TUNE/FILE" to search for a desired chapter/track. If the desired chapter/track is displayed, press the "TUNE/ FILE" to play the chapter/track.  |
| Controller | Turn the controller to search for a desired chapter/track. If the desired chapter/track is displayed, press the controller to play the chapter/track. |

## Title Menu/Disc Menu (DVD Only)

If the current title has a menu, the menu will appear on the screen.

1. Press [MENU] > [Title Menu] or [Disc Menu].

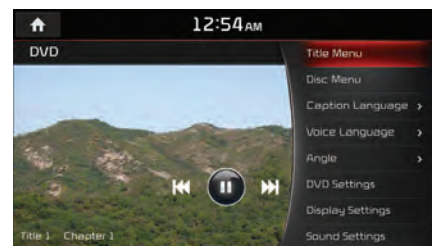


2. Select the desired item.
3. Press [OK].

# DVD/VCD Operation
 
## Caption Language (DVD Only)

Choose from all available caption languages.

1. Press [MENU] > [Caption Language].

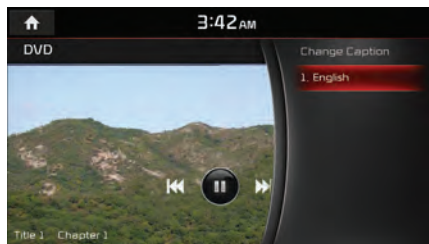

2. Select the desired caption language.


### ! Note

 The caption language may vary depending on the title of DVD.

## Voice Language (DVD Only)

Choose from all available voice languages.

1. Press [MENU] > [Voice Language].

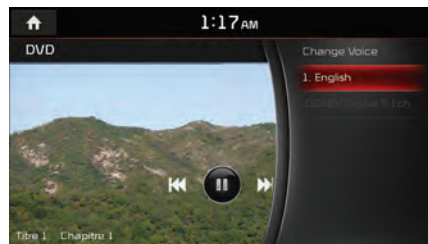

2. Select the desired voice language.


### ! Note

 The voice language may vary depending on the title of DVD.

## Angle (DVD Only)

Choose from all available camera angles.

1. Press [MENU] > [Angle].

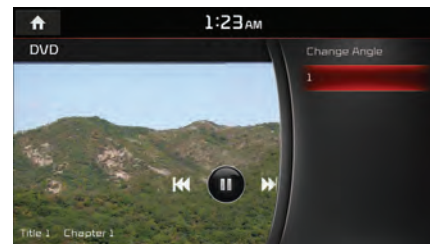

2. Select the desired angle.

### ! Note

The angle may vary depending on the title of DVD.

# DVD/VCD Operation

## DVD Settings (DVD Only)

Set the default language.

1. Press [MENU] > [DVD Settings].



2. Press the desired item.
  - [DVD Caption Language]: Select the desired caption language.
  - [DVD Voice Language]: Select the desired voice language.
  - [DVD Menu Language]: Select the desired menu language.
3. Press [↵].

 
### ! Note

If there is no desired language, press [ETC].  
Input the DVD language code, then press [Done]. Refer to "DVD language code" on pages 45-46.

## Repeat (VCD Only)

The current track plays repeatedly.

1. Press [MENU] > [Repeat].

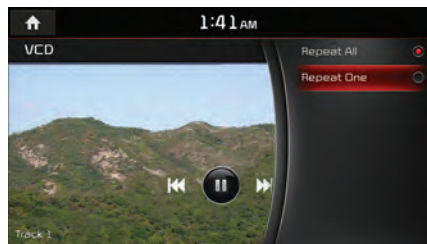

2. Press the desired item.
  - [Repeat All]: Repeats all tracks.
  - [Repeat One]: Repeats the current track.

### ! Note

You can change the Repeat function by pressing [⏮/⏭] on the playing screen.

 
⏮: Repeat All,

⏭: Repeat One

## Shortcut (VCD Only)

You can play the track directly by searching for the desired track.

1. Press [MENU] > [Shortcut].

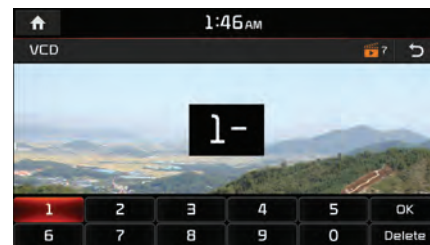

2. Press [0]~[9] to select the desired track.
3. Press [OK].

# DVD/VCD Operation

 
## PBC On/Off (VCD Only)

When playing VIDEO CD with PBC functions (Version 2.0 discs), you can enjoy playing simple interactive software with search functions, etc.

PBC allows you to play VIDEO CD interactively by selecting the menus on the screen.

Also refer to instructions supplied with the disc, as the operating procedure may differ according to the VIDEO CD.

1. Press [MENU] > [PBC].

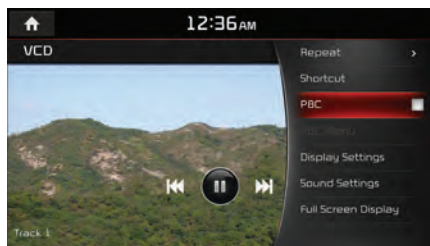

2. Press [0]~[9] to select the desired menu.



- Press [◀Prev] or [Next▶] to move to the previous or next page.
- Press [⬆] to move to the upper menu.
- If you press the wrong number, press [⬅] to delete the inputted number.

3. Press [OK].

### ! Note

- If you press [MENU] > [PBC Menu] when the PBC is On, the PBC menu is displayed on the screen.
- If you press [MENU] > [PBC] when the PBC is On, the PBC function is canceled.

## Display Settings

1. Press [MENU] > [Display Settings].
2. For more details, refer to "Display" on page 139.

## Sound Settings

1. Press [MENU] > [Sound Settings].
2. For more details, refer to "Sound" on page 137.

## DVD/VCD Operation

### DVD language code

| Code | Country     | Code | Country     | Code | Country    | Code | Country   |
|------|-------------|------|-------------|------|------------|------|-----------|
| 0101 | Afar        | 0625 | Frisian     | 1222 | Latvian    | 1912 | Slovenian |
| 0102 | Abkhazian   | 0701 | Irish       | 1307 | Malagasy   | 1913 | Samoan    |
| 0106 | Afrikaans   | 0704 | Scots       | 1309 | Maori      | 1914 | Shona     |
| 0113 | Amharic     | 0712 | Gallegan    | 1311 | Macedonian | 1915 | Somal     |
| 0118 | Arabic      | 0714 | Guarani     | 1312 | Malayalam  | 1917 | Albanian  |
| 0119 | Assamese    | 0721 | Gujarati    | 1314 | Mongolian  | 1918 | Serbian   |
| 0125 | Aymara      | 0801 | Hausa       | 1315 | Moldavian  | 1919 | Swati     |
| 0126 | Azerbaijani | 0809 | Hindi       | 1318 | Marathi    | 1920 | Sesotho   |
| 0201 | Bashkir     | 0818 | Croatian    | 1319 | Malay      | 1921 | Sundanese |
| 0205 | Belarusian  | 0821 | Hungarian   | 1320 | Maltese    | 1922 | Swedish   |
| 0207 | Bulgarian   | 0825 | Armenian    | 1325 | Burmese    | 1923 | Swahili   |
| 0208 | Bihari      | 0901 | Interlingua | 1401 | Nauru      | 2001 | Tamil     |
| 0209 | Bislama     | 0905 | Interlingue | 1405 | Nepali     | 2005 | Telugu    |
| 0214 | Bengali     | 0911 | Inupiak     | 1412 | Dutch      | 2007 | Tajik     |
| 0215 | Tibetan     | 0914 | Indonesian  | 1415 | Norwegian  | 2008 | Thai      |
| 0218 | Breton      | 0919 | Icelandic   | 1503 | Occitan    | 2009 | Tigrinya  |
| 0301 | Catalan     | 0920 | Italian     | 1513 | Oromo      | 2011 | Turkmen   |

## DVD/VCD Operation

---

| Code | Country   | Code | Country     | Code | Country     | Code | Country    |
|------|-----------|------|-------------|------|-------------|------|------------|
| 0315 | Corsican  | 0923 | Hebrew      | 1518 | Oriya       | 2012 | Tagalog    |
| 0319 | Czech     | 1009 | Yiddish     | 1601 | Punjabi     | 2014 | Tswana     |
| 0325 | Welsh     | 1001 | Japanese    | 1612 | Polish      | 2015 | Tongo      |
| 0401 | Danish    | 1022 | Javanese    | 1619 | Pushto      | 2018 | Turkish    |
| 0405 | Germany   | 1101 | Georgian    | 1620 | Portuguese  | 2019 | Tsonga     |
| 0426 | Bhutani   | 1111 | Kazakh      | 1721 | Quechua     | 2020 | Tatar      |
| 0512 | Greek     | 1112 | Greenlandic | 1813 | Romance     | 2023 | Twi        |
| 0514 | English   | 1113 | Cambodian   | 1814 | Kirundi     | 2111 | Ukrainian  |
| 0515 | Esperanto | 1114 | Kannada     | 1815 | Romanian    | 2118 | Urdu       |
| 0519 | Spanish   | 1115 | Korean      | 1821 | Russian     | 2126 | Uzbek      |
| 0520 | Estonian  | 1119 | Kashmiri    | 1823 | Kinyarwanda | 2209 | Vietnamese |
| 0521 | Basque    | 1121 | Kurdish     | 1901 | Sanskrit    | 2215 | Volapuk    |
| 0601 | Persian   | 1125 | Kirghiz     | 1904 | Sindhi      | 2315 | Wolof      |
| 0609 | Finnish   | 1201 | Latin       | 1907 | Sangho      | 2408 | Xhosa      |
| 0610 | Fijian    | 1214 | Lingala     | 1908 | Croatian    | 2515 | Yoruba     |
| 0615 | Faroese   | 1215 | Laotian     | 1909 | Sinhalese   | 2608 | Chinese    |
| 0618 | French    | 1220 | Lithuanian  | 1911 | Slovak      | 2621 | Zulu       |

# Jukebox Operation

 
## Playing Jukebox Music

You can play music files saved in Jukebox.

If there is no music file in Jukebox, copy the desired music file to Jukebox. For more details, refer to "Copying the USB music file to Jukebox" on page 54.

1. Press [HOME] > [Media].
2. Press [Jukebox Music].

Jukebox music automatically plays.

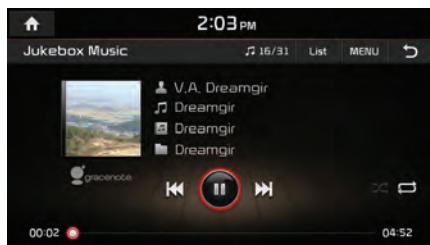

### ! Note

- If there are no songs, Jukebox music won't be available in [Media] menu screen.
- If you want to check the detailed file information, refer to page 15.

## Pause

You can pause the playing file.

For more details, refer to "Pause" on page 37.

## Skip

You can play the previous or next file.

For more details, refer to "Skip" on page 37.

## Search

You can rewind/fast forward to a specific point of a file.

For more details, refer to "Search" on page 37.

## Seek

 
You can play the file directly by searching for the desired file.

For more details, refer to "Seek" on page 38.

## Cover Flow View

You can search and select the cover flow in Jukebox.

1. Press [MENU] > [Cover Flow View].

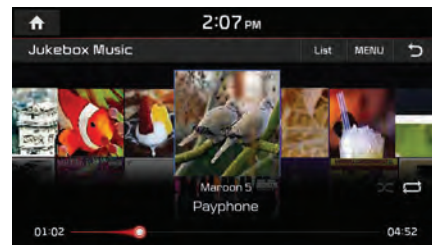

2. Press the desired album.
  - Press [MENU] > [View Default Player] to move to the current playing screen.
  - Press [MENU] > [List] to move to the list menu.
  - Press [MENU] > [Shuffle] to set the Shuffle function.
  - Press [MENU] > [Repeat] to set the Repeat function.
  - Press [MENU] > [Scan] to set the Scan function.
  - Press [MENU] > [Sound Settings] to set the sound.


# Jukebox Operation
 
## List

You can play the desired file by searching the file list included in Jukebox.

1. Press [List].

Or press [MENU] > [List].

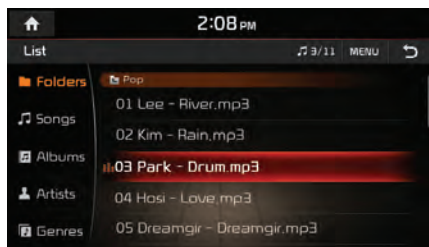

For example: Jukebox music screen

2. Select the desired file.
  - Press [MENU] > [Now Playing] to move to the current playing screen.
  - Press [MENU] > [Delete] to delete the desired file. For more details, refer to “Deleting Address Book” on page 80.
  - Press [MENU] > [Clear Jukebox] to delete all files and playlists in Jukebox.
  - Press [MENU] > [View Capacity] to check the storage capacity saved in Jukebox.

## Shuffle

All files can be played randomly.

For more details, refer to “Shuffle” on page 38.

## Scan

This function scans the beginning of each file for 10 seconds.

For more details, refer to MP3 CD operation of “Scan” on page 39.

## Sound Settings

1. Press [MENU] > [Sound Settings].
2. For more details, refer to “Sound” on page 137.

## Repeat

The current playing file is played repeatedly.

1. Press [MENU] > [Repeat].



2. Press the desired item.
  - [Repeat All]: Repeats all files.
  - [Repeat Folder]: Repeats all files within current folder.
  - [Repeat One]: Repeats the current file.

### ! Note

You can change the Repeat function by pressing [Repeat All] / [Repeat Folder] / [Repeat One] on the playing screen.

[Repeat All] : Repeat All, [Repeat Folder] : Repeat Folder,  
[Repeat One] : Repeat One

# Jukebox Operation

## Playing Jukebox Video

You can play the video files saved in Jukebox.

 
If there is no video file in Jukebox, copy the desired video to Jukebox. For more details, refer to "Copying the USB video file to Jukebox" on page 56.

1. Press [HOME] > [Media].
2. Press [Jukebox Video].

The Jukebox Video is played.

### ! Note

- If there are no videos, Jukebox Video won't be available in the [Media] menu screen.
- Video is not available while driving.  
(Because of traffic regulations, video is only available while the vehicle is stopped.)

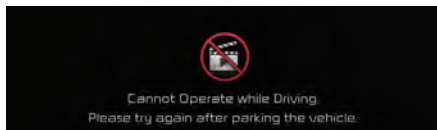

- If you want to check the detailed file information, refer to page 15.

## Switching to Menu display or Full Screen Display

| Position   | Description                                                 |
|------------|-------------------------------------------------------------|
| Screen     | Press the screen.                                           |
| Controller | Push the controller up or down on full screen display mode. |

### ! Note

Press [MENU] > [Full Screen Display] or wait 5 seconds to display full screen mode.

## Pause

You can pause the playing file.

For more details, refer to "Pause" on page 37.

## Skip

You can play the previous or next file.

For more details, refer to "Skip" on page 37.

## Search

You can rewind/fast forward to a specific point of a file.

For more details, refer to "Search" on page 37.

## Seek

You can play the file directly by searching for the desired file.

For more details, refer to "Seek" on page 38.

## List

You can play the desired file by searching the file list included in Jukebox.

For more details, refer to "List" on page 48.

## Shuffle

All files can be played randomly.

For more details, refer to "Shuffle" on page 38.

## Repeat

 
The current playing file is played repeatedly.

For more details, refer to "Repeat" on page 48.

# Jukebox Operation

## Caption Settings

1. Press [MENU] > [Caption Settings].

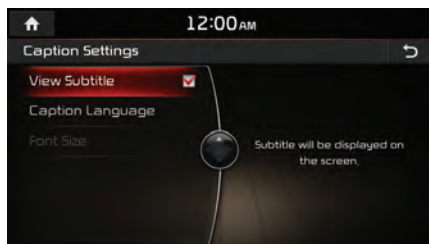

2. Set the desired option.
  - [View Subtitle]: Turns video subtitles on/off.
  - [Caption Language]: Selects the desired caption language.
  - [Font Size]: Adjusts the font size of video subtitles.

## Voice Settings

1. Press [MENU] > [Voice Settings].



2. Set the desired voice.

## Display Settings

1. Press [MENU] > [Display Settings].
2. For more details, refer to "Display" on page 139.

 
## Sound Settings

1. Press [MENU] > [Sound Settings].
2. For more details, refer to "Sound" on page 137.

## DivX® VOD

You must register your device to play DivX® protected videos.

1. Press [MENU] > [DivX® VOD].

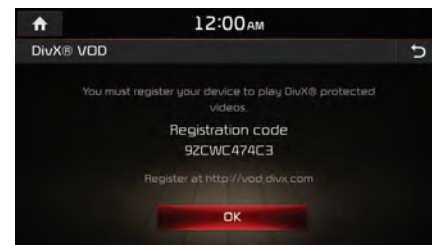

2. After checking the registration code, register at <http://vod.divx.com>.

### ! Note

All the downloaded videos from DivX® VOD with this registration code can only be played back on this device.

# Jukebox Operation

## Viewing Jukebox Image

You can view the image files saved in Jukebox.

If there is no image file in Jukebox, copy the desired image to Jukebox. For more details, refer to “Copying the USB image file to Jukebox” on page 57.

- 1. Press [HOME] > [Media].
- 2. Press [Jukebox Image].

The Jukebox Image is viewed.

### ! Note

- If there are no images, Jukebox image won't be available in the [Media] menu screen.
- If you want to check the detailed file information, refer to page 15.
- Image is not available while driving.  
(Based on the traffic regulation, Image is only available whenever vehicle is in stop condition with parking gear.)



## Switching to Menu display or Full Screen Display

| Position   | Description                                                 |
|------------|-------------------------------------------------------------|
| Screen     | Press the screen.                                           |
| Controller | Push the controller up or down on full screen display mode. |

### ! Note

Press [MENU] > [Full Screen Display] or wait 5 seconds to display full screen mode.

## Skip

You can view the previous or next image.

| Position   | Description                        |
|------------|------------------------------------|
| Screen     | Press [◀◀/▶▶].                     |
| Controller | Push the controller left or right. |

## Zoom in/out

- 1. Turn the controller left or right.



- 2. Push the controller up, down, left or right to move the image.

# Jukebox Operation

## Slideshow

1. Press [MENU] > [Slideshow].



 
The slideshow is played.

2. Press the controller to stop the slideshow.

## List

You can view the desired image by searching the image list included in Jukebox.

1. Press [List].  
Or press [MENU] > [List].

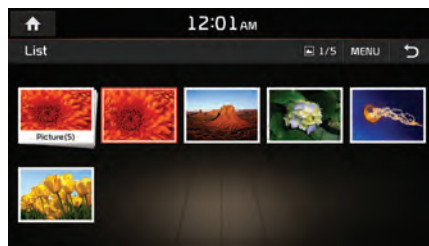

2. Press the desired image.
  - Press [MENU] > [Now Playing] to move to the current playing screen.
  - Press [MENU] > [Delete] to delete the desired file. For more details, refer to "Deleting Address Book" on page 80.
  - Press [MENU] > [Clear Jukebox] to delete all files and playlists in Jukebox.
  - Press [MENU] > [View Capacity] to check the storage capacity saved in Jukebox.

## Slideshow Settings

You can set the slideshow interval. The slideshow is played according to the time interval.

1. Press [MENU] > [Slideshow Settings].



2. Press the desired slideshow interval.

## Display Settings

 
1. Press [MENU] > [Display Settings].
2. For more details, refer to "Display" on page 139.

# USB Operation

## Playing USB Music

You can play music files saved in a USB memory device.

Connect a USB device to the USB port. Playback will start automatically.

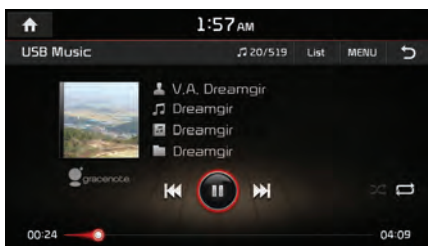

### Note

To play USB music while a different source is playing, press [HOME] > [Media] > [USB Music].

## Pause

You can pause the playing file.

For more details, refer to "Pause" on page 37.

## Skip

You can play the previous or next file.

For more details, refer to "Skip" on page 37.

## Search

You can rewind/fast forward to a specific point of a file.

For more details, refer to "Search" on page 37.

## Seek

 
You can play the file directly by searching for the desired file.

For more details, refer to "Seek" on page 38.

## Cover Flow View

You can search and select the cover flow in USB.

1. Press [MENU] > [Cover Flow View].

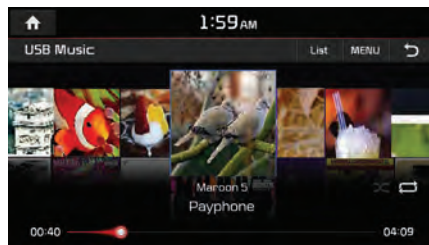


2. Press the desired album.
  - Press [MENU] > [View Default Player] to move to the current playing screen.
  - Press [MENU] > [List] to move to the list menu.
  - Press [MENU] > [Shuffle] to set the Shuffle function.
  - Press [MENU] > [Repeat] to set the Repeat function.
  - Press [MENU] > [Copy to Jukebox] to copy the desired files to Jukebox. For more details, refer to "Copying the USB music file to Jukebox" on page 54.
  - Press [MENU] > [Scan] to set the Scan function.
  - Press [MENU] > [Sound Settings] to set the sound.

# USB Operation
 
## List

You can play the desired file by searching the file list included in USB.

1. Press [List].  
Or press [MENU] > [List].

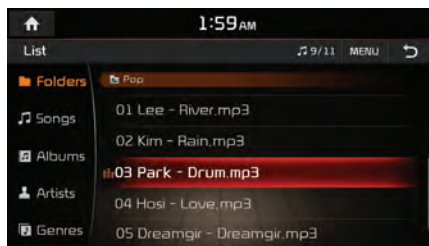

2. Press the desired file after searching for folders, songs, albums, artists, or genres.
  - Press [MENU] > [Now Playing] to move to the current playing screen.
  - Press [MENU] > [Copy to Jukebox] to copy the desired files to Jukebox.

## Shuffle

All files can be played randomly.  
For more details, refer to "Shuffle" on page 38.

## Repeat

The current playing file is played repeatedly.  
For more details, refer to "Repeat" on page 48.

## Copying the USB music file to Jukebox

You can copy the desired files to Jukebox.

1. Press [MENU] > [Copy to Jukebox].



2. Select the desired file, then press [Copy].
  - [Copy]: Copies the selected file.
  - [Copy All]: Copies all the files.
  - [Unmark All]: Unmarks all the files.
  - [Cancel]: Cancels the copy function.

## Note

During file copy, the  icon is displayed on the top right side of the screen. When the copy is completed, the icon disappears automatically.

## Scan

This function scans the beginning of each file for 10 seconds.

For more details, refer to MP3 CD operation of "Scan" on page 39.

## Sound Settings

1. Press [MENU] > [Sound Settings].
2. For more details, refer to "Sound" on page 137.

# USB Operation

 
## Playing USB Video

You can play video files saved in a USB memory device.

Connect a USB device to the USB port and playback starts automatically.

### Note

- To play USB Video while a different source is playing, press [HOME] > [Media] > [USB Video].
- Video is not available while driving.  
(Because of traffic regulations, video is only available while the vehicle is stopped.)

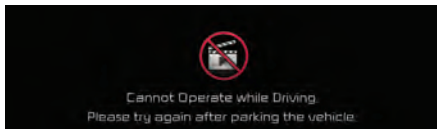

## Switching to Menu display or Full Screen Display

| Position   | Description                                                 |
|------------|-------------------------------------------------------------|
| Screen     | Press the screen.                                           |
| Controller | Push the controller up or down on full screen display mode. |

### Note

Press [MENU] > [Full Screen Display] or wait 5 seconds to display full screen mode.

## Pause

You can pause the playing file.

For more details, refer to "Pause" on page 37.

## Skip

You can play the previous or next file.

For more details, refer to "Skip" on page 37.

## Search

You can rewind/fast forward to a specific point of a file.

For more details, refer to "Search" on page 37.

## Seek

You can play the file directly by searching for the desired file.

 
For more details, refer to "Seek" on page 38.

# USB Operation

## List

You can play the desired file by searching the file list included in USB.

1. Press [List].  
Or press [MENU] > [List].

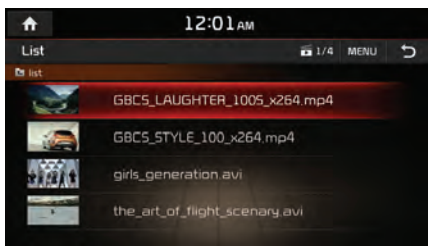

2. Press the desired file.
  - Press [MENU] > [Now Playing] to move to the current playing screen.
  - Press [MENU] > [Copy to Jukebox] to copy the desired files to Jukebox.

## Shuffle

All files can be played randomly.

For more details, refer to "Shuffle" on page 38.

## Repeat

 
The current playing file is played repeatedly.

For more details, refer to "Repeat" on page 48.

## Copying the USB video file to Jukebox

You can copy the desired files to Jukebox.

1. Press [MENU] > [Copy to Jukebox].

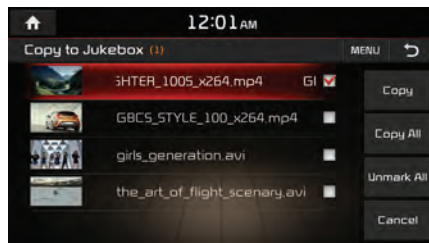

2. Select the desired file, then press [Copy].
  - [Copy]: Copies the selected file.
  - [Copy All]: Copies all the files.
  - [Unmark All]: Unmarks all the files.
  - [Cancel]: Cancels the copy function.

### Note

During file copy, the  icon is displayed on the top right side of the screen. When the copy is completed, the icon disappears automatically.

## Caption Settings

You can set the caption.

For more details, refer to "Caption Settings" on page 50.

## Voice Settings

You can set the voice.

For more details, refer to "Voice Settings" on page 50.

## DivX® VOD

You must register your device to play DivX® protected videos.

For more details, refer to "DivX® VOD" on page 50.

## Display Settings

1. Press [MENU] > [Display Settings].
2. For more details, refer to "Display" on page 139.

## Sound Settings

1. Press [MENU] > [Sound Settings].
2. For more details, refer to "Sound" on page 137.

# USB Operation


## Viewing USB Image

You can play image files saved in a USB memory device.

1. Connect a USB device to the USB port.
2. Press [HOME] > [Media] > [USB Image].

### ! Note

 Image is not available while driving. (Based on the traffic regulation, Image is only available whenever vehicle is in stop condition with parking gear.)

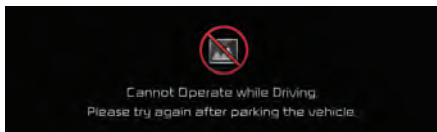

## Switching to Menu display or Full Screen Display

| Position   | Description                                                 |
|------------|-------------------------------------------------------------|
| Screen     | Press the screen.                                           |
| Controller | Push the controller up or down on full screen display mode. |

### ! Note

Press [MENU] > [Full Screen Display] or wait 5 seconds to display full screen mode.

## Skip

You can view the previous or next image.  
For more details, refer to "Skip" on page 51.

## Zoom in/out

Turn the controller left or right.  
For more details, refer to "Zoom in/out" on page 51.

## Slideshow

You can set the slideshow.  
For more details, refer to "Slideshow" on page 52.

## List

You can view the desired image by searching the image list included in USB.  
For more details, refer to "List" on page 52.

 
## Slideshow Settings

You can set the slideshow interval. The slideshow is played according to the time interval.  
For more details, refer to "Slideshow Settings" on page 52.

## Copying the USB image file to Jukebox

You can copy the desired files to Jukebox.

1. Press [MENU] > [Copy to Jukebox].

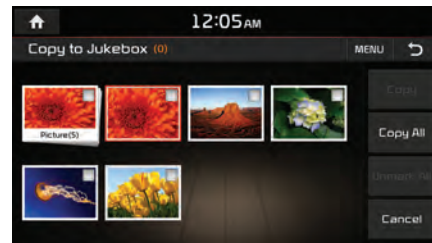

2. Select the desired file, then press [Copy].
  - [Copy]: Copies the selected file.
  - [Copy All]: Copies all the files.
  - [Unmark All]: Unmarks all the files.
  - [Cancel]: Cancels the copy function.

### ! Note

During file copy, the  icon is displayed on the top right side of the screen. When the copy is completed, the icon disappears automatically.

## Display Settings

1. Press [MENU] > [Display Settings].
2. For more details, refer to "Display" on page 139.

# iPod® Operation

## Playing iPod®

1. Use iPod exclusive cable to connect iPod to USB connector.
2. Press [HOME] > [Media] > [iPod].  
It runs iPod mode.

## Pause

You can pause the playing file. For more details, refer to “Pause” on page 37.

## Skip

You can play the previous or next file. For more details, refer to “Skip” on page 37.

## Search

You can rewind/fast forward to a specific point of a file. For more details, refer to “Search” on page 37.

 
## Seek

You can play the file directly by searching for the desired file. For more details, refer to “Seek” on page 38.

## List

You can play the desired file by searching the file list included in iPod.

1. Press [List].  
Or press [MENU] > [List].

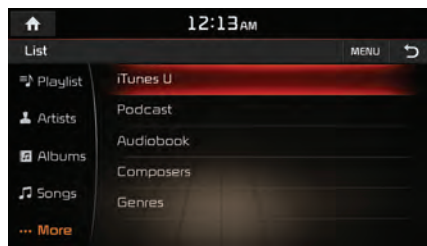

2. Press the desired file.
  - Press [MENU] > [Now Playing] to move to the current playing screen.
  - Press [MENU] > [Edit Category] to edit the category, then press the desired category. After moving to the desired category by turning the controller left or right, press the controller.

## Shuffle

 
All files can be played randomly.

For more details, refer to “Shuffle” on page 38.

## Repeat

The current playing file is played repeatedly.

1. Press [MENU] > [Repeat].

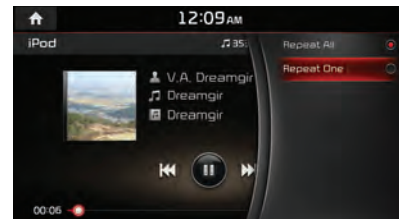

2. Press the desired item.
  - [Repeat All]: Repeats all files.
  - [Repeat One]: Repeats the current file.

## Note

You can change the Repeat function by pressing [Repeat All] / [Repeat One] on the playing screen.

[Repeat All]: Repeat All, [Repeat One]: Repeat One

## Scan

This function scans the beginning of each file for 10 seconds. For more details, refer to Audio CD operation of “Scan” on page 39.

## Sound Settings

1. Press [MENU] > [Sound Settings].
2. For more details, refer to “Sound” on page 137.

# Pandora® Radio Operation

 
## Playing Pandora®

Pandora is personalized internet radio that helps you discover new music and plays the favorites you already love. Enjoy all of your stations in your car, on the web and on the go.

1. Download Pandora from the Apple® App Store or Google® Play Store on your mobile phone.

For more details, check the Pandora web site <<http://www.pandora.com>>.

2. For Apple Device, connect an Apple Device to the USB port.  
For Android Phone, connect an Android Phone by Bluetooth.
3. To play the Pandora, press [HOME] > [Media] > [Pandora].

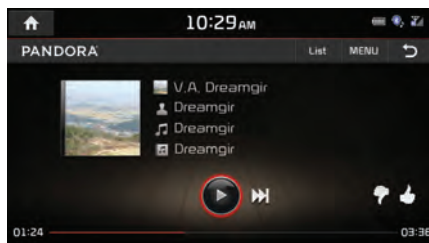

<Pandora screen>

### ! Note

- This feature may not be supported in some mobile phones.
- There might be unexpected operation in Pandora mode depending on the type of the phone.

## Pause

You can pause the music. For more details, refer to "Pause" on page 37.

## Skip

You can play the next song within the same station.

| Position   | Description                                     |
|------------|-------------------------------------------------|
| Screen     | Press [▶▶].                                     |
| Head unit  | Press "TRACK▲".                                 |
| Controller | Push the controller to the right. Or press "▲". |

### ! Note

Previous Track is not available.

## Seek

You can play the desired station by searching for it with "TUNE/FILE" knob or Controller.

| Position   | Description                                                                                                                         |
|------------|-------------------------------------------------------------------------------------------------------------------------------------|
| Head unit  | Turn "TUNE/FILE" to search for a desired station. If the desired station is displayed, press the "TUNE/FILE" to play the station.   |
| Controller | Turn the controller to search for a desired station. If the desired station is displayed, press the controller to play the station. |

## Station List

You can play the desired station by searching the station list included in Pandora.

1. Press [List].  
Or press [MENU] > [Station List].



# Pandora® Radio Operation

2. Press the desired station.
  - Press [MENU] > [Now Playing] to move to the current playing screen.
  - Press [MENU] > [Sort by] > [A - Z] or [Date] to display in alphabetical or date order.
  - To search for new station, press [MENU] > [New Station]. After entering the desired station and press [Q]. Then press the desired item.

## Feature of this Track

This menu is used to display the feature of the track currently playing.

Press [MENU] > [Feature of this Track].

## Sound Settings

1. Press [MENU] > [Sound Settings].
2. For more details, refer to "Sound" on page 137.

## Thumbs Up / Thumbs Down

Rates songs using thumbs up and thumbs down.

1. Press [MENU].



2. Press [👍 Thumbs Up] or [👎 Thumbs Down].
  - [👍 Thumbs Up]: If you like the song currently playing, press this button to send a "Thumbs up" signal to Pandora so that more music similar to current song will play on this station.
  - [👎 Thumbs Down]: Skips to next song and current song will never play again on this station.

## Bookmark

Bookmarks favorite track.

1. Press [MENU].
2. Press [Bookmark] to bookmark the track currently playing.

### Note

You can view your bookmarked tracks from your Pandora profile online. Go to [pandora.com](http://pandora.com), then click on the "Your Profile" button above the player. That will bring up a page with your stations and bookmarked tracks.

# Aha Radio Operation

 
## Playing Aha Radio

Aha Radio is personalized internet radio. You can easily access and organize all your favorite content from the web into personalized, live, on-demand stations.

1. Download Aha Radio from the Apple® App Store or Google® Play Store on your mobile phone.

For more details, check the Aharadio web site <<http://www.aharadio.com>>.

2. For Apple Device, connect an Apple Device to the USB port.  
For Android Phone, connect an Android Phone by Bluetooth.
3. To play Aha Radio, press [HOME] > [Media] > [Aha].

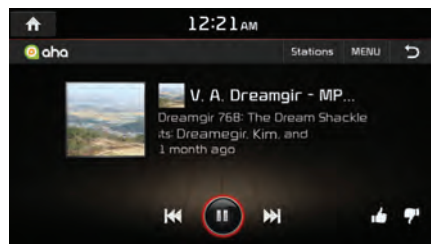

<Aha Radio screen>

### ! Note

- This feature may not be supported in some mobile phones.
- There might be unexpected operation in Aha Radio mode depending on the type of the phone.

## Pause

You can pause the playing file. For more details, refer to "Pause" on page 37.

## Skip

You can play the previous or next contents within the same station.

| Position   | Description                        |
|------------|------------------------------------|
| Screen     | Press [ <b>◀◀/▶▶</b> ].            |
| Head unit  | Press " <b>VSEEK/TRACK^</b> ".     |
| Controller | Push the controller left or right. |

## Seek

You can play the desired station by searching for it with "TUNE/FILE" knob or Controller.

| Position  | Description                                                                                                                       |
|-----------|-----------------------------------------------------------------------------------------------------------------------------------|
| Head unit | Turn "TUNE/FILE" to search for a desired station. If the desired station is displayed, press the "TUNE/FILE" to play the station. |

|            |                                                                                                                                     |
|------------|-------------------------------------------------------------------------------------------------------------------------------------|
| Controller | Turn the controller to search for a desired station. If the desired station is displayed, press the controller to play the station. |
|------------|-------------------------------------------------------------------------------------------------------------------------------------|

## Search

You can rewind/fast forward to a specific point of the contents. (Rewind 15 seconds/ Fast forward 30 seconds)

| Position   | Description                                                                        |
|------------|------------------------------------------------------------------------------------|
| Screen     | Press and hold [ <b>◀◀/▶▶</b> ] and then release at the point you want.            |
| Head unit  | Press and hold " <b>VSEEK/TRACK^</b> " and then release at the point you want.     |
| Controller | Push and hold the controller left or right and then release at the point you want. |

### ! Note

 
This feature may not be supported in some tracks.

# Aha Radio Operation

## Stations

You can play the desired station by searching the station list included in Aha Radio.

1. Press [Stations] > [Presets] or press [MENU] > [Stations] > [Presets].

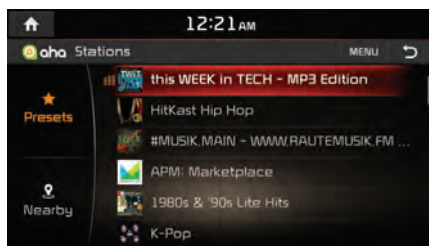

- Press [MENU] > [Now Playing] to move to the current playing screen.
2. Press the desired station.

## Sound Settings

1. Press [MENU] > [Sound Settings].
2. For more details, refer to "Sound" on page 137.

## Tracks

This menu is used to display the tracks of the station currently playing.

1. Press [MENU] > [Tracks].



- Press [MENU] > [Now Playing] to move to the current playing screen.
2. Press the desired track.

## Thumbs Up / Thumbs Down

Rates songs using thumbs up and thumbs down.

1. Press [MENU].



2. Press [Thumbs Up] or [Thumbs Down].
- [Thumbs Up]: If you like the genre of the content currently playing, press this button to send a "Thumb Up" signal to Aha Radio so that more content similar to current content will play on this station.
  - [Thumbs Down]: Skips to next content and current content will never play again on this station.

### ! Note

You can set this function by pressing [Thumbs Up] or [Thumbs Down] on the playing screen.

 
[Thumbs Up]: Thumbs Up, [Thumbs Down]: Thumbs Down

# Aha Radio Operation


## Making a call to place near current position

Making a call is possible if there is telephone information for the place you selected near your current position.

1. Press [Stations] > [Nearby] or press [MENU] > [Stations] > [Nearby].

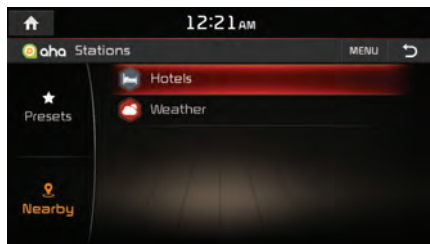

 2. Press the desired place.

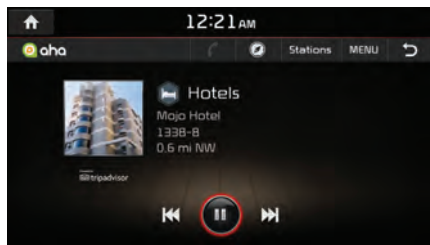


3. Press [Call], or press [MENU] > [Call].  
Making a call is not possible if there is no mobile phone connected through Bluetooth.


## Finding a place near current position through Navigation

 Finding a place is possible if there is navigation information for the place you selected near your current position.

1. Press [Stations] > [Nearby] or press [MENU] > [Stations] > [Nearby].

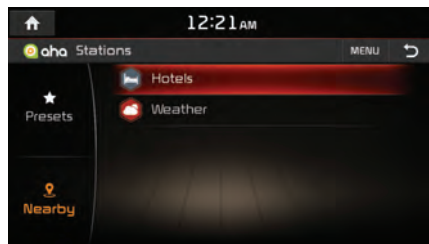

 2. Press the desired place.

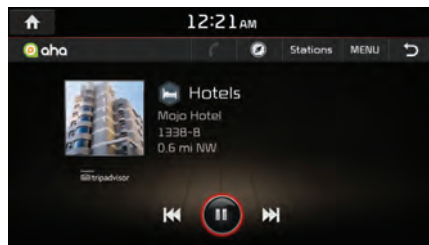


3. Press [Navigate], or press [MENU] > [Navigate].

# Auxiliary Device Operation
 
## Playing an AUX source


1. Connect an auxiliary device to the AUX terminal.

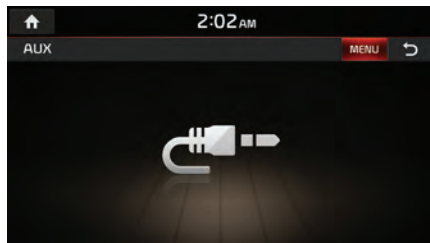

2. Play the auxiliary device.

### ! Note

 - Some auxiliary devices that do not have the video source may not produce output to the video screen.
- If you want to play the auxiliary device when playing other source, press [HOME] > [Media] > [AUX].
- Video is not available while driving. (Because of traffic regulations, video is only available while the vehicle is stopped.)

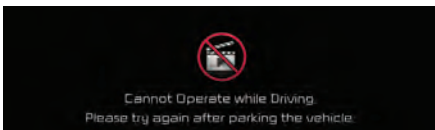

## Switching to Menu display or Full Screen Display during video playback

| Position   | Description                                                 |
|------------|-------------------------------------------------------------|
| Screen     | Press the screen.                                           |
| Controller | Push the controller up or down on full screen display mode. |

### ! Note

Press [MENU] > [Full Screen Display] or wait 5 seconds to display full screen mode.

## Display Settings

1. Press [MENU] > [Display Settings] on the menu display mode during video playback.
2. For more details, refer to "Display" on page 139.

## Sound Settings

1. Press [MENU] > [Sound Settings].
2. For more details, refer to "Sound" on page 137.

# Bluetooth® Audio

 
## Playing Bluetooth® Audio

### Before playing the Bluetooth® audio

- Music saved in the mobile phone can be played in the car through Bluetooth audio streaming.
- Bluetooth audio can be played only when a Bluetooth phone has been connected. To play Bluetooth audio, connect the Bluetooth phone to the car system. For more information on connecting Bluetooth, please refer to user's manual [Pairing and connecting the unit and a Bluetooth phone] on page 97.
- The audio streaming function may not be supported in some mobile phones. Only one function can be used at a time between the Bluetooth handsfree or Bluetooth audio function. For example, if you convert to the Bluetooth handsfree while playing Bluetooth audio, the music will be discontinued.

### Starting the Bluetooth® audio

1. Press [HOME] > [Media] > [Bluetooth Audio].
2. The Bluetooth audio screen is displayed.

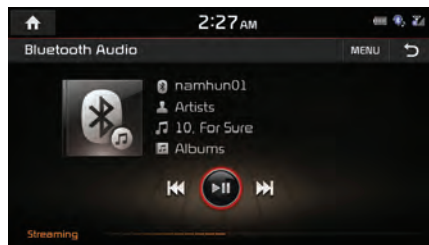

### Pause

Press [▶||] on screen or with the controller.

Press [▶||] on screen or with the controller to play it again.

#### ! Note

This feature may not be supported on some Bluetooth devices.

### Skip

You can play the previous or next file.

For more details, refer to "Skip" on page 37.

#### ! Note

This feature may not be supported on some Bluetooth devices.

### Sound Settings

1. Press [MENU] > [Sound Settings].
2. For more details, refer to "Sound" on page 137.

# Getting Started with Navigation

---

## Navigation use restrictions

Please observe and comply with local traffic rules and regulations.

- For your safety, some features cannot be operated while driving. Features that cannot be operated will be disabled.
- The route displayed for destination guidance is a reference and the route guidance will take you to the vicinity of your destination. The highlighted route is not always; the shortest distance, the least congested, and in some cases might, not be the fastest route.
- Road, name, and POI information may not always be completely updated. Some places may not include up to date information.
- The car position mark does not always indicate your exact location. This system uses GPS information, various sensors, and road map data to display the current position. However, errors in displaying your location may occur if the satellite is transmitting inaccurate signals or two or less satellite signals are being received. Errors that occur in such conditions cannot be corrected.

- The position of the vehicle within the navigation may differ from your actual location depending on various reasons, including the satellite transmission state, vehicle state (driving location and conditions), etc. Additionally, the car position mark may differ from the actual position if the map data is different from the actual road landscape, such as changes due to the construction of new roads. If such differences occur, driving for a short period of time will automatically correct the position of the vehicle through map matching or GPS information.

## What is GPS?

The Global Positioning System (GPS) is a satellite-based navigation system made up of a network of 24 satellites placed into orbit by the U.S. Department of Defense.

GPS was originally intended for military applications, but in the 1980s, the government made the system available for civilian use.

GPS works in any weather conditions, anywhere in the world, 24 hours a day.

There are no subscription fees or setup charges to use GPS.

## About satellite signals

Your unit must acquire satellite signals to operate. If you are indoors, near tall buildings or trees, or in a parking garage, the unit cannot acquire satellite signal.

## Acquiring satellite signals

Before the unit can determine your current position and navigate a route, you must do the following steps:

1. Go outside to an area free from tall obstructions.
2. Turn on the unit.

 
 
Acquiring satellite signals can take a few minutes.

# Getting Started with Navigation

## Operating Navigation Screen

The navigation system displays various information on the screen.

### Map screen

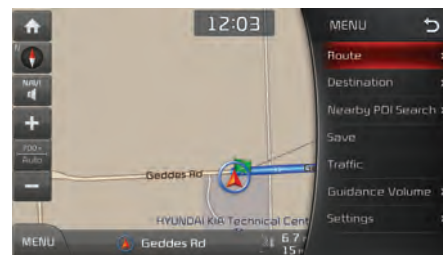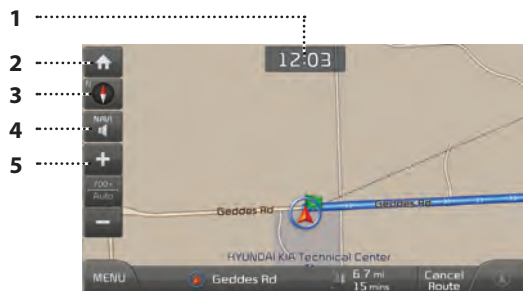

#### 1. Clock display

Displays current time.

#### 2. button

Press  to move to [HOME] menu screen.

#### 3. Map display

- Displays the direction of the map.

Press  or .

-  (Heading up (2D)): Displays always shows the vehicle's direction as proceeding towards the top of the screen.

-  (North up (2D)): Displays always has north at the top of screen.

#### GPS signal state display

Displays the state of GPS signal reception.

- Active - color : GPS reception is satisfactory.
- Inactive - gray : GPS reception is unsatisfactory.

#### 4. Navigation voice guidance on/off

 


Turns the navigation voice guidance On/ Off. Press  or .

#### 5. button

Zoom in the map. Press  repeatedly.

# Getting Started with Navigation

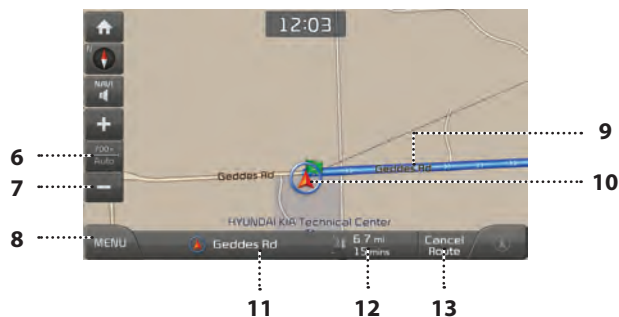

## 6. Map scale display

- Displays the current map scale.
- Sets the zoom level automatically to the guidance. For more details, refer to "Map scale" on page 70.

## 7. [−] button

Zoom out the map. Press [−] repeatedly.

## 8. [MENU] button

Moves to quick menu screen. For more details, refer to "General operations of quick menu" on page 76.

## 9. Route guidance

 
Displays the route guidance to the destination when a route is set.

## 10. Vehicle position

Displays current vehicle position and direction.

## 11. Current position

Displays the current position. Press to check the destination information.

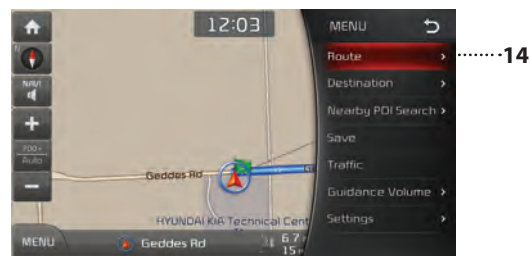

## 12. Remaining distance display/ Remaining time

Displays the distance to the destination and the estimated time of arrival. Press to check the destination information.

 
 
## 13. Cancel Route

Cancels the route guidance to the destination.

## 14. [Route] button

Changes the route conditions when a route is set. For more details, refer to "Changing the route conditions" on page 70.

# Getting Started with Navigation

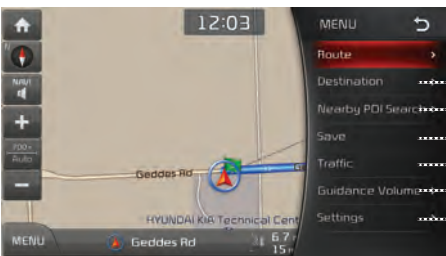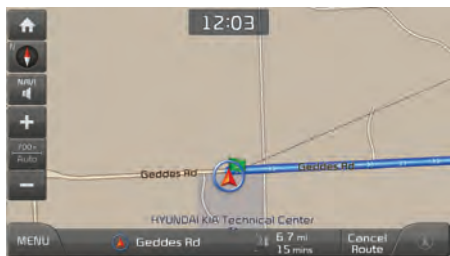

## 15. [Destination] button

Moves to [Destination] menu.

## 16. [Nearby POI Search] button

Finds a POI (Point Of Interest) near current position, destination or route. For more details, refer to "Searching for POI" on page 71.

## 17. [Save] button

Adds frequently used address to [Address Book] menu. For more details, refer to "Adding the position to address book" on page 73.

## 18. [Traffic] button

Displays the traffic information. For more details, refer to "Traffic information list" on page 74.

## 19. [Guidance Volume] button

Adjusts the navigation volume. For more details, refer to "Navigation volume" on page 74.

 
## 20. [Settings] button

Moves to [Settings] menu. For more details, refer to "Settings" on page 75.

# Getting Started with Navigation

## Zoom In / Zoom Out

Press **[+]** or **[-]** to set the zoom level on the map screen.

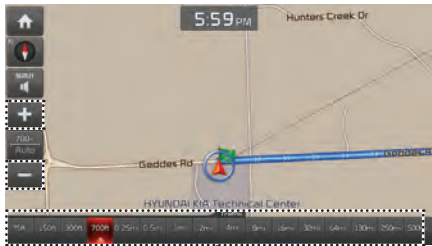

Zoom bar


### ! Note

 - You can set the zoom level by directly pressing the zoom bar on the screen.
- Press **[+]** or **[-]** for over 1 second. The zoom will continuously change.
- If the zoom range limit is reached, the **[+]** / **[-]** button will be disabled.
- If you want to set the auto zoom, press **[Auto Scale]**.

## Map scale

This function sets the zoom level automatically according to the road class.

Press **[Auto Scale]** on the map screen.

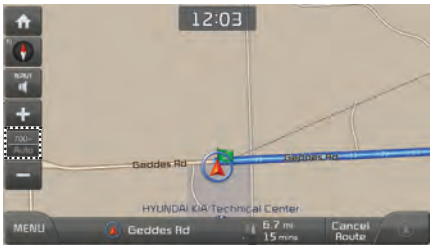

| Name                                                                                                            | Description                                                     |
|-----------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------|
|  Scale Fix (inactive - "Auto") | Fix the displayed scale.                                        |
|  Auto Scale (active - "Auto")  | Change the map scale automatically depending on the road class. |

## Changing the route conditions

You can set new route by searching for various route option when a route is set.

### Cancel Route

You can cancel the route guidance to the destination. For more details, refer to "Cancel Route" on page 84.

### Route Options

You can modify the route conditions or confirm the route information. Set the appropriate route condition according to your purpose.

For more details, refer to "Route Options" on page 84.

### Edit Route

The Edit Route allows you to travel through the searched routes by editing the current route. For more details, refer to "Edit Route" on page 85.

### Route Overview

You can check the entire route between your current location and your destination. For more details, refer to "Route Overview" on page 86.

# Getting Started with Navigation

## Route Info / Avoid

This allows you to check the route information and search for new route by avoiding the selected street(s). You can select the desired item to check the map information. For more details, refer to "Route Info / Avoid" on page 86.

## Route Preview

This allows you to check the detailed turn-by-turn list. For more details, refer to "Route Preview" on page 86.

## Alternative Routes

"Alternative Routes" shows the options of "Faster Time" route and "Shorter Distance" route. However, the "Shorter Distance" route in most cases does not have traffic information, so the time to destination for the "Shorter Distance" route may not always be accurate.

 
## Searching for POI

### POI search

You can find a POI (Point Of Interest) near current position, destination, route, scroll mark or city center.


1. Press [MENU] > [Nearby POI Search].

POI category

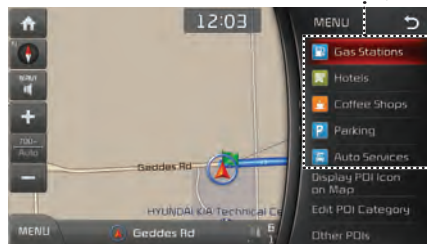

- Press [Other POIs] to search for all the categories, then select the desired POI.

 2. Select one of POI category.

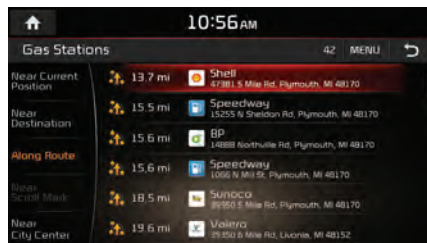

- Press [MENU] > [Name] to arrange the list in name order.

- Press [MENU] > [Distance] to arrange the list in distance order.

3. Press the desired position.

- [Near Current Position]: Search for POI's around the current position.

 
- [Near Destination]: Search for POI's around the destination when a route is set.

- [Along Route]: Search for POI's along route when a route is set.

- [Near Scroll Mark]: Search for POI's around the current cursor when the map is scrolled.

- [Near City Center]: Search for POI's around the city selected.

4. Press the desired item.

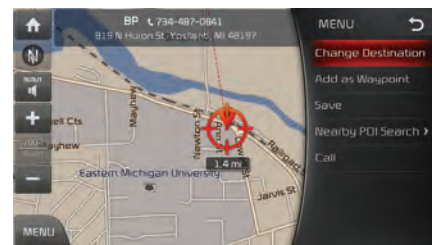

# Getting Started with Navigation

## 5. Press [Set as Destination].

When a route is set, press [Change Destination].

- If you want to add a waypoint when a route is set, press [Add as Waypoint]. For more details, refer to “Adding waypoints” on page 85.
- If you want to add the position to [Address Book] menu, press [Save]. For more details, refer to “Adding the position to address book” on page 73.
- If you want to find a POI (Point Of Interest) near current position, destination, route, scroll mark or city center, press [Nearby POI Search]. For more details, refer to “Searching for POI” on page 71.
- If you want to make a call, press [Call]. For more details, refer to “Making a call to POI” on page 75.

### ! Note

 
When you set the [Alternative Routes], follow steps 6.

## 6. Press the desired route.



- [Faster Time]: Calculates the route based on the fastest arrival time.
- [Shorter Distance]: Calculates the route based on the shortest distance.

## 7. Press [Start Guidance].

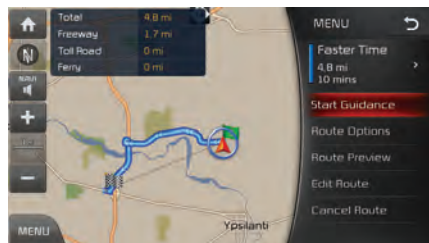

- Press [Route Options] to set the route option. For more details, refer to “Route Options” on page 84.
- Press [Route Preview] to scan the route. For more details, refer to “Route Preview” on page 86.


- Press [Edit Route] to edit the route. For more details, refer to “Edit Route” on page 85.
- Press [Cancel Route] to cancel the route. For more details, refer to “Cancel Route” on page 84.

### ! Note

 The destination is saved in the [Prev. Destinations] menu automatically. (Page 79)

## Displaying/Hiding POI icons on the map screen

1. Press [MENU] > [Nearby POI Search] > [Display POI Icon on map].

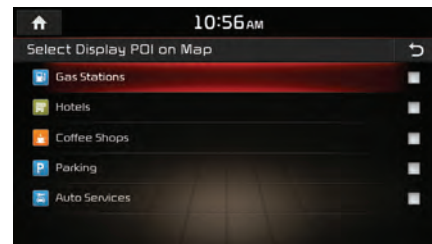


2. Mark or unmark the desired POI.  
The map icon is displayed on the right of POI menu screen.

# Getting Started with Navigation

 
## Editing POI category

You can edit the POI category displayed on POI menu screen.

1. Press [MENU] > [Nearby POI Search] > [Edit POI category].

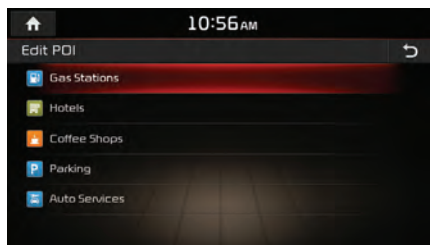

 2. Select the POI to edit.

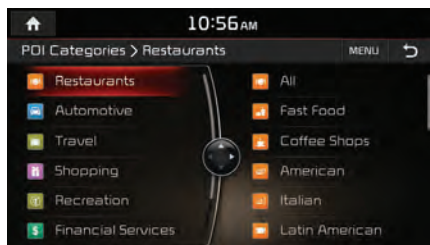


3. Select the desired POI.  
The selected POI appears on POI menu screen.

## Adding the position to address book

 You can add the current position or the selected place to address book.

1. Press [MENU] > [Save].

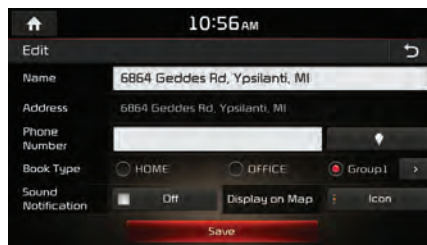

2. Edit the desired item.
  - [Name]: Change the name.
  - [Phone Number]: Enter the phone number.
  - [Icon]: Set the symbol displayed on the map screen.
  - [Book Type]: Select the address book type.
  - [Sound Notification]: Set the sound notification to On/Off.
  - [Display on Map]: Press [Icon&Name], [Icon] or [Off] to display on the map screen.
3. Press [Save] to save the setting.


## Note

 Press [MENU] > [Destination] > [Address Book] to check the added position.

# Getting Started with Navigation

## Scrolling map

1. Press and drag the map area on the screen.  
The selected point will be centered on the screen and the scroll mark will be displayed.  
Information about the marked point and straight line distance from the current position will be displayed at the center of the screen.

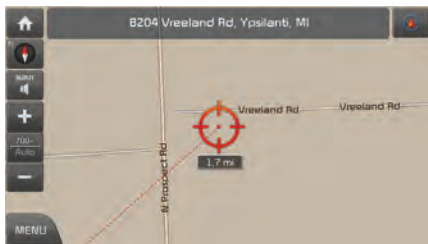

2. Press [MENU].
3. Follow steps 5~7 of the "POI search" on page 71.


### ! Note

 If a map area on the map screen is pressed, the map will continuously scroll in the corresponding direction until the pressing is released.

## Traffic information list

The current traffic/road event information is basically displayed on the traffic information list.

1. Press [MENU] > [Traffic].

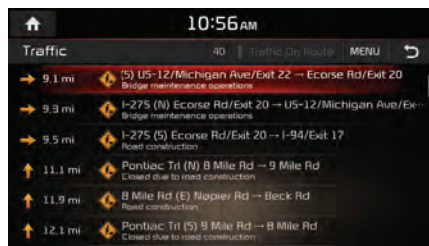

- Press [Traffic On Route] to display the traffic information on route when the route is set.
2. Press the traffic list to display the detailed information.
  3. Press [MENU].

You can check the related information by marking various information (Accidents, Road Construction, etc).

### ! Note

This feature may not be reflected depending on condition.

## Navigation volume

Press [MENU] > [Guidance Volume] to adjust the volume.

 


- [Navigation Volume]: Adjusts the navigation volume.
- [Mute]: Sets the sound to mute.
- [Volume Priority]: Sets the volume control to [Navigation Priority] or [Equal Volumes].

# Getting Started with Navigation

## Settings

Press [MENU] > [Settings] to set the screen.

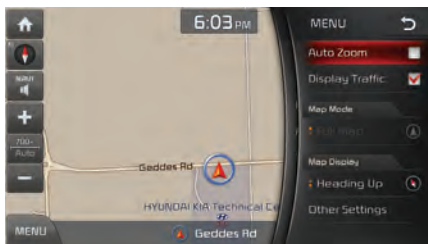


- Press [Auto Zoom] to set the map scale automatically depending on the road class.
- Press [Display Traffic] to set whether to display traffic information or not.
- Press [Full Map] to display the Full Map.
- Press [Show Turn List] to display the turn-by-turn list.
- [Map Display]: Sets the map screen to [Heading Up] or [North Up].
- [Other Settings]: Changes all the navigation settings. For more details, refer to "Navigation" on page 135.

## Making a call to POI

 After searching for a POI, the POI phone number information can be used to make a call to the POI facility.

1. Use the various search methods, such as the map scroll function, POI search function, and destination search function to search for a POI.

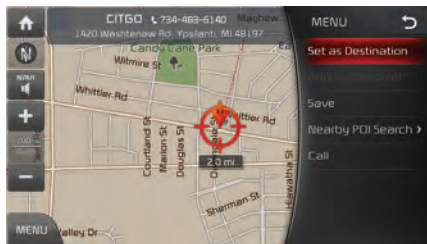

2. Press [Call] on the menu screen.
3. Bluetooth is used to make a call to the POI facility.


### Note

 - Making a call is not possible if there is no telephone information for a POI or if there is no mobile phone connected through Bluetooth.
- For more information of mobile phone authentication through Bluetooth or detailed information on conducting search, refer to [Pairing and connecting the unit and a Bluetooth phone], page 97.

## Guidance to Previous Destinations

When starting the navigation, the "Guidance to Previous Destinations" pop-up appears for about 10 seconds. The pop-up is displayed only when the navigation is started without the route planned.

Press one of the list.

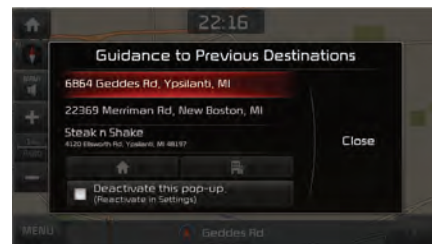


### Note

Press [HOME] > [Settings] > [Navigation] > [General] > [Show Prev. Dest at Navi Start-Up] to set the previous points view.

# Getting Started with Navigation

## General operations of quick menu

 1. Press [MENU] on the map screen.  
Or press [MENU] on the remote control for head unit on the map screen.

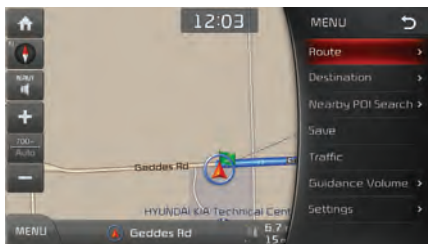

2. Press the preferred setting method.
  - [Route]: Changes the route conditions by using the [Route] menu when the route is activated. (Page 84)
  - [Destination]: Finds a destination by using the [Destination] menu. (Pages 77~83)
  - [Nearby POI Search]: Finds a destination by searching for POI. (Page 71)
  - [Save]: Adds the position to [Address Book] menu. (Page 73)
  - [Traffic]: Shows the traffic information list. (Page 74)

- [Guidance Volume]: Adjusts the navigation volume. (Page 74)
- [Settings]: Sets items related with navigation settings. (Page 75)

## General operations of [Navigation] menu

1. Press [NAV] on the remote control for head unit.



 
2. Press the preferred setting method.
  - [Destination]: Finds a destination by using the [Destination] menu. (Pages 77~83)
  - [Route]: Changes the route conditions by using the [Route] menu when the route is activated. (Page 84)
  - [Settings]: Sets items related with navigation. (Page 135)

# Searching for Destination of Navigation


## Places

You can search your destination by name, address or coordinates.

1. Press [MENU] or [NAV] > [Destination] > [Places].

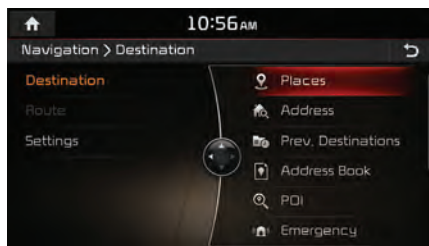

 
2. Enter the name of the location, address or coordinates and press [Q] or [MENU]>[Search].

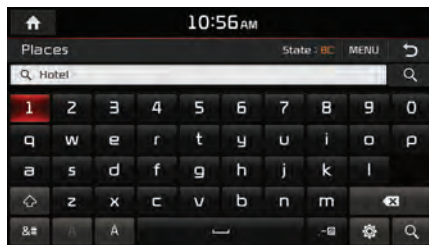


You can change the state by pressing [State] or [MENU] > [State].



 
3. Select a location on the map from the list of your search results or filter your search results by city or category.

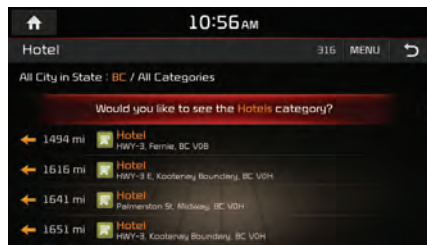

 - Press [MENU] > [City Filter] to narrow your search results by city.
- Press [MENU] > [Category Filter] to narrow your search results by category.

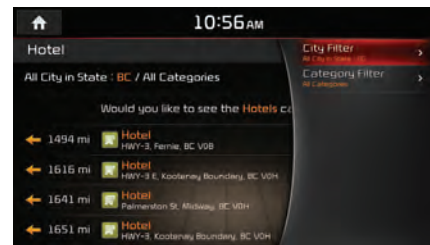

 4. Select the location from the search results to set as a destination.

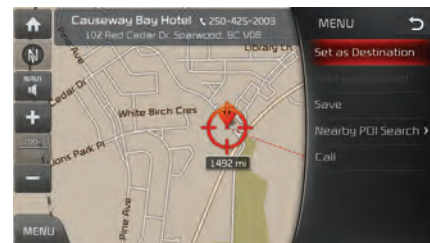


- Press [Set as Destination] to set the location as a destination. When a route is set, press [Change Destination].
- Press [Add as Waypoint] to add the location as a waypoint.
- Press [Save] to add the location to the address book.
- Press [Nearby POI Search] to search the area in your proximity.
- Press [Call] to make a call to the location.

# Searching for Destination of Navigation

 
## Address Search

You can find the destination by searching for an address.

1. Press [MENU] or [NAV] > [Destination] > [Address].

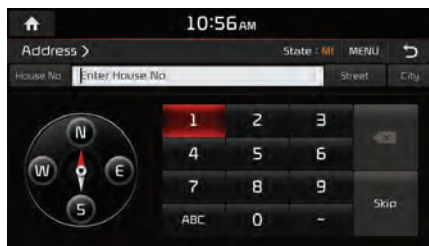

 2. Enter the name of the State, House No., Street or City corresponding to the desired destination.

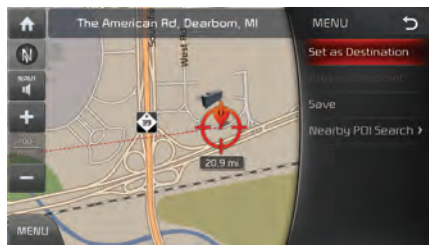

3. Press [Set as Destination].


When a route is set, press [Change Destination].

- If you want to add a waypoint when a route is set, press [Add as Waypoint]. For more details, refer to “Adding waypoints” on page 85.
- If you want to add the position to [Address Book] menu, press [Save]. For more details, refer to “Adding the position to address book” on page 73.
- If you want to find a POI (Point Of Interest) near current position, destination, route, scroll mark or city center, press [Nearby POI Search]. For more details, refer to “Searching for POI” on page 71.

### Note

 
When you set the [Alternative Routes], follow steps 4.

4. Press the desired route.

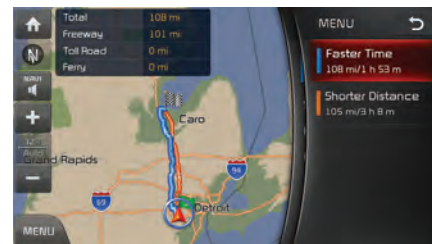

- [Faster Time]: Calculates the route based on the fastest arrival time.
- [Shorter Distance]: Calculates the route based on the shortest distance.

 5. Press [Start Guidance].

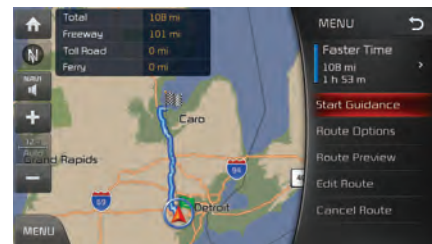

- Press [Route Options] to set the route option. For more details, refer to “Route Options” on page 84.
- Press [Route Preview] to scan the route. For more details, refer to “Route Preview” on page 86.

# Searching for Destination of Navigation

- Press [Edit Route] to edit the route. For more details, refer to "Edit Route" on page 85.
- Press [Cancel Route] to cancel the route. For more details, refer to "Cancel Route" on page 84.

 
## ! Note

The destination is saved in the [Prev. Destinations] menu automatically. (Page 79)

## Previous Destinations

You can find the destination to a location that you have previously set as the destination.

1. Press [MENU] or [NAV] > [Destination] > [Prev. Destinations].

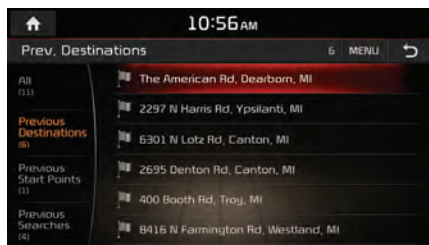

- [All]: Displays all previous destinations, departing places, and searched places.
- [Previous Destinations]: Displays previous destination places.

- [Previous Start Points]: Displays previous departing places.
- [Previous Searches]: Displays previously searched places.
- Press [MENU] > [Name] or [Date] to arrange the list in name or date order.
- Press [MENU] > [Delete] to select and delete items from various entries all at once.


2. Press the preferred previous point from the list.
3. Follow steps 3-5 of the "Address Search" on page 78.

## Address Book

 You can find the destination to a location saved in the [Address Book] menu. To utilize this function more effectively, destinations that you often travel to should be saved in advance.

First of all, store in the [Address Book] menu through destination search function.

1. Press [MENU] or [NAV] > [Destination] > [Address Book].

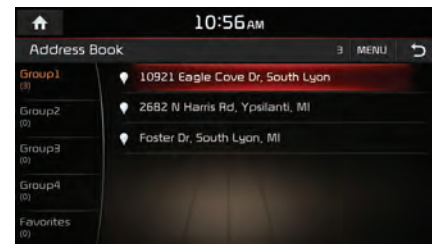


- Press [MENU] > [Rename] to change the name of the address book type.
  - Press [MENU] > [Date], [Name] or [Category] to arrange the list in date, name, or category order.
  - Press [MENU] > [Add] to add a location [Address Book] menu.
  - Press [MENU] > [Delete] to select and delete items from various entries all at once.
  - Press [MENU] > [Edit] to edit items from various entries all at once.
2. Press the desired item from the list.
  3. Follow steps 3-5 of the "Address Search" on page 78.

# Searching for Destination of Navigation
 
## Adding to Address Book


1. Press [MENU] > [Add] in address book list.
2. Select a desired location through destination search function.

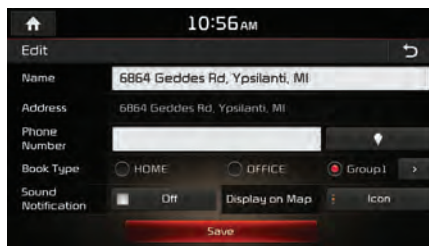

3. Set the desired item.
  - [Name]: Change the name.
  - [Phone Number]: Enter the phone number.
  - [Location Icon]: Set the symbol displayed on the map screen.
  - [Book Type]: Select the address book type.
  - [Sound Notification]: Set the sound notification to On/Off.
  - [Display on Map]: Press [Icon&Name], [Icon] or [Off] to display on the map screen.
4. Press [Save] to save the setting.

## Deleting Address Book

 
1. Press [MENU] > [Delete] in address book list.

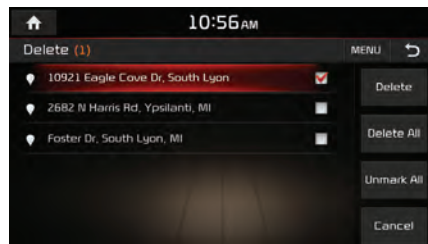

2. Select the desired item, then press [Delete].
  - [Delete]: Deletes the selected items.
  - [Delete All]: Deletes all items.
  - [Unmark All]: Unmarks all items.
  - [Cancel]: Exits delete screen.

## Editing Address Book

 1. Press [MENU] > [Edit] in address book list.
2. Select the item to edit.

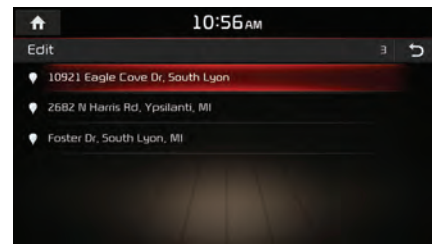

3. Edit the desired item.
  - [Name]: Change the name.
  - [Phone Number]: Enter the phone number.
  - [Location Icon]: Set the symbol displayed on the map screen.
  - [Book Type]: Select the address book type.
  - [Sound Notification]: Set the sound notification to On/Off.
  - [Display on Map]: Press [Icon&Name], [Icon] or [Off] to display on the map screen.
4. Press [Done] to save the setting.

# Searching for Destination of Navigation

 
## POI

You can find a destination from various categories.

There are 2 ways to set the destination through POI search - by category, by phone number.

### Searching for POI by category

1. Press [NAV] > [Destination] > [POI] > [POI Categories].

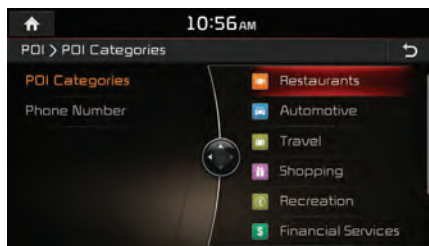


If you want to search for the POI category by name, press [MENU] > [Category History] or [Category Search]. Input the name, then press [Q] to finish.

2. Follow steps 2~7 of the "POI search" on page 71.

### Searching for POI by phone number

 If you know the phone number of the destination, you may use this function to find the destination.

1. Press [NAV] > [Destination] > [POI] > [Phone Number].

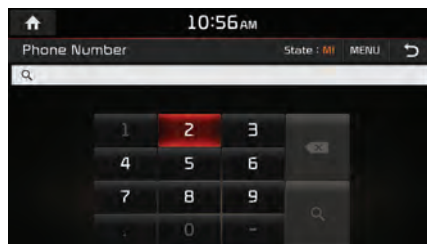


- Press [State] to change the state.
2. Input the desired phone number and press [Q].
3. Press the desired POI.
4. Follow steps 3-5 of the "Address Search" on page 78.

## Emergency

 You can find a destination by searching for a Police Station, Hospital, Kia Dealership or Road Assistance in emergency situations.

1. Press [NAV] > [Destination] > [Emergency] > [Police Station], [Hospital], [Kia Dealership] or [Road Assistance].

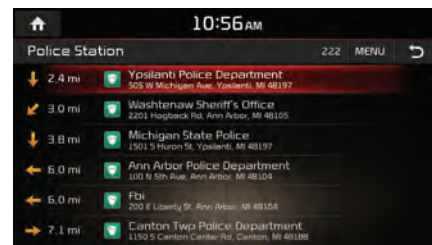

For example: Police Station


- Press [MENU] > [Name] or [Distance] to arrange the list in name or distance order.
2. Press the preferred item from the list.
3. Follow steps 3-5 of the "Address Search" on page 78.

# Searching for Destination of Navigation
 
## Local Search

Please join in UVO service to use Local Search.

1. Press [NAV] or [MENU] > [Destination] > [Local Search] or [Google Local Search].

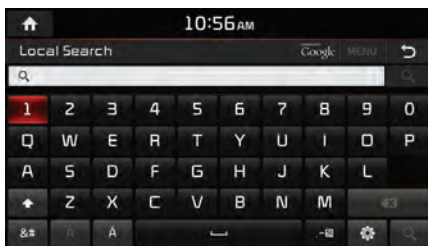


2. Enter the desired keywords and press [Q].
3. Select the desired item.
4. Follow steps 3-5 of the "Address Search" on page 78.

## Intersection

 You can find the destination by searching for the intersection.

1. Press [NAV] > [Destination] > [Intersection].

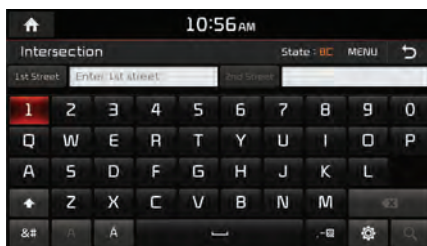

2. Enter the name of the State, 1st Street or 2nd Street corresponding to the desired destination.
3. Press [Q].
4. Follow steps 3-5 of the "Address Search" on page 78.

## Freeway Exit / Enter

You can find the destination by searching for the Freeway Exit/Enter.

1. Press [NAV] > [Destination] > [Freeway Exit / Enter].



2. Enter the freeway name and exit/enter.
3. Press [Q].
4. Follow steps 3-5 of the "Address Search" on page 78.

# Searching for Destination of Navigation

## Coordinates

You can find a destination by inputting the coordinates of latitude and longitude.

There are two ways to search by coordinates (Deg. Min. Sec or Decimal degrees).

1. Press [NAV] > [Destination] > [Coordinates].



- Press [MENU] > [Deg. Min. Sec] or [Decimal degrees] to select the type of the Coordinates.
2. Press the latitude and longitude, then input the desired coordinates.
  3. Press [Q].
  4. Follow steps 3-5 of the "Address Search" on page 78.

## Home / Office

If your home location and office location have been already saved in the [Favorite Places] menu, it can be easily retrieved to set the route to your home location and office location.

**First of all, store in the [Favorite Places] menu through destination search function.**

### Registering Home or Office

1. Press [MENU] > [Destination] > [Add to Home] or [Add to Office].
2. Select the desired position through destination search function.
3. Press [OK] when the destination search is complete. It is saved in the [Favorite Places] menu automatically.

#### Note

Press [MENU] or [NAV] > [Destination] > [Address Book] > [Favorite Places] on the map screen to check items saved in the [Favorite Places] menu.

 
### Finding your Home or Office

1. Press [MENU] > [Destination] > [Home] or [Office].
2. Follow steps 4-5 of the "Address Search" on page 78.

# Using the Route Menu

## Route menu overview

This allows you to change the route conditions by using the route menu when the route is activated.

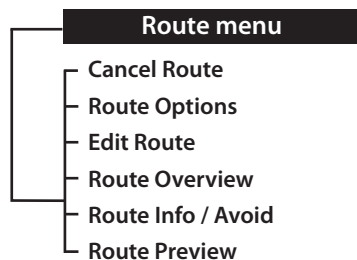

## Cancel Route

If you want to stop the route guidance when a route is active, press [MENU] > [Route] > [Cancel Route] or press [NAV] > [Route] > [Cancel Route].

## Route Options

You can modify the route conditions or confirm the route information. Set the appropriate route condition according to your purpose.

1. Press [NAV] or [MENU] > [Route] > [Route Options].



2. Set the desired options.
  - [Faster Time]: Calculates the route based on the fastest arrival time.
  - [Shorter Distance]: Calculates the route based on the shortest distance.
  - [Avoid Freeways]: Searches for a route that minimizes or avoids the freeway.
  - [Avoid Toll Roads]: Searches for a route that minimizes or avoids toll roads.
  - [Use Ferry]: Searches for a route that includes the use of ferries.

- [Use HOV/Carpool Lanes]: Searches for a route that includes the use of HOV/Carpool Lanes.
- [Use Toll Pass]: Searches for a route that includes the use of Toll Pass.
- [Use Traffic Information]: Searches for a route reflecting the real time Traffic Information.
- [Avoid Private/Gated Roads]: Searches for a route that minimizes or avoids the Private / Gated Roads.

3. Press [Recalculate].

### Note

The Items set by user may not be reflected depending on condition.

# Using the Route Menu

## Edit Route

This feature allows you to travel through the searched routes by editing the current route. Waypoints can be added/deleted/edited and the order can be changed.

### Adding waypoints

1. Press [NAV] > [Route] > [Edit Route].



2. Press [Add as Waypoint (1/2/3)].
3. Add the waypoint through destination search function.



 
4. If you want to add an waypoint, follow steps 2~3.
5. Press [Done] > [Start Guidance].

### Reordering Route

1. Press [NAV] > [Route] > [Edit Route].
2. Press the desired item from the list.
3. Move the selected item up and down. Or Drag it to the desired position.
4. Press [Done] > [Start Guidance].

## Deleting Route

1. Press [NAV] > [Route] > [Edit Route].
2. Press [MENU] > [Delete].

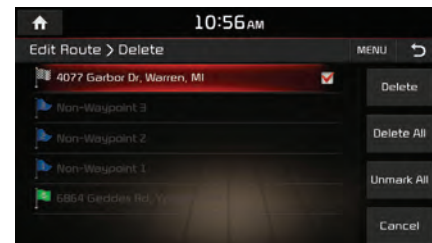

3. Select the desired item, then press [Delete].
  - [Delete]: Deletes the selected items.
  - [Delete All]: Cancels the route.
  - [Unmark All]: Unmarks all items.
  - [Cancel]: Exits delete screen.

# Using the Route Menu

## Route Info / Avoid

This allows you to check the route information and search for new route by avoiding the selected street(s).

1. Press [NAV] > [Route] > [Route Info / Avoid].



2. Press [Avoid] to select the street(s) that you want to avoid.
3. Press [Done] to plan new route.

## Route Overview

You can check the entire route between your current location and your destination.

1. Press [NAV] > [Route] > [Route Overview].



2. Press the desired item.
  - [Start Guidance]: Starts the route guidance.
  - Press [Route Options] to set the route option. For more details, refer to "Route Options" on page 84.
  - Press [Route Preview] to scan the route. For more details, refer to "Route Preview" on page 86.
  - Press [Edit Route] to edit the route. For more details, refer to "Edit Route" on page 85.
  - Press [Cancel Route] to cancel the route. For more details, refer to "Cancel Route" on page 84.

## Route Preview

This allows you to check the detailed turn-by-turn list.

1. Press [NAV] > [Route] > [Route Preview].



2. Press the desired item.
  - [Home]: Move to the departure location.
  - [Previous]: Move to the previous position.
  - [Next]: Move to the next position.
  - [Destination]: Move to the destination location.
  - [Quick Move]: Quick move to the specific position.
  - [Close]: Close the route scan.

## END USER LICENSE AGREEMENT

### **PLEASE READ THIS END USER LICENSE AGREEMENT (“EULA”) CAREFULLY BEFORE USING THE NAVIGATION SYSTEM.**

This is a license agreement between you and HYUNDAI MNSOFT, INC.. including its affiliates (“COMPANY”) regarding a copy of COMPANY navigable map database together with associated software, media and explanatory printed documentation published by COMPANY (jointly the “Product”). The Product is provided for your personal, internal use only and not for resale. It is protected by copyright and is subject to the following terms which are agreed to by you, on the one hand, and COMPANY and its licensors (and their licensors and suppliers) (collectively, “Licensors”) on the other hand.

By using the Product, you accept and agree to all terms and conditions in this End User License Agreement (“EULA”). IF YOU DO NOT AGREE TO THE TERMS OF THIS EULA, YOU MUST PROMPTLY EXIT THE PRODUCT OPERATION PROGRAM AND DO NOT USE OR ACCESS TO THE PRODUCT. You agree that your rights under this eula may be terminated automatically without notice if you fail to comply with any term(s) of this EULA.

## Terms and Conditions

Personal Use Only. You agree to use this Product together with COMPANY authorized application for the solely personal, non-commercial purposes for which you were licensed, and not for service bureau, time-sharing or other similar purposes. Accordingly, but subject to the restrictions set forth in the following paragraphs, you agree not to otherwise reproduce, copy, modify, decompile, disassemble, create any derivative works of, or reverse engineer any portion of this Data, and may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws. You may not assign this EULA or any of the rights or licenses granted under this EULA, except when installed in the system for which it was created.

Restrictions. Except where you have been specifically licensed to do so by COMPANY, and without limiting the preceding paragraph, you may not use the Product (i) with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications; or (ii) with or in communication with any positioning devices or any mobile or wireless-connected electronic or computer devices, including without limitation cellular phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs.

**COPYING OR USE OF THE PRODUCT EXCEPT AS PERMITTED BY THIS EULA IS UNAUTHORIZED AND IS COPYRIGHT INFRINGEMENT UNDER THE LAWS OF YOUR COUNTRY. IF YOU COPY OR USE THE PRODUCT WITHOUT COMPANY PERMISSION, EXCEPT AS PERMITTED BY THIS EULA, YOU ARE VIOLATING THE LAW AND LIABLE TO COMPANY AND ITS LICENSORS FOR DAMAGES, AND YOU MAY BE SUBJECT TO CRIMINAL PENALTIES.**

THE PRODUCT MAY INCLUDE ENFORCEMENT TECHNOLOGY DESIGNED TO PREVENT (i) UNAUTHORIZED COPYING OF THE PRODUCT ONTO PHYSICAL STORAGE MEDIA OR VIA TRANSFER OVER THE INTERNET OR OTHER ELECTRONIC COMMUNICATION MEANS AND/OR (ii) ILLEGAL USAGE OF THE PRODUCT OTHER THAN BY A SPECIFICALLY AUTHORIZED DEVICE. YOU AGREE THAT COMPANY MAY USE THESE MEASURES TO PROTECT COMPANY AND THE LICENSORS AGAINST COPYRIGHT INFRINGEMENT.

Uploads. The Product may provide functionality through which you are able to upload certain information about your use of the Product (collectively, "Uploads") to COMPANY servers or receive other services from COMPANY (collectively, the "Services"). If you use such functionality, you authorize COMPANY to retain your Uploads on its servers. COMPANY will have no obligation to provide any Services, may change the form and nature of any Services at any time with or without notice to you, will have no liability whatsoever to you for any failure of the Product or Services to transmit your Uploads to or from COMPANY servers, may cease providing any Services at any time with or without notice to you, and will have no obligation to retain your Uploads (or any other materials you may provide to COMPANY) on its servers or return your Uploads (or any other materials you may provide to COMPANY) to you before deleting them from its servers.

Storage. The Product may provide functionality through which you are able to store information (such as images) on the device on which you are using the Product. COMPANY will have no liability whatsoever to you or any third party for any failure of the Product to store any such information on such device.

Personal Information. By using the Product, you agree to the collection, retention and processing of your personal data (including the location of your mobile device) by COMPANY and to the storage and processing of such personal information on computers located outside of the country in which you reside. Even though COMPANY has taken steps intended to protect your personal information from being intercepted, accessed, used, or disclosed by unauthorized persons, COMPANY cannot fully eliminate security risks associated with your personal information and cannot guarantee that its systems will not be breached. See [\*] for additional information regarding COMPANY's use of your personal information.

**Warning. The Product reflects reality as existing before you received the product and it comprises data and information from government other sources. accordingly, the product may contain inaccurate or incomplete information due to the passage of time, changing circumstances, sources used and the nature of collecting comprehensive geographic product, any of which may lead to incorrect results. THE PRODUCT AND SERVICES MAY NOT TO BE USED FOR SAFETY OF LIFE APPLICATIONS, OR FOR ANY OTHER APPLICATION IN WHICH THE ACCURACY OR RELIABILITY OF THE PRODUCT OR SERVICES COULD CREATE A SITUATION WHERE PERSONAL INJURY OR DEATH MAY OCCUR. DO NOT ATTEMPT TO CONFIGURE THE PRODUCT OR INPUT INFORMATION WHILE DRIVING. FAILURE TO PAY FULL ATTENTION TO THE OPERATION OF YOUR VEHICLE COULD RESULT IN DEATH, SERIOUS INJURY, OR PROPERTY DAMAGE. BY USING THE PRODUCT, YOU ASSUME ALL RESPONSIBILITY AND RISK.**

Disclaimer of Warranty. The Product is provided to you “as is,” and you agree to use it at your own risk. SUBJECT TO THE APPLICABLE LAWS, COMPANY AND THE LICENSORS MAKE NO GUARANTEES, REPRESENTATIONS OR WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, ARISING BY LAW OR OTHERWISE, INCLUDING BUT NOT LIMITED TO, content, QUALITY, accuracy, completeness, effectiveness, reliability, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT, usefulness, use or results to be obtained from the Product, or that the Product or server will be uninterrupted or error-free, OR THAT ERRORS IN THE PRODUCT OR NONCONFORMITY TO ITS DOCUMENTATION CAN OR WILL BE CORRECTED. YOU ACKNOWLEDGE THAT THE PROVISIONS OF THIS SECTION ARE A MATERIAL INDUCEMENT AND CONSIDERATION TO COMPANY AND THE LICENSORS TO GRANT THE LICENSE CONTAINED IN THIS EULA AND TO PROVIDE YOU WITH ACCESS TO THE SERVICES.

Limitation of Liability: TO THE MAXIMUM EXTENT PERMITTED UNDER THE APPLICABLE LAWS, COMPANY AND THE LICENSORS SHALL NOT BE LIABLE TO YOU: IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, INCURRED BY YOU OR ANY THIRD PARTY WHICH MAY ARISE IN CONNECTION WITH OR RESULT FROM THE USE OR POSSESSION OF THE PRODUCT; OR FOR ANY LOSS OF DATA, PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THE PRODUCT, ANY DEFECT IN THE PRODUCT, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF COMPANY OR THE LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES AND NOTWITHSTANDING THE FAILURE OF ANY LIMITED REMEDY PROVIDED HEREIN.

Exclusions. Some jurisdictions do not allow certain warranty exclusions or the limitation or exclusion of liability, so to that extent the above exclusion may not apply to you. To the extent that COMPANY may not, as a matter of applicable law, disclaim any implied warranty or limit its liabilities, the scope and duration of such warranty and the extent of COMPANY's liability shall be the minimum permitted under such applicable law. The disclaimer of warranty and limitation of liability set forth in this EULA does not affect or prejudice your statutory rights where you have acquired the Product otherwise than in the course of business.

Third-Party Copyright Notices. The third-party sourced data has been incorporated into or made a part of the Product and is being sublicensed to you subject to the terms and conditions of this EULA. In this regard, you shall not remove or tamper with any intellectual property rights notice attached or used in relation to data supplied by the Licensors.

Entire Agreement. This EULA is the entire agreement between COMPANY (and the Licensors) and you pertaining to the subject matter hereof, and supersedes in their entirety any and all previous written or oral communications or documents (including, if you are obtaining an update, any agreement that may have been included with an earlier version of the Product) with respect to such subject matter.

Governing Law. This EULA shall be governed by the laws of the jurisdiction in which you reside at the date of acquisition of the Product. Should you at that moment reside outside the European Union or Switzerland, the law of the jurisdiction within the European Union or Switzerland where you acquired the Product shall apply. In all other cases, or if the jurisdiction where you acquired the Product cannot be defined, the laws of the Republic of Korea shall apply. This EULA will not be governed by the U.N. Convention on Contracts for the International Sale of Goods. The courts competent at your place of residence at the time you acquired the Product shall have jurisdiction over any dispute arising out of, or relating to this EULA, without prejudice to COMPANY's right to bring claims at your then current place of residence.

Export Control. You agree not to export or re-export from anywhere any part of the Product in any form except in compliance with applicable export laws, rules and regulations, including but not limited to the laws, rules and regulations administered by the Office of Foreign Assets Control of the U.S. Department of Commerce and the Bureau of Industry and Security of the U.S. Department of Commerce.

Miscellaneous. If any provision of this EULA is found to be invalid or unenforceable, it will be enforced to the extent permissible and the remainder of this EULA will remain in full force and effect. Failure by COMPANY to prosecute any right with respect to a default hereunder will not constitute a waiver by COMPANY of the right to enforce rights with respect to the same or any other breach. No refunds or replacements will be permitted on damaged Product.

U.S. Government End Users. If the Product is being acquired by or on behalf of the United States Government or any other entity seeking or applying rights similar to those customarily claimed by the United States Government, this Product and related documentation are "Commercial Items" as that term is defined at 48 C.F.R. ("FAR") 2.101. This Product and related documentation are licensed to the United States Government end users (a) only as "Commercial Items" and (b) with only those rights as are granted to all other end users in accordance with this EULA, and each copy of Product delivered or otherwise furnished shall be marked and embedded as appropriate with the following "Notice of Use," and shall be treated in accordance with such Notice:

### **Notice of Use**

Contractor (Manufacturer/ Supplier) Name: HYUNDAI MNSOFT, INC.

This Product and related documentation are commercial items as defined in FAR 2.101 and is subject to this EULA under which this Product is provided.

© 20XX HYUNDAI MNSOFT. All rights reserved.

If the Contracting Officer, federal government agency, or any federal official refuses to use the legend provided herein, the Contracting Officer, federal government agency, or any federal official must notify COMPANY prior to seeking additional or alternative rights in the Product.

End-User Terms Required by HERE. The Product utilizes map data that COMPANY licenses from HERE and the following copyright notices apply to such map data (the "HERE Data"): © 20XX HERE. All rights reserved.

The HERE Data for areas of Canada includes information taken with permission from Canadian authorities, including: © Her Majesty the Queen in Right of Canada, © Queen's Printer for Ontario, © Canada Post Corporation, GeoBase.®, © Department of Natural Resources Canada. All rights reserved.

HERE holds a non-exclusive license from the United States Postal Service® to publish and sell ZIP+4® information.

©United States Postal Service® 20XX. Prices are not established, controlled or approved by the United States Postal Service®. The following trademarks and registrations are owned by the USPS: United States Postal Service, USPS, and ZIP+4.

### **Copyright for Brand Icon**

The marks of companies displayed by this product to indicate business locations are the marks of their respective owners. The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

### **Copyright for Junction View**

Junction View Data provided by ZENRIN USA, INC. Copyright(C) 20XX, All rights Reserved.

## About Map Updates

You can contact your KIA dealer or Call HYUNDAI MNSOFT at 1-888-757-0010.

### Information

- This product requires regular updates for new functions and map updates. Updating may require up to 1 hour depending on the data size.
- Turning off the power or ejecting the SD card during the update process may result in damage to the system. Make sure to keep the ignition on and wait until updating is complete.

### CAUTION

- Please use only the SD card that was included with the vehicle purchase.
- The use of an uncertified SD card may result in damage to the system due to heat related deformation.
- Product malfunctions caused by the use of an uncertified cards shall not be covered within the product warranty.
- Repeatedly connecting/disconnecting the SD card in a short period of time may cause damage to the device.

# Bluetooth® Wireless Technology

---

## Before Using the Bluetooth Handsfree

### What is Bluetooth Wireless Technology?

- Bluetooth Wireless Technology refers to a short-distance wireless networking technology which uses a 2.45GHz frequency to connect various devices within a certain distance.
- Supported within PCs, external devices, Bluetooth phones, PDAs, various electronic devices, and automotive environments, Bluetooth Wireless Technology to be transmitted at high speeds without having to use a connector cable.
- Bluetooth Handsfree refers to a device which allows the user to conveniently make phone calls with Bluetooth mobile phones through the system.
- The Bluetooth Handsfree feature may not be supported in some mobile phones.

### Precautions for Safe Driving

- Bluetooth is a feature that enables drivers to use handsfree while driving. Connecting the head unit with a Bluetooth phone allows the user to conveniently make calls, receive calls, and manage the phone book. Before using Bluetooth Wireless Technology, carefully read the contents of this user's manual.
- Excessive use or operations while driving may lead to negligent driving practices and be the cause of accidents. Do not operate the device excessively while driving.
- Viewing the screen for prolonged periods of time is dangerous and may lead to accidents. When driving, view the screen only for short periods of time.

### Cautions upon Connecting Bluetooth Phone

- Before connecting the head unit with the mobile phone, check to see that the mobile phone supports Bluetooth features.
- If you do not want automatic connection with your Bluetooth device, turn the Bluetooth feature off of the Bluetooth device.

- Park the vehicle when pairing the head unit with the mobile phone.
- Some Bluetooth features may occasionally not operate properly depending on the firmware version of your mobile phone. If such features can be operated after receiving a S/W upgrade from your mobile phone manufacturer, unpair all devices and pair again before use.
- When pairing and the head unit with the iPhone for the first time while your iPhone is connected to the USB port with iPhone cable, error message may be displayed on your iPhone. But, this is intended operation. You may ignore it if your iPhone has been connected to the head unit.

 
## Pairing and connecting the unit and a Bluetooth phone

To use the Bluetooth feature, make sure the Bluetooth on your phone is turned on. Refer to your phone's user guide.


### When no phones have been paired

1. Press "PHONE" on the remote control for head unit or "☎" on the steering wheel remote control.


# Bluetooth® Wireless Technology

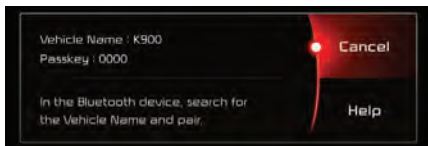

 2. On your phone, initiate a search for Bluetooth devices. (The default device name is K900.)

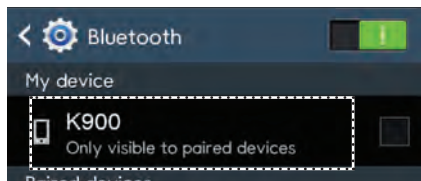


 3. 1) If the SSP (Secure Simple Pairing) is not supported, input the passkey on your Bluetooth device. (The default passkey is 0000.)

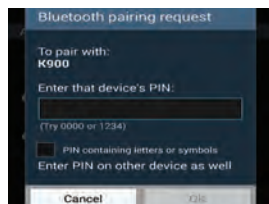


- 2) If the SSP (Secure Simple Pairing) is supported, press [Yes] on the pop-up screen of the your Bluetooth device.

 
(The pop-up screen may differ from the actual information of the Bluetooth device.)

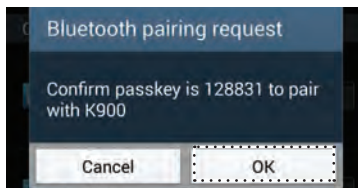

 
4. Press [Yes] to connect automatically to the unit and a Bluetooth phone preferentially after ignition switch is in ON position.

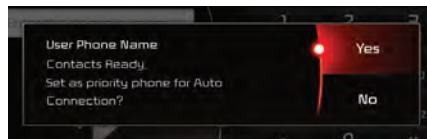

 When you approve in the mobile phone, the mobile phone contacts and the latest call list are downloaded.

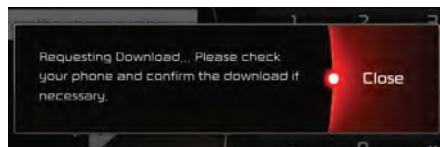

 5. When your phone is successfully connected, the phone screen is displayed on the screen. When the connection fails, a failure message is displayed on the screen.

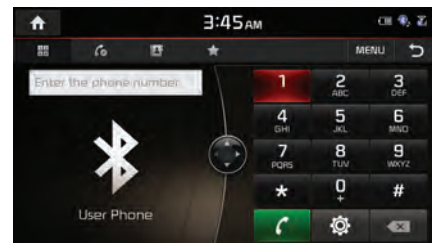


<Phone screen>

Once Bluetooth connection is successful, the name of the connected mobile phone will become displayed on the phone screen and Bluetooth handsfree functions will operate.


# Bluetooth® Wireless Technology
 
## When a phone is already paired


1. Press [HOME] > [Settings] > [Bluetooth] > [Bluetooth Connection].

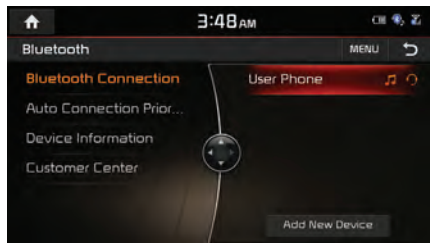

 
2. 1) Select the device you want to connect.  
2) If there is no device you want to connect, press [Add New device].

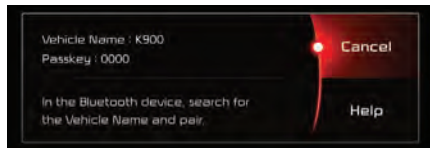

 
3. On your phone, initiate a search for Bluetooth devices. (The default device name is K900.)

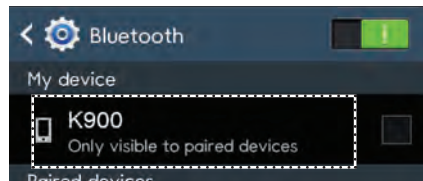

 
4. 1) If the SSP (Secure Simple Pairing) is not supported, input the passkey on your Bluetooth device. (The default passkey is 0000.)

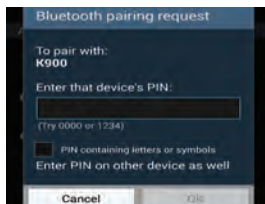

 
- 2) If the SSP (Secure Simple Pairing) is supported, press [Yes] on the pop-up screen of the your Bluetooth device. (The pop-up screen may differ from the actual information of the Bluetooth device.)

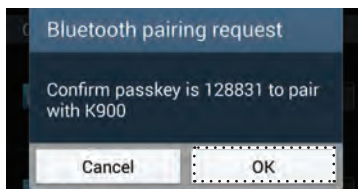

 
5. Press [Yes] to connect automatically to the unit and a Bluetooth phone preferentially after ignition switch is in ON position.

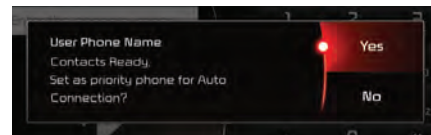

 When you approve in the mobile phone, the mobile phone contacts and the latest call list are downloaded.

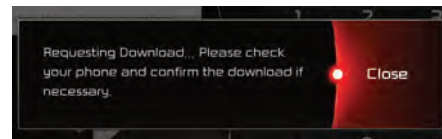

 6. When your phone is successfully connected, the Bluetooth settings screen is displayed on the screen. When the connection fails, a failure message is displayed on the screen.

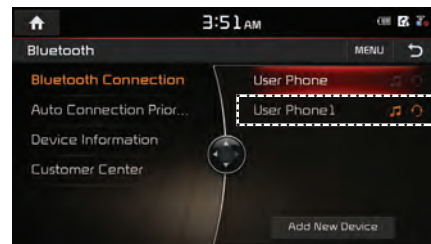

<Bluetooth settings screen>


# Bluetooth® Wireless Technology
 
## ! Note


- For safety reasons, pairing a Bluetooth phone is not possible when the vehicle is in motion. Park the vehicle in a safe location to pair a Bluetooth phone. It is possible to pair up to 5 mobile phones. In order to pair a new phone when there are already 5 mobile phones paired, you must first delete one of the previously paired phones.
- Some functions may not be supported due to limited Bluetooth compatibility between the car system and mobile phone.
- When a Bluetooth device is connected, a new device cannot be paired. If you want to pair a new phone, first disconnect the connected Bluetooth device.

## Disconnecting the connected phone

- Press [MENU] > [Connection Settings] > [Bluetooth Connection] on the phone screen.

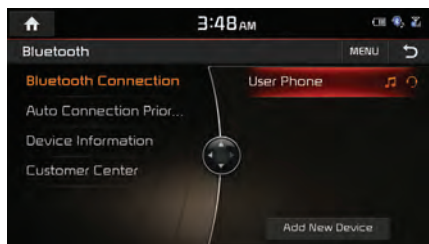

- Select the connected phone.

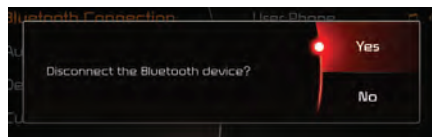 

- Press [YES].


## ! Note

 If you want to connect the disconnected phone again, select the disconnected phone.


## Deleting Bluetooth Devices

If you no longer need to use a phone, you can delete the Bluetooth devices. Note that deleting a Bluetooth device will delete all call history and contact entries.

- Press [MENU] > [Connection Settings].
- Press [MENU] > [Delete] on the Bluetooth settings screen.

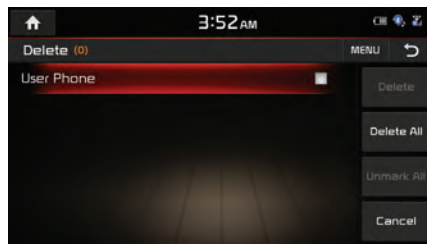

 - Select the phone you want to delete and press [Delete].
  - [Delete]: Deletes the selected items.
  - [Delete All]: Deletes all items.
  - [Unmark All]: Unmarks all items.
  - [Cancel]: Exits delete screen.
- Press [Yes] on the pop-up screen.

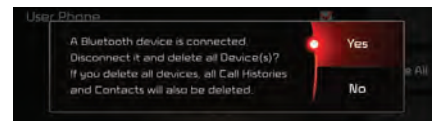

## Making a call by entering phone number

Connect your unit and Bluetooth phone before making a call.

- Enter the phone number using the keypad on the phone screen.
- Press [CALL] on the phone screen or "☎" on the steering wheel remote control.

## ! Note

If you press the wrong number, press [DELETE] to delete the inputted number one digit at a time.

# Bluetooth® Wireless Technology

## Making a call by redialing

Press and hold  on the phone screen or "↶" on the steering wheel remote control.

### ! Note

Redialing is not possible when there is no dialed call history.

## Making a call with speed dial numbers

Press and hold speed dial number using the keypad on the phone screen.


Only speed dial numbers already saved on the mobile phone can be used for speed dial calls. Up to 3-digit speed dial numbers are supported.

### ! Note

For 3-digit speed dial numbers, press and hold the 3rd digit to make a call to the speed dial number.

## Answering/Rejecting a call

 1. If there is an incoming call, a popup message will appear.
2. Press [Accept] to answer the call.

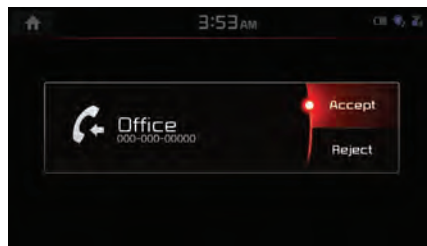

To reject a call, select [Reject].


### ! Note

 - If the Call-ID service is available, the caller's phone number is displayed.
- If caller's phone number is saved in the phone book, the caller's name is displayed on the unit.
- Upon receiving a call, the [Reject] function may not be supported in some mobile phones.

## Switching call to the mobile phone

1. If you want to switch the call to the mobile phone while talking on the car handsfree, press [Use Private].

As shown below, the call is switched to the mobile phone.

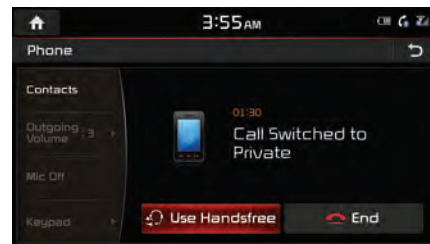

2. If you want to switch the call to the car handsfree while talking on the mobile phone, press [Use Handsfree].

The call is switched to the car handsfree.


## Ending a call

 1. To end a call, press [ End] on the phone screen or "↶" on the steering wheel remote control.
2. The call is ended.

# Bluetooth® Wireless Technology

## Using the menu during a phone call

When making a call, you can use the following menu items.

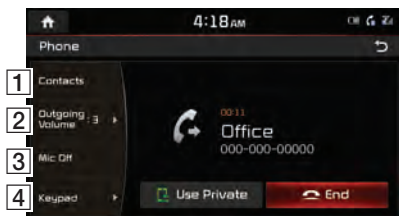

| Position          | Description                                                                                                   |
|-------------------|---------------------------------------------------------------------------------------------------------------|
| 1 Contacts        | Displays the Contacts list.                                                                                   |
| 2 Outgoing volume | Displays the Mic Volume settings. You can adjust the in-call volume that the other party hears (level 1 - 5). |
| 3 Mic On/ Off     | Turns the Mic On/Off.                                                                                         |
| 4 Keypad          | Moves to a screen for entering ARS numbers.                                                                   |

## Call history

### Making a call from call history

1. Press [📞] on the phone screen.



2. Press [All], [Diald Calls], [Received Calls], or [Missed Calls].
  - [All]: Displays entire call history list.
  - [Diald Calls]: Displays the outgoing call history list.
  - [Received Calls]: Displays the incoming call history list.
  - [Missed Calls]: Displays the missed call history list.
3. Press the entry you want to call.

 
#### ! Note

The call history may not be saved in the call history list in some mobile phones.


## Downloading call history

You can download the call history information from your mobile phone.

1. Press [📞] > [MENU] > [Download] on the phone screen.

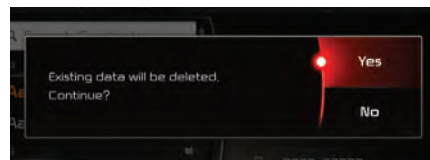

 2. Press [Yes].

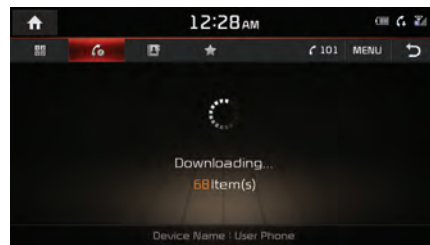


#### ! Note

- Up to 50 received, diald, and missed call history lists can be downloaded.
- The download feature may not be supported in some mobile phones. Check to see that the Bluetooth device supports the download feature.

# Bluetooth® Wireless Technology


## Contacts

 1. Press [F5] on the phone screen.  
The contacts are displayed on the screen.

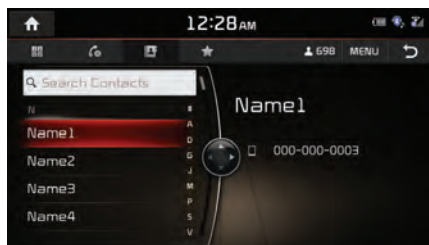

<Contacts screen>

 2. Select the contact you want to call from the list of contacts.

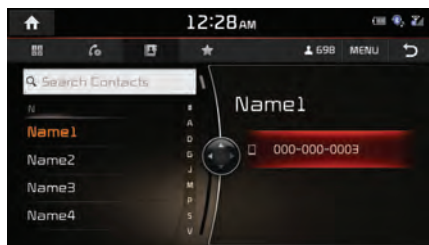


3. Press the phone number to make a call.


## Downloading mobile phone contacts

 Up to 5,000 mobile phone contacts can be downloaded.

1. Press [F5] > [MENU] > [Download] on the phone screen.

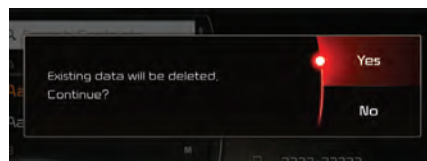

 2. Press [Yes].

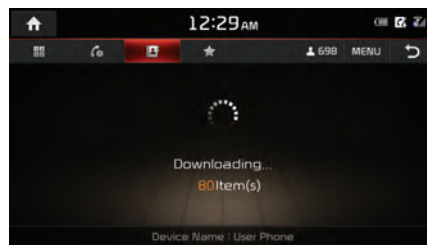

The present phone book is deleted and phone book of connected phone is duplicated.

### ! Note

 
- Upon downloading mobile phone contacts, the previous data is deleted.
- This feature may not be supported on some mobile phones.

## Searching for contacts

1. Press [F5] > [MENU] > [Search Contacts] on the phone screen.



2. Enter the name or phone number, press [F5].

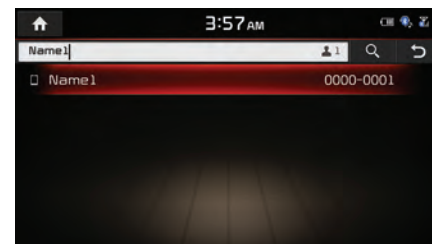


3. Select the contact you want to call.


# Bluetooth® Wireless Technology
 
## Adding as a Favorite

1. Press [★] on the phone screen.  
The contacts are displayed on the screen.
2. Select the contact from the list of contacts.

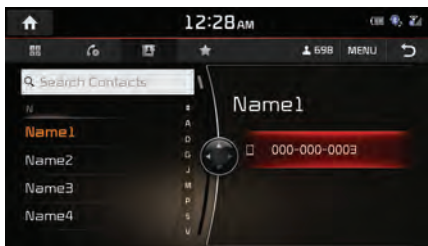

 3. Press [MENU] > [Add to Favorites] on the phone screen.

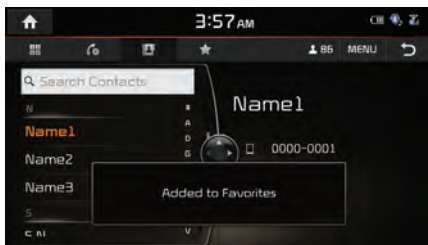

### ! Note

Added Favorites can be viewed by pressing [★] in the phone screen.

 
## Favorites

### Calling Favorites

If the phone number has been already stored in the Favorites, it can be easily called.

First of all, add the phone number in the Favorites. Refer to "Adding as a Favorite" on page 104.

1. Press [★] on the phone screen.

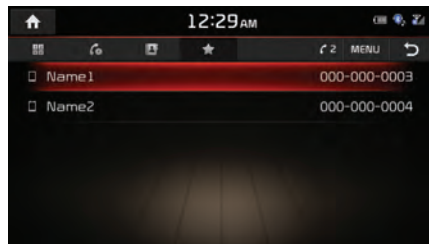


<Favorite screen>

2. Select the desired Favorite.

## Adding as a Favorite

 1. Press [★] on the phone screen.
2. Press [MENU] > [Add New] on the Favorites screen.

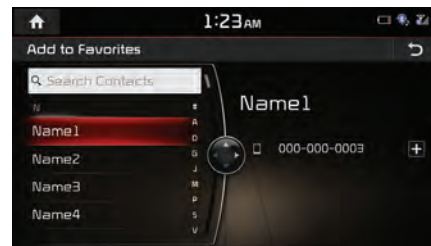


3. Select the contact from the list of contacts.
4. Press the phone number.

# Bluetooth® Wireless Technology
 
## Deleting Favorites


1. Press [★] on the phone screen.
2. Press [MENU] > [Delete] on the Favorites screen.

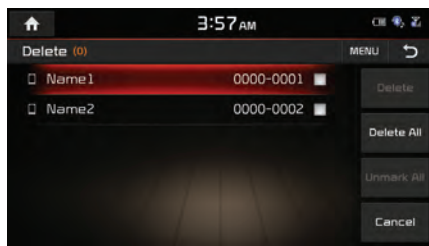

3. Select the item you want to delete and press [Delete].
  - [Delete]: Deletes the selected items.
  - [Delete All]: Deletes all items.
  - [Unmark All]: Unmarks all items.
  - [Cancel]: Exits delete screen.

## Setting Bluetooth Connection

 1. Press [⌂], [📶], [📱], or [★] on the phone screen.
2. Press [MENU] > [Connection Settings].

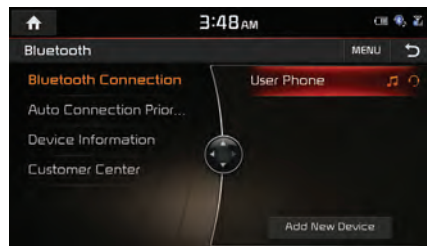

3. For more details, refer to "Bluetooth" on page 140.

# Voice Recognition System

## What is voice recognition?

Voice recognition technology runs the system as ordered by recognizing your voice command to help with the operation of multimedia while you are driving the car. Regretfully, not all possible voice commands are recognized by the system due to technological limitations. To make up for these limitations, the system displays the voice commands that are available for you to use.

There are errors in communication between people. Likewise, voice recognition sometimes misunderstands your voice command under certain circumstances. If this happens, either check the screen for the available options and say the command again, or manually select and press the button for the corresponding command on the screen.

## Voice recognition features by language

Voice recognition support availability varies according to the language set for the system.

Please verify the current language setting before using the voice recognition.

- If you change the language set for the system to Korean, voice recognition will not be supported. Change the system language to other language.

## Operating voice command

### Condition for voice command system

Most of the functions can be operated by voice. Please follow the instructions below for optimal voice recognition performance.

- To improve the voice recognition performance, keep your car interior quiet by closing all windows and the sunroof.
- Press the voice recognition button and say the desired voice command after the beep sound.
- The microphone is positioned above the driver. Voice commands should be spoken by driver practicing proper posture.
- Pronounce the voice commands naturally and clearly as if in a normal conversation.
- Special symbols of Phonebook Name are not considered in voice recognition.  
Ex) James-Smith : "James Smith"
- House number or digits in Phonebook Name should be spoken discretely.  
Ex) S1234 : "South one two three four"
- Depending on the specifications, some commands may not be supported.

## Starting voice recognition

1. Press "🗨️" on the steering wheel remote control.
2. Say the desired voice command after the beep sound.

### ! Note

- For proper recognition, please say the command after the voice instruction and beep sound.
- When starting voice recognition, the voice command entry window with six representative commands is displayed.
- If voice recognition is in [Beginner], then the system will provide the detailed voice recognition guidance.  
If voice recognition is in [Normal], then the system will provide the simple version of voice recognition guidance.  
If voice recognition is in [Expert], then you will only hear a beep.  
For further details, refer to "Voice recognition" on page 143.

# Voice Recognition System

## Skipping prompt messages

While a prompt is playing, press quickly on the steering wheel remote control labeled with "🔊". The prompt is immediately ended and a beep will sound. After the beep, please say the voice command.

## Re-starting voice recognition

While the system waits for input, press quickly on the steering wheel remote control labeled with "🔊". The beep tone will sound, indicating the system is listening for a new input. Say a voice command.

## Ending voice recognition

- While voice recognition is operating, press and hold the control labeled "🔊" on the steering wheel remote control, or say 'Exit'.
- While using voice recognition, pressing other button except on the steering wheel remote control or a different button on head unit will end voice recognition.

 
## Adjusting voice recognition volume

While voice recognition is operating, turn "VOL" knob on the head unit or press "VOL+/VOL-" on the steering wheel remote control.

## Basic operation for voice command (Setting FM)

1. Press the control on the steering wheel remote control labeled "🔊".

The system waits for your command and displays a list of available commands on the screen.

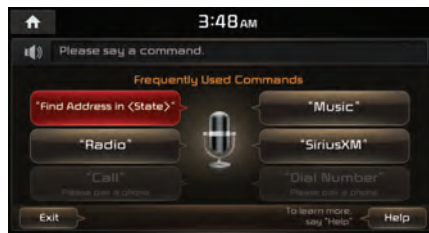


2. Once the 🔊 icon changes into the 🗨 icon on the pop-up screen, a beep will sound. Say 'FM'.

## Voice recognition quick start (Manual Control)

 The usual way of activating voice recognition is waiting for the voice guide and then speaking your command for a task. Since this method requires that you wait a while for the voice guide, you can select one of the commands shown on the screen to speed up the process.


You might find this feature useful when you do

not want to wait for the full voice guide or when the system does not recognize your voice.

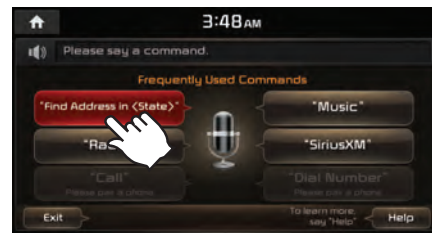

## About voice command "Help"

 1. Press the "🔊" on the steering wheel remote control.
2. Once the 🔊 icon changes into the 🗨 icon on the pop-up screen with a beep sound, say "Help".  
The available commands are displayed on the screen.

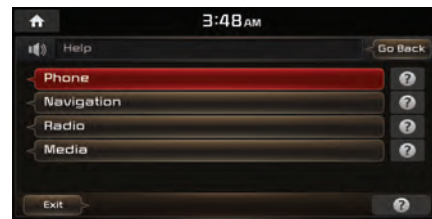

3. Select or say the displayed command on the screen.

# Voice Recognition System

## Voice command list

Voice recognition commands are classified as "Global Commands" and "Local Commands".

- Global commands (●) : Commands that can be used immediately after activating voice recognition.
- Local commands (□) : Commands that can be used in specific multimedia/navigation/Bluetooth mode states.

### ! Note

Some global and local commands will operate properly only when a USB, iPod, Bluetooth or other device has been connected.

## Phone commands

- Voice commands related to phone calls can be used after connecting the Bluetooth phone device.
- To call a person, for example "Call <John Smith>" whose name is listed in contacts, you must first download the mobile phone contacts. (Up to 5,000 mobile phone contacts can be downloaded.) For more details on downloading contacts, see "Downloading mobile phone contacts" on page 103.
- After downloading the Bluetooth phone contacts, it will take some time to convert the phone contacts into voice data during which time you cannot make a call by name yet. The time that it taken to convert voice data may vary depending on the number of contacts downloaded.

| Command |                       | Operation                                                                                                                                |
|---------|-----------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| ●       | Call                  | Downloaded mobile phone contacts is displayed on the screen, and afterwards, you can make a call by speaking the name.                   |
| ●       | Call <Name>           | You can immediately make a call to (name) in the downloaded mobile phone contacts.<br>Ex.) "Call John Smith"                             |
| ●       | Call <Name> on Mobile | You can immediately make a call to (name) in the downloaded mobile phone contacts saved as 'mobile'.<br>Ex.) "Call John Smith on mobile" |
| ●       | Call <Name> in Office | You can immediately make a call to (name) in the downloaded mobile phone contacts saved as 'office'.<br>Ex.) "Call John Smith in office" |
| ●       | Call <Name> at Home   | You can immediately make a call to (name) in the downloaded mobile phone contacts saved as 'home'.<br>Ex.) "Call John Smith at home"     |

# Voice Recognition System

|   |                      |                                                                                                                                                                                     |
|---|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ● | Call <Name> on Other | You can immediately make a call to (name) in the downloaded mobile phone contacts saved as another phone category except 'mobile, home, office'.<br>Ex.) "Call John Smith on other" |
| ● | Dial number          | Displays a screen where you can say a phone number to dial.                                                                                                                         |
| ● | Dial <Phone #>       | You can make a call by directly speaking the number you want to call.<br>Ex.) Dial 123-456-7890 : "Dial one two three four five six seven eight nine zero"                          |
| ● | Redial               | Directly calls the number that you last dialed.                                                                                                                                     |
| ● | Call history         | Displays your Call History, where you can say the list number to make a call.                                                                                                       |

## Radio commands

| Command |                           | Operation                                                                                                                           |
|---------|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| ●       | Radio                     | Plays the most recent radio channels from FM, AM, and SiriusXM™.                                                                    |
| ●       | FM                        | Plays FM radio.                                                                                                                     |
| ●       | FM <87.5 ~ 107.9>         | Tunes to FM <Frequency> according to what you say. Ex.) FM 87.5 : "FM eighty seven point five"                                      |
| ●       | AM                        | Plays AM radio.                                                                                                                     |
| ●       | AM <530 ~ 1710>           | Tunes to AM <Frequency> according to what you say. Ex.) AM 530 : "AM five hundred thirty"                                           |
| □       | Preset <1-18>             | Tunes to your preset stations (FM/AM: 1 to 12, SiriusXM: 1 to 18).                                                                  |
| ●       | SiriusXM™                 | Plays SiriusXM™ radio.                                                                                                              |
| ●       | SiriusXM™ Channel <0~999> | Tunes to SiriusXM™ Channel <Channel Number> according to what you say.<br>Ex.) SiriusXM™ Channel 23: SiriusXM™ Channel twenty three |
| □       | Channel <0~999>           | In SiriusXM™ Radio mode, tunes to the channel <Channel Number> that you say.                                                        |

# Voice Recognition System

## Media commands

Check the followings before you use media commands.

1. If media is not connected or playable files in media do not exist when you use media commands, a voice message will tell you that this is not available at present.
2. If you say a command that equal to current status, then it will maintain the current status. Ex.) Saying "USB music" while USB music file is playing.

| Command |                 | Operation                                                                                                                                                                                                                                |
|---------|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ●       | Music           | The previously played music source will resume playing.                                                                                                                                                                                  |
| ●       | Disc            | Plays a disc that is currently inserted.                                                                                                                                                                                                 |
| ●       | iPod            | Plays a music file of iPod that is currently connected. It works identically when iPhone is connected and if not iPod but USB is connected, it will plays a music file of USB instead of iPod. USB and iPod command are interchangeable. |
| ●       | USB             | Plays or displays a file of USB that is currently connected. If not USB but iPod is connected, it plays a music file of iPod instead of USB.                                                                                             |
| ●       | Bluetooth Audio | Plays a music file of currently connected Bluetooth mobile phone. It may not be supported according to Bluetooth connection condition.                                                                                                   |
| ●       | AUX             | Plays a music file of external device connected in the AUX jack.                                                                                                                                                                         |
| ●       | Jukebox         | Plays a file of jukebox saved in the system.                                                                                                                                                                                             |
| ●       | Jukebox Music   | Plays a music file saved in jukebox.                                                                                                                                                                                                     |
| ●       | USB Music       | Plays a music file from the connected USB that was recently played.                                                                                                                                                                      |
| ●       | Pandora Radio   | Plays Pandora Radio of device currently connected. Pandora Radio operates according to the device currently connected.                                                                                                                   |

# Voice Recognition System

---

## Audio CD commands

| Command                  |              | Operation                                                                                                                                                     |
|--------------------------|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <input type="checkbox"/> | Play         | Starts to play a track. If a track is already playing, the track continues to play.                                                                           |
| <input type="checkbox"/> | Pause        | If a track is playing, this will pause the track. If the track is already paused, the track will remain paused.                                               |
| <input type="checkbox"/> | Track <1~99> | This will play the track number spoken.                                                                                                                       |
| <input type="checkbox"/> | Shuffle      | This will make the system play all tracks in a random order. If the track is already playing in a random order, no change will occur.                         |
| <input type="checkbox"/> | Shuffle Off  | This cancels playing in a random order and returns to playing tracks sequentially. If the tracks are already being played sequentially, no change will occur. |
| <input type="checkbox"/> | Repeat       | This will repeat the track being played. If 'Repeat' is already active, no change will occur.                                                                 |
| <input type="checkbox"/> | Repeat Off   | This cancels 'Repeat' and returns to playing tracks sequentially. If the tracks are already being played sequentially, no change will occur.                  |

# Voice Recognition System

---

## MP3 CD/ USB music/ Jukebox music/ iPod® commands

| Command                  |             | Operation                                                                                                                      |
|--------------------------|-------------|--------------------------------------------------------------------------------------------------------------------------------|
| <input type="checkbox"/> | Play        | Plays a stopped track. If it is playing, it remains the current condition.                                                     |
| <input type="checkbox"/> | Pause       | Pauses a playing track. If it is paused, it remains the current condition.                                                     |
| <input type="checkbox"/> | Shuffle     | Plays randomly all tracks. If it is randomly playing, it remains the current condition.                                        |
| <input type="checkbox"/> | Shuffle Off | Cancels the random playing and sequentially plays all tracks. If it is sequentially playing, it remains the current condition. |
| <input type="checkbox"/> | Repeat      | Repeats the playing track. If it is repeating, it remains the current condition.                                               |
| <input type="checkbox"/> | Repeat Off  | Cancels the repeat and sequentially plays all tracks. If it is sequentially playing, it remains the current condition.         |

## Bluetooth audio/ AUX commands

For Bluetooth audio, there are differences in the supported functions according to the connected devices, and the commands such as play, pause, etc. are not supported.

For AUX (external device), video, and image, the commands such as play, pause, etc. are not supported.

# Voice Recognition System

## Navigation commands

Check the following before you use navigation commands :

1. Search for and find addresses located in the state or province your car is currently in.  
If you want to search in another state, say the name of state/province and then say the address.  
"Find Address" command is classified by states/provinces to provide you with faster service.
2. Some commands such as "Cancel Route" are available only when the destination is fixed.

| Command |                             | Operation                                                                                                                                                                                                                                                                                                                 |
|---------|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ●       | Find Address in <State>     | <ul style="list-style-type: none"><li>• Finds the address in &lt;State&gt; and sets it as the destination.<br/>Ex.) Find Address in California</li><li>• To find an address, you should say "House Number → Street → City" (in order, excluding the state).<br/>Ex.) 300 (Three Zero Zero), Main Street, Almond</li></ul> |
| ●       | Find Address                | Finds the address and sets it as the destination.                                                                                                                                                                                                                                                                         |
| ●       | Find the Nearest POI        | Finds the nearest points of interest from your current location.<br>After this command, you can find the name of a location step-by-step.                                                                                                                                                                                 |
| ●       | Find the Nearest <Category> | Immediately finds <Category> of POI nearest to your current location. For more details of <Category>, see the "List of Nearest Locations" on page 117.<br>Ex.) Find the Nearest "Parking"                                                                                                                                 |
| ●       | POIs Near Destination       | Finds POIs near the destination. After this command, you can find the name of POIs step-by-step.                                                                                                                                                                                                                          |
| ●       | <Category> Near Destination | Finds <Category> of POI near the destination. For more details of <Category>, see the "List of Nearest Locations" on page 117. Ex.) "Banks" Near Destination                                                                                                                                                              |
| ●       | Map                         | Moves to the current position on the navigation map.                                                                                                                                                                                                                                                                      |

## Voice Recognition System

---

|   |                             |                                                                                                                                                                     |
|---|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ● | Previous Points             | Displays a list combining Previous Destinations, Previous Searches, and Previous Starting Points all together. You can set a destination by saying the list number. |
| ● | Previous Destinations       | Displays a list of recent destinations and you can set a destination by saying the number on the list.                                                              |
| ● | Previous Searches           | Displays a list of recent searches, where you can set a destination by saying the number on the list.                                                               |
| ● | Previous Starting Points    | Displays a list of recent starting points and you can set a destination by saying the number on the list.                                                           |
| ● | Traffic Information         | Moves to the Traffic Information menu screen.                                                                                                                       |
| ● | Go Home                     | Set your home as the destination. Your home address must be set up in the Navigation System.                                                                        |
| ● | Go to Office                | Set the destination to your office/place of work. Your office/place of work must be set up in the Navigation System.                                                |
| ● | Turn Guidance On            | Turns on the voice guidance system.                                                                                                                                 |
| ● | Turn Guidance Off           | Turns off the voice guidance system.                                                                                                                                |
| ● | Zoom All the Way In         | Zooms in on the navigation map to the fullest.                                                                                                                      |
| ● | Zoom All the Way Out        | Zooms out from the navigation map to the fullest.                                                                                                                   |
| ● | Cancel Route                | Cancels the route to the fixed destination and exits guidance.                                                                                                      |
| ● | Destination Information     | Tells you the remaining distance and time to your destination.                                                                                                      |
| ● | Route Options               | Restarts the route to your destination. You can select either "Faster Time" or "Shorter Distance".                                                                  |
| ● | Find Faster Time Route      | Starts a new route to your destination that will take the least amount of time.                                                                                     |
| ● | Find Shorter Distance Route | Starts a new route to your destination that will use the shortest distance.                                                                                         |

## Voice Recognition System

---

|   |                    |                                                                                                                                           |
|---|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| ● | Emergency Services | Displays a list of nearest Police Station, Hospital, Dealership, or Road Assistance. You can set a destination by saying the list number. |
| ● | Police Station     | Displays a list of the nearest police stations. You can set a destination by saying number on the list.                                   |
| ● | Hospital           | Displays a list of the nearest hospitals. You can set a destination by saying number on the list.                                         |
| ● | Dealership         | Displays a list of the nearest car dealerships. You can set a destination by saying number on the list.                                   |
| ● | Road Assistance    | Displays a list of the nearest road assistance locations. You can set a destination by saying number on the list.                         |
| ● | Show Route         | Displays a map overview of the entire route to your destination.                                                                          |

# Voice Recognition System

---

## Other Commands (Commands used in List / Help/ etc.)

| Command |                          | Operation                                                                                                                                                                                          |
|---------|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ●       | Help                     | Goes to the voice recognition help screen. All available commands can then be identified and used.                                                                                                 |
| □       | Yes/No                   | When voice recognition is active, this command is used when an answer is requested for a confirmation question.                                                                                    |
| □       | Line 1-5 (One-Five)      | When you cannot select a certain name, such as in Call History, you can select it using line number. Simple numbers, such as "one" and "two", can be recognized.                                   |
| □       | Next Page/ Previous Page | When five or more searched items are listed, you can move to the previous or next page using a voice command.                                                                                      |
| □       | Manual Input             | When Dial or Destination search results are displayed, this command is used to search manually rather than searching using a voice command.<br>Voice recognition stops after this command is used. |
| □       | Go Back                  | Goes back to the previous screen.                                                                                                                                                                  |
| ●       | Exit                     | Ends the voice recognition.                                                                                                                                                                        |

# Voice Recognition System

---

## List of Nearest Locations

Navigation location names may be changed after a software update.

### Restaurants

- Fast Food
- Coffee Shop
- American
- Italian
- Latin American
- Mexican
- Asian
- Chinese
- Japanese
- Korean
- Seafood
- Vegetarian Food
- French
- Continental
- African
- Others
- Arby's
- Boston Market
- BURGER KING
- Carl's Jr
- Church's Chicken
- Dairy Queen
- Firehouse Subs
- Fleming's
- Hardee's
- In-N-Out Burger
- Jack in the Box
- Jimmy John's
- KFC
- McAlister's Deli
- McDonald's
- Panera Bread
- Popeyes
- Quiznos Sub
- Schlotzsky's
- SONIC
- SUBWAY
- Taco Bell
- Taco John's
- Wendy's
- White Castle
- Applebee's
- Bahama Breeze
- Boston's Restaurant & Sports Bar
- Cheeseburger in Paradise
- Chili's Grill & Bar
- Cool River
- Denny's
- Frisch's Big Boy
- Good Eats
- Ill Forks
- Lee Roy Selmon's
- Lone Star Steakhouse & Saloon
- Longhorn Steakhouse
- Luckys Cafe
- Outback Steakhouse
- Ponderosa
- Publix
- Seasons 52
- Sheetz
- Silver Fox
- Texas Roadhouse
- TGI Friday's
- The Capital Grille
- Bonefish Grill
- Carrabba's Italian Grill
- Chuck E Cheese's
- Domino's
- Olive Garden
- Papa John's
- Papa Murphy's
- Pizza 73
- Pizza Hut
- pizza pizza
- Cantina Laredo
- Chevys
- El Chico
- PF Chang's China Bistro
- Red Lobster
- Starbucks
- Dunkin' Donuts
- Auntie Anne's
- Baskin-Robbins
- Haagen-Dazs
- Hooters
- Roy's
- TCBY
- VAN DER WALK
- Chick-fil-A
- Chipotle
- IHOP
- Little Caesars
- Long John Silver's
- Panda Express
- Waffle House
- Tim Hortons

# Voice Recognition System

---

## Automotive

- Gas Stations
- Parking
- Auto Services
- Road Assistance
- Auto Parts
- Car Washes
- Automobile Dealerships
- Motorcycle Dealerships
- Kia Dealerships
- ampm
- ARCO
- BP
- Canadian Tire
- Chevron
- CITGO
- Conoco
- Esso
- Exxon
- Fleetfuels
- GetGo
- Giant Gasoline
- GTO
- Gulf
- Husky
- Ingles Gas Express
- Martin's Gasoline
- Meijer
- Mobil
- Murphy Express
- Murphy USA
- Petro Stopping Centers
- PETRO-CANADA
- Phillips 66
- Pioneer
- QuikTrip
- Rutter's
- Sheetz
- Shell
- Sinclair
- Sunoco
- Sunoco Canada
- TEXACO
- TravelCenters of America
- Ultramar
- Valero
- Wawa

## Recreation

- Amusement Parks
- Museums
- Cinemas
- Golf Courses
- Sports Complexes
- Sports Activities
- Wineries
- Video & Game Rental
- Ski Resorts
- Recreation Areas
- Other Recreation Areas

## Financial Services

- Banks
- ATMs
- Check Cashing Services
- Money Transfer
- Chase
- RBC Bank
- Wells Fargo

# Voice Recognition System

---

## Travel

- Airports
- Hotels
- Rental Car Agencies
- Tourist Information
- Tourist Attractions
- Travel Agents
- Rest Areas
- City Centers
- Campgrounds
- Ferry Terminals
- Bus Stations
- Local Transit
- Train Stations
- Americas Best Value Inn
- AmericInn
- Andaz
- Ascend Collection
- Baymont Inn & Suites
- Best Western
- Cambria Suites
- Canadas Best Value Inn
- Candlewood Suites
- Clarion Hotel
- Comfort INN
- Comfort Suites
- CONRAD
- Country Inn & Suites by Carlson
- COURTYARD by Marriott
- Crowne Plaza
- Days Inn
- DELTA
- Doubletree
- Econo Lodge
- Embassy Suites
- Grand Residences by Marriott
- Hampton Inn
- Hampton Inn & Suites
- Hawthorn Suites
- Hilton
- Hilton Garden Inn
- Hilton Grand Vacations
- Holiday Inn
- Holiday Inn Express
- Homewood Suites
- Hotel Indigo
- Howard Johnson
- Hyatt Place
- Hyatt
- Hyatt Summerfield Suites
- Intercontinental
- JW Marriott
- LA QUINTA INN
- Lexington
- Mainstay Suites
- Marriott
- Marriott VACATION CLUB
- Microtel Inns & Suites
- Motel 6
- NOVOTEL
- Omni Hotels
- Park Inn
- Park Plaza
- QUALITY INN
- Radisson
- Radisson SAS
- RAMADA
- Red Roof Inn
- Regent Hotels & Resorts
- Renaissance
- Residence Inn
- Ritz-Carlton Club
- Rodeway Inn
- Sheraton
- Sleep Inn
- SOFITEL
- Staybridge Suites
- Studio 6
- Suburban Extended Stay
- Super 8
- Thriftlodge Canada
- Travelodge
- Travelodge Canada
- VAN DER VALK
- WALDORF ASTORIA COLLECTION
- Wingate by Wyndham
- Wyndham
- Alamo
- AVIS
- Budget
- Dollar Rent A Car
- National
- Thrifty
- Enterprise
- Hertz

# Voice Recognition System

---

## Shopping

- Department Stores
- Convenience Stores
- Shopping Centers
- Grocery Stores
- Pharmacies
- Electronics
- Home Specialty Stores
- Sporting Goods
- Music Stores
- Bookstores
- Gifts
- Clothing
- Shoe Stores
- Canadian Tire
- Kmart
- Kohl's
- Nordstrom
- Sears
- Sears Hometown Store
- T.J. Maxx
- Walmart
- 7-Eleven
- ampm
- BP
- Circle K
- Fleetfuels
- GetGo
- GTO
- Murphy Express
- Murphy USA
- Petro Stopping Centers
- QuikTrip
- Rutter's
- Sunoco Canada
- TravelCenters of America
- Wawa
- Giant Food Stores
- IGA
- Ingles Markets
- Martin's Food Markets
- Meijer
- Publix
- Sav-Mor Foods
- Save-A-Lot
- SuperValu
- Best Buy
- Future Shop
- Staples
- OfficeMax
- Dick's Sporting Goods
- Sports Authority
- ABC Fine Wine & Spirits
- Costco
- Home Depot
- Barnes & Noble
- Giant Drugstore
- Giant Eagle
- Ingles Pharmacy
- Kmart Pharmacy
- Martin's Drugstore
- Meijer Pharmacy
- Rite Aid
- Shoppers Drug Mart
- Walgreens

## Community

- General Merchandise
- Dollar General
- Dollar Tree
- Family Dollar
- JCPenney
- Target
- Kangaroo Express
- Office Depot
- Food Lion
- Kroger
- CVS/pharmacy
- Kroger Pharmacy
- Target Pharmacy
- AT&T
- GameStop
- Radioshack
- Sprint
- T-Mobile
- US Cellular
- Verizon
- Ace Hardware
- Claire's
- Lowe's
- Merle Norman
- PETCO
- PETSMART
- Sally Beauty Supply
- SHERWIN-WILLIAMS
- True Value
- Mark's
- Payless Shoesource
- Police Stations
- Post Offices
- Libraries
- Schools
- Fire Departments
- Convention Centers
- City Halls
- Civic Centers
- Court Houses
- Government Offices
- Waste & Sanitary
- Utilities
- Business Facilities
- Church
- Synagogue

## Services

- Hospitals
- Medical Services
- Physicians
- Tax Services
- Attorneys
- Funeral Homes
- Hair & Beauty
- Cleaning & Laundry
- Social Services
- Communication
- Dentists
- Photography
- Tailors & Alterations
- Movers
- Nursing Home
- Optical
- Personal Services
- Repair Service
- Veterinary Hospital

## Operating Siri® command

### What is Siri®?

Apple wants to integrate the Siri to specific voice control system by working with car manufacturers.

 
You can ask Siri through the “” button on the steering wheel remote control while driving.

The Apple device (iOS device) screen does not light up to minimize impact on the driving.

If there is “Eyes-free” function, you can operate the Siri feature. (Making phone calls, Playing music, Listening to or writing a text message, Finding the destination by using the map, Looking for calendar information, etc)

### Starting Siri®

1. Connect your Apple device (iOS device) to AVN system through Bluetooth.  
Please check whether your Apple device (iOS device) supports Siri and turning Siri On.
2. Press and hold “” on the steering wheel remote control.

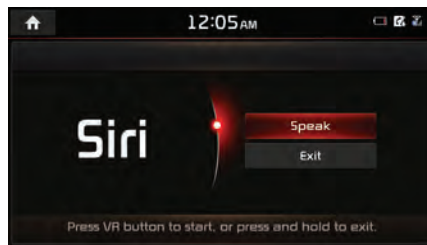

<Siri screen>

3. Say a command.

For proper recognition, please say the command after the voice instruction and Siri beep tone.

### Re-starting Siri®

- While system waits, press “” on the steering wheel remote control. The command waiting condition is ended and the beep tone will make sound. After the “beep”, say the voice command.
- Press [Speak] on the Siri screen. The command waiting condition is ended and the beep tone will make sound. After the “beep”, say the voice command.

### Ending Siri®

- While Siri is operating, press and hold “” on the steering wheel remote control or say “Exit”.
- While using voice recognition, pressing other button except on the steering wheel remote control or a different button on head unit will end Siri feature recognition.
- Press [Exit] on the Siri screen.

### Adjusting Siri® volume

While Siri is operating, turn “VOL” knob on the head unit or press “VOL+/VOL-” on the steering wheel remote control.

#### Note

- Please see the AVN system only supports “Music” and “Phone” related functions. Other functions will be performed in the your Apple device (iOS device).
- Eyes-Free mode would be activated automatically while you are driving. If the car is stopped (when the transmission lever is put to P), Eyes-Free mode would be deactivated automatically.

 
# SiriusXM™ Data

## About SiriusXM™ Data

The SiriusXM Data Service is a paid membership satellite radio service which provides users with weather, traffic, fuel prices, stock, sports, and movie time information. For information on registration or related content, please visit the SiriusXM radio website ([www.siriusxm.com](http://www.siriusxm.com)).

## Accessing SiriusXM™ Data

1. Press [HOME] > [SiriusXM Data].

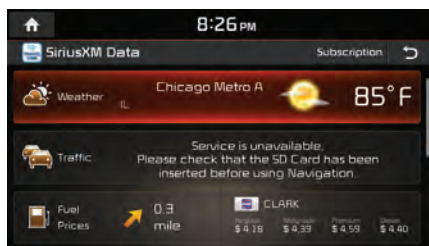

<SiriusXM Data screen>


2. If you want to subscribe to the SiriusXM Data Service, press [Subscription] > [Call] to enable Services.

## SiriusXM™ Weather Information
 
### Current weather information


This service provides current weather information in your region.

1. Press [HOME] > [SiriusXM Data].  
This current weather information is displayed on the screen.

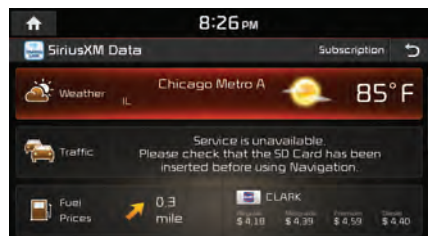

<SiriusXM Data screen>

 
2. Press [Weather] to check the detail information.

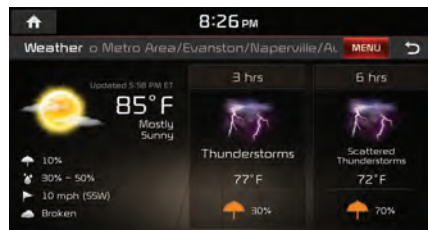

## Weather forecast

This service provides weather forecasts for the next six days including today in your region.

 1. Press [Weather] > [MENU] in SiriusXM Data screen.

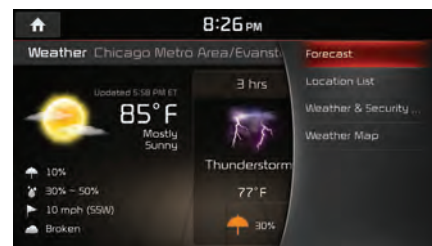

2. Press [Forecast].



- Press [MENU] > [Today] to move to current weather information screen.
- Press [MENU] > [Location List] to move to the Location List screen.


# SiriusXM™ Data

 - Press [MENU] > [Weather & Security Alerts] to move to the Weather & Security Alerts screen.
- Press [MENU] > [Weather Map] to move to the Radar Map screen.

## Weather information in other region

This service provides weather information in other region.

1. Press [Weather] > [MENU] > [Location List] > [Cities] in SiriusXM Data screen.

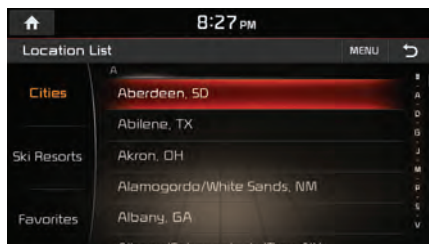

<Location List>

2. Select the desired region.




### ! Note

 If you want to display weather information in your current location, press [📍].


## Weather information at ski resorts

This service provides weather and facility information at ski resorts.

1. Press [Weather] > [MENU] > [Location List] > [Ski Resorts] in SiriusXM Data screen.

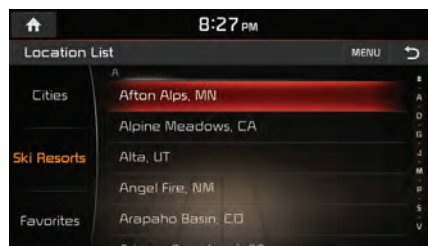


 2. Select the desired ski resort.

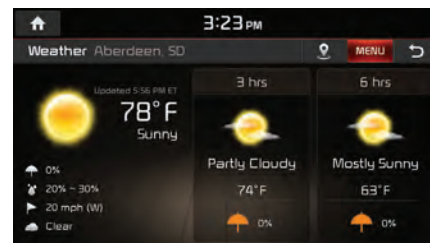


### ! Note

 If you want to check weather information in your current location, press [📍].

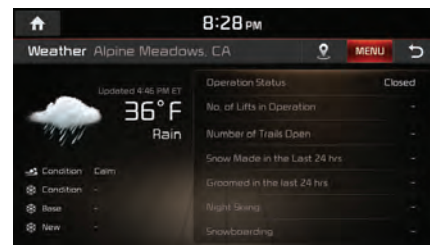


## Searching for other region or ski resort

 1. Press [Cities] or [Ski Resorts] > [MENU] > [Search] on the Location List.
2. Enter the desired region or ski resort, press [Q].

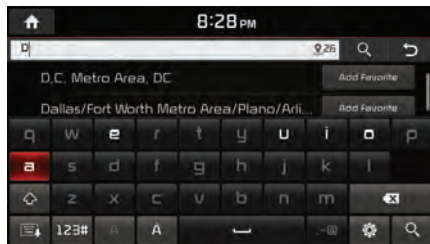

 3. Select the desired item.

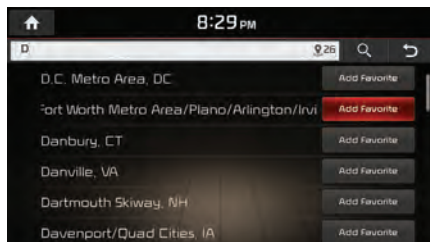

4. If you want to add the selected item in the Favorites, press [Add Favorite].


If you want to delete the item saved in the Favorites, press [Delete Favorite].

## Favorites

 
If the city or ski resort have already been stored in the Favorites, it can be easily recalled.

Add the city or ski resort in the Favorites. Refer to “Adding to Favorites” on page 124.

1. Press [Favorites] on the Location List.

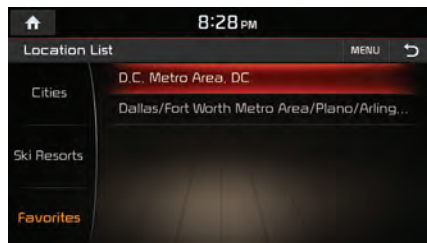

 
2. Select the desired item.

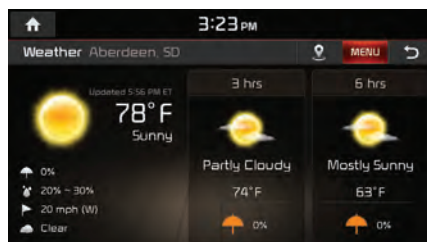

## Adding to Favorites

A maximum of 10 items can be added.

 1. Press [Favorites] > [MENU] > [Add Favorite] on the Location List.
2. Enter the desired location, press [Q].

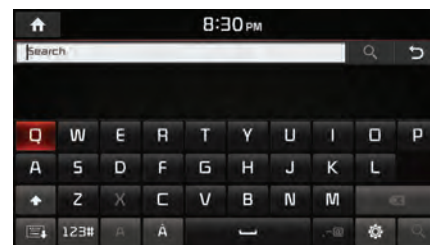


3. Select the desired item.


## Reordering Favorites

 The added items in Favorites can be reordered.

1. Press [Favorites] > [MENU] > [Reorder] in Location List.
2. Press the desired item.

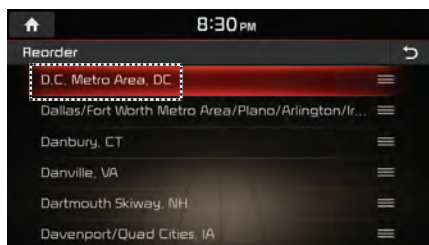


 3. Move up and down and press the selected item, or drag it to the desired position.

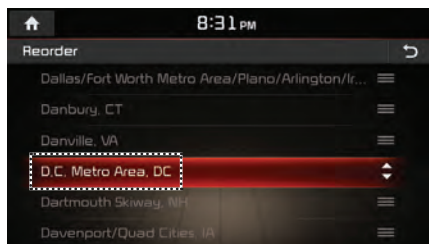

## Deleting Favorites

 1. Press [Favorites] > [MENU] > [Delete] in Location List.

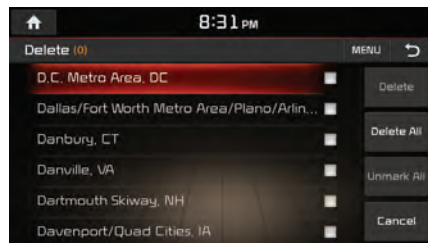

2. Select the item you want to delete and press [Delete].
  - [Delete All]: Deletes all items.
  - [Unmark All]: Unmarks all items.
  - [Cancel]: Exits delete screen.

## Weather & Security Alerts

Provides weather warnings and advisories, such as Tornado, Storm, Flood, Winter, Wind etc..

 
1. Press [Weather] > [MENU] > [Weather & Security Alerts] in SiriusXM Data screen.



- Press [MENU] > [Prioritization Levels] > [All], [Low], [High] or [Severe] to set the prioritization levels.
- Press [MENU] > [Set Range] > [50 miles], [100 miles], [200 miles] or [300 miles] to set the distance range.
- Press [MENU] > [Marine/coastal] to set whether to include regional information of the Marine/coastal.
- Press [MENU] > [Show Popup] to set whether or not to display alert pop-ups.

# SiriusXM™ Data

- Press the desired item.

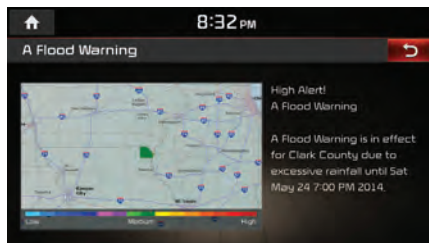

## Weather Map

Provides up-to-date weather information across the country.

Zoom in to view more detailed information in specific regions.

- Press [Weather] > [MENU] > [Weather Map] in SiriusXM Data screen.



- Press [MENU] > [Full Screen] to hide all icons.

- Press [MENU] > [Weather Front] to set whether to display cold/warm air fronts.
- Press [MENU] > [Isobar] to set whether to display the Isobar.
- Press [MENU] > [Pressure Center] to set whether to display the Pressure center.
- Press [MENU] > [NOWRad] to set whether to display the storm track.

- Press [+] / [-] to use the zoom in and out features.

Push the controller up, down, left, or right to move to the desired location.

 
## SiriusXM Traffic Information

Press [Traffic] to enter the Traffic Announcement mode in SiriusXM Data screen. Refer to "Traffic information list" on page 74.

## SiriusXM™ Fuel Prices Information

### Finding gas station

- Press [Fuel Prices] in SiriusXM Data screen.

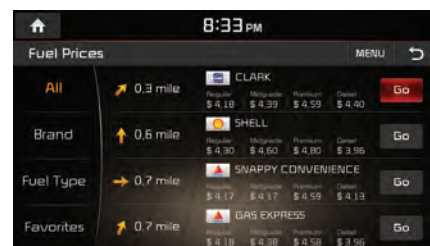


<Fuel Prices List>

- [All]: Displays all gas stations.
- [Brand]: Displays gas stations by brand.
- [Fuel Type]: Displays gas stations by fuel type.
- [Favorites]: Moves to the [Favorites] menu.
- Press [MENU] > [Sort by] > [Distance], [Price], [A - Z] to sort in Distance, Price, or Alphabetical order. The [On Route] option displays only gas stations when a route is set, starting with nearest to current location.

# SiriusXM™ Data

 - Press [MENU] > [Search] to search for the gas station. For more details, refer to “Searching for gas station” on page 127.
- 2. Press [Go] > [Yes].

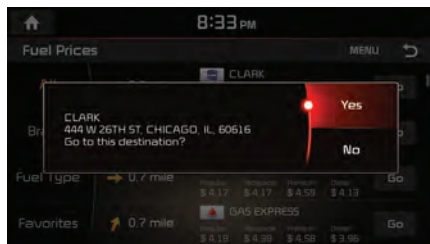


## ! Note


Within 30 miles, a maximum of 65 items can be displayed.

## Searching for gas station

 1. Press [MENU] > [Search] in Fuel Prices List.
2. Enter the desired gas station and press .

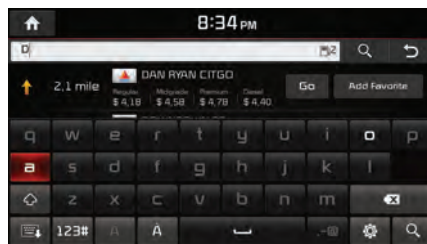

 3. To store the desired item as a favorite, press [Add Favorite].

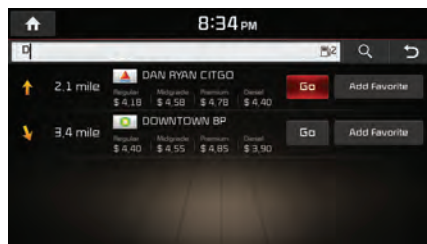


4. Press [Go] > [Yes].

## Favorites

 If the gas station has been already stored in the Favorites, it can be easily recalled.

First of all, add the gas station in the Favorites. Refer to “Adding to Favorites” on page 128.

1. Press [Favorites] in Fuel Prices List.

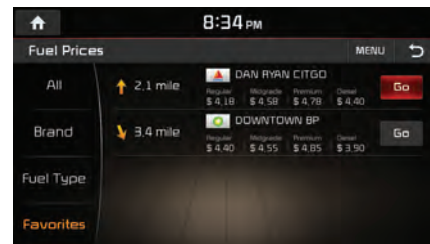


2. Press [Go] > [Yes].

## Adding to Favorites

 A maximum of 10 items can be added.

1. Press [Favorites] > [MENU] > [Add Favorite] in Fuel Prices List.
2. Enter the desired gas station and press [Q].

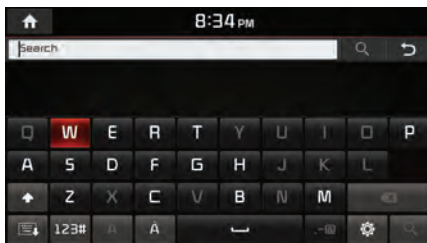


3. Select the desired item.

## Sorting Favorites

 
The added items in Favorites can be sorted.

1. Press [Favorites] > [MENU] > [Sort by] in Fuel Prices List.
2. Press [MENU] > [Sort by] > [Distance], [Price], [A - Z] to display in Distance, Price, or Alphabetical order. The [On Route] option displays only gas stations when a route is set, starting with nearest to current location.

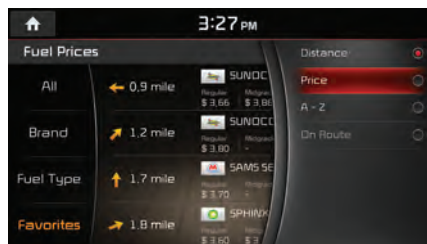

## Deleting Favorites

 1. Press [Favorites] > [MENU] > [Delete] in Fuel Prices List.

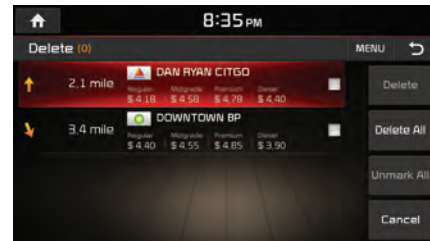

2. Select the item you want to delete and press [Delete].
  - [Delete All]: Deletes all items.
  - [Unmark All]: Unmarks all items.
  - [Cancel]: Exits delete screen.

# SiriusXM™ Data

 
## SiriusXM™ Stocks Information

View real time information of the stock market.

### Favorites

Press [Stocks] in SiriusXM Data screen.


Stocks added as favorites are displayed in the main screen.

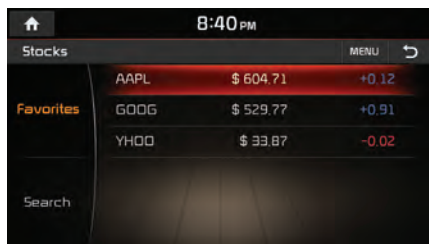

<Stocks main screen>

### Note

 
When entering Stocks for the first time, a screen is displayed to add your favorite stock information. Press [Search] to find and add your favorite stocks.



### Adding to Favorites

A maximum of 100 items can be added.

 1. Press [MENU] > [Add Favorite] in Stocks main screen.
2. Enter the favorite stocks and press [Q].

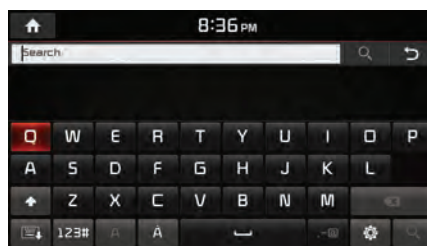


3. Select the desired item.


### Reordering Favorites

 The added items in Favorites can be reordered.

1. Press [MENU] > [Reorder] in Stocks main screen.
2. Press the desired item.

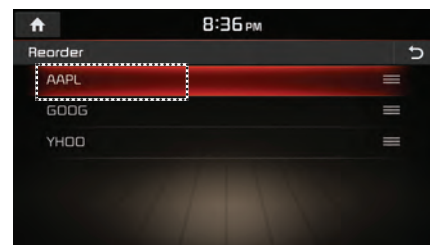

 
3. Move up and down and press the selected item, or drag it to the desired position.

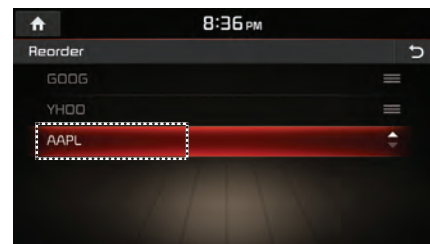

# SiriusXM™ Data

## Deleting Favorites

 
1. Press [MENU] > [Delete] in Stocks main screen.

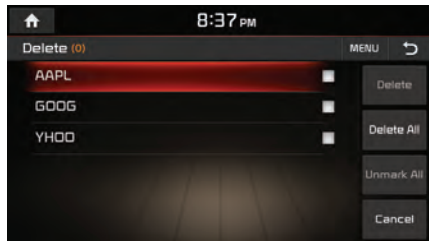


2. Select the item you want to delete and press [Delete].
  - [Delete All]: Deletes all items.
  - [Unmark All]: Unmarks all items.
  - [Cancel]: Exits delete screen.

## Stock Search

 1. Press [Search] in Stocks main screen.
2. Enter your favorite stocks and press [OK].

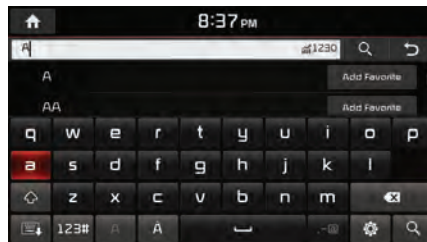

 3. Press [Add Favorite] to save them.

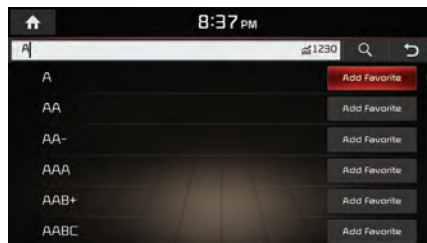


4. Added stocks will display in the Favorites screen.

## SiriusXM™ Sports Information

 
Provides real-time information on scores and schedules all major sports.

1. Press [Sports] in SiriusXM™ Data screen.

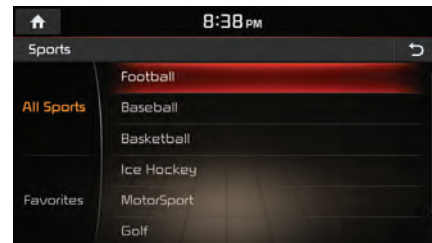


<Sports main screen>

 2. Press the desired item to view related sports information.

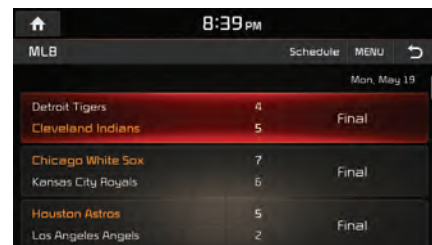


# SiriusXM™ Data

 - Press [Schedule] or [MENU] > [Schedule] to display schedules for the next seven days.
- Press [Score] or [MENU] > [Scores] to display scores for 2 days from today.
- Press [MENU] > [SXM Radio Game Zone] to tune into current games in Game Zone.
- Press [MENU] > [News] to check new information for each sport.

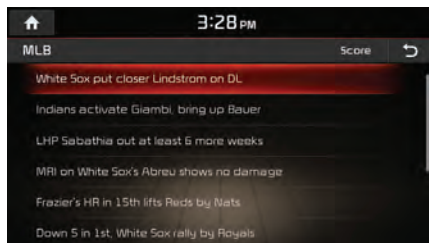

## Favorites

 
1. Press [Favorites] in Sports main screen.  
All teams added as favorites will display in the Favorites list.

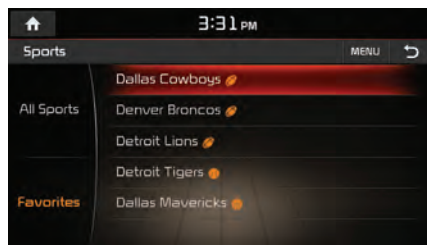

2. Select the favorite team.


### ! Note

 If there are no favorites added, press [Search] to find and add your favorite teams.



## Adding to Favorites

 1. Press [MENU] > [Add Favorite] in Sports main screen.
2. Enter the favorite teams and press [Q].

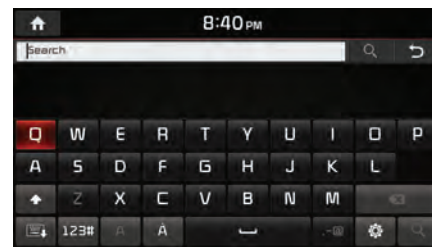


3. Select the desired item.

# SiriusXM™ Data

 
## Reordering Favorites

The added items in Favorites can be reordered.

1. Press [MENU] > [Reorder] in Sports main screen.
2. Press the desired item.

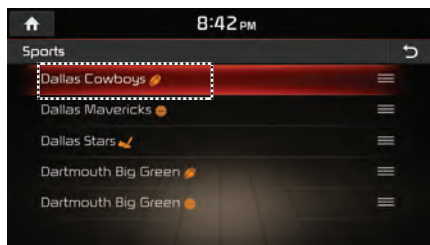

 3. Move up and down and press the selected item, or drag it to the desired position.

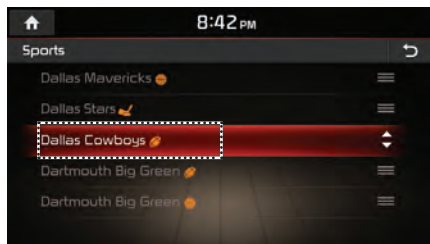

## Deleting Favorites

1. Press [MENU] > [Delete] in Sports main screen.



2. Select the item you want to delete and press [Delete].
  - [Delete All]: Deletes all items.
  - [Unmark All]: Unmarks all items.
  - [Cancel]: Exits delete screen.

## SiriusXM™ Movie Information

You can check recent movies and nearby theaters, and also register your favorite theater locations.

### Finding theater by searching for movie

1. Press [Movie Times] > [Movies] in SiriusXM™ Data screen.

The movie list is displayed in alphabetical order by default.

 


<Movies main screen>

- Press [MENU] > [Sort by] to sort the movies by ratings. Any movies rated higher will be filtered out.
- Press [i] to view more information about that movie.

2. Press the desired theater.

The theater list is displayed on the screen.

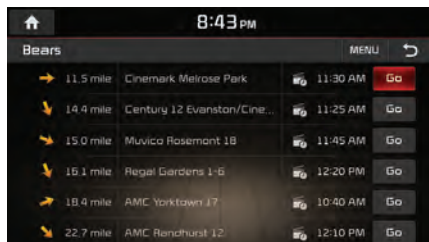


- Press [MENU] > [Sort by] > [Distance] or [Starting Time] to sort in Distance or Starting Time order.
3. Press [Go] > [Yes].

## Viewing movie list by searching for theater

 1. Press [Theaters] on the Movies main screen.


The theater list is displayed on the screen.

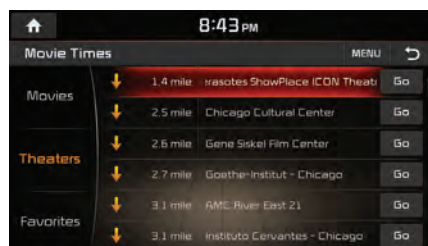

- Press [MENU] > [Sort by] > [Distance] or [A - Z] to sort in Distance or Alphabetical order.
- Press [MENU] > [Search] to search for the theater. For more details, refer to "Searching for gas station" on page 127.

2. Press the desired theater.

 The movie list is displayed on the screen.

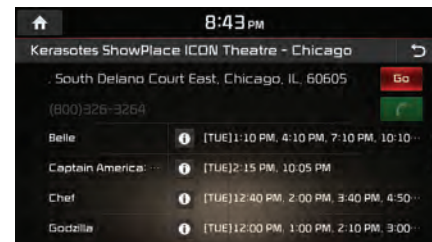


- Press [Go] > [Yes] to find the theater you selected.
- Press [Call] to make a call to theater.
- Press [Info] to view more information about that movie.

## Favorites

 1. Press [Favorites] on the Movies main screen.


Favorites is displayed on the screen. Favorites shows a list of theater added by the user.

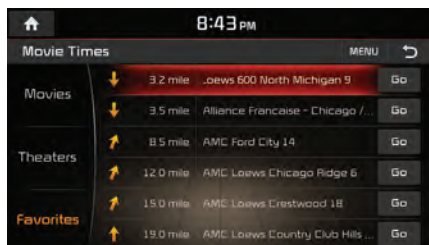

- Press [MENU] > [Add Favorite] to add the desired theater to Favorites. For more details, refer to “Adding to Favorites” on page 134.
  - Press [MENU] > [Delete] to delete the Favorites. For more details, refer to “Deleting Favorites” on page 134.
2. Press [Go] > [Yes].


## Note

 If there are no favorites added, press [Search] to find and add your favorite theaters.



## Adding to Favorites

 
1. Press [Favorites] > [MENU] > [Add Favorite] on the Movies main screen.
2. Enter the favorite theater, press [Q].

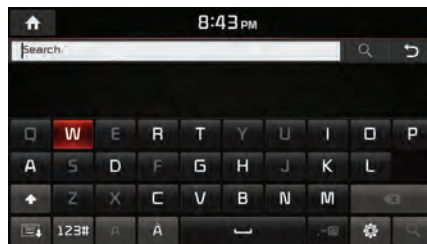

3. Select the desired item.

## Deleting Favorites

 
1. Press [MENU] > [Delete] on the Sports main screen.

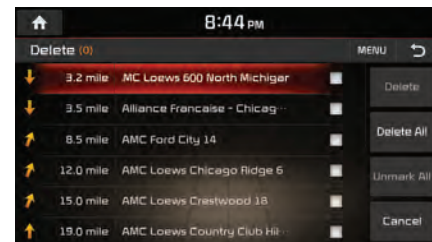

2. Select the item you want to delete and press [Delete].
  - [Delete All]: Deletes all items.
  - [Unmark All]: Unmarks all items.
  - [Cancel]: Exits delete screen.

# Settings
 
## [Settings] menu overview

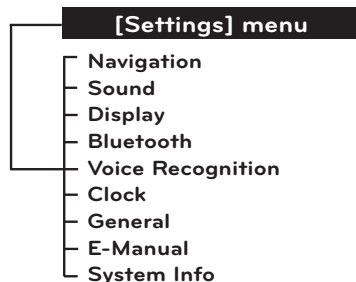


## Navigation

This menu describes navigation settings.

### General

This menu is used to change general settings.

 1. Press [HOME] > [Settings] > [Navigation] > [General]. Or press [NAV] > [Settings] > [General].

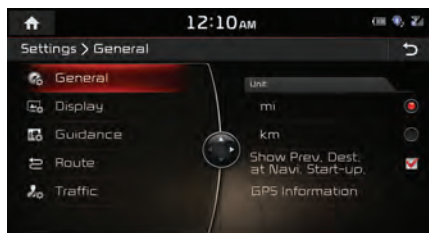

2. Select the desired items.

- [Unit]: Changes the unit between the "mi" and "km".
- [Show Prev. Dest. At Navi. Start-up]: Changes the previous destination view setting when starting Navigation. When this is selected and when navigation is started without a route planned, a list of previous destination will be displayed.
- [GPS Information]: Check the GPS information.

## Display

This menu is used to change the display environment settings.

1. Press [HOME] > [Settings] > [Navigation] > [Display]. Or press [NAV] > [Settings] > [Display].



2. Select the desired items.

- [Map Mode]: Sets the Map Mode to [Full Map] or [Show Turn List].
- [Map Display]: Sets the Map Display to [Heading Up] or [North Up].
- [Auto Zoom]: Sets whether to set the zoom level automatically or not.
- [Display Traffic]: Sets whether to display the traffic information or not.
- [Map Font]: Sets the Map Font to [Small], [Medium] or [Large].
- [Illumination]: Sets the Illumination to [Automatic], [Daylight] or [Night].
  - [Automatic]: Adjusts the brightness automatically according to surrounding brightness.
  - [Daylight]: Always keeps the brightness on high regardless of surrounding brightness.
  - [Night]: Always keeps the brightness on low regardless of surrounding brightness.

# Settings

## Guidance

This menu is used to change the guidance settings.

1. Press [HOME] > [Settings] > [Navigation] > [Guidance]. Or press [NAV] > [Settings] > [Guidance].

 


2. Select the desired items.
  - [Curve Alert]: Sets whether to display the Curve Alert or not.
  - [Speed Limit]: Sets whether to display the Speed Limit alert or not.
  - [Guide Frequency]: Sets the Guide Frequency to [Simple] or [Detailed].

## Route

This menu is used to change the route settings.

1. Press [HOME] > [Settings] > [Navigation] > [Route]. Or press [NAV] > [Settings] > [Route].

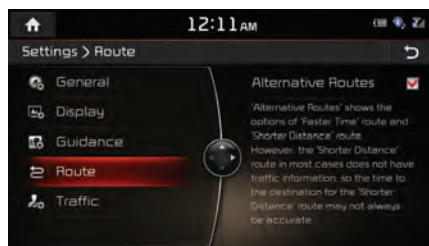

2. Set whether to search for the Alternative Routes or not.

### ! Note

“Alternative Routes” shows the options of “Faster Time” route and “Shorter Distance” route. However, the “Shorter Distance” route in most cases does not have traffic information, so the time to destination for the “Shorter Distance” route may not always be accurate.

## Traffic

This menu is used to change the traffic information event settings.

1. Press [HOME] > [Settings] > [Navigation] > [Traffic]. Or press [NAV] > [Settings] > [Traffic].



2. Set whether to display the Traffic Event Popup or not.
  - [Freeway]: Select whether to display popup message for traffic information on freeway.
  - [Surface Road]: Select whether to display popup message for traffic information on surface road.

# Settings

## Sound

This menu is used to adjust the sound effects for the whole system.

### Volume Ratio

This menu is used to set the volume ratio.

1. Press [HOME] > [Settings] > [Sound] > [Volume Ratio].

 


2. Select the desired item.
  - [Navigation Priority]: Navigation guidance volume is louder than audio volume.
  - [Equal Volumes]: Audio volume and navigation guidance volume are in identical volume.

### Fade/Balance

This menu is used to set the sound position. For example, you can set the sound close to the driver-seat so that the volume is relatively lower in the passenger or rear seats.

1. Press [HOME] > [Settings] > [Sound] > [Fade/Balance].

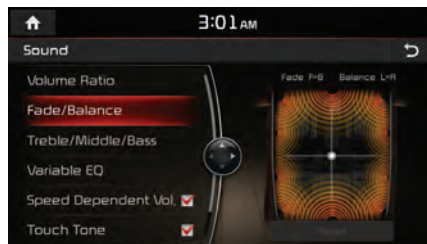

2. Adjust the Fade/Balance.

#### ! Note

Press [Reset] to restore sound to the center position.

### Treble/Middle/Bass

This menu is used to set the Treble/Middle/Bass.

1. Press [HOME] > [Settings] > [Sound] > [Treble/Middle/Bass].



2. Adjust the Treble/Middle/Bass.

#### ! Note

Press [Reset] to reset the [Treble/Middle/Bass] settings.

# Settings

## Surround Sound (option)

This menu is used to turn the Surround Sound on/off. This menu may not be supported depending on the type of the connected amplifier.

Press [HOME] > [Settings] > [Sound] > [Surround Sound].



## Variable EQ (option)

This menu allows you to set the Variable EQ. This menu may not be supported depending on the type of the connected amplifier.

1. Press [HOME] > [Settings] > [Sound] > [Variable EQ].



 
2. Press the desired item.

- [Normal]: Natural sound optimised for front seats.
- [Dynamic]: Dynamic sound emphasising bass, stereo sound.
- [Concert]: Sound similar to a concert or live hall.

## Speed Dependent Vol.

This menu is used to automatically control the audio volume according to the speed of the vehicle.

Press [HOME] > [Settings] > [Sound] > [Speed Dependent Vol.].

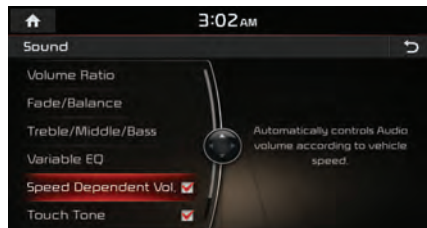

## Touch Tone

This menu is used to play a beep sound whenever you operate the touch screen.

 
Press [HOME] > [Settings] > [Sound] > [Touch Tone].



## Reset

This menu is used to reset all [Sound] settings.

1. Press [HOME] > [Settings] > [Sound] > [Reset].

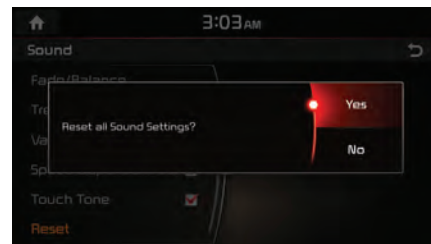

2. Press [Yes].

# Settings

## Display

This menu is used to control the display brightness and image rate for the whole system.

### Set Video Image

The Screen adjustment can be set in video modes, such as DVD, VCD, Jukebox video, USB video, or AUX video.

1. Press [MENU] > [Display Settings] > [Set Video Image].



2. Select the desired options.
  - [Brightness]: Adjusts the brightness.
  - [Contrast]: Adjusts the contrast.
  - [Saturation]: Adjusts the saturation.



#### Note

Press [Reset] to reset [Set Video Image] settings.

### Set LCD Brightness

This menu is used to set the LCD brightness.

1. Press [HOME] > [Settings] > [Display] > [Set LCD Brightness].



2. Adjust the LCD Brightness.
  - [LCD Brightness]: Adjusts the LCD Brightness.
  - [Reset]: Resets the LCD Brightness.

### Mode

This menu is used to set the display brightness according to mode changes.

1. Press [HOME] > [Settings] > [Display] > [Mode].



 
2. Select the desired options.
  - [Automatic]: Adjusts the brightness automatically according to surrounding brightness.
  - [Daylight]: Always maintains the brightness on high regardless of surrounding brightness.
  - [Night]: Always maintains the brightness on low regardless of surrounding brightness.

# Settings

## Display Ratio

The screen ratio is used to set in video modes, such as DVD, VCD, Jukebox video, USB video, or AUX video.

1. Press [HOME] > [Settings] > [Display] > [Display Ratio].

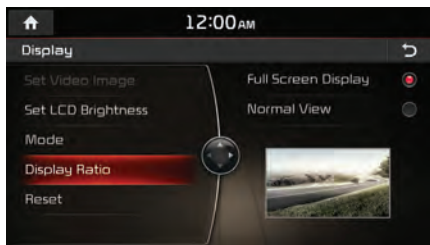


2. Select the desired option.
  - [Full Screen Display]: Displays the full screen.
  - [Normal View]: Displays the 4:3 screen with the black bar appeared at the left and right side.

## Reset

 This menu is used to reset all [Display] settings.

1. Press [HOME] > [Settings] > [Display] > [Reset].

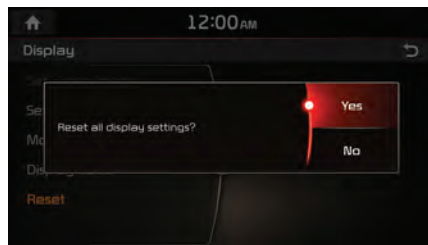

2. Press [Yes].


## Bluetooth

 This menu describes Bluetooth settings.

### Bluetooth Connection

This menu is used to pair and connect the head unit and a Bluetooth phone.

1. Press [HOME] > [Settings] > [Bluetooth] > [Bluetooth Connection].

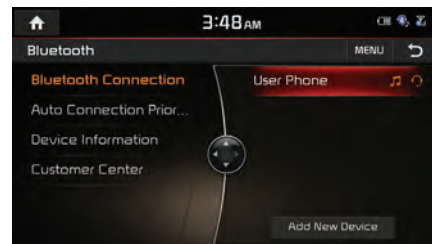


2. Follow steps 2-6 of the "When a phone is already paired" on page 99.

# Settings
 
## Auto Connection Priority

If auto connection priority is turned on, a Bluetooth device will automatically be connected according to the option setting when the car ignition is turned on.

1. Press [HOME] > [Settings] > [Bluetooth] > [Auto Connection Priority].

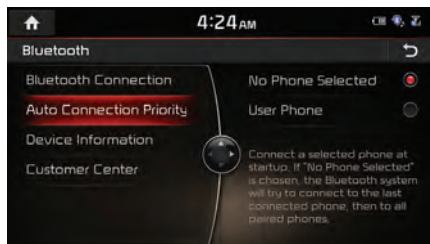

2. Press the desired item.

### ! Note

If the [No Phone Selected] is chosen, the Bluetooth system will try to connect to the last connected phone, then to all paired phones.

## Device Information

This menu allows you to control additional Bluetooth® Wireless Technology related settings.

 
1. Press [HOME] > [Settings] > [Bluetooth] > [Device Information].



2. Press the desired item.
  - [Device Name]: Changes the Bluetooth device name of the vehicle.
  - [Passkey]: Changes the passkey required to connect a Bluetooth device to the car.
  - [Reset]: Deletes all paired devices and resets the bluetooth settings.

## Device Name

1. Press [HOME] > [Settings] > [Bluetooth] > [Device Information] > [Device Name].

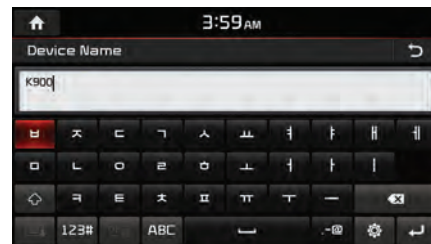

2. Input the desired name using the keypad, then press [↵].


### ! Note

 The default device name is set to K900.

# Settings

## Passkey

1. Press [HOME] > [Settings] > [Bluetooth] > [Device Information] > [Passkey].

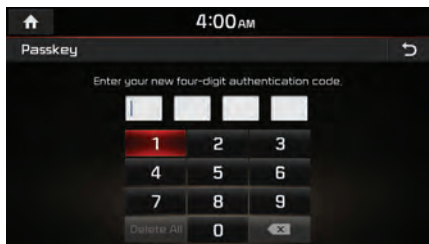


2. Input the passkey using the keypad.

### ! Note

 The passkey is a 4-digit authentication code used for a Bluetooth connection between the mobile phone and car system. The default passkey is set to 0000.

## Reset

1. Press [HOME] > [Settings] > [Bluetooth] > [Device Information] > [Reset].

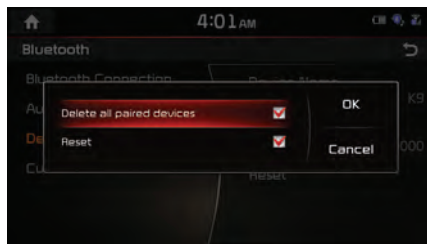

2. Press the desired items.
  - [Delete all paired devices]: Deletes all paired devices.
  - [Reset]: Resets the bluetooth settings.
3. Press [OK].

## Customer Center

This menu is used to check the customer center information for Bluetooth system.

Press [HOME] > [Settings] > [Bluetooth] > [Customer Center].

 


# Settings

## Voice Recognition

This menu describes voice recognition settings.

1. Press [HOME] > [Settings] > [Voice Recognition].
2. Select the desired item.

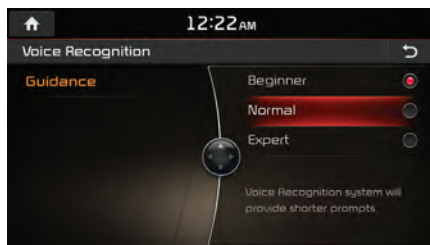

- [Beginner]: Voice Recognition guidance will provide detailed prompts.
- [Normal]: Voice Recognition guidance will provide simple and short prompts.
- [Expert]: Voice Recognition guidance will not provide any prompts. Only a beep will be played.


## Clock

 This menu describes clock settings.

### GPS Time

This menu is used to display time according to the received GPS time.

Press [HOME] > [Settings] > [Clock] > [GPS Time].

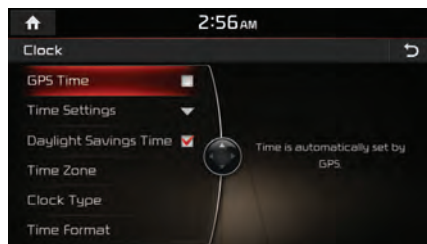

### ! Note

When the GPS Time is turned off, you can set the time manually.

## Time Settings

1. Press [HOME] > [Settings] > [Clock] > [Time Settings].



2. Set the time, then press [OK].

### ! Note

 
Time settings cannot be used when GPS time is set. To set the time manually, change [GPS Time] setting to off, and set the time.

# Settings

## Daylight Savings Time

This menu is used to turn on/off daylight savings time feature.

Press [HOME] > [Settings] > [Clock] > [Daylight Savings Time].

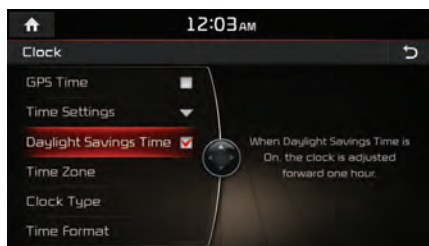


### ! Note

- When Daylight Savings Time is turned on, the clock is adjusted forward one hour.
- The default settings of [Daylight Savings Time] is set to on.

## Time Zone

This menu is used to select the time zone.

 1. Press [HOME] > [Settings] > [Clock] > [Time Zone].

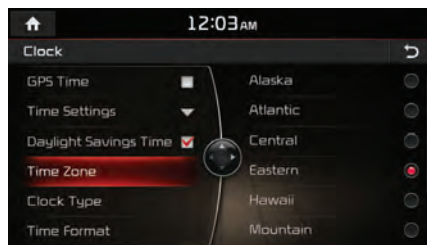

2. Select the desired time zone.

## Clock Type

This menu is used to set the type of clock displayed when the system power is turned off.

1. Press [HOME] > [Settings] > [Clock] > [Clock Type].



2. Select [Digital] or [Analog].

# Settings

## Time Format

This function is used to convert the digital clock display between 12 hour/ 24 hour systems.

1. Press [HOME] > [Settings] > [Clock] > [Time Format].



2. Select [12 Hr] or [24 Hr].

## General

### Language

This menu is used to set the language of the system display and voice language.

1. Press [HOME] > [Settings] > [General] > [Language].



2. Select the desired language.

## Keyboard

This menu is used to change the type of keyboard used within the system for each language.

The set keyboard will be applied to all input modes across the entire system.

1. Press [HOME] > [Settings] > [General] > [Keyboard].



2. Select the keyboard type.

# Settings

## Distance Unit

This menu is used to select the Distance Unit to [mi] or [km].

1. Press [HOME] > [Settings] > [General] > [Distance Unit].



2. Press the desired item.

## Screen Saver

This menu is used to select the screen displayed when the system power is turned off.

1. Press [HOME] > [Settings] > [General] > [Screen Saver].



2. Press the desired item.
  - [None]: No image is displayed.
  - [Clock]: Displays the clock on the screen.

## Lock Rear Controls

This menu is used to lock the function for rear seat.

1. Press [HOME] > [Settings] > [General] > [Lock Rear Controls].



 
Rear seat controls are not available when Rear Control is locked.

# Settings


## E-Manual

You can see the E-Manual.

1. Press [HOME] > [Settings] > [E-Manual].

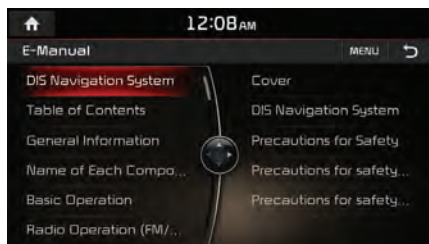

 2. Press the desired item.

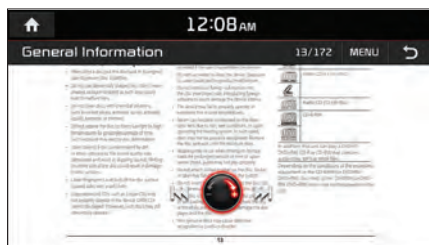

<E-Manual screen>

## Skip

You can see the previous or next page.

- Push the controller left or right.
- Press [◀▶] on the screen.

 
## Zoom In/Out

In the electronic manual screen, if you turn the controller left/right, you can enlarge/reduce, and if you push the controller up/down/left/right, you can move it up/down/left/right.



## Search


1. Press [MENU] > [Search] on the E-Manual screen.

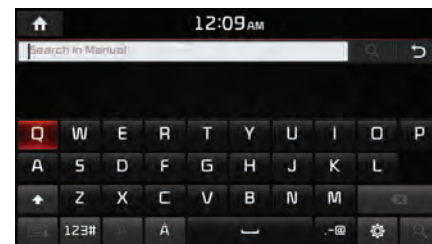

2. Input the desired text and press [🔍].

## Go to page

 1. Press [MENU] > [Go To Page] on the E-Manual screen.

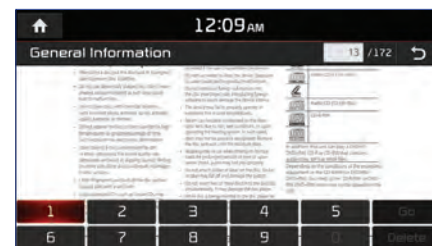

2. Input the desired page number and press [Go].


# Settings
 
## System Info

### Version

This menu option is used to view the system information.

Press [HOME] > [Settings] > [System Info] > [Version].

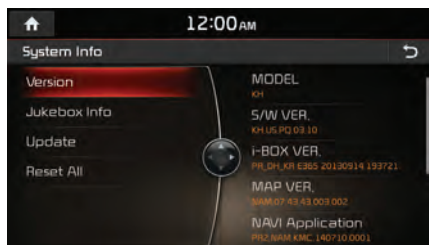


### ! Note

The software information may differ from the actual information of the vehicle.

## Jukebox Info

This menu is used to display the capacity of the stored data on the Jukebox.

 1. Press [HOME] > [Settings] > [System Info] > [Jukebox Info].

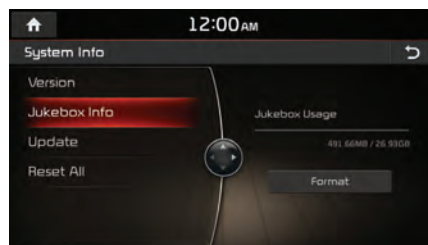


2. Press [Format] to delete all data stored on the Jukebox.

## Update

 To order the latest map and software updates, please visit <http://www.mapnsoft.com>. For more details about updates, check out the website before proceeding.

1. Press [HOME] > [Settings] > [System Info] > [Update].

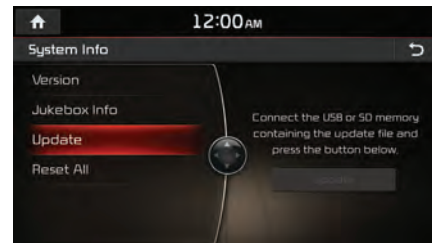

2. After inserting the USB or SD card with the update file, press [Update].

Once updating is complete, the system will automatically restart.

### ! Note

This product requires regular updates for software corrections, new functions and map updates. Updating may require up to 1 hour depending on the data size.

 
# Settings

- Turning off the power or ejecting the USB during the update process may result in data loss. Make sure to keep the ignition on while update is in progress.
- Map and Navi software updates can be downloaded from the designated website (<http://www.mapnsoft.com>) and updated through the SD card.
- Please use only the SD card that was included with the vehicle purchase.
- The use of a separately purchased SD card may result in damage due to heat related deformation.
- Product malfunctions caused by the use of separately purchased SD cards shall not be covered within the product warranty.
- Repeatedly connecting/disconnecting the SD card in a short period of time may cause damage to the device.

## Reset All

This menu is used to reset all settings specified by the user.

1. Press [HOME] > [Settings] > [System Info] > [Reset All].

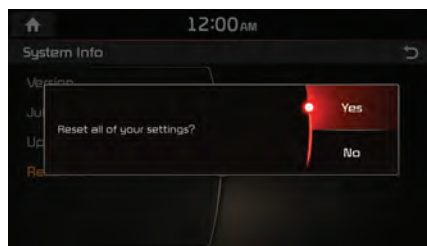

2. Press [Yes].


# Using Rear Camera - Option
 
## About Rear Camera

- Rear camera is an option for the customers who selected the option.
- In this instrument, for the safety of the user, a rear camera that can secure the rear view during the backward driving is connected.
- After the vehicle is started, if the transmission lever is put to R, the rear camera power is automatically turned on, and the rear camera starts operation.
- If you change the transmission lever location from R to another position, rear camera stops.

## Turning on the rear camera

1. When the vehicle is started, put the transmission lever to R position.

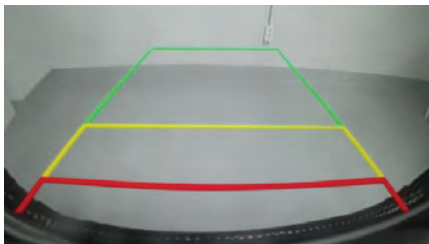

## ! Note

Rear camera has an optical lens to secure wide view, so there is a little difference in the distance shown on the screen. For safety, make sure to check the rear, left, and right view by yourself.

## Backing Up & Using Camera

 
Never rely solely on the rear view camera when backing up. Prior to entering your vehicle always do a visual check of the area behind your vehicle, and before backing up be aware of your surroundings and supplement the rear view camera by looking over your shoulders and checking your rear view mirrors. Due to the difficulty of ensuring that the area behind you remains clear, always back up slowly and stop immediately if you even suspect that a person, and especially a child, might be behind you.

# Using PGS (Parking Guide System) - Option

## About PGS (Parking Guide System)

- PGS (Parking Guide System) is an option for the customers who selected the option.
- In this instrument, for the safe parking of the user, a parking guide system which is displayed when gear is at R position is installed.
- After the vehicle is started, if the transmission lever is put to R, the PGS (Parking Guide System) automatically starts operation.
- If the transmission lever is changed from R to P position, PGS (Parking Guide System) operation stops.


## PGS screen

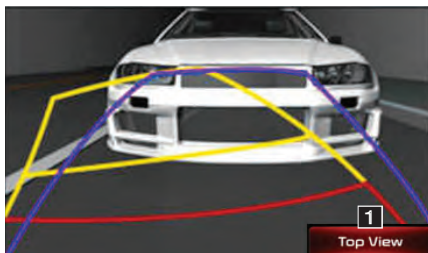

- [Top View]/[Normal View]: It changes the rear viewing angle shown through the camera.

## Normal View

 - In top view screen, if you press [Normal View], it switches to normal view.

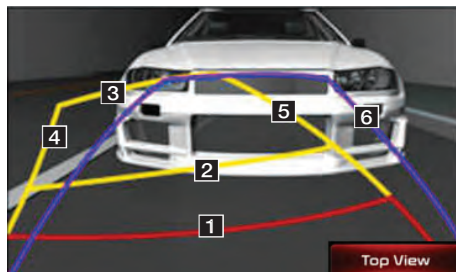


- Red line: 0.5m from vehicle's rear bumper.
- Yellow line 1: 1m from vehicle's rear bumper.
- Yellow line 2: 3m from vehicle's rear bumper.
- Yellow line 3: vehicle path of the left side wheel in the vehicle's driver seat side.
- Yellow line 4: vehicle path of the right side wheel in the vehicle's front passenger seat side.
- Blue line: steering neutral path.

## Top View

 - In normal view screen, if you press [Top View], it switches to top view.

It is the screen looking down the rear direction of the vehicle from above, and the screen composition is as follows.

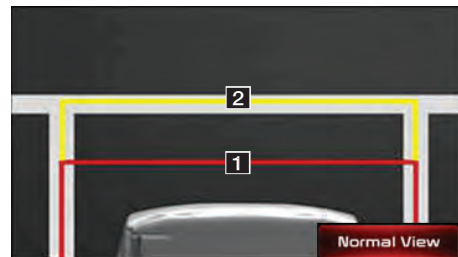

- Red line: 0.5m from vehicle's rear bumper.
- Yellow line: 1m from vehicle's rear bumper.

## Rear view angle conversion

- Top view (top part viewing angle): It provides a viewing angle looking down the rear direction of the vehicle from above.



- Normal view (rear viewing angle): It provides general rear viewing angle with perspective.



# SVM (Surround View Monitor) - Option

## About SVM (Surround View Monitor)

- SVM (Surround View Monitor) is an option that is provided to the customers who selected the option.
- Through the 4 cameras installed on the vehicle, it can view front, back, left and right side.
- While vehicle is started, if gear is put to R position, it automatically starts SVM (Surround View Monitor).
- If gear is changed from R to P position, SVM (Surround View Monitor) operation stops.

## Operating front SVM

After starting the vehicle, if you press "Camera Switch" after putting gear to N or D, front SVM starts.



- 1 Warning display: driver seat/front passenger seat door and side mirror, and trunk open status are displayed.

 
- 2 Front camera screen: screen of the front of the vehicle is displayed through camera.
- 3 SVM side camera screen: According to the selected display contents, it displays SVM or left or right side screen.
- 4 (Front + SVM display): It displays vehicle's front screen and all direction (SVM) screens at the same time.
- 5 (Front display): It only displays vehicle's front screen.
- 6 (Front + left side display): It displays the vehicle's front screen and left front screen at the same time.
- 7 (Front + right side display): It displays the vehicle's front screen and right side screen at the same time.
- 8 (SVM setting): It displays SVM setting menu.

### Note

While front SVM is running, if you drive at about 20 km/h or more, SVM is turned off. At this state, even if you drive at about 20 km/h or less, SVM is remained at OFF state.

## Operating rear SVM

After starting the vehicle, if you put gear at R position, rear SVM starts.

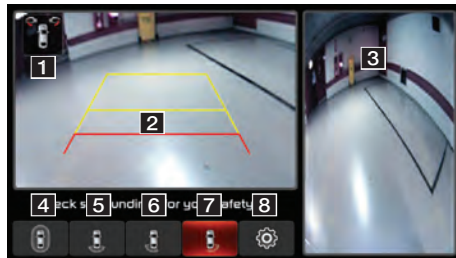

- 1 Warning display: driver seat/front passenger seat door and side mirror, and trunk open status are displayed.
- 2 Rear camera screen: screen of the rear of the vehicle is displayed through camera.
- 3 SVM side camera screen: According to the selected display contents, it displays SVM or left or right side screen.
- 4 (Rear + SVM display): It displays vehicle's rear screen and all direction (SVM) screens at the same time.
- 5 (Rear display): It only displays vehicle's rear screen.

# SVM (Surround View Monitor) - Option

 
- 6**  (Rear + left side display): It displays the vehicle's rear screen and left rear screen at the same time.
- 7**  (Rear + right side display): It displays the vehicle's rear screen and right rear screen at the same time.
- 8**  (SVM setting): It displays SVM setting menu.

## ! Note

SVM (Surround View Monitor) camera has an optical lens to secure wide view, so there is a little difference in the distance shown on the screen. For safety, make sure to check the rear, left, and right view by yourself.


## SVM setting

If you press  button, it moves to 3 types of setting screens.

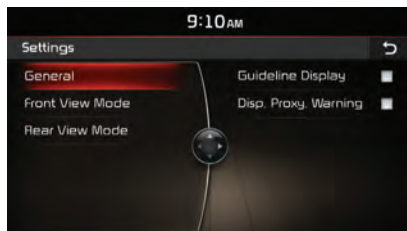

- [General]: It sets/resets guide line steering interface and approaching obstacle warning display function.
- [Front View Mode]: It sets the front camera's initial screen as initial view. (Around view, front view, driver seat side front, and front passenger seat side front)
- [Rear View Mode]: It sets the rear camera's initial screen as initial view. (Around view, rear view, driver seat side rear, and front passenger seat side rear)

## Warning display

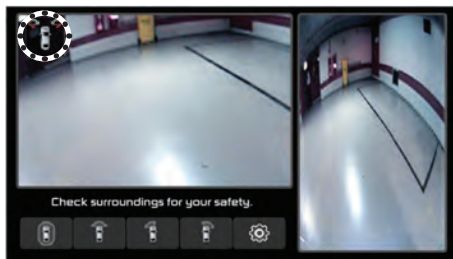 

### Driver's door open indicator

When the driver's door is open, " (red color on left door) indicator is displayed on the top left of the screen.

### Front passenger's door open indicator

When the front passenger's door is open, " (red color on right door) indicator is displayed on the top left of the screen.

### Trunk open indicator

When trunk is open, " (red color on trunk) indicator is displayed on the top left of the screen.

 
### Side mirror folding indicator

When the side mirror is folded, " (side mirror) indicator is displayed on the top left of the screen.

# Climate Mode

## Operating Climate Mode

1. Press the CLIMATE key to display the Climate information screen.

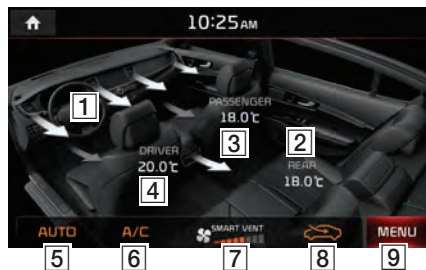

- 1 Blower direction: It displays the set blower direction.
- 2 Rear seat temperature (option): It displays the temperature of the rear seat.
- 3 Front passenger seat set temperature: It displays the set temperature of the front passenger seat.
- 4 Driver seat set temperature: It displays the set driver seat temperature.
- 5 AUTO: It is displayed when AUTO button is selected, and the blower level and cooling/heating are automatically operated according to the set temperature.

- 6 A/C: It is displayed when A/C button is selected, and air conditioner is operated for vehicle cooling.
- 7 Blower level: It displays the set blower level.
- 8 Air circulation mode: It sets the air inflow mode to outdoor air inflow mode or indoor circulation mode.
- 9 MENU: It moves to climate menu screen.  
You can turn on/off the functions for Rear Climate, Smart Vent, and Auto Defog.



- Rear Climate: Turns Climate Control for the rear seats on or off.  
(If the air vent for rear seat is closed, the [Rear Climate] menu is deactivated.)
- Smart Vent: When humidity and carbon dioxide levels inside the car increase while Climate Control is turned off, air is automatically expelled to maintain a comfortable environment.
- Auto Defog: Automatically operates the air conditioner to create a flow of air to clear the windshield.
- Help: Moves to the help menu.

### Note

While other modes (AV, Navigation, etc.) are in operation, if climate operation key is pressed, climate status is displayed at the top part of the screen.

# UVO eServices [USA (Option)]

- The UVO eServices is an option for the customers who purchased the vehicle in USA.

## Before using UVO eServices

### What is UVO eServices?

This is a KIA telematics service based on our cutting-edge IT system that makes your driving experience more convenient and fun and features safety, security, vehicle diagnostics, remote control and even smartphone synchronization functions.

Enjoy a smarter driving style with UVO eServices.

### What is Telematics?

The word "Telematics" stems from the combination of telecommunications and informatics. It refers to an information system that provides a variety of driving information through the built-in terminal by analyzing each symptom and driving state. This allows for a much safer and more comfortable driving experience.

## About Transmission and Reception of Radio Waves

### K900's modem Radio Frequency Performance

UVO eServices performance and availability is impacted by the signal quality of the mobile communication network in the vehicle's immediate location. Refer to the Antenna status display icon (📶) for an indication of the signal quality. The UVO eServices system is available at one or more antenna bars.

 
Places where UVO eServices may be disrupted depending on the transmission/reception status:

- Inside tunnels
- Mountainous areas or dense forest
- Roads close to cliff edges
- Densely built-up areas
- On highways or roads underneath higher interchange roads
- Inside buildings

## Getting Started with UVO eServices

You can use UVO features including Roadside Assist, Vehicle Diagnostics, My POIs, eServices Guide, and Apps.


1. Select [HOME] > [UVO].
2. Select the desired item.

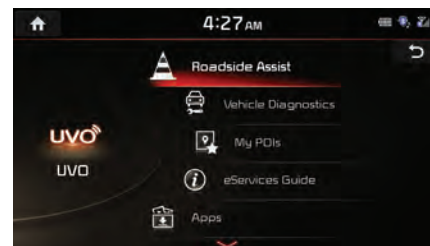

- [Roadside Assist]: Provides services including emergency assistance and vehicle towing in case of a vehicle anomaly or emergency through a connection to the UVO center.
- [Vehicle Diagnostics]: Diagnoses anomalies in the vehicle and checks diagnostic results.
- [My POIs]: Displays the POI information transmitted via webpages, the user's smartphone, etc.
- [eServices Guide]: Connects to the UVO center and provides information about the UVO eServices features.
- [Apps]: Displays information about free or paid applications.
- [UVO Settings]: Displays Service Activation, 911 Connect, Wi-Fi Settings, and Modem Information.

## UVO eServices [USA (Option)]
 
### Rear view mirror key function

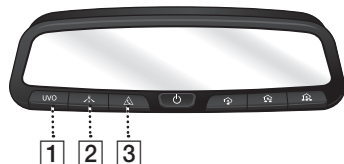

| Location     | Description                                                                                                                                                                                                          |
|--------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>1</b> UVO | eServices Guide <ul style="list-style-type: none"> <li>Connects to the UVO center and provides information about the UVO eServices features. (For more information, see the eServices Guide section.)</li> </ul>     |
| <b>2</b>     | UVO eServices Voice Local Search <ul style="list-style-type: none"> <li>UVO eServices Voice Local Search (For more information, see the UVO eServices Voice Local Search section.)</li> </ul>                        |
| <b>3</b>     | Roadside Assist <ul style="list-style-type: none"> <li>Connects to the center and provides vehicle towing services in case of a vehicle anomaly. (For more information, see the Roadside Assist section.)</li> </ul> |

### UVO eServices Voice Local Search

#### What is UVO eServices Voice Local Search?

 
With UVO eServices network service, you can search for Google-provided place names with your voice.

Separate from voice recognition in the steering wheel, it specializes in place name searches and may be executed with a key in the rear-view mirror.

The search is only available when connected communication network.

#### UVO eServices Voice Local Search

Press key in the rear-view mirror (less than 1 second) to start UVO Voice Local Search.

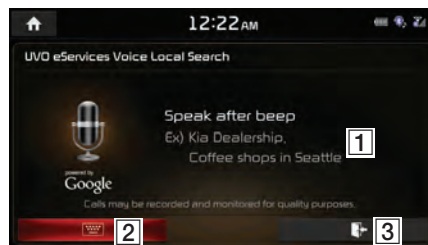

| Name                                 | Description                                                                                                                                     |
|--------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>1</b> Example command             | Shows an example to ask for a place search.                                                                                                     |
| <b>2</b> Manual search switch button | Switches the UVO eServices Voice Local Search screen to manual search.                                                                          |
| <b>3</b> End button                  | Ends UVO eServices Voice Local Search.<br>(With UVO eServices Voice Local Search, press  key in the rear-view mirror again to end the service.) |

#### Note

If you change the language set for the system to Korean or French, this function will not be supported. Change the system language to English or Spanish.

# UVO eServices [USA (Option)]

 
 
## UVO eServices

### Roadside Assist

Roadside Assist provides services including emergency assistance and vehicle towing in case of a vehicle anomaly or emergency through a connection to the UVO center.

You can still use the Roadside Assist feature without activating in UVO eServices. However, the Roadside Assist feature is not available if your UVO eServices period is expired. When your service period is expired, please reactivate your service to use the Roadside Assist feature.

1. Select [HOME] > [UVO] > [Roadside Assist].  
Or, press the [>] button on your rear-view mirror.

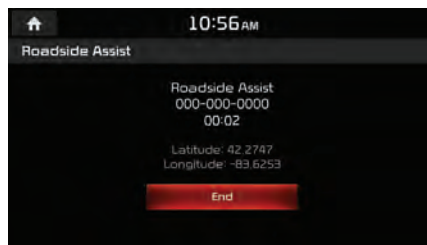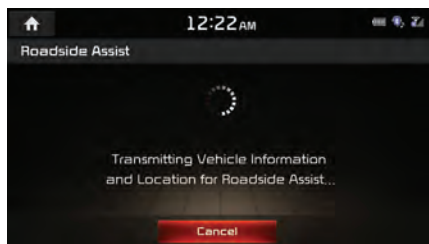


#### Note

- You can still use the Roadside Assist feature without registering for UVO eServices.
- If you have no network coverage, please move to a new location and try again.


### Vehicle Diagnostics (Manual Diagnostics)

Vehicle Diagnostics diagnoses anomalies in the vehicle and provides diagnostic results. UVO eServices Activation(Enrollment) is needed to use Vehicle Diagnostics. This feature is only available when the vehicle is stationary because there are controls that are undiagnosable when the vehicle is in motion. If you switch to another screen during Vehicle Diagnostics, Vehicle Diagnostics will be cancelled.

 1. Select [HOME] > [UVO] > [Vehicle Diagnostics].

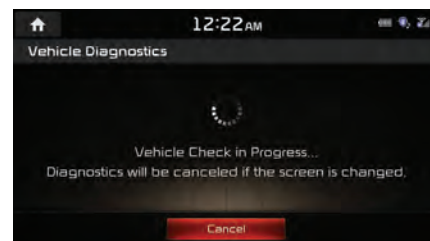

 2. Select the desired item.

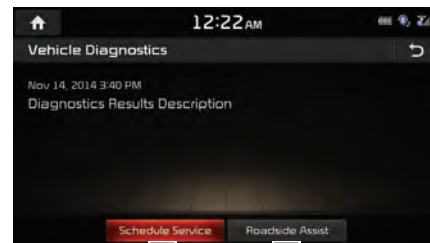


1

2

## UVO eServices [USA (Option)]
 
| Name                      | Description                                                                                         |
|---------------------------|-----------------------------------------------------------------------------------------------------|
| <b>1</b> Schedule Service | Requests a service from your preferred dealership or a nearby dealership.                           |
| <b>2</b> Roadside Assist  | Connects to the center for Roadside Assist.(For more information, see the Roadside Assist section.) |


3. 1) If you select [Schedule Service], choose your desired option.

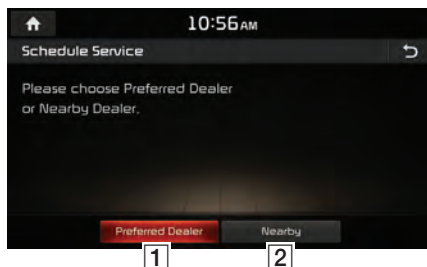



| Name                      | Description                                                                                        |
|---------------------------|----------------------------------------------------------------------------------------------------|
| <b>1</b> Preferred Dealer | Sends vehicle diagnostics results to the registered dealer on MyUVO.com to request an appointment. |

|                 |                                                                                    |
|-----------------|------------------------------------------------------------------------------------|
| <b>2</b> Nearby | Sends vehicle diagnostics results to the nearest dealer to request an appointment. |
|-----------------|------------------------------------------------------------------------------------|

 - 2) If you select [Roadside Assist], the location and vehicle information are sent to the center for roadside assistance.

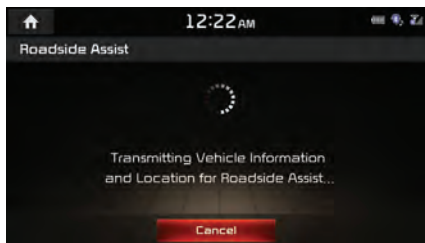

  
4. 1) If you select [Preferred Dealer], a Schedule Service request is sent to the registered dealer.

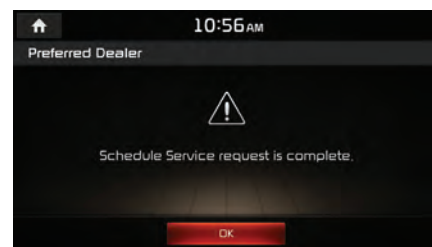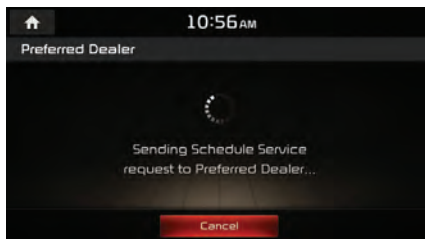

### Note



To send a Schedule Service request to a preferred dealer, please register the dealer on MyUVO.com first.

 - 2) If you select [Nearby], a list of nearby dealers is received.

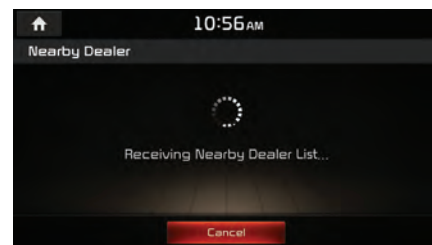


## UVO eServices [USA (Option)]

  5. Select your desired dealer from the list of nearby dealers, and then a Schedule Service request will be sent to the selected dealer.

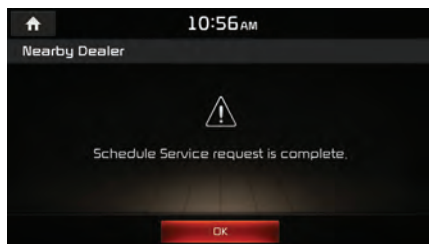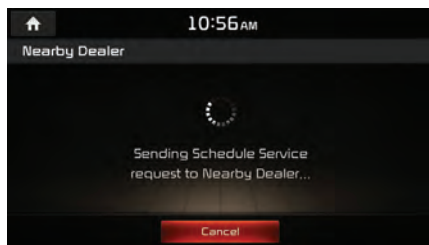

### Vehicle Diagnostics (Auto Diagnostics)

 The Vehicle Diagnostics (Auto Diagnostics) feature automatically performs diagnostics on your car when a warning light comes on the cluster panel and displays the details of the vehicle malfunction on the screen for the driver.

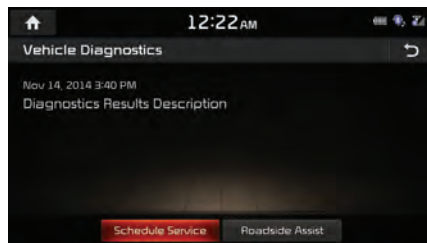

#### Note

 
If Vehicle Diagnostics (Auto Diagnostics) was unsuccessful, the diagnostics is automatically performed again when you turn on your vehicle.

### My POIs

My POIs allows you to check a list of POIs that were transmitted via a webpages or your smartphone, etc.


You need to sign up for UVO eServices to use My POIs. When a list of POIs is downloaded, a notification pop-up appears on the screen. (Not applicable to the Rear Camera and the User Agreement Screen.) Up to 200 POIs can be stored. If the available storage space is exceeded, the oldest POI is automatically deleted.

1. Select [HOME] > [UVO] > [My POIs].

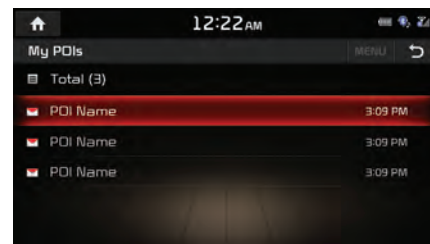

## UVO eServices [USA (Option)]

 - Select the desired POI to view detailed information about it.

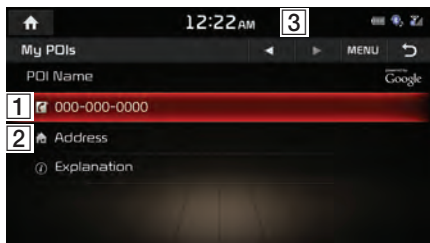


| Name                            | Description                                                         |
|---------------------------------|---------------------------------------------------------------------|
| <b>1</b> Phone Number           | If you select Phone Number, a call is made to the phone number.     |
| <b>2</b> Address                | If you select Address, the address is plotted on the on-screen map. |
| <b>3</b> ◀/▶<br>(Previous/Next) | Displays the previous/next POI.                                     |

### ! Note

 If the address of the desired POI is located outside the U.S., the map screen is not displayed.

### Deleting My POIs

- Select [HOME] > [UVO] > [My POIs] > [MENU] > [Delete].
- Select a POI you wish to delete and select [Delete].

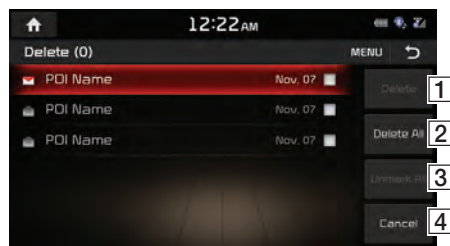


| Name                | Description                      |
|---------------------|----------------------------------|
| <b>1</b> Delete     | Deletes the selected POIs.       |
| <b>2</b> Delete All | Deletes all POIs.                |
| <b>3</b> Unmark All | Deselects all the selected POIs. |
| <b>4</b> Cancel     | Cancels POI deletion.            |

### eServices Guide

 eServices Guide connects to the UVO center and provides information about the UVO eServices features. The eServices Guide feature is not available if your UVO eServices period is expired. When your service period is expired, please reactivate your service to use the eServices Guide feature.

- Select [HOME] > [UVO] > [eServices Guide]. Or, press the [UVO] button on your rear-view mirror.

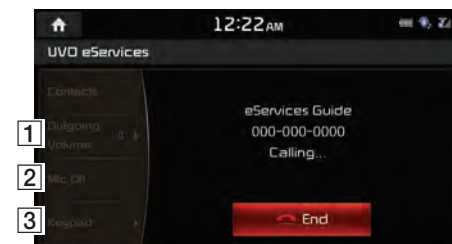

| Name                     | Description                                  |
|--------------------------|----------------------------------------------|
| <b>1</b> Outgoing Volume | Adjusts the microphone volume during a call. |
| <b>2</b> Mic On/Off      | Turns on/off the microphone during a call.   |
| <b>3</b> Keypad          | Displays the numeric keypad.                 |

# UVO eServices [USA (Option)]

## ! Note

The eServices Guide is not available during a Bluetooth call.

 
## Apps

### Download Center



With Download Center, you can install paid/free applications or check for related information. Only UVO eServices center verified applications can be installed. You can use Download Center after agreeing to the terms of service and use on the screen. (Only 1 time for initial launch is required.)

Download Center and downloaded apps require a network connection through Wi-Fi .



1. Select [HOME] > [UVO] > [Apps].

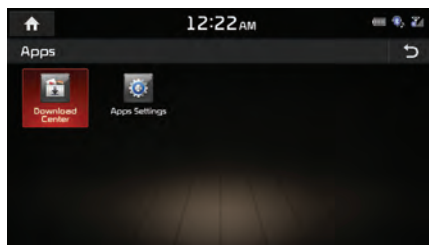

  2. 1) Select [Download Center].

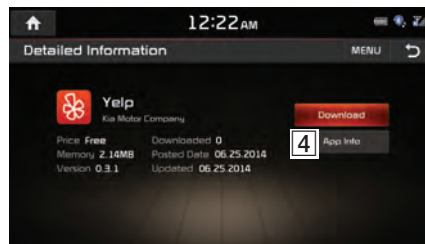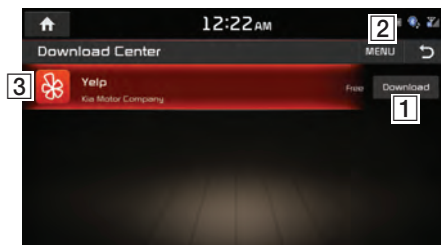

  2) Select [Download Center] > [MENU] > [My Apps].

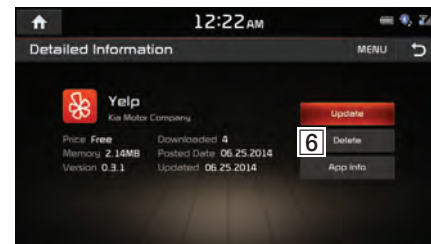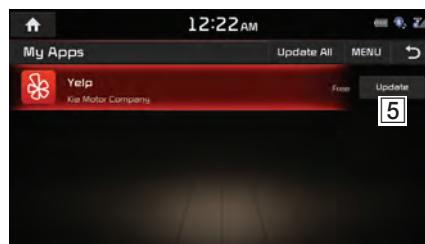

- [1]: Button state changes according to the application state.

| Name        | Description                                                                         |
|-------------|-------------------------------------------------------------------------------------|
| Download    | Downloads free applications.                                                        |
| Purchase    | Downloads paid applications.                                                        |
| Re-download | Downloads deleted applications after previously installing them.                    |
| Retry       | Downloads the applications that failed to download due to network or system errors. |

## UVO eServices [USA (Option)]

|        |                                    |
|--------|------------------------------------|
| Run    | Runs installed applications.       |
| Cancel | Cancels any downloads and updates. |

- [2]: Updates and refreshes the app list, and shows [My Apps] screen.

| Name    | Description                                                                                                                                                |
|---------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Update  | After installation, it shows applications requiring updates. The update screen shows the [Update All] button to update all applications that need updates. |
| Refresh | Refreshes the app list status.                                                                                                                             |
| My Apps | Moves to the My Apps screen.                                                                                                                               |

- [3]: When the application list area is pressed, it moves to the Detailed Information screen.

- [4]: Shows more detailed information.

| Name        | Description                       |
|-------------|-----------------------------------|
| Preview     | Displays application images.      |
| Information | Displays application information. |

- [5]: Button state changes according to the application state.

| Name        | Description                                                      |
|-------------|------------------------------------------------------------------|
| Re-download | Downloads deleted applications after previously installing them. |
| Update      | Shows when applications require updates.                         |
| Run         | Runs installed applications.                                     |

- [6]: Deletes the downloaded application.

### Note

You can update applications already running only after closing them.

 
## Apps Settings

Displays the applications that were downloaded through the Download Center.

### Downloaded Apps

You can delete downloaded applications in the Download Center. To recover a deleted application, you can re-install the application with the Re-download function in the Download Center.

Select [HOME] > [UVO] > [Apps] > [Apps Settings] > [Downloaded Apps].

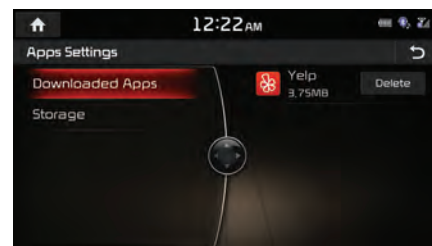

# UVO eServices [USA (Option)]

## Storage

 
View the memory status of installed applications and available storage space. Select [HOME] > [UVO] > [Apps] > [Apps Settings] > [Storage].



## Alert Services

### Geo Fence Alert

Geo Fence Alert displays a notification pop-up when you enter or exit a specified area.

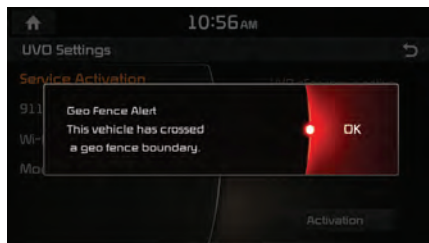

### Curfew Limit Alert

Curfew Alert displays a notification pop-up when you violate a specified restricted driving time.



### Speed Alert

 
Speed Alert displays a notification pop-up when you exceed a specified speed limit.



### Oil Change Alert

Oil Change Alert displays a notification pop-up for vehicle maintenance when the vehicle reaches a specified mileage.

If you select [Yes] in the notification pop-up, a Schedule Service request is sent to the preferred dealer or a nearby dealer. (For more information, see the Schedule Service section.)

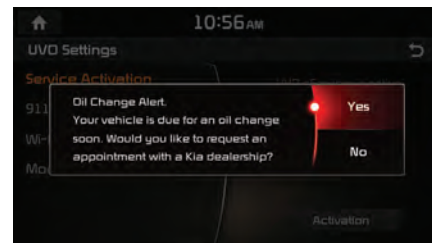

### Note

- You can configure all the settings for Alert notifications in the app or MyUVO.com.
- To use Geo Fence Alert, Curfew Limit Alert, and Speed Alert, please activate (register for) UVO eServices first.

# UVO eServices [USA (Option)]

## UVO Settings

 
### Service Activation (when the service is not activated)

After you buy your car, you need to activate (register for) UVO eServices to use any UVO eServices features, including Vehicle Diagnostics, My POIs, and eServices Guide. If you are a first time user when you activate UVO eServices, you need to register for a new account by entering your email address, your phone number, and a password. (To register for a new account, you must accept the Terms & Conditions.) If you have an existing account registered on MyUVO.com, you must enter the email address and password you used when registering for an account.


1. Select [HOME] > [UVO] > [UVO Settings] > [Service Activation].
2. Select [Activation].




3. Please read the Terms & Condition, and then select [Agree] > [Next].

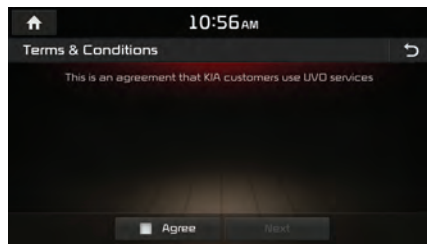

 4. 1) Registering for a new account: Select the [New Registration] tab to enter your email address, your phone number, and a password twice. Select [Submit].

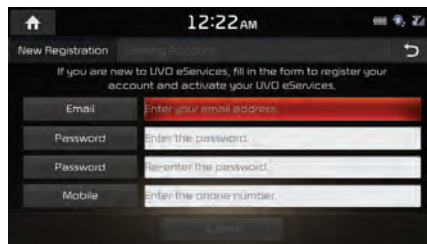


 - 2) Registering for an existing account: Select the [Existing Account] tab to enter your email address and password. Select [Submit].

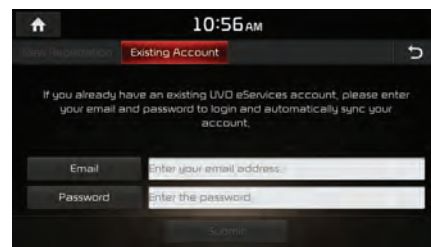


### Note

 - Terms & Conditions are in English only. This option appears only when you register for a new account.
- You cannot enter your email address, your phone number, or password while your vehicle is in motion. Please enter your information after your vehicle is parked.

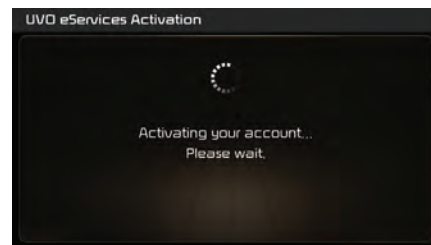

## UVO eServices [USA (Option)]

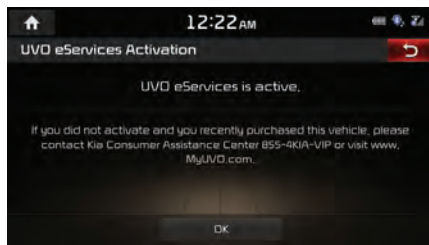 

### ! Note

- Do not turn the engine off while activation is in progress.
- If activation fails, contact the UVO Center at (855) 4KIA-VIP.
- During service activation, the hard keys in the head unit do not work.

 
### Service Activation (when the service is expired)

If your UVO eServices period is expired, the UVO eServices features (911 Connect, Roadside Assist, Vehicle Diagnostics, My POIs, and eServices Guide) are not available. To use the UVO eServices features, please reactivate your service by going to MyUVO.com. When reactivating your service, please enter the email address and password you used when registering for an account on MyUVO.com.




1. Select [HOME] > [UVO] > [UVO Settings] > [Service Activation].
2. Select [Activation].



3. Select [Sign-in].

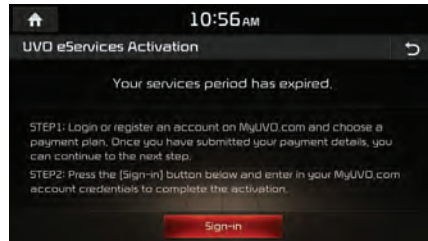

   4. Enter your email address and password, and then select [Submit].

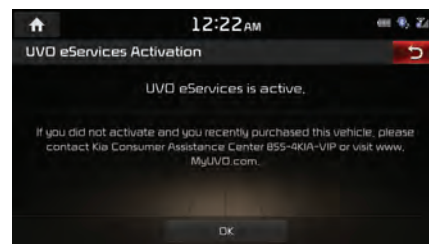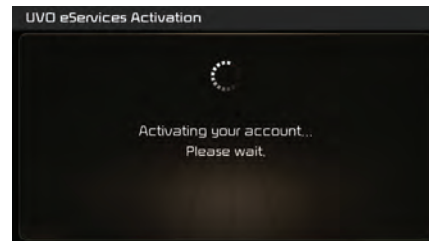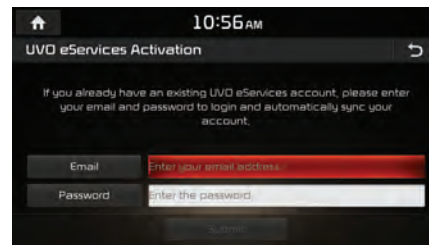


## UVO eServices [USA (Option)]


### 911 Connect

You can configure the 911 Connect feature. When an airbag deploys, the 911 Connect feature automatically calls 911 and sends the location information of your vehicle to a 911 operator. The 911 Connect feature is set to [Off] by default. You can turn it on in UVO Settings if you want to use the feature. You must accept the terms and conditions for 911 Connect in order to use the feature.

 1. Select [HOME] > [UVO] > [UVO Settings] > [911 Connect].
2. Select your desired item. Select [On] or [Off] to turn on or off 911 Connect.

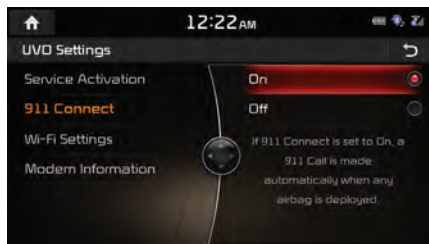

 3. After you set it to [On], read the user agreement and select [Agree].

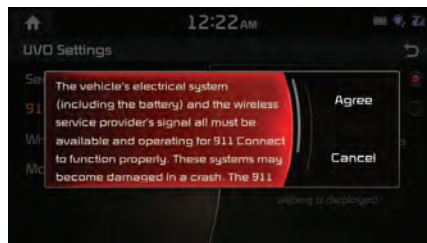


#### ! Note

- If 911 Connect is turned on, you can use the feature without registering for UVO eServices.
- If 911 Connect is turned on, the  icon is displayed in the status bar.

### Wi-Fi Settings


This feature is used to select and enable or disable a Wi-Fi connection to the vehicle.

 1. Select [HOME] > [UVO] > [UVO Settings] > [Wi-Fi Settings].

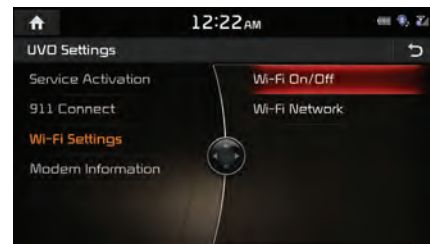

2. Select the desired item.

 
- [Wi-Fi On/Off]: Select [On] or [Off] to turn the Wi-Fi on/off.

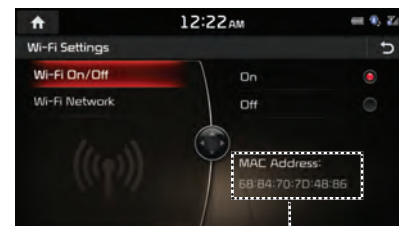

Displays the MAC address.

- [Wi-Fi Network]: Registers a network ID/ password to connect to a network AP (Access Point).


## UVO eServices [USA (Option)]

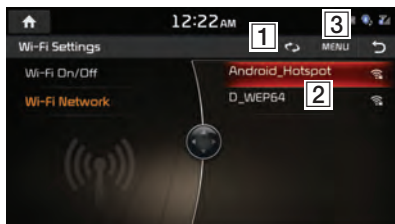 


| Name                                                                                                 | Description                                         |
|------------------------------------------------------------------------------------------------------|-----------------------------------------------------|
| <b>1</b>  (Refresh) | Searches available networks near the vehicle.       |
| <b>2</b> Network Name                                                                                | Displays available network AP (Access Point) names. |
| <b>3</b> Add Wi-Fi Network                                                                           | Searches for hidden APs to connect to.              |

The list of APs found is updated every 6 seconds when in Wi-Fi Settings. You can also search for new APs by selecting  Refresh].

 - Select a network AP name to connect (e.g. Android\_Hotspot).

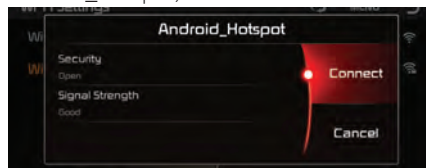

 - In case of a secured AP, you may be required to enter a password.

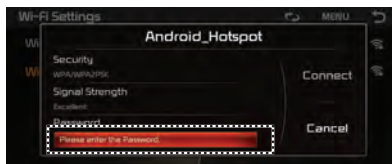


- If you cannot see the desired AP to connect to in the list, select [MENU] > [Add Wi-Fi Network]. (Up to five APs can be added.)





| Name                  | Description                                                                                     |
|-----------------------|-------------------------------------------------------------------------------------------------|
| <b>4</b> Network SSID | The unique name of the AP you want to connect to. (SSID is short for Service Set Identifier.)   |
| <b>5</b> Security     | The pre-configured security type. (A password is required in the case of WEP and WPA/WPA2-PSK.) |

 - Check the changed status of the Wi-Fi icon and the text "Connected" under the network AP name to ensure that the AP is enabled.

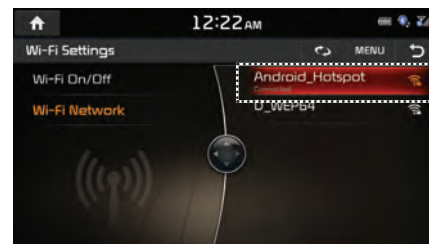

- If you select the currently connected AP or a previously connected AP from the list (up to 30 APs can be saved), you can view the following information.

## UVO eServices [USA (Option)]

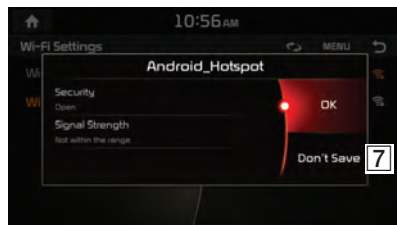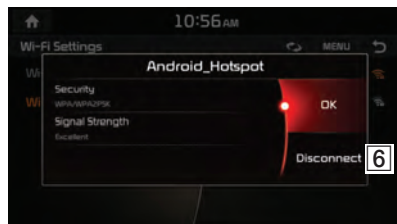  

| Name                | Description                             |
|---------------------|-----------------------------------------|
| <b>6</b> Disconnect | Disconnects the currently connected AP. |

### **7** Don't Save

This option is only shown in the information window of an AP that you have connected to at least once. Selecting this option deletes the AP from the saved AP list. (Note: When you reconnect to an unsaved AP, you will have to enter its connection information again.)

### **Note**

If you connect to a Wi-Fi network after signing up for UVO eServices, then you will be preferentially connected to a Wi-Fi network whenever you use Download Center or any downloaded apps.

## Modem Information

This feature is used to show the USIM and IMEI modem information.

Select [HOME] > [UVO] > [UVO Settings] > [Modem Information].



| Name          | Description                                                          |
|---------------|----------------------------------------------------------------------|
| <b>1</b> USIM | Displays the serial number information of the USIM card.             |
| <b>2</b> IMEI | Displays the unique identification number of the telephone terminal. |

# Before Thinking the Product has Malfunctioned

---

**The current position as shown on the navigation may differ from the actual position under the following conditions. The following occurrences are not malfunctions:**

- When driving on Y-shaped roads with narrow angles the current position may be displayed in the opposite direction.
- Within city streets, the current position may be displayed on the opposite side or on an off-road position.
- When changing the zoom level from maximum to a different level, the current position may become displayed on a different road.
- If the vehicle is loaded onto a ferry or a car transport vehicle, the current position may become stalled on the last position prior to loading.
- When driving on a spiral-shaped road.
- When driving in mountain regions with sharp turns or sudden brakes.
- When entering a road after passing an underground parking structure, building parking structure, or roads with many rotations.

- When driving in heavy traffic with frequent starts and stops.
- When driving under slippery conditions, such as heavy sand, snow, etc.
- When the tires have recently been replaced. (Especially upon use of spare or studless tires.)
- When using tires of improper size.
- When the tire pressure for the 4 tires are different.
- When the replacement tire is worn or used. (Especially studless tires having passed a second season.)
- When driving near high-rise buildings.
- When a roof carrier has been installed.
- When a long distance route is calculated while driving on an expressway, in such cases, continued driving will automatically enable the system to conduct map matching or use updated GPS information to provide the current position. (In such cases, up to several minutes may be required.)

**Correct route guidance may not occur due to search conditions or driving position. The following occurrences are not malfunctions:**

- Guidance to go straight may be given while driving on a straight road.
- Guidance may not be given even when having turned at an intersection.
- There are certain intersections in which guidance may not occur.
- A route guidance signaling for a u-turn may occur in some No u-turn intersections.
- Route guidance signaling entrance into a No-entry zone may occur. (No-entry zone, road under construction, etc.)
- Guidance may be given to a position that is not the actual destination if roads to reach the actual destination do not exist or are too narrow.
- Faulty voice guidance may be given if the vehicle breaks away from the designated route. (e.g. if a turn is made at an intersection while the navigation provided guidance to go straight.)

## Before Thinking the Product has Malfunctioned

---

**These situations may occur after conducting route calculation. The following occurrences are not malfunctions:**

- Guidance may be given to a position differing from the current position when turning at an intersection.
- When driving in high speeds, route recalculation may take a longer period of time.
- Route guidance signaling for a u-turn may occur in some No u-turn intersections.
- Route guidance signaling entrance into No-entry zone may occur. (No-entry zone, road under construction, etc.)
- Guidance may be given to a position removed from the actual destination if roads to reach the actual destination do not exist or are too narrow.
- Faulty voice guidance may be given if the vehicle breaks away from the designated route. (e.g. If a turn is made at an intersection while the navigation provided guidance to go straight.)

## Before Thinking the Product has Malfunctioned

1. Errors which occur during the operation or installation of the device may be mistaken as a malfunction of the actual device.
2. If you are having problems with the device, try the suggestions listed below.
3. If the problems persist, contact your dealer.

| Problem                                                              | Possible Cause                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| There are small red, blue, or green dots on the screen.              | Because the LCD is manufactured with technology requiring high point density, a pixel or lighting deficiency may occur within 0.01% of total pixels.                                                                                                                                                                                                                                                                                                                                                            |
| The sound or image is not working.                                   | <ul style="list-style-type: none"><li>• Has the Switch for the vehicle been turned to [ACC] or [ON]?</li><li>• Has the SYSTEM been turned OFF?</li></ul>                                                                                                                                                                                                                                                                                                                                                        |
| The screen is being displayed but sound is not working.              | <ul style="list-style-type: none"><li>• Has the volume been set to a low level?</li><li>• Has the volume been muted?</li></ul>                                                                                                                                                                                                                                                                                                                                                                                  |
| When the power is turned on, the corners of the screen are dark.     | <ul style="list-style-type: none"><li>• The display appearing somewhat dark after prolonged periods of use is normal with LCD panels. It is not a malfunction.</li><li>• If the screen is very dark, contact your nearest KIA dealer for assistance.</li></ul>                                                                                                                                                                                                                                                  |
| Sound is working from only one speaker.                              | Are the positions of Fader or Balance sound controls adjusted to only one side?                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Sound does not work in AUX mode.                                     | Are the audio connector jacks fully inserted into the AUX terminal?                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| The external device is not working.                                  | Is the external device connected with a standard connector cable?                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| When turning power on, the most recent mode screen is not displayed. | <p>Within modes that play files by reading external sources, such as discs, USB, iPod, or Bluetooth® streaming mode, the most recently played mode screen prior to turning off power may not properly load.</p> <ul style="list-style-type: none"><li>• If there is no disc or the corresponding device is not connected, the mode operated prior to the most recent mode will operate.</li><li>• If the previous mode still cannot be properly played, the mode operated prior to that will operate.</li></ul> |

## Troubleshooting

| Problem                               | Possible Cause                                                                         | Countermeasure                                                                                                                                               |
|---------------------------------------|----------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The power does not turn on.           | The fuse is disconnected.                                                              | <ul style="list-style-type: none"><li>• Replace with a suitable fuse.</li><li>• If the fuse is disconnected again, please contact your KIA dealer.</li></ul> |
|                                       | Device is not properly connected.                                                      | Check to see that the device has been properly connected.                                                                                                    |
| The system does not play.             | The disc has not been inserted or has been inserted upside down.                       | Insert the disc properly so that the sides are facing the correct direct.                                                                                    |
|                                       | The disc has been contaminated.                                                        | Wipe away dirt and other foreign substances from the disc.                                                                                                   |
|                                       | The vehicle battery is low.                                                            | Charge the battery if the problem persists, contact your point of purchase or service center.                                                                |
|                                       | A disc not supported by the device has been inserted.                                  | Insert a disc which is supported by the device.                                                                                                              |
| The image color/ tone quality is low. | The brightness, saturation, and contrast levels are not set properly.                  | Properly adjust the brightness, saturation, and contrast levels through Display Setup.                                                                       |
| Sound does not work.                  | The volume level is set to the lowest level.                                           | Adjust the volume level.                                                                                                                                     |
|                                       | The connection is not proper.                                                          | Check to see that the device has been properly connected.                                                                                                    |
|                                       | The device is currently fast-forwarding, rewinding, scanning, or playing in slow mode. | The sound will not work when the device is fast-forwarding, rewinding, scanning, or playing in slow mode.                                                    |

# Troubleshooting

| Problem                                                       | Possible Cause                                                              | Countermeasure                                                                                  |
|---------------------------------------------------------------|-----------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
| The sound or image quality is low.                            | The disc is dirty or scratched.                                             | Wipe off water or dirt from the disc. Do not use a disc which has been scratched.               |
|                                                               | Vibration is occurring from where the conversion switch has been installed. | The sound may be short circuited and the image distorted if the device vibrates.                |
|                                                               | Image color/tone quality is low.                                            | The device will return to normal once vibrations stop.                                          |
| The USB does not work.                                        | USB memory is damaged.                                                      | Please use after formatting the USB into FAT 12/16/32 format.                                   |
|                                                               | USB memory has been contaminated.                                           | Remove any foreign substances on the contact surface of the USB memory and multimedia terminal. |
|                                                               | A separately purchased USB HUB is being used.                               | Directly connect the USB memory with the multimedia terminal on the vehicle.                    |
|                                                               | A USB extension cable is being used.                                        | Directly connect the USB memory with the multimedia terminal on the vehicle.                    |
|                                                               | A USB which is not a Metal Cover Type USB Memory is being used.             | Use standard USB Memory.                                                                        |
|                                                               | An HDD type, CF, SD Memory is being used.                                   | Use standard USB Memory.                                                                        |
|                                                               | There are no music files which can be played.                               | Only MP3, WMA file formats are supported. Please use only the supported music file formats.     |
| The iPod is not recognized even though it has been connected. | There are no titles which can be played.                                    | Use iTunes to download and save MP3 files into the iPod.                                        |
|                                                               | The iPod firmware version has not been properly updated.                    | Use iTunes to update the firmware version and reconnect the iPod with the device.               |
|                                                               | The iPod device does not recognize downloads.                               | Reset the iPod and reconnect with the device.                                                   |

## Trademarks and Licenses

### DivX®



- ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that has passed rigorous testing to verify that it plays DivX video. Visit [divx.com](http://divx.com) for more information and software tools to convert your files into DivX videos.
- ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to [vod.divx.com](http://vod.divx.com) for more information on how to complete your registration.
- DivX Certified® to play DivX® video, including premium content.
- DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.
- Covered by one or more of the following U.S. patents: 7,295,673; 7,460,668; 7,515,710; 7,519,274

### iPod®

iPod® is a registered trademark of Apple Inc.

### Pandora®

Pandora is a registered trademark of Pandora Media, Inc.

### Aha radio

Aha radio is a trademark of Harman International Industries, Inc.

### SiriusXM™



SiriusXM™ is a registered trademark of SiriusXM™ Satellite Radio Inc. All rights reserved.

### DOLBY®



Manufactured under license from Dolby Laboratories. Dolby and double-D symbol are trademarks of Dolby Laboratories.

### DTS®



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS Digital Surround is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

### Bluetooth® Wireless Technology



The Bluetooth Wireless Technology word mark and logos are registered trademarks owned by Bluetooth Wireless Technology SIG, Inc.

### Gracenote®



CD, DVD, Blu-ray Disc, and music and video-related data from Gracenote, Inc., copyright © 2000 to present Gracenote. Gracenote Software, copyright © 2000 to present Gracenote. One or more patents owned by Gracenote apply to this product and service. See the Gracenote website for a non-exhaustive list of applicable Gracenote patents. Gracenote, CDDb, MusicID, MediaVOCS, the Gracenote logo and logotype, and the "Powered by Gracenote" logo are either registered trademarks or trademarks of Gracenote in the United States and/or other countries.

Music and video recognition technology and related data are provided by Gracenote®. Gracenote is the industry standard in music recognition technology and related content delivery. For more information, please visit [www.gracenote.com](http://www.gracenote.com).

Portions of the content is copyright © Gracenote or its providers.

# Trademarks and Licenses

---

## Gracenote® End User License Agreement

This application or device contains software from Gracenote, Inc. of Emeryville, California ("Gracenote"). The software from Gracenote (the "Gracenote Software") enables this application to perform disc and/or file identification and obtain music-related information, including name, artist, track, and title information ("Gracenote Data") from online servers or embedded databases (collectively, "Gracenote Servers") and to perform other functions. You may use Gracenote Data only by means of the intended End-User functions of this application or device.

You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal non-commercial use only. You agree not to assign, copy, transfer or transmit the Gracenote Software or any Gracenote Data to any third party. **YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN.**

You agree that your non-exclusive license to use the Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Gracenote Data, the Gracenote Software,

and Gracenote Servers. Gracenote reserves all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers, including all ownership rights. Under no circumstances will Gracenote become liable for any payment to you for any information that you provide. You agree that Gracenote, Inc. may enforce its rights under this Agreement against you directly in its own name.

The Gracenote service uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow the Gracenote service to count queries without knowing anything about who you are. For more information, see the web page for the Gracenote Privacy Policy for the Gracenote service.

The Gracenote Software and each item of Gracenote Data are licensed to you "AS IS." Gracenote makes no representations or warranties, express or implied, regarding the accuracy of any Gracenote Data from in the Gracenote Servers. Gracenote reserves the right to delete data from the Gracenote Servers or to change data categories for any cause that Gracenote deems sufficient. No warranty is made that the Gracenote Software or Gracenote Servers are error-free or that functioning of Gracenote Software or Gracenote Servers will be uninterrupted.

Gracenote is not obligated to provide you with new enhanced or additional data types or categories that Gracenote may provide in the future and is free to discontinue its services at any time.

GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. GRACENOTE DOES NOT WARRANT THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE GRACENOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES.

© Gracenote, Inc. 2009

## HD Radio™ Technology



HD Radio™ Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. HD Radio™ and the HD, HD Radio, and "Arc" logos are proprietary trademarks of iBiquity Digital Corp.

# Specification

## AV/Navigation product specification

|           |                                   |                                      |
|-----------|-----------------------------------|--------------------------------------|
| Common    | Power Supply                      | DC 14.4 V                            |
|           | Operating Power                   | DC 9 V ~ DC 16 V                     |
|           | Current Consumption               | Maximum 5 A                          |
|           | Dark Current                      | Maximum 1 mA                         |
|           | Operating Temperature             | -20 °C ~ +70 °C                      |
|           | Storage Temperature               | -40 °C ~ +85 °C                      |
|           | Dimensions (Head unit)            | 220 (W) x 76 (H) X 166.8 (D) mm      |
|           | Weight (Head unit)                | 2.7 kg                               |
| Bluetooth | Supported Profile                 | HFP(1.6), A2DP : (1.2) , AVRCP (1.4) |
|           | Supported Bluetooth Specification | 3.0                                  |
|           | Frequency Range                   | 2402 MHz ~ 2480 MHz                  |
|           | Output (Class2)                   | 1.0 dBm                              |
|           | Number of Channels                | 79                                   |

|           |                       |                                                |
|-----------|-----------------------|------------------------------------------------|
| Radio     | AM                    |                                                |
|           | Tuning range          | 530 kHz ~ 1710 kHz                             |
|           | Sensitivity           | 35 dBuV                                        |
|           | Frequency response    | 30 Hz ~ 10000 Hz                               |
|           | Signal-to-noise ratio | Minimum 45 dB                                  |
|           | FM                    |                                                |
|           | Tuning range          | 87.5 MHz ~ 107.9 MHz                           |
|           | Sensitivity           | 12 dBuV                                        |
|           | Frequency response    | 30 Hz ~ 10000 Hz                               |
|           | Signal-to-noise ratio | Minimum 50 dB                                  |
| CD/DVD    | FORMAT                | CD-DA, CD-R, CD-RW, MP3, DVD (12 cm disc Only) |
|           | Interface             | Serial (TAB2)                                  |
|           | Signal-to-noise ratio | Minimum 70 dB                                  |
|           | Frequency response    | 20 Hz ~ 20 kHz (±3 dB)                         |
|           | Distortion ratio      | 0.03%                                          |
| SiriusXM™ | Frequency             | 2337.490 MHz ~ 2340.020 MHz                    |
|           | Sensitivity           | -80 dBm                                        |
|           | T.H.D                 | Maximum 0.2 %                                  |

## Specification

---

|         |                   |                                                                          |
|---------|-------------------|--------------------------------------------------------------------------|
| TFT-LCD | Screen Size       | 233.95 mm (9.2 inches)<br>204 (W) x 114.72 (H) mm<br>(Active area)       |
|         | Resolution        | 921,600 pixel                                                            |
|         | Operating Method  | TFT (Thin Film Transistor)<br>Active Matrix, In Plane<br>Switching (IPS) |
|         | Viewing Angle     | Viewing Angle free (R/L<br>178(Min),<br>U/D 178(Min.))                   |
|         | Internal Lighting | LED                                                                      |

- To obtain the source code under GPL, LGPL, MPL and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>. In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download. LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping and handling) upon email request to [opensource@lge.com](mailto:opensource@lge.com). This offer is valid for three (3) years from the date on which you purchased the product.
- Designs and specifications are subject to change without prior notice.

# Specification

## UVO terminal product specification

|        |                                    |                                                                                                                                                                  |
|--------|------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Common | Power Supply                       | DC 14.4 V                                                                                                                                                        |
|        | Operating Power                    | DC 9 V ~ DC 16 V                                                                                                                                                 |
|        | Current Consumption                | Maximum 2 A                                                                                                                                                      |
|        | Dark current after 96h             | After Acc off, ADM off and 96 hours (Maximum 0.8 mA or less)                                                                                                     |
|        | Dark current within 96h            | - After Acc off, ADM off, average current in 96 hours (Maximum 10 mA or less)<br>- After Acc off, ADM off, average current in 20 seconds (Maximum 50 mA or less) |
|        | Operating Temperature              | -20 °C ~ +70 °C                                                                                                                                                  |
|        | Storage Temperature                | -40 °C ~ +85 °C                                                                                                                                                  |
|        | Dimensions (I-BOX unit)            | 233.4 (W) x 116 (H) X 38.6 (D)mm                                                                                                                                 |
|        | Weight (I-BOX unit)                | 852.5 g                                                                                                                                                          |
|        | Name of the equipment (Model name) | Unit Assy I-BOX (TS310B1AX)                                                                                                                                      |
|        | Manufactured date                  | 2014. . .                                                                                                                                                        |
|        | Manufacturer / Country             | Hyundai Mobis Co., Ltd. / Korea                                                                                                                                  |

|            |                       |                                                                                                                |
|------------|-----------------------|----------------------------------------------------------------------------------------------------------------|
| CDMA part  | Frequency             | TX : 824 MHz~849 MHz (BC0)<br>1850 MHz~1910 MHz (BC1)<br>RX : 869 MHz~894 MHz (BC0)<br>1930 MHz~1990 MHz (BC1) |
|            | Reception sensitivity | -104 dBm under (FER=0.5 % under)                                                                               |
|            | Transmission output   | 23.01 dBm ~ 30 dBm<br>Power Class3 (BC0), Power Class2 (BC1), Conducted                                        |
| Wi-Fi part | 802.11b               | Tx power: 16 ± 2 dBm<br>Sensitivity: PER 8 % or less/ -76 dBm                                                  |
|            | 802.11g               | Tx power: 12 ± 2 dBm<br>Sensitivity: PER 10 % or less/ -65 dBm                                                 |
|            | 802.11n               | Tx power: 12 ± 2 dBm<br>Sensitivity: PER 10 % or less/ -64 dBm                                                 |

|                   |                 |                          |
|-------------------|-----------------|--------------------------|
| FCC Certification | FCC Identifier  | TQ8-TS310B1AX            |
|                   | Name of Grantee | HYUNDI MOBIS CO.LTD      |
|                   | Equipment Class | PCS Licensed Transmitter |
|                   | Notes           | Premium Gen 2.0 I-BOX    |

- For more information on open licenses and legal notices, refer to the website below. [http://www.mobiszone.co.kr/front/mall/jsp/manual/avn\\_download\\_center\\_manual.jsp](http://www.mobiszone.co.kr/front/mall/jsp/manual/avn_download_center_manual.jsp)



