 




2016  
QUICK REFERENCE GUIDE



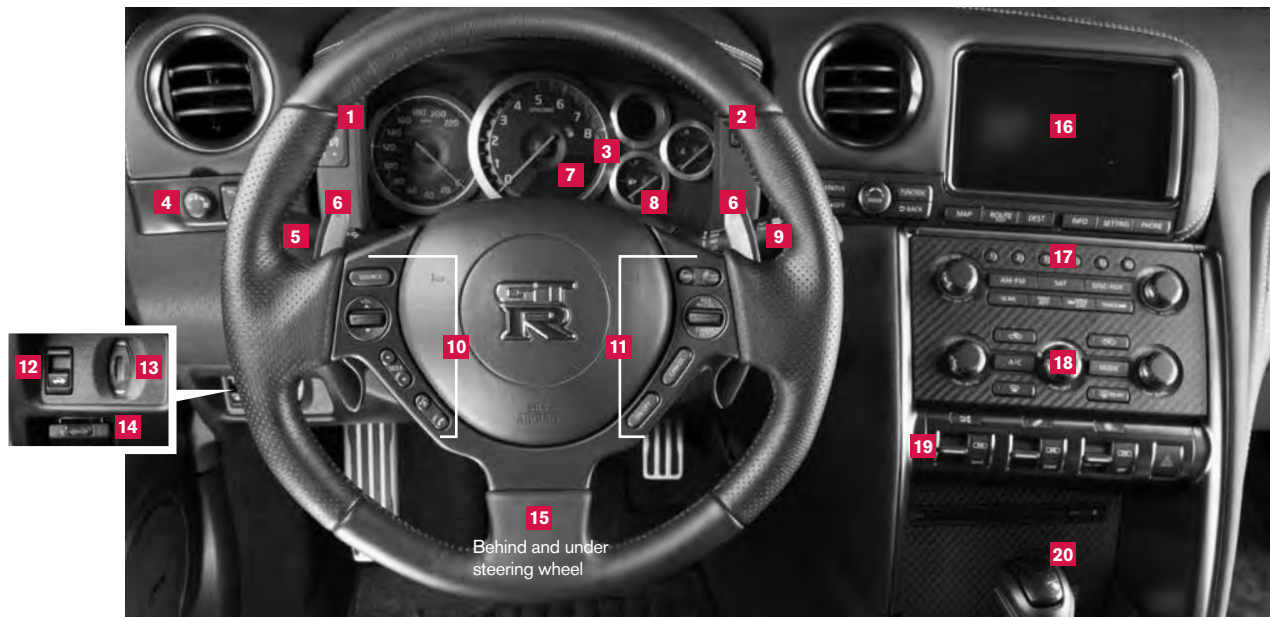

- 1** Instrument Brightness Control\*
- 2** Next / Enter Switches
- 3** Drive Computer
- 4** Outside Mirror Control Switch
- 5** Headlight and Turn Signal Switch
- 6** Paddle Shifters\*

- 7** Vehicle Information Display
- 8** Low Tire Pressure Warning Light
- 9** Wiper and Washer Switch
- 10** Steering Wheel Switches for Audio Control\* / Bluetooth® / Navigation
- 11** Cruise Control

- 12** Trunk Release
- 13** Intelligent Key Port
- 14** Hood Release\*
- 15** Steering Wheel Tilt and Telescopic Adjustment\*
- 16** Multi Function Display

- 17** Audio System
- 18** Automatic Climate Controls
- 19** VDC, Transmission and Suspension Setup Switches\*
- 20** Front Passenger Air Bag Status Light\*

\*See your Owner's Manual and Multi Function Display Owner's Manual for information.

# TABLE OF CONTENTS

## NEW SYSTEM FEATURES

|                                                                               |   |
|-------------------------------------------------------------------------------|---|
| RearView Monitor.....                                                         | 2 |
| USB (Universal Serial Bus) Connection Port/Aux Jack and iPod® Interface ..... | 2 |
| NavTraffic and NavWeather .....                                               | 2 |

## ESSENTIAL INFORMATION

|                                              |   |
|----------------------------------------------|---|
| Tire Pressure Monitoring System (TPMS) ..... | 3 |
| Fuel-filler Door/Cap.....                    | 4 |
| Unique Noises .....                          | 4 |
| Vehicle Modifications .....                  | 4 |
| Vehicle Dynamic Control (VDC).....           | 4 |
| Matte Paint Care (if so equipped).....       | 5 |
| Carbon-based Parts (if so equipped) .....    | 5 |
| Clock Set/Adjustment.....                    | 5 |

## FIRST DRIVE FEATURES

|                                                      |    |
|------------------------------------------------------|----|
| NISSAN Intelligent Key® System .....                 | 6  |
| Trunk Lid Release.....                               | 7  |
| Seat Adjustments.....                                | 7  |
| Outside Mirror Control Switch.....                   | 8  |
| Starting/Stopping the Engine .....                   | 8  |
| Headlight Control Switch.....                        | 8  |
| Wiper and Washer Switch.....                         | 9  |
| Automatic Climate Controls .....                     | 10 |
| AM/FM/SiriusXM® Satellite Radio with CD Player ..... | 11 |
| Cruise Control .....                                 | 12 |

## SYSTEM GUIDE

|                                          |    |
|------------------------------------------|----|
| Drive Computer .....                     | 13 |
| Bluetooth® Streaming Audio .....         | 14 |
| Bluetooth® Hands-free Phone System ..... | 15 |
| ▪ System Operating Tips .....            | 16 |
| Navigation System .....                  | 18 |
| HomeLink® Universal Transceiver .....    | 20 |



Additional information about your vehicle is also available in your Owner's Manual, Multi Function Display Owner's Manual and at [www.nissanusa.com](http://www.nissanusa.com).



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "**Bluetooth® Hands-Free Phone System (section 4)**" of the Multi Function Display Owner's Manual and the "**Safety — Seats, seat belts and supplemental restraint system (section 1)**" and the "**Starting and driving (section 5)**" of your Owner's Manual.

# NEW SYSTEM FEATURES

## REARVIEW MONITOR

- When the shift lever is moved to the **R (REVERSE)** position, the Multi Function Display will automatically change to show the area directly behind the vehicle.
- The colored lines on the display screen indicate the approximate distances to objects:
  - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).



For more information, refer to the **"Monitor system (section 9)"** of your Multi Function Display Owner's Manual.

## USB (Universal Serial Bus) CONNECTION PORT/AUX JACK AND IPOD® INTERFACE

 
- The USB port is located in the center console under the arm rest.
- When a compatible USB memory device or iPod® is plugged into the USB port, compatible audio or video files stored on the device can be played through the vehicle's audio system.
- The device can be operated using the vehicle's audio system, the touch-screen or the steering wheel controls while it is connected to the vehicle.



For more information, refer to the **"Audio system (section 3)"** of your Multi Function Display Owner's Manual.

## NAVTRAFFIC\* AND NAVWEATHER\*

- Your vehicle's Navigation System is equipped with NavTraffic and NavWeather capabilities.
- NavTraffic enables your vehicle's Navigation System to display real-time traffic conditions, such as accidents or road construction, and may provide a detour to help avoid congestion.
- NavWeather tracks nationwide weather information, provides real-time weather reports and automatically alerts you to severe weather conditions around your current vehicle location.

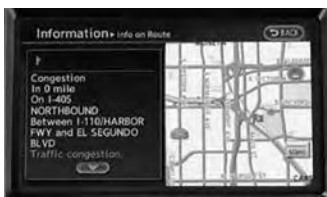

\*These features, SiriusXM® Satellite Radio, NavTraffic and NavWeather, require an active subscription. Multiple subscriptions may be necessary to activate the various features.

For more information, refer to the **"Navigation (section 2)"** of your Multi Function Display Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

# ESSENTIAL INFORMATION

## TIRE PRESSURE MONITORING SYSTEM (TPMS)

### ■ A TIRE LOW PRESSURE VISIT DEALER

warning message will appear in the vehicle information display **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.

▪ The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.

- After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **TIRE LOW PRESSURE VISIT DEALER** warning message and low tire pressure warning light will extinguish.

- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.

▪ Check the tire pressure often and always prior to long distance trips.

- NISSAN recommends refilling with nitrogen for maximum tire performance. If nitrogen is not available, compressed air may be safely used under normal driving conditions.
- The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 9)" in your Owner's Manual for the location of the Tire and Loading Information label.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Maintenance and do-it-yourself (section 8)" of your Owner's Manual.



# ESSENTIAL INFORMATION

## FUEL-FILLER DOOR/CAP

The fuel-filler door is located on the passenger's side toward the rear of the vehicle.

- When the doors of the vehicle are locked or unlocked, the fuel-filler door is automatically locked or unlocked at the same time.
- Push one of the power door lock switches to unlock the fuel-filler door from inside the vehicle, or push the door handle request switch to unlock the fuel-filler door from outside the vehicle.
- To open the fuel-filler door, press the left side of the door to release the door lock then pull the door open.
- To tighten, turn the fuel-filler cap clockwise until a single click is heard. If the cap is not fully tightened, the Malfunction Indicator Light (MIL) SERVICE ENGINE SOON may illuminate.
- If the SERVICE ENGINE SOON light illuminates because the fuel-filler cap is loose or missing, tighten or reinstall the cap. The SERVICE ENGINE SOON light should extinguish after a few driving trips.



For more information, refer to the **“Instruments and controls (section 2)”** and the **“Pre-driving checks and adjustments (section 3)”** of your Owner's Manual.

## UNIQUE NOISES

- The GT-R is a high-performance vehicle that has unique operating characteristics.
- You will hear more noises emitted from this vehicle than from a conventional passenger car.

For more information, refer to the **“GT-R Overview (section GTR)”** and the **“Starting and driving (section 5)”** of your Owner's Manual.

## VEHICLE MODIFICATIONS

- Do not modify the vehicle with aftermarket parts or accessories.
- To maintain your vehicle's performance, only use genuine GT-R specific components.

For more information, refer to the **“GT-R Overview (section GTR)”** of your Owner's Manual.

## VEHICLE DYNAMIC CONTROL (VDC)

- Always make sure that the VDC is ON before driving the vehicle.
- The VDC OFF mode should ONLY be used briefly to help free the vehicle if it is stuck in snow or mud.

For more information, refer to the **“GT-R Overview (section GTR)”**, the **“Instruments and controls (section 2)”** and the **“Starting and driving (section 5)”** of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

## MATTE PAINT CARE (if so equipped)

- Your vehicle is equipped with matte paint, and special care is necessary to maintain the appearance.

For more information on special care instructions, refer to the “**Appearance and care (section 7)**” of your Owner’s Manual.

## CARBON-BASED PARTS (if so equipped)

- Do not wax carbon parts, such as the rear diffuser or the optional dry carbon fiber rear spoiler.
- Waxing speeds up deterioration by allowing water under the carbon layer.

For more information, refer to the “**GT-R Overview (section GTR)**” and the “**Appearance and care (section 7)**” of your Owner’s Manual.



## CLOCK SET/ADJUSTMENT

Press the **SETTING** button **1**, select the “Clock” key using the control knob **2** and press the **ENTER** button to access the following clock settings:

- On-screen Clock – When this feature is ON, a clock is always displayed in the upper right corner of the Multi Function Display. The clock is automatically adjusted by the GPS system.
- Clock Format – Choose either the 12-hour clock display or the 24-hour clock display.
- Offset (hour) – The time can be adjusted by increasing or decreasing per hour.
- Offset (min) – The time can be adjusted by increasing or decreasing per minute.
- Daylight Savings Time – Turn this item to ON for daylight savings time application.
- Time Zone – Choose the time zone.



For more information, refer to the “**Other settings (section 7)**” of your Multi Function Display Owner’s Manual.

# FIRST DRIVE FEATURES

## NISSAN INTELLIGENT KEY® SYSTEM

 
The NISSAN Intelligent Key® system allows you to lock or unlock the vehicle and open the trunk. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **1** once or press the  button **2** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
  - Push either door handle request switch **1** once; the corresponding door will unlock. Push the door handle request switch **1** again within 1 minute; all other doors will unlock, or
  - Press the  button **3** on the key fob to unlock the driver's side door. Press the  button **3** again; all other doors will unlock.
- To release the trunk lid, press the  button **4** for more than 1 second. Lift the trunk lid to access the trunk.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **5** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.



## NISSAN INTELLIGENT KEY® BATTERY DISCHARGE

- If the battery in the Intelligent Key is almost discharged, the guide light **6** of the Intelligent Key port blinks and the Intelligent Key insertion indicator **7** is displayed in the vehicle information display.
- To start the engine under these circumstances, insert the Intelligent Key into the key port with the mechanical key facing backward until it latches into place. Then push the ignition switch to start the engine.
- To remove the Intelligent Key from the port, push the ignition switch to turn the engine off and then pull the Intelligent Key out of the port.
- The Intelligent Key port does not charge the Intelligent Key battery. If you see the Intelligent Key warning light **8**, replace the battery in the Intelligent Key.
- Do not insert the mechanical key or other objects into the key port because they will damage the key port.

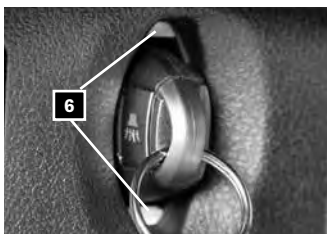


For more information, refer to the “Pre-driving checks and adjustments (section 3)”, the “Starting and driving (section 5)” and the “Maintenance and do-it-yourself (section 8)” of your Owner's Manual.

## TRUNK LID RELEASE

 Use one of the following methods to unlatch the trunk then raise the trunk lid to open:

- Push the trunk open request switch **1** under the trunk handle for more than 1 second.
- Press the trunk button  on the NISSAN Intelligent Key® for more than 1 second.
- From inside the vehicle, push down on the trunk lid release switch **2** located on the left side of the instrument panel.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

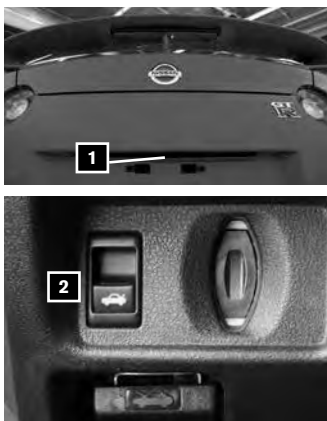


## SEAT ADJUSTMENTS

- To slide the seat forward or backward, push the control switch **1** forward or backward. To adjust the angle of the seatback, rotate the knob **1** forward or backward.

### SEAT LIFTER (driver’s seat)

 - To raise or lower the rear portion of the seat, move the control switch **1** up or down. To raise or lower the front portion of the seat, push the top or bottom of the switch **2**.

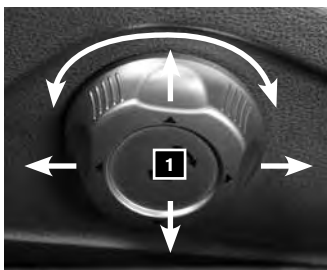

### REAR SEAT ENTRY

- Lift the lever **3** and tilt the seatback forward. Push the seat adjustment control switch **1** forward to the desired position. To return the seat to its original position, tilt the seatback rearward and push the seat adjustment control switch **1** backward or forward.



## HEATED SEATS

Your vehicle’s front seats have built-in heaters that are operated by a switch found on the side of the seats.

- With the ignition **ON**, push the **HI** **4** or **LO** **5** position on the switch, and the seat heater will turn on and the indicator light will illuminate.
- To turn off the seat heater, push the switch to the level (neutral) position.



For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

# FIRST DRIVE FEATURES

## OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, turn the control switch **1** right or left.
- To adjust the mirror angle, move the control switch **1** up, down, right or left.
- To prevent accidentally moving the mirror, turn and set the control switch to the middle (neutral) position.



## POWER FOLDING OUTSIDE MIRRORS

- Push the switch **2** to the  position to fold the outside rearview mirrors, and push the switch **2** to the  position to unfold the outside rearview mirrors.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

## STARTING/STOPPING THE ENGINE

- It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Press the ignition switch **START/STOP** button to start the engine.



## TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Press the ignition switch **START/STOP** button to turn the engine off.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

## HEADLIGHT CONTROL SWITCH

### HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.



 
### AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then push the ignition switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  position **1** or  position **2**.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

## HIGH BEAM SELECT

- Push the headlight control switch forward **4** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.

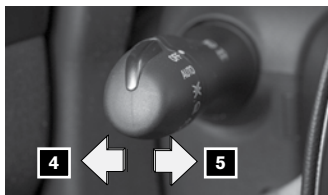



## LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash 3 times.
- Choose the appropriate method to signal a lane change based on the road and traffic conditions.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

## WIPER AND WASHER SWITCH

  - The ignition switch must be in the **ON** position to activate the windshield wipers.
- Move the lever to one of the following positions to operate the windshield wipers:
  - 1** Mist (**MIST**) – Push the lever up for one sweep of the wipers.
  - 2** Speed-sensing Intermittent (**INT**) – Push the lever down. The wipers operate intermittently, and wiper speed varies in accordance with vehicle speed. Intermittent operation can be further adjusted by twisting the time control ring **3** to increase or decrease wiper speed.
  - 4** Low Speed (**LO**) – Push the lever down for continuous low-speed operation of the wipers.
  - 5** High Speed (**HI**) – Push the lever down for continuous high-speed operation of the wipers.
  - 6** Pull the lever toward you to activate the washer. The wipers will operate several times.

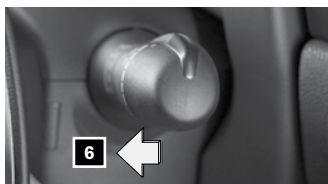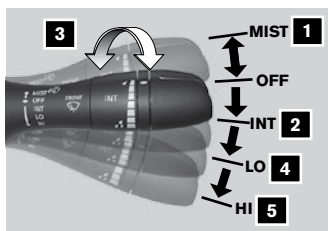

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

# FIRST DRIVE FEATURES



## AUTOMATIC CLIMATE CONTROLS

### 1 AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- The **AUTO** mode can be used year-round. Press the **AUTO** button, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating). Air flow distribution and fan speed are also controlled automatically.
- To set the desired temperature, turn the temperature control dial left for cooler air or right for warmer air.

### 2 OFF BUTTON/FAN SPEED CONTROL DIAL

- Press the **OFF** button to turn the system off.
- Turn the dial to the left to decrease fan speed or to the right to increase fan speed.

### 3 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to operate the passenger's side temperature controls. This will allow the passenger's side temperature to be adjusted independently from the driver's side.
- To set the desired temperature, turn the passenger's side temperature control dial left for cooler air or right for warmer air.

### 4 A/C BUTTON

- Press the **A/C** button on the instrument panel to manually turn the A/C on or off.
- This feature not only provides cooler air, but it also dehumidifies the air to help avoid window fogging in cool or cold conditions.

### 5 MODE BUTTON

- Press the **MODE** button to select from the following air flow outlets:

 Air flows from the center and side vents.

 Air flows from the center, side and foot vents.

 Air flows mainly from the foot vents.

 Air flows from the defroster and foot vents.

### 6 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the defroster button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Turn the driver's side temperature control dial **1** left or right to set the desired temperature.
- To set the defroster on high, turn the fan speed control dial **2** to the right until the fan speed increases.

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

## 7 DEFROSTING/DEFOGGING REAR WINDOW AND OUTSIDE HEATED MIRRORS

- Push the rear window defroster switch  to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

## 8 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate interior air inside the vehicle.
- This setting can be used to assist in avoiding outside odors and in cooling down the vehicle's interior.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot vent mode .

## 9 OUTSIDE AIR CIRCULATION BUTTON

- Press the outside air circulation button  to bring fresh, outside air into the vehicle.
- This setting helps defog the vehicle's windows.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner's Manual and the “**Heater and air conditioner (section 5)**” of your Multi Function Display Owner's Manual.



## AM/FM/SiriusXM®\* SATELLITE RADIO WITH CD PLAYER

### 1 ON-OFF BUTTON/VOL (volume) CONTROL KNOB

- Press the **ON-OFF** button to turn the system on or off.
- Turn the **VOL** (volume) control knob right or left to increase or decrease the volume.

### 2 AUDIO BUTTON/TUNE/FOLDER CONTROL KNOB

- Press the **AUDIO** button to go to the audio settings screen.
- To manually tune the radio, turn the **TUNE/FOLDER** control knob left or right.

### 3 SEEK/CAT AND TRACK BUTTONS

- To scan through each broadcasting station, press the **SEEK/CAT** button or the **TRACK** button to stop at the previous or next broadcast station.
- To switch between the previous and next category of the current channel for satellite radio, press the **SEEK/CAT** button or the **TRACK** button.
- To change tracks on a CD, press the **SEEK/CAT** button or the **TRACK** button.
- To rewind or fast forward a track on a CD, press and hold the **SEEK/CAT** button or the **TRACK** button.

\*SiriusXM® Satellite Radio is only available on vehicles equipped with an optional satellite radio subscription service.

To view detailed instructional videos regarding these and other features,  
please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

# FIRST DRIVE FEATURES

 
## 4 STATION PRESET BUTTONS

- Six stations can be set for the AM band, 12 for the FM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **AM-FM** button **5** or **SAT** button **6** then tune to the desired AM, FM or satellite radio station.
- Next press and hold the desired station preset button (**1-6**) until the sound is briefly muted. The station indicator will then display, and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (**1-6**).

For more information, refer to the “**Audio system (section 3)**” of your Multi Function Display Owner’s Manual.

## CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed above 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **1**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** and release. The **SET** indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **RES/ACCEL** switch **3**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2**. Release the switch when the vehicle slows to the desired speed.
- To turn cruise control off without erasing the set speed, push the **CANCEL** switch **4**. The **SET** indicator light in the instrument panel will extinguish.
- To turn off cruise control, push the **ON/OFF** switch **1**. Both the **CRUISE** indicator light and the **SET** indicator light in the instrument panel will extinguish.

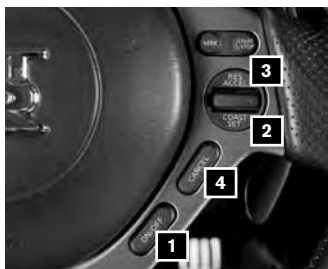

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

# SYSTEM GUIDE

## DRIVE COMPUTER

- The drive computer is located in the vehicle information display **1** at the bottom of the tachometer.
- Press the  button **2** to cycle through the following modes on the vehicle information display:
  - **MPG** – Displays the current fuel economy.
  - **MPH** – Displays the current vehicle speed.
  - **CRUISE/MPH** – Displays the set cruise control status.
  - **MPG/MPH** – Displays the average fuel economy and average speed since the last reset.
    - To reset, push and hold the  button **3** for more than 1 second. Both the average fuel economy and average speed are reset at the same time.
  - **TIME/MILES** – Displays the elapsed time and distance driven since the last reset.
    - To reset, push and hold the  button **3** for more than 1 second. Both elapsed time and distance driven are reset at the same time.
  - **RANGE** – Displays the estimated distance the vehicle can be driven before refueling.
  - **OUTSIDE TEMP** – Displays the outside air temperature.
  - **SETTING** – Allows you to set reminders or preferences for alerts, maintenance intervals or language displays in the system.
    - Press the  button **3** to cycle through the various **SETTING** modes.
    - Press the  button **2** to choose the selected mode.
    - To return to the previous setting screen, push and hold the  button **2** for more than 1 second.
  - **WARNING** – Displays when a warning is present.
    - Use the  button **3** to select "Detail" then confirm with the  button **2**. When there are multiple warnings, push the  button **2** to cycle through all of them. To return to the initial warning, push and hold the  button **2** for more than 1 second.



For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

# SYSTEM GUIDE

 
 
 
## BLUETOOTH® STREAMING AUDIO

If you have a compatible Bluetooth® device with streaming audio (A2DP profile), you can set up the wireless connection between your Bluetooth® device and your vehicle's audio system. This connection allows you to listen to audio from the Bluetooth® device using your vehicle's speakers. A cellular phone should not be used while driving so full attention may be given to vehicle operation.\*

### CONNECTING PROCEDURE FOR A PHONE

Using your cellular phone as a streaming audio device:



1. Press the  button on the steering wheel. The system announces the available commands.
2. Say "Connect Phone". The system acknowledges the command and announces the next set of available commands.
3. Say "Add Phone". The system acknowledges the command and asks you to initiate connecting from the phone handset.
4. Initiate connecting from the phone.
  - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).
  - When prompted for a PIN, enter "1234" from the handset. (The PIN is assigned by NISSAN and cannot be changed.)
  - For phones that support Simple Secure Pairing (SSP), confirm that the PIN on the vehicle's display matches the PIN displayed on the phone.
5. Say the name of the phone when the system asks you to provide one. You can give the phone a name of your choice.
6. Select "Connected Devices" in the Settings menu.
7. Select "Audio Player".
8. Select the name of the device that you are attempting to connect as an audio player.
9. Select "Select".
10. Verify that the system confirms that your device has been selected as an audio player.

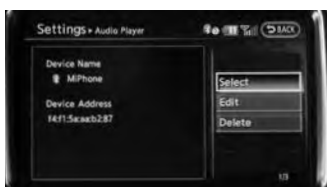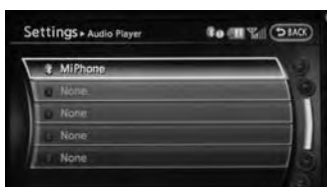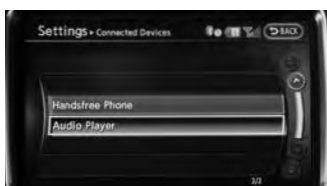

\*Some jurisdictions prohibit the use of cellular telephones while driving.

## FOR DEVICES OTHER THAN PHONES

  
1. Press the **SETTING** button on the instrument panel and select the "Bluetooth" key on the display.
2. Select the "Connect Bluetooth" key.
3. A pop-up box will appear on the screen, prompting you to confirm that the connection is for the phone system. Touch the "No" key.
4. Initiate connecting from the device.
  - The connecting procedure varies according to each device model. For detailed connecting instructions and a list of compatible devices, please visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).
  - When prompted for a PIN, enter "1234" from the device. (The PIN is assigned by NISSAN and cannot be changed.)
  - Either enter the 4-digit PIN into your device, or if your device supports SSP (Simple Secure Pairing), the PIN you entered in the previous step may be replaced with a six-digit PIN. Confirm that the PIN on the vehicle's display matches the PIN displayed on your device.
5. Verify that the system confirms that your device has been selected as an audio player.

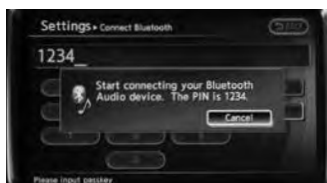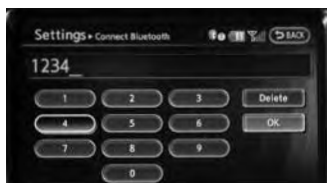

For more information, refer to the "**Audio system (section 3)**" of your Multi Function Display Owner's Manual or please visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).

## BLUETOOTH® HANDS-FREE PHONE SYSTEM

 - A cellular telephone should not be used while driving so full attention may be given to vehicle operation.\*
- Before using the hands-free feature, you need to set up or connect the system to recognize your compatible cellular phone(s). Five Bluetooth®-enabled phones can be connected. After set-up, the system automatically connects with a connected phone when the ignition is in the **ACC** or **ON** position as long as the phone is on and in the vehicle.

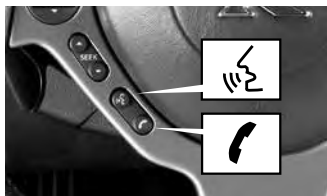

\*Some jurisdictions prohibit the use of cellular telephones while driving.

# SYSTEM GUIDE

## SYSTEM OPERATING TIPS

- Press the  button to interrupt the voice prompts at any time and speak a command after the tone.
- This system has an Alternate Command Mode setting that allows the total number and length of prompts to be reduced. When activated, you may speak second level commands with the main menu command. For example, press the  button and after the tone say "Call" followed by a stored name. Refer to the "Voice recognition (section 8)" of your Multi Function Display Owner's Manual for more information.
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- When speaking phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To cancel a Voice Recognition session, simply wait 5 seconds, say "Cancel" or "Quit", or press and hold the  button for 5 seconds.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Voice Adaptation Mode. See your Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit **[www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth)**.

 
## CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the phone.
1. Press the **PHONE** button on the control panel  or press the  button on the steering wheel and touch the "Connect Phone" key.
  2. Initiate connecting from the phone.
    - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit **[www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth)**.
    - When prompted for a PIN, enter "1234" from the handset. (The PIN is assigned by NISSAN and cannot be changed.)
  3. When the connecting is complete, the screen will return to the Phone menu display.



## PHONEBOOK SETUP

- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, up to 40 entries can be manually downloaded.
- To manually download entries:
  1. Press the  button and select the "Quick Dial" key.
  2. Select the "Add New" key at the top of the display. There are different methods to input a phone number. Select one of the following options:
    - "Copy from Call History"- to save a number from the Outgoing, Incoming or Missed Calls lists.
    - "Copy from the Phonebook"- to save a number that has been downloaded from your handset to the vehicle.
    - "Enter Number by Keypad"- to input the number and name manually.

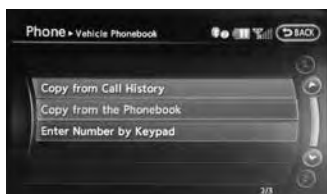

## MAKING A CALL

 
To make a call, follow this procedure:

1. Press the  button on the steering wheel. The Phone menu will appear on the control panel display.
2. Select the "Quick Dial", "Call History", "Phonebook" or "Dial Number" key.
3. Select the desired entry from the list.
4. Select "Call" to start dialing the number.



## RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel or touch the "Answer" key.
- To reject the call, touch the "Reject Call" key.
- To hang-up, press the  button or touch the "Hang up" key.

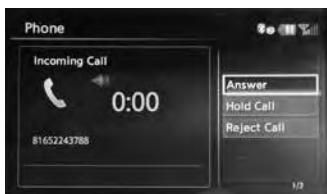

For more information, refer to the "**Bluetooth® Hands-Free Phone System (section 4)**" of your Multi Function Display Owner's Manual or please visit [www.nissanusa.com/bluetooth](http://www.nissanusa.com/bluetooth).

# SYSTEM GUIDE

 
 


## NAVIGATION SYSTEM

- The Navigation System starts when the ignition switch is placed in the **ACC** or **ON** position. To help ensure safe driving, some functions are grayed out or muted while driving. Park the vehicle in a safe location and then operate the Navigation System.

### STORING YOUR HOME LOCATION IN YOUR ADDRESS BOOK

- Press the **DEST** button.
- Touch the "Home (Add New)" key. If you have already stored your home, this key may not appear.
- When you touch the "Home (Add New)" key, a confirmation message is displayed. Touch the "Yes" key.
- Make sure the correct region is selected. To change the region, touch the "Change Region" key and select the appropriate region.
- Touch the "Street Address" key. A character input screen is displayed.
- Enter the street number of your home then touch the "OK" key.
- Enter your street name then touch the "OK" key. The map screen is displayed.
- Press the directional buttons to adjust your home location if necessary. After adjusting the location, touch the "ENTER" key.
- Your home is displayed at the center of the map. A confirmation message is displayed, and the system sets your home as the destination.

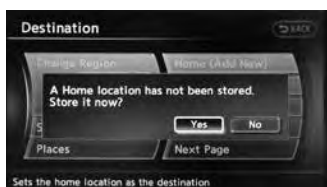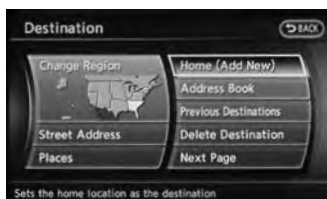

To view detailed instructional videos regarding these and other features, please go to [www.nissanownersinfo.mobi](http://www.nissanownersinfo.mobi).

- Press the **MAP** button to return to the current location map screen. The home icon is displayed on the screen.



## SETTING A STREET ADDRESS AS A DESTINATION

- Press the **DEST** button.
- Touch the “Street Address” key. A character input screen is displayed.
- Enter the house number; when finished, touch the “OK” key. If you do not know the house number, touch the “No House #” key.



- Enter the name of the street. After finishing the entry, touch the “List” key. A list of possible street names is displayed.



- Touch the correct name of the destination from the list. You might need to touch the up or down arrow keys to find the preferred street name.



- The selected destination is displayed at the center of the map. Touch the “Start” key after confirming the location of the displayed destination. The system sets the destination to the selected location and starts calculating a route.

For more information, refer to the “**Navigation (section 2)**” of your Multi Function Display Owner’s Manual.



# SYSTEM GUIDE



## HOMELINK® UNIVERSAL TRANSCEIVER

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
  - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
  - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
  - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programing is complete, press and hold the HomeLink button and observe the indicator light:
  - A solid, continuous light indicates the programing is complete and the HomeLink button will activate your device.
  - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programing.
- An additional person may make the remaining steps easier. To complete the programing process:
  - At the receiver of the device that you are programing to the HomeLink button, press and release the learn or smart button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
  - Press and hold the programed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to 3 times to complete the programing process. HomeLink should now activate your device.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual, the HomeLink website at [www.homelink.com](http://www.homelink.com) or call 1-800-355-3515.

# MEMO



## Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- Navigation Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth)
- [www.NissanUSA.com/connect](http://www.NissanUSA.com/connect)
- [www.youtube.com/user/NissanUSA](http://www.youtube.com/user/NissanUSA)
- NISSAN Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide  
(Use Quick Response (QR) code or URL below.)



To view detailed instructional videos,  
go to [www.nissanownersinfo.mobi/2016/gtr](http://www.nissanownersinfo.mobi/2016/gtr)  
or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/nowners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

Nissan, the Nissan Brand Symbol, Z and Nissan model names are Nissan trademarks.

© 2015 Nissan North America, Inc.

QR16EA 0R35U0

Printing: February 2015 (09)

