 




2016 **LEAF**[®]

QUICK REFERENCE GUIDE



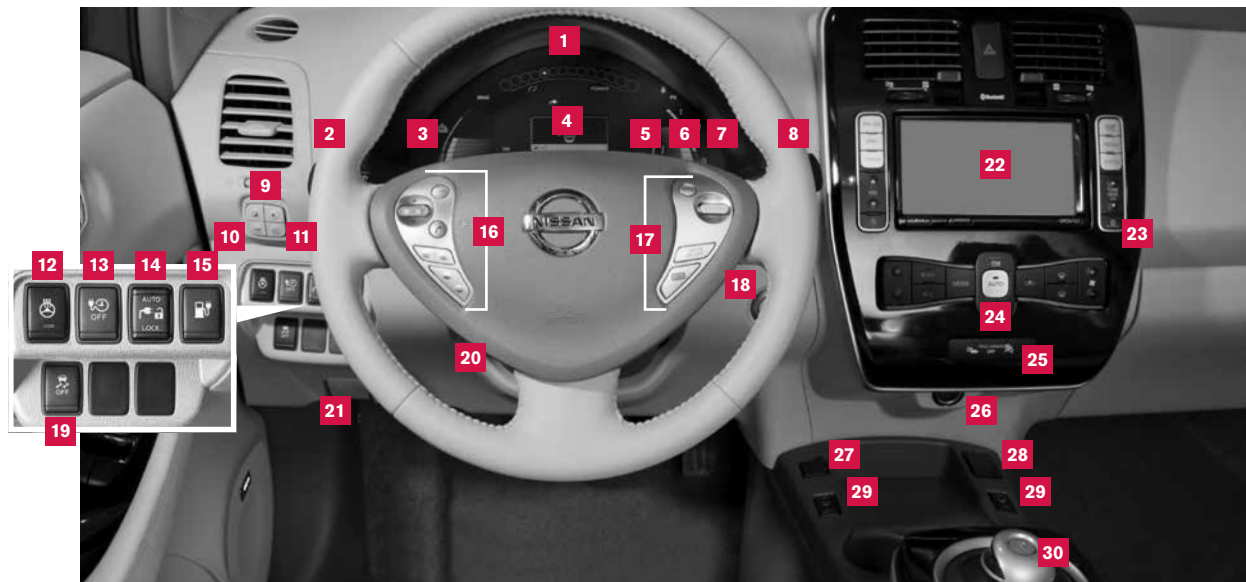

- | | | | |
|--|---|---|---|
| 1 Power Meter | 9 Trip Computer Switches | 17 Cruise Control/Eco Button | 25 Front Passenger Air Bag Status Light* |
| 2 Headlight and Turn Signal Switch | 10 Trip/Reset Switch* | 18 Power Switch | 26 12-Volt Power Outlet* |
| 3 Li-ion Battery Temperature Gauge* | 11 Instrument Brightness Control Switch* | 19 Vehicle Dynamic Control (VDC) OFF Switch* | 27 USB/iPod® Connector* |
| 4 Vehicle Information Display* | 12 Heated Steering Wheel Switch* | 20 Steering Wheel Tilt Adjustment* | 28 Auxiliary Input Jack* |
| 5 Driving Range* | 13 Charge Timer OFF Switch* | 21 Hood Release* | 29 Front Heated Seat Switches* |
| 6 Li-ion Battery Available Charge Gauge | 14 Charge Connector Lock Switch* | 22 Control Panel* | 30 Electric Shift Control System |
| 7 Li-ion Battery Capacity Level Gauge | 15 Charge Port Lid Opener Switch | 23 Zero Emission Button | |
| 8 Wiper and Washer Switch | 16 Steering Wheel Switches for Audio Control/Bluetooth®/Navigation | 24 Heater and Air Conditioner (automatic) | |

*See your Owner's Manual for information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

How to Use Your LEAF's Touch-screen Display	2
NissanConnect SM EV (if so equipped)	3
Approaching Vehicle Sound for Pedestrians (VSP) System	3
Around View [®] Monitor (if so equipped)	4
Shift Control System	5
Heated Seats	6
SiriusXM Travel Link and SiriusXM Traffic (if so equipped)	6

ESSENTIAL INFORMATION

Cold Weather Range and Parking in Extremely Cold Weather	7
Quick Charge in Cold Weather (if so equipped)	7
Li-ion Battery Temperature Gauge and Li-ion Battery Gauges	8
Power Limitation Indicator Light	8
Charge Port Lid/Charge Connector Lock Switch	9
Li-ion Battery Charging	10
Tire Pressure Monitoring System (TPMS) with Easy Fill Tire Alert	12
Clock Set/Adjustment	12

FIRST DRIVE FEATURES

NISSAN Intelligent Key [®] System	14
Rear Hatch Release	14
Seat Adjustments	15
Outside Mirror Control Switch	15
Power Meter	16
Electric Vehicle (EV) System Warning Light	16
Starting/Stopping the Electric Vehicle (EV) System	16
Headlight Control Switch	17
Wiper and Washer Switch	18
Heater and Air Conditioner (automatic — with Navigation)	19
FM/AM/SiriusXM [®] Satellite Radio with CD Player (if so equipped)	20
Cruise Control	22
USB (Universal Serial Bus) Connection Port/AUX Jack and iPod [®] Interface	22

SYSTEM GUIDE

Trip Computer	23
Text Messaging	23
NissanConnect SM Mobile Apps (if so equipped)	24
Bluetooth [®] Hands-Free Phone System	25
System Operating Tips	25
Bluetooth [®] System without Navigation (if so equipped)	25
Bluetooth [®] System with Navigation (if so equipped)	26
Bluetooth [®] Streaming Audio	28
Navigation System (if so equipped)	29
HomeLink [®] Universal Transceiver (if so equipped)	31



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**”, the “**Display screen, heater, air conditioner, audio and phone systems (section 4)**” and the “**Starting and driving (section 5)**” of your Owner's Manual and the “**Audio system (section 4)**” and the “**Hands-Free Phone (section 7)**” of your Navigation System Owner's Manual.

NEW SYSTEM FEATURES



HOW TO USE YOUR LEAF'S TOUCH-SCREEN DISPLAY

- 1** Launch Bar - Various functions can be accessed by touching the items on the Launch Bar **1**, which is displayed on most of the main screens. Touching these keys will bring up the corresponding screens.
- 2** Widget - These items can be interchanged, moved, or deleted from the MENU pages.
- 3** Touch either arrow to navigate to the next or previous page of the MENU screen. These screens can also be swiped, as you would with a smartphone, to move from screen to screen.
- 4** These dots indicate the page you are currently on, in white, out of the number of pages there are available, in gray.
- 5** Shortcut - Shortcuts, once touched, will bring up the system they correspond to for quick, one-touch convenience for commonly used features.
- Shortcuts and Widgets can be set up through the Edit Menu screen which can be accessed by touching the **Settings** **6** key followed by the **Edit Home Menu** **7** key. This will display the Edit Menu screen, which allows Shortcuts and Widgets to be moved and rearranged **8**, deleted **9** and produced **10**.



For more information, refer to your Navigation System Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

NISSANCONNECTSM EV* (if so equipped)

Vehicle telematic capabilities enable you to perform remote functions from a compatible internet-enabled smartphone or personal computer such as:

- Battery status check – The status of the battery can be checked even if you are not in the vehicle.
- Unplugged status and Charge status – A notification e-mail can be sent if the charging connector is disconnected or if charging is complete.
- Remote charge and Remote climate control – Start battery charging, or climate controls can be set.
- POIs powered by Google™ - Allows you to search for locations near your vehicle's current location, near a plotted destination, near the map's scroll position or near a searched city center.

*Remote functions are only available when the following conditions are met:

- Optional NissanConnect™ EV (if so equipped) subscription service has been established.
- Your vehicle and smartphone are in a compatible cellular phone coverage area or your personal computer is connected to the internet.

For more information, refer to the **“Charging (section CH)”** of your Owner's Manual and the **“System overview (section IT)”** and the **“NissanConnectSM EV (section 5)”** of your Navigation System Owner's Manual.

APPROACHING VEHICLE SOUND FOR PEDESTRIANS (VSP) SYSTEM

- The VSP system helps alert pedestrians to the presence of the vehicle when it is being driven at a low speed.
- When the vehicle starts to move, it produces a sound. The sound stops when the vehicle speed reaches approximately 19 mph (30 km/h) while accelerating.

For more information, refer to the **“EV overview (section EV)”** of your Owner's Manual.

 
NEW SYSTEM FEATURES

AROUND VIEW® MONITOR (if so equipped)


- With the ignition switch in the **ON** position, the Around View® Monitor is activated by pressing the **CAMERA** button **1**, located on the navigation unit, or by moving the shift lever to the **R (REVERSE)** position. The monitor displays various views of the position of the vehicle.
- When the vehicle is in the **P (PARK)**, **N (NEUTRAL)** or **D (DRIVE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:



Start from any Control Panel screen


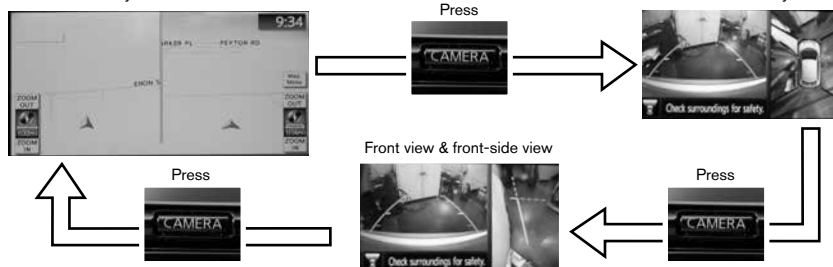


 - When the vehicle is in the **R (REVERSE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

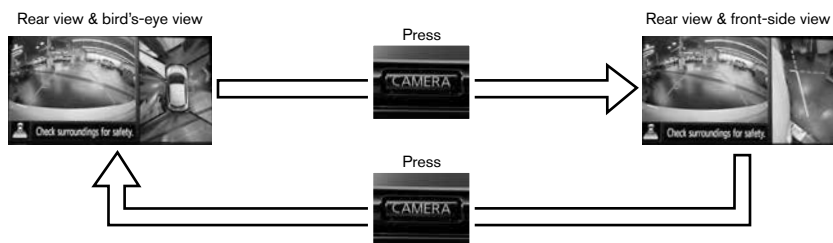

- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).
- For information regarding how to access additional viewing cycles, please see your Owner's Manual.

  - There are some areas where the system will not show objects.
 - When in the front or the rear view display, an object below the bumper or on the ground may not be viewed **2**.
 - When in the bird's-eye view, a tall object near the seam of the camera detecting areas **3** will not appear in the monitor.
- The distance between objects viewed on the Around® View Monitor differs from the actual distance.
- Objects in the bird's-eye view will appear farther than the actual distance.

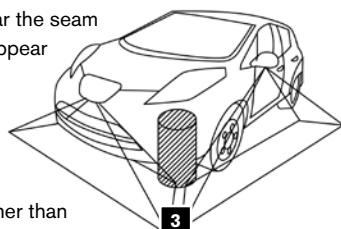

For more information, refer to the “**Display screen, heater, air conditioner, audio and phone systems (section 4)**” of your Owner’s Manual.

SHIFT CONTROL SYSTEM

This vehicle is equipped with an electric shift control system, providing smooth and easy shift lever operation.

- There are five shift positions for operating the vehicle: **P (PARK)**, **R (REVERSE)**, **N (NEUTRAL)**, **D (DRIVE)** and **B-Mode**.
 - **P (PARK)** – Activated by pushing the **P (PARK)** switch on the shift lever when the vehicle has come to a complete stop.
 - **D (DRIVE)** – For normal driving, it is activated by moving the shift lever left and down. The shift lever will then return to the center position.
 - **B-Mode** – Engages the regenerative braking system more aggressively when decelerating, helping to put energy back into the battery pack. To enter **B-Mode**, the vehicle must be in **D (DRIVE)** and then move the shift lever to the **D (DRIVE)** position again. The shift lever will then return to the center position.
- **ECO** – Consumes less power and helps extend vehicle range.
 - While in either **D (DRIVE)** or **B-Mode**, **ECO** can be activated by pressing the **ECO** button on the right side of the steering wheel.
 - While in **ECO**, there will be a reduced acceleration response.



For more information, refer to the “**EV overview (section EV)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual.

NEW SYSTEM FEATURES

HEATED SEATS

- The front seats and the rear outboard seats can be warmed by built-in heaters (if so equipped for rear seats).
- The switches, located on the center console **1** (front seats) and on the side of the front passenger seatback **2** (if so equipped for rear seats), can be operated independently of each other.
- The heater is controlled by a thermostat, automatically turning the heater on and off. The indicator light will remain on as long as the switch is on.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

SiriusXM TRAVEL LINK* AND SiriusXM TRAFFIC* (if so equipped)

- Your vehicle’s Navigation System is equipped with SiriusXM Travel Link and SiriusXM Traffic capabilities.
- Touch the **i Info** key to access SiriusXM Travel Link and SiriusXM Traffic.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings, and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.



*These features, SiriusXM® Satellite Radio, Travel Link and Traffic, require an active subscription. Multiple subscriptions may be necessary to activate the various features.

For more information, refer to the “**Navigation (section 3)**” and the “**Viewing information (section 6)**” of your Navigation System Owner’s Manual.

ESSENTIAL INFORMATION

COLD WEATHER RANGE AND PARKING IN EXTREMELY COLD WEATHER

COLD WEATHER RANGE

- Vehicle range is reduced when the heater is used and the battery temperature drops below 77°F (25°C).
- Using the climate control system to heat the cabin when the outside temperature is below 32°F (0°C) uses more electricity (heat pump, if so equipped) and affects vehicle range more than using the heater at temperatures above 32°F (0°C).

PARKING IN EXTREMELY COLD WEATHER


- Do not store the vehicle in temperatures below -13°F (-25°C) for over seven days. If the outside temperature is -13°F (-25°C) or lower, the Li-ion battery may freeze, and it cannot be charged or provide power to run the vehicle.

For more information, refer to the “**EV overview (section EV)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual.

QUICK CHARGE IN COLD WEATHER (if so equipped)

- It may take more time to charge the Li-ion battery using the quick charger if the vehicle is parked in a cold location (for example, 32°F [0°C]) for a long period of time.
- The Li-ion battery temperature gauge can be used to estimate the approximate time needed to charge the Li-ion battery to 80%.

Li-ion battery temperature gauge	Estimated charge time
1 3 or less segments illuminated	More than approximately 90 minutes
2 4-5 segments illuminated	Approximately 30-90 minutes
3 6-7 segments illuminated	Approximately 30 minutes
4 8-9 segments illuminated	Approximately 30-60 minutes
5 10 or more segments illuminated	More than approximately 60 minutes

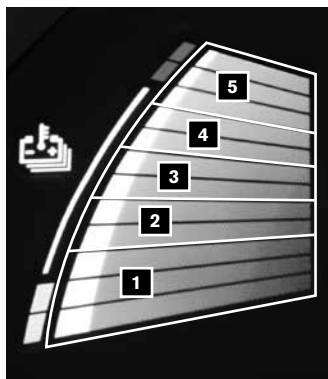 


For more information, refer to the “**Charging (section CH)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual.

ESSENTIAL INFORMATION

LI-ION BATTERY TEMPERATURE GAUGE AND LI-ION BATTERY GAUGES


LI-ION BATTERY TEMPERATURE GAUGE

 - The temperature of the Li-ion battery is in the normal range **1** when the display is within this zone.
- The temperature of the Li-ion battery varies with outside air temperature, road surface temperature, driving conditions and charging rate.
- To protect the battery, power is reduced when the temperature of the battery is too high or low. This does not indicate a malfunction.

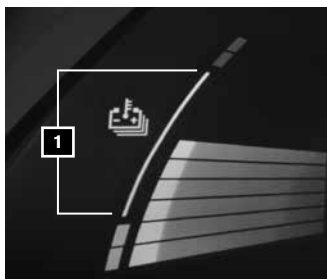

LI-ION BATTERY GAUGES

 - The Li-ion Battery Available Charge Gauge **1** displays the approximate available Li-ion battery power remaining to drive the vehicle. Recharge the Li-ion battery before these lights reach the bottom line.
- The Li-ion Battery Capacity Level Gauge **2** indicates the amount of charge the Li-ion battery is capable of storing.
- The driving range **3** provides an estimated distance that the vehicle can be driven before recharging is necessary. The driving range is constantly being calculated based on the amount of available Li-ion battery charge and the actual power consumption average.

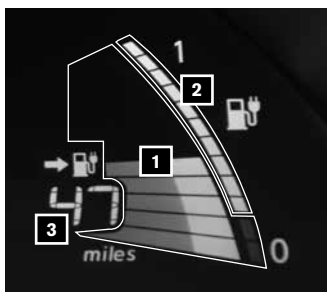

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

POWER LIMITATION INDICATOR LIGHT

- When the power limitation indicator light illuminates, power provided to the traction motor is reduced.
- This light illuminates in the following conditions:
 - The Li-ion battery available charge is extremely low.
 - The Li-ion battery temperature is very low.
 - The temperature of the Electric Vehicle (EV) system is high (motor, inverter, coolant system, Li-ion battery, etc.).
 - The EV system has a malfunction.
- If the power limitation indicator light is illuminated, follow the instructions provided on the center display.

 


For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

CHARGE PORT LID/CHARGE CONNECTOR LOCK SWITCH

- To open the charge port lid, do the following:

- Push the charge port lid opener switch **1** on the instrument panel, or
- Press and hold the charge port lid opener button **2** on the Intelligent Key for more than 2 seconds.
- When the charge port lid springs up slightly, place your hand underneath the lid and open it fully.

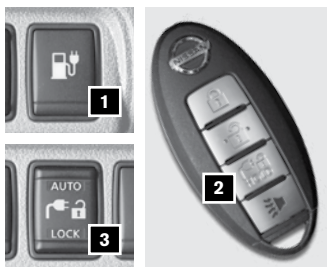

- To close the charge port lid, slowly move the lid down and lock it securely in place.
- The normal or trickle charge connector can be locked to the normal charge port with the use of the charge connector lock switch **3**.



- There are three different positions of the charge connector lock switch **3**:

AUTO – The charge connector is locked while charging is in progress and unlocked automatically when charging is complete.

LOCK – The charge connector will remain locked until **UNLOCK** is selected.

UNLOCK – When the switch is placed in the level position, the charge port will unlock and remain unlocked.

TEMPORARY UNLOCK MODE

When the charge connector lock switch is in the **AUTO** or **LOCK** position, the charge connector lock can be unlocked temporarily with the use of the Intelligent Key or the charge port lid opener switch **1** on the instrument panel.

- Push the charge port lid opener button **2** on the Intelligent Key for more than 1 second or push the charge port lid opener switch **1** on the instrument panel.
- The status indicator light flashes 3 times.
- A beep sounds 3 times.
- The charge connector lock is unlocked for 30 seconds.
- After 30 seconds, the charge connector lock is locked.

For more information, refer to the “**Charging (section CH)**”, the “**Instruments and controls (section 2)**”, the “**Pre-driving checks and adjustments (section 3)**” and the “**Starting and driving (section 5)**” of your Owner's Manual.

ESSENTIAL INFORMATION

 
LI-ION BATTERY CHARGING

Before charging the Li-ion battery, see your Owner's Manual for detailed warnings and cautions when charging your battery.

- There are three methods available to perform the charge operation: normal charge, trickle charge and quick charge (if so equipped).


NORMAL CHARGE

- Perform a normal charge using the charger installed in your home.
- It takes approximately 4-7 hours for the 24 kW/h Li-ion battery and 5.5-9.5 hours for the 30 kW/h Li-ion battery (if so equipped) to charge from empty to full with a 6.6 kW charger (if so equipped).
- To charge your vehicle:
 - Place the power switch in the **OFF** position.
 - Push the charge port lid opener switch located on the instrument panel to the left of the steering wheel.
 - Press the charge port tab and open the cap.
 - Connect the charge connector **1** to the charge port **2**. When connected correctly, a beep will sound once.
- To stop charging:
 - Press the button **3** on the charge connector to release the lock and remove the charge connector from the charge port.
 - Close the charge port cap and the charge port lid.

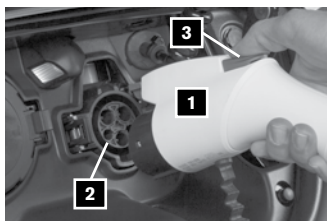

TRICKLE CHARGE

 - Perform a trickle charge by connecting the Electric Vehicle Supply Equipment (EVSE) (if so equipped) to a dedicated 110-120V, 15A power outlet.
- It takes approximately 21 hours to charge the 24kW/h Li-ion battery or 26 hours to charge the 30kW/h Li-ion battery (if so equipped) from discharged to charged.
- To charge your vehicle:
 - Place the power switch in the **OFF** position.
 - Push the charge port lid opener switch located on the instrument panel to the left of the steering wheel.
 - Press the charge port tab and open the cap.
 - Connect the EVSE plug **4** to a dedicated 110-120V, 15A power outlet. The EVSE control box's green indicator light **5** will illuminate.

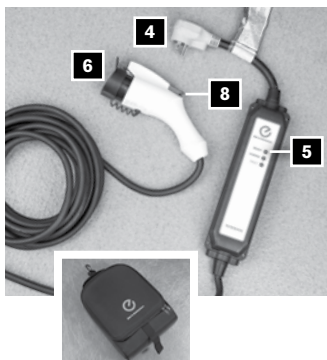

- Remove the safety cap from the charge connector.

- Connect the charge connector **6** to the charge port **2**. A beep will sound once.

- If plugging in the EVSE connector to a power outlet, attach a string to the control box and hang it on a hook near the outlet or set it on a suitable surface **7** off the ground.

■ To stop charging:

- Press the button **8** on the charge connector to release the lock and remove the charge connector from the charge port.

- Close the charge port cap and the charge port lid.

- Remove the EVSE plug from the power outlet, attach the safety cap to the charge connector and store it in the case.



QUICK CHARGE (if so equipped)

- Perform a quick charge by connecting the charge connector of a quick charger at a charge station to the vehicle.

- It takes approximately 30 minutes to charge the Li-ion battery to 80% when the low battery charge warning light illuminates.

■ To charge your vehicle:

- Place the power switch in the **OFF** position.

- Open the charge port lid by pushing the charge port lid opener switch located on the instrument panel to the left of the steering wheel and unlatch the charge port cap **9**.

- Align the groove of the charge connector with the groove of the charge port then insert the charge connector.



- Grasp the lock lever and then lock the charge connector.

- Follow the instructions on the quick charge equipment to start charging. When the equipment is properly installed and ready to charge, a beep sounds twice and the charging status indicator light will change.

■ To stop charging:

- Follow the instructions on the quick charge equipment.
- Unlock the charge connector and remove it from the vehicle.
- After closing the charge port cap, close the charge port lid.

For more information, refer to the “**EV overview (section EV)**” and the “**Charging (section CH)**” of your Owner’s Manual.

ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY FILL TIRE ALERT

- A **CHECK TIRE PRESSURE** warning message will appear in the vehicle information display **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.
- When adding air to an under-inflated tire, the TPMS with Easy Fill Tire Alert system provides visual and audible signals to help you inflate the tire to the recommended COLD tire pressure.
- To use the Easy Fill Tire Alert system:
 1. Apply the parking brake and push the **P (PARK)** switch on the shift lever.
 2. Place the power switch in the **ON** position. Do not place the power switch in the **READY** to drive mode.
 3. Add air to the underinflated tire, and within a few seconds, the hazard warning lights will flash.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning lights will stop flashing.
 5. Repeat this procedure for any additional underinflated tires.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h) and the warning message and indicator light will extinguish.
- When the low tire pressure warning light flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN-certified LEAF dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates, check the tire pressure in your tires.



For more information, refer to the “**Instruments and controls (section 2)**” and the “**Starting and driving (section 5)**” of your Owner's Manual.

 
CLOCK SET/ADJUSTMENT

VEHICLE INFORMATION DISPLAY

- To adjust the instrument panel clock (for vehicles not equipped with Navigation) **1**, use the **Settings** menu **2** in the vehicle information display.
- The **Settings** menu **2** is accessed by pressing the  button **3** on the left side of the instrument panel.



- Press the  button **4** to cycle through the various Settings modes.
- This clock is linked to the GPS (if so equipped) through the center display clock.
 - Without any adjustments, the correct time will be displayed based on the vehicle's current location.
 - There are also controls in the center display to compensate for Daylight Savings Time.

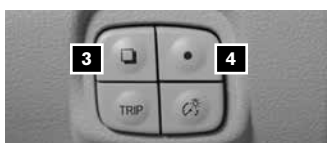

NAVIGATION DISPLAY

- To adjust the time and the appearance of the clock on the display:
 1. Press the  **MENU** button on the control panel.
 2. Touch the  **Settings** key on the Launch Bar.
 3. Touch the **Clock** key.



- The following settings can be adjusted:
 - **On-screen Clock:** The clock in the upper right corner of the display can be turned ON or OFF.
 - **Clock Format (24h):** The clock can be set to 12 hours or 24 hours.
 - **Offset (hour):** The time can be adjusted by increasing or decreasing per hour.
 - **Offset (min):** The time can be adjusted by increasing or decreasing per minute.
 - **Daylight Savings Time:** The application of Daylight Savings Time can be turned ON or OFF.
 - **Time Zone:** Adjust the time zone. Choose a time zone from the available list.

AUDIO DISPLAY

- Press the  **BACK** button on the display commander to return to the previous screen.
- Press the **ENTER/SETTING** button and turn the **TURN/SCROLL** knob until **Setting Clock** and **Clock Adjust** appear on the display.
- Press the **ENTER/SETTING** button to select **Clock Adjust**.
- Turn the **TUNE/SCROLL** knob to adjust the hour.
- Press the **ENTER/SETTING** button.
- Turn the **TUNE/SCROLL** knob to adjust the minute.
- Press the **ENTER/SETTING** button.



For more information, refer to the “**Instruments and controls (section 2)**” and “**Display screen, heater, air conditioner, audio and phone systems (section 4)**” of your Owner’s Manual and the “**Getting started (section 1)**” of your Navigation System Owner’s Manual.

FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM

The NISSAN Intelligent Key® System allows you to lock or unlock the vehicle, open the rear hatch and start your vehicle. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- To lock the vehicle, push either door handle request switch **1** or the rear hatch request switch **2** once or press the  button **3** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push any request switch once; the corresponding door will unlock. Push the request switch again within 60 seconds; all other doors will unlock, or
 - Press the  button **4** on the key fob to unlock the driver's side door. Press the  button **4** again; all other doors will unlock.
- To open the charge port lid, press and hold the charge port lid opener button **5** for more than 2 seconds.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **6** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

 


REAR HATCH RELEASE

To open the rear hatch, unlock it and push the rear hatch opener switch **1**. Pull the rear hatch up to open. The rear hatch can be unlocked by:

- Pressing the  button **2** on the NISSAN Intelligent Key® twice.
- Pushing the rear hatch request switch **3** while carrying the Intelligent Key with you (that is, in your purse or pocket).
- Pushing the door handle request switch twice.
- Pushing the power door lock switch to the  position.

The rear hatch does not lock when closed. To lock the rear hatch, use the request switch, power door lock or key fob.

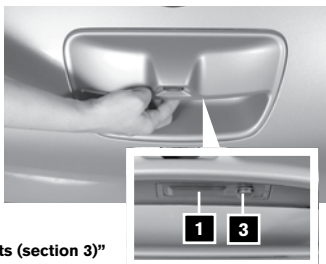


For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

SEAT ADJUSTMENTS

 - To slide the front seat forward or backward, pull up on the bar **1** under the front of the seat and slide forward or backward. Release the bar to lock the seat in position.
- To recline the seatback, pull up on the lever **2** and lean back. To bring the seatback forward, pull the lever **2** up and lean your body forward. Release the lever **2** to lock the seatback in position.

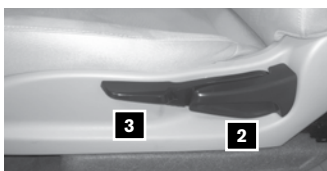

SEAT LIFTER (driver's seat)

- Pull up or push down the adjusting lever **3** to adjust the seat height to the preferred position.

FOLDING THE REAR SEATBACKS DOWN

- Secure the seat belt on the seat belt hooks **4** located on the side wall.
- To fold the seatback down, pull the release knob **5**.
- To return the seatback to the seating position, lift up each seatback and push it to the upright position until it is latched. Then return the seat belt to its original position.



For more information, refer to the “**Safety – Seats, seat belts and supplemental restraint system (section 1)**” of your Owner's Manual.

OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, turn the control switch **1** right or left.
- To adjust the mirror angle, move the control switch **1** up, down, right or left.
- To prevent accidentally moving the mirror, turn and set the switch to the center (neutral) position.

 


For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

FIRST DRIVE FEATURES

POWER METER

- The power meter displays the traction motor power consumption and the regenerative brake power applied to the Li-ion battery.
- When the battery is charged, power is generated by the regenerative brake system and the central dot **1** illuminates and the number of circles increases to the left.
- When the battery discharges and power is provided to the motor, the central dot illuminates and the number of circles increases to the right.
- The number of circles will increase or decrease depending on the Li-ion battery conditions. (Motor output is limited if the Li-ion battery temperature is too high or too low or if the Li-ion battery level is low.)

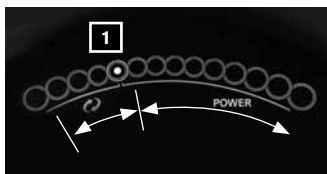

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

ELECTRIC VEHICLE (EV) SYSTEM WARNING LIGHT

- The warning light will illuminate if there is a malfunction in the following systems:
 - Traction motor and inverter system
 - Charge port or on-board charger
 - Li-ion battery system
 - Cooling system
 - Shift control system
 - Emergency shut-off system is activated.
- If the warning light illuminates, contact a NISSAN-certified LEAF dealer.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

STARTING/STOPPING THE ELECTRIC VEHICLE (EV) SYSTEM

It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).

- Confirm the parking brake is applied and push the **P (PARK)** switch on the shift lever to place it in the **P (PARK)** position.
- Depress the brake pedal.
- Push the power switch to start the EV system.
- Check that the **READY** to drive indicator light **1** illuminates and the start-up sound is audible.
- Check the Li-ion battery level and the estimated driving range shown on the meter.



To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

TURNING THE EV SYSTEM OFF

- Push the **P (PARK)** switch on the shift lever to place it in the **P (PARK)** position.
- Apply the parking brake.
- Push the power switch to the **OFF** position.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.



AUTOLIGHT SYSTEM (if so equipped)

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then turn the power switch to **ON**. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  position **1** or  position **2**.

HIGH BEAM SELECT

 
- With the headlights turned to the  position **2** or the autolight system switched to the **AUTO** position **3**, push the headlight control switch forward **4** to select the high beam function. The blue indicator light will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.



FOG LIGHT SWITCH (if so equipped)

In order to operate the fog lights, you must have your headlights on with the low beams selected.

- Turn the switch (inside collar) to the  position **6** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

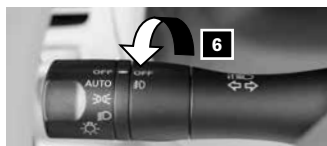

FIRST DRIVE FEATURES

LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

 
 
Choose the appropriate method to signal a lane change based on road and traffic conditions.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:

- 1** Mist (**MIST**) – This is a one-sweep operation of the front wipers.
- 2** Intermittent (**INT**) – Front wipers operate intermittently by moving the lever down to the **INT** position and then rotating the control ring **3** to increase or decrease **INT** wiper speed.
- 4** Low (**LO**) – Front wipers operate at a continuous low-speed.
- 5** High (**HI**) – Front wipers operate at a continuous high-speed.
- 6** Pull the lever toward you to activate the front washer. The front wipers will operate several times.

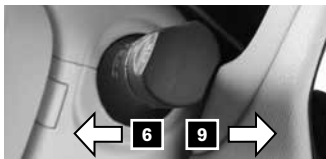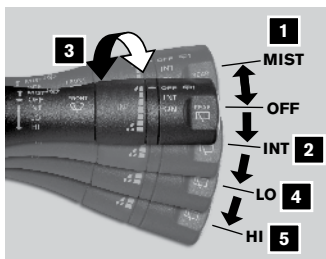


DRIP WIPE

- Once the wiper spray cycle is finished, there will be a short delay. Then the wipers will sweep one more time to clear off any remaining drips from the windshield.

REAR WIPER AND WASHER SWITCH

 - 7** Intermittent (**INT**) – Rear wiper operates intermittently.
- 8** Low (**ON**) – Rear wiper operates at a continuous low-speed.
- 9** Push the lever forward to activate the rear washer. The rear wiper will operate several times.

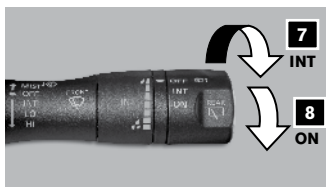

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



HEATER AND AIR CONDITIONER (automatic — with Navigation)

1 ON-OFF BUTTON

- Press the **ON-OFF** button to turn the climate control system on or off.

2 AUTO BUTTON

- The **AUTO** mode may be used year-round. Press the **AUTO** button, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.

3 TEMPERATURE CONTROL BUTTON

- Press the temperature control button up ▲ for warmer air or down ▼ for cooler air.

4 FAN SPEED CONTROL BUTTON

- Press the fan speed control button to manually adjust the fan speed up + or down -.

5 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:

- Air flows from the center and side vents.
- Air flows from the center, side and foot vents.
- Air flows mainly from the foot vents.
- Air flows from the front defroster and foot vents.

6 HEAT BUTTON

- Press the **HEAT** button to manually turn the heater on and off.

7 A/C BUTTON

- Press the **A/C** button to manually turn the A/C on or off.

8 DEFROSTING / DEFOGGING FRONT AND SIDE WINDOWS

- Press the **front defroster** button to turn the system on. The A/C automatically turns on when the front defroster mode is selected.
- To defog or remove moisture from the front window quickly, turn on both the **HEAT** button and the **A/C** button while in Fresh Air mode. The driving range will be reduced when using this setting.
- Set the temperature control buttons and the fan speed control buttons to their maximum settings.

9 AIR RECIRCULATION BUTTON

- Press the **air recirculation** button to recirculate air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more effectively.

FIRST DRIVE FEATURES

- Press the  air recirculation button again to turn air recirculation off. This allows outside air to be drawn into the passenger compartment to prevent fogging in the front defroster, floor vent or defroster/floor vent mode.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot vent mode .

10 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Push the  rear window defroster switch to turn the system on or off.
- The rear window defroster automatically turns off after approximately 15 minutes.

11 CLIMATE CONTROL TIMER INDICATOR

- The climate control timer indicator light will illuminate when the timer has been set to operate. The climate control timer may be set to a specific date and time.

For more information, refer to the “Display screen, heater, air conditioner, audio and phone systems (section 4)” of your Owner’s Manual.



FM/AM/SiriusXM®* SATELLITE RADIO WITH CD PLAYER (if so equipped)

Touch the  Audio key on the Launch Bar to display the current audio source. Touch the  Audio key a second time to access the source selection screen.

1 (ON-OFF) BUTTON

- Press the  (on/off) button to turn the audio system on or off.

2 VOL(volume) CONTROL BUTTONS

- Press the **VOL** (volume) /  buttons to increase or decrease the volume.

3 / (TUNE/SEEK/CH) BUTTONS

- To scan quickly through each broadcasting station, press the  button or the  button to move to the next or previous broadcast station.
- To seek through stations, press and hold the  button or the  button.
- For satellite radio to switch to the first channel of the next or previous category, press the  button or the  button.
- To change tracks on a CD, press the  button or the  button.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- To fast forward or rewind a track on a CD, press and hold the **▲** button or the **▼** button.

4 **AUDIO KEY**

- Touch the **AUDIO** key on the Launch Bar to bring up the current source's control screen.

5 **STATION PRESETS**

- Twelve memory stations can be set for the FM band, six for the AM band and 18 for satellite radio. These appear at the bottom of the screen above the Launch Bar. To change between the FM and satellite radio 12 and 18 presets, respectively, simply swipe the station presets bar or use the arrows.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **6** or **SXM** button **7** then tune to the desired AM, FM or satellite radio station using the **TUNE/SEEK/CH** button **3**. Next, press and hold the desired station preset key until you hear a beep. The channel indicator will then display, and the sound will resume. Programming is now complete.



6 **FM-AM BUTTON**

- Press the **FM-AM** button to switch between FM and AM radio screens.

7 **SXM BUTTON**

- Press the **SXM** button to display the satellite radio screen.

8 **CD-AUX**

- Press the **CD/AUX** button to display the CD, USB, Bluetooth® Audio and AUX screens.

9 **OPEN/TILT BUTTON**

- Press the **OPEN/TILT** button to access the CD slot and SD card port for Navigation.

10 **AM KEY**

- Touch the **AM** key to access the AM radio screen.

11 **FM KEY**

- Touch the **FM** key to access the FM radio screen.

12 **SXM KEY**

- Touch the **SXM** key to access the SXM radio screen.

13 **CD KEY**

- Touch the **CD** key to access the CD display screen.

14 **USB/iPod KEY**

- Touch the **USB/iPod** key to access the USB and iPod® interface screen.

15 **Bluetooth Audio KEY**

- Touch the **Bluetooth Audio** key to access the Bluetooth® audio interface screen.

16 **AUX KEY**

- Touch the **AUX** key to access the AUX display screen.

For more information, refer to the “**Audio system (section 4)**” of your Navigation System Owner's Manual.

FIRST DRIVE FEATURES

CRUISE CONTROL

 
- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **CRUISE ON/OFF** switch **1**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **4**.
- To turn off cruise control, push the **CRUISE ON/OFF** switch **1**. The **CRUISE** indicator light in the instrument panel will extinguish.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

USB (Universal Serial Bus) CONNECTION PORT/AUX JACK AND IPOD® INTERFACE

- The USB port **1** and the AUX jack **2** are located on the instrument panel below the climate controls.
- When a compatible USB memory device, iPod® or auxiliary device is plugged into the USB port or AUX jack, compatible audio files stored on the device can be played through the vehicle’s audio system.
- Touch the **USB Menu** key to view the folder list and track listing, playlist, album artwork, album name, artist and songs.

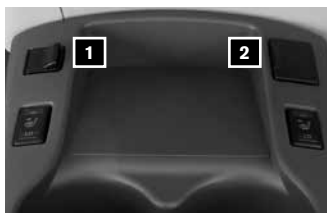



For a full list of compatible devices, refer to the “**Audio system (section 4)**” of your Navigation System Owner’s Manual.

For more information, refer to the “**Display screen, heater, air conditioner, audio and phone systems (section 4)**” of your Owner’s Manual and the “**Audio system (section 4)**” of your Navigation System Owner’s Manual.

SYSTEM GUIDE

TRIP COMPUTER

  - The trip computer **1** is located in the vehicle information display.
- By pressing the **TRIP** button **2**, the trip computer **1** will switch between trip A and trip B. By pressing and holding the **TRIP** button **2** for a few seconds, trip A or B will be reset.
- With the power switch in the **ON** position, trip computer modes can be selected by pressing the  button **3** on the left side of the instrument panel.
- The following modes can be selected in the display:
 - To 100% Charge – Displays the estimated time to a full Li-ion charge using either 120 volts or 240 volts.
 - Energy Economy – Displays the average and instant energy economy.
 - Average Speed – Displays the average vehicle speed since the last reset.
 - Driving Distance and Elapsed Time – Displays the total distance the vehicle has been driven and the time since the last reset.
 - SOC% – Displays the vehicle's current state of charge.
 - Settings – Allows you to adjust the system settings for features such as the clock, maintenance intervals, reminders or preferences for alerts, units, language displays, effects and to return to factory reset.
 - Press the  button **4** to cycle through the various setting modes.
 - Press the  button **3** to choose the selected mode.
 - Warning – Displays when a warning message is present.
- To reset Average Energy Economy, Average Speed, Driving Distance and Elapsed Time, go to that mode on the trip computer and hold the  button **4** for longer than 1 second.

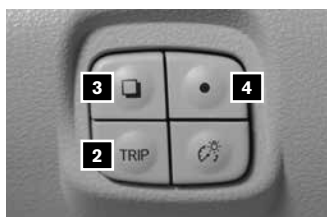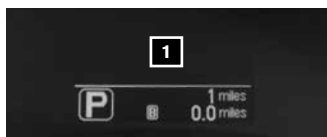

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

TEXT MESSAGING*

- This text messaging feature allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to a name or phone number stored in your Bluetooth® Hands-Free Phone System.



*Laws in some jurisdictions may restrict the use of “Text-to-Speech”. Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

SYSTEM GUIDE

- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8km/h).
- Text messages have the option of being read aloud at all speeds.
- Once the vehicle is in motion, text messages can only be replied to using the Voice Recognition  button on the steering wheel.
- Text messages can be created manually when the vehicle is not in motion.
- Custom text messages must be created in advance.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you may need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see **www.NissanUSA.com/bluetooth** for compatibility information as well as your device's Owner's Manual.

For more information, refer to the "**Hands-Free Phone (section 7)**" of your Navigation System Owner's Manual.

NissanConnectSM MOBILE APPS (if so equipped)

Press the  **MENU** button on the control panel, touch the **i Info** key on the Launch Bar and then touch the NissanConnect Mobile Apps key.

- Integrates popular smartphone apps and services into your vehicle.
- The NissanConnect Mobile Apps companion app must be downloaded to your smartphone, and you must be enrolled in a NissanConnect account.

FOR SYSTEM WITH NAVIGATION

- iPhone®: Please connect via USB when using an iPhone® with NissanConnect Mobile Apps.
- Android®: Please connect via Bluetooth® when using an Android® device with NissanConnect Mobile Apps.

FOR SYSTEM WITHOUT NAVIGATION

- iPhone®: Please connect via Bluetooth® when using an iPhone® with NissanConnect Mobile Apps.
- Android®: Please connect via Bluetooth® when using an Android® device with NissanConnect Mobile Apps.

For more information on how to pair your cellular phone and set up NissanConnect Mobile Apps, visit: **www.NissanUSA.com/connect/support**.

 
For more information, refer to the "**Display screen, heater, air conditioner, audio and phone systems (section 4)**" of your Owner's Manual and the "**Viewing information (section 6)**" of your Navigation System Owner's Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

- Press the  or  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- When speaking phonebook names, please be aware some cellular phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- If you experience difficulty with the NISSAN Voice Recognition System recognizing a contact name, please try saying both the first and last name of the contact as this improves recognition accuracy.
- To cancel a Voice Recognition session, simply wait 5 seconds, say "Cancel" or "Quit" or press and hold the  or  button on the steering wheel for 5 seconds.
- For more detailed information and instructions, see your cellular phone's Owner's Manual and visit www.NissanUSA.com/bluetooth.

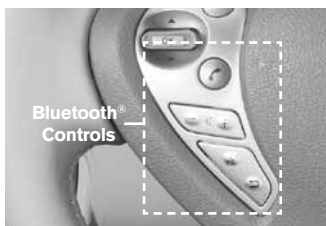

BLUETOOTH® SYSTEM WITHOUT NAVIGATION (if so equipped)

PAIRING PROCEDURE

1. Press the **ENTER/SETTING** button.
2. Select the **Bluetooth** key.
3. Select the **Add Phone** key. This same screen can be accessed to remove, replace or select a different Bluetooth® device.
4. The system acknowledges the command and asks you to initiate connecting from the phone handset. The connecting procedure of the cellular phone varies according to each cellular phone model. For additional information, refer to the cellular phone's Owner's Manual for details. You can also visit www.NissanUSA.com/bluetooth for instructions on connecting NISSAN-recommended cellular phones.
 - When prompted, confirm the PIN on the display with the PIN shown on the handset. If your device does not support Secure Simple Pairing and requests you to input a PIN, enter "1234" from the handset.

*Some jurisdictions prohibit the use of cellular telephones while driving.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

SYSTEM GUIDE

PHONEBOOK REGISTRATION

- When the cellular phone is connected to the in-vehicle module, the data stored in the cellular phone, such as phonebook, outgoing call logs, incoming call logs and missed call logs, is automatically transferred and registered to the system.
- The availability of this function depends on each cellular phone. The copying procedure also varies according to each cellular phone. See your cellular phone's Owner's Manual for more information.
- Up to 1,000 entries per registered cellular phone can be stored in the phonebook.

MAKING A CALL

1. Push the  button on the steering wheel. The system will announce the available commands; afterward, a tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say the registered person's name. The system acknowledges the command and announces the next set of available commands.
4. Say: "Yes". The system acknowledges the command and makes the call.



RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button on the steering wheel.
- To hang-up, press the  button on the steering wheel.

For more information, refer to the "Display screen, heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual or please visit www.NissanUSA.com/bluetooth.

BLUETOOTH® SYSTEM WITH NAVIGATION (if so equipped)

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the cellular phone.
1. Press the  button **1** on the steering wheel and touch the **Connect Phone** key on the center display.
 2. Initiate connecting from the cellular phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.NissanUSA.com/bluetooth.



 
- When prompted, confirm the PIN on the display with the PIN shown on the handset. If your device does not support Secure Simple Pairing and requests you to input a PIN, enter "1234" from the handset.
- Some cellular phones may incorrectly state that the connection was unsuccessful. Please verify that the touch-screen displays that the connection is successful, or touch **Settings > Bluetooth > Select BT Device > Phone** and confirm that your cellular phone is listed.

3. When connecting is complete, the screen will return to the Phone menu.

PHONEBOOK SETUP

- Press the **MENU** button on the control panel.
- Touch the **Settings** key on the Launch Bar and touch the **Phonebook** key.
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- The **Quick Dial** phonebook can also be set for up to five entries that can be used with your cellular phone.

1. Press the **Phone** button and touch the **Quick Dial** key.

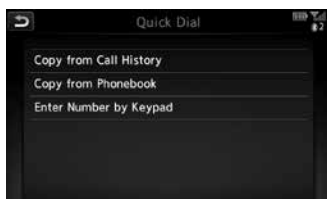

2. Touch the **Add New** key at the top of the display. There are different methods to input a phone number. Select one of the following options:

- **Copy from Call History** to save a number from the Outgoing, Incoming or Missed Calls lists.
- **Copy from the Phonebook** to save a number that has been downloaded from your handset to the vehicle.
- **Enter Number by Keypad** to input the number and name manually.

MAKING A CALL

To make a call, follow this procedure:

1. Press the **Phone** button on the steering wheel. The Phone menu will appear on the control panel display.
2. Touch the **Quick Dial, Phonebook, Call History** or **Dial Number** key.
3. Touch the desired entry from the list.
4. Touch the phone number to start dialing.



SYSTEM GUIDE

RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel or touch the **Answer** key on the display.
- To reject the call, touch the **Decline** key on the display.
- To hang-up, press the  button on the steering wheel or touch the **Hang up** key on the display.

For more information, refer to the “**Hands-Free Phone (section 7)**” of your Navigation System Owner's Manual or please visit www.NissanUSA.com/bluetooth.



BLUETOOTH® STREAMING AUDIO

- If you have a compatible Bluetooth® device with streaming audio (A2DP profile), you can set up the wireless connection between your Bluetooth® device and your vehicle's audio system. This connection allows you to listen to audio from the Bluetooth® device using your vehicle's speakers.
- A cellular phone should not be used while driving so full attention may be given to vehicle operation.*

CONNECTING PROCEDURE WITH NAVIGATION SYSTEM (if so equipped)

1. Press the  **Audio** key and touch the **Bluetooth Audio** key.
2. A prompt to connect your device will display.

■ If the device is already paired:

- a. Touch the **Select Devices** key to play from an already paired device.
- b. Select the desired device and touch the **Connect** key **1**.
- c. The last played audio will start playing once the device is connected.

■ If the device needs to be connected:

- a. Touch the  **Settings** key.
- b. Touch the **Bluetooth** key.
- c. Touch the **Connect Device** key.

- Touch the **BT Menu** key to view track listing, artist, songs or albums.**
- Touch the **BT Settings** key to change which device is playing audio.



*Some jurisdictions prohibit the use of cellular telephones while driving.

**Not all cellular phones/devices support this feature.

 
CONNECTING PROCEDURE WITHOUT NAVIGATION SYSTEM (if so equipped)

To connect your Bluetooth® audio device to the vehicle, follow the procedure below:

1. Press the **ENTER/SETTING** button.
 2. Select the **Bluetooth** key.
 3. Select the **Add Phone** key. This same screen can be accessed to remove, replace or select a different Bluetooth® device.
 4. The system acknowledges the command and asks you to initiate connecting from the phone handset. The connecting procedure of the cellular phone varies according to each cellular phone model. For additional information, refer to the cellular phone's Owner's Manual for details. You can also visit www.NissanUSA.com/bluetooth for instructions on connecting NISSAN-recommended cellular phones.
- To switch to the Bluetooth® audio mode, press the **MEDIA** button repeatedly until the Bluetooth® audio mode is displayed on the screen.

The controls for the Bluetooth® audio are displayed on the screen. Use the preset **3** button for play and the preset **4** button for pause.

For more information, refer to the "Display screen, heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual and the "Audio system (section 4)" of your Navigation System Owner's Manual or please visit www.NissanUSA.com/bluetooth.

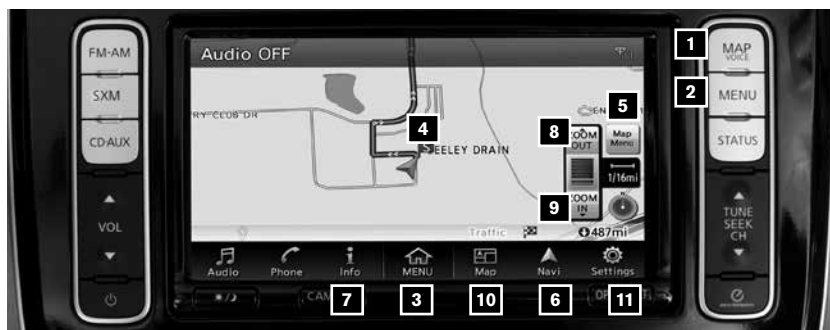

NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to the "Voice recognition (section 7)" of your Navigation System Owner's Manual.

SYSTEM GUIDE

- 1 MAP/VOICE** button – Press to view your current location on the map screen. When you press and hold this button, the system will repeat voice guidance.
- 2 MENU** button – Press to view a list of menus.
- 3**  **MENU** - Touch to access all available shortcut and widget items in the menu screen.
- 4** Touch-screen
- 5 Map Menu** - Touch to access different options related to either a selected location by touch or one that you have navigated to. Some options include **Save Location**, **Nearby POIs**, **Map Icons** or **New Destination**.
- 6**  **Navi** (Navigation) - Touch to access the Navigation function.
- 7**  **Info** (Information) - Touch to display the vehicle, traffic (if so equipped) and weather (if so equipped) information.
- 8 ZOOM OUT**, **9 ZOOM IN** - Touch to adjust the map scale. When parked, you can pinch in or out to zoom on the screen.
- 10**  **Map** - Touch to display the map.
- 11**  **Settings** - Touch to display the system settings.

SETTING A DESTINATION

You can set a destination with your Navigation system using the touch-screen display or Voice Recognition.

- Touch-screen Display
 - Touch the  **Navi** key on the Launch Bar.
 - When a destination is set, touch the **New Destination** key and then select one of the displayed options for choosing your destination.
- Voice Recognition
 - Press the  button on the steering wheel, and after the tone, say "Navigation". From here, the system will give you the options available for setting a destination.

SETTING A DESTINATION USING POINTS OF INTEREST (POI)

- Touch-screen Display
 - Touch the  **Navi** key on the Launch Bar, and if a destination is already set, touch the **New Destination** key.
 - Touch the **Points of Interest** key and then select one of the displayed options for choosing your destination. To find a specific location, touch the **Spell Name** key and type the desired location's name using the on-screen keyboard.
- Voice Recognition
 - Press the  button on the steering wheel, and after the tone, say "Navigation" then say "Points of Interest". From here, the system will give you the options available for setting a POI.

For more information, refer to your Navigation System Owner's Manual.



HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programing is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programing is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programing.
- An additional person may make the remaining steps easier. To complete the programing process:
 - At the receiver of the device that you are programing to the HomeLink button, press and release the "learn" or "smart" button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to 3 times to complete the programing process. HomeLink should now activate your device.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- Navigation System Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the iPhone App Store or Android Google Play Store for download to your smartphone)



To view detailed instructional videos,
go to www.nissanownersinfo.mobi/2016/leaf
or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

Nissan, the Nissan Brand Symbol, Z and Nissan model names are Nissan trademarks.

© 2015 Nissan North America, Inc.

QR16EA 0ZE0U0

Printing: July 2015 (10)

