 


2016 **NV 200**
COMPACT
CARGO



QUICK REFERENCE GUIDE

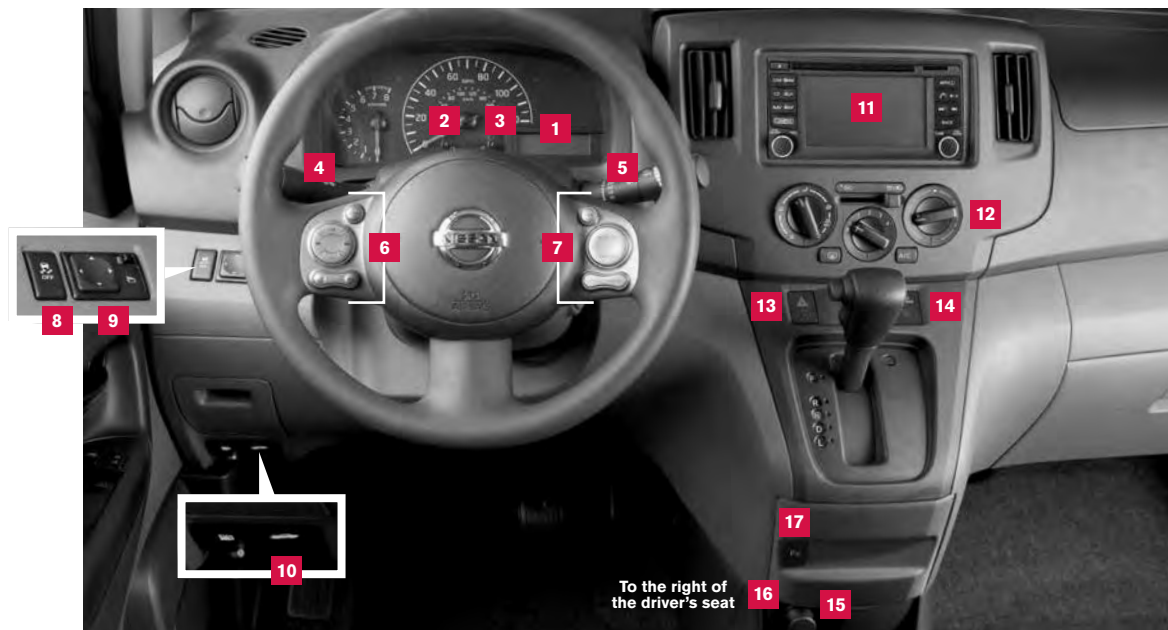

- 1** Trip Computer
- 2** Low Tire Pressure Warning Light
- 3** Instrument Brightness Control / Trip Odometer Reset Switch*
- 4** Headlight Beam Select / Turn Signal Control Switch

- 5** Wiper and Washer Switch
- 6** Steering Wheel Switches for Audio / Bluetooth®
- 7** Cruise Control
- 8** Vehicle Dynamic Control (VDC) OFF Switch*

- 9** Outside Mirror Control Switch
- 10** Hood Release*
- 11** Audio and Navigation System
- 12** Heater and Air Conditioner (manual)
- 13** Hazard Warning Flasher Switch*

- 14** Front Passenger Air Bag Status Light*
- 15** Power Outlet
- 16** Parking Brake*
- 17** Rear Sonar Switch

*See your Owner's Manual for information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

RearView Monitor (if so equipped)	2
SiriusXM Travel Link and SiriusXM Traffic (if so equipped)	2
Rear Sonar System (if so equipped).	2

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS)	3
Loose Fuel Cap.	3
Fuel-filler Door.	4
Clock Set/Adjustment	4

FIRST DRIVE FEATURES

Remote Keyless Entry System (if so equipped).	6
Opening the Back Doors	6
Operating the Sliding Doors	7
Manual Seat Adjustment	7
Outside Mirror Control Switch (if so equipped).	8
Starting/Stopping the Engine	8
Headlight Control Switch.	8
Wiper and Washer Switch.	9
Heater and Air Conditioner (manual)	9
FM/AM/SiriusXM® Satellite Radio with CD Player (if so equipped)	10
USB (Universal Serial Bus) Connection Port/AUX Jack and iPod® Interface (if so equipped).	11
Cruise Control (if so equipped).	12
Power Outlets	12

SYSTEM GUIDE

Trip Computer	13
NissanConnect SM Mobile Apps (if so equipped)	13
Hands-free Text Messaging Assistant (if so equipped)	14
Bluetooth® Hands-free Phone System (if so equipped)	15
▪ System Operating Tips.	15
Bluetooth® System without Navigation (if so equipped).	16
Bluetooth® System with Navigation (if so equipped)	17
Navigation System (if so equipped)	19



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

NEW SYSTEM FEATURES

REARVIEW MONITOR (if so equipped)

- When the shift lever is shifted into the **R (REVERSE)** position, the monitor display shows a rearward view from the vehicle.
- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).



For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

SiriusXM TRAVEL LINK* AND SiriusXM TRAFFIC* (if so equipped)

- Your vehicle’s Navigation System is equipped with SiriusXM Travel Link and SiriusXM Traffic capabilities.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed when they are approached.



*These features, SiriusXM® Satellite Radio, Travel Link and Traffic require an active subscription. Multiple subscriptions may be necessary to activate the various features.

For more information, refer to the “**Navigation (section 4)**” and the “**General system information (section 6)**” of your Navigation System Owner’s Manual.

REAR SONAR SYSTEM (if so equipped)

- With the shift lever in the **R (REVERSE)** position, this system will sound a tone to alert you of obstacles up to 5.9 ft (1.8 m) from the bumper with a decreased coverage area at the outer corners of the bumper.
- The rate of the tone increases as the vehicle gets closer to the obstacle. A continuous tone sounds when an obstacle is less than 10 in (25 cm) from the bumper.
- Turn the system off by pushing the Rear Sonar System off switch **1**. Push the switch again to activate the system.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS)

 
- A **CHECK TIRE PRES** warning message will appear in the trip computer **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.
 - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **CHECK TIRE PRES** warning message and low tire pressure warning light **2** will extinguish.
- When the low tire pressure warning light **2** flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended you visit a Nissan dealer for this service.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 9)" of your Owner's Manual for the location of the Tire and Loading Information label.



For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**" and the "**Maintenance and do-it-yourself (section 8)**" of your Owner's Manual.

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will display in the trip computer **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the reset button **2** is pressed for more than 1 second.
- If the cap is not properly tightened, the Malfunction Indicator Light  may also illuminate.

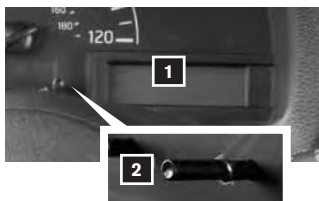

For more information, refer to the "**Instruments and controls (section 2)**" and the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

ESSENTIAL INFORMATION

FUEL-FILLER DOOR

- The fuel-filler door release **1** is located to the left of the steering wheel below the instrument panel.
- To open the fuel-filler door, pull the release **1**.
- The fuel-filler door is located on the passenger's side of the vehicle.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner's Manual.

CLOCK SET/ADJUSTMENT

FM/AM RADIO WITH COMPACT DISC (CD) PLAYER (Type A) (if so equipped)

- If the clock is not displayed with the ignition switch in the **ACC** or **ON** position, you need to select the “CLK ON” mode. Press the **MENU** button **1** repeatedly until “CLOCK” is displayed. Use the **SEEK** button **◀◀** or **▶▶** to enable “CLK ON” mode.



1. Press the **MENU** button **1** repeatedly until “CLOCK” mode appears; press the **SEEK** button **◀◀** or **▶▶** until “CLK ON” appears.
2. Press the **MENU** button **1** again; the hours will start flashing.
3. Press the **SEEK** button **◀◀** or **▶▶** to adjust the hour.
4. Press the **MENU** button **1** again; the display will switch to the minute adjustment mode.
5. The minutes will start flashing. Press the **SEEK** button **◀◀** or **▶▶** to adjust the minutes.

FM/AM RADIO WITH COMPACT DISC (CD) PLAYER (Type B) (if so equipped)

If the clock is not displayed with the ignition switch in the **ACC** or **ON** position, press the **CLOCK** button **2** to resume the display. Pressing the **CLOCK** button **2** toggles the clock display ON and OFF.



 
1. Press and hold the **CLOCK** button **2** until the clock display starts to flash.
2. Press the **SEEK/TRACK** button **▲** or **▼** to adjust the hours.
3. Press the **TUNE/FF-REW/FOLDER** button **▲** or **▼** to adjust the minutes.
4. Press the **CLOCK** button **2** again to exit the clock set mode.

If no action is taken, the display will return to the regular clock display after 10 seconds.

FM/AM/SAT RADIO WITH COMPACT DISC (CD) PLAYER (if so equipped)

- To adjust the time and the appearance of the clock on the display:

1. Press the **APPS** button **3**.
2. Touch the "Settings" key.
3. Touch the "System" key.
4. Touch the "Clock" key.

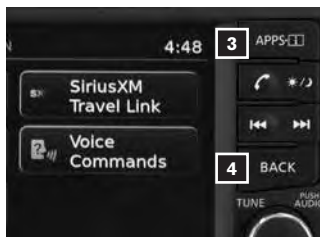

- The following settings can be adjusted:

 
- **Time Format:** The clock can be set to 12 hours or 24 hours.
- **Date Format:** The date can be changed to one of five different formats.
- **Clock Mode:** From here, the clock mode options are:

- **Manual:** Allows for the option "Set Clock Manually". Touch this to begin setting the clock manually using the "+" or "-" to adjust the hours, minutes, day and month up or down.

- **Time Zone:** Touch the "Time Zone" key **5** to choose from the applicable time zone list and/or touch "Daylight Savings Time" to switch between ON and OFF.

- **Auto:** Automatically sets the clock to the vehicle's current location.

- Press the **BACK** button **4** to return to the previous screen.

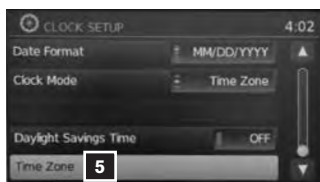

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

FIRST DRIVE FEATURES

REMOTE KEYLESS ENTRY SYSTEM (if so equipped)

The Remote Keyless Entry System allows you to lock or unlock your vehicle and turn on the interior lights.

- To lock the vehicle, press the **1** button on your key fob.
- To unlock the driver's door, press the **2** button on your key fob.
- Press the **2** button again within 5 seconds, and all doors will unlock.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.



OPENING THE BACK DOORS

- Unlock the vehicle by pressing the **2** button on your key fob twice.
- Pull the handle **1** to open the right side back door.



- Lift the lever **2** on the left side back door and pull the door to open.



- To open either door to the wide open position, pull the release lever **3** toward the front of the vehicle to release the check link arm.



For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

OPERATING THE SLIDING DOORS

- The sliding door can be opened from the inside or the outside of the vehicle.
- To open the sliding door from the inside, pull the handle **1** toward the rear of the vehicle and slide the door until it clicks into the detent.
- To close the sliding door from the inside, pull the handle **1** toward the front of the vehicle. The door will release from the open position and slide closed.
- To open the sliding door from the outside, pull the outside handle and slide the door toward the rear of the vehicle until the door clicks into the detent.
- To close the sliding door from the outside, pull the outside handle again. The door will release from the open position and slide closed.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

MANUAL SEAT ADJUSTMENT

- Pull up on the bar **1** under the front of the seat and slide forward or backward. Release the bar to lock the seat in position.
- Pull up on the lever **2** and lean back to recline the seatback. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.



SEAT LIFTER (driver’s seat)

- Pull up or push down on the adjusting lever **3** repeatedly to adjust the seat height.

LUMBAR SUPPORT (driver’s seat)

- Move the lever **4** forward or backward to adjust the seat lumbar area.



For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

FIRST DRIVE FEATURES

OUTSIDE MIRROR CONTROL SWITCH (if so equipped)

- The outside mirror control switch is located on the left side of the instrument panel.
- Move the switch **1** to select the left or right mirror.
- Adjust each mirror to the desired position using the switch **2**.
- Move the switch **1** to the center (neutral) position to prevent accidentally moving the mirror.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

STARTING/STOPPING THE ENGINE

- Depress the brake pedal.
- Move the shift lever to the **P (PARK)** position.
- Turn the ignition switch to the **START** position.

TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Turn the ignition switch to the **LOCK** position.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

HEADLIGHT CONTROL SWITCH

- Turn the headlight control switch to the $\equiv \square \square$ position **1** to turn on the front parking, tail, license plate and instrument panel lights.
- Turn the control switch to the $\equiv \square$ position **2** to turn on the headlights.



HIGH BEAM SELECT

- With the headlights in the $\equiv \square$ position, push the headlight control switch forward **3** to select the high beam function. The blue indicator light $\equiv \square$ will illuminate in the instrument panel. Pull the headlight control switch back to the original position to select the low beam function. The blue indicator light will extinguish.
- Pull and release the lever **4** to flash the headlight high beams on and off.



LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.

 
 
For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:

- 1** Mist (**MIST**) – One sweep operation of the wipers.
- 2** Intermittent (**INT**) – Wipers operate intermittently by moving the lever down to the **INT** position and then rotate the control ring **3** to increase or decrease **INT** wiper speed.
- 4** Low (**LO**) – Wipers operate at a continuous low-speed.
- 5** High (**HI**) – Wipers operate at a continuous high-speed.
- 6** Washer  – Pull the lever toward you to activate the washer. The wipers will operate several times.

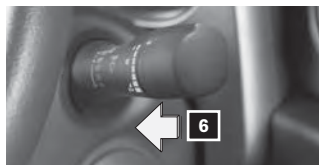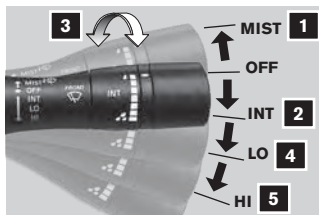

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



HEATER AND AIR CONDITIONER (manual)

1 AIR FLOW CONTROL DIAL

- Turn the dial to select one of the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the front defroster and foot vents.
-  Air flows mainly from the front defroster vents.

2 TEMPERATURE CONTROL DIAL

- Turn the temperature control dial left for cooler air or right for warmer air.

FIRST DRIVE FEATURES

3 FAN SPEED CONTROL DIAL

- Turn the dial to the left to decrease fan speed or to the right to increase fan speed.

4 AIR INTAKE LEVER (Outside air circulation/Air recirculation)

- Move the air intake lever to the  position to recirculate air inside the vehicle.
- Move the air intake lever to the  position to draw outside air into the passenger compartment.

5 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- First, move the air intake lever **4** to the  position to draw fresh air into the vehicle.
- Then turn the air flow control dial **1** to the front defroster mode .
- When the  or  position is selected, press the **A/C** button **7** to turn the air conditioner on for better performance. This will dehumidify the air and help defog the windows.

6 REAR WINDOW AND OUTSIDE MIRROR DEFROSTER SWITCH (if so equipped)

- Push the rear window defroster switch  to turn the system on or off.
- The rear window defroster automatically turns off after approximately 15 minutes.

7 A/C BUTTON

- Press the **A/C** button to manually turn the A/C on or off.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.



FM/AM/SiriusXM®* SATELLITE RADIO WITH CD PLAYER (if so equipped)

1 ON-OFF BUTTON/VOL (volume) CONTROL KNOB

- Press the **ON-OFF** button to turn the system on or off.
- Turn the **VOL** control knob to the right or left to increase or decrease the volume.

2 AUDIO BUTTON/TUNE KNOB

- Press the **AUDIO** button to go to the audio settings screen.
- To manually tune the radio, turn the **TUNE** knob left or right.

3 SEEK BUTTONS

- To scan through each broadcasting station, press the seek buttons |◀◀ or ▶▶|.
- For satellite radio to switch to the first channel of the previous or next category, press the seek buttons |◀◀ or ▶▶|.
- To change tracks on a CD, press the seek buttons |◀◀ or ▶▶|.
- When the seek buttons |◀◀ or ▶▶| are pressed and held while a CD is playing, the CD will rewind or fast forward. When the button is released, the CD will play at normal speed.

4 STATION MEMORY KEYS

- Twelve stations can be set for the FM band, six for the AM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **5** or **SXM** button **6** then tune to the desired FM, AM or satellite radio station.
- Now touch and hold the desired station memory key (**1-6**) until the preset number is updated on the display and a beep is heard. Programing is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then touch the corresponding station memory key (**1-6**).

*SiriusXM® satellite radio is only available on vehicles equipped with an optional satellite radio subscription service.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

USB (Universal Serial Bus) CONNECTION PORT/ AUX JACK AND IPOD® INTERFACE (if so equipped)

- The USB port/AUX jack **1** is located below the shift selector.
- When a compatible USB port device, iPod® or auxiliary device is plugged into the USB port/AUX jack, compatible audio files stored on the device can be played through the vehicle’s audio system.



For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

FIRST DRIVE FEATURES

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 30 mph (48 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** on the steering wheel and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4** on the steering wheel.
- To turn off cruise control, push the **ON/OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will extinguish.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

POWER OUTLETS

12V OUTLETS

- The power outlets are for powering electrical accessories, such as cellular phones. They are rated at 12V, 120W (10A) maximum.
- Open the cap or remove the plug to use a power outlet.
- The power outlet located below the shift selector **1** and on the back of the center console **2** (if so equipped) are powered only when the ignition switch is in the **ACC** or **ON** position.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

SYSTEM GUIDE

TRIP COMPUTER

- With the ignition switch in the **ON** position, modes of the trip computer **1** can be selected by pushing the trip computer change button **2** on the instrument panel.
- **TRIP A** – Measures the distance of one specific trip.
- **TRIP B** – Measures the distance of a second specific trip.
- **mpg** – Displays the instant fuel economy.
- **mpg AVG** – Displays average fuel consumption since the last reset.
- **mls** →  – Displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
- To reset **TRIP A**, **TRIP B**, **mpg** or **mpg AVG**, go to the desired mode on the trip computer and hold the trip computer change button **2** for more than 3 seconds.



For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

NISSANCONNECTSM MOBILE APPS¹

- Integrates popular smartphone apps and services into your vehicle.
- The NissanConnectSM Mobile Apps companion app must be downloaded to your smartphone, and you must be enrolled in a NissanConnect account.

FOR SYSTEM WITH NAVIGATION

- iPhone[®],²: Please connect via USB when using an iPhone[®] with NissanConnect Mobile Apps.
- Android[®],³: Please connect via Bluetooth[®],⁴ when using an Android[®] device with NissanConnect Mobile Apps.

FOR SYSTEM WITHOUT NAVIGATION

- iPhone[®]: Please connect via Bluetooth[®],⁴ when using an iPhone[®] with NissanConnect Mobile Apps.
- Android[®]: Please connect via Bluetooth[®],⁴ when using an Android[®] device with NissanConnect Mobile Apps.
- For more information on how to pair your cellular phone and set up NissanConnect Mobile Apps, visit: **www.NissanUSA.com/connect/support**.

¹ Only use features when safe to do so. App availability is dependent upon vehicle model, trim level, packaging, and/or options. See **www.NissanUSA.com/connect** for complete app availability details. Compatible smartphone required. Cellular network and GPS signals not available in all areas and/or at all times. Nissan is not responsible for associated costs, if any, for continued operation due to cellular network or other third party termination/changes. Cellular or other third party provider may terminate/restrict respective service without notice. Subscription Agreement required. See **www.NissanUSA.com/connect** for details. Text rates and/or data usage may apply.

² iPhone is a registered trademark of Apple, Inc. All rights reserved. iPhone not included.

³ Android[®] is a registered trademark of Google, Inc.

⁴ Availability of specific features is dependent upon the phone’s Bluetooth[®] support. Please refer to your phone owner’s manual for details. Bluetooth[®] word mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by NISSAN is under license. See **www.NissanUSA.com/bluetooth** for details.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

To view detailed instructional videos regarding these and other features, please go to **www.nissanownersinfo.mobi**.

SYSTEM GUIDE

HANDS-FREE TEXT MESSAGING ASSISTANT^{1,2} (if so equipped)

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to entry stored in your Bluetooth® Hands-free Phone System³.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Once the vehicle is in motion, text messages can only be replied to using the Voice Recognition  button on the steering wheel.
- Custom text messages can be created manually when the vehicle is not in motion.
- Custom text messages must be created in advance.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth[®],³ pairing. For some cellular phones, you may need to enable "Notifications" in the cellular phone's Bluetooth[®],³ menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see **www.NissanUSA.com/bluetooth** for compatibility information as well as your device's Owner's Manual.



¹ Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

² Compatible smartphone required. Text rates and/or data usage may apply.

³ Availability of specific features is dependent upon the phone's Bluetooth® support. Please refer to your phone owner's manual for details. Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by NISSAN is under license. See **www.NissanUSA.com/bluetooth** for details.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM¹ (if so equipped)

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation².

SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "Call Redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To cancel a Voice Recognition session, simply wait 5 seconds, say "Cancel" or "Quit", or press and hold the  button on the steering wheel for 5 seconds.
- To increase or decrease the volume of the voice prompts, push the volume control switches **+** or **-** on the steering wheel or turn the control knob on the audio system while the Voice Recognition system is responding.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit **www.NissanUSA.com/bluetooth**.



¹ Availability of specific features is dependent upon the phone's Bluetooth® support. Please refer to your phone owner's manual for details. Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by NISSAN is under license. See **www.NissanUSA.com/bluetooth** for details.

² Some jurisdictions prohibit the use of cellular telephones while driving.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual or please visit **www.NissanUSA.com/bluetooth**.

SYSTEM GUIDE

BLUETOOTH® SYSTEM WITHOUT NAVIGATION^{1,2} (if so equipped)

CONNECTING PROCEDURE³

- The vehicle must be stationary when connecting the cellular phone.
 1. Press the  button on the steering wheel.
The system announces the available commands.
 2. Say: "Connect Phone". The system acknowledges the command and announces the next set of available commands.
 3. Say: "Add Phone". The system acknowledges the command and asks you to initiate connecting from the cellular phone handset.
 4. Initiate connecting from the cellular phone:
 - The connecting procedure varies according to each cellular phone model.
For detailed connecting instructions and a list of compatible cellular phones, please visit **www.NissanUSA.com/bluetooth**.
 - When prompted for a PIN code, enter "1234" from the handset. (The PIN code is assigned by NISSAN and cannot be changed.)
 5. Say a name for the cellular phone when the system asks you to provide one. You can give the cellular phone a name of your choice.



PHONEBOOK SETUP

- The phonebook stores up to 1,000 entries for each cellular phone paired with the system.
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth[®] system.
- If the phonebook does not download automatically, entries can be individually downloaded.
- To manually download entries:
 1. Press the  button on the steering wheel.
 2. After the tone, say "Phonebook".
 3. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the cellular phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.
 - The transfer procedure varies according to each cellular phone.
See your cellular phone's Owner's Manual for details. You can also visit **www.NissanUSA.com/bluetooth** for instructions on transferring phone numbers from NISSAN-recommended cellular phones.
 4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, choose "Store".
 5. The system confirms the name, location and number.

MAKING A CALL FROM THE PHONEBOOK

1. Press the  button on the steering wheel.
 2. After waiting for the tone, say "Call".
 3. After the next tone, speak the name of a phonebook entry. For example, "Michael Smith".
 4. Confirm the correct name is recognized by saying "Dial" after the tone.
- In some cases, names stored using all UPPERCASE letters may not be recognized by the Voice Recognition system.

MAKING A CALL BY PHONE NUMBER

1. Press the  button on the steering wheel.
2. After waiting for the tone, say "Call". The system acknowledges the command and announces the next set of available commands.
3. Say: "Number". The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- When you receive a phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button on the steering wheel.
- To hang up the cellular phone at the end of a call or to disconnect during call placement, press the  button on the steering wheel.

¹ Some jurisdictions prohibit the use of cellular telephones while driving.

² Availability of specific features is dependent upon the phone's Bluetooth® support. Please refer to your phone owner's manual for details. Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by NISSAN is under license. See www.NissanUSA.com/bluetooth for details.

³ Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some applications and features such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Compatible smartphone required. Text rates and/or data usage may apply.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or please visit www.NissanUSA.com/bluetooth.

 
 
BLUETOOTH® SYSTEM WITH NAVIGATION^{1,2} (if so equipped)

- Send predefined or custom text messages³ through your vehicle's Bluetooth® system.
- Receive texts through your vehicle's Bluetooth® system that can be read to you.
- Bluetooth® Streaming Audio allows you to use a compatible Bluetooth® device to play audio files. Your compatible device can be connected to the vehicle's audio system, allowing audio files to play through the vehicle's speakers.

SYSTEM GUIDE

CONNECTING PROCEDURE

1. Press the **APPS** button on the control panel.
2. Select the “Settings” key **1**.
3. Select the “Phone & Bluetooth” key **2**.
4. Select the “Connect New Device” key **3**.
5. Initiate the connecting process from the handset.
The system will display the message: “Is PIN XXXXXX displayed on your Bluetooth® device?”
If the PIN is displayed on your Bluetooth® device, select “Yes” to complete the connecting process.

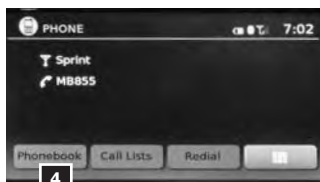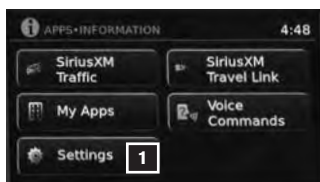

VEHICLE PHONEBOOK

To access the vehicle phonebook:

1. Press the **PHONE** button on the control panel.
2. Select the “Phonebook” key **4**.
3. Choose the desired entry from the displayed list.

MAKING A CALL FROM THE PHONEBOOK

1. Press the **VOICE** button on the steering wheel to activate Voice Recognition.
2. Say: “Call”.
3. Say a name in the vehicle phonebook to call that entry.

MAKING A CALL BY PHONE NUMBER

1. Press the **VOICE** button on the steering wheel to activate Voice Recognition.
2. Say: “Phone”.
3. Say: “Dial Number”. When prompted, speak the digits of the number you wish to dial.
4. Say: “Dial”.

 
RECEIVING A CALL

To accept the incoming call, either:

- Press the **VOICE** button on the steering wheel, or
- Select the green **CALL** icon on the screen.

To reject the incoming call, either:

- Press the **END** button on the steering wheel, or
- Select the red **REJECT** icon on the screen.

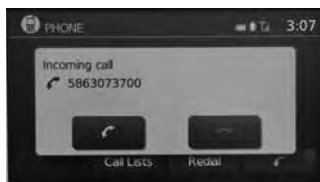

¹ Some jurisdictions prohibit the use of cellular telephones while driving.

² Availability of specific features is dependent upon the phone's Bluetooth® support. Please refer to your phone owner's manual for details. Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by NISSAN is under license. See www.NissanUSA.com/bluetooth for details.

³ Laws in some jurisdictions may restrict the use of “Text-to-Speech”. Some applications and features such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Compatible smartphone required. Text rates and/or data usage may apply.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner's Manual or please visit www.NissanUSA.com/bluetooth.



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

- 1 NAV** button – Press to access the functions of the Navigation System.
- 2 MAP** button – Press to display the current location map screen.
- 3 VOL** knob – Turn right to increase the volume or left to decrease the volume.
- 4** key – Select to zoom the map in.
- 5** key – Select to zoom the map out.
- 6 APPS** button – Press to access SiriusXM Traffic, MyApps, SiriusXM Travel Link, Voice Commands and Settings.
- 7** button – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **TUNE** knob. Press and hold to turn the display off. Press again to turn the display on.
- 8 BACK** button – Press to return to the previous screen.
- 9 TUNE** knob – Turn to navigate the items in a list. Press to select a menu item.
- 10** Touch-screen display
- 11** SD-card location – An SD-card with map data must be inserted here for map functions to operate.

For more information, refer to your Navigation System Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

MEMO

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- Navigation Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the iPhone App Store or Android Google Play Store for download to your smartphone)



To view detailed instructional videos,
go to www.nissanownersinfo.mobi/2016/nv200cargo
or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

