



SIENNA

2 0 1 6



QUICK REFERENCE GUIDE

2016 Sienna

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Sienna.

A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Sienna operations. Every Sienna owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	9
Fuel tank door release and cap	8
Hood release	8
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry¹	6
Light control-Instrument cluster	9
Smart Key system^{1,2}	7

FEATURES/OPERATIONS

Air conditioning/heating	24-25
Audio	22
Auto lock/unlock²	10
Automatic transmission	10
Bluetooth® Device Pairing Section	37-46
Bottle holders	29
Blind Spot Monitor (BSM)	20
Cruise control	20
Cup holders	30
Door-Power back	18
Doors-Power sliding	17
Driver Easy Speak	20
Dynamic Radar Cruise Control (DRCC)	21
Enhanced VSC OFF button	26
Garage door opener (HomeLink®)^{2,3}	27
Hill-start Assist Control (HAC)	27
Lights¹ & turn signals	11-12
Moon roof	19
Parking brake	10
Power outlets-12V DC	28
Power outlets-120V AC	28
Rear seat entertainment system	26
Seat adjustments-Front	14
Seat adjustments-Rear	14
Seat heaters	25
Seats-Head restraints	13
Seats-Removing second row center seat	15
Seats-Removing second row outside seats	15
Seats-Stowing third row seats	16
Steering wheel switches and telephone controls	23
Sunshade-Side	19
Tilt and telescopic steering wheel	11
Windows	18
Windows-Quarter	18
Windshield wipers & washers	13

SAFETY AND

EMERGENCY FEATURES

Child restraint anchors	31
Door locks	31
Doors-Child safety locks	31
Floor mat installation	35
Seat belts	32
Seat belts-Shoulder belt anchor	31
Spare tire & tools	33
Star Safety System™	34-35
Tire Pressure Monitoring (warning) System	32

¹ Visit your Toyota dealer for information on customizing this feature.

 
² Programmable by customer. Refer to the Owner's Manual for instructions and more information.

³ HomeLink® is a registered trademark of Gentex Corporation.


OVERVIEW

Instrument panel

Steering wheel controls

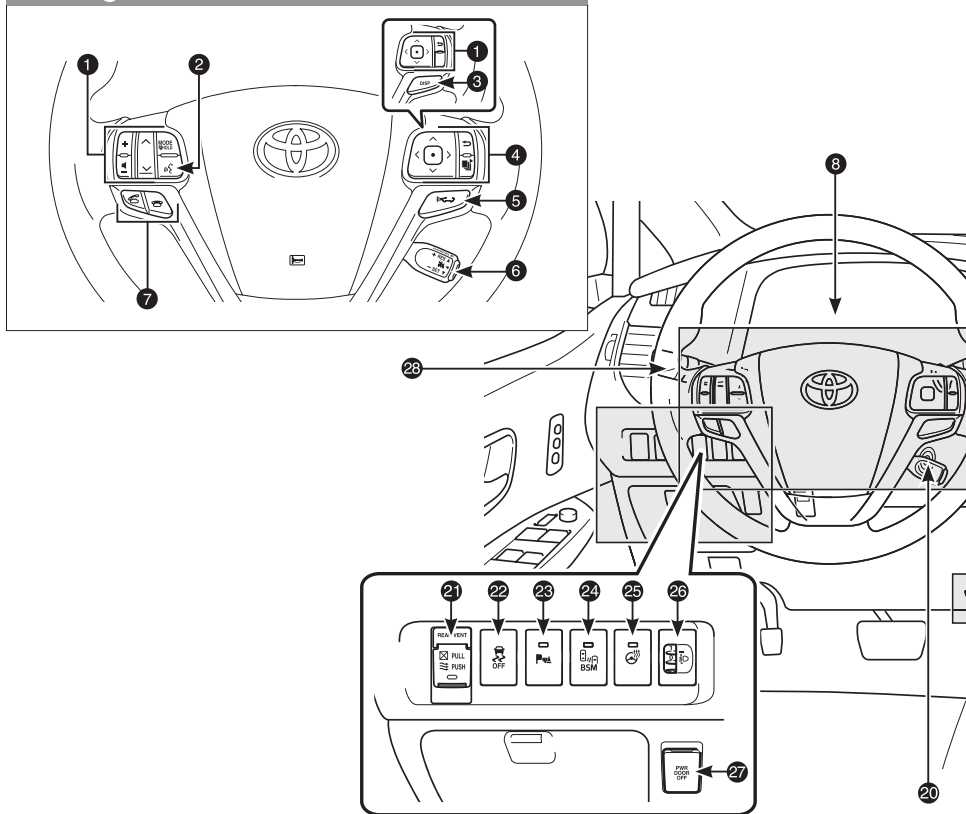

- ❶ Audio remote control switches^{1,2}
- ❷ Talk switch²
- ❸ “DISP” switch¹
- ❹ Meter control switches¹
- ❺ Vehicle-to-vehicle distance button¹
- ❻ Cruise control switch
- ❼ Telephone switches²
- ❽ Gauges and meters
- ❾ Wiper and washer controls
- ❿ “ENGINE START STOP” switch (Smart Key)¹
- ⓫ Audio system^{1,2}/Navigation system^{1,2}
- ⓬ Emergency flasher button
- ⓭ Air Conditioning controls
- ⓮ Outside rearview mirrors¹/Rear window defogger button/Windshield wiper de-icer¹
- ⓯ Seat heater switches¹
- ⓰ Power outlets (12V)

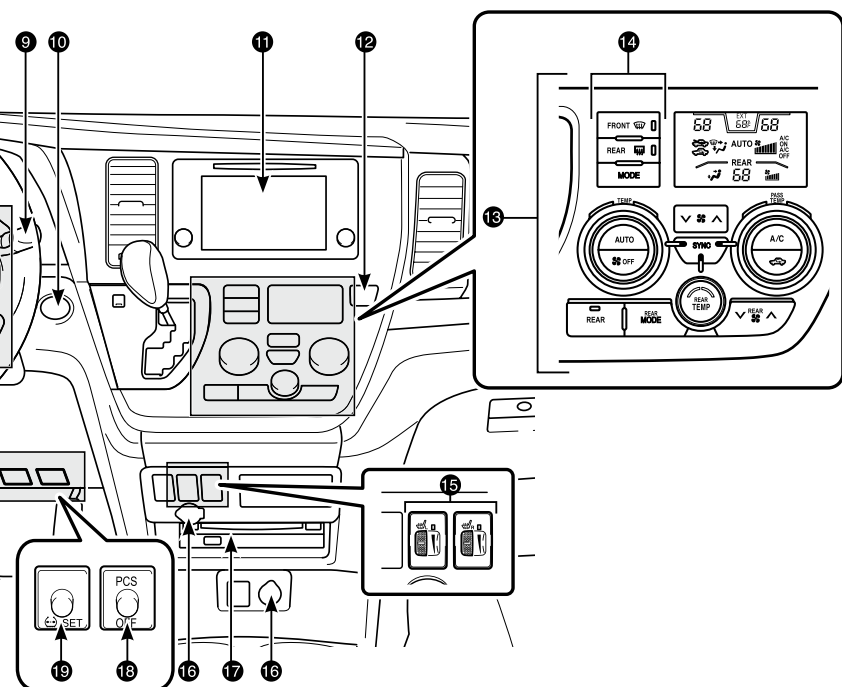 


- 17 Blu-Ray/DVD player¹
- 18 Pre-Collision System (PCS) braking off switch¹
- 19 Tire pressure warning reset switch
- 20 Ignition switch¹
- 21 Power quarter window switch¹
- 22 VSC OFF switch
- 23 Intuitive parking assist switch¹
- 24 Blind Spot Monitor (BSM) main switch¹
- 25 Heated steering wheel switch
- 26 Manual headlight leveling dial¹
- 27 Power sliding door¹ / Power back door main switch¹
- 28 Headlight, turn signal and front fog light¹ controls

¹ If equipped


² For details, refer to the “Navigation System Owner’s Manual” and “2016 Entune™ Audio Quick Reference Guide.”

Instrument cluster

 Vehicles with monochrome display

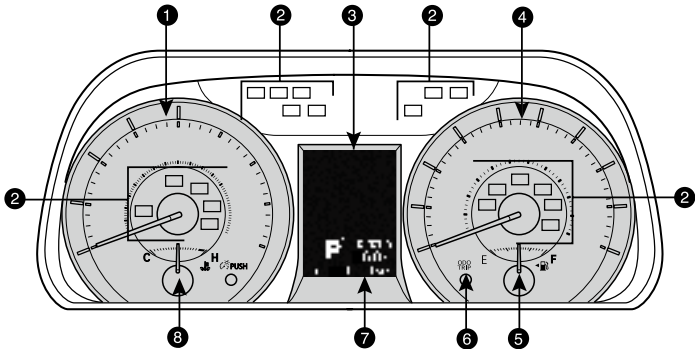

Vehicles with color display

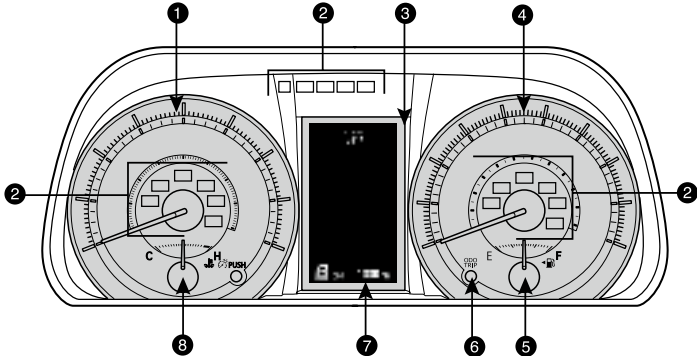 

- 1 Tachometer
- 2 Service indicators and reminders
- 3 Multi-information display
- 4 Speedometer
- 5 Fuel gauge
- 6 Odometer/Trip meter display change button
- 7 Odometer and trip meter display
- 8 Engine coolant temperature

Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2016 Owner’s Manual.



Brake system warning¹



Driver seat belt reminder
(alarm will sound if speed is over 12 mph)



Charging system warning¹

	Low engine oil pressure warning ¹		Electric power steering system warning light ¹
	Open door warning		Master warning light ¹
	Airbag SRS warning ¹		Low fuel level warning light
	SRS AIR BAG ON-OFF indicator		Cruise control indicator ^{2,4}
	Vehicle Stability Control OFF indicator ^{1,5}		Cruise control SET indicator
	Low Tire Pressure Warning ¹		Radar cruise control indicator ^{3,4}
	Low windshield washer fluid level warning ¹		Pre-Collision System indicator ^{1,6}
	Engine oil replacement reminder ¹		ECO Driving Indicator Light ¹
	Third seat fold incomplete warning		Security indicator
	Anti-lock Brake System warning ¹		ICE warning indicator
	Headlight low/high beam indicator		
	Automatic high beam indicator ⁴		
	Fog light indicator		
	Turn signal indicator		
	Shift position indicators		
	Slip indicator/Hill-start Assist Control indicator ^{1,5}		
	Blind Spot Monitor warning/Blind Spot Monitor outside rearview mirror indicators		
	Malfunction/Check Engine indicator ¹		
	Arrow direction indicates fuel tank door position		

¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

² If this light flashes, refer to "Cruise control," Section 4-5, 2016 Owner's Manual.

³ If this light flashes, refer to "Dynamic Radar Cruise Control," Section 4-5, 2016 Owner's Manual.

⁴ The indicator flashes to indicate a malfunction.

⁵ The indicator flashes to indicate that the system is operating.

⁶ The indicator flashes faster than usual to indicate that the system is operating.

Keyless entry

Locking operation

Type A

Type B

Type C



Unlocking operation

Type A

Type B

Type C

Push ONCE: Driver door
TWICE: ALL doors



NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

Power sliding door operation (if equipped)

Left side power sliding door

Type A

Type B

Right side power sliding door

Type A

Type B





Power back door operation (if equipped)

Type A

Type B



Panic button (if equipped)

 


Push and hold



Smart Key system (if equipped)

Start function

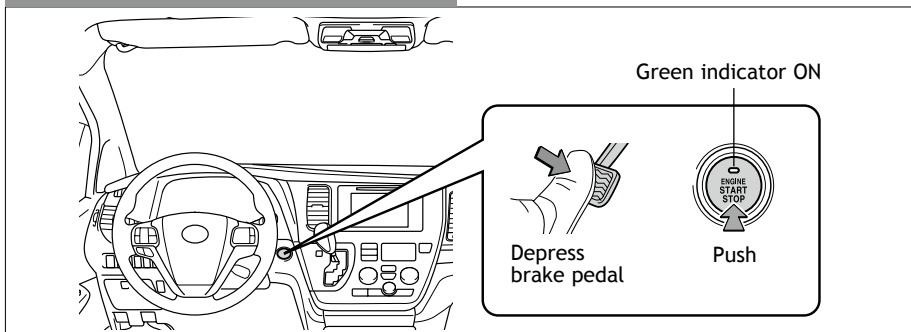

NOTE: Gear shift lever must be in Park and brake pedal depressed.

Power (without starting engine)

Without depressing the brake pedal, pressing the “ENGINE START STOP” switch will change the operation mode in succession from:

ACCESSORY

Accessories such as the radio will operate.



ON

Power ON; the engine is not running.



 
OFF

All systems OFF.


Unlocking operation




Locking operation

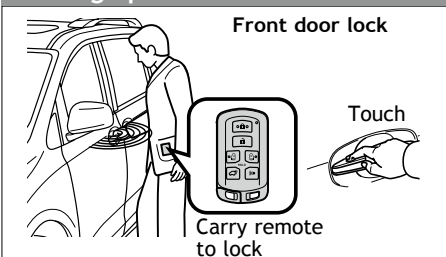

Sliding door unlock

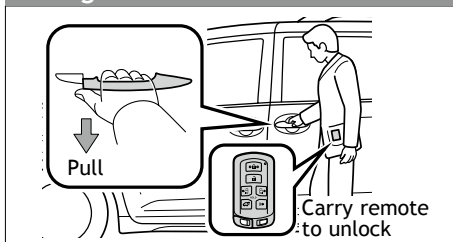 


Back door lock/unlock

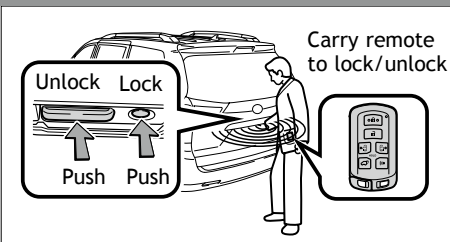 


* Driver door unlocking function can be programmed to unlock driver side doors only, or all doors. Grasping any passenger door handle will unlock all doors.

NOTE: Doors may also be locked/unlocked using remote.

 Fuel tank door release and cap

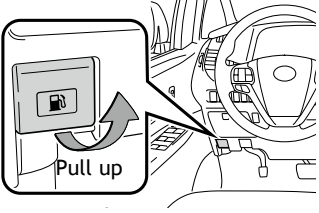


Pull up

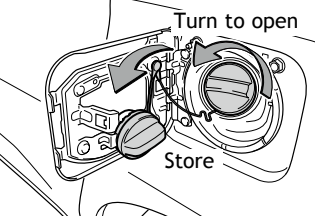 

Turn to open

 
Store

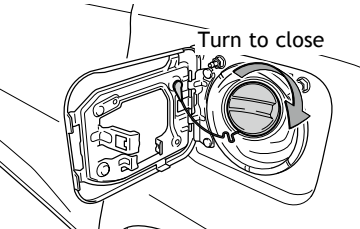


Turn to close

NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

 
Hood release

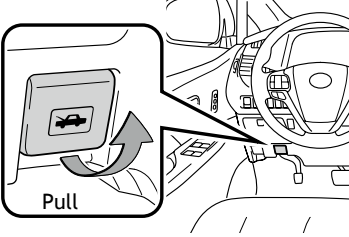

Pull

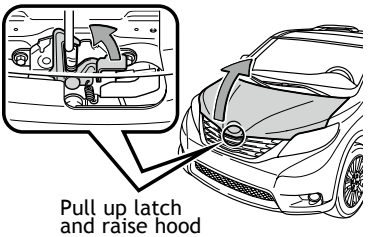 


Pull up latch and raise hood

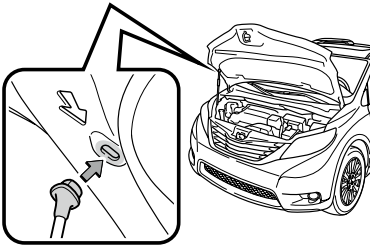 


Insert rod to hold hood open

 Light control-Instrument cluster

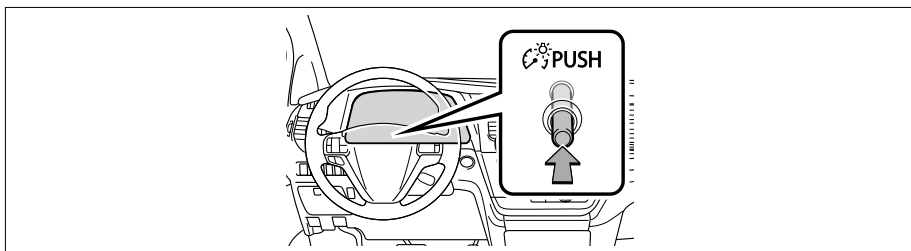

Pressing the button will adjust the brightness of the meter panel lights. The brightness level of the meters when the surroundings are bright (day mode) and dark (night mode) can be adjusted individually.

 Engine maintenance

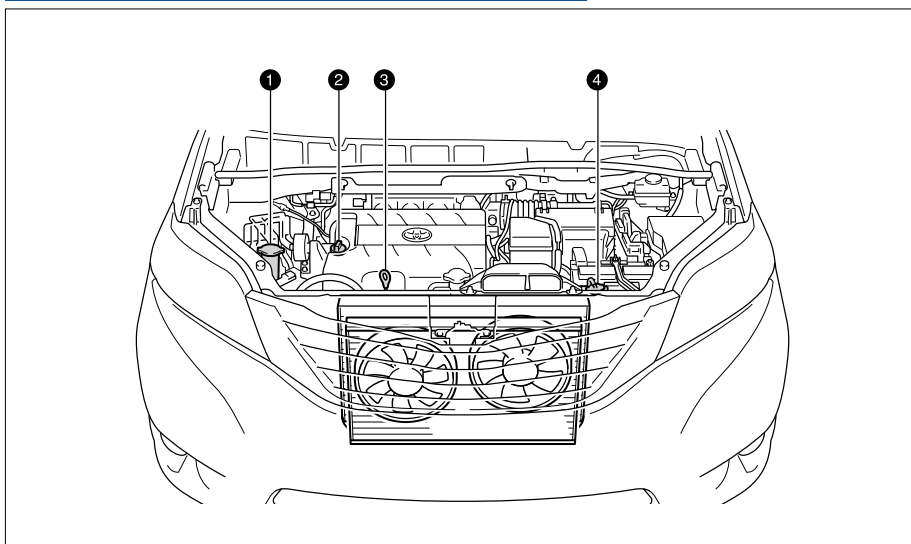

- ❶ Windshield and rear window washer fluid tank
- ❷ Engine oil filler cap
- ❸ Engine oil level dipstick
- ❹ Engine coolant reservoir

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Warranty & Maintenance Guide.”

FEATURES/OPERATIONS

 
Auto lock/unlock

Automatic door locks can be programmed to operate in four different modes, or turned OFF.

- Doors lock when shifting from Park.
- Doors lock when the vehicle speed is approximately 12 mph or higher.
- Doors unlock when shifting into Park.
- Doors unlock when the driver's door is opened within 10 seconds after turning the "ENGINE START STOP" switch OFF. (Vehicles with a Smart Key system)
- Doors unlock when the driver's door is opened within 10 seconds after turning the ignition switch to the "ACC" or "LOCK" position. (Vehicles without a Smart Key system)

Refer to the Owner's Manual for more details.

Automatic transmission

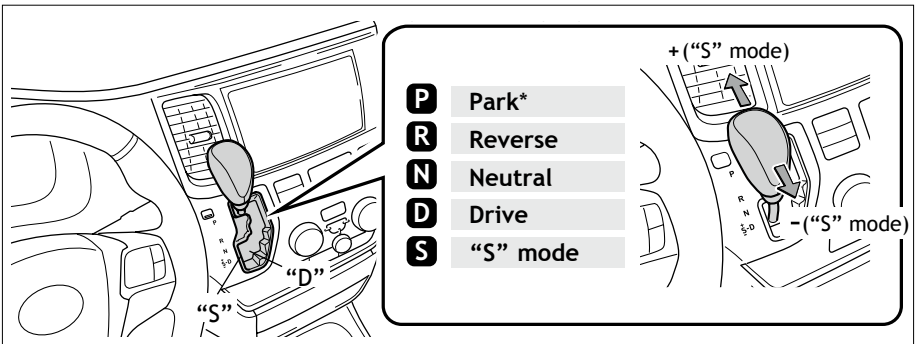

* The "ENGINE START STOP" switch/ignition switch must be "ON" and the brake pedal depressed to shift from Park.

 
"S" (Sequential) mode

Shift the shift lever to "S" position from "D" position.

- + : Upshift (push and release)
- : Downshift (pull and release)


Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Parking brake

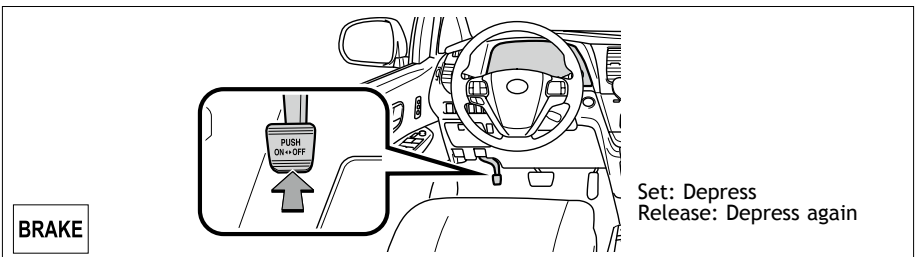


Tilt and telescopic steering wheel

 Lock release lever

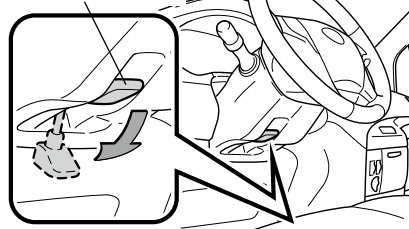

Angle

 Length

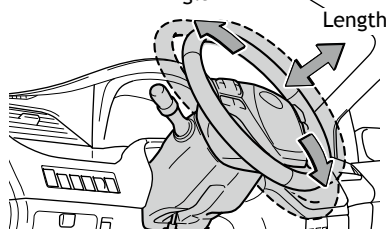


Hold wheel, push lever down, set angle and length, and return lever.


NOTE: Do not attempt to adjust while the vehicle is in motion.

Lights & turn signals

 Headlights

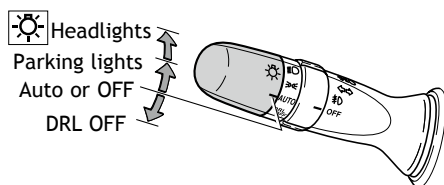

Without automatic high beam

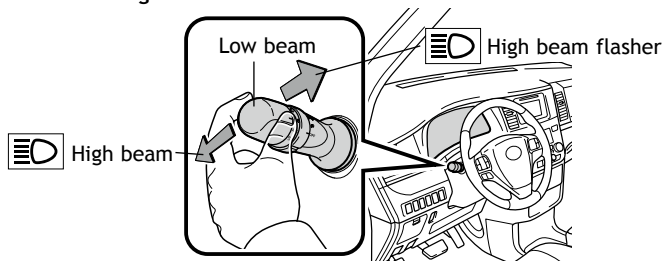 


-Daytime Running Light system (DRL) Automatically turns on the headlights at a reduced intensity on some models.

-Automatic light cut off system Automatically turns lights off after a delay of 30 seconds, or the lock switch on remote may be pushed after locking.


FEATURES/OPERATIONS

Automatic high beam (if equipped)

 Activate*

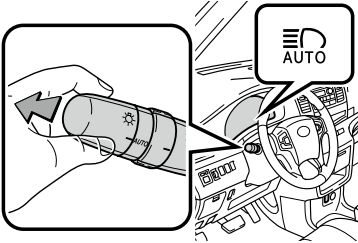


Deactivate

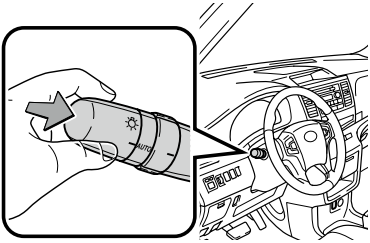 

* Refer to the *Owner's Manual* for details on activating the automatic high beams.

Front fog lights (if equipped)

 
Type A

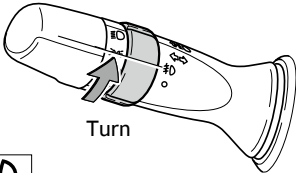

Turn



 
Type B

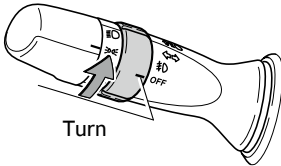



Turn

Front fog lights come on only when the headlights are on low beam.

 Turn signals

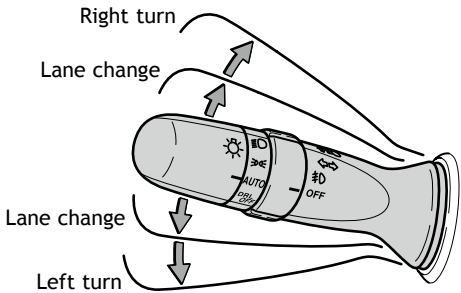

  Headlight beam level control (if equipped)

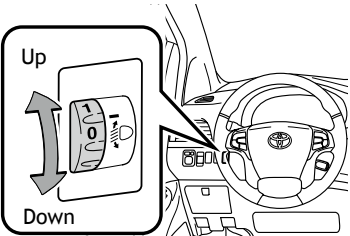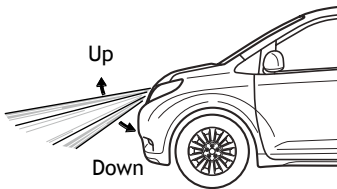


Rotating the dial downward will lower the angle of the beam.


Windshield wipers & washers

Front

 Type A

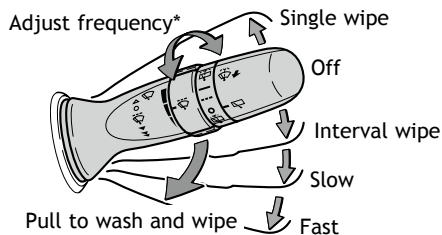


Type B

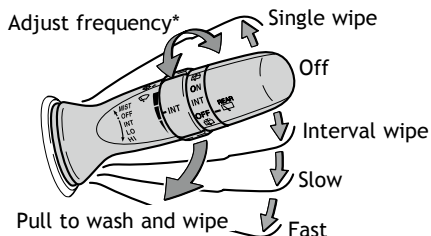 


*** Intermittent windshield wiper frequency adjustment**
Rotate to increase/decrease wipe frequency.

 Type A

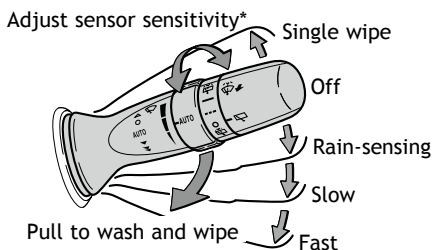


Type B

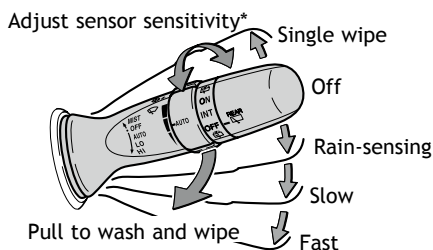 


*** Rain-sensing windshield wiper** Rotate to increase/decrease sensor sensitivity.

Rear

 Type A

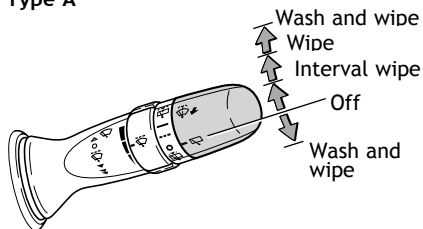


Type B

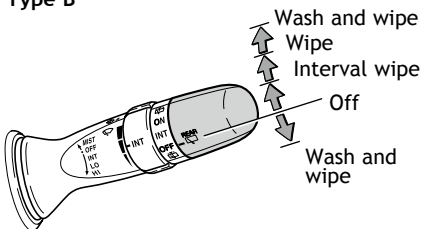 


Seats-Head restraints

 
Front and second row outside seats

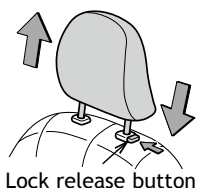

 Second row center (8-passenger models) and third row center seats

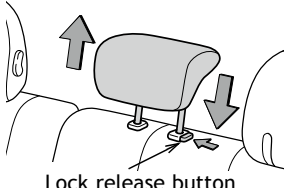


Third row outside seats

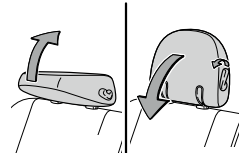 


Seat adjustments-Front

 Manual seat

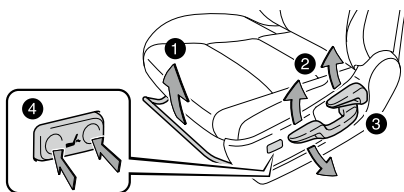

Power seat

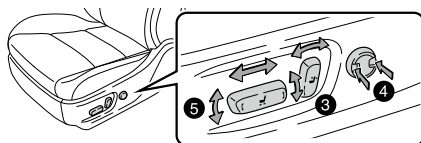 


- ① Seat position (forward/backward)
- ② Height crank (driver side only)
- ③ Seatback angle
- ④ Lumbar support (if equipped)
- ⑤ Seat position, cushion angle and height


Seat adjustments-Rear

Second row seat

 
Tip-up seat (7-passenger models)

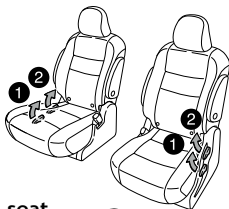

Tip-up seat (8-passenger models)

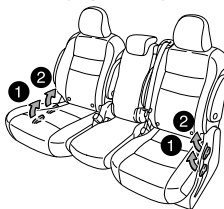 


Ottoman seat

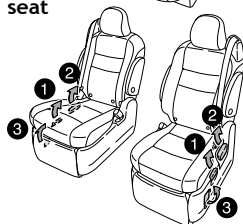 


Third row seat

 Manual

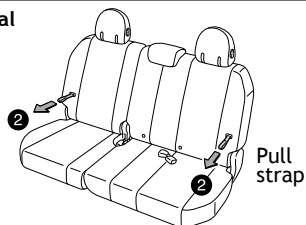

Power

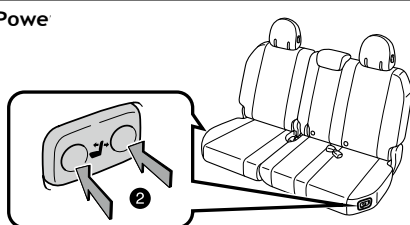 


- ① Seat position (forward/backward)
- ② Seatback angle
- ③ Ottoman angle


Refer to the *Owner's Manual* for more details.

Seats-Removing second row outside seats

 
Tip-up seats

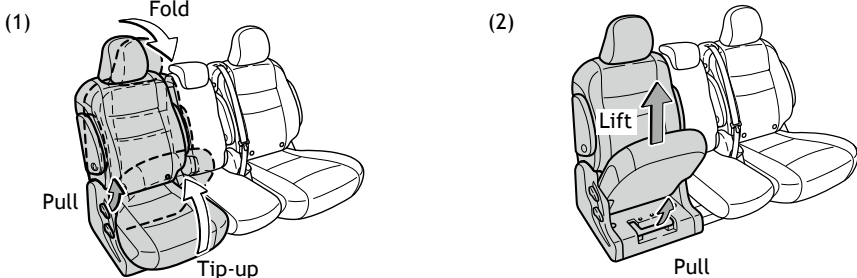

Ottoman seats

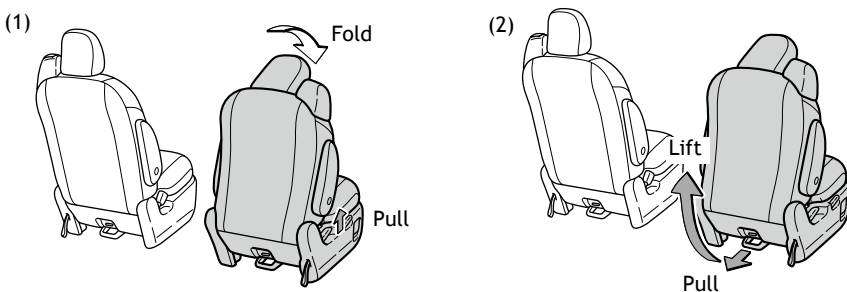 


 Seats-Removing second row center seat (if equipped)

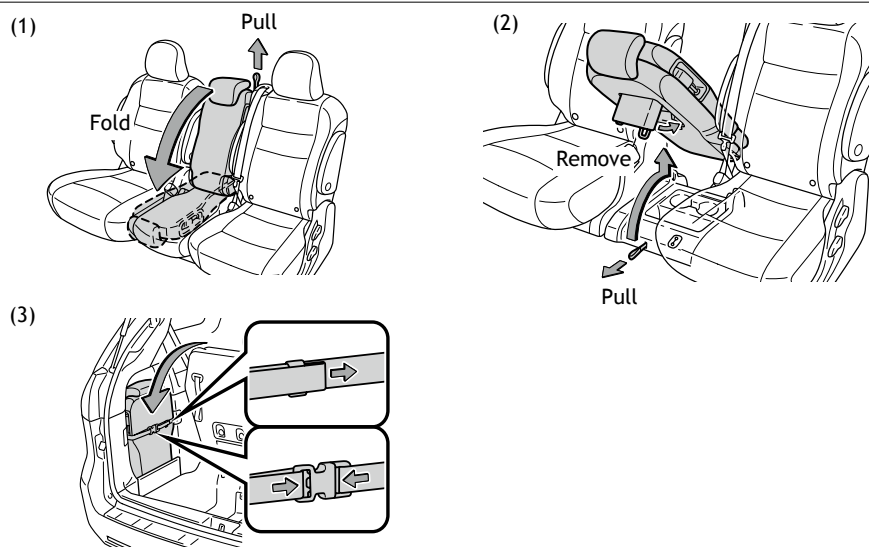


Seats-Stowing third row seats

 Manual

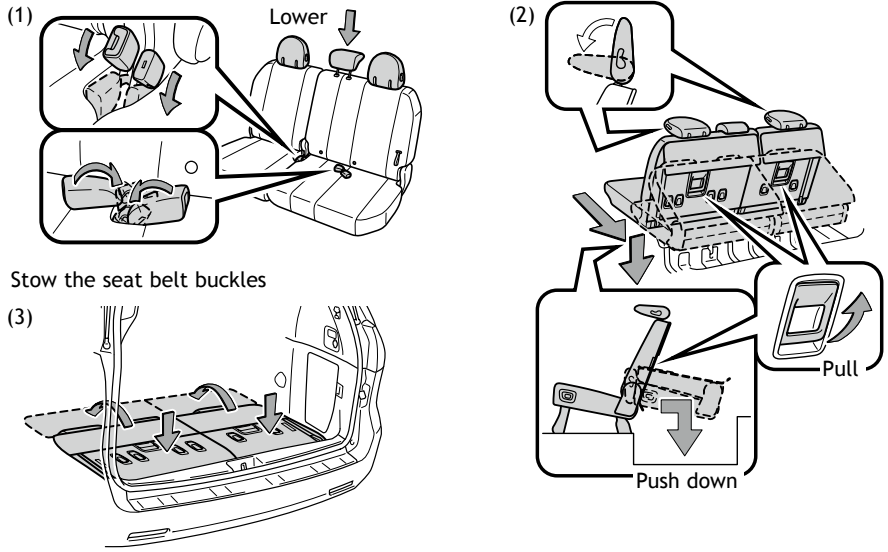

Power

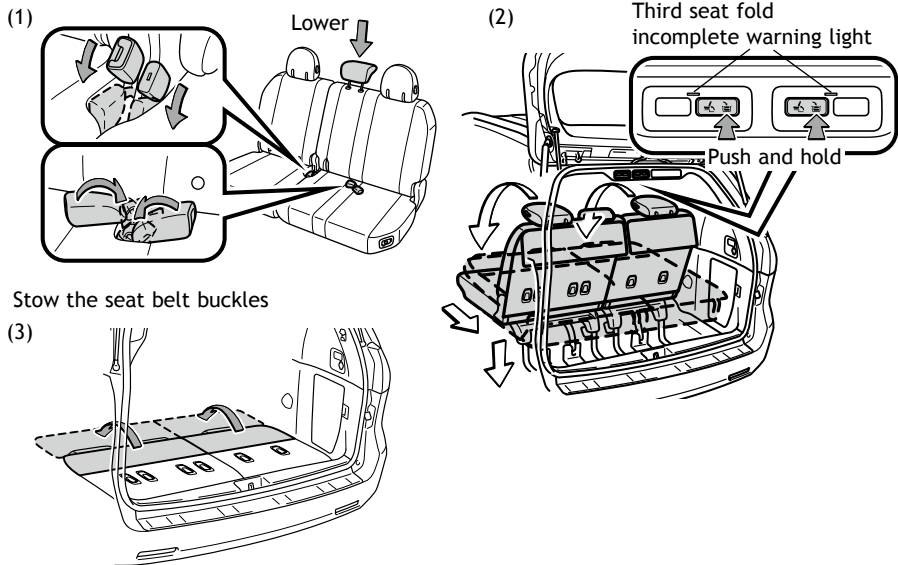 


An alarm will sound for 10 seconds and the **3RD SEAT** indicator will light up on the instrument panel if the seat is not fully open or stowed when vehicle is shifted out of Park.

Refer to the *Owner's Manual* for more details.

Doors-Power sliding (if equipped)


ON/OFF switch

 Instrument panel

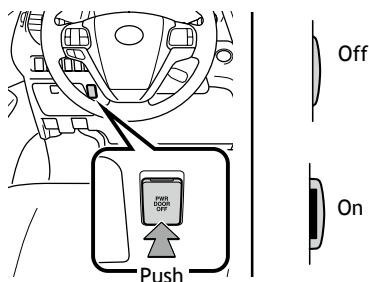


Opening/Closing

 Front overhead console

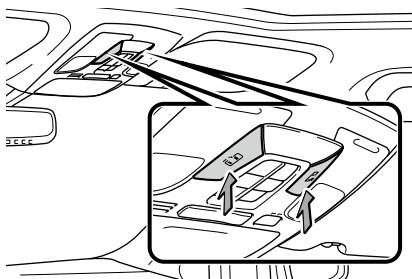

Open: Push
Close: Push again

 Center pillar

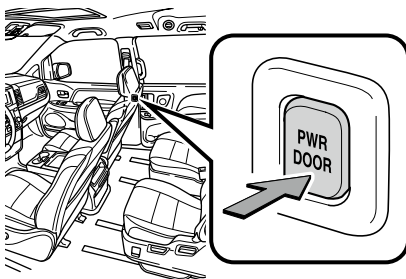

Open: Push
Close: Push again

Power

- Sliding doors will not fully open if the sliding door window is open.
- Power sliding doors will open only when gear selector is in the “P” (Park) position, and doors are unlocked. Refer to the *Owner’s Manual* for more details.
- An alarm will sound if a sliding door is open and the vehicle is shifted out of Park.
- Left sliding door will not open if gas door is open.
- If battery is disconnected, the power sliding doors need to be reinitialized.

Refer to the *Owner’s Manual* for more details.

 
Manual

- Sliding doors will not lock into the open position if the sliding door window is open.

Door-Power back (if equipped)

ON/OFF switch

Instrument panel

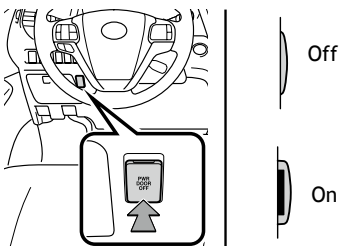


Off

On

Push

Opening/Closing

 Front overhead console

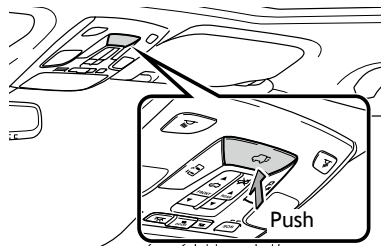


Push

Open: Push
Close: Push again

NOTE: If battery is disconnected, the power back door needs to be reinitialized. Refer to the *Owner's Manual* for more details.

 Windows

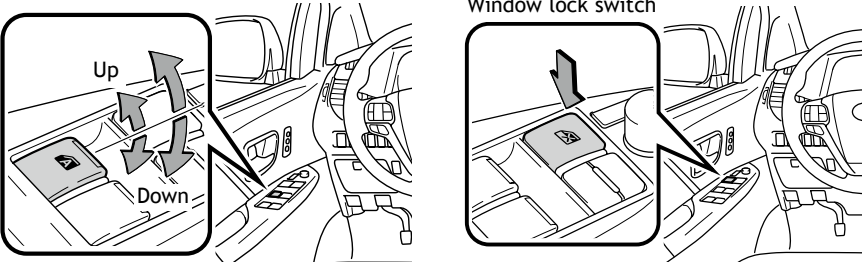

Up

Down

 
Window lock switch

Automatic operation Push the switch completely down or pull it completely up and release to fully open or close. To stop window partway, lightly push the switch in the opposite direction.


Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Windows- Quarter

Manual

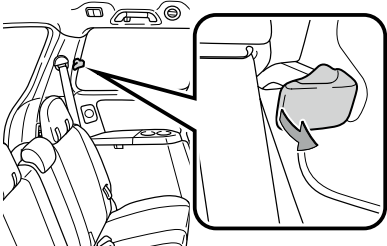

Power

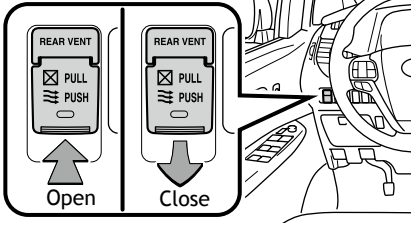 

REAR VENT

 
REAR VENT

Open

Close


Moon roof (if equipped)

Front moon roof

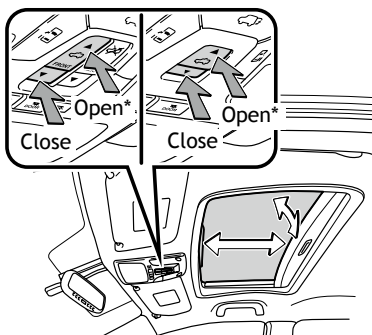

* Tilt: Push
Open: Push again

 
Rear moon roof (if equipped)

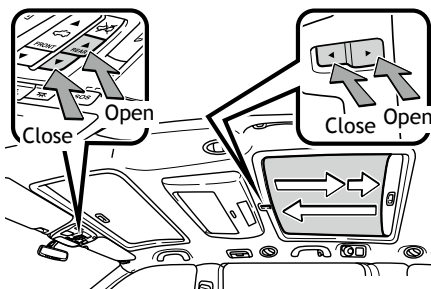


Push once to open partway;
again to open completely.

Sunshade-Side (if equipped)

 Rear side window

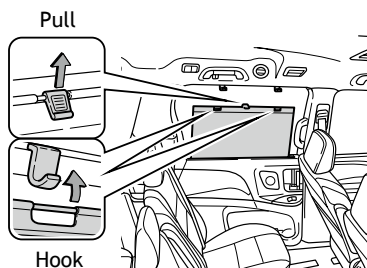


Rear quarter window

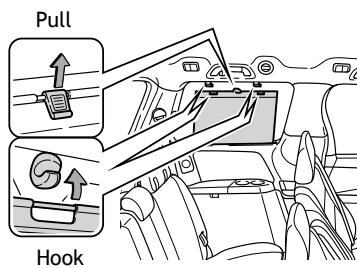 

Driver Easy Speak

This feature utilizes the vehicle’s built-in microphone to amplify the driver’s voice through the rear speakers. To activate this feature, select “Driver Easy Speak” from the Apps screen on the audio unit. The feature must be turned on every time you enter the vehicle, and automatically turns off when any door (including the liftgate) is opened. There are 7 volume settings.

 Blind Spot Monitor (BSM)
(if equipped)

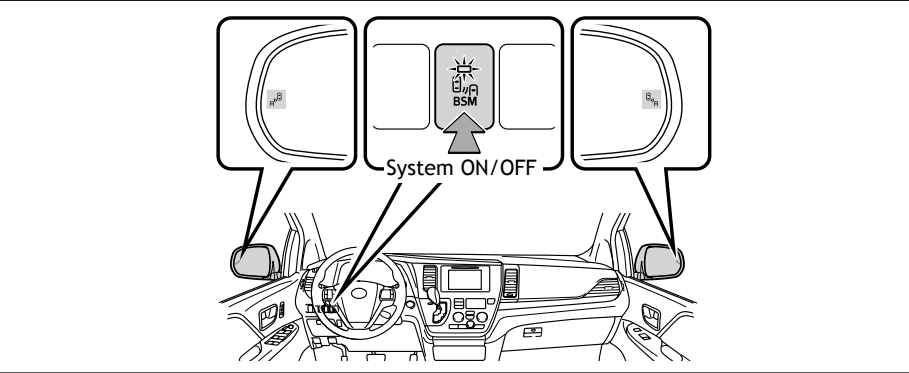

The Blind Spot Monitor is a system that assists the driver in safely changing lanes. The system uses radar sensors to detect vehicles that are traveling in an adjacent lane in the area that is not reflected in the outside rearview mirror (the blind spot), and advises the driver of the vehicles’ presence via the outside rearview mirror indicator.

Refer to the *Owner’s Manual* for more details on this system before attempting to use it.

Cruise control (if equipped)

Turning system ON/OFF

Functions

 
¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed reaches 25 mph.

Dynamic Radar Cruise Control (DRCC) (if equipped)


Refer to the *Owner's Manual* for more details and complete safety precautions before attempting to use "Dynamic Radar Cruise Control."

Fixed speed mode

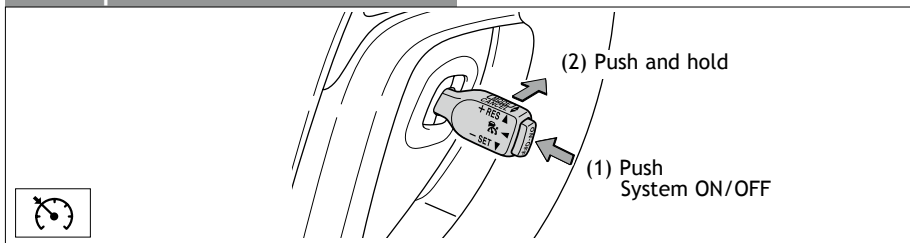

To set, cancel and resume a speed Refer to "Functions" in the *Cruise Control* section, and to the *Owner's Manual* for more details.

 
Distance control mode

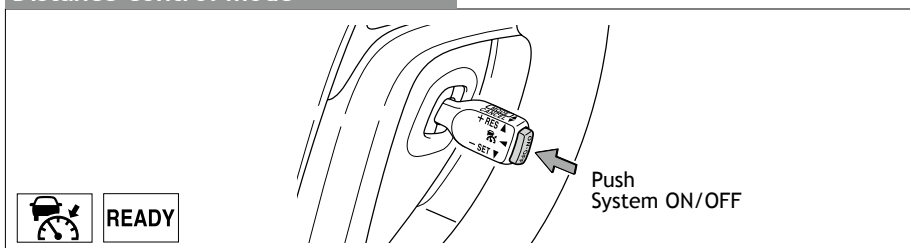

Vehicle will cruise at a set speed, decelerate to maintain a selected distance from a slower vehicle traveling in front of you, and accelerate back up to the selected speed if the vehicle in front changes lanes or speeds up.

To set, cancel and resume a speed Refer to "Functions" in the *Cruise Control* section, and your *Owner's Manual* for more details.

 NOTE: Once vehicle speed is set, pushing lever up toward "+ RES" will increase speed to the nearest 5 mph, and then in 5 mph increments. Pushing lever down toward "- SET" will reduce speed in the same way.

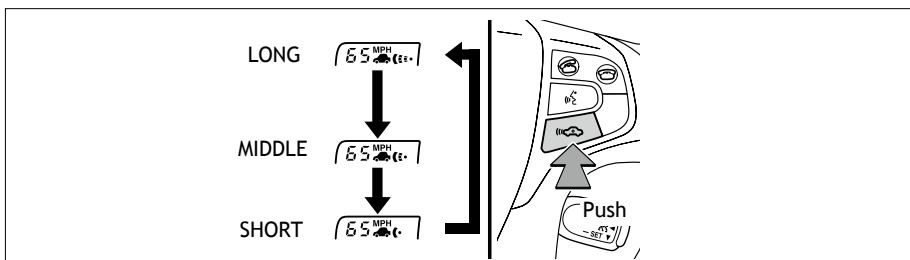

To change the vehicle-to-vehicle distance

Push the distance button to cycle through the settings, which will change progressively from LONG to MIDDLE to SHORT.

Audio

Type 1

Eject CD

Touch screen display

Push to pause or resume playing

Push to display AUDIO screen

SETUP button

Push to display vehicle information

Push to turn ON/OFF

Seek station/ CD track select

Push to display Bluetooth® hands-free system

Turn to tune radio stations manually or select tracks or files

Type 2 (additional functions)

AUDIO

APPS

HOME

PWR VOL

 
SEEK TRACK

TUNE SCROLL

MAP card slot

Refer to the “NAVIGATION SYSTEM OWNER’S MANUAL” and “2016 ENTUNE™ AUDIO QUICK REFERENCE GUIDE.”

USB/AUX port

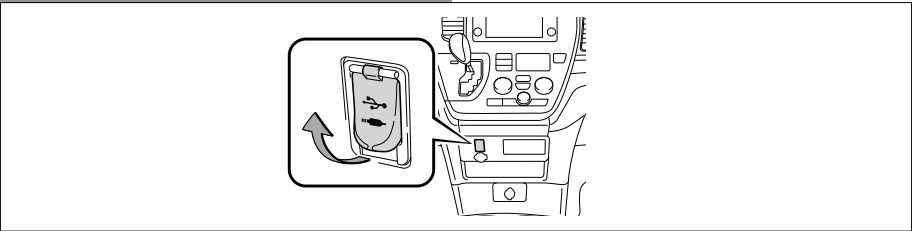


USB port (if equipped)
By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle’s speaker system.

AUX port
By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle’s speaker system while in AUX mode.

Steering wheel switches and telephone controls (Bluetooth®)

 Steering wheel telephone switches

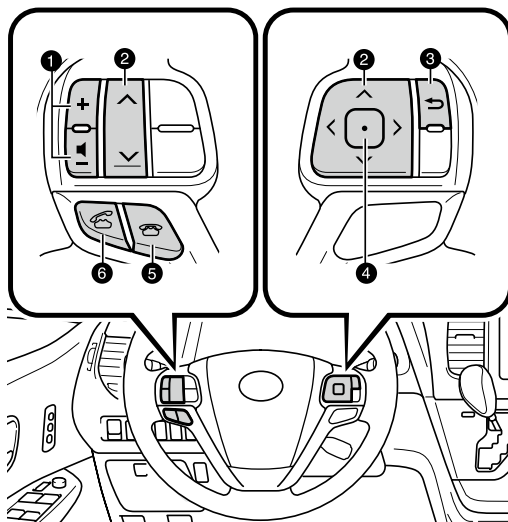

❶ Volume control

❷ “^ v”

Use to search within the selected audio medium (radio, CD, etc.).

 
❸ Back switch

❹ Enter switch

❺ End call

❻ Start call

Microphone

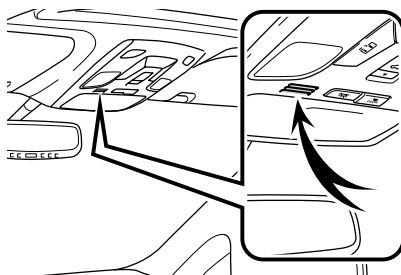


Bluetooth® technology allows dialing or receipt of calls without removing your hands from the steering wheel or using a cable to connect the compatible telephone and the system.

Refer to the “Bluetooth® Device Pairing Section” in this guide for more information about phone connections and compatibility.

Air conditioning/heating


Front air conditioning

 Control panel

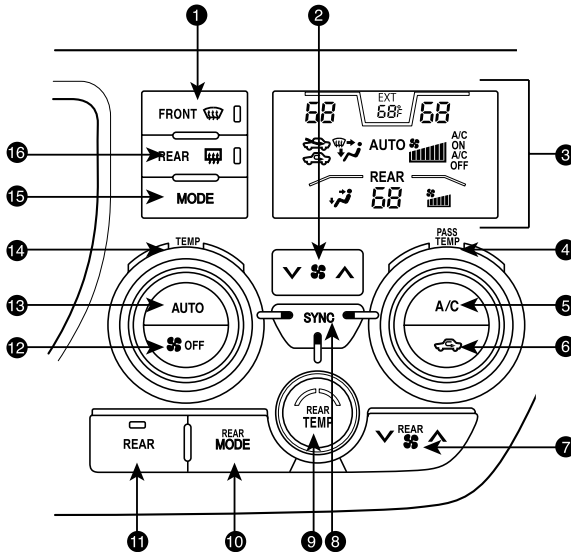



- ① Windshield defogger
- ② Front fan speed
- ③ Display
- ④ Temperature selector (front passenger side)
- ⑤ Air Conditioning ON/OFF
- ⑥ Recirculated cabin air (outside air when OFF)
- ⑦ Rear fan speed
- ⑧ Synchronizes driver, front passenger and rear temperature settings
- ⑨ Temperature selector (rear)
- ⑩ Rear airflow vent
- ⑪ Rear button indicator display
- ⑫ Front fan ON/OFF
- ⑬ Automatic climate control ON
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.
- ⑭ Temperature selector (driver side)
- ⑮ Airflow vent
In “” mode, use outside air (“” indicator “OFF”) to reduce window fogging. “” mode uses fresh air only.
- ⑯ Outside rearview mirror/Rear window defogger and windshield wiper de-icer (if equipped)

 Rear automatic air conditioning

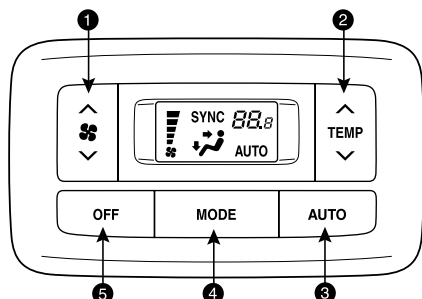


- ❶ Fan speed
- ❷ Temperature selector
- ❸ Automatic climate control ON
- ❹ Airflow vent
- ❺ Climate control OFF

  Seat heaters (if equipped)

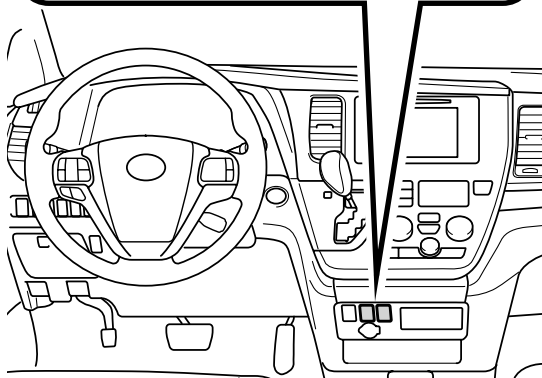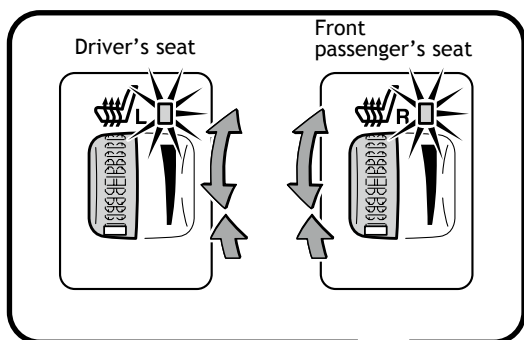

 
Rear seat entertainment system
(if equipped)

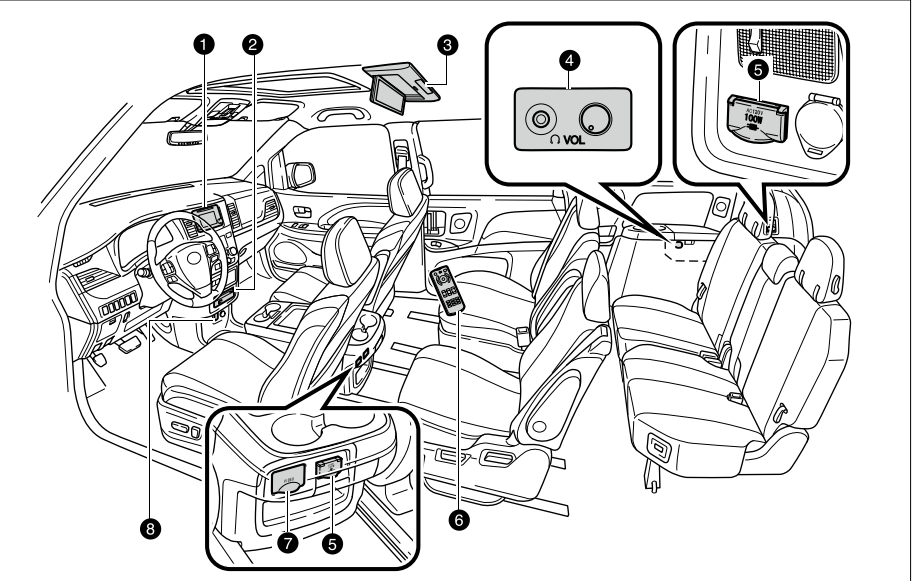

- ① Front audio
- ② Blu-ray / DVD player
- ③ Display
- ④ Headphone jacks and headphone volume control
- ⑤ 120V AC Power outlets
- ⑥ Remote control
- ⑦ AV input port
- ⑧ HDMI port

Refer to Section 7 of the *Sienna Owner's Navigation Manual* for more information.


 
Enhanced VSC OFF button

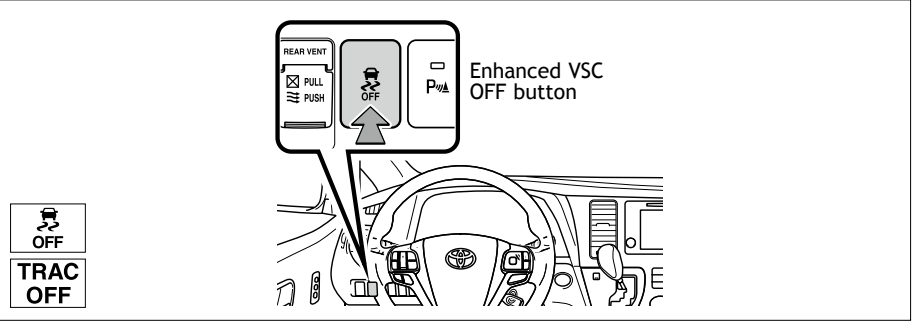

The Enhanced VSC OFF button is used to switch between modes related to the TRAC and Enhanced VSC functions.

Refer to Section 4-5 of the *Owner's Manual* for more information.

  
Hill-start Assist Control (HAC) (if equipped)

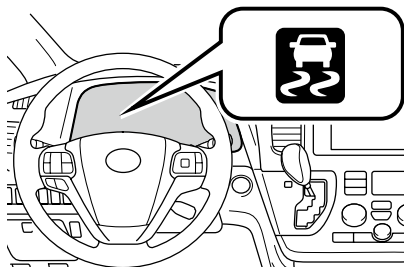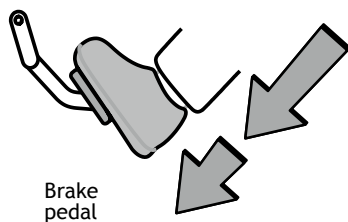

HAC helps prevent rolling backwards on an incline. To engage, push further down on brake pedal while at a complete stop until a beep sounds and slip indicator illuminates. HAC holds for approximately 2 seconds after releasing brake pedal.

Refer to the *Owner's Manual* for more details.

 Garage door opener (HomeLink®)* (if equipped)

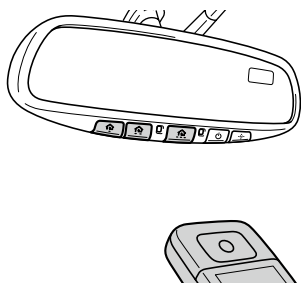

Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.

Refer to "Garage door opener," Section 3-8 in the *Owner's Manual*, for more details.

 
For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.

* HomeLink® is a registered trademark of Gentex Corporation.


Power outlets-12V DC

Instrument panel


Type A

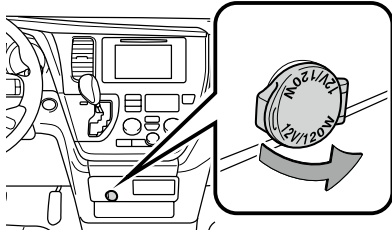

Type B

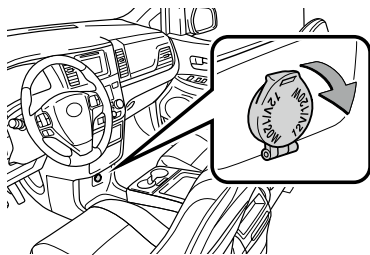 

Luggage compartment

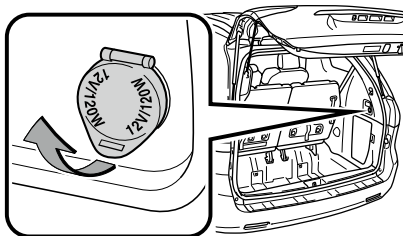 


Ignition/“ENGINE START STOP” switch must be in “ACC” or “ON” position for use.


Power outlets-120V AC (if equipped)

Console box

 
Type A

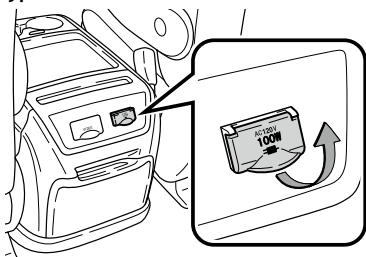

Type B

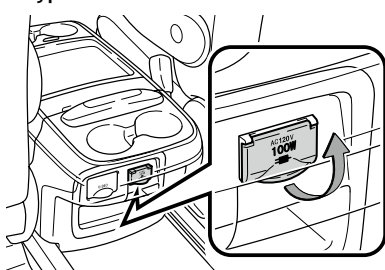 


Luggage compartment

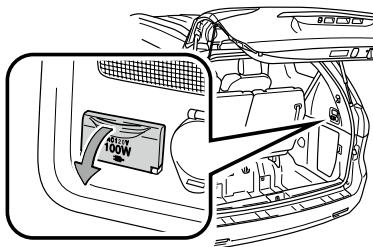 


Ignition/“ENGINE START STOP” switch must be in the “ON” position for use.

Bottle holders

 Front doors

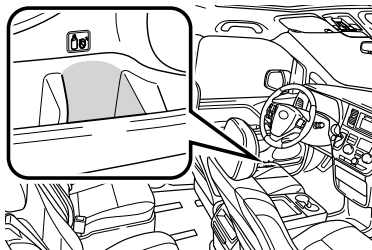


Sliding doors

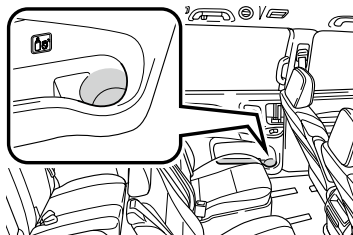 

NOTE: Do not place open containers in the bottle holders.


Cup holders

 Instrument panel

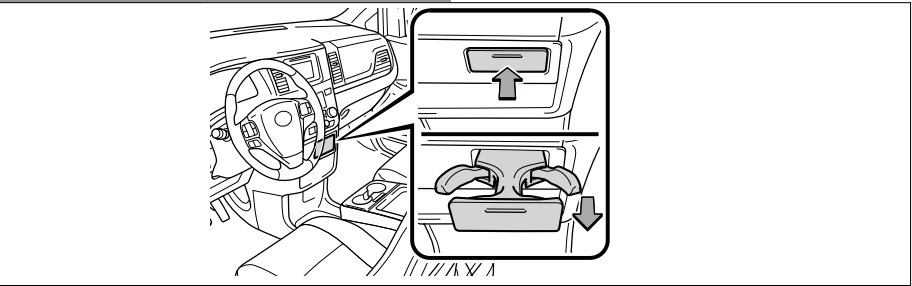


Console box (if equipped)

 Front

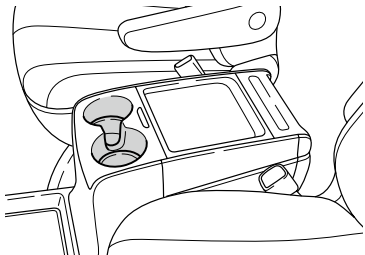


Rear

 
Type A

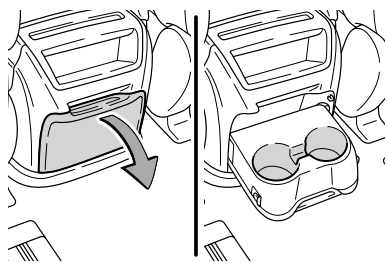


Type B

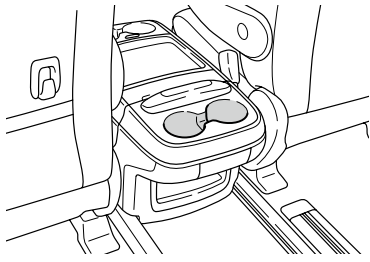 

Second center seat (if equipped)

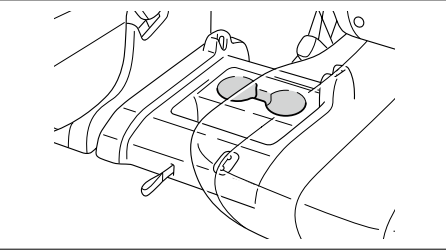 


Third row area

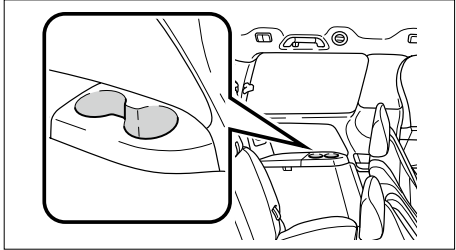 


SAFETY AND EMERGENCY FEATURES

 Door locks

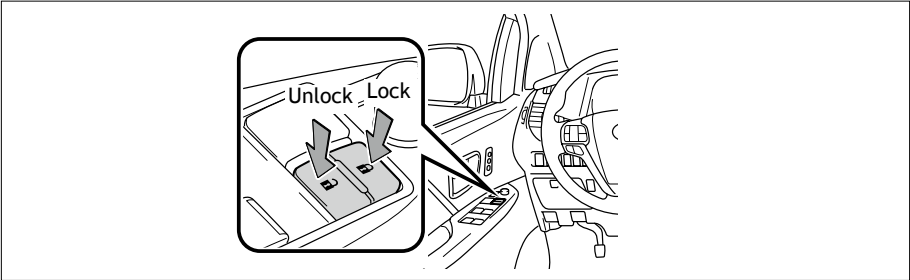


Doors-Child safety locks

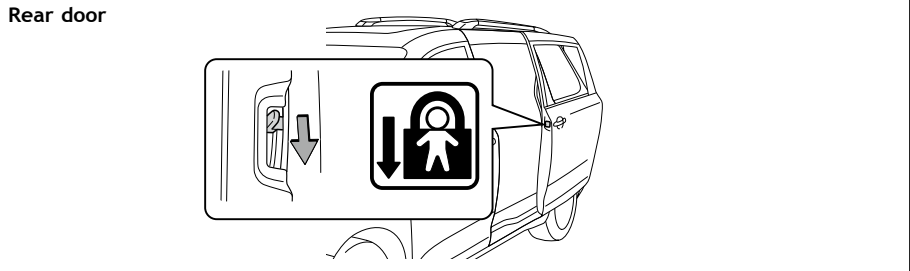 


Moving the lever downward will allow the door to be opened only from the outside.

 Seat belts-Shoulder belt anchor

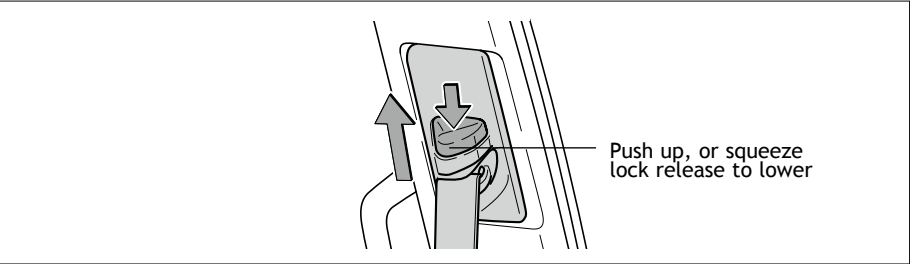


Child restraint anchors

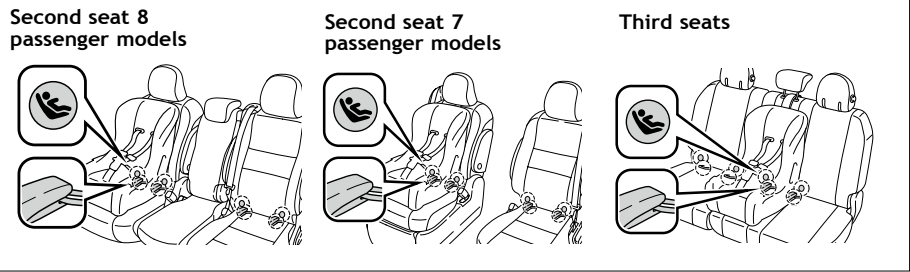 

SAFETY AND EMERGENCY FEATURES

 
Seat belts

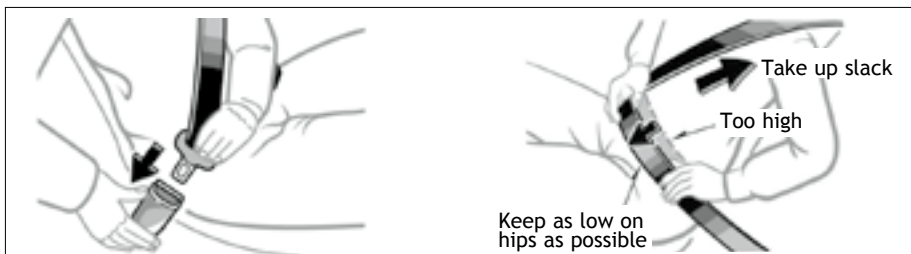

NOTE: If a passenger's seat belt is fully extended, then retracted even slightly, the Automatic locking retractor (ALR) will prevent it from being re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

 Tire Pressure Monitoring (warning) System

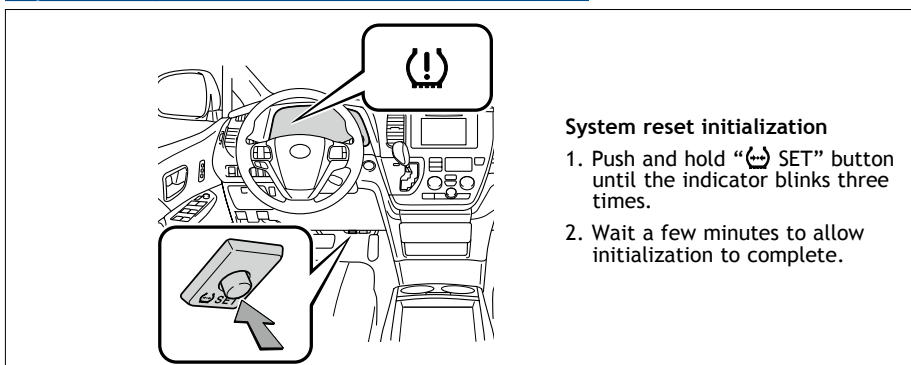

After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to “ON” and press and hold the “ SET” button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the *Owner's Manual* for tire inflation specifications.

 
If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

Spare tire & tools

All-Wheel Drive models are equipped with run-flat tires. Refer to the *Owner's Manual* for more details.



Tool and spare tire location

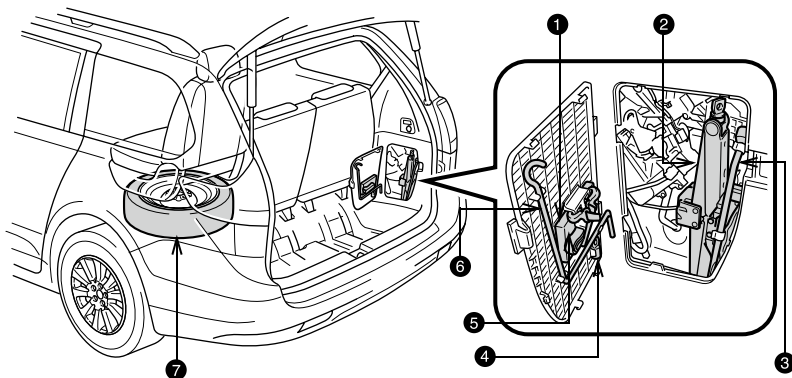

- ① Tire bag
- ② Jack
- ③ Wheel nut wrench
- ④ Socket adapter
- ⑤ Tire strap
- ⑥ Jack handle
- ⑦ Spare tire

Removing the spare tire

  Two-wheel drive models

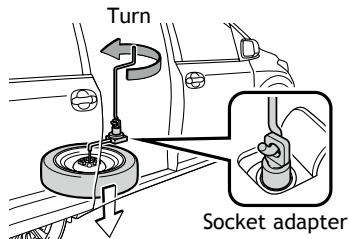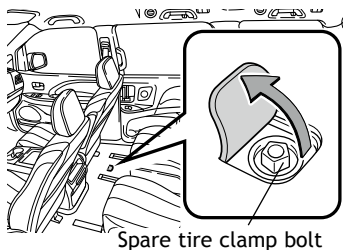

Refer to the *Owner's Manual* for jack positioning and tire changing procedures.

SAFETY AND EMERGENCY FEATURES

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

Vehicle Stability Control (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by "pulsing" brake pressure to each wheel. This limits brake lockup and helps provide directional control for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

Brake Assist (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

Smart Stop Technology (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

 
SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

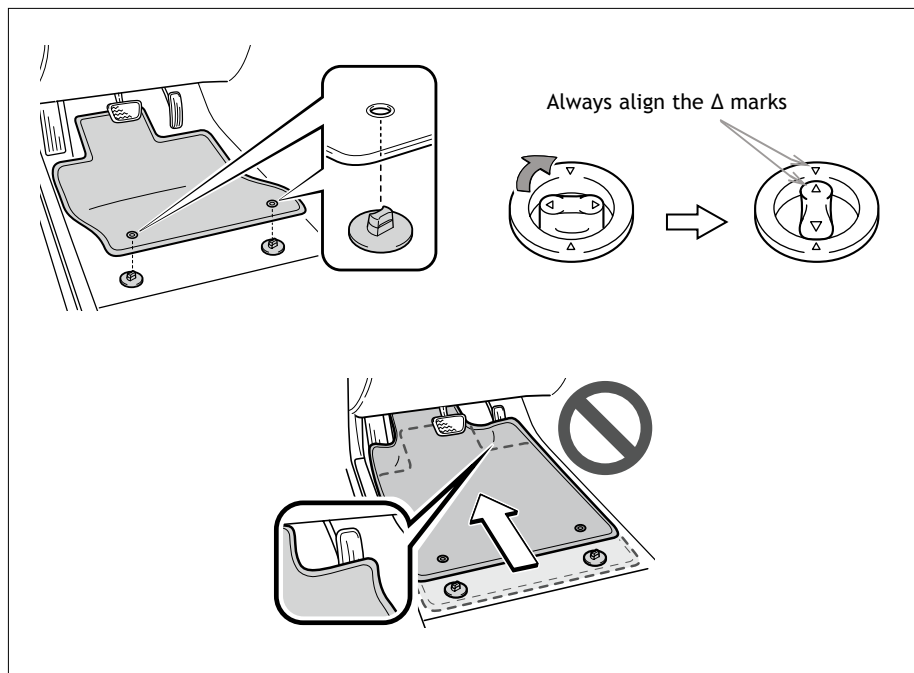

BLUETOOTH® DEVICE PAIRING SECTION

 
BLUETOOTH® DEVICE PAIRING

To begin the Bluetooth® Pairing process, press the HOME button on the faceplate of your Toyota Vehicle Entune™ Multimedia Head Unit.¹

Bluetooth® Pairing for Android® phone and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Android mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.²

Initiate Bluetooth® on your Android®

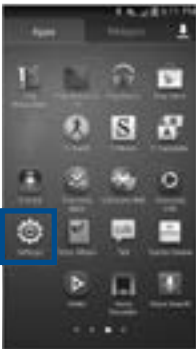


STEP 1
From your APPS SCREEN, select **SETTINGS**.



STEP 2
Select **CONNECTIONS** and select **BLUETOOTH**.



 STEP 3
Ensure **BLUETOOTH** is ON.

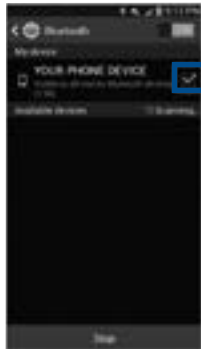

STEP 4
Select **YOUR PHONE DEVICE** to make it discoverable.
Phone will seek out Bluetooth devices while remaining discoverable.



STEP 5
While your Android device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

¹ To determine which head unit is installed in your vehicle, refer to the Audio section in this guide.
² Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



 
STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.




STEP 7

Select **BLUETOOTH**.

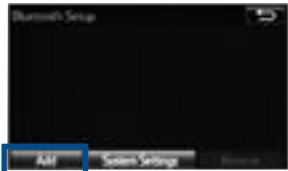

STEP 8

 Select **ADD**, to add your phone device.

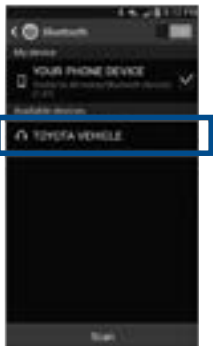

STEP 9

Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10

Your smartphone is now paired with Entune.



STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

BLUETOOTH® DEVICE PAIRING

Initiate Bluetooth® on your Entune™ Multimedia Head Unit



STEP 12

Using your smartphone, you will need to allow Entune access to your messaging and contacts.

It is recommended to check the "Don't ask again" box, so as not to have to press OK every time the phone makes a Bluetooth connection with your Toyota



STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google Inc.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

Bluetooth® Pairing for iPhone® and Entune™ touch screen system

 
Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all iPhone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

Initiate Bluetooth® on your iPhone®



STEP 1

From the **HOME SCREEN**, select **SETTINGS**.

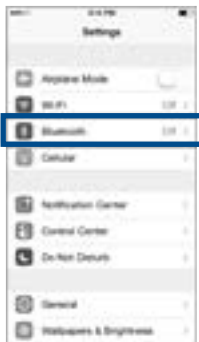

STEP 2

Select **BLUETOOTH**.



STEP 3

Ensure **BLUETOOTH** is **ON**.



STEP 4

Your iPhone will seek out Bluetooth devices while remaining discoverable.



STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

BLUETOOTH® DEVICE PAIRING

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



 
STEP 6

Select **SETUP** BUTTON on the Home Screen.




STEP 7

Select **BLUETOOTH**.

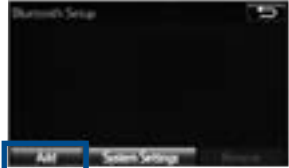

STEP 8

 Select **ADD**, to add your phone device.

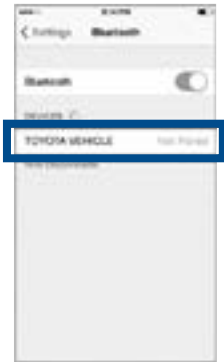

STEP 9

Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



 
STEP 10

Your smartphone is now paired with Entune.



STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

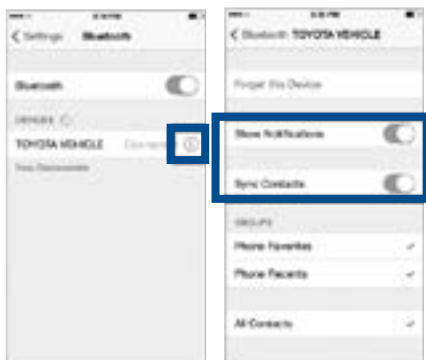

STEP 12

Using your smartphone, you may need to allow Entune access to your messaging and contacts.

Only current iPhone text messages can be viewed on the head unit. iPhone does not allow text message reply.



STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
 Experience Center
 (800) 331-4331

Disclosures

 
This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.

Bluetooth® Pairing for Windows Phone® and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Windows Phone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.

Initiate Bluetooth® on your Windows Phone®

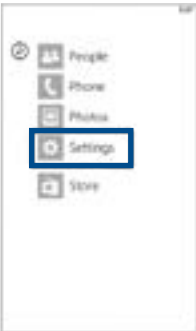

STEP 1
From your APP LIST, select **SETTINGS**.



STEP 2
Select **BLUETOOTH**.



STEP 3
Ensure **BLUETOOTH** is ON.



STEP 4
Phone will seek out Bluetooth devices while remaining discoverable.



STEP 5
While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



 
STEP 6

On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.



STEP 7

Select **BLUETOOTH**.

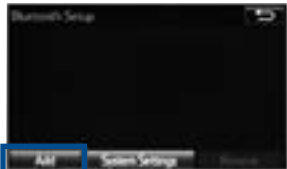

STEP 8

Select **ADD**, to add your phone device.



STEP 9

Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



STEP 10

Your smartphone is now paired with Entune.



STEP 11

Once paired, Entune will attempt to connect audio and contacts on your phone.

BLUETOOTH® DEVICE PAIRING

Initiate Bluetooth® on your Entune™ Multimedia Head Unit



STEP 12

Using your smartphone, you may need to allow Entune access to your contacts.



STEP 13

A confirmation will appear that your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.



CUSTOMER EXPERIENCE CENTER

1-800-331-4331

