



United States
Ford Customer Relationship Center

1-800-392-3673 (FORD)
 (TDD for the hearing impaired:
 1-800-232-5952)

owner.ford.com

@FordService

Canada
Ford Customer Relationship Centre

1-800-565-3673 (FORD)
 (TDD for the hearing impaired:
 1-888-658-6805)

ford.ca

@FordServiceCA

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.

**learn more about
 your vehicle**

Tap our QR tags to work for you use your mobile phone's browser or app store link to download a QR tag reader. Then follow the directions to scan the QR tag and see your vehicle's features come to life.

WARNING

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.



OWNER.FORD.COM



FORD.CA



**QUICK
 REFERENCE
 GUIDE**
 2017



HM5J 19G217 FA
 May 2017
 Second Printing
 Quick Reference Guide
 C-MAX Hybrid
 Litho in U.S.A.



energy saving tips

FUEL HISTORY AND COACH

Within the information displays, you can see how your driving style directly impacts your fuel economy.

The fuel gauge provides instant fuel economy, plus your recent fuel economy averaged over selectable intervals of 1, 2 or 6 minutes.

The fuel coach gauge can teach you how to improve your fuel economy by providing feedback on your recent acceleration, braking and cruising behavior.

HELP MAXIMIZE YOUR FUEL ECONOMY BY UTILIZING THESE FEW TIPS

1. **Use smooth acceleration and braking.** According to the United States Department of Energy, aggressive driving can lower your gas mileage by up to 33 percent at highway speeds and 5 percent in the city.
2. **Carry the bare essentials.** The Department of Energy estimates that an extra 100 pounds (45 kilograms) in your vehicle could reduce your fuel economy by up to two percent.
3. **Seasonal fuel makes a difference.** Winter fuel contains slightly less energy than summer fuel, so the fuel blend you fill up with can impact your efficiency.
4. **Idling burns fuel, too.** You can burn up to half a gallon (1.9 liters) of fuel per hour while idling. Minimize your morning warm-up and parking lot waits to get the most out of filling your tank.
5. **Avoid extreme temperatures.** Find a shady or sheltered spot to help keep your lithium-ion battery operating efficiently, and minimize the amount of energy required to heat or cool your cabin.
6. **Use fewer accessories.** Heat and air conditioning reduce your vehicle's electric range and can prompt the gasoline engine to start. You can check out your "Accessory Power" screen in your cluster to see how much electricity your vehicle's accessories use. See page 4 for more cluster details.
7. **Check your tires.** Proper tire inflation can help you improve your fuel economy by up to 3.3 percent, according to the Department of Energy, while under-inflation could lower your fuel economy by 0.3 percent for every 1 psi drop in pressure of all four tires. Check your vehicle's door sticker for recommended cold tire inflation pressure.



quick tips	4
hybrid features	5
instrument panel	6–7
SYNC	8–9
commonly used voice commands	10
SYNC 3	11–13
function	14
convenience	15
comfort	16–17
parking aids	18
essential information	19



quick tips

The **Brake Coach** appears in the display after the vehicle has come to a stop, and coaches you to maximize the amount of energy that can be returned through the regenerative braking system.



C-MAX HYBRID CLUSTER

Delivers specific information about various systems on your vehicle using menus that build on previous data. Use your left-hand, 5-way steering controls to scroll through your menu choices:

Vehicle Range: Estimates the distance your vehicle can travel on the travel with the energy currently onboard. Changes in your driving pattern may cause the value to vary.

Engage: Adds gas and electric power-split information.

Empower: Adds an engine on and off threshold to the power demand gauge from Enlighten. See how much power you request based on how far you press the accelerator pedal.

MyView: Lets you customize your menu options, allowing you to select key information and combine it into one screen.

Efficiency Leaves: Displays leaf graphics within the right-hand cluster, showing you when you are driving efficiently. More leaves equal better driving habits!



hybrid features

SMART POWER-SPLIT ARCHITECTURE

City Driving: In stop and go driving and at low speeds, the electric motor provides the necessary power. The gas engine kicks in only to recharge the battery or when you need more power.

Accelerating: Step on the accelerator pedal and get all the responsiveness of a traditional gasoline engine.

Cruising or Highway Driving: Due to greater power demands at highway speeds, your vehicle uses the gasoline engine more frequently than when driving at city traffic speeds. This is normal.

Braking: For added efficiency, the energy normally created by friction during braking recycles to the battery.

 
Stopped: To save energy, the gasoline engine shuts off and the electric motor stops drawing current.

ECO SELECT

This feature saves vehicle energy by slowing down acceleration compared to standard cruise control. For example, your vehicle may temporarily lose speed when going uphill. To activate **ECO Select**, press the  button and a graphic shows on your information display.

Refer to the **Unique Driving Characteristics** chapter in your **Owner's Manual** for more information.

KEYLESS STARTING

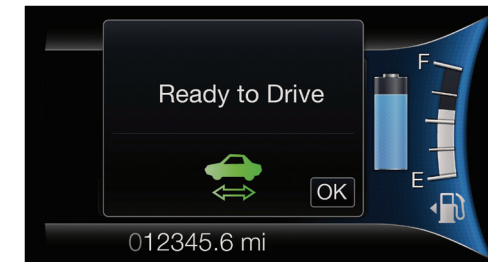

When you switch the ignition on, your engine may not sound like it started because your hybrid-electric vehicle includes silent key start. This fuel-saving feature allows your vehicle to be ready to drive without requiring your gas engine to run. Instead of listening for a traditional gasoline-powered engine sound, look for the 'ready to drive' indicator light  in your information display. When this light comes on, your vehicle started successfully and is ready to drive.

instrument panel

1 CRUISE CONTROL

To Set a Cruise Control Speed

- Press and release the **ON** button.
- Drive to the desired speed.
- Press and release the **SET+** or **SET-** button, then take your foot off the accelerator.

After setting your speed, press **SET+** or **SET-** to adjust cruise speed. To disable, press **OFF**, tap the brake pedal or pull the **CAN** control toward you.

2 LEFT VEHICLE INFO DISPLAY

Provides specific information about various systems on your vehicle. Use the left, 5-way controls to use the cluster, customize views, and choose and confirm settings and messages. Refer to the **Information Displays** chapter of your **Owner's Manual** for more information.



3 RIGHT VEHICLE INFO DISPLAY

Access information about various systems or the **efficiency leaves** by using the right, 5-way controls. Scroll through the menu, highlight selections and make adjustments. Press **OK** to confirm your choices.

4 STEERING WHEEL MEDIA CONTROLS

Volume: Press **+** to increase or **-** to decrease volume levels.

Press **⏮** **⏭** to access the next/previous media selection.

Pull **🗨** to access voice recognition.

Press **📞** to access phone mode or to answer a call.

Press **📞** to end a phone call.

5 TILT AND TELESCOPE STEERING COLUMN

Unlock the steering wheel by pulling the lever down. Adjust the steering wheel to your desired position. Push the lever up to lock the steering wheel in place.

6 KEYLESS STARTING*

Allows you to go into "Ready to Drive" mode by pressing the **START STOP** button while fully pressing down on the brake pedal. A green **🚗** "Ready to Drive" indicator light appears in the information display after you start the vehicle. This lets you know that the vehicle is on and ready for driving. Press the **START STOP** button again to switch the vehicle off.

NOTE Your transmitter must be inside the vehicle to put the vehicle in accessory mode or "Ready to Drive".

7 HAZARD CONTROL

8 ECO SELECT

Refer to page 5 of this guide for details.



SYNC is a Hands-free, Voice Recognition System Used for Entertainment, Information and Communication.

SYNC. SAY THE WORD.

Before You Get Started

1. Set up your owner account at owner.ford.com (U.S.) or syncmyride.ca (Canada). Register by following the on-screen instructions. After registering you can see which services you may be eligible for.
2. SYNC uses a wireless connection called **Bluetooth**® to communicate with your phone. Switch on **Bluetooth** mode in your phone's menu options. This lets your phone find SYNC. If you need more details on setting up your phone with SYNC, call the toll-free number, visit the website or your phone manufacturer's website. Refer to page 10 of this guide for details.

PAIRING YOUR CELL PHONE WITH SYNC

In order to use many of the features of SYNC, you must first pair and connect your phone with SYNC.

NOTE If you have SYNC 3*, you can pair your phone through the touchscreen. Refer to your **SYNC** information in your **Owner Manual** for details.

To Pair Your Cell Phone for the First Time

1. Make sure that your vehicle is in park (P) and you switch on your ignition and radio. Put your phone into **Bluetooth** discovery mode. See your phone's manual, if necessary.
2. Press the button. When the display indicates no phone paired, press **OK**.
3. When a message to begin pairing appears in the audio display, search for SYNC on your phone to start the pairing process.
4. When prompted on your cell phone's display, confirm that the PIN provided by SYNC matches the PIN displayed on your cell phone. Your phone is now paired and the display indicates that the pairing was successful. If you are prompted to enter a PIN on your device, enter the PIN displayed on the screen. The display indicates when the pairing is successful.

The System May Prompt You to

- » Set your phone as the **primary** or **favorite** (the primary phone receives messages and voicemail).
- » Download your phone book (a requirement to use the full set of voice commands).

TIPS

- » Make sure you accept the request from SYNC to access your phone.
- » To pair subsequent phones, please refer to your **SYNC** information in your **Owner Manual**.



- » If you experience pairing problems, try performing a clean pairing by deleting your services from SYNC, deleting your phone pairing from SYNC, and then repeating the **Pairing Your Cell Phone with SYNC** process.

WHY DO YOU NEED A SYNC OWNER ACCOUNT?

A SYNC owner account provides the latest software updates and, when you have questions, free customer support. Create your account by visiting the website or calling the toll-free number for more information. Refer to the **Commonly Used Voice Commands** page of this guide for more details.

USING YOUR CELL PHONE WITH SYNC

NOTE Enter your phone book contacts with both first and last names to increase the ability of SYNC to select the correct contact. Remember to say the contact name exactly as you listed it in your phone book.

Making a Phone Call

Use SYNC to make a phone call to anyone in your phone book by pulling the voice control and when prompted, give a voice command. For a list of voice commands, say "**What can I say?**".

For example, you could say "**Call Jake Smith at home**". SYNC repeats the command back to you and dials the number.

NOTE You can make phone calls by pulling the voice control and when prompted, give the voice command "**Dial**", then say the phone number.

Answering Incoming Calls

Whenever you have an incoming call, the name and number of the person calling appears in the display. Press the button to answer an incoming call. You can hang up at any time by pressing and holding the button.



USING SYNC TO ACCESS DIGITAL MEDIA

Plug in your USB media devices, such as phones, flash drives and MP3 players, and use SYNC to play all of your favorite music. The media hub is in your center console.

Using Voice Commands to Play Music

1. Plug your media player into your USB port.
2. Pull the voice control . When prompted, say "**USB**", then follow-up with a voice command.

commonly used voice commands

Pull the  voice control on the steering wheel and then say:



Basic Commands

- » Main menu
- » Go back
- » Cancel
- » List of commands
- » Next page
- » Previous page
- » Help



Phone

- » Phone list of commands
- » Pair phone
- » Call <name>
- » Call <name> <on cell/at home/at work>
- » Dial <number>
- » Listen to text message



Audio

- » AM <530-1710>
- » FM <87.9-107.9>
- » Bluetooth Audio
- » CD
- » USB
- » Sirius <0-233>*
- » <Sirius channel name>*



Navigation*

- » Navigation list of commands
- » Destination <home/previous destination>
- » Find <an address/POI/intersection>
- » Show route
- » Where am I?
- » SiriusXM Traffic and Travel Link* list of commands
 - Show <traffic/weather/weather map/5 day forecast/fuel prices>
 - Help



Climate*

- » Climate list of commands
- » Climate set temperature



Apps

 
- » List mobile apps
- » Find new apps

**if equipped*



SYNC® 3*

A REVOLUTIONARY WAY TO CONNECT WITH YOUR VEHICLE.

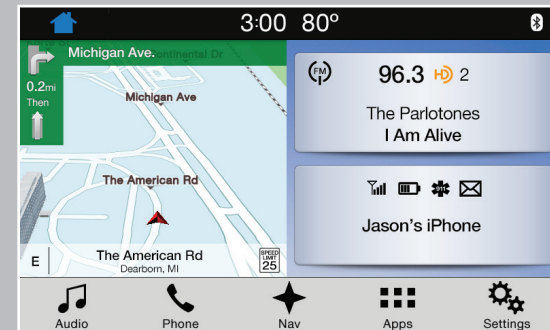


GETTING STARTED WITH SYNC 3

Use the touchscreen to explore and interact with your vehicle. The screen works the same way as traditional controls, knobs and buttons do. Press the various icons on your touchscreen to personalize the many features and settings of your vehicle. The system provides easy interaction with your phone, multimedia entertainment, navigation system* and apps.

Power Flow Status

 The Power Flow Status displays how your vehicle uses its power at any moment. You can view The Power Flow Status information by selecting the Power Flow icon from the Apps screen.

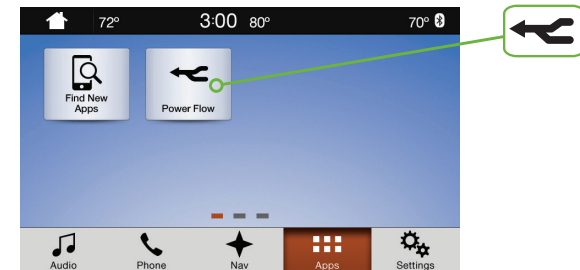

GENERAL TIPS

- » Press the home icon  at any time to return to your home screen.
- » For additional support, refer to your **SYNC 3** information in your **Owner Manual**, visit the website or call the toll-free number. Refer to the **Commonly Used Voice Commands** page of this guide for more details.

**if equipped*

Some services may not be available in your area. Refer to your SYNC 3 Information in your Owner Manual, visit the website or call the toll-free number for more information.

For U.S. customers: Visit owner.ford.com or call 1-800-392-3673 (select Option 1 or 2 for language, then Option 3).

For Canadian customers: Visit syncmyride.ca or call 1-800-565-3673 (select Option 1 or 2 for language, then Option 3).

SYNC® 3* continued

 


PHONE

After pairing your phone, you can access more phone-dependent features:

- » Recent Call Lists.
- » Contacts: Sort alphabetically and choose a specific letter to begin viewing your entries.
- » Phone Settings: Pair another phone, and set ring tones and alerts.
- » Text Messages.
- » Do Not Disturb: Send all calls to your voicemail, and all ring tones and alerts are set to silent mode.

NOTE Use the voice commands to make calls. Say **“Call James at home”** or **“Dial 555-1212”**. You can use the touchscreen to place calls as well. Refer to your **SYNC 3** information in your **Owner Manual** for complete details.

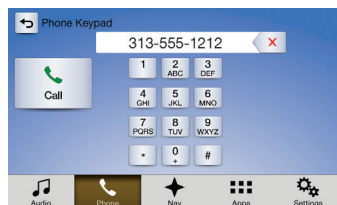

NAVIGATION*

 
Press the **Navigation*** icon and then select one of two ways to find your destination:

- » Destination mode lets you key in a specific address or use a variety of search methods to locate where you want to go.
- » Map mode shows advanced viewing of 2-D city maps, 3-D landmarks and 3-D city models (when available).

Set a Destination

Press **Destination** on your touchscreen and then press **Search**. Enter a street address, intersection, city or a point of interest (POI).

You can also use voice commands. Say, **“Find a point of interest”** and then select a category, such as **Hotels** or **Restaurants**.

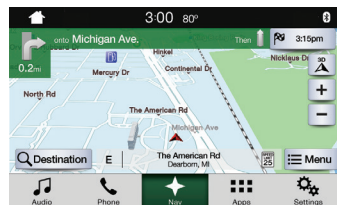

After you choose your destination, press **Start**. The system uses a variety of screens and visible prompts to guide you to your destination.

The navigation map shows your estimated time of arrival, remaining travel time and the distance to your destination.

Navigation Menu

While you are on your route, you can change your touchscreen view: Touch **Menu** on the bottom of the screen, and then select **Screen View** to choose from any of the following:

- » **Full Map**.
- » **Highway Exit Info** displays on the right side of the touchscreen. View POI icons (such as restaurants or ATMs) as they pertain to each exit. You can select a POI as a waypoint, if you wish.
- » **Turn List** shows all of the turns on your current route.
- » **Traffic List** displays SiriusXM Traffic and Travel Link* information.

*if equipped

 
GET IN TOUCH USING YOUR TOUCHSCREEN

Use the feature bar at the bottom of the touchscreen to access the many features of SYNC 3*.



AUDIO

No matter how you store your music, SYNC makes it yours to enjoy when you are behind the wheel. Just press the audio icon on the touchscreen. From here, you can easily go between AM, FM, SiriusXM and other media sources.

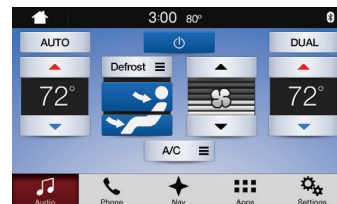

Set Your Radio Presets

- » Tune to the station and then press and hold one of the memory preset buttons. The audio mutes briefly while the system saves the station, and then the audio returns.
- » Two preset banks are available for AM and three banks for FM. To access additional presets, tap the preset button. The indicator on the preset button shows which bank of presets you are currently viewing.



 
APPS

Stream Apps

The system supports the use of certain audio apps such as Pandora® or iHeartRadio® through a USB or Bluetooth-enabled device.

Each app gives you different on-screen options depending on the app's content.

For more information, refer to your **SYNC 3** Information in your **Owner Manual**, or the **Commonly Used Voice Commands** page of this guide for the website address and phone numbers.

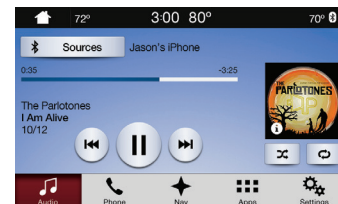

*if equipped



function

INTELLIGENT ACCESS*

NOTE Your intelligent access must be within 3 feet (1 meter) of the vehicle for intelligent access to function properly.

At the front doors: Pull a front exterior door handle to unlock and open the door. Press and hold the raised sensor on the door handle to lock your vehicle. The intelligent access transmitter also contains a mechanical key blade to unlock the driver door, if necessary.

To unlock and open the liftgate: Press the button on the top of the liftgate pull-cup handle. Refer to the **Doors and Locks** chapter in your *Owner's Manual* for more information.



REMOTE START*

To Remote Start Your Vehicle

1. Press the lock button to lock all the doors.
2. Press the remote start button  twice. The exterior lamps flash twice.

NOTE With an integrated keyhead transmitter, you must switch the ignition on before driving your vehicle. With an intelligent access transmitter, you must press the **START STOP** button on the instrument panel once while applying the brake pedal before driving your vehicle. For complete information, refer to the **Keys and Remote Controls** chapter in your *Owner's Manual*.

MYKEY®

MyKey allows you to program certain driving restrictions in order to promote good driving habits. You can program things like speed restrictions, limited volume levels and seatbelt reminders. For complete information, refer to the **MyKey** chapter in your *Owner's Manual*.

110 VOLT AC POWER POINT*

The power point is on the rear of the center console. You can use it to power your smaller electrical devices that do not exceed 150 watts. This feature is available to use when you switch on your ignition and the battery voltage is above 11 volts. When the indicator light is on, the power point is working and ready to use.



CARGO STORAGE

Two under-floor storage compartments, located behind the front seats, allow you to store smaller items discreetly. With the lids secured, your items stay in place while you drive.



*if equipped



convenience

MANUAL LIFTGATE

To open the liftgate manually from outside of your vehicle, press the exterior liftgate release button on top of the liftgate pull-cup handle to unlatch the liftgate, and then pull on the outside handle.

You can also use the transmitter to unlock your liftgate. Press  twice within three seconds.

Use the molded handle inside the liftgate to help with closing.

POWER LIFTGATE*

You can open the power liftgate by pressing  on your transmitter twice within three seconds.

When the vehicle is running, the liftgate operates only with the transmission in park (P). One warning tone sounds as the liftgate begins to power close. If there is a problem with the open or close request, a tone will sound for one of the following reasons:

- » The ignition is on and the transmission is not in park (P).
- » The battery voltage is below the minimum operating voltage.
- » The vehicle speed is at or above 3 mph (5 km/h).



HANDS-FREE POWER LIFTGATE*

To open your liftgate hands-free while you are at the liftgate: Move your foot under and away from the rear bumper, using a single kicking motion. Do not move your foot sideways or the sensors may not detect the motion. The liftgate then power opens or closes.

NOTE Your intelligent access transmitter must be within 3 feet (1 meter) behind the liftgate for the "hands-free" open feature to work. Refer to the **Door and Locks** chapter in your *Owner's Manual* for more information.

SET AND CHANGE THE LIFTGATE OPEN HEIGHT*



1. Open the liftgate and then press the control button on the liftgate when it reaches your desired height.
2. Press and hold the control button until you hear a tone, indicating that the programming is complete. The next time you open your liftgate, it opens to the newly set height.
3. To change the height again, repeat the above steps.

*if equipped

comfort



DUAL ZONE TEMPERATURE CONTROL

With the dual climate controls, you have the flexibility to operate the temperature with one control, called single zone, or two, where both driver and front passenger can select independent temperatures.

To operate the dual zone temperature control: Use the rotary control on the passenger side. The single zone temperature control automatically switches off.

To return to single zone: Press and hold the **AUTO** button. The passenger side temperature switches to the driver side temperature setting.



FOLDING THE REAR SEATBACK*

To Fold the Rear Seatback

1. With the seat empty, press the button on the outboard side of each rear outboard headrest to fold them. Make sure the rear center headrest is in the full down position.
2. Pull the lever up on the outboard side of the seat to fold the seat.
3. To unfold the seatback, rotate the seatback upward until the seatback latches to return the seat to the upright position.

PANEL ROOF WITH SUNSHADE*

The control, located in the overhead console, allows you to open the sunshade with the one-touch open and close feature. To stop motion during the one-touch operation, press the control a second time.

Opening and Closing the Sunshade

Fully press and release the front of the control to open the sunshade. Fully press and release the rear of the control to close the sunshade. For more information, see the **Windows and Mirrors** chapter of your **Owner's Manual**.



*if equipped



TILTING FRONT-ROW HEAD RESTRAINTS*

To Tilt the Head Restraint, Do the Following

1. Adjust the seatback to an upright driving or riding position.
2. Pivot the head restraint forward toward your head to the desired position. After the head restraint reaches its forward-most tilt position, pivot it forward again to release it to the rearward, untilted position.



INTERIOR LAMPS

The lamps turn on when you open any door, press a remote control button or press  on the overhead control.

Press  to disable the interior lamps when you open any door. The door function indicator lamp lights in yellow.

Press  again to switch on the interior lamps. The indicator lamp lights in blue.

Press  to switch all lamps on and off.

 


AMBIENT LIGHTING*

Light your vehicle interior with a choice of several colors with the ambient lighting feature. You can access this feature through the Settings menu for SYNC 3.

Tap a color to switch on ambient lighting to set a color. Drag the colors up and down to increase or decrease the intensity.

To switch ambient lighting off, press the active color once or drag the active color all the way down to zero intensity.

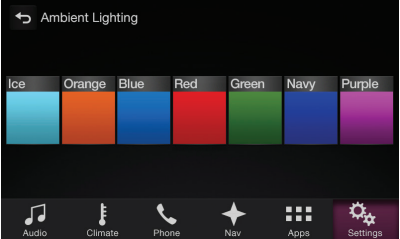

*if equipped



parking aids

ACTIVE PARK ASSIST*

Can detect an available parallel parking space and automatically steer the vehicle into that space (hands-free) while you control the accelerator, gearshift and brakes. The system visually and audibly instructs you to park the vehicle.

- » To start active park assist, press  located on the instrument panel below the climate control system.
- » To stop the parking procedure, grab the steering wheel or press the control again. For complete information, refer to the *Parking Aids* chapter of your *Owner's Manual*.

NOTE Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your *Owner's Manual* for safety information, more details and limitations.



REAR VIEW CAMERA*

Provides a video image of the area behind the vehicle. The display automatically appears in the touchscreen when the vehicle is in reverse (R) and uses colored guides to alert you of your proximity to objects.

FRONT* AND REAR* PARKING AIDS

Sounds an audible warning tone if there is an obstacle near your vehicle's front or rear bumpers. As you move closer to the obstacle, the warning tone rate increases in frequency. Refer to the *Parking Aids* chapter in your *Owner's Manual* for complete information on your vehicle's sensing systems.

BLIND SPOT INFORMATION SYSTEM (BLIS®) AND CROSS TRAFFIC ALERT*

BLIS aids you in detecting vehicles that may have entered into your blind spot zone. Cross traffic alert warns you of vehicles approaching from the sides when the transmission is in reverse (R). BLIS and cross traffic alert turn on an amber indicator light in the exterior mirror on the side of the vehicle the approaching vehicle is coming from. Refer to the *Driving Aids* chapter in your *Owner's Manual* for more information.

NOTE NEVER use BLIS or Cross Traffic Alert as a replacement for using the interior and exterior mirrors and looking over your shoulder before changing lanes. The systems are not replacements for careful driving. Use both systems only as an assist.

*if equipped

essential information

TIRE SEALANT AND INFLATOR KIT

The kit is under the front passenger seat. It consists of an air compressor to reinflate the tire and a sealing compound in a canister that seals most punctures caused by nails or similar objects. Refer to the *Wheels and Tires* section of your *Owner's Manual* for more details.

FUEL TANK CAPACITY/ FUEL INFO

C-MAX Hybrid has a 14 gallon (53L) fuel tank capacity in addition to its high-voltage battery system. Use only "Regular" **UNLEADED** fuel with an octane rating of 87 or higher, with no more than 15% ethanol.

Do not use ethanol (E20-E85) (E85), diesel, fuel-methanol, leaded fuel or any other fuel because it could damage or impair the emission control system.

REFUELING



Your vehicle features a locking fuel door and an auto-sealing feature that locks the fuel tank refueling valve.

1. Put your vehicle into park (P) and switch off the ignition.
2. Press the button  on the center console to open the fuel filler door. The fuel filler door can take up to 15 seconds to open before you can insert a fuel filler nozzle.
3. Insert the fuel pump nozzle up to the first notch on the nozzle. Keep it resting on the cover of the fuel tank filler pipe opening.
4. Hold the fuel pump nozzle in a level position when refueling. Holding the fuel nozzle in a higher position can affect the flow of fuel and shut off the fuel nozzle before the fuel tank is full.
5. Slightly raise the fuel pump nozzle and then slowly remove it.
6. Fully close the fuel tank filler door.

NOTE Do not overfill the fuel tank to the point that the fuel is able to bypass the fuel filler nozzle. The overfilled fuel may run down the drain hole which is below the fuel filler inlet.



TOWING YOUR VEHICLE

Towing your vehicle behind another vehicle (such as an RV) may be limited. Refer to *Towing the Vehicle on Four Wheels* in the *Towing* chapter of the *Owner's Manual*.

TIRE PRESSURE MONITORING SYSTEM

Your vehicle shows a low tire pressure warning light  in your instrument cluster when one or more of your tires are significantly under-inflated. If this happens, stop and check your tires as soon as possible. Inflate them to the proper pressure. Refer to the *Wheels and Tires* chapter of your *Owner's Manual* for more information.

ROADSIDE ASSISTANCE

Your new Ford vehicle comes with the assurance and support of 24-hour emergency roadside assistance. To receive roadside assistance in the United States, call 1-800-241-3673. In Canada, call 1-800-665-2006.