

Fuses

This information replaces text found under the Passenger Compartment Fuse Panel section in the Fuses chapter of your owner's manual.

Passenger Compartment Fuse Panel

The fuse panel is in the right-hand side of the passenger footwell behind a trim panel. To remove the trim panel, pull it toward you and swing it away from the side. To reinstall it, line up the tabs with the grooves on the panel, and then push it shut.

Note: It may be easier to access the fuse panel if you remove the finish trim piece.



E145984

Fuse or relay number	Fuse amp rating	Protected components
1	—	Not used.
2	7.5A ¹	Memory seat switch (lumbar power).
3	20A ¹	Driver door unlock relay.
4	5A ¹	Aftermarket electronic brake controller. Trailer brake controller Brake On/Off. Customer access circuits.
5	—	Not used.
6	—	Not used.
7	—	Not used.
8	—	Not used.
9	10A ²	Brake On/Off / Pressure Switch.
10	—	Not used.
11	5A ²	Rear climate control module.
12	7.5A ²	Front climate control module.

Fuses

Fuse or relay number	Fuse amp rating	Protected components
13	7.5A ²	Instrument cluster. Smart data link. Steering column control module.
14	10A ²	Extended power restraints module.
15	10A ²	Smart datalink connector power.
16	15A ²	Tailgate release solenoid.
17	5A ²	Head-up display.
18	5A ²	Push button ignition switch. Ignition switch. Key inhibit.
19	7.5A ²	Transmission control switch (tow/haul). Select Shift switch.
20	7.5A ²	Active front steering module.
21	5A ²	Head-up display. Humidity sensor.
22	5A ²	Upfitter switch. Run/Start. PTO relays.
23	10A ¹	Accessory delay. Power windows. Moonroof. Power folding mirrors relay. Inverter. Window/moonroof switch illumination.
24	20A ¹	Central locking system relay.
25	30A ¹	Left-hand front smart window motor. Door zone module.
26	30A ¹	Right-hand front smart window motor. Door zone module.
27	30A ¹	Moonroof.
28	20A ¹	Sony amplifier - 10 channel.

Fuses

Fuse or relay number	Fuse amp rating	Protected components
29	—	Not used.
30	—	Not used.
31	15A ²	Adjustable pedals switch.
32	10A ¹	SYNC. GPS module. Display. Radio frequency receiver.
33	20A ¹	Radio.
34	30A ¹	Run-start relay.
35	5A ¹	Extended power restraints module.
36	15A ¹	Lane keeping system. Automatic high beam control. Auto-dimming mirrors. Rear heated seats. Camera module.
37	20A ¹	Heated steering wheel.
38	30A ³	Rear power window switch.

¹Micro fuse.

²Dual micro fuse.

³Circuit breaker.