



2017
QUICK REFERENCE GUIDE





- 1** Instrument Brightness Control*
- 2** Next / Enter Switches
- 3** Drive Computer
- 4** Outside Mirror Control Switch
- 5** Headlight and Turn Signal Switch
- 6** Paddle Shifters*

- 7** Vehicle Information Display
- 8** Low Tire Pressure Warning Light
- 9** Wiper and Washer Switch
- 10** Audio Controls
- 11** Steering Wheel Switches for Cruise Control / Bluetooth* / Navigation

- 12** Trunk Release
- 13** Intelligent Key Port
- 14** Hood Release*
- 15** Steering Wheel Tilt and Telescopic Adjustment*
- 16** Multi Function Display / Audio System

- 17** Automatic Climate Controls
- 18** VDC, Transmission and Suspension Setup Switches*
- 19** Front Passenger Air Bag Status Light*

*See your Owner's Manual and Multi Function Display Owner's Manual for information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

RearView Monitor	2
USB (Universal Serial Bus) Connection Port/Aux Jack and iPod® Interface	2
SiriusXM Travel Link and SiriusXM Traffic	2
NissanConnect SM Services (if so equipped)	3
NissanConnect SM Mobile Apps	5
Hands-free Text Messaging Assistant	6

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS)	7
Fuel-filler Door/Cap	8
Unique Noises	8
Vehicle Modifications	8
Vehicle Dynamic Control (VDC)	8
Carbon-based Parts (if so equipped)	9
Clock Set/Adjustment	9

FIRST DRIVE FEATURES

Nissan Intelligent Key® System	10
Trunk Lid Release	11
Seat Adjustments	11
Outside Mirror Control Switch	12
Starting/Stopping the Engine	12
Headlight Control Switch	12
Wiper and Washer Switch	13
Heater and Air Conditioner (automatic)	14
AM/FM/SiriusXM® Satellite Radio with CD Player	15
Cruise Control	17

SYSTEM GUIDE

Drive Computer	18
Bluetooth® Hands-free Phone System	19
• System Operating Tips	19
Bluetooth® Streaming Audio	22
Navigation System	23
HomeLink® Universal Transceiver	25



Additional information about your vehicle is also available in your Owner's Manual, Multi Function Display Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Hands-Free Phone (section 4)" of the Multi Function Display Owner's Manual and the "Safety — Seats, seat belts and supplemental restraint system (section 1)" and the "Starting and driving (section 5)" of your Owner's Manual.

NEW SYSTEM FEATURES

REARVIEW MONITOR

- When the shift lever is moved to the **R (REVERSE)** position, the Multi Function Display will automatically change to show the area directly behind the vehicle.
- The colored lines on the display screen indicate the approximate distances to objects:
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).



For more information, refer to the **"Monitor system (section 9)"** of your Multi Function Display Owner's Manual.

USB (Universal Serial Bus) CONNECTION PORT/AUX JACK AND IPOD® INTERFACE

 
- Two USB ports and the AUX input jack are located in the center console box.
- When a compatible USB memory device or iPod® is plugged into the USB port, compatible audio or video files stored on the device can be played through the vehicle's audio system.
- The device can be operated using the vehicle's audio system, the touch-screen or the steering wheel controls while it is connected to the vehicle.



For more information, refer to the **"Audio system (section 3)"** of your Multi Function Display Owner's Manual.

SiriusXM TRAVEL LINK* AND SiriusXM TRAFFIC*

- Your vehicle's Navigation System is equipped with SiriusXM Travel Link and SiriusXM Traffic capabilities.
- Touch the **"i Info"** key to access SiriusXM Travel Link and SiriusXM Traffic.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings, sports scores and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.

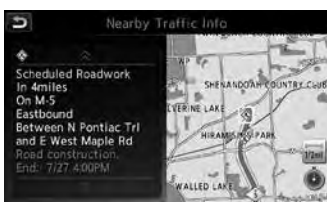

*These features, SiriusXM® Satellite Radio, Travel Link and Traffic, require an active subscription. Multiple subscriptions may be necessary to activate the various features.

For more information, refer to the **"Information (section 5)"** of your Multi Function Display Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

NISSANCONNECTSM SERVICES¹ (if so equipped)

- NissanConnectSM Services combines personalized convenience and personal security features, adding innovation to your daily drive. To use NissanConnect Services, you will first need to create an Owners Portal account and enroll in NissanConnect Services. For more details on NissanConnect Services or to enroll your vehicle, please visit www.NissanUSA.com/connect or call 855-426-6628.

Available services include:

- Automatic Collision Notification – In the event of an air bag deployment, vehicle information is sent to the emergency response center. The Emergency Response Agent attempts to contact the vehicle's occupant and sends appropriate emergency services.
- Emergency Call – This service provides emergency assistance by connecting the subscriber to a NissanConnect Services Specialist.
 - In case of an emergency, press the in-vehicle telematics **SOS** button **1**.
 - A Response Specialist will provide assistance based on the situation described by the vehicle's occupant.
- Roadside Assistance – Roadside Assistance can be accessed by:
 1. In-vehicle menu (headset  button **2** on the map screen)
 2. NissanConnect Services companion app
 3. Calling the Roadside Assistance Provider directly
 - This service allows subscribers to receive assistance for a non-emergency incident, such as towing, or a third party response.
- In-vehicle Messaging – Enables NISSAN to send service reminders, marketing, renewal and other messages to subscribers directly into the vehicle.
- Vehicle Health Report – Get a monthly overview of your vehicle's overall health delivered to your email.
- Dealer Service Scheduling – Provides the subscriber with information and a mechanism to allow him or her to contact a Nissan dealer to schedule service for the vehicle.
- Stolen Vehicle Locator – A Response Specialist will attempt to obtain location information from a reported stolen vehicle and provide that information to local law enforcement agencies to assist in the recovery of your stolen vehicle.
- Remote Door Lock/Unlock – Remotely access your vehicle via a NissanConnect Services Response Specialist, the NissanConnect Services companion app or website to remotely lock or unlock your vehicle.



NEW SYSTEM FEATURES

- Remote Sound Horn and Flash Lights – Sound the horn and flash the lights remotely using the NissanConnect Services companion app or website.
- Alarm Notification – This system will notify you when the factory-installed vehicle alarm system has been activated.
- Maintenance Alert – Receive notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- Connected Search – Select “Connected Search” from the Destination menu on the vehicle’s Navigation System to conduct a Point Of Interest (POI) search within a certain distance of the vehicle’s location.
- Assisted Search – Allows the subscriber to verbally request POI destination data from a live operator.
- Destination Download – Use the NissanConnect Services companion app or website to search for and send destinations directly to the vehicle.
- Journey Planner – Send a route with up to five waypoints and a destination directly to the vehicle.
- Boundary Alert – Monitor the movement of your vehicle within a specified region. Set up boundaries in the Monitoring section of the NissanConnect Services web portal.
- Speed Alert – Set up a maximum speed on the NissanConnect Services web portal. You will receive notifications if your vehicle exceeds the maximum speed setting.
- Valet Alert – Use Valet Alert to set up a 0.2-mile radius around your vehicle.
 - Activate alerts via the NissanConnect Services companion app or website.
- Curfew Alert – Specify curfew limits via the NissanConnect Services companion app or website and be notified via a selected method if curfew is violated.

¹ Only use NissanConnectSM Services powered by SiriusXM[®] and NissanConnectSM Mobile Apps when safe to do so. NissanConnectSM Services and Mobile Apps availability is dependent on vehicle model, trim level, packaging, and/or options. See www.NissanUSA.com/connect for complete product and service availability details. Late availability for some features. Compatible smartphone required to operate NissanConnectSM Mobile Apps. Services require an operating vehicle device and cellular and GPS coverage. Cellular network and GPS signals are not available in all areas and/or at all times. Neither NISSAN nor SiriusXM are responsible for associated costs, if any, for continued operation due to cellular network termination/changes. Cellular provider may terminate/restrict service without notice. Certain services require a PIN for activation. Applicable Subscription Agreement required. See www.NissanUSA.com/connect for details and service limitations. Enrollment is required to receive the full suite of services. Text rates and/or data usage may apply.

For more information, refer to the “**Information (section 5)**” of your Multi Function Display Owner’s Manual.

NISSANCONNECTSM MOBILE APPS¹

- Integrates popular smartphone apps and services into your vehicle.
- To enroll in NissanConnectSM Mobile Apps:
 1. Start by creating a Nissan Owner's Portal account at **owners.nissanusa.com**.
 2. Next, download the NissanConnect Mobile Apps companion app from Google Play or the Apple App Store.
 3. Launch the app and sign-in with the email user name and password you created when registering on the Nissan Owners Portal website.
 - iPhone^{®2}: Please connect via USB when using an iPhone[®] with NissanConnect Mobile Apps.
 - Android^{®3}: Please connect via Bluetooth^{®4} when using an Android[®] device with NissanConnect Mobile Apps.
- For more information on how to pair your cellular phone and set up NissanConnect Mobile Apps, visit: **www.NissanUSA.com/connect/support**.

¹ Only use NissanConnectSM Services powered by SiriusXM[®] and NissanConnectSM Mobile Apps when safe to do so. NissanConnectSM Services and Mobile Apps availability is dependent on vehicle model, trim level, packaging, and/or options. See **www.NissanUSA.com/connect** for complete product and service availability details. Late availability for some features. Compatible smartphone required to operate NissanConnectSM Mobile Apps. Services require an operating vehicle device and cellular and GPS coverage. Cellular network and GPS signals are not available in all areas and/or at all times. Neither NISSAN nor SiriusXM are responsible for associated costs, if any, for continued operation due to cellular network termination/changes. Cellular provider may terminate/restrict service without notice. Certain services require a PIN for activation. Applicable Subscription Agreement required. See **www.NissanUSA.com/connect** for details and service limitations. Enrollment is required to receive full suite of services. Text rates and/or data usage may apply.

² iPhone is a registered trademark of Apple, Inc. All rights reserved. iPhone not included.

³ Android[®] is a registered trademark of Google, Inc.

⁴ Availability of specific features is dependent upon the phone's Bluetooth[®] support. Please refer to your phone owner's manual for details. Bluetooth[®] word mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by NISSAN is under license. See **www.NissanUSA.com/bluetooth** for details.

For more information, refer to the **"Information (section 5)"** of your Multi Function Display Owner's Manual.

NEW SYSTEM FEATURES

HANDS-FREE TEXT MESSAGING ASSISTANT^{1,2}

- This text messaging feature allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to a name or phone number stored in your Bluetooth® Hands-free Phone System³.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Once the vehicle is in motion, text messages can only be replied to using the Voice Recognition  button on the steering wheel.
- Text messages can be created manually when the vehicle is not in motion.
- Custom text messages must be created in advance.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth®³ pairing. For some cellular phones, you may need to enable "Notifications" in the cellular phone's Bluetooth®³ menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.



¹ Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

² Compatible smartphone required. Text rates and/or data usage may apply.

³ Availability of specific features is dependent upon the phone's Bluetooth® support. Please refer to your phone owner's manual for details. Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by NISSAN is under license. See www.NissanUSA.com/bluetooth for details.

For more information, refer to the "Hands-Free Phone (section 4)" of the Multi Function Display Owner's Manual.

ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS)

■ A TIRE LOW PRESSURE VISIT DEALER

warning message will appear in the vehicle information display **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.

- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.

■ After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **TIRE LOW PRESSURE VISIT DEALER** warning message and low tire pressure warning light **2** will extinguish.

■ When the low tire pressure warning light **2** flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended you visit a Nissan dealer for this service.

■ Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light **2** illuminates, check the tire pressure in your tires.

- Check the tire pressure often and always prior to long distance trips.

■ NISSAN recommends refilling with nitrogen for maximum tire performance. If nitrogen is not available, compressed air may be safely used under normal driving conditions.

■ The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 9)" of your Owner's Manual for the location of the Tire and Loading Information label.

For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**" and the "**Maintenance and do-it-yourself (section 8)**" of your Owner's Manual.



ESSENTIAL INFORMATION

FUEL-FILLER DOOR/CAP

The fuel-filler door is located on the passenger's side toward the rear of the vehicle.

- When the doors of the vehicle are locked or unlocked, the fuel-filler door is automatically locked or unlocked at the same time.
- Push one of the power door lock switches to unlock the fuel-filler door from inside the vehicle, or push the door handle request switch to unlock the fuel-filler door from outside the vehicle.
- To open the fuel-filler door, press the left side of the door to release the door lock then pull the door open.
- To tighten, turn the fuel-filler cap clockwise until a single click is heard. If the cap is not fully tightened, the Malfunction Indicator Light (MIL) SERVICE ENGINE SOON may illuminate.
- If the SERVICE ENGINE SOON light illuminates because the fuel-filler cap is loose or missing, tighten or reinstall the cap. The SERVICE ENGINE SOON light should extinguish after a few driving trips.



For more information, refer to the **"Instruments and controls (section 2)"** and the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

UNIQUE NOISES

- The GT-R is a high-performance vehicle that has unique operating characteristics.
- You will hear more noises emitted from this vehicle than from a conventional passenger car.

For more information, refer to the **"GT-R Overview (section GTR)"** and the **"Starting and driving (section 5)"** of your Owner's Manual.

VEHICLE MODIFICATIONS

- Do not modify the vehicle with aftermarket parts or accessories.
- To maintain your vehicle's performance, only use genuine GT-R specific components.

For more information, refer to the **"GT-R Overview (section GTR)"** of your Owner's Manual.

VEHICLE DYNAMIC CONTROL (VDC)

- Always make sure that the VDC is on before driving the vehicle.
- The VDC OFF mode should ONLY be used briefly to help free the vehicle if it is stuck in snow or mud.

For more information, refer to the **"GT-R Overview (section GTR)"**, the **"Instruments and controls (section 2)"** and the **"Starting and driving (section 5)"** of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

CARBON-BASED PARTS (if so equipped)

- Do not wax carbon parts, such as the rear diffuser or the optional dry carbon fiber rear spoiler.
- Waxing speeds up deterioration by allowing water under the carbon layer.

For more information, refer to the “GT-R Overview (section GTR)” and the “Appearance and care (section 7)” of your Owner’s Manual.

CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:

1. Press the  **MENU** button on the control panel.
2. Touch the “ Settings” key on the Launch Bar.
3. Touch the “Clock” key.



- The following settings can be adjusted:

- **On-screen Clock:** The clock in the upper right corner of the display can be turned ON or OFF.
 - **Clock Format (24h):** The clock can be set to 12 hours or 24 hours.
 - **Offset (hour):** The time can be adjusted by increasing or decreasing per hour.
 - **Offset (min):** The time can be adjusted by increasing or decreasing per minute.
 - **Daylight Savings Time:** The application of Daylight Savings Time can be turned ON or OFF.
 - **Time Zone:** Adjust the time zone. Choose a time zone from the available list.
- Touch the  key or press the  **BACK** button on the Display Commander to return to the previous screen.

For more information, refer to the “Getting started (section 2)” of your Multi Function Display Owner’s Manual.

FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM

 
The Nissan Intelligent Key® system allows you to lock or unlock the vehicle and open the trunk. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **1** once or press the **1** button **2** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **1** once; the corresponding door will unlock. Push the door handle request switch **1** again within 1 minute; all other doors will unlock, or
 - Press the **1** button **3** on the key fob to unlock the driver's side door. Press the **1** button **3** again; all other doors will unlock.
- To release the trunk lid, press the  button **4** for more than 1 second. Lift the trunk lid to access the trunk.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **5** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.



NISSAN INTELLIGENT KEY® BATTERY DISCHARGE

- If the battery in the Intelligent Key is almost discharged, the guide light **6** of the Intelligent Key port blinks and the Intelligent Key insertion indicator **7** is displayed in the vehicle information display.
- To start the engine under these circumstances, insert the Intelligent Key into the key port with the mechanical key facing backward until it latches into place. Then push the ignition switch to start the engine.
- To remove the Intelligent Key from the port, push the ignition switch to turn the engine off and then pull the Intelligent Key out of the port.
- The Intelligent Key port does not charge the Intelligent Key battery. If you see the Intelligent Key warning light **8**, replace the battery in the Intelligent Key.
- Do not insert the mechanical key or other objects into the key port because they will damage the key port.

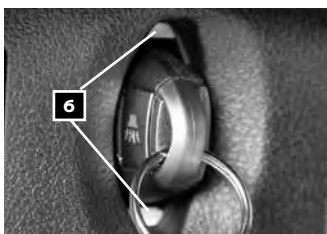

For more information, refer to the "Pre-driving checks and adjustments (section 3)", the "Starting and driving (section 5)" and the "Maintenance and do-it-yourself (section 8)" of your Owner's Manual.

TRUNK LID RELEASE

Use one of the following methods to unlatch the trunk then raise the trunk lid to open:

- Push the trunk open request switch **1** under the trunk handle for more than 1 second.
- Press the trunk button  on the Nissan Intelligent Key® for more than 1 second.
- From inside the vehicle, push the trunk lid release switch **2** located on the left side of the instrument panel.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

 


SEAT ADJUSTMENTS

- To slide the seat forward or backward, push the control switch **1** forward or backward. To adjust the angle of the seatback, rotate the knob **1** forward or backward.

SEAT LIFTER (driver’s seat)

- To raise or lower the rear portion of the seat, move the control switch **1** up or down. To raise or lower the front portion of the seat, push the top or bottom of the switch **2**.

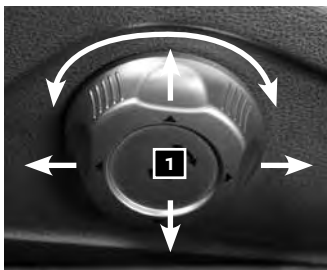

REAR SEAT ENTRY

- Lift the lever **3**, hold the knob **4** and tilt the seatback forward. Push the seat adjustment control switch **1** forward to the desired position. To return the seat to its original position, tilt the seatback rearward and push the seat adjustment control switch **1** backward or forward.



HEATED SEATS

Your vehicle’s front seats have built-in heaters that are operated by a switch found on the side of the seat.

- With the ignition switch in the **ON** position, push the **HI** **5** or **LO** **6** side of the switch, and the seat heater will turn on and the indicator light will illuminate.
- To turn off the seat heater, push the switch to the level (neutral) position.



For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.

FIRST DRIVE FEATURES

OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, turn the control switch **1** right or left.
- To adjust the mirror angle, move the control switch **1** up, down, right or left.
- To prevent accidentally moving the mirror, turn and set the control switch **1** to the center (neutral) position.



POWER FOLDING OUTSIDE MIRRORS

- Push the switch **2** to the  position to fold the outside rearview mirrors, and push the switch **2** to the  position to unfold the outside rearview mirrors.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

STARTING/STOPPING THE ENGINE

- It is important to make sure the Nissan Intelligent Key® is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Press the ignition switch **START/STOP** button to start the engine.



TURNING THE ENGINE OFF

 
- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Push the ignition switch **START/STOP** button to turn the engine off.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.

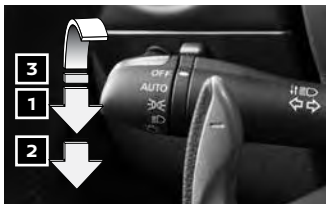


AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then push the ignition switch to ON. To deactivate the autolight system, turn the headlight control switch to the  position **1** or  position **2**.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

HIGH BEAM SELECT

 - With the headlights ON (either in the **AUTO** or  position), push the headlight control switch forward **4** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.

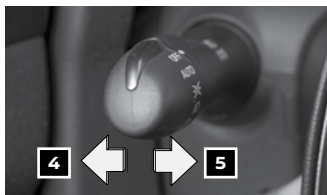



LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.
- Choose the appropriate method to signal a lane change based on the road and traffic conditions.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

WIPER AND WASHER SWITCH

  - The ignition switch must be in the **ON** position to activate the windshield wipers.
- Move the lever to one of the following positions to operate the windshield wipers:
 - 1** Mist (**MIST**) – Push the lever up for one sweep of the wipers.
 - 2** Speed-sensing Intermittent (**INT**) – Push the lever down. The wipers operate intermittently, and wiper speed varies in accordance with vehicle speed. Intermittent operation can be further adjusted by twisting the time control ring **3** to increase or decrease wiper speed.
 - 4** Low Speed (**LO**) – Push the lever down for continuous low-speed operation of the wipers.
 - 5** High Speed (**HI**) – Push the lever down for continuous high-speed operation of the wipers.
 - 6** Pull the lever toward you to activate the washer. The wipers will operate several times.

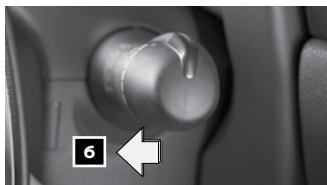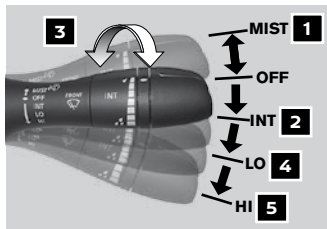

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

FIRST DRIVE FEATURES



HEATER AND AIR CONDITIONER (automatic)

1 AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- The automatic mode may be used year-round. Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver's side temperature control dial left for cooler air or right for warmer air.

2 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by turning the passenger's side temperature control dial.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

3 ON-OFF BUTTON

- Press the **ON-OFF** button to turn the system on or off.

4 FAN SPEED CONTROL BUTTONS

- Press either the  or the  button to decrease or increase fan speed.

5 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the front defroster and foot vents.

6 A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

7 FRESH AIR INTAKE CONTROL BUTTON

- Press the fresh air intake control  button **7** to draw outside air into the passenger compartment.

8 AIR RECIRCULATION BUTTON

- Press the air recirculation control  button **8** to recirculate interior air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and to adjust the inside vehicle temperature more effectively.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot vent mode .

9 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front defroster  button to turn the system on. This feature removes humidity from the air.
- Turn the temperature control dial **1** to set the desired temperature.
- To defrost the front and side windows quickly, set the temperature controls and fan speed controls to their maximum settings.

10 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS (if so equipped)

- Push the rear window and outside mirror (if so equipped) defroster  switch to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

For more information, refer to the "Instruments and controls (section 2)" and the "Display screen, heater, air conditioner and audio systems (section 4)" of your Owner's Manual.



AM/FM/SiriusXM® SATELLITE RADIO WITH CD PLAYER

Touch the "🎵 Audio" key on the Launch Bar to display the current audio source. Touch the "🎵 Audio" key a second time to access the source selection screen.

1 (ON-OFF) BUTTON/ VOL (volume) CONTROL KNOB

- Press the  (on-off) button to turn the audio system on or off.
- Turn the **VOL** control knob right or left to increase or decrease the volume.

2 AUDIO KEY

- Touch the "🎵 Audio" key on the Launch Bar to bring up the current source's control screen.

*SiriusXM® Satellite Radio is only available on vehicles equipped with an optional satellite radio subscription service.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FIRST DRIVE FEATURES

3 (seek/cat and track) BUTTONS

- Press the  button or the  button to seek up/down to the next receivable station.
- For satellite radio to switch to the first channel of the previous or next category, press the  button or the  button.
- To change tracks on a CD, press the  button or the  button.
- To rewind or fast forward a track on a CD, press and hold the  button or the  button.

4 **PUSH SOUND BUTTON/TUNE-SCROLL KNOB**

- Press the **PUSH SOUND** button to cycle through the audio settings individually and use the **TUNE-SCROLL** knob to adjust the current setting.
- Touch the  "Settings" key on the Launch Bar and then touch the "Sound" key to view all audio settings.
- To manually tune the radio, turn the **TUNE-SCROLL** knob left or right.

5 **AUDIO (source) BUTTON**

- Pressing this button will give access to the **AM, FM, SXM, CD, USB1/iPod, USB2/iPod, Bluetooth Audio** or **AUX** audio source.
- Twelve memory stations can be set for the FM band, six for the AM band and 18 for satellite radio. These appear at the bottom of the screen when one of these sources is selected.
- To store a station in a preset, you must first select a radio band by touching the "AM" key **6**, "FM" key **7** or "SXM" key **8** then tune to the desired AM, FM or satellite radio station. Next, press and hold the desired station preset key until you hear a beep. The channel indicator will then display, and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button.

6 **AM KEY** / **7 FM KEY**

- Touch the "AM Menu" or "FM Menu" key to view the station list or turn HD mode on or off.
- Tag favorite songs to save to an iPod®.
 - Apple® website: If you are listening to a radio station that supports iTunes Tagging, you can tag a song you hear so you can preview and purchase it later on the iTunes Store. Songs that can be tagged are marked with a tag icon next to the song title or on the "Now Playing" screen.

8 **SXM KEY**

- Touch the "SXM Menu" key to bring up the categories, favorites and replay options.

9 **CD KEY**

- Touch the "CD" key to view the track list.

10 **AUX KEY**

- A cable with 1/8 in (3.5 mm) stereo mini plug is required for audio playback.

For more information, refer to the **"Audio system (section 3)"** of your Navigation System Owner's Manual.

CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed above 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the MAIN switch **1** on the steering wheel. The CRUISE indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the SET- switch **2** on the steering wheel and release. The SET indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the RES+ switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the SET- switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To turn cruise control off without erasing the set speed, push the CANCEL switch **4** on the steering wheel. The SET indicator light in the instrument panel will extinguish.
- To turn off cruise control, push the MAIN switch **1** on the steering wheel. Both the CRUISE indicator light and the SET indicator light in the instrument panel will extinguish.



For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

SYSTEM GUIDE

DRIVE COMPUTER

- The drive computer is located in the vehicle information display **1** at the bottom of the tachometer.
- Push the  switch **2** to cycle through the following modes on the vehicle information display:
 - **MPG** – Displays the current fuel economy.
 - **MPH** – Displays the current vehicle speed.
 - **CRUISE/MPH** – Displays the set cruise control status.
 - **MPG/MPH** – Displays the average fuel economy and average speed since the last reset.
 - To reset, push and hold the  switch **3** for more than 1 second. Both the average fuel economy and average speed are reset at the same time.
 - **TIME/MILES** – Displays the elapsed time and distance driven since the last reset.
 - To reset, push and hold the  switch **3** for more than 1 second. Both elapsed time and distance driven are reset at the same time.
 - **RANGE** – Displays the estimated distance the vehicle can be driven before refueling.
 - **OUTSIDE TEMP** – Displays the outside air temperature.
 - **SETTING** – Allows you to set reminders or preferences for alerts, maintenance intervals or language displays in the system.
 - Push the  switch **3** to cycle through the various setting modes.
 - Push the  switch **2** to choose the selected mode.
 - To return to the previous setting screen, push and hold the  switch **2** for more than 1 second.
 - **WARNING** – Displays when a warning is present.
 - Push the  switch **3** to select “Detail” then confirm with the  switch **2**. When there are multiple warnings, push the  switch **2** to cycle through all of them. To return to the initial warning, push and hold the  switch **2** for more than 1 second.



 
For more information, refer to the “Instruments and controls (section 2)” of your Owner’s Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM¹

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation².

SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "Call Redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- If you experience difficulty with the Voice Recognition System recognizing a contact name, please try saying both the first and last name of the contact as this improves recognition accuracy.
- To cancel a Voice Recognition session, say "Cancel" or "Quit" or press and hold the  button on the steering wheel for 5 seconds.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.NissanUSA.com/bluetooth.

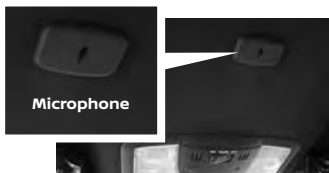

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the cellular phone.
1. Press the  button on the steering wheel and touch the "Connect Phone" key.
 2. Initiate connecting from the cellular phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.NissanUSA.com/bluetooth.



SYSTEM GUIDE

- When prompted, confirm the PIN on the display with the PIN shown on the handset. If your device does not support Secure Simple Pairing and requests you to input a PIN, enter "1234" from the handset.

- Some cellular phones may incorrectly state that the connection was unsuccessful.

Please verify that the touch-screen displays that the connection is successful, or touch "Settings" > "Bluetooth" > "Select BT Device" > "Phone" and confirm that your cellular phone is listed.



3. When connecting is complete, the screen will return to the Phone menu display.

PHONEBOOK SETUP

- Press the  **MENU** button on the control panel.
- Touch the  **Settings** key on the Launch Bar, touch the "Phone" key and then touch the "Phonebook" key.
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth^{®1} system.
- The Quick Dial phonebook can also be set for up to five entries that can be used with your cellular phone.

1. Touch "Phone" on the Launch Bar and then touch the "Quick Dial" key.
2. Touch the "Add New" key at the top of the display. There are different methods to input a phone number. Select one of the following options:

- **Copy from Call History** to save a number from the Outgoing, Incoming or Missed Calls lists.
- **Copy from Phonebook** to save a number that has been downloaded from your handset to the vehicle.
- **Enter Number by Keypad** to input the number and name manually.



MAKING A CALL

To make a call, follow this procedure:

1. Press the  button on the steering wheel.
The Phone menu will appear on the control panel display.
2. Touch one of the following:
 - “Quick Dial”, “Phonebook” or “Call History” key.
Select the desired entry from the list and then the desired number, or
 - To enter a number manually, touch the “Dial Number” key, then enter the number and touch “OK”.



RECEIVING/ENDING A CALL

- To accept the call:
 - Press the  button on the steering wheel, or
 - Touch the “Answer” key on the touch-screen display.
- To reject the call:
 - Press the   arrows on the steering wheel to highlight “Decline” through the vehicle information display and press the OK button on the steering wheel, or
 - Touch the “Decline” key on the touch-screen display.
- To hang up:
 - Press the  button on the steering wheel, or
 - Touch the “Hang up” key on the touch-screen display.

¹ Availability of specific features is dependent upon the phone's Bluetooth® support. Please refer to your phone owner's manual for details. Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by NISSAN is under license. See www.NissanUSA.com/bluetooth for details.

² Some jurisdictions prohibit the use of cellular telephones while driving.

Compatible smartphone required. Text rates and/or data usage may apply.

 
To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

For more information, refer to the “Hands-Free Phone (section 4)” of the Multi Function Display Owner's Manual or please visit www.NissanUSA.com/bluetooth.

SYSTEM GUIDE

BLUETOOTH®¹ STREAMING AUDIO

- If you have a compatible Bluetooth®¹ device with streaming audio (A2DP profile), you can set up the wireless connection between your Bluetooth®¹ device and your vehicle's audio system. This connection allows you to listen to audio from the Bluetooth®¹ device using your vehicle's speakers.
 - A cellular phone should not be used while driving so full attention may be given to vehicle operation².
1. Touch the "🎵 Audio" key and select the "Bluetooth Audio" key.
 2. A prompt to connect your device will display.
 - If the device is already paired:
 - a. Touch the "Select Devices" key to play from an already paired device.
 - b. Select the desired device and touch the "Connect" key **1**.
 - c. The last played audio will start playing once the device is connected.
 - If the device needs to be connected:
 - a. Touch the "⚙️ Settings" key.
 - b. Touch the "Bluetooth" key.
 - c. Touch the "Connect Device" key.
- Touch the "BT Menu" key to view track listing, artist, songs or albums.
 - Touch the "BT Settings" key to change which device is playing audio.

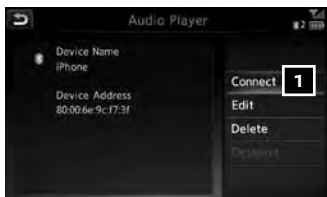

¹ Availability of specific features is dependent upon the phone's Bluetooth® support. Please refer to your phone owner's manual for details. Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc., and any use of such marks by NISSAN is under license. See www.NissanUSA.com/bluetooth for details.

² Some jurisdictions prohibit the use of cellular telephones while driving.

Compatible smartphone required. Text rates and/or data usage may apply.

For more information, refer to the "Hands-Free Phone (section 4)" of the Multi Function Display Owner's Manual or please visit www.NissanUSA.com/bluetooth.



NAVIGATION SYSTEM

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is in motion. Voice commands may be available for some of the restricted functions. For more information, refer to the "Voice recognition (section 7)" of your Navigation System Owner's Manual.

- 1** **MENU** - Touch to access all available shortcut and widget items in the "Menu" screen.
- 2** Touch-screen
- 3** **Map Menu** - Touch to access different options related to either a selected location by touch or one that you have navigated to. Some options include "Save Location", "Nearby POIs", "Map Icons" or "New Destination".
- 4** **Navi** (Navigation) - Touch to access the Navigation function.
- 5** **Info** (Information) - Touch to display the vehicle, traffic (if so equipped) and weather (if so equipped) information.
- 6** **ZOOM OUT**, **7** **ZOOM IN** - Touch to adjust the map scale. When parked, you can pinch in or out to zoom on the screen.
- 8** **Map** - Touch to display the map.
- 9** **Settings** - Touch to display the system settings.

SYSTEM GUIDE

SETTING A DESTINATION

You can set a destination with your Navigation System using the touch-screen display or Voice Recognition.

■ Touch-screen Display

- Touch the “▲ Navi” key on the Launch Bar.
- When a destination is set, touch the “New Destination” key and then select one of the displayed options for choosing your destination.

■ Voice Recognition

- Press the  button on the steering wheel, and after the tone, say “Navigation”. From here, the system will give you the options available for setting a destination.

SETTING A DESTINATION USING POINTS OF INTEREST (POI)

■ Touch-screen Display

- Touch the “▲ Navi” key on the Launch Bar, and if a destination is already set, touch the “New Destination” key.
- Touch the “Points of Interest” key and then select one of the displayed options for choosing your destination.

■ Voice Recognition

- Press the  button on the steering wheel, and after the tone, say “Navigation” then say “Points of Interest”. From here, the system will give you the options available for setting a POI.

NAVIGATION SWIPE TO METER


Turn-by-turn route guidance can also be viewed in the vehicle information display by using Navigation Swipe to Meter. This can be done by programing a route, touching the turn-by-turn route icon on the center display, and swiping toward the general direction of the vehicle information display.

The turn-by-turn route icon will move across the center display and transfer the route information to the vehicle information display when the vehicle is not moving.

The icon will not move across the screen if the vehicle speed is over 4 mph (7 km/h), but the information will still transfer to the vehicle information display.

The turn-by-turn route guidance cannot be transferred to the vehicle information display if the navigation screen is already shown or if a warning is present.

 For more information, refer to your Navigation System Owner's Manual.

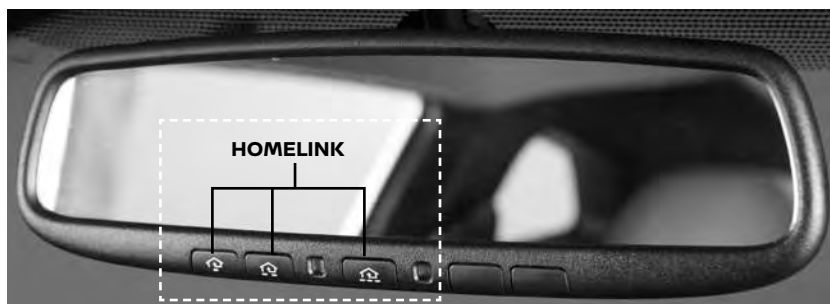

HOMELINK® UNIVERSAL TRANSCEIVER

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programming is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink button, press and release the learn or smart button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to three times to complete the programming process. HomeLink should now activate your device.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- Navigation Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the iPhone App Store or Android Google Play Store for download to your smartphone)



To view detailed instructional videos,
go to www.nissanownersinfo.mobi/2017/gtr
or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

Nissan, the Nissan Brand Symbol, Z and Nissan model names are Nissan trademarks.

© 2016 Nissan North America, Inc.

QR17EA OR35UO

Printing: May 2016 (10)

