 


2017 Juke

QUICK REFERENCE GUIDE



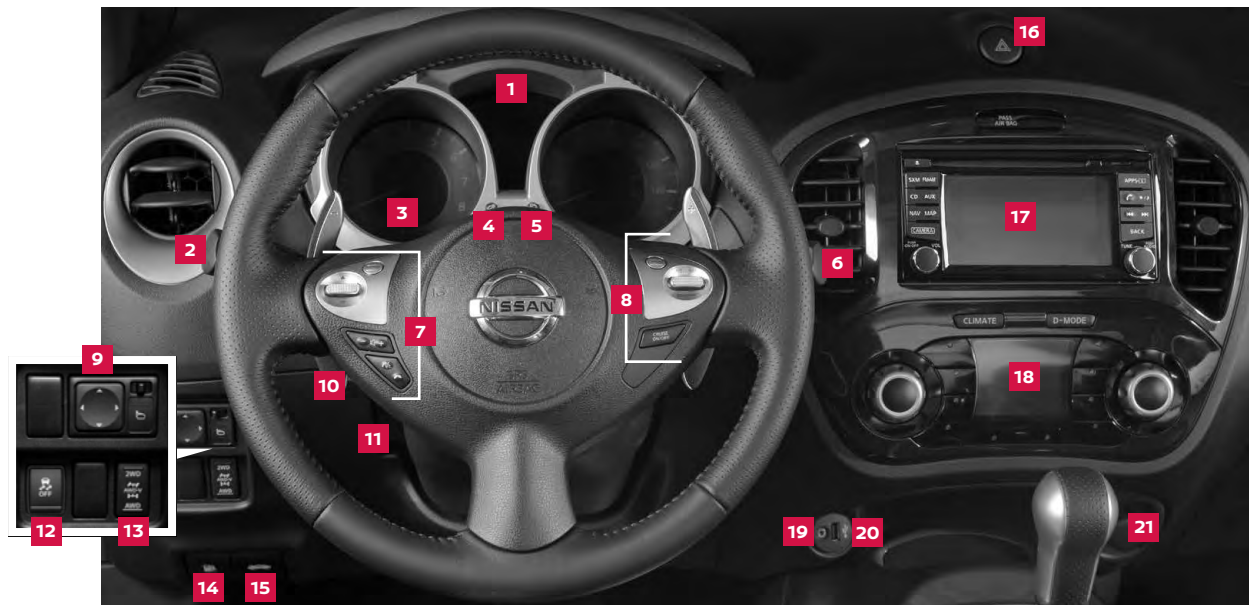

- | | | | |
|---|--|---|---------------------------------------|
| 1 Vehicle Information Display* | 6 Wiper and Washer Switch | 12 Vehicle Dynamic Control (VDC) OFF Switch* | 17 Audio and Navigation System |
| 2 Headlight and Turn Signal Switch | 7 Steering Wheel Switches for Audio* / Bluetooth® / Siri® Eyes Free | 13 All-Wheel Drive (AWD) Switch* | 18 Integrated Control System |
| 3 Low Tire Pressure Warning Light | 8 Cruise Control | 14 Fuel-filler Door Release | 19 Auxiliary Jack* |
| 4 Instrument Brightness Control Switch* | 9 Outside Mirror Control Switch | 15 Hood Release* | 20 USB Connection Port |
| 5 Twin Trip Odometer Reset Switch* / Trip Computer Mode Switch | 10 Paddle Shifters* | 16 Hazard Warning Flasher Switch* | 21 Power Outlet* |
| 11 Tilt Steering Adjustment* | | | |

*See your Owner's Manual for information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

Around View® Monitor (AVM) with Moving Object Detection (MOD) (if so equipped) . . . 2

SiriusXM Travel Link and SiriusXM Traffic (if so equipped) . . . 4

Siri® Eyes Free . . . 4

ESSENTIAL INFORMATION

Fuel Efficient Driving . . . 5

Tire Pressure Monitoring System (TPMS) . . . 5

Loose Fuel Cap . . . 6

Fuel-filler Door . . . 6

Towing Your Vehicle . . . 6

USB (Universal Serial Bus) Connection Port/Aux Jack and iPod® Interface . . . 7

Setting Display Brightness and Button Brightness . . . 7

Clock Set/Adjustment . . . 7

FIRST DRIVE FEATURES

Nissan Intelligent Key® System . . . 9

Liftgate Release . . . 10

Heated Seats (if so equipped) . . . 10

Outside Mirror Control Switch . . . 11

Starting/Stopping the Engine . . . 11

Headlight Control Switch . . . 12

Wiper and Washer Switch . . . 13

Heater and Air Conditioner (automatic) (with Integrated Control System) (if so equipped) . . . 14

Drive Mode (with Integrated Control System) (if so equipped) . . . 15

FM/AM/SiriusXM® Satellite Radio with CD Player (if so equipped) . . . 16

Cruise Control . . . 17

Seat Adjustments . . . 17

SYSTEM GUIDE

Trip Computer . . . 18

Text Messaging . . . 18

NissanConnectSM Mobile Apps (if so equipped) . . . 19

Bluetooth® Hands-free Phone System . . . 20

• System Operating Tips . . . 20

Bluetooth® System without Navigation (if so equipped) . . . 20

Bluetooth® System with Navigation (if so equipped) . . . 22

Navigation System (if so equipped) . . . 24



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**”, the “**Heater, air conditioner, audio and phone systems (section 4)**” and the “**Starting and driving (section 5)**” of your Owner's Manual.

 
NEW SYSTEM FEATURES

AROUND VIEW® MONITOR (AVM) WITH MOVING OBJECT DETECTION (MOD) (if so equipped)


- With the ignition switch in the ON position, the Around View® Monitor is activated by pressing the **CAMERA** button **1**, located on the navigation unit, or by moving the shift lever to the **R (REVERSE)** position. The monitor displays various views of the position of the vehicle.



- When the vehicle is in the **P (PARK)**, **N (NEUTRAL)** or **D (DRIVE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:


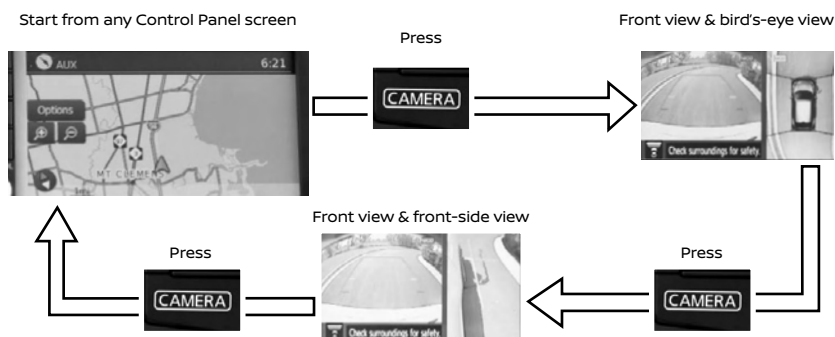


 - When the vehicle is in the **R (REVERSE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

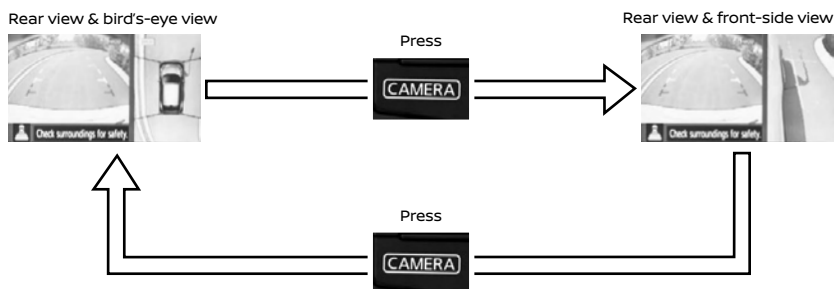

- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).

  - There are some areas where the system will not show objects.
- When in the front or rear view display, an object below the bumper or on the ground may not be viewed **2**.
- When in the bird's-eye view, a tall object near the seam of the camera viewing areas **3** will not appear in the monitor.
- The distance between the objects viewed on the Around View Monitor differs from the actual distance.
- Objects in the bird's-eye view will appear further than the actual distance.

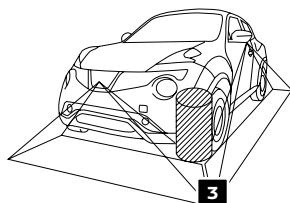

MOVING OBJECT DETECTION (MOD)

- If the MOD system detects moving objects surrounding the vehicle, a yellow frame will be displayed on the view where the objects are detected and a chime will sound once.
- In the bird's-eye view, a yellow frame is displayed on those camera images (front, rear, right, left) where moving objects are detected.
- The yellow frame **4** is displayed on each view in the front view and rear view modes.
- When the following are displayed:
 - Blue MOD icon **5**; the system is operative in this view.
 - Gray MOD icon **6**; the system is not operative in this view.
 - No MOD icon; the system is off.
- The MOD system will turn on automatically under the following conditions:
 - When the shift lever is in the **R (REVERSE)** position.
 - When the **CAMERA** button **1** is pressed to switch from a different screen to the camera view on the display.
 - When the vehicle speed decreases below approximately 5 mph (8 km/h).
 - When the ignition switch is placed in the OFF position and then back to the ON position.



 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Heater, air conditioner, audio and phone systems (section 4)**" of your Owner's Manual.

NEW SYSTEM FEATURES

SiriusXM TRAVEL LINK AND SiriusXM TRAFFIC (if so equipped)

- Your vehicle's Navigation System is equipped with SiriusXM Travel Link and SiriusXM Traffic capabilities.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings, sports scores and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.

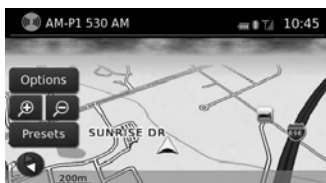

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Navigation (section 4)"** and the **"General system information (section 6)"** of your Navigation System Owner's Manual.

SIRI® EYES FREE

- If you have a compatible iPhone® with Siri®, you can link your iPhone® to the Siri® Eyes Free function in your vehicle's Bluetooth® System.
- If you have a compatible iPhone® connected to the system, press and hold the  button **1** on the steering wheel for a few seconds and Siri® will be activated in Eyes Free mode.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Heater, air conditioner, audio and phone systems (section 4)"** of your Owner's Manual and visit www.NissanUSA.com/bluetooth.

ESSENTIAL INFORMATION

FUEL EFFICIENT DRIVING

- Fuel Efficient Driving Tips can be found in your Owner's Manual. These tips are intended to help you achieve the best fuel economy from your vehicle.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A **CHECK...TIRE...PRES...** warning message **1** will appear as scrolling text in the vehicle information display **2** and the low tire pressure warning light **3** will illuminate when one or more tires are low in pressure and air is needed.

- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.

- After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **CHECK...TIRE...PRES...** warning message **1** and the low tire pressure warning light **3** will extinguish.

- When the low tire pressure warning light **3** flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended you visit a Nissan dealer for this service.

 
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **3** to illuminate. If the warning light illuminates, check the tire pressure in your tires.

- Check the tire pressures (including the spare tire) often and always prior to long distance trips.

- The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 10)" of your Owner's Manual for the location of the Tire and Loading Information label.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Do-it-yourself (section 8)" of your Owner's Manual.

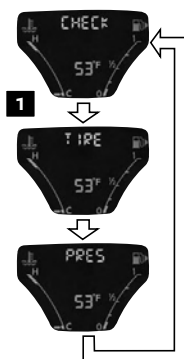

ESSENTIAL INFORMATION

LOOSE FUEL CAP

 - A **LOOSE FUEL CAP** warning message will appear in the vehicle information display **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the reset button **2** is pressed for more than 1 second.
- If the cap is not properly tightened, the Malfunction Indicator Light **SERVICE ENGINE SOON** may illuminate.

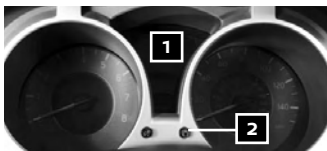

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** and the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

FUEL-FILLER DOOR

- To open the fuel-filler door, pull the release **1** located on the lower instrument panel to the left of the steering wheel.
- The fuel-filler door is located on the passenger's side of the vehicle.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.



TOWING YOUR VEHICLE

ALL-WHEEL DRIVE (AWD) VEHICLE

- An all-wheel drive vehicle must be towed with all wheels off the ground even if the vehicle is in the 2WD mode.

For proper towing and to avoid accidental damage to your vehicle, NISSAN recommends that a service operator tow your vehicle after carefully reading the Owner's Manual precautions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"In case of emergency (section 6)"** of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

USB (Universal Serial Bus) CONNECTION PORT/AUX JACK AND iPod® INTERFACE

- The USB port/Aux jack **1** is located underneath the climate controls.
- When a compatible USB memory device, iPod® or auxiliary device is plugged into the USB port/Aux jack, compatible audio files stored on the device can be played through the vehicle's audio system.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Heater, air conditioner, audio and phone systems (section 4)**" of your Owner's Manual.

SETTING DISPLAY BRIGHTNESS AND BUTTON BRIGHTNESS

To adjust the Display Brightness and Button Brightness:

1. Press the **D-MODE** Select button.
2. Press the **SETUP** button.
3. Turn the Selection dial to "Display Brightness" or "Button Brightness" then press the **ENTER** button.
4. Turn the Selection dial to "+" to increase brightness or to "-" to decrease brightness then press the **ENTER** button to apply the selection.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

CLOCK SET/ADJUSTMENT

FM/AM RADIO WITH COMPACT DISC (CD) PLAYER (if so equipped) AND FM/AM/SAT RADIO WITH COMPACT DISC (CD) PLAYER (if so equipped)

1. Press the **ENTER/SETTING** button **1** to show the "Settings" screen on the display.
 2. Turn the **TUNE/SCROLL** knob **2** to highlight "Clock Adjust".
 3. Press the **ENTER/SETTING** button **1** to highlight the hours or minutes and use the **TUNE/SCROLL** knob **2** to adjust the value.
 4. Press the **ENTER/SETTING** button **1** to set the value.
- Press the **BACK** button **3** to return to the previous screen.



 
To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

ESSENTIAL INFORMATION

WITH NAVIGATION (if so equipped)

- To adjust the time and the appearance of the clock on the display:

1. Press the **APPS** button **4**.
2. Touch the "Settings" key.
3. Touch the "System" key.
4. Touch the "Clock" key.

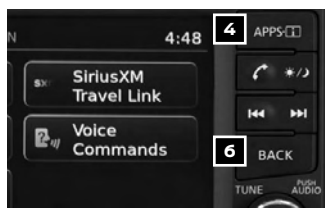

- The following settings can be adjusted:

- Time Format: The clock can be set to 12 hours or 24 hours.
- Date Format: The date can be changed to one of five different formats.
- Clock Mode: From here, the clock mode options are:
 - Manual: Allows for the option "Set Clock Manually". Touch this to begin setting the clock manually using the "+" or "-" to adjust the hours, minutes, day and month up or down.
 - Time Zone: Touch the "Time Zone" key **5** to choose from the applicable time zone list and/or touch "Daylight Savings Time" to switch between ON and OFF.
 - Auto: Automatically sets the clock to the vehicle's current location.



- Press the **BACK** button **6** to return to the previous screen.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Heater, air conditioner, audio and phone systems (section 4)**" of your Owner's Manual.

FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM

The Nissan Intelligent Key® system allows you to lock or unlock the vehicle, open your liftgate and start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **1**, push the liftgate request switch **2** or press the **i** button **3** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push any door handle request switch **1** once; the corresponding door will unlock. Push the request switch **1** again within 1 minute; all other doors will unlock, or
 - Press the **i** button **4** on the key fob to unlock the driver's side door. Press the **i** button **4** again; all other doors will unlock.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the **panic** button **5** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.

 
 
 
INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Move the shift lever to the **P (PARK)** position (Continuously Variable Transmission) or to the **N (NEUTRAL)** position (manual transmission).
 2. Firmly apply the foot brake.
 3. Push the ignition switch with the Intelligent Key, and a chime will sound.
 4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**", the "**Starting and driving (section 5)**" and the "**Do-it-yourself (section 8)**" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

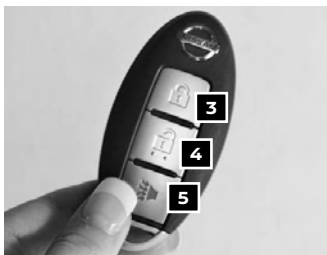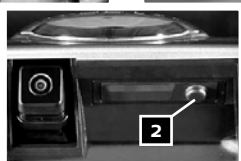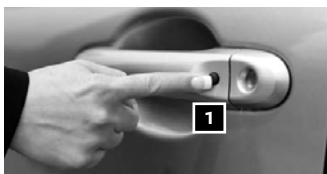


FIRST DRIVE FEATURES

LIFTGATE RELEASE

- It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).
- To open the liftgate, first unlock the liftgate using one of the following methods:
 - Press the **1** button **1** on the key fob twice.
 - Push the liftgate request switch **2**.
- Then push the liftgate release switch **3** and pull the liftgate up.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

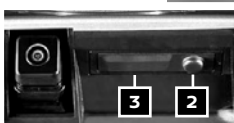

HEATED SEATS (if so equipped)

- The seats are warmed by built-in heaters. The switches **1**, located on the center console, can be operated independently of each other.
- Push the **HI** (high) side of the switch for high heat. Push the **LO** (low) side of the switch for low heat.
- The indicator light on the switch will illuminate when the heater is on. The indicator light will remain on as long as the switch is on.
- To turn off the heater, return the switch to the level position. Be certain the indicator light extinguishes.
- The heater is controlled by a thermostat, automatically turning the heating element on and off.
- When the vehicle's interior is warmed or before you leave the vehicle, be sure to turn the switch off.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

OUTSIDE MIRROR CONTROL SWITCH

- The outside mirror control switch is located on the left side of the instrument panel.
- To select the left or right mirror, move the switch **1**.
- Adjust each mirror to the desired position using the control switch **2**.
- To prevent accidentally moving the mirror, move the switch **1** to the center (neutral) position.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

STARTING/STOPPING THE ENGINE

CONTINUOUSLY VARIABLE TRANSMISSION

(if so equipped)

- It is important to make sure the Nissan Intelligent Key® is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Move the shift lever to the **P (PARK)** position.
- Press the ignition switch **START/STOP** button to start the engine.



MANUAL TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Move the shift lever to the **N (NEUTRAL)** position.
- Depress the clutch pedal to the floor while pressing the ignition switch **START/STOP** button to start the engine.

TURNING THE ENGINE OFF

- For a Continuously Variable Transmission, move the shift lever to the **P (PARK)** position, apply the parking brake and press the ignition switch **START/STOP** button
- For a manual transmission, apply the foot brake and place the vehicle in **1st (FIRST)** gear, then apply the parking brake and press the ignition switch **START/STOP** button.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

FIRST DRIVE FEATURES

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.

 
 


AUTOLIGHT SYSTEM (if so equipped)

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then push the ignition switch to ON. To deactivate the autolight system, turn the headlight control switch to the **OFF** position,  position **1** or  position **2**.

HIGH BEAM SELECT

- With the headlights ON (either in the **AUTO** or  position), push the headlight control switch forward **4** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.

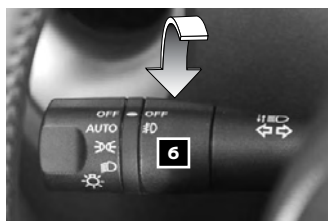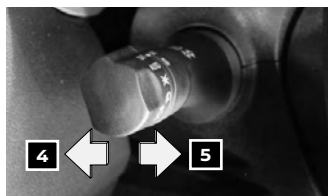

FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **6** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.

LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.
- Choose the appropriate method to signal a lane change based on the road and traffic conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:

- 1** Mist (**MIST**) - One sweep operation of the front wipers.
- 2** Intermittent (**INT**) - Wipers operate intermittently. The intermittent speed can be adjusted by rotating the control ring **3** to increase or decrease wiper speed.
- 4** Low (**LO**) - Front wipers operate at a continuous low-speed.
- 5** High (**HI**) - Front wipers operate at a continuous high-speed.
- 6** Pull the lever toward you to activate the front washer. The front wipers will operate several times.

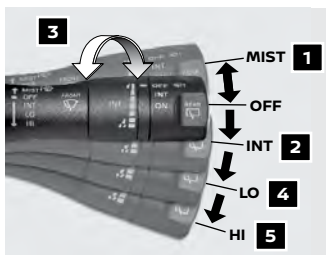

REAR WIPER AND WASHER

- 7** Intermittent (**INT**) - Rear wiper operates intermittently.
- 8** Low (**ON**) - Rear wiper operates at a continuous low-speed.
- 9** Push the lever forward to activate the rear washer. The rear wiper will operate several times.



WIPER BLADE REPLACEMENT PROCEDURE

The windshield wipers must be in the service position in order to replace the wiper blades. To move the wiper blades to the service position, follow this procedure:

- When the ignition switch is in the ON position or within 60 seconds of placing the ignition switch in the OFF position, lift the windshield wiper and washer lever up to the **MIST**  position **1** two times in less than 0.5 seconds. The windshield wipers will move to the service position automatically, and the wiper blades can now be replaced.

To move the wiper blades back to the original position:

 
- Lift the windshield wiper and washer lever up or lower the lever down to operate at any wiper speed.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" and the "**Do-it-yourself (section 8)**" of your Owner's Manual.



FIRST DRIVE FEATURES

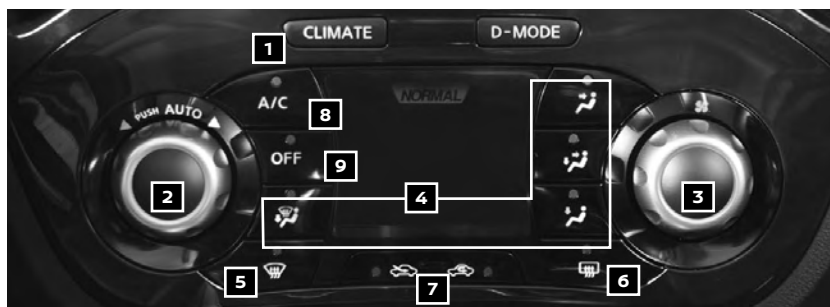

HEATER AND AIR CONDITIONER (automatic) (with Integrated Control System) (if so equipped)

1 CLIMATE BUTTON

- Press the **CLIMATE** button to access the Climate Control mode.
- When in Climate Control mode, the selected temperature, air flow and automatic mode or manual mode are indicated on the display.

2 AUTO BUTTON/TEMPERATURE CONTROL DIAL

- The automatic mode can be used year-round. Press the **AUTO** button to turn the system on, and the fan speed, air flow distribution and temperature will be automatically maintained.
- Turn the temperature control dial left for cooler air or right for warmer air.

3 FAN SPEED CONTROL DIAL

- Turn the fan speed control dial  to the left to decrease fan speed or to the right to increase fan speed.

4 AIR FLOW CONTROL BUTTONS

- Press the preferred air flow control button to select one of the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the front defroster and foot vents.

5 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front defroster button  to turn the system on. The A/C automatically turns on when the front defroster mode is selected. This feature removes humidity from the air.
- Use the temperature control dial **2** to set the desired temperature.
- To set the front defroster on high, turn the fan speed control dial **3** to increase the fan speed to the maximum setting.

6 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Push the rear window and outside mirror (if so equipped) defroster switch  to turn the system on or off.
- The rear window and outside mirror defroster automatically turns off after approximately 15 minutes.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

7 AIR INTAKE BUTTON

- Press the air intake button to change the air circulation from the air recirculation mode to the outside air circulation mode.
- When the air recirculation indicator light  illuminates, the flowing air is recirculated inside the vehicle. This system is used to avoid outside odors and to help adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot outlet mode .
- When the outside air circulation indicator light  illuminates, the flowing air is drawn from outside the vehicle.

8 A/C BUTTON

- Press the **A/C** button to manually turn the A/C on or off.

9 OFF BUTTON

- Press the **OFF** button to turn the climate control system off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Heater, air conditioner, audio and phone systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.



DRIVE MODE (with Integrated Control System) (if so equipped)

1 DRIVE MODE SELECT BUTTON

- Press the **D-MODE** button **1** to switch the display to the Drive mode. While in the Drive mode, set-up functions, drive information and ECO information can be displayed and adjusted.
- Your vehicle's Integrated Control System allows vehicle performance to be adjusted by selecting from three drive modes: **NORMAL**, **SPORT** or **ECO**.
- **NORMAL** **2** drive mode is recommended for normal, everyday driving.
- **SPORT** **3** drive mode is recommended for an enhanced performance feel. Fuel economy may be reduced.
- **ECO** **4** drive mode is recommended for maximum fuel economy. Performance may be reduced.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Heater, air conditioner, audio and phone systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FIRST DRIVE FEATURES



FM/AM/SiriusXM® SATELLITE RADIO WITH CD PLAYER (if so equipped)

1 ON-OFF BUTTON/VOL (volume) CONTROL KNOB

- Press the **ON-OFF** button to turn the system on or off.
- Turn the **VOL** (volume) control knob to the right or left to increase or decrease the volume.

2 AUDIO BUTTON/TUNE KNOB

- Press the **AUDIO** button to go to the audio settings screen.
- To manually tune the radio, turn the **TUNE** knob left or right.

3 SEEK BUTTONS

- To tune and stop at the previous or next broadcast station, press the seek buttons **◀◀** or **▶▶**.
- For satellite radio to switch to the first channel of the previous or next category, press the seek buttons **◀◀** or **▶▶**.
- To change tracks on a CD, press the seek buttons **◀◀** or **▶▶**.
- To rewind or fast forward a track on a CD, press and hold the seek buttons **◀◀** or **▶▶**.

4 STATION SELECT BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **5** or the **SXM** button **6** then tune to the desired FM, AM or satellite radio station.
- Now select and hold the desired station memory key (**1-6**) until the preset number is updated on the display and a beep is heard. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then select the corresponding station memory key (**1-6**).

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Heater, air conditioner, audio and phone systems (section 4)"** of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **CRUISE ON/OFF** switch **1** on the steering wheel. The CRUISE indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** on the steering wheel and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **4** on the steering wheel.
- To turn off cruise control, push the **CRUISE ON/OFF** switch **1** on the steering wheel. The CRUISE indicator light in the instrument panel will extinguish.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

SEAT ADJUSTMENTS

- To slide the seat forward or backward, pull up on the lever **1** under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- To recline the seatback, pull up on the lever **2** and lean back. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.



SEAT LIFTER (driver's seat)

- To adjust the seat height, pull up or push down on the adjusting lever **3** repeatedly.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

SYSTEM GUIDE

TRIP COMPUTER

With the ignition switch in the ON position, trip computer **1** modes can be selected by pushing the trip computer mode switch **2** on the instrument panel. The following modes can be selected in the display:



- **Trip A** – measures the distance of one specific trip.
- **Trip B** – measures the distance of a second specific trip.
- **Current Fuel Consumption** – displays the current fuel consumption.
- **Distance to Empty (dte)** – displays the estimated distance to empty the vehicle can be driven before refueling.
- **Average Fuel Consumption** – displays the average fuel consumption since the last reset.
- **Torque Vectoring AWD (AWD model)** – displays the current amount of torque distributed to each wheel.

Push the trip computer mode switch **2** for approximately 1 second to reset the currently displayed trip odometer to zero.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner's Manual.

TEXT MESSAGING*

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you need to enable “Notifications” in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.



*Laws in some jurisdictions may restrict the use of “Text-to-Speech”. Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Heater, air conditioner, audio and phone systems (section 4)**” of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

NISSANCONNECTSM MOBILE APPS (if so equipped)

- Your vehicle may be equipped with NissanConnectSM Mobile Apps, allowing you to control various compatible smartphone applications through the vehicle's display screen. A basic package is included for a period of time from the original in-service date of the vehicle.
- To enroll in NissanConnectSM Mobile Apps:
 1. Create a Nissan Owner Portal account at **owners.nissanusa.com**.
 - Make sure to include your vehicle's VIN when creating your account.
 2. Under the NissanConnect Mobile Apps tab, select the red button next to Manage Subscription to enroll.
 3. Next, download the NissanConnectSM Mobile Apps companion app from Google Play or the Apple App Store. Log into the companion app using your Nissan Owner Portal ID and password.
 4. Launch the app, select "United States", and accept the Terms and Conditions.
 5. Select "Sign In", then sign in with the email username and password you created when registering on the Nissan Owner Portal website.
- Pair your cellular phone to the vehicle.
 - For Android® devices, the smartphone must be connected through the Bluetooth® Hands-free Phone system.
 - For iPhone® on vehicles WITH Navigation, the device must be connected to the vehicle's USB port using your cellular phone's USB cable.
- You can select which apps you want activated in the vehicle from the NissanConnectSM Mobile Apps companion app by selecting "Manage My Apps". Some apps shown in the companion app may not appear in your vehicle depending on availability for your model.
- Some applications require you to have the app downloaded and installed on your cellular phone, while others require you to enter your username and password to log in. Not all apps shown on the NissanConnect app site are available on all models.
- To help identify specific apps available for your vehicle or to contact a specialist via chat, please visit **www.NissanUSA.com/connect/support**.
- Your available apps will only appear on the screen when your smartphone is connected to both the vehicle and the Internet. For additional information on connecting your device, see your Owner's Manual or visit **www.NissanUSA.com/bluetooth**.
- The NissanConnectSM app must be running on your device and the Connected icon **1** must be green before using your apps. If the Disconnected icon **2** is displayed, press the **APPS** button **3** multiple times to ensure the connection is established.
- To access your apps with the vehicle controls, start your vehicle and then press the **APPS** button **3** on the control panel. The system may take a few seconds to boot up before the **APPS** button **3** is enabled. This is normal.
- If available, your apps can be accessed once the vehicle and cellular phone are connected through the NissanConnectSM Mobile Apps companion app.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to **www.nissanownersinfo.mobi**.

SYSTEM GUIDE

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.

SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "Call Redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To cancel a Voice Recognition session, simply wait 5 seconds, say "Cancel" or "Quit", or press and hold the  button on the steering wheel for 5 seconds.
- To increase or decrease the volume of the voice prompts, push the volume control switches + or - on the steering wheel or turn the volume control knob on the audio system while the audio system is responding.



*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual.

BLUETOOTH® SYSTEM WITHOUT NAVIGATION* (if so equipped)

CONNECTING PROCEDURE

The vehicle must be stationary when connecting the cellular phone.

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say: "Connect Phone". The system acknowledges the command and announces the next set of available commands.
3. Say: "Add Phone". The system acknowledges the command and asks you to initiate connecting from the cellular phone handset.
4. Initiate connecting from the cellular phone:
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.NissanUSA.com/bluetooth.

- When prompted for a PIN, enter "1234" from the handset. (The PIN is assigned by NISSAN and cannot be changed.)
- 5. Say a name for the cellular phone when the system asks you to provide one. You can give the cellular phone a name of your choice.
- 6. After connecting the cellular phone, press the  button on the steering wheel for 1.5 seconds to activate Siri® Eyes Free.

PHONEBOOK SETUP

- The phonebook stores up to 1,000 entries for each cellular phone paired with the system.
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, entries can be individually downloaded.
- To manually download entries:
 1. Press the  button on the steering wheel.
 2. After the tone, say "Phonebook".
 3. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the cellular phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.
 - The transfer procedure varies according to each cellular phone. See your cellular phone's Owner's Manual for details. You can also visit www.NissanUSA.com/bluetooth for instructions on transferring phone numbers from Nissan-recommended cellular phones.
 4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, choose "Store".
 5. The system confirms the name, location and number.

MAKING A CALL FROM THE PHONEBOOK

In some cases, names stored using all UPPERCASE letters may not be recognized by the Voice Recognition system.

1. Press the  button on the steering wheel.
2. After waiting for the tone, say "Call".
3. After the next tone, speak the name of a phonebook entry. For example, "Michael Smith".
4. Confirm the correct name is recognized by saying "Dial" after the tone.

MAKING A CALL BY PHONE NUMBER

1. Press the  button on the steering wheel. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.

SYSTEM GUIDE

3. Say: "Phone Number". The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- When you receive a cellular phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button on the steering wheel.
- To hang up the cellular phone at the end of a call or to disconnect during call placement, press the  button on the steering wheel.

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual or please visit www.NissanUSA.com/bluetooth.

BLUETOOTH® SYSTEM WITH NAVIGATION* (if so equipped)

- Send predefined or custom text messages through your vehicle's Bluetooth® system.
- Receive texts through your vehicle's Bluetooth® system that can be read to you.
- Bluetooth® Streaming Audio allows you to use a compatible Bluetooth® cellular phone to play audio files on your device. Your compatible cellular phone can be connected to the vehicle's audio system, allowing audio files to play through the vehicle's speakers.

CONNECTING PROCEDURE

 
1. Press the **APPS**  button on the control panel.
2. Touch the "Settings" key .
3. Touch the "Phone & Bluetooth" key .
4. Touch the "Connect New Device" key .
5. Initiate the connecting process from the handset. The system will display the message: "Is PIN XXXXXX displayed on your Bluetooth device?"
If the PIN is displayed on your Bluetooth® device, select "Yes" to complete the connecting process.



VEHICLE PHONEBOOK

To access the vehicle phonebook:

1. Press the  button on the control panel.
2. Touch the "Phonebook" key .
3. Choose the desired entry from the displayed list.

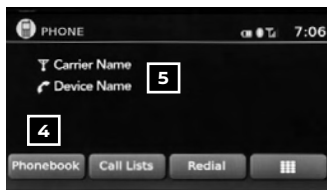


MAKING A CALL

1. Press the  button on the control panel. The "PHONE" screen  will appear on the display.
2. Select one of the following options to make a call:
 - "Phonebook": Select the name from an entry stored in the vehicle phonebook.
 - "Call Lists": Select the name from the incoming, outgoing or missed call history.
 - "Redial": Dial the last outgoing call from the vehicle.
 - : Input the phone number manually using the keypad displayed on the screen.

RECEIVING/ENDING A CALL

 - To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Select the  icon on the screen.
- To reject the incoming call, either:
 - Press the  button on the steering wheel, or
 - Select the  icon on the screen.
- To end a cellular phone call, either:
 - Press the  button on the steering wheel, or
 - Select the  icon on the screen.

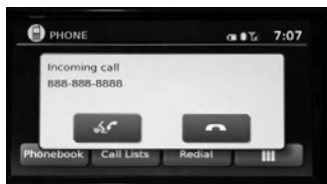

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual or visit www.NissanUSA.com/bluetooth.

SYSTEM GUIDE



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to the "Heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual.

- 1 NAV button** – Press to access the functions of the Navigation System.
- 2 MAP button** – Press to display the current location map screen.
- 3 VOL knob** – Turn right to increase the volume or left to decrease the volume.
- 4 + key** – Select to zoom the map in.
- 5 - key** – Select to zoom the map out.
- 6 APPS button** – Press to access SiriusXM Traffic, MyApps, Settings, SiriusXM Travel Link and Voice Commands.
- 7 ☀/☾ button** – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **TUNE** knob. Press and hold to turn the display off. Press again to turn the display on.
- 8 BACK button** – Press to return to the previous screen.
- 9 TUNE knob** – Turn to navigate the items in a list. Press to select a menu item.
- 10 Touch-screen display**
- 11 SD-card location** – An SD-card with map data must be inserted here for map functions to operate.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your Navigation System Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- Navigation Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the iPhone App Store or Android Google Play Store for download to your smartphone)



To view detailed instructional videos,
go to www.nissanownersinfo.mobi/2017/juke
or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in the Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

