 


2017 **NV1500**
NV2500 HD
NV3500 HD

QUICK REFERENCE GUIDE



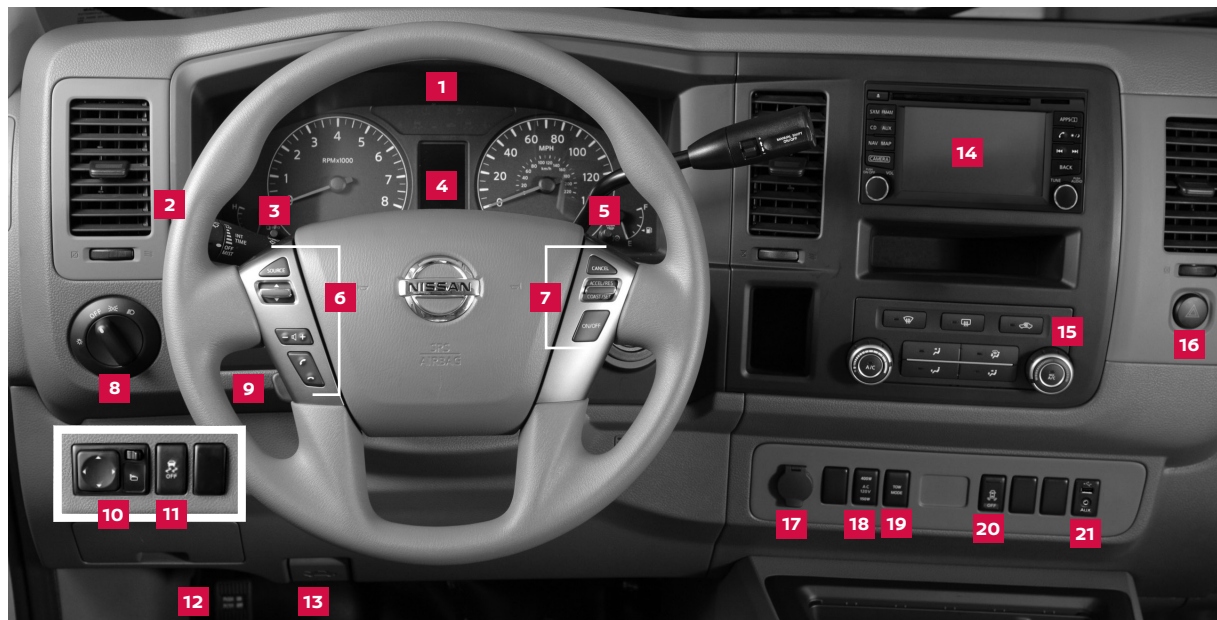

- 1** Low Tire Pressure Warning Light
- 2** Wiper and Washer / Headlight Beam Select / Turn Signal Control Switch
- 3** Trip Computer Info Button*
- 4** Trip Computer

- 5** Instrument Brightness Control / Trip Odometer Reset Switch*
- 6** Steering Wheel Switches for Audio / Bluetooth®
- 7** Cruise Control
- 8** Headlight Control Switch
- 9** Tilt Steering Wheel Control*

- 10** Outside Power Mirror Switch
- 11** Vehicle Dynamic Control (VDC) OFF Switch*
- 12** Parking Brake*
- 13** Hood Release*
- 14** Audio and Navigation System
- 15** Heater and Air Conditioner (manual)

- 16** Hazard Warning Flasher Switch*
- 17** Power Outlet*
- 18** Power Inverter Switch
- 19** Tow Mode Switch*
- 20** Rear Sonar System OFF Switch*
- 21** USB / Aux and iPod® Jack

*See your Owner's Manual for more information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

Power Inverter Switch (if so equipped)	2
RearView Monitor (if so equipped)	2
Hands-free Text Messaging Assistant (if so equipped)	2
SiriusXM Travel Link and SiriusXM Traffic (if so equipped)	3

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS)	4
Fuel-filler Door	5
Loose Fuel Cap	5
Clock Set/Adjustment (if so equipped)	5

FIRST DRIVE FEATURES

Remote Keyless Entry System (if so equipped)	7
Opening the Back Doors	7
Operating the Sliding Door	8
Front Power Seat Adjustment (if so equipped for driver's seat)	8
Outside Power Mirror Control Switch (if so equipped)	9
Starting/Stopping the Engine	9
Headlight Control Switch	10
Wiper and Washer Switch	10
Heater and Air Conditioner (manual) (if so equipped)	11
FM/AM/SiriusXM® Satellite Radio with CD Player (if so equipped)	12
USB (Universal Serial Bus) Connection Port/Aux Jack and iPod® Interface (if so equipped)	13
Cruise Control (if so equipped)	14
Power Outlets	14

SYSTEM GUIDE

NissanConnect SM Mobile Apps (if so equipped)	16
Trip Computer	17
Bluetooth® Hands-free Phone System (if so equipped)	18
• System Operating Tips	18
Bluetooth® System with Navigation (if so equipped)	19
Navigation System (if so equipped)	21



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

NEW SYSTEM FEATURES

POWER INVERTER SWITCH (if so equipped)

- The power inverter switch is located on the instrument panel below the climate controls. This switch controls power provided to the 120V outlets.
- To use the outlets for items requiring between 150W and 400W, stop your vehicle, place the shift lever in the **P (PARK)** position and push the power inverter switch.
- **400W** or **150W** will illuminate on the switch according to the mode selected.
- Only the 150W mode is available when the ignition switch is placed in the **ACC** or **ON** position or while the vehicle is being driven.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

REARVIEW MONITOR (if so equipped)

- When the shift lever is shifted into the **R (REVERSE)** position, the monitor display shows a rearward view from the vehicle.
- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m);
 - Green 7 ft (2 m) and 10 ft (3 m).



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

HANDS-FREE TEXT MESSAGING ASSISTANT* (if so equipped)

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.



- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you may need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.

* Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

SiriusXM TRAVEL LINK AND SiriusXM TRAFFIC (if so equipped)

- Your vehicle's Navigation System is equipped with SiriusXM Travel Link and SiriusXM Traffic capabilities.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the **"Navigation (section 4)"** and the **"General system information (section 6)"** of your Navigation System Owner's Manual.

ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A **CHECK TIRE** warning message will appear in the trip computer **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.

- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.

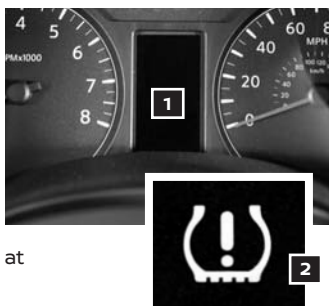

- After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **CHECK TIRE** warning message and low tire pressure warning light **2** will extinguish.
- When the low tire pressure warning light **2** flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a Nissan dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light illuminates, check the tire pressure in all four tires.
 - Check all tire pressures, including the spare tire, often and always prior to long distance trips.
- The Tire and Loading Information label location can be found in the "Technical and consumer information (section 10)" of the Owner's Manual.

TIRE PRESSURE MONITORING SYSTEM (TPMS) SENSOR RESET

- The Tire Pressure Monitoring System (TPMS) has sensors that must be reset after tire rotation.
- After rotating the tires, the low tire pressure warning light **2** will illuminate. The TPMS sensor positions must be relearned.
- When the relearning process has been successfully performed, the low tire pressure warning light **2** will extinguish.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**" and the "**Do-it-yourself (section 8)**" of your Owner's Manual.

FUEL-FILLER DOOR

- The fuel-filler door is located on the driver's side of the vehicle.
- To open the fuel-filler door, pull the lid open.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information. For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will appear in the trip computer **1** when the fuel-filler cap is not tightened correctly.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the reset button **2** is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information. For more information, refer to the **"Instruments and controls (section 2)"** and the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

CLOCK SET/ADJUSTMENT (if so equipped)

FM/AM RADIO WITH COMPACT DISC (CD) PLAYER (Type A) (if so equipped)

- If the clock is not displayed with the ignition switch in the **ACC** or **ON** position, you need to select the "CLK ON" mode. Press the **MENU** button repeatedly until "CLOCK" is displayed. Use the **SEEK** **◀◀** or **▶▶** button to enable the "CLK ON" mode.



1. Press the **MENU** button repeatedly until "CLOCK" appears; press the **SEEK** button **◀◀** or **▶▶** until "CLK ON" appears.
2. Press the **MENU** button again; the hours will start flashing.
3. Press the **SEEK** button **◀◀** or **▶▶** to adjust the hour.
4. Press the **MENU** button again; the display will switch to the minute adjustment mode.
5. The minutes will start flashing. Press the **SEEK** button **◀◀** or **▶▶** to adjust the minutes.
6. Press the **MENU** button again to exit the clock set mode.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

ESSENTIAL INFORMATION

The display will return to the regular clock display after 10 seconds, or press the **MENU** button again to return to the regular clock display.

FM/AM RADIO WITH COMPACT DISC (CD) PLAYER (Type B) (if so equipped)

- If the clock is not displayed with the ignition switch in the **ACC** or **ON** position, press the **CLOCK** button to resume the display. Pressing the **CLOCK** button toggles the clock display on and off.



1. Press and hold the **CLOCK** button until the clock display starts to flash.
2. Press the **SEEK/TRACK** button ▲ or ▼ to adjust the hours.
3. Press the **TUNE/FF-REW/FOLDER** button ▲ or ▼ to adjust the minutes.
4. Press the **CLOCK** button again to exit the clock set mode.

If no action is taken, the display will return to the regular clock display after 10 seconds.

WITH NAVIGATION SYSTEM (if so equipped)

- To adjust the time and the appearance of the clock on the display:

1. Press the **APPS** button **1**.
2. Touch the "Settings" key.
3. Touch the "System" key.
4. Touch the "Clock" key.



- The following settings can be adjusted:

- **Time Format:** The clock can be set to 12 hours or 24 hours.
- **Date Format:** The date can be changed to one of five different formats.
- **Clock Mode:** From here, the clock mode options are:
 - **Manual:** Allows for the option "Set Clock Manually". Touch this to begin setting the clock manually using the "+" or "-" to adjust the hours, minutes, day and month up or down.
 - **Time Zone:** Touch the "Time Zone" key **2** to choose from the applicable time zone list and/or touch "Daylight Savings Time" to switch between ON and OFF.
 - **Auto:** Automatically sets the clock to the vehicle's current location.



- Press the **BACK** button **3** to return to the previous screen.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FIRST DRIVE FEATURES

REMOTE KEYLESS ENTRY SYSTEM (if so equipped)

The Remote Keyless Entry System allows you to lock or unlock your vehicle and turn on the interior lights.

- To lock the vehicle, press the  button on your key fob.
- To unlock the driver's door, press the  button on your key fob.
- Press the  button again within 5 seconds and all doors will unlock.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

OPENING THE BACK DOORS

- Unlock the vehicle by pressing the  button on your key fob twice.
- Pull the door handle  to open the right back door.
- Lift the lever  on the left back door and pull the door to open.
- To open either door to the wide open position, pull the release latch  toward the back door to release the check-link bar.
- Open the door slowly until the magnetic door stopper connects to the stop pad on the outside of the vehicle.



 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

FIRST DRIVE FEATURES

OPERATING THE SLIDING DOOR

- The sliding door can be opened from the inside or outside of the vehicle.
- To open the sliding door from the inside, pull the release lever **1** down and pull the handle **2** toward the rear of the vehicle until the door clicks. The door will lock into an open position.
- To close the sliding door from the inside, pull the release lever **1** down. The door will release from the open position and slide closed.
- To open the sliding door from the outside, pull the outside handle and slide the door toward the rear of the vehicle until the door clicks. The door will lock into an open position.
- To close the sliding door from the outside, pull the outside handle again. The door will release from the open position and slide closed.

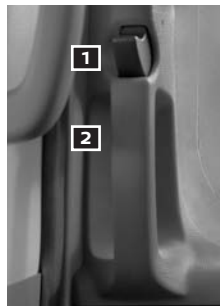


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

FRONT POWER SEAT ADJUSTMENT (if so equipped for driver's seat)

 - Push the switch **1** forward or backward to slide the seat forward or backward.
- Push the switch **2** forward or backward to adjust the angle of the seatback.

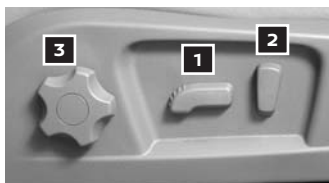

SEAT LIFTER (if so equipped for driver's seat)

- To adjust the angle and height of the seat cushion, push the front or rear end of the switch **1** up or down.

MANUAL LUMBAR SUPPORT (if so equipped for driver's seat)

- Turn the knob **3** to adjust the seat lumbar area.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Safety -- Seats, seat belts and supplemental restraint system (section 1)"** of your Owner's Manual.

OUTSIDE POWER MIRROR CONTROL SWITCH (if so equipped)

- The outside mirror control switch is located on the left side of the instrument panel.
- Move the small switch **1** right or left to select the right or left mirror.
- Adjust each mirror to the desired position using the large switch **2**.
- Move the small switch **1** to the center (neutral) position to prevent accidentally moving the mirror.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

STARTING/STOPPING THE ENGINE

- Depress the brake pedal.
- Move the shift lever to the **P (PARK)** position.
- Turn the ignition switch to the **START** position.

TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Turn the ignition switch to the **LOCK** position.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

FIRST DRIVE FEATURES

 
HEADLIGHT CONTROL SWITCH

- Turn the headlight control switch to the  position to turn on the front parking, tail, license plate and instrument panel lights.
- Turn the control switch to the  position to turn on the headlights.



HIGH BEAM SELECT

- With the headlights ON, push the lever forward **1** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the lever back to the original position to select the low beam function and the blue indicator light will extinguish.
- Pull and release the lever **2** to flash the headlight high beams on and off.

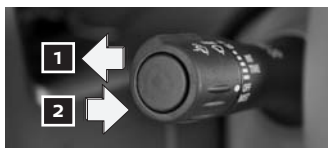

LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

WIPER AND WASHER SWITCH

- Rotate the control ring to one of the following positions to operate the windshield wipers:

 
- 1** Mist (**MIST**) – One sweep operation of the wipers.
- 2** Auto (**AUTO**) (if so equipped) – Operates the rain-sensing wipers intermittently. The intermittent speed can be adjusted by rotating the control ring to increase or decrease wiper sensitivity.
- 3** Low (**LO**) – Wipers operate at a continuous low-speed.
- 4** High (**HI**) – Wipers operate at a continuous high-speed.
- 5** To activate the washer, press the button on the end of the lever. The wipers will operate several times.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

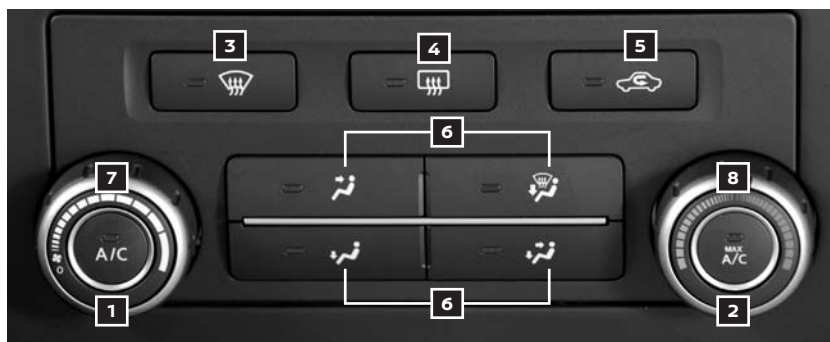

HEATER AND AIR CONDITIONER (manual) (if so equipped)

1 FAN SPEED CONTROL DIAL

- Turn the fan speed control dial  to the left (low) or right (high) to control fan speed.

2 TEMPERATURE CONTROL DIAL

- Turn the temperature control dial to select the desired temperature. Turn the control dial to the left for cooler air or the right for warmer air.

3 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front defroster button  to turn the system on or off.

4 REAR WINDOW AND OUTSIDE MIRROR (if so equipped)

DEFROSTER SWITCH

- Push the rear window defroster and outside mirror (if so equipped) switch  to turn the system on or off.
- The rear window and outside mirror (if so equipped) defroster automatically turns off after approximately 15 minutes.

5 AIR RECIRCULATION BUTTON

- Press the air recirculation button to recirculate air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot outlet mode .

FIRST DRIVE FEATURES

6 AIR FLOW CONTROL BUTTONS

- Press the preferred air flow control button to select one of the following air flow outlets:

 Air flows from the center and side vents.

 Air flows from the center, side and foot vents.

 Air flows mainly from the foot vents.

 Air flows from the front defroster and foot vents.

7 A/C BUTTON

- Press the **A/C** or the **MAX A/C** button **8** to manually turn the A/C on or off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.



FM/AM/SiriusXM® SATELLITE RADIO WITH CD PLAYER (if so equipped)

1 ON-OFF BUTTON/VOL (volume) CONTROL KNOB

- Press the **ON-OFF** button to turn the system on or off.
- Turn the **VOL** (volume) control knob to the right or left to increase or decrease the volume.

2 AUDIO BUTTON/TUNE KNOB

- Press the **AUDIO** button to go to the audio settings screen.
- To manually tune the radio, turn the **TUNE** knob left or right.

3 SEEK BUTTONS

- To tune and stop at the previous or next broadcast station, press the seek buttons ◀◀ or ▶▶.
- For satellite radio to switch to the first channel of the previous or next category, press the seek buttons ◀◀ or ▶▶.
- To change tracks on a CD, press the seek buttons ◀◀ or ▶▶.
- To rewind or fast forward a track on a CD, press and hold the seek buttons ◀◀ or ▶▶.

4 STATION SELECT KEYS

- Twelve stations can be set for the FM band, six for the AM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **5** or **SXM** button **6** then tune to the desired FM, AM or satellite radio station.
- Next press and hold the desired station select button (**1-6**) until a beep is heard and the sound is briefly muted. The channel indicator will appear on the display, and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (**1-6**).

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

USB (Universal Serial Bus) CONNECTION PORT/ AUX JACK AND IPOD® INTERFACE (if so equipped)

- The USB port/Aux jack **1** is located on the instrument panel below the climate controls.
- When a compatible USB memory device, iPod® or auxiliary device is plugged into the USB port/Aux jack **1**, compatible audio files stored on the device can be played through the vehicle's audio system.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

FIRST DRIVE FEATURES

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **CRUISE ON/OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** on the steering wheel and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **4**.
- To turn off cruise control, push the **CRUISE ON/OFF** switch **1**. The **CRUISE** indicator light in the instrument panel will extinguish.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

POWER OUTLETS

12V OUTLETS

- The power outlets are for powering electrical accessories such as a cellular phone. They are rated at 12V, 120W (10A) maximum.
- Open the cap to use a power outlet.
- The power outlet on the instrument panel **1** is powered only when the ignition switch is in the **ACC** or **ON** position.
- The power outlet located inside the center console storage box (if so equipped) **2** is powered directly by the vehicle's battery.



To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

120V OUTLETS (if so equipped)

- There are two 120V power outlets supplied with your vehicle. They are located inside the center console storage box **3** and in the cargo area **4**.
- Use the 120V power outlets with the engine running to avoid discharging the vehicle's battery.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

SYSTEM GUIDE

NISSANCONNECTSM MOBILE APPS (if so equipped)

- Your vehicle may be equipped with NissanConnectSM Mobile Apps, allowing you to control various compatible smartphone apps through the vehicle's display screen. A basic package is included for a period of time from the original in-service date of the vehicle.
- To enroll in NissanConnectSM Mobile Apps:
 1. Create a Nissan Owner Portal account at **owners.NissanUSA.com**.
 - Make sure to include your vehicle's VIN when creating your account.
 2. Under the NissanConnect Mobile Apps tab, select the red button next to Manage Subscription to enroll.
 3. Next, download the NissanConnectSM Mobile Apps companion app from Google Play or the Apple App Store. Log into the companion app using your Nissan Owner Portal ID and password.
 4. Launch the app, select "United States" and, accept the Terms and Conditions.
 5. Select "Sign In", then sign in with the email username and password you created when registering on the Nissan Owner Portal website.
- Pair your cellular phone to the vehicle.
 - For Android® devices, the smartphone must be connected through the Bluetooth® Hands-free Phone system.
 - For iPhone® on vehicles WITH Navigation, the device must be connected to the vehicle's USB port using your cellular phone's USB cable.
 - For iPhone® on vehicles WITHOUT Navigation, connect the device using the Bluetooth® Hands-free Phone system.
- You can select which apps you want activated in the vehicle from the NissanConnectSM Mobile Apps companion app by selecting "Manage My Apps". Some apps shown in the companion app may not appear in your vehicle depending on availability for your model.
- Some apps require you to have the app downloaded and installed on your cellular phone, while others require you to enter your username and password to log in. Not all apps shown on the NissanConnect app site are available on all models.
- To help identify specific apps available for your vehicle or to contact a specialist via chat, please visit **www.NissanUSA.com/connect/support**.
- Your available apps will only appear on the screen when your smartphone is connected to both the vehicle and the Internet. For additional information on connecting your device, see your Owner's Manual or visit **www.NissanUSA.com/bluetooth**.

- The NissanConnectSM app must be running on your device and the **"Connected"** icon **1** must be green before using your apps. If the **"Disconnected"** icon **2** is displayed, press the **APPS** button **3** multiple times to ensure the connection is established.



- To access your apps with the vehicle controls, start your vehicle and then press the **APPS** button **3** on the control panel. The system may take a few seconds to boot up before the **APPS** button **3** is enabled. This is normal.



 
 
- If available, your apps can be accessed once the vehicle and cellular phone are connected through the NissanConnectSM Mobile Apps companion app.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

TRIP COMPUTER

- Turn the **INFO** knob **1** to display the following modes in the trip computer display **2**:
 - **RANGE** – Displays the estimated distance the vehicle can be driven before refueling.
 - **AVG MPH** – Displays the average speed since the last reset.
 - **TIME** – Displays the time driven since the last reset.
 - **TIRE INFO** – Displays the specific tire pressure of each tire (except the spare).
 - **SETTINGS** – The setting mode allows you to set reminders or preferences for maintenance intervals, reset the TPMS after rotating the tires or change the unit of the display. In the setting mode screen, turn the **INFO** knob **1** to select settings. Press the **INFO** button **1** to select and change one of the menu items.
 - **WARNING** – Displays when a warning is present.
- To reset **TRIP A** or **TRIP B**, go to the desired mode on the trip computer and press and hold the **PUSH TRIP** knob **3** for more than 1 second.

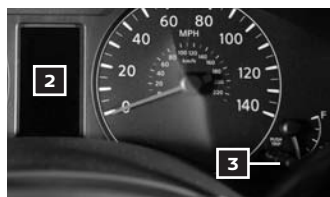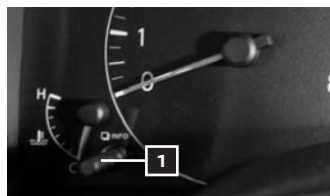

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

SYSTEM GUIDE

BLUETOOTH® HANDS-FREE PHONE SYSTEM* (if so equipped)

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.

SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "Call Redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To cancel a Nissan Voice Recognition session, simply wait 5 seconds, say "Cancel" or "Quit", or press and hold the  button on the steering wheel for 5 seconds.
- To increase or decrease the volume of the voice prompts, push the volume control switches + or - on the steering wheel or turn the volume control knob on the audio system while the audio system is responding.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.NissanUSA.com/bluetooth.

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

 


BLUETOOTH® SYSTEM WITH NAVIGATION* (if so equipped)

- Bluetooth® Streaming Audio allows you to use a compatible Bluetooth® device to play audio files. Your compatible cellular phone can be connected to the vehicle's audio system, allowing audio files to play through the vehicle's speakers.

CONNECTING PROCEDURE

1. Press the **APPS**  button on the control panel.
2. Touch the "Settings" key **1**.
3. Touch the "Phone & Bluetooth" key **2**.

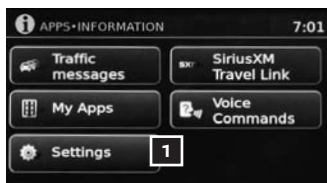

4. Touch the "Connect New Device" key **3**.
5. Initiate the connecting process from the handset.

The system will display the message:

"Is PIN XXXXXX displayed on your Bluetooth device?"

If the PIN is displayed on your Bluetooth® device, select "Yes" to complete the connecting process.



 
VEHICLE PHONEBOOK

To access the vehicle phonebook:

1. Press the  button on the control panel.
2. Select the "Phonebook" key **4**.
3. Choose the desired entry from the displayed list.

MAKING A CALL


1. Press the  button on the control panel. The "PHONE" screen **5** will appear on the display.
2. Select one of the following options to make a call:
 - "Phonebook": Select the name from an entry stored in the vehicle phonebook.
 - "Call Lists": Select the name from the incoming, outgoing or missed call history.
 - "Redial": Dial the last outgoing call from the vehicle.
 - : Input the phone number manually using the keypad displayed on the screen.

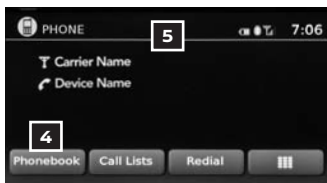

SYSTEM GUIDE

RECEIVING/ENDING A CALL

 - To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Touch the  icon on the screen.
- To reject the incoming call, either:
 - Press the  button on the steering wheel, or
 - Touch the  icon on the screen.
- To end a cellular phone call, either:
 - Press the  button on the steering wheel, or
 - Touch the  icon on the screen.

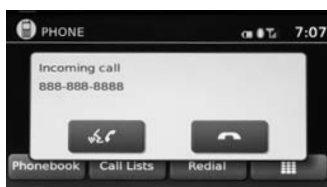

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual or please visit www.NissanUSA.com/bluetooth.



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

- 1 NAV** (Navigation) button – Press to access the functions of the Navigation System.
- 2 MAP** button – Press to display the current location map screen.
- 3 VOL** control knob – Turn right to increase the volume or left to decrease the volume.
- 4** key – Touch to zoom the map in.
- 5** key – Touch to zoom the map out.
- 6 APPS** button – Press to access SiriusXM Traffic messages, SiriusXM Travel Link, MyApps, Voice Commands and Settings.

SYSTEM GUIDE

- 7**  button – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **TUNE** knob. Press and hold to turn the display off. Press again to turn the display on.
- 8** **BACK** button – Press to return to the previous screen.
- 9** **TUNE** knob – Turn to navigate the items in a list. Press to select a menu item.
- 10** Touch-screen display
- 11** SD-card location – An SD-card with map data must be inserted here for map functions to operate.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your Navigation System Owner's Manual.



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- Navigation System Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide (Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the iPhone® App Store or Android® Google® Play Store for download to your smartphone)



To view detailed instructional videos, go to
www.nissanownersinfo.mobi/2017/nvcargovan or
snap this barcode with an appropriate
barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/nowners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

Nissan, the Nissan Brand Symbol, Z and Nissan model names are Nissan trademarks.

© 2016 Nissan North America, Inc.

QR7EA 0F80U0

Printing: September 2016 (06)

