 


2017 **NV**
PASSENGER
VAN

QUICK REFERENCE GUIDE



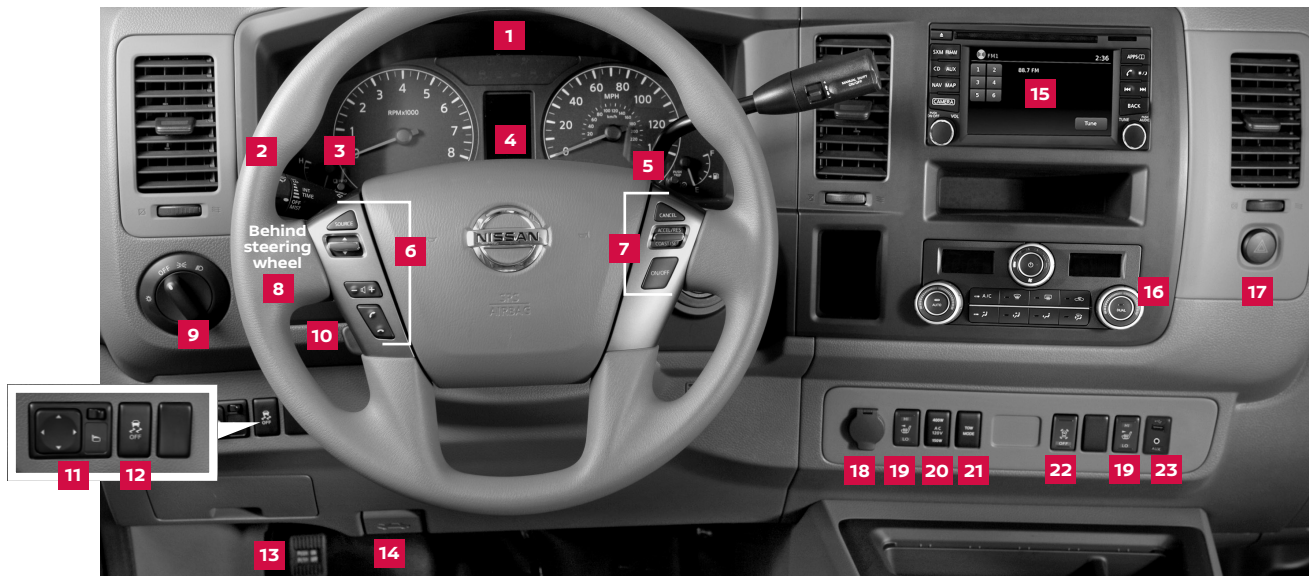

- 1** Low Tire Pressure Warning Light
- 2** Wiper and Washer / Headlight Beam Select / Turn Signal Control Switch
- 3** Vehicle Information Display Info Button
- 4** Vehicle Information Display
- 5** Instrument Brightness Control / Trip Odometer Reset Switch

- 6** Steering Wheel Switches for Audio / Bluetooth®
- 7** Cruise Control
- 8** Fog Light Switch
- 9** Headlight Control Switch
- 10** Tilt Steering Column*
- 11** Outside Mirror Control Switch

- 12** Vehicle Dynamic Control (VDC) OFF Switch*
- 13** Parking Brake*
- 14** Hood Release*
- 15** Audio and Navigation System
- 16** Heater and Air Conditioner (automatic)
- 17** Hazard Warning Flasher Switch*

- 18** Power Outlet
- 19** Heated Seat Switch*
- 20** Power Inverter Switch
- 21** Tow Mode Switch*
- 22** Front and Rear Sonar System OFF Switch*
- 23** USB / Aux and iPod® Jack

*See your Owner's Manual for information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

Power Inverter Switch (if so equipped)	2
Front and Rear Sonar Switch (if so equipped)	2
RearView Monitor (if so equipped)	3
Hands-free Text Messaging (if so equipped)	3
SiriusXM Travel Link and SiriusXM Traffic (if so equipped)	4

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS)	5
Loose Fuel Cap	6
Fuel-filler Door	6
Clock Set/Adjustment	6

FIRST DRIVE FEATURES

Remote Keyless Entry System (if so equipped)	8
Opening the Back Doors	8
Operating the Sliding Door	9
Front Power Seat Adjustment (if so equipped for driver's seat)	9
Removing the 2 nd , 3 rd and 4 th Row Seats	10
Installing the 2 nd , 3 rd and 4 th Row Seats	11
Outside Mirror Control Switch	12
Starting/Stopping the Engine	12
Headlight Control Switch	12
Wiper and Washer Switch	13
Heater and Air Conditioner (automatic) (if so equipped)	14
Rear Climate Controls	15
FM/AM/SiriusXM® Satellite Radio with CD Player (if so equipped)	16
USB (Universal Serial Bus) Connection Port/Aux Jack and iPod® Interface (if so equipped)	17
Cruise Control (if so equipped)	17
Power Outlets	18

SYSTEM GUIDE

NissanConnect SM Mobile Apps (if so equipped)	19
Trip Computer	20
Bluetooth® Hands-free Phone System (if so equipped)	21
• System Operating Tips	21
Bluetooth® System without Navigation (if so equipped)	21
Bluetooth® System with Navigation (if so equipped)	23
Navigation System (if so equipped)	25



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

NEW SYSTEM FEATURES

POWER INVERTER SWITCH (if so equipped)

- The power inverter switch is located on the control panel below the climate controls. This switch controls power provided to the 120V outlets.
- To use the outlets for items requiring between 150W and 400W, stop your vehicle, place the shift lever in the **P (PARK)** position, place the ignition switch in the **ON** position and push the power inverter switch.
- **400W** or **150W** will illuminate on the switch according to the mode selected.
- Only the 150W mode is available when the ignition switch is placed in the **ACC** or **ON** position or while the vehicle is being driven.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

FRONT AND REAR SONAR SWITCH (if so equipped)

- The front and rear sonar system detects obstacles both in front of and behind the vehicle. The system is activated when the ignition switch is in the **ON** position and the shift lever is moved to either the **R (REVERSE)** or **D (DRIVE)** position.
- When moving forward, the front sonar system will beep to alert you to obstacles within 3 ft (1.0 m) of the front bumper.
- When backing up, the rear sonar system will beep to alert you to obstacles within 5.9 ft (1.8 m) of the rear bumper.
- Turn the system off by pushing the sonar system OFF switch **1**. Push the switch again to enable the system. The system will automatically reset the next time the ignition switch is in the **ON** position.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

REARVIEW MONITOR (if so equipped)

- When the shift lever is shifted into the **R (REVERSE)** position, the monitor display shows a rearward view from the vehicle.
- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m);
Green 7 ft (2 m) and 10 ft (3 m).



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

HANDS-FREE TEXT MESSAGING ASSISTANT* (if so equipped)

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you may need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see **www.NissanUSA.com/bluetooth** for compatibility information as well as your device's Owner's Manual.



*Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information. For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

NEW SYSTEM FEATURES

SiriusXM TRAVEL LINK AND SiriusXM TRAFFIC (if so equipped)

- Your vehicle's Navigation System is equipped with SiriusXM Travel Link and SiriusXM Traffic capabilities.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.



 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Navigation (section 4)"** and the **"General system information (section 6)"** of your Navigation System Owner's Manual.

ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A **CHECK TIRE** warning message will appear in the vehicle information display **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.
 - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **CHECK TIRE** warning message and low tire pressure warning light **2** will extinguish.
- When the low tire pressure warning light **2** flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended that you visit a Nissan dealer for this service.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light illuminates, check the tire pressure in all four tires.
 - Check all tire pressures, including the spare tire, often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 10)" of your Owner's Manual for the location of the Tire and Loading Information label.

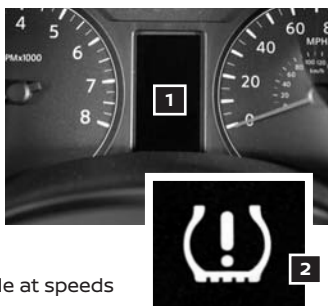

TIRE PRESSURE MONITORING SYSTEM (TPMS) SENSOR RESET

- The Tire Pressure Monitoring System (TPMS) has sensors that must be reset after tire rotation.
- After rotating the tires, the low tire pressure warning light **2** will illuminate. The TPMS sensor positions must be relearned.
- When the relearning process has been successfully performed, the low tire pressure warning light **2** will extinguish.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**" and the "**Do-it-yourself (section 8)**" of your Owner's Manual.

ESSENTIAL INFORMATION

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will appear in the vehicle information display **1** when the fuel-filler cap is not tightened correctly.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the reset button **2** is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" and the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

FUEL-FILLER DOOR

- The fuel-filler door is located on the driver's side of the vehicle.
- To open the fuel-filler door, pull the lid open.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

CLOCK SET/ADJUSTMENT

FM/AM RADIO WITH COMPACT DISC (CD) PLAYER (Type A) (if so equipped)

- If the clock is not displayed with the ignition switch in the **ACC** or **ON** position, you need to select the "CLK ON" mode. Press the **MENU** button repeatedly until "CLOCK" is displayed. Use the **SEEK** button  or  to enable the "CLK ON" mode.



1. Press the **MENU** button repeatedly until "CLOCK" appears; press the **SEEK** button  or  until "CLK ON" appears.
2. Press the **MENU** button again; the hours will start flashing.
3. Press the **SEEK** button  or  to adjust the hour.
4. Press the **MENU** button again; the display will switch to the minute adjustment mode.
5. The minutes will start flashing. Press the **SEEK** button  or  to adjust the minutes.
6. Press the **MENU** button again to exit the clock set mode.

The display will return to the regular clock display after 10 seconds, or press the **MENU** button again to return to the regular clock display.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FM/AM RADIO WITH COMPACT DISC (CD) PLAYER (Type B) (if so equipped)

- If the clock is not displayed with the ignition switch in the **ACC** or **ON** position, press the **CLOCK** button to resume the display. Pressing the **CLOCK** button toggles the clock display on and off.



 
1. Press and hold the **CLOCK** button until the clock display starts to flash.
2. Press the **SEEK/TRACK** button **▲** or **▼** to adjust the hours.
3. Press the **TUNE/FF-REW/FOLDER** button **▲** or **▼** to adjust the minutes.
4. Press the **CLOCK** button again to exit the clock set mode.

If no action is taken, the display will return to the regular clock display after 10 seconds.

WITH NAVIGATION SYSTEM (if so equipped)


- To adjust the time and the appearance of the clock on the display:

1. Press the **APPS** button **1**.
2. Touch the "Settings" key.
3. Touch the "System" key.
4. Touch the "Clock" key.

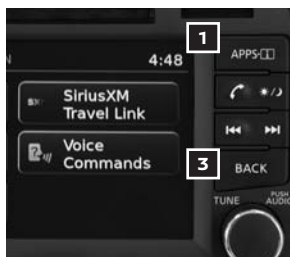

- The following settings can be adjusted:

 - **Time Format:** The clock can be set to 12 hours or 24 hours.
- **Date Format:** The date can be changed to one of five different formats.
- **Clock Mode:** From here, the clock mode options are:
 - **Manual:** Allows for the option "Set Clock Manually". Touch this to begin setting the clock manually using the "+" or "-" to adjust the hours, minutes, day and month up or down.
 - **Time Zone:** Touch the "Time Zone" key **2** to choose from the applicable time zone list and/or touch "Daylight Savings Time" to switch between ON and OFF.
 - **Auto:** Automatically sets the clock to the vehicle's current location.

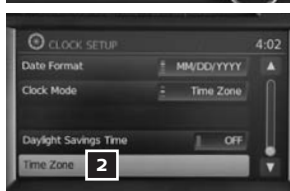

- Press the **BACK** button **3** to return to the previous screen.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** and the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

FIRST DRIVE FEATURES

REMOTE KEYLESS ENTRY SYSTEM (if so equipped)

The Remote Keyless Entry System allows you to lock or unlock your vehicle and turn on the interior lights.

- To lock the vehicle, press the **1** button on your key fob.
- To unlock the driver's door, press the **2** button on your key fob.
- Press the **2** button again within 5 seconds and all doors will unlock.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

OPENING THE BACK DOORS

- Unlock the vehicle by pressing the **2** button on your key fob twice.
- Pull the door handle **1** toward you to open the right back door.
- Lift the lever on the back door **2** and pull the door to open.
- To open either door to the wide open position, pull the release latch **3** toward the back door to release the check-link arm.
- Open the door slowly until the magnetic door stopper connects to the stop pad on the outside of the vehicle.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

OPERATING THE SLIDING DOOR

- The sliding door can be opened from the inside or outside of the vehicle.
- To open the sliding door from the inside, pull the release lever **1** down and pull the handle **2** toward the rear of the vehicle until the door clicks. The door will lock into an open position.
- To close the sliding door from the inside, pull the release lever **1** down. The door will release from the open position and slide closed.
- To open the sliding door from the outside, pull the outside handle and slide the door toward the rear of the vehicle until the door clicks. The door will lock into an open position.
- To close the sliding door from the outside, pull the outside handle again. The door will release from the open position and slide closed.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

FRONT POWER SEAT ADJUSTMENT (if so equipped for driver's seat)

- To slide the seat forward or backward, push the switch **1** forward or backward.
- To adjust the angle of the seatback, push the switch **2** forward or backward.

SEAT LIFTER

- To adjust the angle and height of the seat cushion, push the front or rear end of the switch **1** up or down.

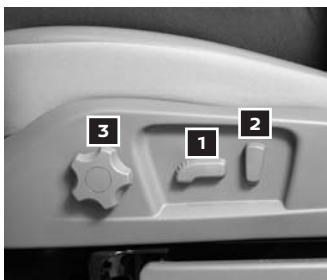

MANUAL LUMBAR SUPPORT (if so equipped for driver's seat)

- Turn the knob **3** to adjust the seat lumbar area.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"** of your Owner's Manual.

FIRST DRIVE FEATURES

REMOVING THE 2nd, 3rd AND 4th ROW SEATS

1. On the back of the seat, remove the pull straps **1** from the stowed position.
2. Stand directly behind the seat and pull up and rearward on the pull straps **1** to disengage the seat.
3. Push up and forward to remove the seats from the wells.
4. Rest the seat on the vehicle floor, and with two people, remove the seat from the vehicle.
5. Store the seat in a safe location.
 - The 4th row seats have rollers on the seat frame to make them easier to move.

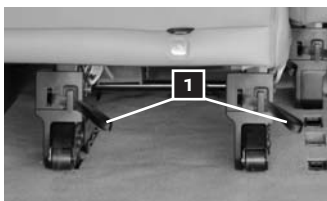

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Safety — Seats, seat belts and supplemental restraint system (section 1)**" of your Owner's Manual.

INSTALLING THE 2nd, 3rd AND 4th ROW SEATS

1. Make sure the seat mounting locations are free from objects.
2. Check the latches to make sure that they are in the open position. Pull the pull strap if the latch is closed.
3. Using two people, bring the seat to the appropriate mounting position.
4. Push up on the rear of the seat.



5. Line up the seat with the mounting locations. Tilt the seat slightly forward so the front hooks engage into the front mounting locations.



6. Push up on the rear of the seat so the rear latches are 4 in (10 cm) above the floor. Make sure that the area beneath the seat is clear. Release the seat so the rear latches drop into the mounting locations and lock.
7. Check the front hook and rear latch to make sure the latches are locked into the mounting locations.
8. Push and pull each seat to ensure the seat is properly engaged. Check that the latch indicator does not show more than 50% red. If necessary, pull the pull straps and re-latch the seats.
9. When the seats are secure, place the pull straps in their holders to keep them from being inadvertently pulled.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"** of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FIRST DRIVE FEATURES

OUTSIDE MIRROR CONTROL SWITCH

- The outside mirror control switch is located on the left side of the instrument panel.
- Move the small switch **1** to select the left or right mirror.
- Adjust each mirror to the desired position using the large switch **2**.
- Move the small switch **1** to the center (neutral) position to prevent accidentally moving the mirror.

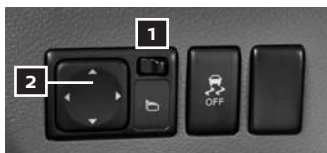

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

STARTING/STOPPING THE ENGINE

- Depress the brake pedal.
- Move the shift lever to the **P (PARK)** position.
- Turn the ignition switch to the **START** position.

TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Turn the ignition switch to the **LOCK** position.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

HEADLIGHT CONTROL SWITCH

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights.
- Turn the control switch to the  position **2** to turn on the headlights.

HIGH BEAM SELECT


- With the headlights ON, push the lever forward **3** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the lever back to the original position to select the low beam function and the blue indicator light will extinguish.

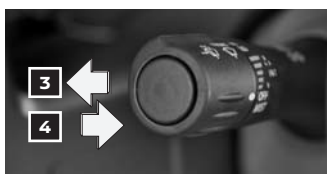

- Pull and release the lever **4** to flash the headlight high beams on and off.

FOG LIGHT SWITCH (if so equipped)

 - The headlights must be on and the low beams  selected for the fog lights to operate.
- Push the fog light switch **5** to turn the fog lights on.
- To turn them off, push the fog light switch **5** again.
- The fog lights will turn off if the headlights are turned off.

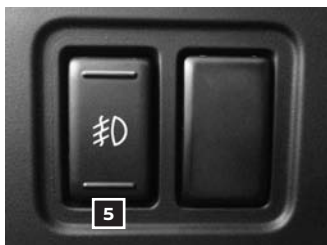

LANE CHANGE SIGNAL

 
- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:
- 1** Intermittent (**INT**) - Wipers operate intermittently by moving the lever down to the **INT** position and then rotating the control ring **2** to increase or decrease INT wiper speed.
 - 3** Low (**LO**) - Wipers operate at a continuous low-speed.
 - 4** High (**HI**) - Wipers operate at a continuous high-speed.
 - 5** Mist (**MIST**) - One sweep operation of the wipers.
 - 6** To activate the washer, press the button on the end of the lever. The wipers will operate several times.

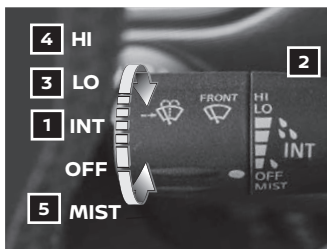

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

FIRST DRIVE FEATURES



HEATER AND AIR CONDITIONER (automatic) (if so equipped)

1 AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- The automatic mode may be used year-round. Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver's side temperature control dial left for cooler air or right for warmer air.

2 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by turning the passenger's side temperature control dial.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

3 FAN SPEED CONTROL DIAL/OFF BUTTON

- Turn the dial to the left to decrease fan speed or to the right to increase fan speed.
- Press the button to turn the system off.

4 AIR FLOW CONTROL BUTTONS

- Press the air flow control buttons to manually control air flow.



Air flows from the center and side vents.



Air flows from the center, side and foot vents.



Air flows mainly from the foot vents.



Air flows from the front defroster and foot vents.

5 DEFROSTING FRONT AND SIDE WINDOWS

- Press the front defroster button  to turn the system on. The A/C automatically turns on when the front defroster mode is selected. This feature removes humidity from the air.
- Use the temperature control dial **1** to set the desired temperature.
- To defrost the front and side windows, set the driver's side temperature control dial **1** and fan speed control dial **3** to their maximum settings.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

6 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Push the rear window and outside mirror (if so equipped) defroster switch  to turn the system on or off.
- The rear window and outside mirror (if so equipped) defroster automatically turns off after approximately 15 minutes.

7 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot outlet mode .

8 A/C BUTTON

- Press the **A/C** button to manually turn the A/C on or off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** and the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

REAR CLIMATE CONTROLS

1 FAN SPEED CONTROL DIAL

- Turn the fan speed control dial to the left to decrease fan speed or to the right to increase fan speed.
- Turn the dial all the way to the left to turn the fan off.

2 TEMPERATURE CONTROL DIAL

- The temperature control dial adjusts the temperature and air flow of the outlet air.
- Turn the dial to the left for cooler air or to the right for warmer air.
- When the temperature control dial is turned all the way to the left, the air flows only from the ceiling vents. When the temperature control dial is turned all the way to the right, the air flows only from the floor vents beneath the 2nd and 3rd row seats.
- When the temperature control dial is turned toward the center settings, air flows from both the floor and ceiling vents.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

FIRST DRIVE FEATURES



FM/AM/SiriusXM® SATELLITE RADIO WITH CD PLAYER (if so equipped)

1 ON-OFF BUTTON/VOL (volume) CONTROL KNOB

- Press the **ON-OFF** button to turn the system on or off.
- Turn the **VOL** (volume) control knob to the right or left to increase or decrease the volume.

2 AUDIO BUTTON/TUNE KNOB

- Press the **AUDIO** button to go to the audio settings screen.
- To manually tune the radio, turn the **TUNE** knob left or right.

3 SEEK BUTTONS

- To tune and stop at the previous or next broadcast station, press the seek buttons ◀◀ or ▶▶.
- For satellite radio to switch to the first channel of the previous or next category, press the seek buttons ◀◀ or ▶▶.
- To change tracks on a CD, press the seek buttons ◀◀ or ▶▶.
- To rewind or fast forward a track on a CD, press and hold the seek buttons ◀◀ or ▶▶.

4 STATION SELECT KEYS

- Twelve stations can be set for the FM band, six for the AM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **5** or **SXM** button **6** then tune to the desired FM, AM or satellite radio station.
- Next press and hold the desired station select button (**1-6**) until a beep is heard and the sound is briefly muted. The channel indicator will appear on the display, and the sound will resume. Programming is now complete.

- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (1-6).

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

USB (Universal Serial Bus) CONNECTION PORT/AUX JACK AND IPOD® INTERFACE (if so equipped)

- The USB port/Aux jack **1** is located on the control panel in front of the shift lever.
- When a compatible USB memory device, iPod® or auxiliary device is plugged into the USB port/Aux jack **1**, compatible audio files stored on the device can be played through the vehicle's audio system.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** and release. The **SET** indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4**.



FIRST DRIVE FEATURES

- To turn off cruise control, push the **ON/OFF** switch **1**. Both the **CRUISE** indicator light and **SET** indicator light in the instrument panel will extinguish.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

POWER OUTLETS

12V OUTLETS

- The power outlets are for powering electrical accessories such as cellular phones. They are rated at 12V, 120W (10A) maximum.
- Open the cap to use a power outlet.
- The power outlets on the instrument panel **1** and the 3rd row (if so equipped) **2** are powered only when the ignition switch is in the **ACC** or **ON** position.
- The power outlet located inside the center console storage box (if so equipped) **3** is powered directly by the vehicle's battery.

120V OUTLETS (if so equipped)

- There are two 120V power outlets supplied with your vehicle. They are located inside the center console storage box **4** and in the rear luggage area **5**.
- Use the 120V power outlets with the engine running to avoid discharging the vehicle's battery.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.



SYSTEM GUIDE

NISSANCONNECTSM MOBILE APPS (if so equipped)

 
- Your vehicle may be equipped with NissanConnectSM Mobile Apps, allowing you to control various compatible smartphone applications through the vehicle's display screen. A basic package is included for a period of time from the original in-service date of the vehicle.
- To enroll in NissanConnectSM Mobile Apps:
 1. Create a Nissan Owner Portal account at **owners.NissanUSA.com**.
 - Make sure to include your vehicle's VIN when creating your account.
 2. Under the NissanConnect Mobile Apps tab, select the red button next to Manage Subscription to enroll.
 3. Next, download the NissanConnectSM Mobile Apps companion app from Google Play or the Apple App Store. Log into the companion app using your Nissan Owner Portal ID and password.
 4. Launch the app, select "United States", and accept the Terms and Conditions.
 5. Select "Sign In", then sign in with the email username and password you created when registering on the Nissan Owner Portal website.
- Pair your cellular phone to the vehicle.
 - For Android® devices, the smartphone must be connected through the Bluetooth® Hands-free Phone system.
 - For iPhone® on vehicles WITH Navigation, the device must be connected to the vehicle's USB port using your cellular phone's USB cable.
 - For iPhone® on vehicles WITHOUT Navigation, connect the device using the Bluetooth® Hands-free Phone system.
- You can select which apps you want activated in the vehicle from the NissanConnectSM Mobile Apps companion app by selecting "Manage My Apps". Some apps shown in the companion app may not appear in your vehicle depending on availability for your model.
- Some apps require you to have the app downloaded and installed on your phone, while others require you to enter your username and password to log in. Not all apps shown on the NissanConnect application site are available on all models.
- To help identify specific apps available for your vehicle or to contact a specialist via chat, please visit **www.NissanUSA.com/connect/support**.
- Your available apps will only appear on the screen when your smartphone is connected to both the vehicle and the Internet. For additional information on connecting your device, see your Owner's Manual or visit **www.NissanUSA.com/bluetooth**.

SYSTEM GUIDE

- The NissanConnectSM app must be running on your device and the **Connected** icon **1** must be green before using your apps. If the **Disconnected** icon **2** is displayed, press the **APPS** button **3** multiple times to ensure the connection is established.



- To access your apps with the vehicle controls, start your vehicle and then press the **APPS** button **3** on the control panel. The system may take a few seconds to boot up before the NissanConnectSM Mobile Apps button **3** is enabled. This is normal.





- If available, your apps can be accessed once the vehicle and cellular phone are connected through the NissanConnectSM Mobile Apps companion app.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

Trip Computer

  - Turn the **INFO** knob **1** to display the following modes in the trip computer. **2**:
 - **RANGE** – Displays the estimated distance the vehicle can be driven before refueling.
 - **AVG MPH** – Displays the average speed since the last reset.
 - **TIME** – Displays the time driven since the last reset.
 - **TIRE INFO** – Push to Displays the specific tire pressure of each tire (except the spare).
 - **SETTINGS** – The setting mode allows you to set reminders or preferences for maintenance intervals, to reset the TPMS after rotating the tires or to change the unit of the display. In the setting mode screen, turn the **INFO** knob **1** to select settings. Press the **INFO** button **1** to select and change one of the menu items.
 - **WARNING** – Displays when a warning is present.
- To reset **TRIP A** or **TRIP B**, go to the desired mode on the trip computer and press and hold the **PUSH TRIP** knob **3** for more than 1 second.

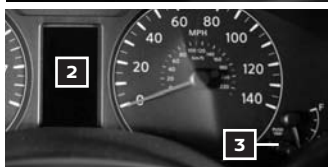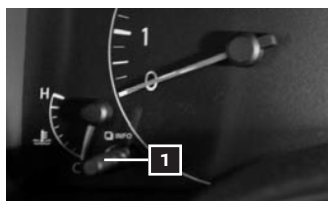

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM* (if so equipped)

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.

SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "Call Redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To cancel a Voice Recognition session, simply wait 5 seconds, say "Cancel" or "Quit", or press and hold the  button on the steering wheel for 5 seconds.
- To increase or decrease the volume of the voice prompts, push the volume control switches + or – on the steering wheel or turn the volume control knob on the audio system while the audio system is responding.
- If the Nissan Voice Recognition System does not recognize your voice commands, train the system using the Voice Adaptation Mode. See your Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.NissanUSA.com/bluetooth.



*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or please visit www.NissanUSA.com/bluetooth.

BLUETOOTH® SYSTEM WITHOUT NAVIGATION* (if so equipped)

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the cellular phone.
 1. Press the  button on the steering wheel.
The system announces the available commands.
 2. Say: "Connect Phone". The system acknowledges the command and announces the next set of available commands.



SYSTEM GUIDE

3. Say: "Add Phone". The system acknowledges the command and asks you to initiate connecting from the cellular phone handset.
4. Initiate connecting from the cellular phone:
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and compatible cellular phones, please visit **www.NissanUSA.com/bluetooth**.
 - When prompted for a PIN, enter "1234" from the handset. (The PIN is assigned by NISSAN and cannot be changed.)
5. Say a name for the cellular phone when the system asks you to provide one. You can give the cellular phone a name of your choice.

PHONEBOOK SETUP

- The phonebook stores up to 1,000 entries for each cellular phone paired with the system.
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, entries can be individually downloaded.
- To manually download entries:
 1. Press the  button on the steering wheel.
 2. After the tone, say "Phonebook".
 3. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the cellular phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.
 - The transfer procedure varies according to each cellular phone. See your cellular phone's Owner's Manual for details. You can also visit **www.NissanUSA.com/bluetooth** for instructions on transferring phone numbers from NISSAN-recommended cellular phones.
 4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, choose "Store".
 5. The system confirms the name, location and number.

MAKING A CALL FROM THE PHONEBOOK

- In some cases, names stored using all UPPERCASE letters may not be recognized by the Nissan Voice Recognition System.
 1. Press the  button.
 2. After waiting for the tone, say "Call".
 3. After the next tone, speak a name of a phonebook entry. For example, "Michael Smith".
 4. Confirm the correct name is recognized by saying "Dial" after the tone.

MAKING A CALL BY PHONE NUMBER

1. Press the  button. A tone will sound.

2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say: "Phone Number". The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- When you receive a cellular phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button on the steering wheel.
- To hang up the cellular phone at the end of a call or to disconnect during call placement, press the  button on the steering wheel.

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual or please visit www.NissanUSA.com/bluetooth.

BLUETOOTH® SYSTEM WITH NAVIGATION* (if so equipped)

- Bluetooth® Streaming Audio allows you to use a compatible Bluetooth® device to play audio files. Your compatible Bluetooth® device can be connected to the vehicle's audio system, allowing audio files to play through the vehicle's speakers.

CONNECTING PROCEDURE

1. Press the **APPS**  button on the control panel.
2. Touch the "Settings" key **1**.
3. Touch the "Phone & Bluetooth" key **2**.

 


SYSTEM GUIDE

4. Touch the "Connect New Device" key **3**.
5. Initiate the connecting process from the handset. The system will display the message:

"Is PIN XXXXXX displayed on your Bluetooth device?"

If the PIN is displayed on your Bluetooth® device, select "Yes" to complete the connecting process.

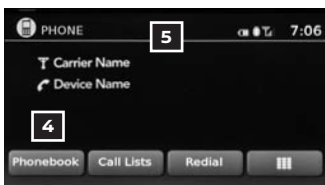

VEHICLE PHONEBOOK

To access the vehicle phonebook:

 
1. Press the button on the control panel.
2. Touch the "Phonebook" key **4**.
3. Choose the desired entry from the displayed list.

MAKING A CALL

1. Press the button on the control panel. The "PHONE" screen **5** will appear on the display.
2. Select one of the following options to make a call:
 - "Phonebook": Select the name from an entry stored in the vehicle phonebook.
 - "Call Lists": Select the name from the incoming, outgoing or missed call history.
 - "Redial": Dial the last outgoing call from the vehicle.
 - : Input the phone number manually using the keypad displayed on the screen.

RECEIVING/ENDING A CALL

- To accept the incoming call, either:
 - Press the button on the steering wheel, or
 - Select the icon on the screen.
- To reject the incoming call, either:
 - Press the button on the steering wheel, or
 - Select the icon on the screen.
- To end a call, either:
 - Press the button on the steering wheel, or
 - Select the icon on the screen.

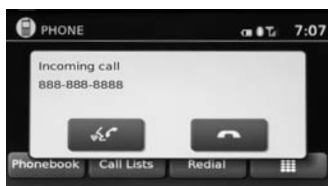

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or please visit www.NissanUSA.com/bluetooth.



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

- 1 NAV button** – Press to access the functions of the Navigation System.
- 2 MAP button** – Press to display the current location map screen.
- 3 VOL (volume) control knob** – Turn right to increase the volume or left to decrease the volume.
- 4 key** – Touch to zoom the map in.
- 5 key** – Touch to zoom the map out.
- 6 APPS button** – Press to access SiriusXM Traffic messages, SiriusXM Travel Link, MyApps, Voice Commands and Settings.
- 7 button** – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **TUNE** knob. Press and hold to turn the display off. Press again to turn the display on.
- 8 BACK button** – Press to return to the previous screen.
- 9 TUNE knob** – Turn to navigate the items in a list. Press to select a menu item.

SYSTEM GUIDE

10 Touch-screen display

11 SD-card location – An SD-card with map data must be inserted here for map functions to operate.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your Navigation System Owner's Manual.

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- Navigation System Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the iPhone® App Store or Android® Google® Play Store for download to your smartphone)



To view detailed instructional videos,
go to www.nissanownersinfo.mobi/2017/nvpassengervan
or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the Nissan website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact Nissan Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

