 


2017 **NV 200**
COMPACT
CARGO



QUICK REFERENCE GUIDE

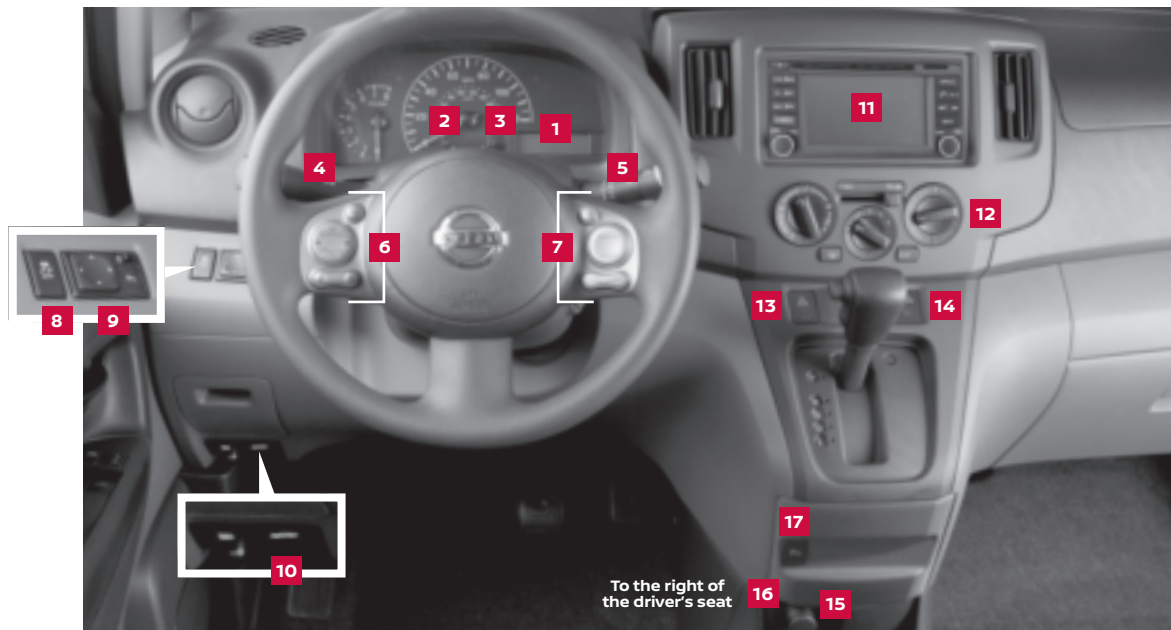

- | | | | |
|---|---|---|---|
| 1 Trip Computer | 5 Wiper and Washer Switch | 9 Outside Mirror Control Switch | 14 Front Passenger Air Bag Status Light* |
| 2 Low Tire Pressure Warning Light | 6 Steering Wheel Switches for Audio/Bluetooth® | 10 Hood Release* | 15 Power Outlet |
| 3 Instrument Brightness Control/ Trip Odometer Reset Switch* | 7 Cruise Control | 11 Audio and Navigation System | 16 Parking Brake* |
| 4 Headlight and Turn Signal Switch | 8 Vehicle Dynamic Control (VDC) OFF Switch* | 12 Heater and Air Conditioner (manual) | 17 Rear Sonar Switch |
| | | 13 Hazard Warning Flasher Switch* | |

*See your Owner's Manual for information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

RearView Monitor (if so equipped)	2
SiriusXM Travel Link and SiriusXM Traffic (if so equipped)	2
Rear Sonar System (if so equipped)	3

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS)	4
Fuel-filler Door	4
Loose Fuel Cap	5
Clock Set/Adjustment	5

FIRST DRIVE FEATURES

Remote Keyless Entry System (if so equipped)	7
Opening the Back Doors	7
Operating the Sliding Doors	8
Manual Seat Adjustment	8
Outside Mirror Control Switch (if so equipped)	9
Starting/Stopping the Engine	9
Headlight Control Switch	10
Wiper and Washer Switch	10
Heater and Air Conditioner (manual)	11
FM/AM/SiriusXM® Satellite Radio with CD Player (if so equipped)	12
USB (Universal Serial Bus) Connection Port/AUX Jack and iPod® Interface (if so equipped)	13
Power Outlets	14
Cruise Control (if so equipped)	14

SYSTEM GUIDE

Trip Computer	15
NissanConnect SM Mobile Apps (if so equipped)	15
Hands-free Text Messaging Assistant (if so equipped)	16
Bluetooth® Hands-free Phone System (if so equipped)	17
• System Operating Tips	17
Bluetooth® System without Navigation (if so equipped)	18
Bluetooth® System with Navigation (if so equipped)	20
Navigation System (if so equipped)	21



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.NissanUSA.com.



- Please see your Owner's Manual for important safety information and system operation limitations.
- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
 - Always wear your seat belt.
 - Supplemental air bags do not replace proper seat belt usage.
 - Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
 - Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

NEW SYSTEM FEATURES

REARVIEW MONITOR (if so equipped)

- When the shift lever is shifted into the **R (REVERSE)** position, the monitor display shows a rearward view from the vehicle.
- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.

• Red 1.5 ft (0.5 m); Yellow 3 ft (1 m); Green 7 ft (2 m) and 10 ft (3 m).



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

SiriusXM TRAVEL LINK AND SiriusXM TRAFFIC (if so equipped)

- Your vehicle's Navigation System is equipped with SiriusXM Travel Link and SiriusXM Traffic capabilities.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Navigation (section 4)"** and the **"General system information (section 6)"** of your Navigation System Owner's Manual.

REAR SONAR SYSTEM (if so equipped)

- With the shift lever in the **R (REVERSE)** position, this system will sound a tone to alert you of obstacles up to 5.9 ft (1.8 m) from the bumper with a decreased coverage area at the outer corners of the bumper.
- The rate of the tone increases as the vehicle gets closer to the obstacle. A continuous tone sounds when an obstacle is less than 10 in (25 cm) from the bumper.
- Turn the system off by pushing the Rear Sonar System off switch **1**. Push the switch again to activate the system.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A **CHECK TIRE PRES** warning message will appear in the trip computer **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.
 - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **CHECK TIRE PRES** warning message and low tire pressure warning light **2** will extinguish.
- When the low tire pressure warning light **2** flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended you visit a Nissan dealer for this service.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 10)" of your Owner's Manual for the location of the Tire and Loading Information label.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)", "Do-it-yourself (section 8)" and the "Maintenance and schedules (section 9)" of your Owner's Manual.

FUEL-FILLER DOOR

- The fuel-filler door release **1** is located to the left of the steering wheel below the instrument panel.
- To open the fuel-filler door, pull the fuel-filler door release **1**.
- The fuel-filler door is located on the passenger's side of the vehicle.



 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will display in the trip computer **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the reset button **2** is pressed for more than 1 second.
- If the cap is not properly tightened, the Malfunction Indicator Light  may also illuminate.

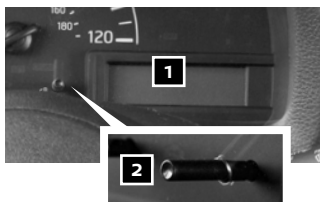

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" and the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

CLOCK SET/ADJUSTMENT

FM/AM RADIO WITH COMPACT DISC (CD) PLAYER (Type A) (if so equipped)

- If the clock is not displayed with the ignition switch in the **ACC** or **ON** position, you need to select the "CLK ON" mode. Press the **MENU** button **1** repeatedly until "CLOCK" is displayed. Use the **SEEK** button  or  to enable "CLK ON" mode.



1. Press the **MENU** button **1** repeatedly until "CLOCK" mode appears; press the **SEEK** button  or  until "CLK ON" appears.
2. Press the **MENU** button **1** again; the hours will start flashing.
3. Press the **SEEK** button  or  to adjust the hour.
4. Press the **MENU** button **1** again; the display will switch to the minute adjustment mode.
5. The minutes will start flashing. Press the **SEEK** button  or  to adjust the minutes.

FM/AM RADIO WITH COMPACT DISC (CD) PLAYER (Type B) (if so equipped)

- If the clock is not displayed with the ignition switch in the **ACC** or **ON** position, press the **CLOCK** button **2** to resume the display. Pressing the **CLOCK** button **2** toggles the clock display on and off.

1. Press and hold the **CLOCK** button **2** until the clock display starts to flash.



ESSENTIAL INFORMATION

2. Press the **SEEK/TRACK** button ▲ or ▼ to adjust the hours.
3. Press the **TUNE/FF-REW/FOLDER** button ▲ or ▼ to adjust the minutes.
4. Press the **CLOCK** button **2** again to exit the clock set mode.
 - If no action is taken, the display will return to the regular clock display after 10 seconds.

FM/AM/SAT RADIO WITH COMPACT DISC (CD) PLAYER (if so equipped)

 
- To adjust the time and the appearance of the clock on the display:

1. Press the **APPS** **1** button **3**.
2. Touch the "Settings" key.
3. Touch the "System" key.
4. Touch the "Clock" key.



- The following settings can be adjusted:

- **Time Format:** The clock can be set to 12 hours or 24 hours.
- **Date Format:** The date can be changed to one of five different formats.
- **Clock Mode:** From here, the clock mode options are:
 - **Manual:** Allows for the option "Set Clock Manually". Touch this to begin setting the clock manually using the "+" or "-" to adjust the hours, minutes, day and month up or down.
 - **Time Zone:** Touch the "Time Zone" key **5** to choose from the applicable time zone list and/or touch "Daylight Savings Time" to switch between ON and OFF.
 - **Auto:** Automatically sets the clock to the vehicle's current location.

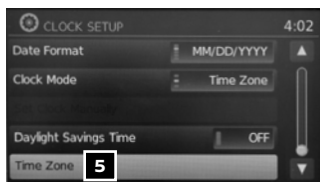

- Press the **BACK** button **4** to return to the previous screen.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

FIRST DRIVE FEATURES

 
REMOTE KEYLESS ENTRY SYSTEM (if so equipped)

The Remote Keyless Entry System allows you to lock or unlock your vehicle and turn on the interior lights.

- To lock the vehicle, press the  button on your key fob.
- To unlock the driver's door, press the  button on your key fob.
- Press the  button again within 5 seconds, and all doors will unlock.


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

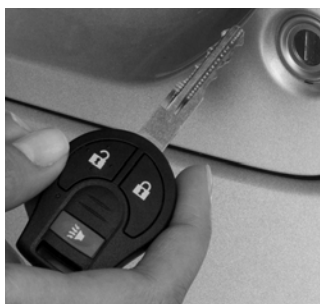

OPENING THE BACK DOORS

 
- Unlock the vehicle by pressing the  button on your key fob twice.
- Pull the handle  to open the right side back door.

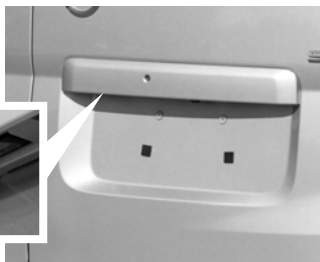

- Pull the lever  on the left side back door and pull the door to open.



 - To open either door to the wide open position, pull the release lever  toward the front of the vehicle to release the check-link arm.

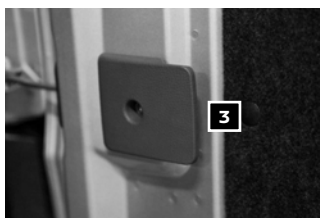

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

FIRST DRIVE FEATURES

OPERATING THE SLIDING DOORS

- The sliding door can be opened from the inside or the outside of the vehicle.
- To open the sliding door from the inside, pull the handle **1** toward the rear of the vehicle and slide the door until it clicks into the detent.
- To close the sliding door from the inside, pull the handle **1** toward the front of the vehicle. The door will release from the open position and slide closed.
- To open the sliding door from the outside, pull the outside handle and slide the door toward the rear of the vehicle until the door clicks into the detent.
- To close the sliding door from the outside, pull the outside handle again. The door will release from the open position and slide closed.

 


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

MANUAL SEAT ADJUSTMENT

- Pull up on the bar **1** under the front of the seat and slide forward or backward. Release the bar to lock the seat in position.
- Pull up on the lever **2** and lean back to recline the seatback. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.

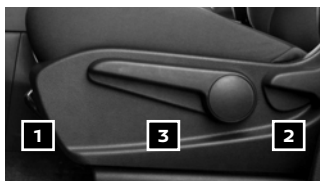


SEAT LIFTER (driver's seat)

- Pull up or push down on the lever **3** repeatedly to adjust the seat height.

LUMBAR SUPPORT (driver's seat)

 - Move the lever **4** forward or backward to adjust the seat lumbar area.

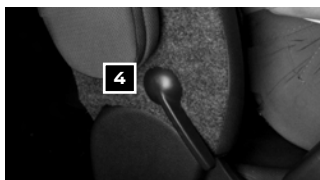

FLAT FOLD PASSENGER SEAT

- Slide the passenger seat to the rearmost position using the adjustment bar **1**.
- Lift up on the lever **3** and fold the seatback as far forward as it will go.

- Move the lever **5**, located on the inside of the seatback, forward to release the back of the seat.
- Push down the seatback until it is flat.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Safety — Seats, seat belts and supplemental restraint system (section 1)**" of your Owner's Manual.



OUTSIDE MIRROR CONTROL SWITCH (if so equipped)

- The outside mirror control switch is located on the left side of the instrument panel.
- Move the switch **1** to select the left or right mirror.
- Adjust each mirror to the desired position using the switch **2**.
- Move the switch **1** to the center (neutral) position to prevent accidentally moving the mirror.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

STARTING/STOPPING THE ENGINE

- Depress the brake pedal.
- Move the shift lever to the **P (PARK)** position.
- Turn the ignition switch to the **START** position.

TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Turn the ignition switch to the **LOCK** position.



 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

FIRST DRIVE FEATURES


HEADLIGHT CONTROL SWITCH

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights.
- Turn the control switch to the  position **2** to turn on the headlights.

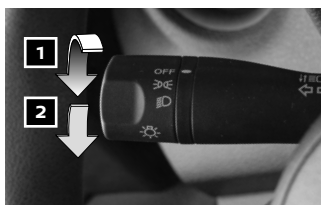

HIGH BEAM SELECT

 - With the headlights in the  position, push the headlight control switch forward **3** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the headlight control switch back to the original position to select the low beam function. The blue indicator light will extinguish.
- Pull and release the lever **4** to flash the headlight high beams on and off.

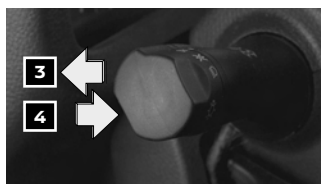

LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

WIPER AND WASHER SWITCH


- Move the lever to one of the following positions to operate the windshield wipers:

- 1** Mist (**MIST**) – One sweep operation of the wipers.
- 2** Intermittent (**INT**) – Wipers operate intermittently by moving the lever down to the **INT** position and then rotate the control ring **3** to increase or decrease **INT** wiper speed.
- 4** Low (**LO**) – Wipers operate at a continuous low-speed.
- 5** High (**HI**) – Wipers operate at a continuous high-speed.
- 6** Washer  – Pull the lever toward you to activate the washer. The wipers will operate several times.

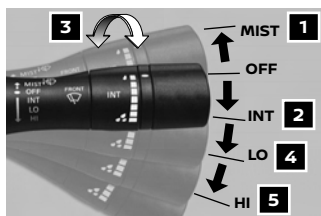

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

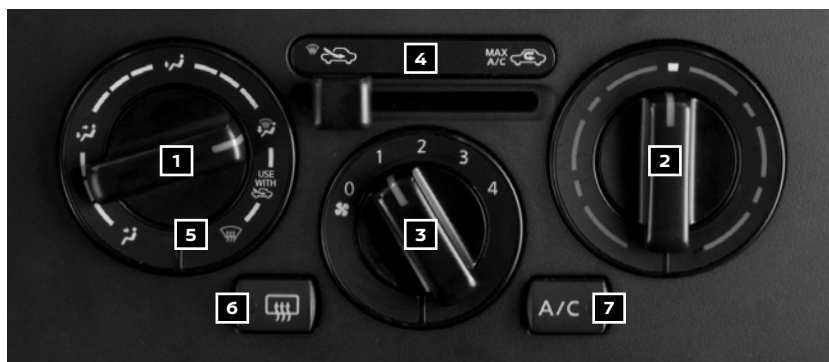

HEATER AND AIR CONDITIONER (manual)

1 AIR FLOW CONTROL DIAL

- Turn the dial to select one of the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the front defroster and foot vents.
-  Air flows mainly from the front defroster vents.

2 TEMPERATURE CONTROL DIAL

- Turn the temperature control dial left for cooler air or right for warmer air.

3 FAN SPEED CONTROL DIAL

- Turn the dial to the left to decrease fan speed or to the right to increase fan speed.

4 AIR INTAKE LEVER (Outside air circulation/Air recirculation)

- Move the air intake lever to the  position to recirculate air inside the vehicle.
- Move the air intake lever to the  position to draw outside air into the passenger compartment.

5 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- First, move the air intake lever **4** to the  position to draw fresh air into the vehicle.
- Then turn the air flow control dial **1** to the front defroster mode .
- When the  or  position is selected, press the **A/C** button **7** to turn the air conditioner on for better performance. This will dehumidify the air and help defog the windows.

FIRST DRIVE FEATURES

6 REAR WINDOW AND OUTSIDE MIRROR DEFROSTER SWITCH (if so equipped)

- Push the rear window and outside mirror defroster switch  to turn the system on or off.
- The rear window defroster automatically turns off after approximately 15 minutes.

7 A/C BUTTON

- Press the **A/C** button to manually turn the A/C on or off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.



FM/AM/SiriusXM® SATELLITE RADIO WITH CD PLAYER (if so equipped)

1 ON-OFF BUTTON/VOL (volume) CONTROL KNOB

- Press the **ON-OFF** button to turn the system on or off.
- Turn the **VOL** (volume) control knob to the right or left to increase or decrease the volume.

2 AUDIO BUTTON/TUNE KNOB

- Press the **AUDIO** button to go to the audio settings screen.
- To manually tune the radio, turn the **TUNE** knob left or right.

3 SEEK BUTTONS

- To scan through each broadcasting station, press the seek buttons  or .
- For satellite radio to switch to the first channel of the previous or next category, press the seek buttons  or .

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- To change tracks on a CD, press the seek buttons **◀◀** or **▶▶**.
- When the seek buttons **◀◀** or **▶▶** are pressed and held while a CD is playing, the CD will rewind or fast forward. When the button is released, the CD will play at normal speed.

4 STATION MEMORY KEYS

 
- Twelve stations can be set for the FM band, six for the AM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **5** or **SXM** button **6** then tune to the desired FM, AM or satellite radio station.
- Now touch and hold the desired station memory key (**1-6**) until the preset number is updated on the display and a beep is heard. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then touch the corresponding station memory key (**1-6**).

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

USB (Universal Serial Bus) CONNECTION PORT/ AUX JACK AND IPOD® INTERFACE (if so equipped)

- The USB port/AUX jack **1** is located below the shift selector.
- When a compatible USB port device, iPod® or auxiliary device is plugged into the USB port/AUX jack, compatible audio files stored on the device can be played through the vehicle's audio system.

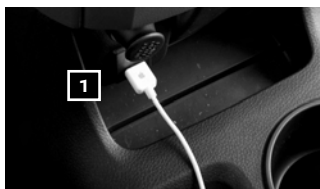

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

FIRST DRIVE FEATURES

POWER OUTLETS

12V OUTLETS

- The power outlets are for powering electrical accessories, such as cellular phones. They are rated at 12V, 120W (10A) maximum.
- Open the cap or remove the plug to use a power outlet.
- The power outlets located below the shift selector **1** and on the back of the center console **2** (if so equipped) are powered only when the ignition switch is in the **ACC** or **ON** position.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 30 mph (48 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **CRUISE ON/OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** on the steering wheel and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4** on the steering wheel.
- To turn off cruise control, push the **CRUISE ON/OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will extinguish.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

SYSTEM GUIDE

TRIP COMPUTER

- With the ignition switch in the **ON** position, modes of the trip computer **1** can be selected by pressing the trip computer change button **2** on the instrument panel.
- **TRIP A** – Measures the distance of one specific trip.
- **TRIP B** – Measures the distance of a second specific trip.
- **mpg** – Displays the instant fuel economy.
- **mpg AVG** – Displays average fuel consumption since the last reset.
- **mls →**  – Displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
- To reset **TRIP A**, **TRIP B**, **mpg** or **mpg AVG**, go to the desired mode on the trip computer and hold the trip computer change button **2** for more than 3 seconds.

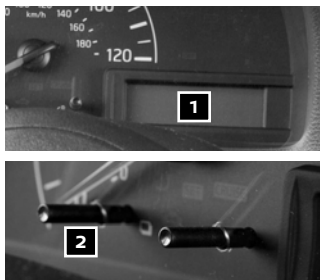

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

 
NISSANCONNECTSM MOBILE APPS (if so equipped)

- Your vehicle may be equipped with NissanConnectSM Mobile Apps, allowing you to control various compatible smartphone applications through the vehicle's display screen. A basic package is included for a period of time from the original in-service date of the vehicle.
- To enroll in NissanConnectSM Mobile Apps:
 1. Create a Nissan Owner Portal account at **owners.nissanusa.com**.
 - Make sure to include your vehicle's VIN when creating your account.
 2. Under the NissanConnect Mobile Apps tab, select the red button next to Manage Subscription to enroll.
 3. Next, download the NissanConnectSM Mobile Apps companion app from Google Play or the Apple App Store. Log into the companion app using your Nissan Owner Portal ID and password.
 4. Launch the app, select "United States", accept the Terms and Conditions.
 5. Select "Sign In", then sign in with the email username and password you created when registering on the Nissan Owner Portal website.
- Pair your cellular phone to the vehicle.
 - For Android® devices, the smartphone must be connected through the Bluetooth® Hands-free Phone system.
 - For iPhone® on vehicles WITH Navigation, the device must be connected to the vehicle's USB port using your cellular phone's USB cable.
 - For iPhone® on vehicles WITHOUT Navigation, connect the device using the Bluetooth® Hands-free Phone system.

To view detailed instructional videos regarding these and other features, please go to **www.nissanownersinfo.mobi**.

SYSTEM GUIDE

- You can select which apps you want activated in the vehicle from the NissanConnectSM Mobile Apps companion app by selecting "Manage My Apps". Some apps shown in the companion app may not appear in your vehicle depending on availability for your model.
- Some applications require you to have the app downloaded and installed on your cellular phone, while others require you to enter your username and password to log in. Not all apps shown on the NissanConnect app site are available on all models.
- To help identify specific app available for your vehicle or to contact a specialist via chat, please visit www.nissanusa.com/connect/support.
- Your available apps will only appear on the screen when your smartphone is connected to both the vehicle and the Internet. For additional information on connecting your device, see your Owner's Manual or visit www.nissanusa.com/bluetooth.
- The NissanConnectSM app must be running on your device and the connected icon **1** must be green before using your apps. If the disconnected icon **2** is displayed, press the APPS button **3** multiple times to ensure the connection is established.
- To access your apps with the vehicle controls, start your vehicle and then press the APPS button **3** on the control panel. The system may take a few seconds to boot up before the NissanConnect Apps button **3** is enabled. This is normal.
- If available, your apps can be accessed once the vehicle and cellular phone are connected through the NissanConnectSM Mobile Apps companion app.

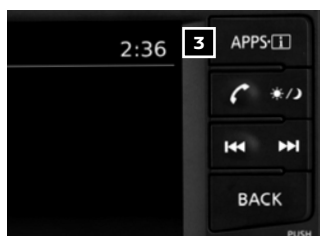

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

HANDS-FREE TEXT MESSAGING ASSISTANT* (if so equipped)

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).



To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- Text messages have the option of being read aloud at all vehicle speeds.
- Once the vehicle is in motion, text messages can only be replied to using the Voice Recognition  button on the steering wheel.
- Custom text messages can be created manually when the vehicle is not in motion.
- Custom text messages must be created in advance.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you may need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.

* Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM* (if so equipped)

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.

SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "Call Redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To cancel a Voice Recognition session, simply wait 5 seconds, say "Cancel" or "Quit", or press and hold the  button on the steering wheel for 5 seconds.



SYSTEM GUIDE

- To increase or decrease the volume of the voice prompts, push the volume control switches + or - on the steering wheel or turn the control knob on the audio system while the Voice Recognition system is responding.

- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.NissanUSA.com/bluetooth.



* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or please visit www.NissanUSA.com/bluetooth.

BLUETOOTH® SYSTEM WITHOUT NAVIGATION* (if so equipped)

CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the cellular phone.
 1. Press the  button on the steering wheel. The system announces the available commands.
 2. Say: "Connect Phone". The system acknowledges the command and announces the next set of available commands.
 3. Say: "Add Phone". The system acknowledges the command and asks you to initiate connecting from the cellular phone handset.
 4. Initiate connecting from the cellular phone:
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.NissanUSA.com/bluetooth.
 - When prompted for a PIN, enter "1234" from the handset. (The PIN is assigned by NISSAN and cannot be changed.)
 5. Say a name for the cellular phone when the system asks you to provide one. You can give the cellular phone a name of your choice.



PHONEBOOK SETUP

- The phonebook stores up to 1,000 entries for each cellular phone paired with the system.
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, entries can be individually downloaded.
- To manually download entries:
 1. Press the  button on the steering wheel.
 2. After the tone, say "Phonebook".

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

3. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the cellular phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.
 - The transfer procedure varies according to each cellular phone. See your cellular phone's Owner's Manual for details. You can also visit **www.NissanUSA.com/bluetooth** for instructions on transferring phone numbers from NISSAN-recommended cellular phones.
4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, choose "Store".
5. The system confirms the name, location and number.

MAKING A CALL FROM THE PHONEBOOK

1. Press the  button on the steering wheel.
2. After waiting for the tone, say "Call".
3. After the next tone, speak the name of a phonebook entry. For example, "Michael Smith".
4. Confirm the correct name is recognized by saying "Dial" after the tone.
 - In some cases, names stored using all UPPERCASE letters may not be recognized by the Voice Recognition system.

MAKING A CALL BY PHONE NUMBER

1. Press the  button on the steering wheel.
2. After waiting for the tone, say "Call". The system acknowledges the command and announces the next set of available commands.
3. Say: "Number". The system acknowledges the command and announces the next set of available commands.
4. Say the number you wish to call starting with the area code in single digit format.
5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
6. Say: "Dial". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- When you receive a cellular phone call, a ring tone sounds through the audio system.
- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button on the steering wheel.
- To hang up the cellular phone at the end of a call or to disconnect during call placement, press the  button on the steering wheel.

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

To view detailed instructional videos regarding these and other features, please go to **www.nissanownersinfo.mobi**.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual or please visit **www.NissanUSA.com/bluetooth**.

 
SYSTEM GUIDE

BLUETOOTH® SYSTEM WITH NAVIGATION* (if so equipped)

- Send predefined or custom text messages through your vehicle's Bluetooth® system.
- Receive texts through your vehicle's Bluetooth® system that can be read to you.
- Bluetooth® Streaming Audio allows you to use a compatible Bluetooth® device to play audio files. Your compatible device can be connected to the vehicle's audio system, allowing audio files to play through the vehicle's speakers.

CONNECTING PROCEDURE


1. Press the **APPS**  button on the control panel.
2. Touch the "Settings" key **1**.
3. Touch the "Phone & Bluetooth" key **2**.
4. Touch the "Connect New Device" key **3**.
5. Initiate the connecting process from the handset. The system will display the message: "Is PIN XXXXXX displayed on your Bluetooth® device?" If the PIN is displayed on your Bluetooth® device, select "Yes" to complete the connecting process.

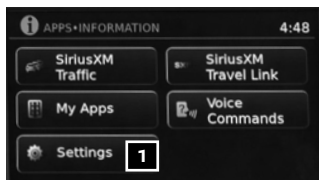

VEHICLE PHONEBOOK

To access the vehicle phonebook:

 1. Press the  button on the control panel.
2. Touch the "Phonebook" key **4**.
3. Choose the desired entry from the displayed list.

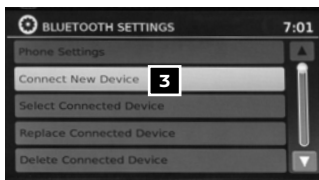


MAKING A CALL FROM THE PHONEBOOK

1. Press the  button on the steering wheel to activate Voice Recognition.
2. Say: "Call".
3. Say a name in the vehicle phonebook to call that entry.

MAKING A CALL BY PHONE NUMBER

 1. Press the  button on the steering wheel to activate Voice Recognition.
2. Say: "Phone".
3. Say: "Dial Number". When prompted, speak the digits of the number you wish to dial.
4. Say: "Dial".

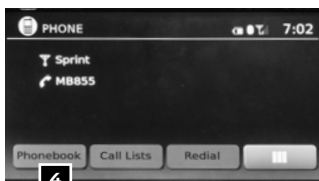


RECEIVING A CALL

To accept the incoming call, either:

- Press the  button on the steering wheel, or
- Select the green  icon on the screen.

To reject the incoming call, either:

 - Press the  button on the steering wheel, or
- Select the red  icon on the screen.

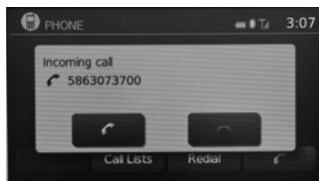

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual or please visit www.NissanUSA.com/bluetooth.



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands

SYSTEM GUIDE

may be available for some of the restricted functions. For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

- 1 NAV** button – Press to access the functions of the Navigation System.
- 2 MAP** button – Press to display the current location map screen.
- 3 VOL** knob – Turn right to increase the volume or left to decrease the volume.
- 4**  key – Select to zoom the map in.
- 5**  key – Select to zoom the map out.
- 6 APPS**  button – Press to access SiriusXM Traffic, MyApps, SiriusXM Travel Link, Voice Commands and Settings.
- 7**  button – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **TUNE** knob. Press and hold to turn the display off. Press again to turn the display on.
- 8 BACK** button – Press to return to the previous screen.
- 9 TUNE** knob – Turn to navigate the items in a list. Press to select a menu item.
- 10** Touch-screen display
- 11** SD-card location – An SD-card with map data must be inserted here for map functions to operate.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your Navigation System Owner's Manual.

MEMO

MEMO

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- Navigation Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- **www.NissanUSA.com/bluetooth**
- **www.NissanUSA.com/connect**
- **www.youtube.com/user/NissanUSA**
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the iPhone App Store or Android Google Play Store for download to your smartphone)



To view detailed instructional videos,
go to **www.nissanownersinfo.mobi/2017/nv200cargo**
or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at **<https://owners.nissanusa.com/owners/navigation/manualsGuide>**. If you have questions concerning any information in your Owner's Manual, contact Nissan Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

Nissan, the Nissan Brand Symbol, Z and Nissan model names are Nissan trademarks.

© 2016 Nissan North America, Inc.
QR17EA 0M20U2

Printing: March 2017 (08)

