


2017 QUEST

QUICK REFERENCE GUIDE



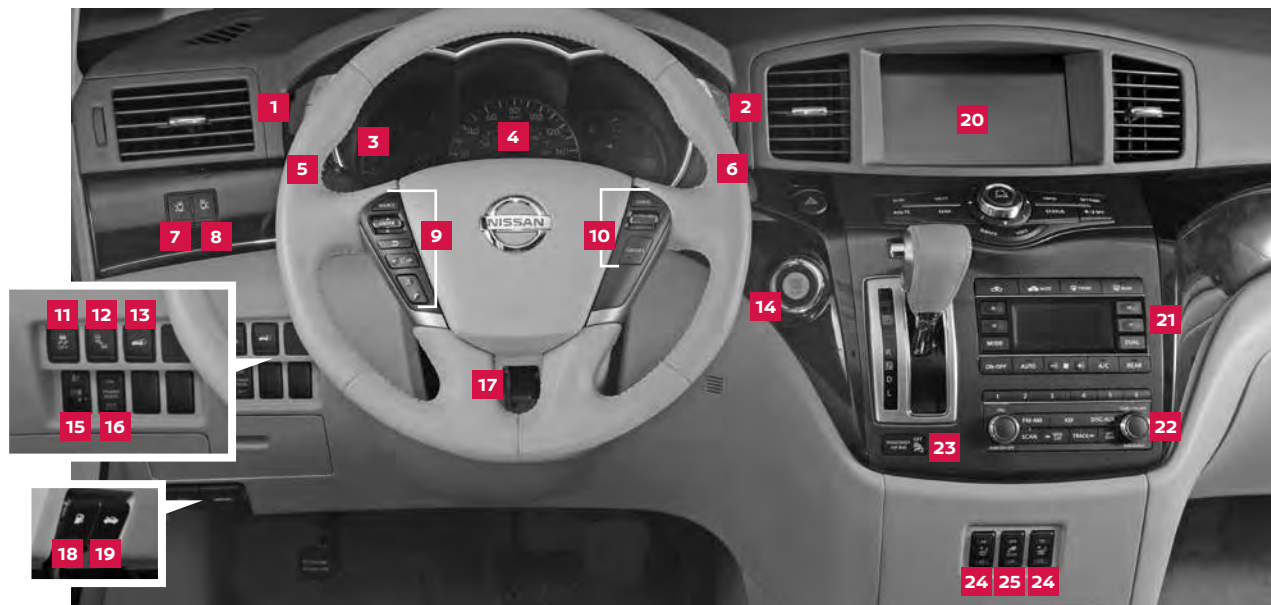

- | | | | |
|--|---|--|--|
| 1 Instrument Brightness Control* | 8 Passenger's Side Sliding Door Switch | 13 Power Liftgate Switch | 20 Control Panel Display |
| 2 Trip Computer/Reset Switches | 9 Steering Wheel Switches for Audio*/Bluetooth*/Navigation | 14 Push-button Ignition Switch | 21 Heater and Air Conditioner (automatic) |
| 3 Low Tire Pressure Warning Light | 10 Cruise Control | 15 Headlight Aiming Control* | 22 Audio System |
| 4 Vehicle Information Display | 11 Vehicle Dynamic Control (VDC) OFF Switch* | 16 Power Door Main Switch | 23 Front Passenger Air Bag Status Light* |
| 5 Headlight and Turn Signal Switch | 12 Blind Spot Warning (BSW) Switch | 17 Tilt and Telescopic Steering Column* | 24 Heated Seat Switches* |
| 6 Wiper and Washer Switch | | 18 Fuel-filler Door Release | 25 Power Outlet Main Switch* |
| 7 Driver's Side Sliding Door Switch | | 19 Hood Release* | |

*See your Owner's Manual for information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

Around View® Monitor with Moving Object Detection (MOD) (if so equipped)	2
Blind Spot Warning (BSW) (if so equipped)	4
Advanced Climate Control System (if so equipped)	4

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS) with Easy-Fill Tire Alert	5
Loose Fuel Cap	6
Fuel-filler Door	6
Clock Set/Adjustment	6

FIRST DRIVE FEATURES

Nissan Intelligent Key® System	8
Power Sliding Door Release (if so equipped)	9
Power Liftgate Release (if so equipped)	10
Front Power Seat Adjustments (if so equipped)	10
2 nd Row Seat Adjustments	11
Folding the 2 nd Row Seats	11
Entering/Exiting the 3 rd Row Seats	11
3 rd Row Seat Adjustments	12
3 rd Row Power Folding Seats (if so equipped)	12
Automatic Drive Positioner (if so equipped)	12
Outside Mirror Control Switch	13
Starting/Stopping the Engine	13
Headlight Control Switch	14
Wiper and Washer Switch	15
Heater and Air Conditioner (automatic) (if so equipped)	16
FM/AM/SiriusXM® Satellite Radio with CD/DVD Player (if so equipped)	18
USB (Universal Serial Bus) Connection Port/iPod® Interface (if so equipped)	19
Cruise Control	19
Power Outlets	20

SYSTEM GUIDE

Trip Computer	21
Bluetooth® Hands-free Phone System (if so equipped)	21
System Operating Tips	21
Bluetooth® System without Navigation (if so equipped)	22
Bluetooth® System with Navigation (if so equipped)	23
Bluetooth® Streaming Audio with Navigation (if so equipped)	25
Navigation System (if so equipped)	26
Nissan Mobile Entertainment System (MES) (if so equipped)	27
HomeLink® Universal Transceiver (if so equipped)	28



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

NEW SYSTEM FEATURES


AROUND VIEW® MONITOR WITH MOVING OBJECT DETECTION (MOD) (if so equipped)

- With the ignition switch in the **ON** position, the Around View® Monitor is activated by pressing the **CAMERA** button **1**, located on the control panel, or by moving the shift lever to the **R (REVERSE)** position.




- The monitor displays various views of the position of the vehicle.
- When the shift lever is in the **P (PARK)**, **N (NEUTRAL)** or **D (DRIVE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

Start from any Control Panel screen

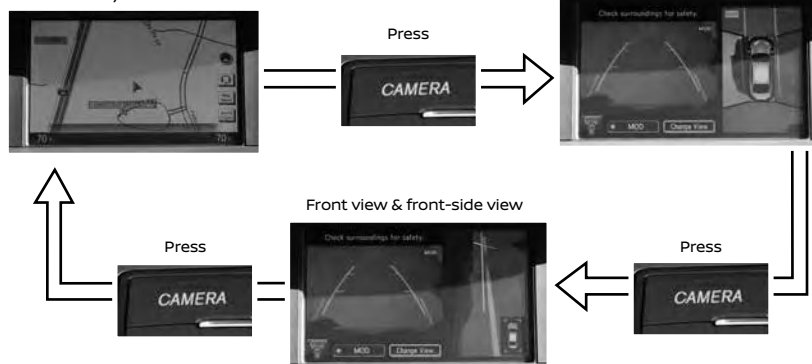

- When the shift lever is in the **R (REVERSE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

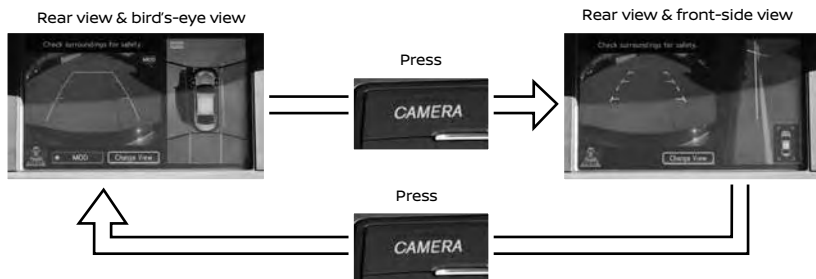

- For information regarding how to access additional viewing cycles, please see your Owner's Manual.

 
- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle bumper line.

- Red 1.5 ft (0.5 m); Yellow 3 ft (1m); Green 7 ft (2 m) and 10 ft (3 m).

- Predicted course lines **2** indicate the predicted course when operating the vehicle. The lines will be displayed when the steering wheel is turned.




- The course lines will move depending on how much the steering wheel is turned and will not be displayed while the steering wheel is in the neutral position.

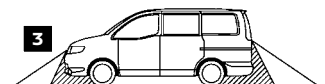

- There are some areas where the system will not show objects.

- When in the front or the rear view display, an object below the bumper or on the ground may not be viewed **3**.

- When in the bird's-eye view, a tall object near the seam of the camera viewing areas **4** will not appear in the monitor.

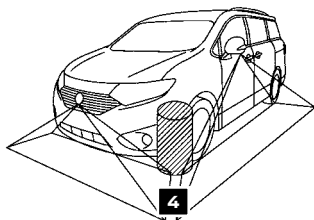

- The distance between objects viewed on the Around View Monitor differs from the actual distance.

- Objects in the bird's-eye view will appear further than the actual distance.



MOVING OBJECT DETECTION (MOD)

- If the MOD system detects moving objects surrounding the vehicle, a yellow frame **4** will be displayed on the camera image and a chime will sound.
- In the bird's-eye view, a yellow frame **4** is displayed on those camera images (front, rear, right, left) where moving objects are detected.
- When the following are displayed:
 - Blue MOD icon **5**; the system is operative in this view.
 - Gray MOD icon **6**; the system is not operative in this view.
 - No MOD icon; the system is off.
- To temporarily turn the system on or off, touch the "MOD" key **7**.


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

NEW SYSTEM FEATURES

BLIND SPOT WARNING (BSW) (if so equipped)

- The BSW system helps to alert the driver when another vehicle moves into the vehicle's detection zone.
- An indicator light located on the outside mirrors **1** will illuminate if the radar sensors detect a vehicle in the detection zone.
- Push the BSW switch **2** to temporarily turn the system off. When the system is off, the indicator light **3** on the switch is off.
- The indicator light **3** on the switch will illuminate after the ignition switch is switched to the **ON** position and the BSW system is enabled.

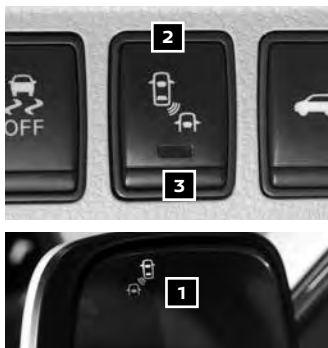

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.



ADVANCED CLIMATE CONTROL SYSTEM (if so equipped)

- The advanced climate control system keeps the air inside the vehicle clean using ion control and automatic air intake control with an exhaust gas detecting sensor.
- When ion control is activated, this unit generates highly concentrated Plasmacluster® ions into the air blown from the vents, reducing the odor absorbed inside the vehicle.
- When the automatic air intake control is activated, the exhaust gas detection sensor can detect odors, such as pulp or chemicals, and exhaust gas, such as gasoline or diesel. When such odors or gases are detected, the system automatically changes from the outside air circulation mode to the recirculation mode.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the **"Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT

- A **CHECK TIRE PRESSURE** warning message will appear in the trip computer **1** and the low tire pressure warning light **2** will illuminate when one or more tires are low in pressure and air is needed.

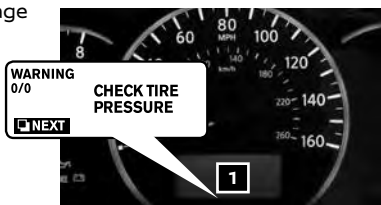

- The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.

- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals outside the vehicle to help you inflate the tire to the recommended COLD tire pressure.



- To use the Easy-Fill Tire Alert system:

1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
2. Place the ignition switch in the **ON** position. Do not start the engine.
3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop flashing.
5. Repeat this procedure for any additional under-inflated tires.

- After tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The **CHECK TIRE PRESSURE** warning message and low tire pressure warning light **2** will extinguish.

- When the low tire pressure warning light **2** flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended that you visit a Nissan dealer for this service.

- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light **2** to illuminate. If the warning light illuminates, check the tire pressure in your tires.

- Check the tire pressure (including the spare tire) often and always prior to long distance trips.

- The Tire and Loading Information label contains valuable information. Please refer to the "Maintenance and schedules (section 9)" of your Owner's Manual for the location of the Tire and Loading Information label.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**" and the "**Do-it-yourself (section 8)**" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.


ESSENTIAL INFORMATION

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will appear in the vehicle information display **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the reset button **2** is pressed for about 1 second.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" and the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

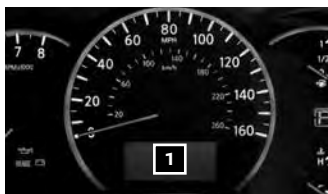

FUEL-FILLER DOOR

- To open the fuel-filler door, pull the release **1** located on the lower instrument panel to the left of the steering wheel.
- The fuel-filler door is located on the driver's side of the vehicle.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.



CLOCK SET/ADJUSTMENT

FM/AM RADIO WITH COMPACT DISC (CD) PLAYER (if so equipped)

1. Press the **MENU** button **1** repeatedly until "Clock: ON" or "Clock: OFF" appears on the display and use the **TUNE/FOLDER** knob **2** to select "Clock: ON".
2. Press the **MENU** button **1** until "Adjust Clock" is displayed, and then select "Yes".
3. Press the **MENU** button **1**. Turn the **TUNE/FOLDER** knob **2** to adjust the hour.
4. Press the **MENU** button **1**. Turn the **TUNE/FOLDER** knob **2** to adjust the minutes.
5. Press the **MENU** button **1** to exit the clock mode.



FM/AM/SAT RADIO WITH COMPACT DISC (CD) PLAYER (Type A) (if so equipped)

1. Rotate the **TUNE SCROLL** knob **4** until "Clock Adjust" is displayed and press the **ENTER/SETTING** button **3**.
2. Turn the **TUNE SCROLL** knob **4** to adjust the hour and then press the **ENTER/SETTING** button **3**.
3. Turn the **TUNE SCROLL** knob **4** to adjust the minute and then press the **ENTER/SETTING** button **3**.



FM/AM/SAT RADIO WITH COMPACT DISC (CD) PLAYER (Type B) (if so equipped)

- To adjust the time and the appearance of the clock on the display:

1. Press the **SETTING** button on the control panel.
2. Touch the "Others" key.
3. Touch the "Clock" key.



- The following settings can be adjusted:

- **On-screen Clock:** The clock in the upper right corner of the display can be turned ON or off.
- **Clock Format (24h):** The clock can be set to 12 hours or 24 hours.
- **Offset (hour):** The time can be adjusted by increasing or decreasing per hour.
- **Offset (min):** The time can be adjusted by increasing or decreasing per minute.
- **Daylight Savings Time:** The application of Daylight Savings Time can be turned ON or off.
- **Time Zone:** Adjust the time zone. Choose a time zone from the available list.

- Touch the "**BACK**" key to return to the previous screen.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM

The Nissan Intelligent Key® System allows you to lock or unlock your vehicle, open your liftgate and start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **1** or the liftgate request switch **2** or press the **1** button **3** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **1** or the liftgate request switch **2**; the corresponding door will unlock. Push the request switch again within 1 minute; all other doors will unlock, or
 - Press the **1** button **4** on the key fob to unlock the driver's side door. Press the **1** button **4** again within 1 minute; all other doors will unlock.
- To open the power liftgate (if so equipped), press the  button **5** for more than 1 second.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **6** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.



INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Move the shift lever to the **P (PARK)** position.
 2. Firmly apply the foot brake.
 3. Touch the ignition switch with the Intelligent Key and a chime will sound.
 4. Within 10 seconds after the chime sounds, push the ignition switch **START/STOP** button while depressing the brake pedal and the engine will start.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)", the "Starting and driving (section 5)" and the "Do-it-yourself (section 8)" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

POWER SLIDING DOOR RELEASE (if so equipped)

Use one of the following methods to open the power sliding doors:

- Press the driver's side **1** or the passenger's side **2** button on the Nissan Intelligent Key® for approximately 1 second.
- From the driver's seat, push the driver's side **3** or passenger's side **4** sliding door switch for about 0.5 seconds. The switches are located on the driver's side instrument panel.
- Pull the sliding door handle (inside or outside) until you hear the chime.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.



FIRST DRIVE FEATURES

POWER LIFTGATE RELEASE (if so equipped)

Use one of the following methods to open the liftgate:

- Press the  button **1** on the Nissan Intelligent Key® for more than 1 second.
- Once unlocked, push the liftgate opener switch **2** while carrying the Intelligent Key with you (that is, in your pocket or purse).
- From inside the vehicle, push the power liftgate switch **3** located on the instrument panel to the left of the steering wheel.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



FRONT POWER SEAT ADJUSTMENTS (if so equipped)

- To slide the seat forward or backward, push the switch **1** forward or backward.
- To adjust the angle of the seatback, push the switch **2** forward or backward.



POWER SEAT LIFTER (driver's seat)

- To raise or lower the height of the seat, push the switch **1** up or down.
- To raise or lower the front portion of the seat, push the front or back end of the switch **1** up or down.

POWER LUMBAR SUPPORT (driver's seat)

- To adjust the seat lumbar area, push the front or back portion of the switch **3**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

2ND ROW SEAT ADJUSTMENTS

- To slide the seat forward or backward, pull the lever **1** up and hold it while you slide the seat forward or backward to the desired position.
- Release the lever **1** to lock the seat in position.
- To adjust the angle of the seatback, pull the lever **2** up and lean back. To bring the seatback forward, pull the lever up and lean your body forward.
- Release the lever **2** to lock the seatback in position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"** of your Owner's Manual.



FOLDING THE 2ND ROW SEATS

- Secure the seat belts on the seat belt hooks **1** on the side wall.
- To fold down the seatbacks, pull the lever **2** on the 2nd row seat.
- To return the seatbacks, lift up each seatback and push it to the upright position until it is latched.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"** of your Owner's Manual.




ENTERING/EXITING THE 3RD ROW SEATS

- The 2nd row seats can tilt and slide forward for easy entry and exit to and from the 3rd row seats.
- To enter or exit the 3rd row seat, pull the lever **1** or **2** up to tilt down the seatback and slide the seat forward.
- Return and lock the 2nd row seats by sliding the seats to the rearmost position and tilting up the seatback after use.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"** of your Owner's Manual.

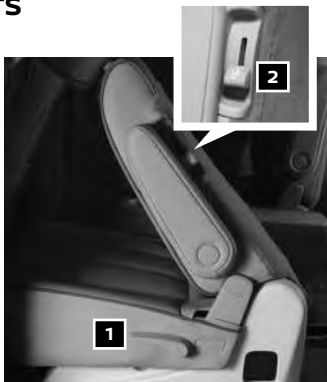

FIRST DRIVE FEATURES


3RD ROW SEAT ADJUSTMENTS

- To adjust the angle of the seatback, pull the strap **1** on the seatback and lean back.

Release the strap at the desired angle.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Safety — Seats, seat belts and supplemental restraint system (section 1)**" of your Owner's Manual.

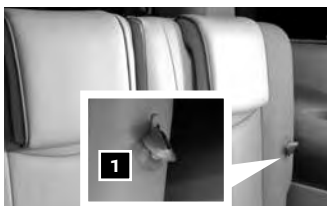


3RD ROW POWER FOLDING SEATS (if so equipped)

- To fold the power 3rd row seats, push the front side of the switch **1** located on the right or left side of the cargo area. The corresponding 3rd row seatback will be folded down automatically.

- Push and hold the rear side of the switch **2**. A beep will sound and the rear seatback will rise up while you are holding the switch. A beep will sound when the seatback is returned to its fully upright position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Safety — Seats, seat belts and supplemental restraint system (section 1)**" of your Owner's Manual.

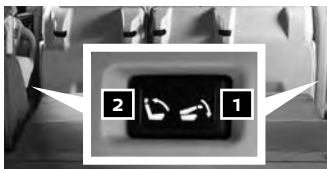

AUTOMATIC DRIVE POSITIONER (if so equipped)

- Two positions for the driver's seat and outside mirrors can be stored in the automatic drive positioner memory.
- Follow this procedure to set the memory positions:

- Confirm the shift lever is in the **P (PARK)** position.
 - Place the ignition switch in the **ON** position.
 - Adjust the driver's seat and outside mirrors to the desired positions using the adjusting switches for each feature.
 - Push the **SET** switch, and within 5 seconds, push the memory switch (**1** or **2**) for at least 1 second.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds.
 - The driver's seat and outside mirror positions are now set to your preferences.
- These memorized positions can also be linked to your Nissan Intelligent Key®. To link a memorized position to your Intelligent Key, press the unlock button on the key fob after completing the previous step.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.



To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, turn the control switch **1** right or left.
- To adjust the mirror angle, move the control switch **1** up, down, right or left.
- To prevent accidentally moving the mirror, turn and set the switch to the center (neutral) position.



REVERSE TILT-DOWN FEATURE (if so equipped)

The reverse tilt-down feature will turn both of the outside mirror surfaces downward to provide better rear visibility close to the vehicle.

1. Place the ignition switch in the **ON** position.
2. Choose either the right or left outside mirror by operating the outside mirror control switch **1**.
3. Move the shift lever to the **R (REVERSE)** position.
4. Both outside mirror surfaces will turn downward.

The outside mirror surfaces will return to their original positions when one of the following conditions has occurred:

- The shift lever is moved to any position other than **R (REVERSE)**.
- The outside mirror control switch is set to the center (neutral) position.
- The ignition switch is placed in the OFF position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

STARTING/STOPPING THE ENGINE

- It is important to make sure the Nissan Intelligent Key® is with you (that is, in your pocket or purse).
- Depress the brake pedal.
 - If the brake pedal is not depressed, pushing the ignition switch once enters the **ACC** mode.
 - If the ignition switch is pushed a second time, the vehicle will enter the **ON** mode.
- Press the ignition switch **START/STOP** button to start the engine.



TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Press the ignition switch **START/STOP** button to turn the engine off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

FIRST DRIVE FEATURES

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.



AUTOLIGHT SYSTEM (if so equipped)

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then place the ignition switch in the **ON** position. To deactivate the autolight system, turn the headlight control switch to the **OFF** position,  position **1** or  position **2**.

HIGH BEAM SELECT

- With the headlights ON (either in the **AUTO** or  position), push the headlight control switch forward **4** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam . The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.



FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **6** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.



LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.
- Choose the appropriate method to signal a lane change based on the road and traffic conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the front windshield wipers:

- 1** Mist (**MIST**) – One sweep operation of the front wipers.
- 2** Intermittent (**INT**) – To operate intermittently, push the lever down. The intermittent speed can be adjusted by twisting the time control ring **3** to increase or decrease wiper speed.
- 4** Low (**LO**) – Front wipers operate at a continuous low-speed.
- 5** High (**HI**) – Front wipers operate at a continuous high-speed.
- 6** Front washer  – Pull the lever toward you to activate the front washer. The front wipers will operate several times.

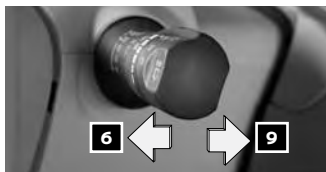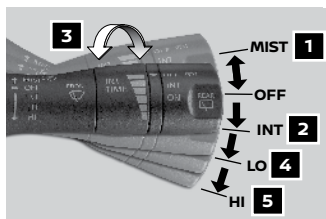

REAR WIPER AND WASHER

- 7** Intermittent (**INT**) – Rear wiper operates intermittently.
- 8** Low (**ON**) – Rear wiper operates at a continuous low-speed.
- 9** Rear washer  – Push the lever forward to activate the rear washer. The rear wiper will operate several times.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

FIRST DRIVE FEATURES



HEATER AND AIR CONDITIONER (automatic) (if so equipped)

1 AUTO BUTTON

- The automatic mode may be used year-round. Press the **AUTO** button to turn the system on. The system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.

2 FAN SPEED CONTROL BUTTON

- Press the fan speed control button  to manually adjust the fan speed down – or up +.

3 DRIVER'S SIDE TEMPERATURE CONTROL BUTTONS

- Press the driver's side temperature control buttons up ▲ for warmer air or down ▼ for cooler air.

4 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the front defroster and foot vents.

5 PASSENGER'S SIDE TEMPERATURE CONTROL BUTTONS

- Press the passenger's side temperature control buttons up ▲ for warmer air or down ▼ for cooler air.

6 DUAL BUTTON

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by pressing the passenger's side temperature control buttons.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

7 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate interior air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  **FRONT** or in the front defroster and foot vent mode .

8 AUTO-RECIRCULATION BUTTON

- Press the auto-recirculation button  **AUTO** to switch to the automatic air intake control mode. The indicator light on the button will illuminate.
- In this mode, the sensor detects certain odors and gases to automatically switch between the air recirculation mode and the outside air circulation mode.
- The auto-recirculation mode cannot be activated when the air flow control is in the front defroster mode  **FRONT** or in the front defroster and foot outlet mode .

9 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front defroster button  **FRONT** to turn the system on. The A/C automatically turns on when the front defroster mode is selected. This feature removes humidity from the air.
- Press the temperature control buttons  or  to set the desired temperature.
- To defrost the front and side windows quickly, set the temperature controls and fan speed controls to their maximum settings.

10 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS (if so equipped)

- Push the rear window defroster switch  **REAR** to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

11 A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

12 REAR BUTTON

- To control the rear automatic air conditioning system with the front air conditioner control panel, press the **REAR** button.
- When the rear automatic air conditioning system is on, the indicator light on the **REAR** button will illuminate and the front display will switch to the rear air conditioner screen.
- To adjust the front air conditioning system, press the **REAR** button again or wait 10 seconds.
- The rear passenger controls are unavailable when **REAR** is shown on the front display.



13 ON-OFF BUTTON

- Press the **ON-OFF** button to turn the climate control system on or off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

FIRST DRIVE FEATURES



FM/AM/SiriusXM® SATELLITE RADIO WITH CD/DVD PLAYER (if so equipped)

1 ON-OFF BUTTON/VOL (volume) CONTROL KNOB

- Press the **ON-OFF** button to turn the system on or off.
- Turn the **VOL** (volume) control knob right or left to increase or decrease the volume.

2 AUDIO BUTTON/TUNE/FOLDER KNOB

- Press the **AUDIO** button to go to the audio settings screen.
- To manually tune the radio, turn the **TUNE/FOLDER** knob left or right.

3 ◀◀ SEEK/CAT AND TRACK ▶▶ BUTTONS

- To scan quickly and stop at the previous or next broadcast station, press the **◀◀ SEEK/CAT** button or the **TRACK ▶▶** button.
- For satellite radio, press the **◀◀ SEEK/CAT** button or the **TRACK ▶▶** button to switch to the first channel of the previous or next category.
- To change tracks on a CD, press the **◀◀ SEEK/CAT** button or the **TRACK ▶▶** button.
- To rewind or fast forward a track on a CD, press and hold the **◀◀ SEEK/CAT** button or the **TRACK ▶▶** button.

4 STATION SELECT BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM-AM** button **5** or **XM** button **6** then tune to the desired FM, AM or satellite radio station.
- Next press and hold the desired station select button (**1-6**) until the sound is briefly muted. The channel indicator will then display, and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (**1-6**).

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

USB (Universal Serial Bus) CONNECTION PORT/ IPOD® INTERFACE (if so equipped)

- The USB port **1** is located in the center console.
- When a compatible USB memory device or iPod® is plugged into the USB port, compatible audio and video files stored on the device can be played through the vehicle's audio system and front display.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** on the steering wheel and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4** on the steering wheel.
- To turn off cruise control, push the **ON/OFF** switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will extinguish.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

FIRST DRIVE FEATURES

POWER OUTLETS

- To use a power outlet, open the cap.
- Use the power outlets with the engine running to avoid discharging the vehicle's battery.

12 VOLT OUTLETS

- The power outlets are used for powering electrical accessories such as cellular phones.
- They are rated at 12V, 120W (10A) maximum.
- The 12V outlets are located on the instrument panel **1** and in the cargo area **2**.



120 VOLT OUTLET (if so equipped)

- The 120V outlet **3** is rated at 120V, 150W (1.25A) maximum and is located on the front console.



- To turn on or off the power supply to the outlet, push the **ON** or **OFF** side of the main switch **4** located on the instrument panel. When the switch is pushed to the **ON** position, the indicator light on the switch will illuminate.
- After using the power outlet, be sure to push the main switch to the **OFF** position.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

SYSTEM GUIDE

TRIP COMPUTER

- When the  button **1** is pressed, the following modes will appear on the vehicle information display **2**:
 - **MPG/AVG** – Displays the current and average fuel consumption.
 - **MPG/MPH** – Displays the average fuel consumption and speed since the last reset.
 - **TIME/miles** – Displays the elapsed time and total distance the vehicle has been driven since the last reset.
 - **RANGE** – Displays the estimated distance to empty (dte) the vehicle can be driven before refueling.
 - **OUTSIDE TEMP** – Displays the exterior air temperature, including a low temperature warning feature.
 - **SETTING** – Allows you to set reminders for alerts and maintenance intervals or change the language and units used in the system.
 - Press the  button **3** to cycle through the various setting modes.
 - Press the  button **1** to choose the selected menu.
 - **WARNING** – Displays when a warning is present.
- To reset **Trip A** and **Trip B**, go to the desired mode on the trip computer and hold the **TRIP RESET** button **4** for more than 1 second.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM* (if so equipped)

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.

SYSTEM OPERATING TIPS

- Press the  or  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- For vehicles not equipped with Navigation:
 - To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  or  button on the steering wheel, and after the tone, say "Call Redial".

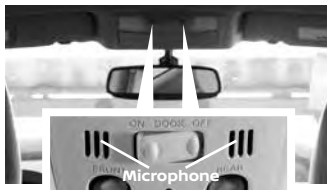

SYSTEM GUIDE

- For vehicles equipped with Navigation:
 - Refer to the "Voice recognition (section 9)" of your Navigation System Owner's Manual for more information.
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- When speaking phonebook names, please be aware some cellular phones require the last name to be spoken before the first name. For example, "Michael Smith" may be spoken as "Smith Michael".
- To cancel a Voice Recognition session without Navigation, say "Cancel", "Quit" or press and hold the  button on the steering wheel. For vehicles with Navigation, say "Exit" or press and hold the  button on the steering wheel.
- Voice commands can be used to operate various Bluetooth® system features using the Nissan Voice Recognition system. See your Owner's Manual for detailed information.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.NissanUSA.com/bluetooth.

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

BLUETOOTH® SYSTEM WITHOUT NAVIGATION* (if so equipped)

CONNECTING PROCEDURE

1. Press the  button on the steering wheel. The system announces the available commands.
2. Say: "Connect Phone". The system acknowledges the command and announces the next set of available commands.
3. Say: "Add Phone". The system acknowledges the command and asks you to initiate connecting from the cellular phone handset.
4. Initiate connecting from the cellular phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.NissanUSA.com/bluetooth.
 - When prompted for a PIN, enter "1234" from the handset. (The PIN is assigned by NISSAN and cannot be changed.)
 - For cellular phones that support SSP (Simple Secure Pairing), confirm that the PIN on the vehicle display matches the PIN displayed on the cellular phone.



To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

5. Say the name for the cellular phone when the system asks you to provide one.
You can give the cellular phone the name of your choice.

PHONEBOOK REGISTRATION

- When the cellular phone is connected to the in-vehicle module, the data stored in the cellular phone, such as the phonebook, outgoing call logs, incoming call logs and missed call logs, is automatically transferred and registered to the system.
- The availability of this function depends on each cellular phone. The copying procedure also varies according to each cellular phone. See your cellular phone's Owner's Manual for more information.
- Up to 1,000 entries per registered cellular phone can be stored in the phonebook.

MAKING A CALL

1. Press the  button on the steering wheel. A tone will sound.
2. Say: "Call". The system acknowledges the command and announces the next set of available commands.
3. Say the registered person's name. The system acknowledges the command and announces the next set of available commands.
4. Say: "Yes". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel.
- To reject the call, press the  button on the steering wheel.
- To hang up, press the  button on the steering wheel.

* Some jurisdictions prohibit the use of cellular telephones while driving.


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

BLUETOOTH® SYSTEM WITH NAVIGATION* (if so equipped)


CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the cellular phone.
- 1. Press the **SETTING** button on the control panel and touch the "Bluetooth" key on the display.
- 2. Touch the "Connect Bluetooth" key.
- 3. A pop-up box will appear on the screen, prompting you to confirm that the connection is for the cellular phone system. Touch the "Yes" key.
- 4. Initiate connecting from the cellular phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit www.NissanUSA.com/bluetooth.

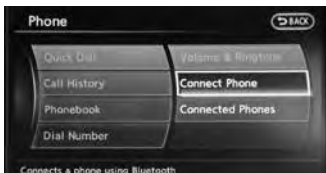

SYSTEM GUIDE

- When prompted for a PIN, enter "1234" from the handset. (The PIN is assigned by NISSAN and cannot be changed.)
- For cellular phones that support SSP (Simple Secure Pairing), confirm that the PIN on the vehicle display matches the PIN displayed on the cellular phone.

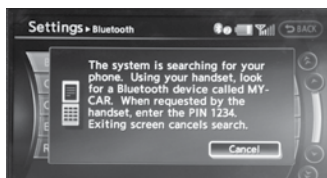


5. When the connecting is complete, the screen will return to the "Phone" menu display.

PHONEBOOK SETUP

- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- If the phonebook does not download automatically, up to 40 entries can be manually downloaded.
- To manually download entries:

1. Press the  button on the steering wheel and select the "Quick Dial" key.
2. Touch the "Add New" key at the top of the display. There are different methods to input a phone number. Select one of the following options:


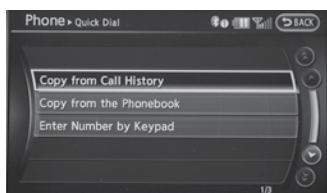


- "Copy from Call History"- to save a number from the Outgoing, Incoming or Missed Calls lists.
- "Copy from the Phonebook"- to save a number that has been downloaded from your handset to the vehicle.
- "Enter Number by Keypad"- to input the number and name manually.

MAKING A CALL

To make a call, follow this procedure:

1. Press the  button on the steering wheel. The "Phone" menu will appear on the control panel display.
2. Touch the "Quick Dial", "Call History", "Phonebook" or "Dial Number" key.
3. Select the desired entry from the list.
4. Select "Call" to start dialing the number.

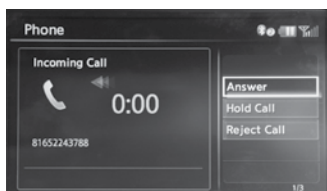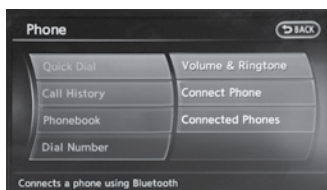

RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel or touch the "Answer" key.


To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- To reject the call, touch the “Reject Call” key.
- To hang up, press the  button on the steering wheel or touch the “Hang up” key.

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner’s Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the “**Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

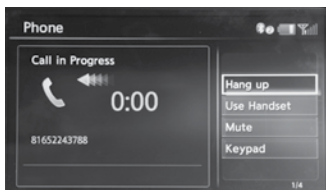


BLUETOOTH® STREAMING AUDIO* WITH NAVIGATION (if so equipped)

- If you have a compatible Bluetooth® device with streaming audio (A2DP and AVRCP profiles), you can set up the wireless connection between your Bluetooth® device and your vehicle’s audio system. This connection allows you to listen to audio from the Bluetooth® device using your vehicle’s speakers.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- To use your connected Bluetooth® device to stream audio, it will need to be set as an audio device. The following procedure will need to be followed to initially set up a Bluetooth® device to work as an audio player and to switch between devices.


1. Press the **SETTING** button on the control panel and touch the “Bluetooth” key on the display.
2. Select “Connected Devices”.
3. Select “Audio Player”.
4. Select the name of the device that you are attempting to connect as an audio player.
5. Select “Select”.
6. Verify that the system confirms that the device has been selected as an audio player.

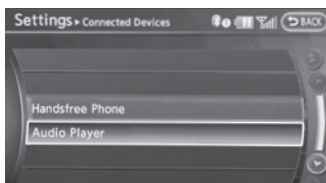

- Once your Bluetooth® device has been set as an audio device, press the **DISC-AUX** button on the control panel to select the Bluetooth® Streaming Audio player.

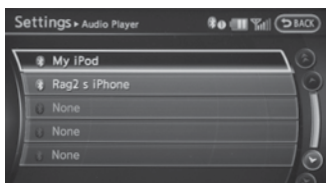

- Bluetooth® connectivity issues can usually be resolved with a reboot of your cellular phone if you do not regularly turn off your cellular phone. Otherwise, try updating your cellular phone with the latest software.

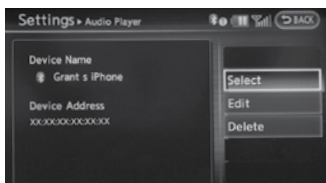

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner’s Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual or visit www.NissanUSA.com/bluetooth.

SYSTEM GUIDE



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to the "Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

- 1** Touch-screen display
- 2 DEST** (Destination) – Press to enter a destination.
- 3 INFO** (Information) – Press to display the vehicle, traffic (if so equipped), weather (if so equipped) or Voice Recognition information.
- 4 SETTING** – Press to access the system settings.
- 5** Multi-function controller – Turn to highlight an item on the screen, press to select the highlighted item or scroll the map.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

- 6**  – Press to switch to the zoom mode to change the map scale. Use the center dial to adjust the map scale. Turn clockwise to zoom in. Turn counterclockwise to zoom out.
- 7** **ROUTE** – Press to access guidance control functions (guidance cancellation, route priority, waypoint setting on the route, etc.).
- 8** **MAP** – Press to display the map. While following a programmed route, press multiple times to change the type of route information.
- 9** **STATUS** – Press multiple times to display audio information with either the air conditioner status, fuel economy or navigation directions.
- 10**  **OFF** – Press to switch between the day screen (bright) and the night screen (dark). Press and hold to turn off the display. Press again to turn on the display.
- 11**  **BACK** – Press to return to the previous screen. In a settings screen, this button can also be used to apply the setting. In a character input screen, this button can also delete the characters that have been entered.
- 12** **VOICE** – Press to hear the current guidance for a programmed route.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the Navigation System Owner's Manual.

NISSAN MOBILE ENTERTAINMENT SYSTEM (MES) (if so equipped)

- With this entertainment system, you can play video files via a DVD or compatible USB device, providing images and sound operated through both the front and rear display screens.
- You can also connect auxiliary devices, such as video games, camcorders or portable video players, to the auxiliary jacks. (Your device will be controlled through its own control panel.)
- Use the remote controller, provided with the system, to operate the rear display screen.
- Use the headphones, also provided with the system, to listen to audio wirelessly and independently.
- To watch or control videos on the front display, make sure the vehicle is in the **P (PARK)** position and the parking brake is applied.
- To reduce driver distraction, movies will not be shown on the front display while the vehicle is in any drive position.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.

SYSTEM GUIDE



HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
 - Position the handheld transceiver 1-3 in (26-76 mm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
 - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
 - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
 - A solid, continuous light indicates the programming is complete and the HomeLink button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink button, press and release the learn or smart button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to three times to complete the programming process. HomeLink should now activate your device.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- Navigation Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the iPhone App Store or Android Google Play Store for download to your smartphone)



To view detailed instructional videos,
go to www.nissanownersinfo.mobi/2017/quest
or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in the Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

