

DIGITAL NAVIGATION SYSTEM

User's Manual

RIO



Preface

Thank you for purchasing this Audio Navigation System.

This user's manual explains how to use the Kia Motor Audio Navigation System. Before using the product, read the contents of this user's manual carefully and use this product safely.

- The screens shown in this manual may differ with the actual screens of the product.
- The design and specification of this product may change without prior notification for product improvement.
- When transferring the vehicle to another individual, include this user's manual so that the next driver can continue its use.

iPod®

iPod® is a registered trademark of Apple Inc.

Bluetooth®

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Kia is under license.

A Bluetooth® enabled cell phone is required to use Bluetooth® wireless technology.

Table of contents

PART 1 PRE-OVERVIEW

Introduction	1-2
Controller and functions	1-3
Basic operation and setting	1-6

PART 2 AUDIO SYSTEM

Operating the radio	2-2
Operating the CDP	2-11
Operating the external devices ...	2-23

PART 3 AUDIO SYSTEM

Highlighting navigation functions	3-2
Understanding the navigation system	3-3
Starting navigation system	3-6
Map screen and functions	3-6
Setting a destination	3-17
Operating after setting a destination	3-33
Route guidance	3-34
Setup and Information	3-39

PART 4 VOICE COMMAND SYSTEM

Operating voice command	4-2
Setting up the voice command system	4-4
Voice command list	4-6

Table of contents

PART 5

BLUETOOTH® WIRELESS TECHNOLOGY HANDSFREE

Before using the Bluetooth® wireless
technology Handsfree 5-2

Converting Bluetooth® wireless
technology Handsfree mode 5-2

Pairing and connecting a Bluetooth®
wireless technology phone 5-4

Bluetooth® wireless technology
Handsfree screen layout 5-9

Making a call 5-11

Answering a call 5-13

Operating menus during a call 5-14

Phone Book 5-16

Favorites 5-20

Call History List 5-21

Phone Music 5-23

Bluetooth® settings 5-26

Important information 5-32

PART 6


APPENDIX

Troubleshooting guide 6-2

Map legend 6-4

PART 1

 PRE-OVERVIEW



Introduction

Important information about this manual

This user manual contains instructions related to safety. Closely observe and comply with all of the safety instructions found within this manual.

WARNING !

Disobeying the warnings listed within this user's manual may cause fatal or serious injuries. Warnings indicate matters which may directly lead to accidents.

CAUTION!

Disobeying the cautions listed within this user manual may lead to accidents or cause injury. Cautions indicate matters which may lead to vehicle damage or malfunction.

INFORMATION

Information which the user must be aware or allows for more convenient use of the device.

Precaution for safe usage

WARNING !

- Driving while distracted can result in a loss of vehicle control, that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any hand-held devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.
- Do not operate the Audio Navigation system while driving.
- Do not disassemble, assemble, or modify the Audio Navigation system.
- Do not watch the screen for prolonged periods of time while driving.
- Set the volume to a level which allows the driver to be aware of external conditions.

CAUTION!

- Do not operate the Audio Navigation system for prolonged periods of time with the vehicle ignition in ACC. Such operations may lead to battery discharge.

- Be cautious not to spill water or introduce foreign objects into the device.
- Do not cause severe shock to the device. Direct pressure onto the front side of the monitor may cause damage to the LCD or touch panel.
- In case of product malfunction, please contact your place of purchase or service center.
- When cleaning the touch screen, make sure to turn off the device and use a dry and smooth cloth. Never use tough materials, chemical cloths, or solvents (alcohol, ammonia, benzene, thinners, etc.) as such materials may damage the device panel or cause color and quality deterioration.

Reference Page

This indicates the title and page that you should refer to.




This indicates a key on the control panel.

Voice Command

This indicates an operation by voice command.

Controller and functions

Control panel

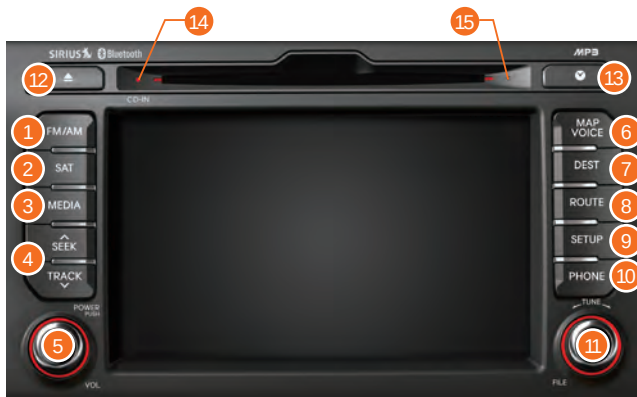

① FM/AM

Each press will change the bands in the following order: FM1 → FM2 → AM → FM1 ...

② SAT

Each press will change the bands in the following order: SIRIUS1 → SIRIUS2 → SIRIUS3 → SIRIUS1 ...

③ MEDIA

Each press will change the bands in the following order: DISC(CD, MP3) → (USB or iPod) → (AUX) → (Phone Music) → DISC(CD, MP3)...

④ SEEK/TRACK Up/Down

- SHORT KEY(less than 0.8 second)
- FM/AM Mode : automatically searches for

the previous or next broadcast frequency and starts playing.

- SAT Mode : receives the previous or next channel.
- CD Mode : plays the previous or next track.
- MP3, USB Mode : Plays the previous or next file.
- iPod Mode : plays the previous or next song.
- LONG KEY(over 0.8 second)
- FM/AM Mode : quickly moves through the frequencies while the button is pressed. Once released, automatically searches for broadcasts which can be received.
- SAT Mode : quickly moves to the previous or next channel.
- CD Mode : REW/FF the current playing track.
- MP3, USB Mode : REW/FF the current playing file.
- iPod Mode : REW/FF the current playing song.

⑤ Power / Volume control knob

- Push knob (over 0.8 second) : turns the power off.
- Push knob (under 0.8 second) : each time the

knob is pressed, the Audio is turned on and off.

- Tune knob : the range of volume adjustment is between 0 ~ 35.

6 MAP VOICE

Displays the map screen for the current position.

7 DEST

Displays the Destination menu screen.

8 ROUTE

Displays the Route menu screen.

9 SETUP

Displays the Setup menu screen.

10 PHONE

Displays the Bluetooth handsfree screen.

11 TUNE

- FM/AM Mode : push the keys to search for the desired frequency. Press the key to receive the selected frequency.
- SAT Mode : push the keys to search for the

desired channel. Press the knob to receive the selected channel.

- CD Mode : push the keys to search for the desired track. Press the key to play the selected track.
- MP3, USB Mode : push the keys to search for the desired file. Press the key to play the selected file.
- iPod Mode : push the keys to search for the desired song. Press the key to play the selected song.

12 DISC eject

Ejects the inserted disc.

13 CLOCK

- Short Key (under 0.8 second)
 - When the screen is turned on : displays the current time in the center of the screen.
 - When the screen is turned off : turns the full clock screen on and off.
- Long Key (over 0.8 second)
 - Displays the clock setting screen.

14 DISC insert indicator LED

Displays that a DISC has been inserted.

15 RESET

Resets the system - if software locks-up.

INFORMATION

If pressing the **POWER/VOL** knob for over 0.8 second and the system does not shut down, carefully use a straightened paper clip at the access hole shown next to the right DISC indicator LED to reset the software. The system power will shut-off and restart.

Steering wheel remote controller



1 Volume Up/Down

Increases or decreases the speaker volume within a range between 0 ~ 35.

2 Seek Up/ Down

• SHORT KEY(less than 0.8 second)

- FM/AM : Receives the previous or next pre-set frequency.
- SIRIUS Mode : Receives the previous or next preset channel.
- CD Mode : Plays the previous or next track.

- MP3, USB Mode : Plays the previous or next file.
- iPod Mode : Plays the previous or next song.
- LONG KEY(Over 0.8 second)
 - FM/AM Mode : Quickly moves through the frequencies while the button is pressed. Once released, it automatically searches for broadcasts which can be received.
 - SIRIUS Mode : Quickly moves to the previous or next channel.
 - CD Mode : REW/FF the current playing track.
 - MP3, USB Mode : REW/FF the current playing file.
 - iPod Mode : REW/FF the current playing song.

3 MODE

Each time the mode button is pressed, the mode will convert in the following order: FM1 → FM2 → AM → SIRIUS1 → SIRIUS2 → SIRIUS3 → (DISC) → (USB or iPod) → (AUX) → (Phone Music) → (FM1).

If a not supported DISC has been inserted or if the corresponding unit has not been connected, the mode will not be recognized

and automatically switch to the next mode.

- Press this button for over 0.8 second to turn the Audio ON and OFF.
- Press this button when the Power is turned off to turn the power on.

4 MUTE

Turns the sound on and off. When the MUTE is turned on, the MUTE icon will become displayed. When in the Navigation screen, the MUTE icon at the top of the screen will disappear after 3seconds.

5 CALL

Press this key to receive an incoming call. If pressed while in Audio/Navigation mode, the Bluetooth handsfree screen will be displayed.

6 END

Press this key to reject an incoming call. If pressed while on a call, then the call will be ended.

7 Voice Recognition button

Starts Voice Recognition.

Basic operation and setting

Turning the power ON

1. Turn the ignition key onto ACC or ON. If the system power had been on when the ignition was turned off, the system will turn back on automatically.
2. If the system power had been off when the ignition was turned off, the system will remain off.
In this case, press the **POWER/VOL** knob to turn on the system power.



i INFORMATION

As system booting starts from the point the door lock is unlocked, the device may complete booting before the ACC is turned on or the **POWER/VOL** knob is pressed.

3. Once system booting is complete, the most recent operated mode will be displayed. For example, turning on the system will display FM1 radio mode if the last operated mode prior to turning off the system had been FM1 radio mode.

Turning the power OFF

If the **POWER/VOL** knob is pressed for over 0.8 second, a beep will sound and the system power will be turned off.

Turning the audio ON/OFF

Press the **POWER/VOL** knob for under 0.8 second with the system power on to turn the Audio on and off.

Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.
"Audio On"
"Audio Off"

i INFORMATION

Conducting the following operations while the AUDIO is off will automatically turn on the Audio system.

- Pressing the audio related buttons (**FM/AM**, **SAT**, **MEDIA**).
- Inserting a DISC or connecting an external device.

Adjusting audio volume

Turn the **POWER/VOL** knob in clockwise direction to increase the volume and counter-clockwise to decrease the volume.

i INFORMATION

- The range of volume adjustment is between 0 ~ 35.
- Adjustments to the volume cannot be made while the AUDIO is turned off.

How to operate the screen menu

- If a menu button on the screen is pressed, the corresponding function will be operated.
- The same menu button may perform different functions depending on the length of time the button is pressed (under 0.8 seconds or over 0.8 second).

For more information, refer to the specific function within this user manual.

- The current operated button will be highlighted upon display.
- Buttons which cannot be operated under the current conditions will be displayed in disabled state. Pressing a disabled button will not perform any operation.

Inputting letters by using screen keyboard



ABC : Displays the English alphabet keypad.

AÇÊ : Displays the French alphabet keypad. (if available)

0-9 : Displays the number and symbol keypad.

Delete : Deletes the previous inputted letter.
Pressing for over 0.8 second will delete all content.

List : The input is completed.

↩ : Restores to previous screen.

The inputted text will not be saved.

Displaying the list



List: Even if input is not completed, the current matching items from the database will be displayed.

i INFORMATION

The number at the upper-right side of the screen displays the number of current matches.

Selecting an item in a list




 : Moves to the next page or previous page.

 : The  button will be displayed if the text is too long to be displayed in one button.

- Press the  button to move the cursor to the end of the text.
- Press the  button to move the cursor to the front of the text.

Sorting items from the list

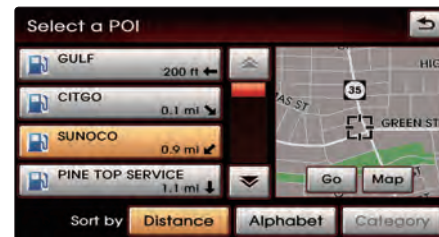

Select the desired sorting method to reorganize the list in accordance to the selected method.

How to operate menu by voice command

Condition for voice recognition system

Most of the functions within the AUDIO and Navigation system can be operated by voice.

Please follow the instructions below for optimal voice recognition performance.

- Close all windows and sunroof.

The performance of the voice recognition can be improved in quiet environment.

- Press the voice recognition button and say the desired voice command after the sound of the beep.
- The microphone is positioned above the driver so that voice commands can be said while maintaining a proper posture.
- Pronounce the voice commands naturally and clearly as if in normal conversation.

Giving voice command



1. Press the  key on the steering wheel remote controller.

A voice command window will be displayed on the lower side of the screen followed by a "Command please" voice comment.

2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say the desired voice command.

 [Voice command list], page 4-6.

 [Searching a destination by voice command], page 4-19.

INFORMATION

Press the  key shortly to input the desired voice command. The system voice instruction comment will immediately terminate. When the  icon changes into the  icon with a beep sound, it is possible to input voice commands.

Audio sound setting

Press the **Sound** button on the main screen of each AV mode (FM/AM, SIRIUS, CD, MP3, USB, iPod, and AUX) to display the Audio sound setup screen.



FAD/BAL

The position of the sound can be adjusted by using the up-down and left-right (, , , ) buttons on the left side of the screen.

Press the **Default** button to position the sound in the center of the vehicle.

Treb/Mid/Bass/P.Bass

Treb/Mid/Bass/P.Bass(HIGH, MID, LOW, OFF) can be adjusted by using the left/right buttons (, ) of each control.

Auto volume control ON/OFF

Each time the **Auto volume control** button is pressed, the Auto volume control function is turned on or off.

INFORMATION

The Auto volume control is a function which automatically adjusts the volume level in accordance to changes in vehicle speed.

Touch screen Beep ON/OFF

Each time the **Touch screen beep** button is pressed, the beeping sound that follows each press on the screen will turn on or off.

Display setting

Press the **SETUP** key on the control panel to display the Setup menu screen.



Press **Display** button to display the Display Setup screen.



Display mode

Press the button for the desired display mode from **Automatic**, **Daylight**, and **Night** modes. The current selected mode is highlighted.

- **Automatic**

The display is automatically converted between Daylight and Night modes in accordance to the on/off state of the vehicle taillights.

- **Daylight**

The bright screen is always maintained regardless of the on/off state of the vehicle taillights.

- **Night**

The dark screen is always maintained regardless of the on/off state of the vehicle taillights.

Brightness

Use the left/right buttons (**<**, **>**) for control to make adjustments.

Display OFF

Press the **Display off** button.

Display ON


Press anywhere on the black screen.

The screen prior to display setting will be displayed.

Setting Picture Frame

Display Picture Frame

1. Press the **Picture Frame** button in the DISPLAY Setup screen.
2. Press the **My Image** button in the <Setting Display off> Setup screen.

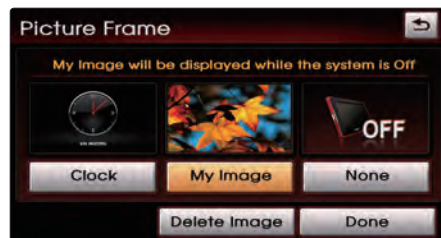

3. The registered image will be displayed once power is turned off.

i INFORMATION

For Picture Frame setup, the frame must be set in USB Image mode. (For details on setting the Picture Frame, refer to the USB IMAGE page.)

4. To delete an image registered as a frame, press the **Delete Image** button.


Viewing Current Time

Press the  on the front panel shortly (under 0.8 second) to display the current time at the center of the screen.



INFORMATION

If the screen is turned off, selecting the  will display the current time on the entire screen.

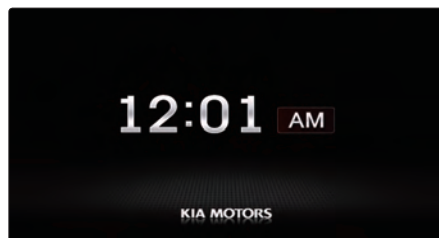

Setting the Clock

Press and hold the  on the front panel (over 0.8 second) to display the Clock setting screen.



• GPS Time

The time received from the GPS will be displayed automatically.

• Clock Type

Selects the clock type shown as the entire screen when the system power is turned off.

• Time Format

When the clock type is digital, this button is used to convert the time between 12 hour/ 24 hour systems.

• Daylight Saving Time


Turns the Daylight Saving Time function on or off.

INFORMATION

Clock setting mode can be displayed while the clock is displayed on the screen even when the system is turned off.

MEMO

 
PART 2
AUDIO SYSTEM



Operating the radio

FM/AM Radio

Listening to the FM/AM radio

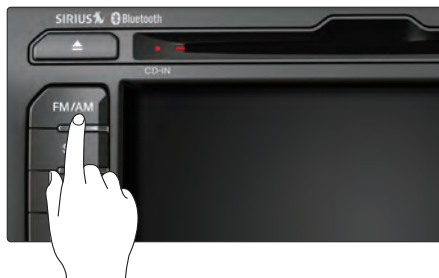


1. Press the **FM/AM** key on the control panel.
The FM/AM radio band of the most recent listened station will be displayed.
2. Press the **FM/AM** key to change the desired radio band. Each press will change the bands in the following order: FM1 → FM2 → AM → FM1
3. Select the desired broadcast frequency.
 [Selecting FM/AM broadcast frequency], page 2-5.



Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.
 "Radio"
 "(Radio) AM"
 "(Radio) FM"
 "FM <1 or 2>"
 "AM Frequency <530 to 1710>"
 "FM Frequency <87.5 to 107.9>"
 "AM Preset <1 to 6>"
 "FM <1 or 2> Preset <1 to 6>"

FM/AM screen and functions

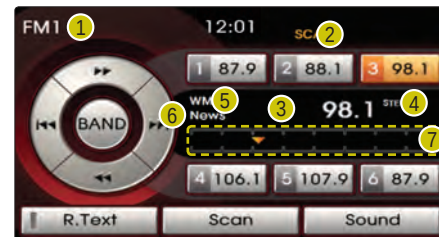

- ① Mode display : Displays the FM1/FM2/ AM modes.
- ② SEEK/SCAN/PRESET SCAN : If SEEK/SCAN / PRESET SCAN is operating, the switch is displayed.
- ③ Frequency : Displays the current playing frequency.

- 4 STEREO indicator : If the current frequency is a stereo broadcast, the indicator is displayed.
- 5 Program Service name: Displays the program service name if data is being broadcasted.
- 6 Program Type name: Displays the program type name if data is being broadcasted.
- 7 Frequency bar : Displays the position of the current frequency within the total frequency range.
- 8 Radio Text: Displays the radio text information if data is being broadcasted.

a  button : Changes the desired radio band. Each press will change the bands in the following order: FM1 → FM2 → FM1

b c  TUNE Up/Down button

- SHORT KEY(less than 0.8 second)
 - The frequency is increased or decreased by 1-step increments (FM : 0.2MHz, AM : 10kHz).
- LONG KEY(over 0.8 second)
 - The frequency is rapidly increased or decreased by 1-step increments (FM : 0.2MHz, AM : 10kHz) and stops operation upon KEY RELEASE.

d e  SEEK Up/Down button

- SHORT KEY(less than 0.8 second)
 - Automatically searches for the previous or next broadcast frequency and starts playing.
- LONG KEY(over 0.8 second)
 - Quickly moves through the frequencies while the button is pressed. Once released, it automatically searches for broadcasts which can be received.

f Preset buttons : The desired frequency can be preset and selected.

 [Storing FM/AM presets], page 2-4.

g  button : Turns the Radio Text information on and off.

INFORMATION

If the  is on OFF state, text will not be displayed even if there is text being transmitted from the broadcast station.

If the  is on ON state, the frequency bar will not be displayed. Even if the  is on ON state, text may not be displayed if text is not being received from the broadcast station.

h  button : Scans all frequencies or just the preset frequencies for 5 seconds each.

 [Scanning FM/AM broadcast frequency], page 2-4.

i  button : Adjusts the FAD/BAL, BASS/MID/TREB controls.

 [Audio sound setting], page 1-10.

Storing FM/AM presets

1. Select the desired frequency.
 [Selecting FM/AM broadcast frequency], page 2-8.
2. Press the preset button to store for over 0.8 second. The frequency will become stored along with a beep sound.

INFORMATION

Six preset frequencies each for FM1/FM2/AM modes can be stored using the above instructions.

Scanning FM/AM broadcast frequency

1. Press the  button.
- SCAN (less than 0.8 second) : Scans all frequencies and plays only frequencies with superior reception for 5 seconds each.

Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.
"Scan"

- PRESET SCAN (over 0.8 second): Scans the 6 frequencies stored as preset frequencies in the current band for 5 seconds each.

Voice Command

1. Press the  key on the steering wheel remote controller.
 2. After the beep sound, say a command.
"Preset Scan"
2. Press the  button again to continue listening to a frequency. The scan will be terminated and the current frequency will continue to be played.

INFORMATION

When scanning has completed an entire revolution, the scan function will be terminated automatically and the previous played frequency will be restored.

Selecting FM/AM broadcast frequency

There are 3 ways to select the broadcast frequency - (a) selecting through presets, (b) selecting through SEEK, (c) selecting through manual search.

(a) Selecting a frequency through presets

Press the preset button of the desired broadcast frequency.

INFORMATION

- Press the  or  keys for a short time on the steering wheel remote controller. The preset frequencies of the current band will be selected in order.
 - There are 6 different preset frequencies each for FM1, FM2, and AM modes.
-  [Storing FM/AM preset], page 2-4.

Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.
"Preset <1 to 6>"
"Preset Up"
"Preset Down"

(b) Selecting a Broadcast frequency through SEEK

Press the  or  keys on the control panel or the  or  buttons on FM1, FM2, and AM mode screens for less than 0.8 second. Once the SEEK function is operating (SEEK indicator blinking), the next or previous broadcast frequency with superior reception will be searched automatically.

INFORMATION

- Press the  or  keys on the control panel or the  or  keys on the steering wheel remote controller or the  or  buttons on FM1, FM2, and AM mode screens for more than 0.8 second to quickly move to the nearest desired frequency. Once

the button is released, the next frequency with superior reception will be searched automatically.

- While the SEEK function is operating, pressing the  or  keys on the control panel again will terminate SEEK operation and select the current frequency.

Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.
"Seek Up"
"Seek Down"

(c) Selecting a broadcast frequency through manual search

Press the  or  buttons or turn the  knob on the control panel in clockwise or counter-clockwise direction. Each click on the tune knob or the  or  buttons will increase or decrease the frequency by 1 step (FM: 0.2 MHz, AM: 10 kHz).

SIRIUS radio

Listening to the SIRIUS radio



1. Press the **SAT** key on the control panel.
The Sirius radio band screen of the most recent listened station will be displayed.
2. Press the **SAT** key to change the desired radio band. Each press will change the bands in the following order: SIRIUS1 → SIRIUS2 → SIRIUS3 → SIRIUS1
3. Select the desired broadcast channel.
 [Selecting SIRIUS broadcast channel], page 2-7.

Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.
"SIRIUS"
"SIRIUS <1 or 2 or 3>"
"SIRIUS Channel <0 to 223>"
"SIRIUS <1 or 2 or 3> Preset <1 to 6>"

SIRIUS screen and functions



- 1 Mode display: Displays the SIRIUS1/ SIRIUS2/SIRIUS 3 modes.
- 2 Channel number: Displays the current playing channel.
- 3 SCAN/PRESET SCAN indicator: If SCAN/ PRESET SCAN is operating, the switch is displayed.
- 4 Category name: Displays the category name.
- 5 Channel name: Displays the channel name.
- 6 Song/Program title: Display the song or program title.
- 7 Artist name: Displays the artist or other related information.

INFORMATION

The Song title display may be delayed in accordance to the reception quality of the Sirius broadcast.

(a)  button : Switches between channel mode and category mode.

 [Switching the SIRIUS modes], page 2-7.

(b) **(c)** ,  : Moves to the next or previous category, and automatically plays the first channel within the selected category.

(d) **(e)** ,  : Moves to the next or previous channel.

(f)  buttons : The desired channel can be preset and selected.

 [Storing SIRIUS presets], page 2-9.

(g)  button : Displays the Title, Artist, Composer, and other information for the current received channel if the information exists.

(h)  button: Selects the channel by directly inputting the channel number.

 [Selecting SIRIUS broadcast channel], page 2-7.

(i)  button: Displays the channel or category list.

 [Selecting SIRIUS broadcast channel], page 2-7.

(j)  button: Scans all frequencies or just the preset frequencies for 5 seconds each.  [Scanning SIRIUS broadcast channel], page 2-10.

(k)  button : Adjusts the FAD/BAL, BASS/MID/TREB controls.  [Audio sound setting], page 1-10.

Switching the SIRIUS modes (Channel / Category)

Each time the  button is pressed, the mode will switch between channel mode and category mode.

Category mode will begin operating when the orange light is turned ON.

Selecting SIRIUS broadcast channel

There are 5 ways to select a broadcast channel
- (a) selecting through presets, (b) selecting with channel Up/Down, (c) Selecting a channel through manual search, (d) selecting

through channel/category list, (e) selecting by directly inputting the channel number.

(a) Selecting a channel through presets

Press the preset button of the desired channel.

INFORMATION

- Press the  or  keys on the steering wheel remote controller for less than 0.8 second.

The preset channels of the current band will be selected in order.

- There are 6 preset channels each for SIRIUS1, SIRIUS2, and SIRIUS3.

 [Storing SIRIUS presets], page 2-9.

Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.
"Preset <1 to 6>"
"Preset Up"
"Preset Down"

(b) Selecting with Channel Up/Down

Press the  or  keys on the control panel or the  or  buttons on SIRIUS1, SIRIUS2, or SIRIUS3 mode screens for less than 0.8 second.

The previous or next channel will be selected.

INFORMATION

- If in Channel mode, the channel is selected from all channels. If in Category mode, the previous or next channel of each category is selected.
- Press the  or  keys on the control panel or the  or  keys on the steering wheel remote controller or the  or  buttons on SIRIUS1, SIRIUS2, and SIRIUS3 mode screens for more than 0.8 second to

quickly move to the nearest desired channel. Once the button is released, the current channel will be selected.

Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.
"Channel Up"
"Channel Down"

(c) Selecting a channel through manual search

1. Turn the  knob on the control panel in clockwise or counterclockwise direction. Each click on the  knob will display the channel information of the previous or next channel. The current playing channel will continue to be played.

INFORMATION

If in Channel mode, the channel is selected from all channels. If in Category mode, the first channel of each category is selected.


2. Press the  knob at the desired channel. The selected channel will begin playing.

(d) Selecting channel through channel/category list

1. Press the  button.
 - If in channel mode, the Channel list screen will be displayed.



- If in category mode, the Category list screen will be displayed. Select the desired category button to display the channel list screen for the corresponding category.

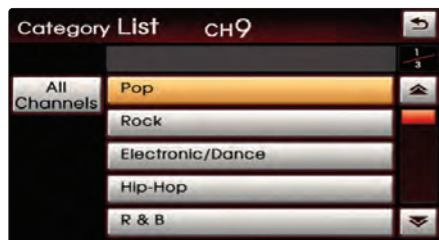


2. Select the desired channel button.

The previous screen will be restored and the selected channel will begin playing.

(e) Selecting channel by directly inputting the channel number

1. Press the **Search** button.

The Channel search screen will be displayed.

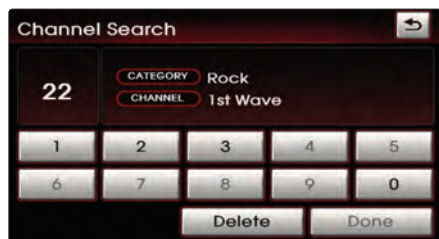

2. Input desired channel number, and press the **Done** button.

The previous screen will be restored and the selected channel will begin playing.

i INFORMATION

To prevent inputting a channel which exceeds the channel range, numbers which cannot be inputted are set to disabled state.



Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.
"Channel<0 to 223>"

Storing SIRIUS presets

1. Select the desired channel.

 [Selecting SIRIUS broadcast channel], page 2-7.

2. Press the preset button for over 0.8 second.

The frequency will be saved along with beep sound.

i INFORMATION

Six preset frequencies each for SIRIUS1/ SIRIUS2/ SIRIUS3 modes can be stored using the above instructions.

Scanning SIRIUS broadcast channel

1. Press the **Scan** button.

- **SCAN** (under 0.8 second): Scans all channels for 5 seconds each if in channel mode. If in category mode, scans all channels within the current category for 5 seconds each.

Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.
"Scan"

- **PRESET SCAN** (over 0.8 second): Scans the 6 preset channels within the current band for 5 seconds each.

Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.
"Preset Scan"

2. Press the **Scan** button again to continue playing the channel.

The scan will be terminated and the current channel will continue to play.

INFORMATION

- Within the Channel list screen, if the **Skip** button next to each channel name is pressed, the selected channel will be excluded from SCAN operation.



- When scanning has completed an entire revolution, the scan function is automatically terminated and the previous played channel will be restored.
- Channel 0 is the radio ID and contains information required for SIRIUS activation.

Browsing detailed information about the SIRIUS channel

1. Press the **Info.** button.

The detailed information (Title, Artist and Composer) for the current channel will be displayed.



2. Press the **OK** button.

The detailed information will be turned off.

Operating the CDP

About CDP

Precautions upon handling discs

- After using a disc, keep it in the original case to prevent it from becoming scratched, which may cause the CD to make popping sounds.
- Do not use heart-shaped discs, octagon-shaped discs, or any other abnormally shaped disc. Such discs may be the cause of malfunctions.
- Do not clean discs with chemical solutions such as record sprays, antistatic sprays, antistatic liquids, benzene, or thinners. Such materials may cause the surface of DISC to be unrecoverable.
- Do not expose the disc to direct sunlight for prolonged periods of time. Such exposure may lead to disc deformation.
- Dust, scratch, and other substances may cause popping sound while playing as well as sound deterioration.

- Never place paper on either side of the disc or write on disc surfaces. Sharp writing utensils and inks used in felt-tip pens may cause damage to disc surfaces
- Clean fingerprints and dust off the signal surface (coated side) of the disc with a soft cloth.
Only soft cloths should be used as there are no grooves for dust to get in as is the case with LPs.
- Copy-protected CDs such as S-type CDs may not function in the device.
- DATA CDs are not supported by the device. (However, such discs may operate abnormally.)

For safe and efficient operation

- Do not disassemble the CDP for repair purposes. Contact your place of purchase in the case of malfunction. (Complete service assistance will not be provided if the user disassembles the device.)
- Do not use water to clean the device. Exposure to water may cause damage to the device.
- Be cautious not to introduce foreign substances into the disc insert slot. Foreign substances may cause damage to the interior of the device.
- The device may fail to operate properly in extremely hot or cold temperatures. Discontinue the use of the device unless normal temperature is maintained. (The operational temperature range is: -10°C ~ 65°C).
- Steam can be condensed on the fiberoptic lens due to rain, wet conditions, or upon operating the heating system.
- Skipping may occur to the audio when driving on bumpy roads for prolonged periods of time or upon severe shock to the vehicle.
- Do not use chemical solvent to clean the device. Such solvents may cause damage to the surfaces of the device.
Always use a clean and dry cloth.

 WARNING !

Always give your full attention to driving. Avoid operating your system in such a way that you can be distracted driving vehicle operation.

Supported disc formats

- The disc types supported by this device are as shown below.

Disc Size
3-inch (7.6 cm)
5-inch (12.7cm)

Disc Type	Disc Media	Disc Format
CD	CD	CD-DA
	CD-R	MP3
	CD-RW	WMA
	Multisession-CD	DTS-CD
		CD-ROM
		CD-G
		CD-EXTRA
		CD-TEXT

Disc format	Audio format
CD	LPCM
MP3	MPEG1, Layer3
	MPEG2, Layer3
	MPEG2.5
WMA	Ver9

- CD-R or CD-RW DISC burned with a bulk CD without quality guarantees may not be recognized by the device.
- Inserting an abnormal disc may result in faulty operation or recognition.

Disc/Content format compatibility

- Ordinary disc compatibility

- This device has been designed/ manufactured to be compatible with software bearing the following logo marks.



Audio-CD



CD-R



CD-RW

- CD-R/RW discs (Audio CD and MP3 CD) created with CD-writing devices or personal computers may not properly function in the device. This may be caused by damaged recording method, contamination by dirt and other foreign substance on the disc surfaces or play lens, and various other reasons.
- Special formats or special features regarding software
 - CD-R/RW Compatibility.
 - This device operates as a CD-ROM including CD-R and CD-RW DISC written in CD Audio or MP3 CD Format.

- However, other contents may cause abnormal disc operation such noise.
- The writing of CD-R and CD-RW discs with this device is not supported.
- Although CD-R/RW discs burned as audio CDs which have not been finalized are not supported by the device, some information such as play time may be displayed.
- PC-created DISC compatibility.
- When recording a disc with a personal computer, even discs recorded in a "format compatible" with the formats described above may not operate on the device caused by software settings of the recording application.
- In such cases, contact the software developer.
- Additional information regarding compatibility can be found on the CD-R/ RW software disc box.
- DVD-R/RW are not supported by the device.

- Compressed audio compatibility

This device plays audio files compressed by MPEG-1 audio stream layer 3(MP3) using 32, 44.1 and 48kHz fixed bit rates. Incompatible files are not supported.

- Variable bit rate files may operate, but the play time information may not be properly displayed.
- Physical formats of CD : Model 1, Model 2 XA format 1.
- This device only supports tracks with file extension of ".MP3" or ".WMA".
- This device does not support multi-session discs.
- This device supports a maximum of 256 folders and maximum 512 files.
- Folders and files which exceed this limit will not be supported.
- There are various bit rates which can be encoded onto a MP3 file.
- his device has been designed to be compatible with various bit rates.
- Audio which has been encoded at 128kbps will sound similar to CD audio sound quality.

Although this device supports low bit rate MP3 tracks, such tracks may only provide low quality sound.

- For stable operation, the use of files in 95kbps ~ 192kbps bit rate range and 44.1kHz SAMPLING frequency is recommended.

Inserting/Ejecting Disc

Inserting a Disc

Insert the disc into the slot.

The disc will begin playing automatically after it has been inserted.

INFORMATION

If the operation mode had been Audio mode before inserting the disc, the device will convert to the DISC mode screen and begin playing.

If the operation mode had been Navigation mode, then Navigation mode screen will remain and the disc play status will be displayed through the Audio bar.

Ejecting a Disc

Press the  key.

The disc will immediately be stopped and ejected.

INFORMATION

- If the operation mode had been in Audio mode before ejecting the disc, the device will be converted back to Audio mode.

If the operation mode had been in Navigation mode, then Navigation mode screen will remain.

- If the disc is straddled on the slot without removing for approximately 10 seconds, the disc will be re-inserted automatically into the disc player.

In such a case, the disc will not begin playing automatically.

CD

Listening to CD music



1. Insert the CD or press the **MEDIA** key on the control panel if the CD is already inserted.

2. Select the desired track.

🔊 [Selecting the CD track], page 2-16.



Voice Command

1. Press the key on the steering wheel remote controller.


2. After the beep sound, say a command.

"DISC"

"CD"

"CD Track <1 to 665>"

CD screen and functions

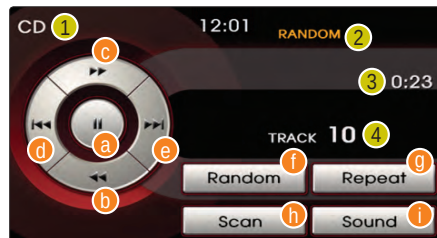

1 Mode display : Displays that the current mode is CD mode.

2 RANDOM/REPEAT/SCAN indicator : If RANDOM/REPEAT/SCAN is operating, the switch is displayed.

3 Play time : Displays the play time.

4 Track number : Displays the current playing track number.

a button : Plays or pauses the current track.

b c button : REW or FF

🔊 [Selecting the CD track], page 2-16.

d e button : Previous or next track.

🔊 [REW/FF CD track], page 2-16.

f button : Plays the tracks on the disc in random order.

🔊 [Setting Random function for CD music], page 2-16.

g button : Repeats the current playing track.

🔊 [Setting Repeat function for CD music], page 2-17.

h button : Scans all tracks on the disc for 10 seconds each.

🔊 [Scanning CD track], page 2-17.

i button : Adjusts the FAD/BAL, BASS/MID/TREB controls.

🔊 [Audio sound setting], page 1-10.

Selecting the CD track

There are 2 ways to select a CD Track - (a) selecting through Track Up/Down, (b) selecting through searching Track.

(a) Selecting through Track Up / Down

Press the  or  keys on the control panel or the  or  keys on the steering wheel remote controller or the  or  buttons on the screen for less than 0.8 second.

The next or previous track will begin playing.

INFORMATION

If the  key on the control panel or the  key on the steering wheel remote controller or the  button on the screen is pressed shortly while the track has played for more than 3 seconds, the start of the current track will begin playing.

If the track has been playing for less than 2 seconds, the start of the previous track will begin playing.



Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.
"Next Track"
"Previous Track"

(b) Selecting track through search

1. Turn the  knob on the control panel in clockwise or counter-clockwise direction. Each click on the  knob will display the information of the next or previous track. The current playing track will continue to be played.
2. Press the  knob at the desired track.
The searched track will begin playing.

REW/FF CD track

Press and hold the  or  keys on the control panel or steering wheel remote controller or the  or  buttons for over 0.8 second.

The track will play 20 times faster while holding the button and return to normal play when the button is released.

Setting Random function for CD music

Press the  button.

Each press will change the function in the following order: RANDOM → RANDOM OFF → RANDOM

- RANDOM : plays all tracks in the disc in random order.

Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.
"Random"
Say "Normal Play" in order to terminate the set Random function.

Setting Repeat function for CD music

Press the  button. Each press will change the function in the following order:
REPEAT → REPEAT OFF → REPEAT
* REPEAT : repeats the current playing track.

Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.
"Repeat Track"
Say "Normal Play" in order to terminate the set Repeat.

Scanning CD track

1. Press the  button. Each press will change the function in the following order :
SCAN → SCAN OFF → SCAN.
• SCAN : Scans all tracks in the disc for 10 seconds each.

Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.
"Scan"
Say "Normal Play" in order to terminate the set Scan function.
3. Press the  button again to continue listening to the track.
The scan will be terminated and the current track will continue to be played.

INFORMATION

When scanning has completed an entire revolution, the scan function is automatically terminated and the previous played track will be restored.

MP3

MP3 disc related information and precaution

- Information

- The MP3 file standards supported by the device are as follows.
- Acceptable standard: MPEG1 AUDIO LAYER 3
- Acceptable sampling frequency: 32, 44.1, 48 (KHz)
- Acceptable bit rate: 32, 40, 48, 56, 64, 80, 96, 112, 128, 160, 192, 224, 256, 320 (kbps)
- Recommended bit rate & reference sampling frequency: 96, 128, 192 kbps fixed bit rate / 44.1KHz
- ID3 tag
This device supports ID3v1.0, ID3v1.1, ID3v2.2, ID3v2.3, and ID3v2.4 ID3 tags.
- Supported media
- The MP3 media supported by the device are CD-ROM and USB.
- Supported media formats
- This device supports ISO9660 LEVEL1 and

LEVEL2. Detailed specification is as below.

- Maximum directory layers: 8 layers
- Maximum folder length: 64 Bytes, file name length: 64 Bytes
- Supported characters for folder name/ file name: Alphanumeric characters, Korean standard character set 2350 characters, Simplified Chinese 4888 characters
- Maximum number of folders which can be stored onto one disc: 256 folders (including ROOT directory)
- Maximum number of files which can be stored onto one disc: 512 files
- Precautions upon burning MP3 files
- The use of ISO 9660 LEVEL 2 JOLIET format is recommended when burning MP3 files. Burning in other formats may abnormally display the file names.
- It is possible to display up to 32 characters for file and folder names in case of UNICODE, and up to 64 characters in case of ASCII.

- Although the full length of the file name can be displayed by using the scroll function, the full length of folder names may not be displayed as the scroll function does not operate when displaying folder names.

- Precaution

Please use an MP3 bit rate which is less than 128 kbps.

The sound quality cannot be guaranteed for MP3s exceeding 128kbps.

Listening to MP3 music



1. Insert the MP3 disc or press the **MEDIA** key on the control panel if the MP3 disc is already inserted.

2. Select the desired file.

[Selecting the MP3 file], page 2-21.



Voice Command

1. Press the key on the steering wheel remote controller.


2. After the beep sound, say a command.

"DISC"

"CD"

"MP3"

MP3 screen and functions

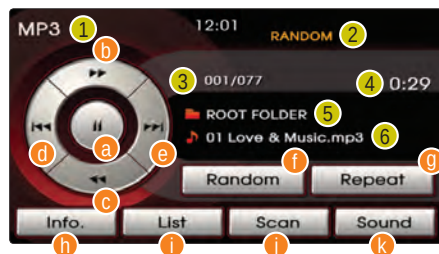

① Mode display: Displays that the current mode is MP3 disc mode. (MP3 files on DVDs are not supported.)

② REPEAT/RANDOM/SCAN indicator: If REPEAT/RANDOM/SCAN is operating, the switch is displayed.

③ Play file position : Current playing file / total files

④ Play time: Displays the play time.

⑤ Folder name: Displays the folder name.

⑥ File name: Displays the file name.

a button: Plays or pauses the current file.

b c button : REW or FF.

[REW/FF MP3 file], page 2-21.

d e button : Previous or next track. [Selecting the MP3 file], page 2-20.

f button : Plays all files on the disc or folder in random order.

[Setting Random function for MP3 file] , page 2-21.

g button : Repeats the current playing folder or file.

[Setting Repeat function for MP3 file], page 2-22.

h button : Displays or hides the detailed file information for the current playing file.

[Browsing detailed information about the MP3 file], page 2-21.

i button : Displays the MP3 folders and file lists for the disc.

[Selecting the MP3 file], page 2-20.

j button : Scans all files on the disc or folder for 10 seconds each.

[Scanning MP3 file], page 2-22.

K **Sound** button : Adjusts the FAD/BAL, BASS/MID/TREB controls.

 [Audio sound setting], page 1-10.

Selecting the MP3 file

There are 3 ways to select an MP3 file - (a) selecting through file up/down, (b) selecting through searching files, (c) selecting through MP3 list.

(a) Selecting through File Up / Down

Press the **SEEK** or **TRACK** keys on the control panel or the  or  keys on the steering wheel remote controller or the  or  buttons on the screen for less than 0.8 second.

The next or previous file will begin playing.

INFORMATION

If the **SEEK** key on the control panel or the  key on the steering wheel remote controller the  button on the screen is pressed shortly while the file has played for more than 3 seconds, the start of the current file will begin playing.

If the file has been playing for less than 2 seconds, the start of the previous file will begin playing.



Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.
"Next File"
"Previous File"
"Next Folder"
"Previous Folder"

(b) Selecting through search

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click on the **TUNE** knob will display the information of the next or previous file. The current playing file will continue to be played.



INFORMATION

If the operation of the **TUNE** knob is too rapid, there may be a delay in displaying the file information.

2. Press the **TUNE** knob at the desired file. The searched file will begin playing.


(c) Selecting through MP3 List

1. Press the **List** button.
The file list of the folder for the current playing file will be displayed.



INFORMATION

- If many songs and folders are recorded onto a DISC, file loading time may be longer and cause the play list to be improperly displayed or song search through TUNE operation to operate improperly.
In such cases, wait until file loading is complete and try again.
- Within the MP3 list screen, if the **Now playing** button is pressed while searching for files within a folder or a page, the current playing file list will become displayed.

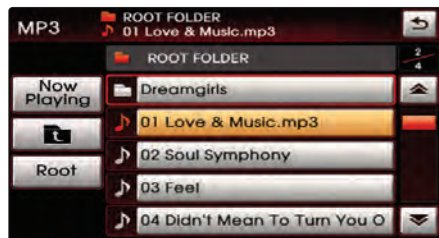

2. Press the desired menu to return to the main screen and play the selected file.


REW/FF MP3 file

Press and hold the **SEEK** or **TRACK** keys on the control panel or the **▲** or **▼** keys on the steering wheel remote controller or the **◀** or **▶** buttons for over 0.8 second. The file will play 20 times faster while holding the button and return to normal play when the button is released.

Browsing detailed information about the MP3 file

1. Press the **Info.** button.

The detailed information (Title, Album, Artist) for the current playing MP3 will be displayed.

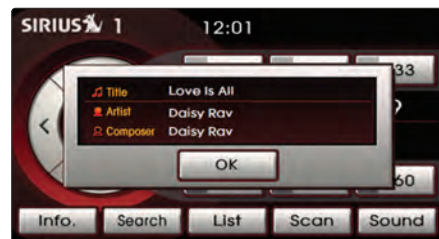

2. Press the **OK** button.

The detailed information will be turned off.

Setting Random function for MP3 file

Press the **Random** button.

- **RANDOM** (less than 0.8 second) : Plays all files in the disc in random order
- **FOLDER RANDOM** (over 0.8 second) : Plays the files in the current folder in random order.

Voice Command

1. Press the **Voice** key on the steering wheel remote controller.
2. After the beep sound, say a command.
"Random"
"Random Folder"
Say "Normal Play" in order to terminate the set Random function.
3. Press the **Random** button again to continue listening to the current file.
The random selection will be terminated and the current file will continue to play.

Setting Repeat function for MP3 file

1. Press the  button.
 - REPEAT (less than 0.8 second) : Repeats the current playing file
 - FOLDER REPEAT (over 0.8 second) : Repeats the files in the current folder



Voice Command

1. Press the  key on the steering wheel remote controller.
 2. After the beep sound, say a command.
 - "Repeat File"
 - "Repeat Folder"Say "Normal Play" in order to terminate the set Repeat function.
2. Press the  button again to stop repeating the current file.

The repeat selection will be terminated and the current file will continue to play once until the next file starts to play.

Scanning MP3 file

1. Press the  button.
 - SCAN (less than 0.8 second) : Scans all files in the disc and plays for 10 seconds each.
 - FOLDER SCAN (over 0.8 second) : Scans all files in the current folder for 10 seconds each.



Voice Command

1. Press the  key on the steering wheel remote controller.
 2. After the beep sound, say a command.
 - "Scan"
 - "Folder Scan"Say "Normal Play" in order to terminate the set Scan function.
2. Press the  button again to continue listening to the file.

The scan selection will be terminated and the current file will continue to play.



INFORMATION

When scanning has completed an entire revolution, the scan function is automatically terminated and the previous played file will be restored.

Operating the external devices

iPod®

iPod® is a registered trademark of Apple Inc.

Connecting iPod devices



Connect the iPod device as shown in the picture.

The Kia iPod Power cable is needed in order to operate iPod with the audio buttons on the audio system. The USB cable provided by Apple may cause malfunction and should not be used for Kia vehicles.

The Kia iPod Power cable maybe purchased through your Kia dealership.

- Unsupported iPod devices : iPod generations before iPod 3G, iPod Shuffle, and iPad.

! CAUTION!

Some functions may not operate properly depending on the firmware version in some iPod or iPhone devices.

i INFORMATION

In order to prevent such malfunction, check the following before connecting your iPod or iPhone device with the Kia iPod Cable.

- If the battery has been completely discharged, charge the device for at least 10 minutes before connecting.
- Turn on the device before connecting.
- If the device is set to lock, release the lock before connecting.
- For iPhones, audio will not play if the audio system and BT are paired. Disconnect the pairing before connecting.

When there are no songs in the iPod or iPhone or if there is no response from the device after connecting with the Kia Cable, a “No Media Connected” pop-up message will be displayed for 5 seconds and the previous mode will automatically be restored.

In such cases, disconnect the iPod or iPhone and try connecting again.

If the message continues even after reconnecting the iPod, check to see if there are any problems with the iPod device.

! CAUTION!

- If a playing iPod is connected to the audio system, a high-pitched tone may occur for approximately 1-2 seconds.
- Please turn the iPod device to pause/stop prior to connecting it to the vehicle.
- ※ Upon connecting or disconnecting the detachable iPod cable, you must connect or disconnect both the USB/AUX terminals.
- ※ The iPod exclusive cable must be connected to both the USB/AUX terminals for iPod charging and operations to be supported.

Listening to music from iPod



1. Connect the iPod or press the **MEDIA** key on the control panel if the iPod is already connected.

i INFORMATION

Even if the iPod is connected, the 'No Media Connected' message may be displayed if an error has occurred. In such a case, reconnect the iPod.

Voice Command

1. Press the key on the steering wheel remote controller.
2. After the beep sound, say a command. "iPod"

iPod screen and functions



- 1 Mode display: displays that the current mode is iPod mode.
 - 2 RANDOM/REPEAT indicator: if RANDOM/REPEAT is operating, the switch is displayed.
 - 3 Play file position: current playing file / total files
 - 4 Play time: displays the play time.
 - 5 Category name: displays the category name of the playing file.
 - 6 Title name: displays the title name of the playing file.
- a** button: plays or pauses the current file.

- b** **c** button : REW or FF.
 [REW/FF iPod song], page 2-26.
- d** **e** button : previous or next file.
 [Selecting an iPod song], page 2-25.
- f** **Random** button : plays all songs in the current playing list in random order or randomly in album unit.
 [Setting random function for iPod song], page 2-26.
- g** **Repeat** buttons : repeats the current playing song.
 [Setting repeat function for iPod song], page 2-27.
- h** **Info.** button : converts to the search menu screen.
 [Viewing detailed information for iPod song], page 2-27.
- i** **Menu** button : converts to the search menu screen.
 [Selecting an iPod song], page 2-25.
- j** **Sound** button : adjusts the FAD/BAL, BASS/MID/TREB controls.
 [Audio Sound setting], page 1-10.

Selecting an iPod song

There are 3 ways to select songs from the iPod device - (a) selecting song through Up/Down, (b) selecting song through sequential search, (c) selecting song through menu.

(a) Selecting song through Up / Down

Press the **SEEK** or **TRACK** keys on the control panel or the **▲** or **▼** keys on the steering wheel remote controller or the **⏮** or **⏭** buttons on the screen for less than 0.8 second. The next or previous song will begin playing.

i INFORMATION

If the **TRACK** key the control panel or the **SEEK** key on the steering wheel remote controller or the **⏮** button on the screen is pressed shortly while the song is playing for more than 3 seconds, the start of the current song will begin playing. If the song has been playing for less than 2 seconds, the start of the previous song will begin playing.

Voice Command

1. Press the **VOICE** key on the steering wheel remote controller.
2. After the beep sound, say a command.
"Next Song"
"Previous Song"

(b) Selecting song through search

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click on the **TUNE** knob will display the information of the next or previous song. The current playing song will continue to be played.

i INFORMATION

If the operation of the **TUNE** knob is too rapid, there may be a delay in displaying the song information.

2. Press the **TUNE** knob at the desired song. The searched song will begin playing.

(c) Selecting song through Menu

1. Press the **Menu** button.
The iPod menu screen will be displayed.



2. Press the button for the desired search method.

i INFORMATION

If the search mode is accessed while playing a song, the most recent searched step will be displayed. The search steps upon initial connection are listed below.

	1 Step	2 Step	3 Step	4 Step
Playlist	Playlist	Song		
Genre	Genre	Artist	Album	Song
Artist	Artist	Album	Song	
Composer	composer	Album	Song	
Album	Album	Song		
Audiobooks	Song			
Songs	Song			
Podcasts	Program	Episode		



3. Press the desired song button to return to the main screen and play the selected song.

REW/FF iPod song

Press and hold the **SEEK** or **TRACK** keys on the control panel or the **^** or **v** keys on the steering wheel remote controller or the **⏮** or **⏭** buttons for over 0.8 second. The song will play 20 times faster while holding the button and return to normal play when the button is released.

Setting Random function for iPod song

Press the **Random** button. Each press will change the function in the following order : Random → Album Random → Random Off → Random ...

- Album Random : plays the songs in the current play list randomly in album units. However, songs within the same album will be played sequentially.
e.g.) Album1 (Music1→Music2→Music3→...→Music10)→Album5 (Music→Music2)→Album4 (Music1→Music2→Music3) ...
- Random : plays all files in the current play list (All Songs, certain albums, or user designated iPod Playlists) randomly regardless of album.
e.g.) Music1→Music9→Music5→Music13 ...

 Voice Command

1. Press the **Voice Command** key on the steering wheel remote controller.
2. After the beep sound, say a command.
"Random"
"Random Album"
Say "Normal Play" in order to terminate the set Random.

Setting Repeat function for iPod song

Press the **Repeat** button. Each press will change the function in the following order :

Repeat → Repeat Off → Repeat ...

- Repeat : repeats the current playing song.




Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.
"Repeat Song"
Say "Normal Play" in order to terminate the set Repeat function.

Viewing detailed information for iPod song

1. Press the **Info.** button.

The detailed information (Title, Album and Artist) for the current channel will be displayed.

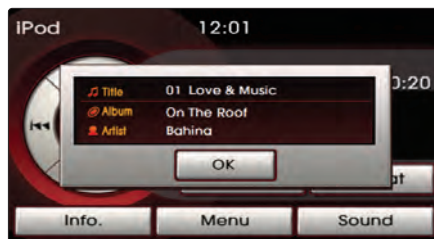

2. Press the **OK** button.

The detailed information will be turned off.

USB MP3

USB MP3 related information and precaution

- Information

- The MP3 file standards supported by the device are as follows.
- Acceptable standard: MPEG1 AUDIO LAYER 3
- Acceptable sampling frequency: 32, 44.1, 48 (kHz)

- Acceptable bit rate : 32, 40, 48, 56, 64, 80, 96, 112, 128, 160, 192, 224, 256, 320 (kbps)
- Recommended bit rate & reference sampling frequency: 96, 128, 192 kbps fixed bit rate /44.1kHz

- ID3 tag

This device supports ID3v1.0, ID3v1.1, ID3v2.2, ID3v2.3, and ID3v2.4 ID3 tags.

- Supported media

The MP3 media supported by the device are CD-ROM and USB.

- Supported media formats

This device supports ISO9660 LEVEL1 and LEVEL2. Detailed specification is as below.

- Maximum directory layers: 20 layers
- Maximum length of folder name/file name: 250Bytes
- Supported characters for folder name/ file name: Alphanumeric characters, Korean standard character set 2350 characters, Simplified Chinese 4888 characters
- Maximum number of folders which can be stored onto one USB: 2000 folders (including ROOT directory)
- Maximum number of files which can be stored onto one USB: 6000 files
- Precautions upon formatting USB & downloading MP3 files
- The device only supports FAT type USB file system. The device will not play USB media content if the USB is NTFS type.

- Precaution

Please use an MP3 bit rate which is less than 192Kbps and a fixed bit rate. The sound quality cannot be guaranteed for MP3s exceeding 192Kbps and operation of specific functions (limited to FF/REW functions) may be abnormal with variable bit rates.

Precautions upon handling USB

- When using the external USB device, make sure to keep the device disconnected. Connect the device only after turning on the vehicle ignition. The USB device may be damaged if the USB device already connected when the ignition is turned on. (USB device is not an electronic automotive component)
- The external USB device may not operate if the USB device already connected when vehicle ignition is turned on or off.
- The device will not operate when playing a format which is not MP3 or WMA file formats.
 1. Only MP3 files with compression rates between 8Kbps~320Kbps are supported.
 2. Only WMA files with compression rates between 8Kbps~320Kbps are supported.
- Be cautious of static electricity when connecting/disconnecting the external USB device.
- Encoded MP3 Players will not be recognized when connected as the external device.

- When connecting an external USB device, the device may not be properly recognize the USB when the USB is in some states.
- When formatting the external USB device, the device may not be properly recognize a Byte/Sector selection other than 512Byte or 2048Byte.
- The device will only recognize USB devices formatted in FAT 12/16/32.
- Some USB devices may not operate properly because of compatibility issues. Verify that the external device is supported by the device before starting use.
- Avoid contact between the USB connector with bodily parts and foreign substances.
- Repeatedly connecting/disconnecting the USB in a short period of time may cause damage to the device.
- When disconnecting the USB, an abnormal sound may occur occasionally.
- Abruptly disconnecting the external USB device while the USB is operating may cause the device to be damaged or function abnormally.

Make sure to disconnect the USB device only after the audio power is turned off or when the audio is operating in a different mode.

- The amount of time required to recognize the external USB device may differ depending on the type, size, or file formats stored on the USB. Such differences in the required time are not indications of malfunction. Please wait the period of time required to recognize the device.
- The device supports only USB devices used to play music files.
- Do not use the USB I/F to charge batteries or USB accessories which generate heat. Such acts may lead to deteriorated performance or damage to the device.
- The device may not recognize the USB device if separately purchased USB hubs and extension cables are being used. Connect the USB directly to the multimedia terminal of the vehicle.
- In the case of high capacity USB devices, there are instances where the logical drives are partitioned for user convenience.

In this case, only the USB music in the top-level logical drive will be possible to play.

When using partitioned drives, save the songs desired to play on the device only in the top-level logical drive.

In addition, certain USB devices are configured with a separate drive used to install application programs and songs from such drives may not be possible to play for the reasons as described above.

- The device may not support normal operation if MP3 Players, cellular phones, digital cameras, or other electronic devices (USB devices not recognized as portable disk drives) are connected to the device.
- The device may not support normal operation when using a USB memory type besides the Metal Cover Type USB Memory.
- The device may not support normal operation when using formats such as HDD Type, CF, or SD Memory.
- The device will not support files locked by DRM (Digital Rights Management).


- The device may not support normal operation if the proper connection with the USB memory fails due to vibrations caused by the vehicle. (i-stick type, etc.)
- Please avoid using USB memory products which can be used as key chains or cellular phone accessories as they could cause damage to the USB jack. Please make certain only to use plug type connector products as shown below.

Plug Type Connector



Connecting the USB devices

Connect the USB as shown in the picture.

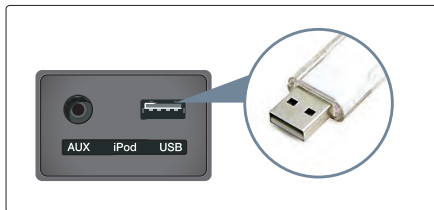

Listening to USB music



1. Connect a USB or press the **MEDIA** key on the control panel if the USB is already connected.

2. Select the desired file.

📍 [Selecting the MP3 file], page 2-20.

Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.
"USB"

INFORMATION

The USB screen and operation method is the same with MP3 mode. Please refer to the MP3 mode section for more information.

USB IMAGE Mode

Starting USB IMAGE Mode

1. The USB mode will automatically start when the USB is inserted. When in a different mode, repeatedly press the **MEDIA** key to convert to USB mode. (Each press will change in order of AUX→DISC→USB)



2. The image will be displayed on the screen.

i INFORMATION

Press the **Music** button on the bottom left side to enter either mode. (Supported only when compatible files exist within the USB)

USB IMAGE mode menu screen configuration



- ① Mode display : display that the current mode is <USB Image> mode.
- ② Folder name : displays the name of the folder where photo files are located.
- ③ File name : displays the file name of the current photo.
- ④ File index : displays the number of Image files within the USB (current file / all files)
- ⑤ Slide Show Interval : displays intervals of 5, 10, and 20 seconds.

- a button : displays the previous photo. Slide Show View : displays photos in intervals of 5, 10, and 20 seconds.
- b Slide Show View : displays photos in intervals of 5, 10 and 20 seconds.
- c button : displays the next photo. USB music (MP3) Mode
- d **Save** button : upon turning off power, saves the current image as the frame screen image.
- e **Timer** button : allows changes to slide show interval.
- f **Music** button : converts to <USB Music> mode.
- g **List** button : displays the <Image List> screen.
- h **Hide** button : hides the button display.

Operating USB IMAGE Mode

(a) Moving to next IMAGE

1. Press the screen.
2. Within the Image screen, press the  or  button to flip through each file.

(b) Displaying USB IMAGE Slideshow Interval

1. Repeatedly press the  button at the bottom to change the slideshow interval (converts in time intervals of 5 seconds → 10 seconds → 20 seconds → 5 seconds).

(c) Registering Frame

1. Press the  button at the bottom of the <Image> screen. The currently displayed image will be registered as the frame.

INFORMATION

For details on setting up the frame, refer to the frame setup page within Screen setup.

Restrictions while driving-Image Play related buttons cannot be used while the vehicle is in motion.

There are five buttons such as <  /  /  /  /  >.

AUX

Connecting AUX

Connect the external Audio player as shown in the picture.



i INFORMATION

Connect only by using AUX terminals.

Playing AUX




Connect an AUX or press the **MEDIA** key on the control panel if the AUX is already connected.

Voice Command

1. Press the  key on the steering wheel remote controller.
2. After the beep sound, say a command.
"Line In"


AUX screen

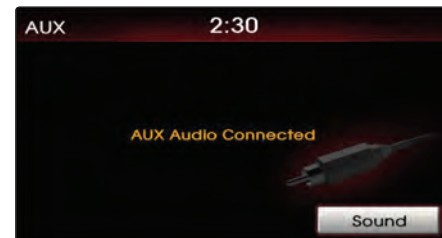

Audio AUX screen

MEMO

 PART 3
NAVIGATION SYSTEM



PART 3 NAVIGATION SYSTEM

Highlighting navigation functions

Improved functions facilitate intuitive and convenient driving by providing traffic flow information via Turn-List and Highway exit guidance.



If there is no previously set route when the navigation is turned on, the list provides short cut searches of recent destinations, Home, and Favorite places.



By registering quick menus, users can easily select features they frequently use while in the map screen.




Multiple Preliminary Guidance: Displays the direction and remaining distance for two consecutive maneuvers.



The map preview feature is supported in the destination list screen.



The navigation guidance volume can be easily adjusted on the map screen.

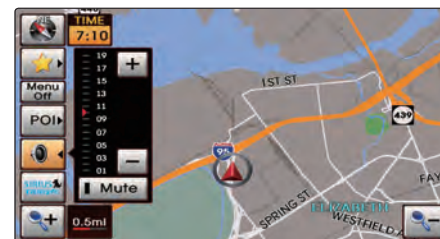

Understanding the navigation system

GPS signal reception

- As the GPS satellite frequency is received /transmitted in straight lines, reception may not work if devices are placed on or near the GPS antenna or when traveling through the following locations.



• Basement parking structures



• Underneath an overpass



• Roads within forested areas



• Areas near high rise buildings



• Roads within canyons

- When there is no satellite reception (signal transmission is controlled by the satellite control center in the United States and may not transmit when under repair, modification, etc).
- When a digital cellular phone (1.5GHz) is placed near the GPS antenna.

- This system uses GPS information, various sensors, road map data, and other related information to display the current position. Errors may occur if the satellite is transmitting inaccurate signals or only two or less satellite signals can be received. Errors which occur in such conditions cannot be corrected.

GPS signal reception Viewing GPS signal

The state of GPS signal reception is displayed as shown below.

-  (active) :
GPS reception is satisfactory.
-  (inactive) :
GPS reception is unsatisfactory.
 [System information and Update], page 3-54.

INFORMATION

- GPS (Global Position System) : GPS is a system developed and operated by the United States which determines the current location of the user (longitude, latitude, etc.) by generally using 4 or more satellites.

Vehicle position display

- Reflections from buildings or tall objects may cause the current position shown on the navigation to differ from the actual vehicle position.
- If multipass errors occur due to reflections from buildings or related causes, the current position mark on the navigation may differ from the actual position of the vehicle.
- The position of the vehicle on the navigation may be different from the actual position if the vehicle is under the following conditions. If such differences occur, driving for a short period of time will automatically correct the position of the vehicle through map matching or GPS information (several minutes may be necessary in certain cases).
 - When driving on a Y-shaped road with a narrow angle, the current position may be displayed in the opposite direction.
 - If the vehicle is loaded onto a ferry or a car transport vehicle, the current position mark may be stalled on the last position prior to loading.
 - When driving on a spiral-shaped road.
 - When driving in mountain regions with sharp turns or sudden brakes.
 - When entering a road after having been in an underground parking structure, building parking structure, or turntable with many rotations.
 - When the tires have recently been replaced (Especially upon use of spare or studless tires)
 - If the battery terminal is removed.
 - When driving in city streets, the current position may be displayed on the opposite side or on an off-road position.
 - When changing the zoom level from the maximum zoom in level to a different zoom level, the current position mark may be displayed on a different road.
 - When driving in heavy traffic with frequent go · stops in traffic or intersections.
 - When driving under slippery conditions, such as heavy sand, snow, etc.
 - When driving with the tire chain in place.
 - When using a tire with an incorrect size specification.
 - When the tire pressure for the 4 tires are different.
 - When the replacement tire is a worn or used tire (Especially studless tires having passed a 2nd seasons, etc.)
 - When driving near high-rise buildings
 - If a roof carrier has been installed
 - When driving under high speeds or having calculated a long-distance route.

Route Guidance

- Incorrect route guidance may occur due to the following conditions.
 - Guidance to go straight may be given while driving on a straight road.
 - Guidance may not be given even when having turned at an intersection.
 - There are certain intersections in which guidance may not occur.
 - A route guidance signaling for a U-Turn in a No U-Turn location may occur.
 - A route guidance signaling entrance into a no enter zone may occur (No enter zone, road under construction, etc.).
 - Guidance may be given to a position removed from the actual destination if roads to reach the actual destination do not exist or are too narrow.
- Faulty voice guidance may be given if the vehicle breaks from the designated route (ex: if a turn is made at an intersection while the navigation provided guidance to go straight).
 - Map Data may be missing or incorrect causing route guidance to not be given.

Route Re-calculation

- The following phenomena may occur after conducting route recalculation.
- Guidance may be given to a position differing from the current position when turning at an intersection.
- Route Recalculation may take a longer period of time when driving under high speeds.
- A route guidance signaling for a U-Turn in a No U-Turn location may occur.
- A route guidance signaling entrance into a no enter zone may occur (No enter zone, road under construction, etc).
- Guidance may be given to a position removed from the actual destination if roads to reach the actual destination do not exist or are too narrow.
- Faulty voice guidance may be given if the vehicle breaks from the designated route (ex: if a turn is made at an intersection while the navigation provided guidance to go straight)

Starting navigation system



Press the Navigation mode key (**MAP VOICE**, **DEST**, **ROUTE**, **SETUP**). The Caution screen will always be displayed when first entering into Navigation mode. Read the contents of the caution screen carefully and press the **Agree** button.

Map screen and functions



Press the **MAP VOICE** key on the control panel to display the map of current position and the neighboring area.

i INFORMATION

If pressed while in route and in the map screen, a voice command is provided.

Previous destination




When first entering into Navigation Map screen, if there is no previously set route, the Previous destinations, Home, or Favorite places can be selected to display a list where they can be directly searched.

i INFORMATION

The list menu will automatically close when not used for 10 seconds.

If there is a previously set route, displays the route guidance screen.

Current position map screen (without route)

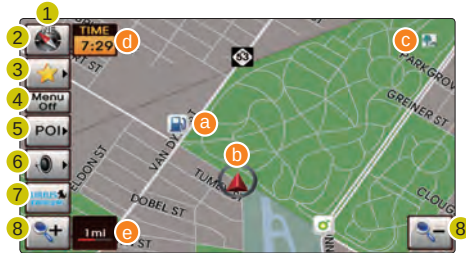


- 1 North Up / Heading Up switch : switches the map orientation between North up and heading up. During heading up mode, The top of the compass displays the direction in which the vehicle is currently facing. (Example: NW  , NE  , S )
 [Switching map mode], page 3-10.
- 2 GPS signal state indicator : displays the state of GPS signal reception.
 [viewing GPS signal state], page 3-3.
- 3 Quick button : opens shortcuts to go directly to your favorite menus. You can change shortcuts by pressing Add or Edit menu button.


- 4 Menu on/off button: Hides or displays the POI, Speaker, and XM Data buttons.
- 5 POI button : displays, hides and edits the POI icon on the map.
 [Displaying / Hiding POI icons on the map], page 3-13.
- 6 Speaker button : sets the desired volume level by using the ▲ or ▼ buttons and mutes the voice commands and voice guidance.
- 7 SIRIUS data button : provides users with traffic, stock, sports, and weather information.
- 8 Map scale button : increases or decreases the map scale.
 [Changing the map scale], page 3-11.

- a POI icons : POI icons are displayed on the map when the map scale level is set to under 0.5 mi (800m).
 [Appendix : POI icons], page 6-5.
- b Current vehicle position icon : displays the current position of the vehicle.
- c Landmark icons : landmark icons are displayed on the map when the map scale level is set to under 300ft (100m depending on map data)
 [Appendix : landmark icons], page 6-5.
- d Clock : displays the current time received from the GPS.
- e Map scale level indicator : displays the current map scale.
 [Changing the map scale], page 3-11.

Current position map screen
(When setting route)

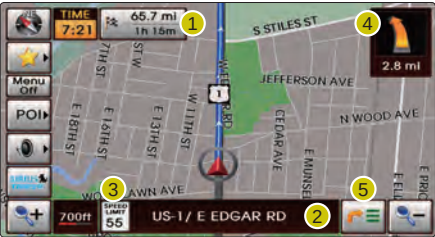

1 ETA button : provides guidance on the remaining distance, travel time or time of arrival information. You can set the distance and time display option in **SETUP>Navigation**. Press the ETA button to view more detailed information.

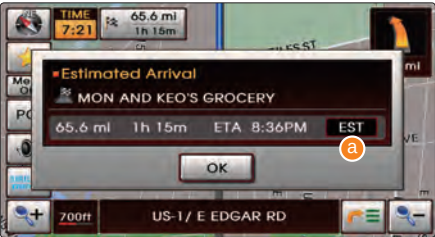

a Time zone information

- 2 The "current road name" is displayed when driving on a road set with a route. (However, it is not displayed in Off Road state.)
- 3 Speed limit information: Displays the speed limit for the current road when available. (This feature may not be supported in some road types.)
- 4 Preliminary Guidance: Provides direction information for short and long distances. It is not displayed if there is no route.



- b At the rotary, the number beside the arrow provides guidance on which rotary exit you have to take.
- 5 Changing guidance mode while driving : When setting a route, the guidance mode can be changed sequentially through the button displayed at the bottom right side.
[Changing guidance mode while driving]. Page 3-9.

i INFORMATION

A different button is displayed depending on the current guidance mode and driving conditions.

Changing guidance mode while driving


When setting a route, the guidance mode can be changed sequentially through the button displayed at the bottom right side.

A different button is displayed depending on the current guidance mode and driving conditions.

i INFORMATION

Generally, the mode will change in the order of
 Symbol guidance mode → Turn-List Guidance mode → Highway exit guidance mode (only while driving on a highway) → Symbol guidance mode.

Button Type	
	Press this button to switch to Turn-List Guidance mode.
	Press this button to switch to symbol guidance mode.
	When driving on a highway, press this button to switch to Highway exit guidance mode.
	When passing an Intersection or Junction, press this button to re-display "Intersection zoom mode" or "Highway junction mode"

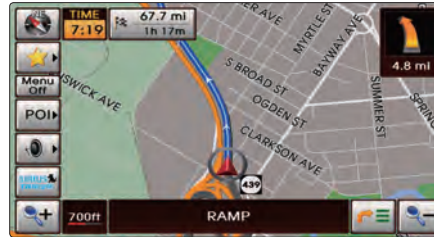

• Symbol guidance mode



• Turn-List guidance mode



• Highway exit guidance mode



• Intersection zoom mode : this route guidance screen is automatically displayed during guidance at an intersection.



• Highway junction mode : this route guidance screen is automatically displayed during guidance at highway junctions.

Scrolling map

Press the map area on the map screen.

The selected point will be centered on the screen and the scroll mark will be displayed.

Information about the marked point and straight line distance from the current position will be displayed at the top of the screen.




i INFORMATION

If a map area on the map screen is pressed, the map will continuously scroll in the corresponding direction until the pressing is released.


Switching map mode (North Up / Heading Up)

Each time the compass button is pressed, the screen will switch in the order shown below.

Heading Up → North Up → Heading Up ...

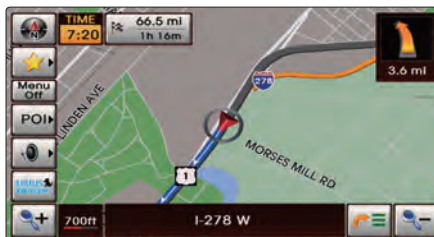

- North Up : displays the map always facing the North direction regardless of the direction which the vehicle is traveling.

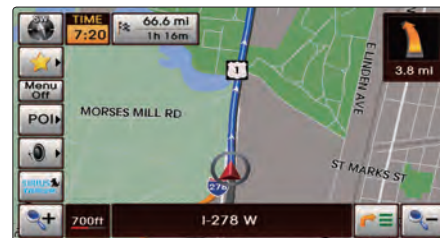

- Heading Up : displays the map always facing the direction which the vehicle is traveling.

i INFORMATION

 
All map screens (map screen after setting destination & whole route display screen) except the current position screen will always be displayed in North Up mode.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"North Up"
"Heading Up"

Changing the map scale

Press the  or  button. The map scale will be increased or decreased by one level.



INFORMATION

Each time the  or  button is pressed, the scale bar will be displayed.

The scale can be changed by directly pressing the scale level on the scale bar.

- Press the  or  button for over 0.8 second. The scale will continuously change.
- If the scale range limit is reached, the  or  button will be disabled.
- The map scale range is between 1 and 14:
10,240,000 ~ 1 : 5,000.

Level	Actual distance	
	mi / ft	km / m
1	150 ft	50 m
2	300 ft	100 m
3	700 ft	200 m
4	0.25 mi	400 m
5	0.5 mi	800 m
6	1 mi	1.6 km
7	2 mi	3.2 km
8	4 mi	6.4 km
9	8 mi	12 km
10	16 mi	25 km
11	32 mi	50 km
12	64 mi	100 km
13	130 mi	200 km
14	250 mi	400 km

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
 - "Zoom In"
 - "Zoom Out"
 - "Zoom Maximum"
 - "Zoom Minimum"
 - "Zoom level <1 to 14>"
 - "Zoom <actual distance>"
 - " (ex. Zoom 700ft)"

Quick Menu Functions

Selecting Quick menus



Press the "★" button.


The quick button opens shortcuts to go directly to your favorite menus

i INFORMATION

The quick menus are set to **Cancel Route**, **Detour**, **Address**, **POI search**, **Home** (5 menus) by default.

Press the **Edit Menu** button to change this setting.

Editing Quick menus

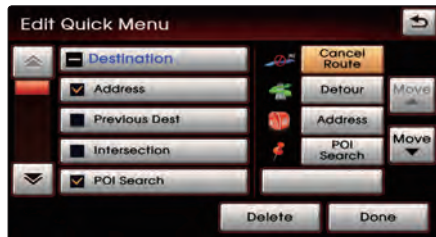

Press either the Edit Menu button or the Add button.

Within the Edit Quick Menu, the menus to register can be selected on the left side and the selected menus can be moved/deleted/saved on the right side.

- Scroll bar : Press the scroll bar to display hidden menus.
- **+/-** button : The Destination, Route, and Setup menus are opened and closed.
- **✓** : Menus that have been checked are automatically selected as quick menus. The quick menus that have been changed can be checked on the right side.

- **Delete** button : Among the quick menus on the right side, selecting one and pressing the delete button will delete the selected menu from the quick menu list.
- **Move** button : Selecting one of the quick menus on the right and pressing the move button will change the order of the selected button.
- **Done** button : Once quick menu editing is complete, press the Done button to save the settings and return to the map screen.

Displaying / Hiding POI icons on the map

Displaying/Hiding Q.POI icons



1. Press the **POI** buttons to display or hide. POI icons with a check box are displayed on the map.
To turn off all POI icons displayed on the map, press the **All Off** button.

i INFORMATION

- If there are no POI icons being displayed, the **All Off** button will be disabled.
- POI icons are displayed when the scale is under 0.5 mi (800m).

i INFORMATION

The Q.POI icons are set to - Gas Station, - Parking, - Hotel, - Golf Course, - Bank, - Fast Food (6 icons) by default. This setting can be changed by either pressing the Edit Q.POI button or through the **SETUP** > **Navigation** menu.


[Setting Q.POI icons], page 3-14.

Displaying other POIs other than Q.POI

2. Press the **Find Others** button.



3. Press the desired main category button.

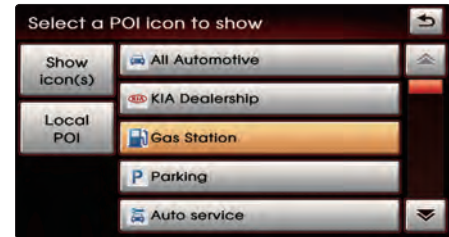

4. Select the desired sub category menu to display or hide (Multiple selections are possible).
Press the selected menu again to cancel the selection.
5. If the **Show icon(s)** button is pressed, the selected menus will be displayed or hidden on the map screen.

Voice Command

1. Press the key on the steering remote control.
2. After the beep sound, say a command.
"Show <POI name>" (ex. Show ATM)
"Hide <POI name>" (ex. Hide ATM)
"Hide All"

Setting Q.POI icons

This menu allows you to change some or all of the 6 Q.POI categories to other POI categories that you prefer.

INFORMATION


Q.POI stands for Quick POI and refers to the function which turns POI icon display on or off on the map.

1. Press the  button.




2. Select the menu you wish to change into a different POI. The POI category screen is displayed.

3. Select the category that includes the desired POI menu.

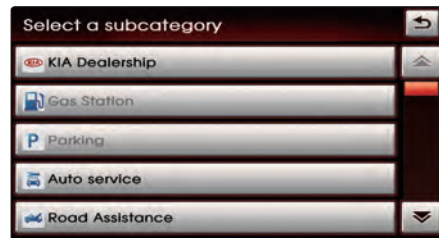


4. Select the desired sub category.

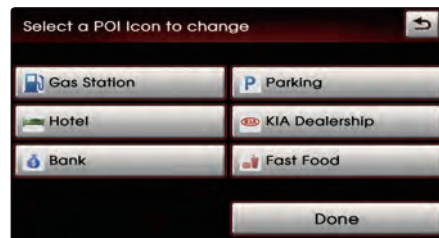

5. The newly selected POI menu is displayed on the screen.
6. To continue changing to a different category, select the POI category you wish to change and repeat the process.

7. Press the  button to save changes.


Making a call to POI

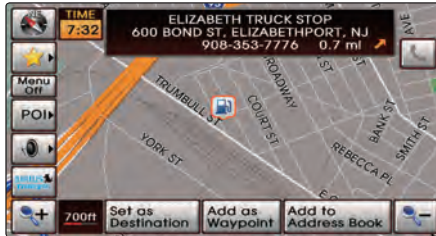


After searching a POI, the POI phone number information can be used to make a call to the POI facility.

Use the various search methods, such as the map scroll function, Q.POI search function, and destination search function to search for a POI.

1. Press the  button.

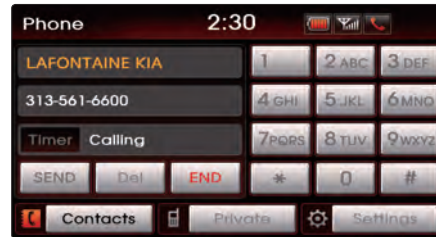

2. *Bluetooth*® Wireless Technology is used to make a call to the POI facility.

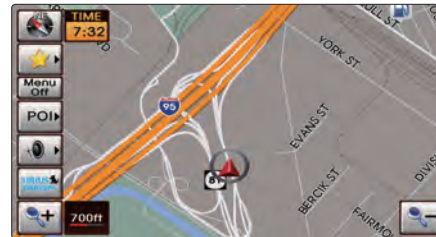

3. Once the call is ended, the map is restored to the current vehicle location.

INFORMATION

- Making a call is not possible if there is no telephone information for a POI or if there is no mobile phone connected through *Bluetooth*® Wireless Technology.
- For more information of mobile phone authentication through *Bluetooth*® Wireless Technology or detailed information on conducting search, refer to  [Pairing and connecting a *Bluetooth*® Wireless Technology phone], page 5-4

Adjusting Navigation Guidance volume



1. Press the  button. The menu buttons that will be displayed are
 -  button: Increases or decreases the volume.
 -  button: Selecting  will change the navigation volume to mute state and display the mute icon.
 - The volume can be changed by directly pressing the volume level on the scale bar.

Setting a destination

Destination menu screen and functions



Press the **DEST** key on the control panel to display the destination menu screen.




- a** Address : sets the destination through address search.
[Setting for an Address], page 3-19.
- b** Previous Dest : sets the destination through the previous destination list.
[Searching for a Previous Destination], page 3-22.
- c** Intersection : sets the destination through intersection search.
[Searching for an Intersection], page 3-23.
- d** POI Search : sets the destination through POI Category search.
[Searching for a POI], page 3-26 .
- e** Address Book : sets the destination through address book search.
[Searching from Address book], page 3-30.

- f** Emergency : sets the destination through emergency facilities search.
[Searching for Emergency facilities], page 3-30.
- g** HOME : sets the stored HOME as the destination.
[Setting your home], page 3-18 .
- h** Favorite place ~ : sets the destination with one of the stored favorite places.
[Setting for favorite places], page 3-18.

Setting your home

1. Press the **DEST** key.
2. Press the  button.
The Home position will be displayed on the map.

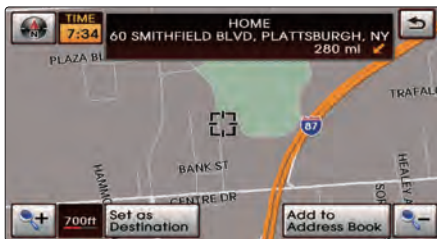


Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Go home"
 [Go home], page 4-25.

INFORMATION

If the Home address is not registered, then the  button will be disabled.

Home can be set through the **SETUP** > **My Places** menu.

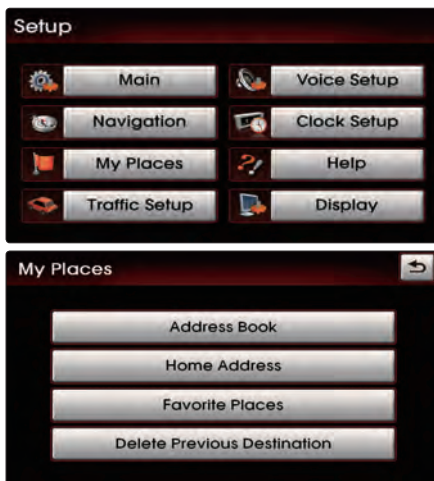

 [Registering home address], page 3-51.

Setting for favorite places

1. Press the **DEST** key.
2. Select the desired button from  ~ .
The corresponding position will be displayed on the map.

INFORMATION

If the address of the Favorite place is not registered, then the  ~  buttons without registered addresses will be disabled.

 [Registering favorite place], page 3-52.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Destination by memory point <1 to 5>"
 [Destination by memory point <1 to 5>], page 4-25.

Setting for an Address

There are 2 ways to set the destination through address search-(a) by street, (b) by city.

1. Press the **DEST** key.
2. Press the **Address** button.
Changing the states.




3. Press the **State** button to change the state.



4. Input the State name and press the **List** button.

If the number of matches with the input is less than 4 results, then the state list screen will be displayed automatically.

If the number of matches is only one result, then the state will automatically be changed without having to manually select the state.

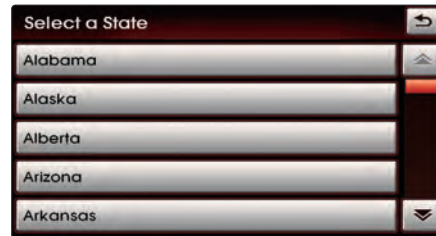


5. Select the desired state from the list to change the state.

(a) Setting an address by street



6. Press the **Street** button.

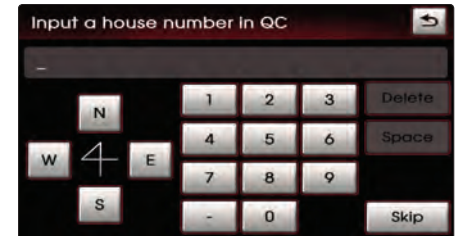

7. Input the House number and Press the **Done** button to complete.

If the House number is not recognized, press the **Skip** button.

In this case, the range of house numbers will be displayed during the last step.



8. Input the Street name and press the **List** button.
If the number of matches with the input is less than 4 results, then the street list screen will be displayed automatically.



9. If the desired street from the list is selected, the corresponding position will be displayed on the map.

i INFORMATION
If more than 30 cities exist with the selected street, then the city input screen will be displayed. If less than 30 cities exist, then the city selection screen will be displayed.




10. Input the city name and press the **List** button to complete. If the number of matches with the input is less than 4 results, then the list screen will be displayed automatically.



11. Select the desired city from the list.



12. This screen will be displayed if the House number had not been inputted more than 2 house numbers ranges exist. Select the desired House number range.

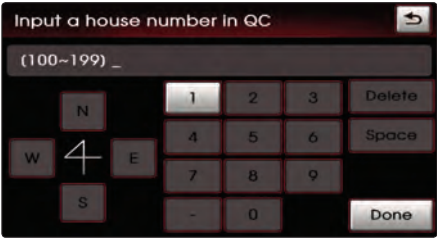

13. This screen will be displayed if the House number had not been inputted and only one house numbers range exists. Input the House number and press the **Done** button to complete.

(b) Setting an address by city

5. Press the **City** button.

6. Input the city name and press the **List** button.

If the number of matches with the input is less than 4 results, then the city list screen will be displayed automatically.

7. Select the desired city from the list.

8. Input the house number and press the **Done** button to complete.

If the House number is not recognized, press the **Skip** button.

In this case, the range of house numbers will be displayed during the last step.

9. Input the Street name and press the **List** button to complete.


If the number of matches with the input is less than 4 results, then the street list screen will be displayed automatically.

10. Select the desired street from the list and the corresponding position will be displayed on the map.



11. This screen will be displayed if the House number had not been inputted during step 8 and more than 2 House number ranges exist.

Select the desired House number range.

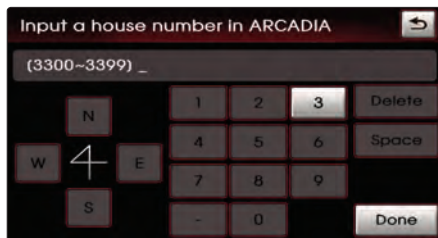

12. This screen will be displayed if the House number had not been inputted during step 6. and only one House number range exists.

Select the house number range and Press the **Done** button to complete.


The corresponding position will be displayed on the map.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Find address"
 [Find address], page 4-19.

Searching for a Previous Destination

1. Press the **DEST** key.
2. Press the **Previous Dest** button.

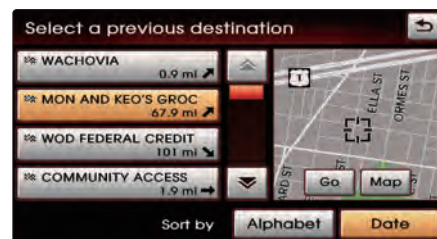

3. Select the desired previous destination. The corresponding position will be displayed on the map.
4. Press the **Go** button to set the selected list as a Destination. If you want to see the full map screen or to set the selected list as a waypoint, press the **Map** button.

Voice Command

1. Press the  key on the steering remote control.

2. After the beep sound, say a command.
 "Previous destination"
 [Previous destination], page 4-24.
 "Previous start point"
 [Previous start point], page 4-25.

Searching for an Intersection

There are two ways to set the destination through intersection search-(a) by street, (b) by city.


1. Press the **DEST** key.
2. Press the **Intersection** button.



3. Press the **State** button to change the state.



4. Input the state name and press the **List** button. If the number of matches with the input is less than 4 results, then the state list screen will be displayed automatically. If the number of matches is only one result, then the state will automatically be changed without having to manually select the state.

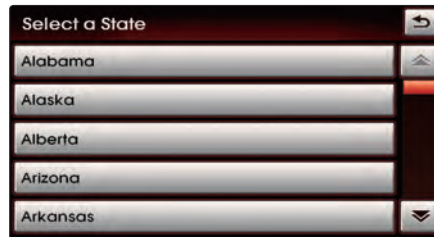

5. Select the desired state from the list to change the state.

(a) by street



6. Press the **Street** button.



7. Input the name of the 1st street and press the **List** button.

If the number of matches with the input is less than 4 results, then the street list screen will be displayed automatically.

PART 3 NAVIGATION SYSTEM



8. Select the desired 1st street from the list.




9. Input the name of the 2nd street and press the **List** button.

If the number of matches with the input is less than 4 results, then the street list screen will be displayed automatically.



10. Select the desired 2nd street menu from the list. The corresponding position will be displayed on the map.

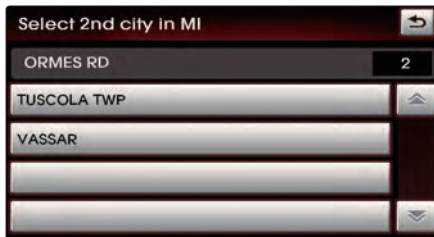

11. If the selected 2nd street is within more than 2 cities, then the city list screen will be displayed.
Select the desired city menu from the list. The corresponding position will be displayed on the map.

(b) by city



6. Press the **City** button.



7. Input the city name and press the **List** button.

If the number of matches with the input is less than 4 results, then the city list screen will be displayed automatically.



8. Select the desired city name.




9. Input the name of the 1st street and press the **List** button.

If the number of matches with the input is less than 4 results, then the street list screen will be displayed automatically.



10. Select the desired 1st street menu from the list.

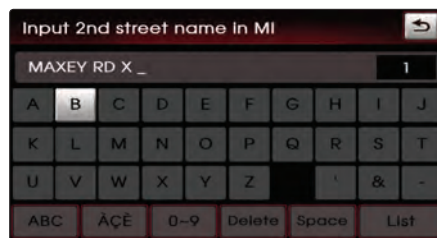


11. Input the name of the 2nd street and press the **List** button.

If the number of matches with the input is less than 4 results, then the street list screen will be displayed automatically.



12. Select the desired 2nd street menu from the list.

The corresponding position will be displayed on the map.

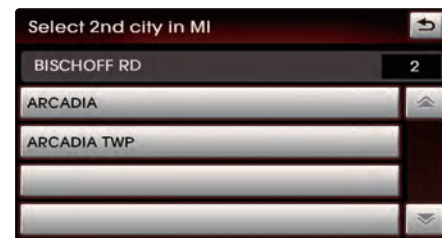

13. If the selected 2nd street is within more than 2 cities, then the city list screen will be displayed. Select the desired city menu from the list. The corresponding position will be displayed on the map.

PART 3 NAVIGATION SYSTEM

Searching for a POI

There are 3 ways to set the destination through POI search - (a) by category, (b) by name, (c) by phone number.


1. Press the **DEST** key.
2. Press the **POI Search** button.



3. Press the **State** button.



4. Input the state name and press the **List** button. If the number of matches with the input is less than 4 results, then the state list screen will be displayed automatically. If there is only one matching result, then the state will automatically be changed without having to manually select the state.

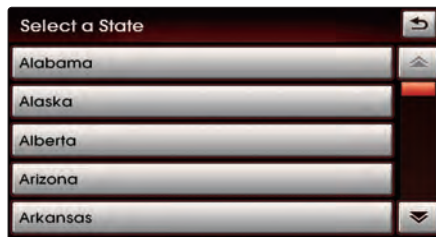

5. Select the desired state from the list to change the state.

(a) By category

Searches for facilities nearby the current position or from the city center.



6. Press the **Category** button.



7. Press the **Near current position** or **Near scrolled position** button to search for facilities nearby the current or scrolled position, or press the **Near city center** button to search for facilities in the near city center.

(a-1) Near current position

Searches for facilities within a 50 mi (80Km) radius of the current position.




8. Press the desired main category menu.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Find nearest POI"
 [Find nearest POI], page 4-20.



9. Press the desired sub category menu.

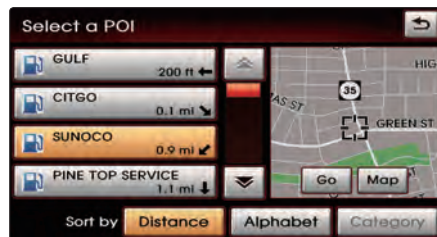

10. Select the desired menu button.

The corresponding position will be displayed on the map.

11. Press the  button to set the selected list as a Destination. If you want to see the full map screen or to set the selected list as a waypoint, press the  button.


(a-2) Near city center

Searches for facilities from the city center.



8. Input the city name and press the  button.


If the number of matches with the input is less than 4 results, then the city list screen will be displayed automatically.

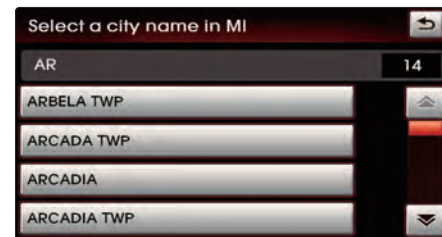


9. Press the desired city menu.



10. Press the desired main category.

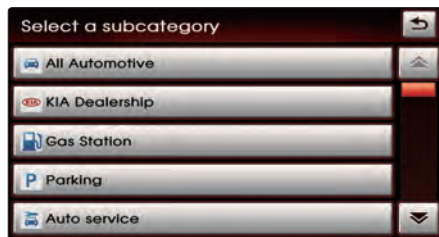

11. Press the desired sub category.

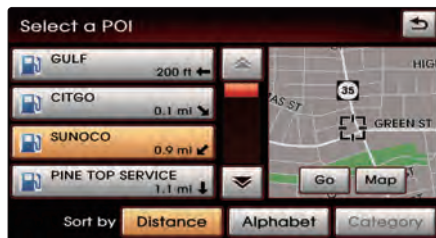

12. Select the desired menu button.

The corresponding position will be displayed on the map.

INFORMATION


The distance on each POI item button refers to the distance from the city center.

13. Press the **Go** button to set the selected list as a Destination. If you want to see the full map screen or to set the selected list as a waypoint, press the **Map** button.

(b) By name



6. Press the **Name** button.

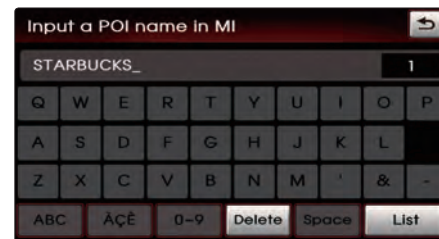

7. Input the name of the POI and press the **List** button.

If the number of matches with the input is less than 4 results, then the facilities list screen will be displayed automatically.



8. Select the desired POI menu. The corresponding position will be displayed on the map.

9. Press the **Go** button to set the selected list as a Destination. If you want to see the full map screen or to set the selected list as a waypoint, press the **Map** button.

i INFORMATION

When necessary, the search conditions for the city and category can be changed by pressing the **Advanced** button.



• Changing City

1. Press the **City** button.
2. Input the city name and press the **List** button.
3. Select the desired city name.

• Changing Category

1. Press the **Category** button.
2. Select the desired main category menu.
3. Select the desired sub category menu.

(c) By phone number



6. Press the **Phone #** button.



7. Input the phone number and Press the **Done** button to complete.

The corresponding position will be displayed on the map.

Voice Command

1. Press the **Voice** key on the steering remote control.
2. After the beep sound, say a command.
"Destination POI by Phone Number"
[Destination POI by phone number],
page 4-22.

Searching from Address book

1. Press the **DEST** key.
2. Press the **Address book** button.



3. Select the desired address book (user) menu.

i INFORMATION

This system provides 5 address books. Each addresses book can hold up to 200 entries.



4. Select the desired address name from the list. The corresponding position will be displayed on the map.

[Registering new address in address book], page 3-46.

5. Press the **Go** button to set the selected list as a Destination. If you want to see the full map screen or to set the selected list as a waypoint, press the **Map** button.

Voice Command


1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Destination by address book"
 [Destination by address book], page 4-24.

Searching for Emergency facilities

1. Press the **DEST** key.
2. Press the **Emergency** button.



3. Select the desired facility category.

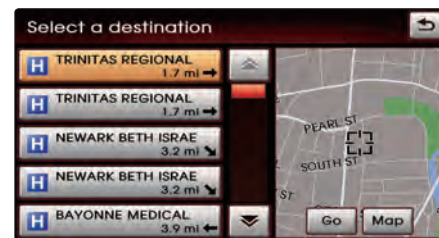

4. Select the desired facility.
The corresponding position will be displayed on the map.


- Press the **Go** button to set the selected list as a Destination. If you want to see the full map screen or to set the selected list as a waypoint, press the **Map** button.

Voice Command

- Press the  key on the steering remote control.
- After the beep sound, say a command.
"Find emergency <Category>"
 [Find emergency <Category>], page 4-23.

Searching from MAP

Position the scroll mark at the destination by scrolling the map on the map screen.

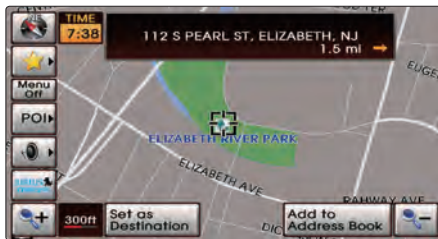

Searching for a POI by local POI list

- Press the **POI** button on the map screen.
- Press the **Find Others** button.
- Press the **Local POI lists** button.




- Select the desired POI menu.
The corresponding position will be displayed on the map.
- Press the **Go** button to set the selected list as a Destination. If you want to see the full map screen or to set the selected list as a waypoint, press the **Map** button.

Voice Command

- Press the  key on the steering remote control.
- After the beep sound, say a command.
"Find nearest <POI name>"
 [Find nearest <POI name>], page 4-21.

Operating after searching a destination

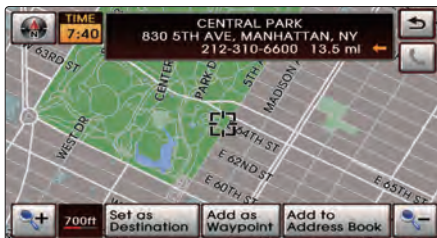

Changing destination position :

Changes the position of the destination by scrolling the map.

 [Scrolling map], page 3-10.

Setting as destination / waypoint :

Sets the position as the destination or waypoint.

Voice Command

1. Press the  key on the steering remote control.

2. After the beep sound, say a command.

"Start guidance"

(Sets the position of the scroll mark as the destination and begins route guidance.)

Adding to address book :

Saves the position in the address book.

 [Registering new address in address book], page 3-46.

Voice Command

1. Press the  key on the steering remote control.

2. After the beep sound, say a command.

"Store Marked Location to <text tag>"

Operating after setting a destination



Starting Route Guidance

Press the **Start Guidance** button. Route Guidance will start.


- Route simulation
 - If the **Start Guidance** button is pressed and held for over 0.8 second, then the route simulation will start.
 - If the **MAP VOICE** key on the control panel is pressed during route simulation, then route simulation will be terminated.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
 - "Time to destination"
 - "Distance to destination"

Selecting other route

1. Press the **Alternative Route** button.

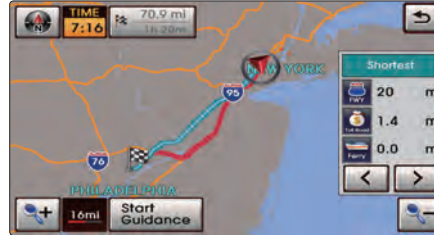

2. Other routes can be selected by pressing the  or  buttons.

Route guidance screen

For more information on  [Changing guidance mode while driving], Page 3-9.

Route guidance

Route menu screen and functions



Press the **ROUTE** key on the control panel.
The ROUTE menu screen will be displayed.



- a Cancel Route: deletes destination, waypoints and terminates route guidance.
[Finishing route guidance], page 3-34.
- b Route Overview: displays the entire route and route detailed.
[Route overview], page 3-35.
- c Route Option: the route option can be changed.
[Changing Route option], page 3-35.
- d Edit Waypoint: waypoints can be added/deleted and the order can be changed.
[Editing waypoints], page 3-36.
- e Detour : searches detour routes.
[Setting detour distance], page 3-38.
- f Avoid Streets: searches routes which avoid the selected streets.
[Setting avoid streets on route], page 3-38.

Finishing route guidance (Delete Destination)

1. Press the **ROUTE** key.
2. Press the **Cancel Route** button.




3. Press the **Yes** button.
The destination and waypoints are deleted and the route guidance is terminated.

Voice Command


1. Press the **Voice** key on the steering remote control.
2. After the beep sound, say a command.
"Cancel route"
(Terminates route guidance and deletes the set destination and waypoints.)

Route overview (View entire route)

1. Press the **ROUTE** key.
2. Press the **Route Overview** button.

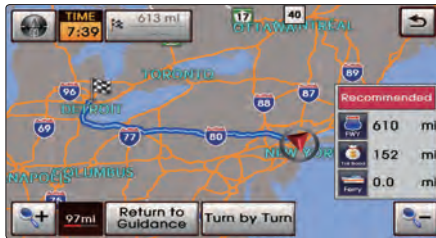

3. Press the **Turn by Turn** button.

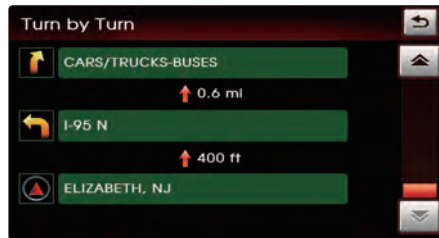

4. The detailed route information can be viewed.

i INFORMATION

If the **Return to guidance** button is pressed, route guidance screen is displayed.

Changing Route option

1. Press the **ROUTE** key.
2. Press the **Route Option** button.



3. Press the button for the desired route guidance method.
Guidance will be restarted after recalculating the route with the selected guidance method.

Voice Command

1. Press the **Voice Command** key on the steering remote control.
2. After the beep sound, say a command.
"Replan recommended route"
"Replan shortest route"

Editing waypoints

Adding waypoints

There are 2 ways to add waypoints - (a) searching for POI nearest to the route, (b) using advanced search.

1. Press the **ROUTE** key.
2. Press the **Edit Waypoint** button.



3. Press the **Press to add new waypoint** button.


(a) Adding near POI



4. Press the **Near POI Lists** button.




5. Select the desired category.

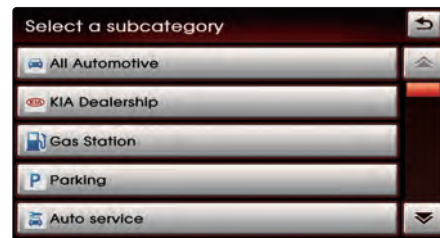

6. Select the desired sub category from list.



7. Select the desired POI from the list. Press the **Map** button.
The corresponding position will be displayed on the map.

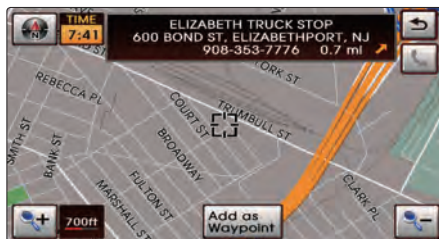

8. Press the **Add as Waypoint** button.



9. Press the **Done** button to complete. Guidance will restart after recalculating the route.

(b) Using advanced Search

The method for searching waypoints through the **Advanced(more)** button is the same method as searching destination.


③ [Operating after searching a destination], page 3-32.

Deleting waypoints

1. Press the **ROUTE** key.
2. Press the **Edit waypoint** button.



3. Select the waypoint and press the **Delete** button.

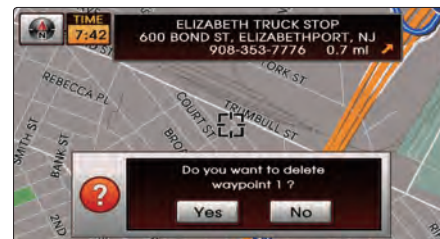

4. Press the **Yes** button.



5. After deleting, press the **Done** button to complete. Guidance will be restart after recalculating the route.

Re-ordering waypoints


1. Press the **ROUTE** key.
2. Press the **Edit Waypoint** button.



3. Select the desired waypoint and use the **Move ▲**, **Move ▼** buttons to change the order.
4. Once re-ordering is complete, press the **Done** button to complete.
Guidance will restart after recalculating the route.

Setting detour distance

1. Press the **ROUTE** key.
2. Press the **Detour** button.

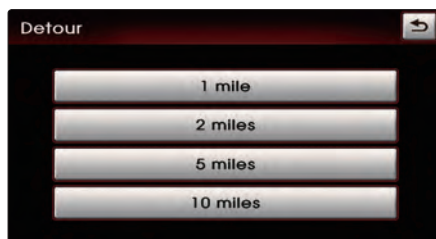

3. Select the desired detour range.
Guidance will restart after recalculating the detour route.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Detour <1 or 2 or 5 or 10> miles"
"Detour <1 or 2 or 5 or 10> kilometers"

Setting avoid streets on route

1. Press the **ROUTE** key.
2. Press the **Avoid Streets** button.




3. Select the desired streets to avoid avoid() , allow() and press the **Done** button to complete.
Guidance will restarted after recalculating the route to avoid the selected streets.

Setup and Information

Setup menu screen and functions



Press the **SETUP** key on the control panel to display the setup menu screen.

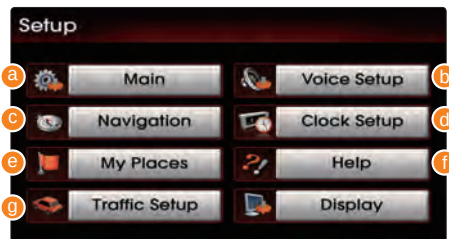

- a** Main button : changes to the input keyboard type, voice command feedback ON/OFF settings and system initialization can be made.
 [Main setting], page 3-40.
- b** Voice Setup button : adjusts the Navigation guidance volume.
 [Voice guidance volume setting], page 3-55.
- c** Navigation button : navigation related settings can be set.
 [Navigation setting], page 3-41.
- d** Clock Setup button
- e** My Places button : the Address book, Home address, Favorite places, Previous destination can be edited.
 [My places setting], page 3-46.

- f** Help button : the help contents can be viewed. [Help], page 3-58.
- g** Traffic Setup : sets to display traffic information on map, or to provide upcoming traffic information voice guidance, and or to display the detour route popup showing upcoming traffic information.

Main setting

1. Press the **SETUP** key.
2. Press the **Main** button.



3. Select the desired changes and press the **Done** button to complete.

Setting keyboard for inputting letter

Press the desired keyboard type button. The selection will be highlighted.

Setting voice command feedback ON/OFF

Press the desired setting button.

Setting Language

1. Press the **Change** button.




2. Press the desired language.




3. Press the **Done** button to complete.

Initializing system

1. Press the **Factory Defaults** button.

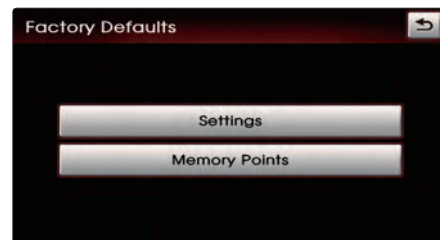


2. Press the menu desired for initialization.

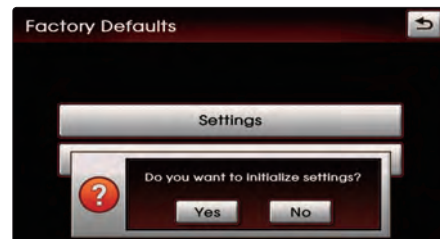

3. Press the **Yes** button.

Navigation setting

1. Press the **SETUP** key.
2. Press the **Navigation** button.

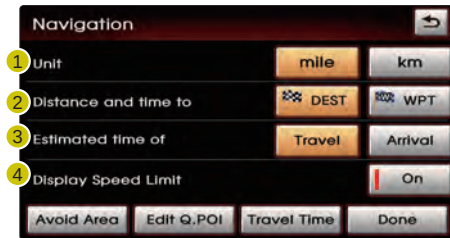


3. Select the desired changes and press the **Done** button to complete.


- 1 Setting units (mile/ km)
Select the desired distance unit.
- 2 Setting arrival time and distance display-
Select the desired setting button.
- 3 Setting estimated time between travel
time and arrival time.
- 4 Setting speed limit display on the map.

Registering avoid area

1. Press the **Avoid Area** button.

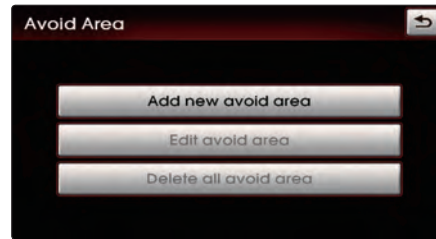


2. Press the **Add new avoid area** button.

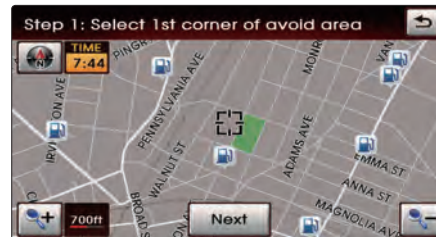

3. Set the start position of the avoid area and press the **Next** button.



4. Set the end position of the avoid area and press the **Next** button.

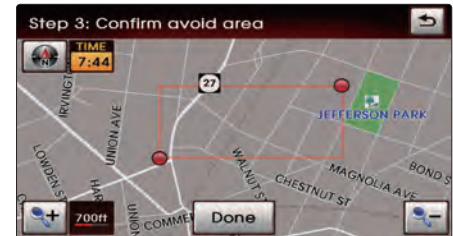

5. Press the **Done** button to complete.


PART 3 NAVIGATION SYSTEM



6. If the Avoid area needs to be renamed, press the **Rename** button.



7. Rename the Avoid area and Press the **Done** button to complete.

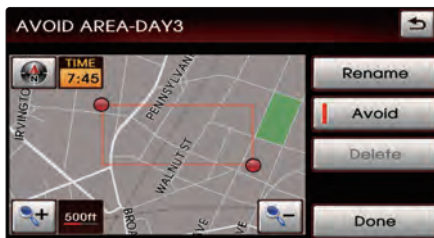


8. Each time the **Avoid** button is pressed, the function will switch between avoid () or allow().

9. Press the **Done** button to complete the setting.

Setting are to avoid

1. Press the **Avoid Area** button.

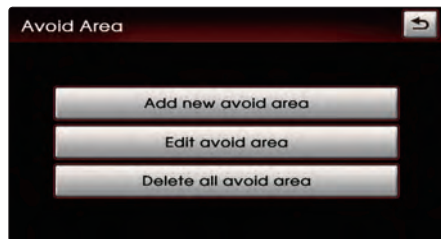

2. Press the **Edit avoid area** button.




3. Select the **AVOID AREA 0** button to edit.



4. If the Avoid area needs to be renamed, press the **Rename** button.



5. Rename the Avoid area and press the **Done** button to complete.

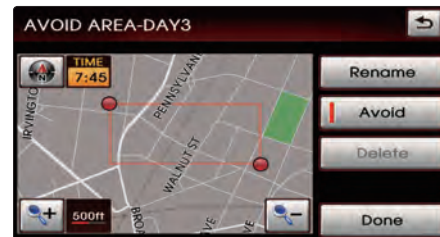


6. Each time the **Avoid** button is pressed, the function will switch between avoid () or allow ().

7. Press the **Done** button once editing is complete.

PART 3 NAVIGATION SYSTEM

Deleting avoid area

1. Press the **Avoid Area** button.

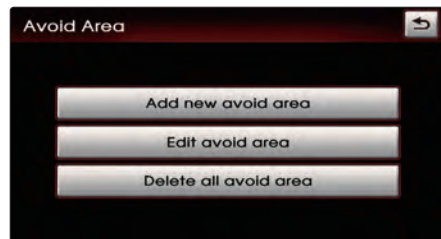

2. Press the **Edit avoid area** button.



3. Select the **AVOID AREA 0** button to delete.




4. Press the **Delete** button.



5. Press the **Yes** button.

Deleting all avoid areas

1. Press the **Avoid Area** button.

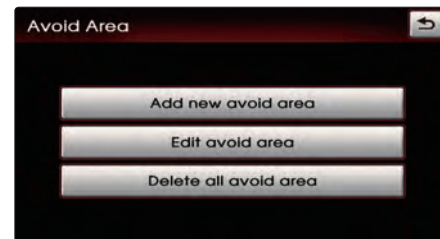

2. Press the **Delete all avoid area** button.



3. Press the **Yes** button.

Setting Q.POI icons

For more information on  [Setting Q.POI icons], page 3-14.

Setting estimate travel time

1. Press the  button.



2. Press the  or  button on the Residential, Main street, and Freeway controls to adjust the speed.
Press the  button to set the speeds to the default settings.
3. Press the  button to complete the setting.

My places setting

Registering new address in address book


There are 3 ways to register a new address in the address book - (a) by DEST menu, (b) by registering address in address book, (c) from map scroll.

(a) by DEST menu

1. Press the **DEST** key.
2. Search through the desired method.

The search process is the same as the method for destination search.


 [Operating after searching a destination], page 3-32.

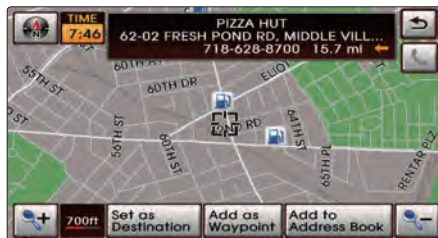

3. Press the **Add to Address Book** button.




4. Press the desired address book (user) button.

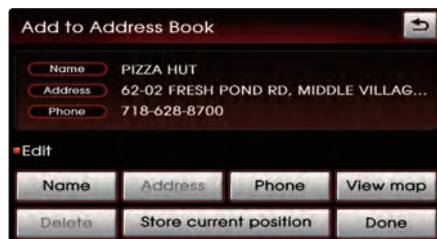

5. Input the name and telephone information and press the **Done** button to complete.
 [Editing an address of address book], page 3-48.

(b) by registering in the address book


1. Press the **SETUP** key.
2. Press the **My Places** button.

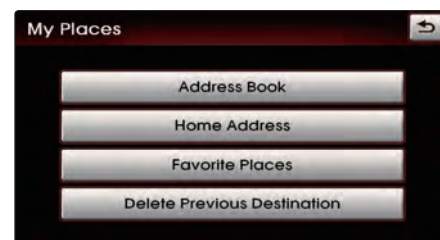

3. Press the **Address Book** button.



4. Press the desired address book (user) button.

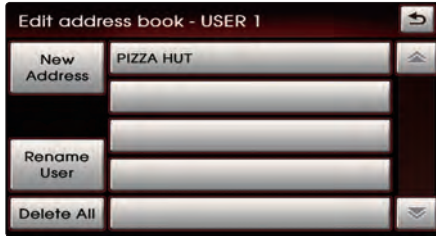

5. Press the **New Address** button.



6. Press the **Address** button to search the address.

 [Setting for an Address], page 3-19.

INFORMATION

Press the **Store current position** button to input the address of the current position.

7. Input the name and telephone information and press the **Done** button to complete.

 [Editing an address of address book], page 3-48.

(c) from map scroll

1. In the map screen, scroll the map to the desired position.



2. Press the **Add to Address Book** button.




3. Press the desired address book (user) button.

4. Input the name and telephone information and press the **Done** button to complete.

 [Editing an address of address book], page 3-48.

Editing an address of address book


1. Press the **SETUP** key.
2. Press the **My Places** button.

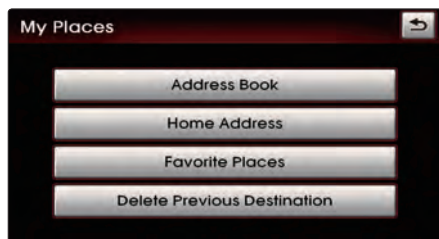

3. Press the **Address Book** button.



4. Select the desired address book (user) button.

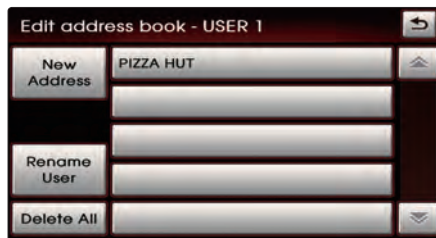


5. Select the desired address to edit.



6. Press the **Name** button to input the address name.



7. Input the address name and press the **Done** button to complete.

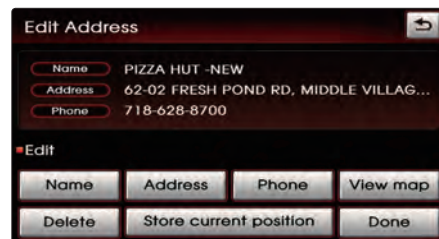

8. Press the **Address** button to search the address. The process is the same as the method for searching an address.
 [Setting for an Address], page 3-19.

INFORMATION

Press the **Store current position** button to input the address of the current position.

9. Press the **Phone** button to input the phone number.

10. Input the phone number and press the **Done** button to complete.

11. Press the **Done** button to complete.

Deleting an address of address book

1. Press the **SETUP** key.
2. Press the **My Places** button.

3. Press the **Address Book** button.

4. Select the desired address book (user) button.

5. Select the desired address button to delete.


6. Press the **Delete** button.



7. Press the **Yes** button.

Deleting an address book


1. Press the **SETUP** key.
2. Press the **My Places** button.

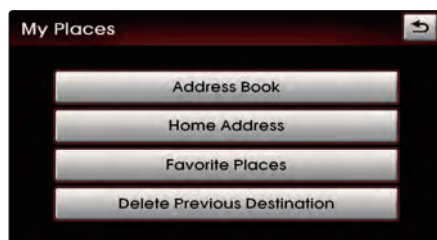


3. Press the **Address Book** button.



4. Press the desired address book (user) button.

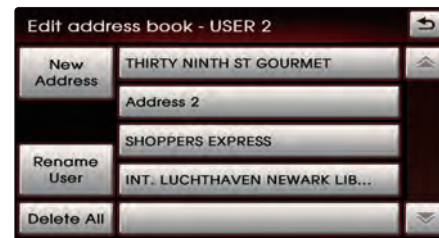


5. Press the **Delete all** button.

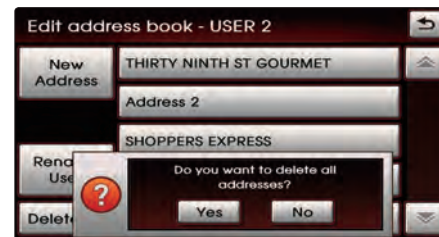


6. Press the **Yes** button.

Registering home address

1. Press the **SETUP** key.
2. Press the **My Places** button.

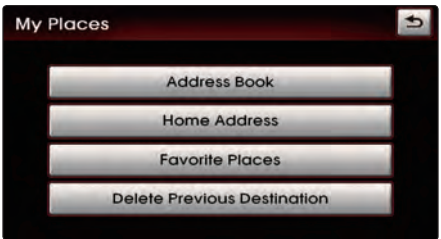

3. Press the **Home Address** button.

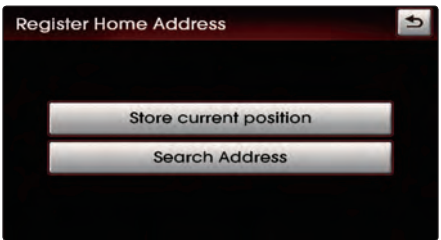


4. Press the **Search** button.

i INFORMATION

Press the **Store current position** button to register the current position as Home.

5. Search the address.
The process is the same method as searching an address.

[Setting for an Address], page 3-19.

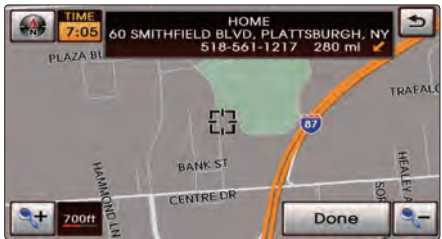


6. Press the **Done** button to complete.

Deleting home address

1. Press the **SETUP** key.
2. Press the **My Places** button.



3. Press the **Home Address** button.

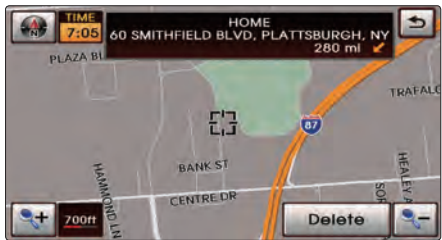


4. Press the **Delete** button.


PART 3 NAVIGATION SYSTEM

Registering favorite place


1. Press the **SETUP** key.
2. Press the **My Places** button.

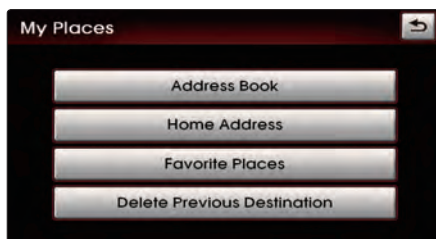

3. Press the **Favorite Places** button.

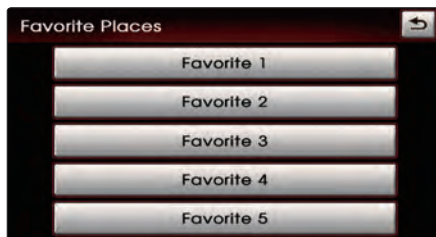

4. Press the number of the Favorite Place to register.

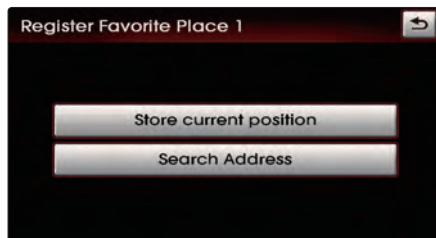

5. Press the **Search** button.


i INFORMATION

Press the **Store current position** button to register the current position as a Favorite place.

6. Search the address.

The process is the same as the method for searching an address.


 [Setting for an Address], page 3-19

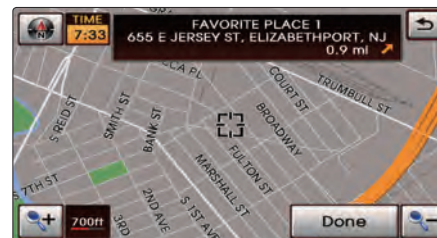


7. Press the **Done** button to complete.

Deleting favorite place


1. Press the **SETUP** key.
2. Press the **My Places** button.

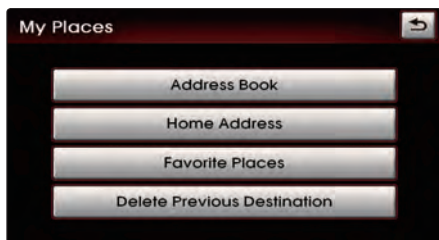

3. Press the **Favorite Places** button.

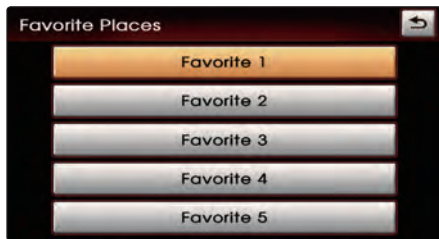

4. Select the desired favorite place button to delete.

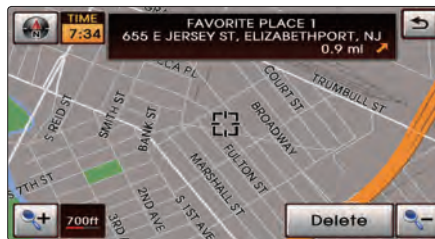

5. Press the **Delete** button.

System information and Update

Downloading the update file

1. Download the update file from <http://www.mapnsoft.com> to your computer then unzip it.

2. Move the update files to the root of your USB.

INFORMATION

Do not save unrelated files in the USB.

Updating the system

1. Connect your USB that includes the update file.

2. Press the **SETUP** key on the control panel.

3. Press the **Main** button.

4. Press the **System Info** button.



5. Press the **Map Upgrade** button.



6. Verify your current system version and start update.



7. Press **Yes** button to upgrade map.
The update process will begin immediately.

8. When the process is complete, the system will shut off and reboot.
Then the most recent mode will be played.

INFORMATION

The System will automatically reboot several times while updating.
Do not operate the system until the update is completed.

Voice guidance volume setting

1. Press the **SETUP** key.
2. Press the **Voice Setup** button.

Voice guidance volume control



- Set the desired volume level by using the **<** or **>** buttons and press the **Listen** button to verify the volume level.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Voice Guidance Louder"
"Voice Guidance Softer"

- Press the **Mute** button when voice guidance is unnecessary.
Voice guidance can be turned back on by pressing the **<** or **>** buttons or pressing the **Mute** button.

Voice Command

1. Press the  key on the steering remote control.
2. After the beep sound, say a command.
"Voice Guidance On"
"Voice Guidance Off"

Adaptive volume control ON/OFF

- Press the desired setting button.


INFORMATION

Adaptive Volume Control

If the speed of the vehicle is over approximately 60 mi/h (100km/h), the volume level can be increased one level higher than the current level. If the speed of the vehicle falls under 60 mi/h (100km/h), the volume level will return to its original level.

Traffic Setup

- 1. Press the **SETUP** key.
- 2. Press the **Traffic Setup** button.
- 3. Select the desired changes and press the **Done** button.

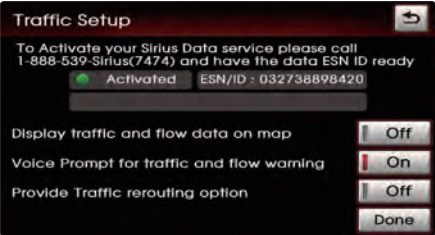

i INFORMATION

- Display Traffic and Flow data on Map : select whether to display traffic information on the map.
- Voice Prompt for traffic and flow warning : select whether to provide voice guidance in front of Traffic Information. (On route - 3mile)
- Provide Traffic rerouting option : select whether to display Detour pop up in front of Traffic Information. (On route - 3mile)

Traffic Information

(a) Viewing Traffic Information




- 1. When the Traffic option is active, press the **Traffic** button on the Map screen.

i Traffic Flow INFORMATION


	Normal, Free Flowing (46 mph ~)
	Moderate Congestion (26 ~ 45 mph)
	Heavy Traffic, Stop and Go (0 ~ 25 mph)
	Road Construction
	Accident
	Congestion/Slow Traffic
	Incident
	Hazardous Road Conditions
	Travel Information

i INFORMATION

- Traffic information will be shown on the map up until the scale is ~4mile.
- Displays the traffic information around vehicle for up to a radius of 50 miles. (Information exceeding 50 miles will not be displayed)
- The above list can be sorted by either Distance (Default) or Category.

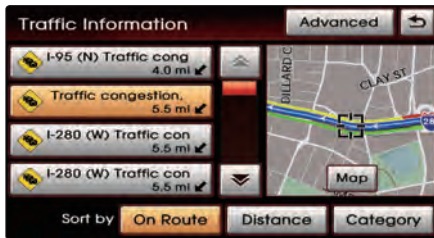

2. Select the desired list button.

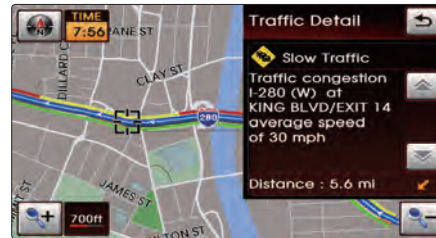

3. The user can check points of accidents and traffic details.

(b) Changing Traffic Category



1. Press the **Advanced** button at No. 2.




2. After selecting the desired menu among the six menus, press the **Done** button to save. Once returning to the previous List screen, the corresponding Category list will be shown and maintained until Category information is changed.

Help


1. Press the **SETUP** key.




2. Press the **Help** button.

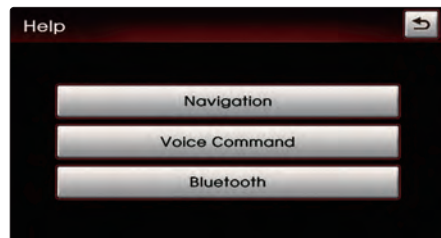

3. Press the **Navigation** button.

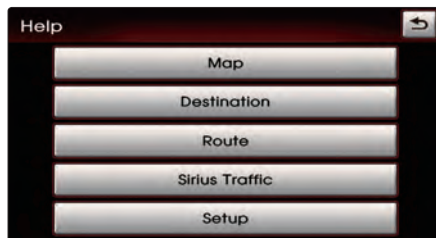

4. Press the desired Help menu button.

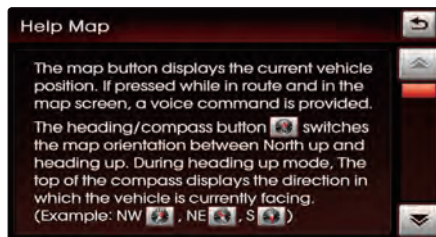

5. The full content of the help section can be viewed by using the top-down scroll buttons.

PART 4

VOICE COMMAND SYSTEM

Operating voice command

Condition for voice command system

Most of the functions within the AUDIO and Navigation system can be operated by voice. Please follow the following instructions for optimal voice recognition performance.

- Close all windows and the sunroof. The performance of the voice recognition can be improved if the environment of the car interior is quiet.
- Press the voice recognition button and say the desired voice command after the sound of the beep.
- The microphone is positioned above the driver so that voice commands can be said while maintaining a proper posture.
- Pronounce the voice commands naturally and clearly as if in a normal conversation.

Basic operation for voice command control




1. Press the  key on the steering wheel remote controller.

A voice command window will be displayed on the lower side of the screen followed by a "Command please" system voice comment.

INFORMATION

The System voice comment "Command Please" will not be provided when the Voice prompt is turned OFF.

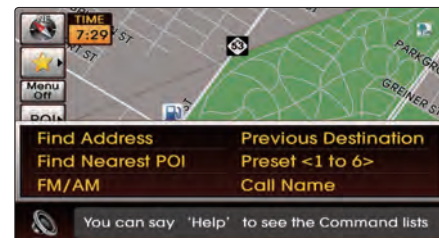

2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say the desired voice command (ex : previous destination)
 [Voice command list], page 4-6.
 [Searching a destination by voice command], page 4-19.

If the exact command is not known, use the "Help" command to view the commands list in detail.

INFORMATION

Press the  key shortly to input a voice command from among the system voice comments. The system voice instruction comment will immediately terminate.

When the  icon changes into the  icon with a beep sound, input the desired voice command.



3. The inputted command is fed back to the screen and voice system.

If the command was not recognized properly, say "Back".

INFORMATION

- The commands which can currently be inputted are displayed on the screen in yellow.
- To terminate the voice recognition system, either say "cancel" or press the  for over 0.8 second.
- Be aware that during the operation of the voice recognition system, pressing the hard

keys or the screen will terminate the voice recognition system.

Voice command Help

1. Press the  key on the Steering wheel remote controller.

A voice command window will be displayed on the lower side of the screen followed by a "Command please" system voice comment.

INFORMATION

The System voice comment "Command Please" will not be provided when the Voice prompt is turned OFF.


2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Help".

If the proper Help menu is already known, voice commands, such as "destination help" can be inputted directly.


INFORMATION

The "help" command can be used even while voice recognition dialogue is operating.

At such time, help instructions appropriate to the state of the dialogue will be provided.

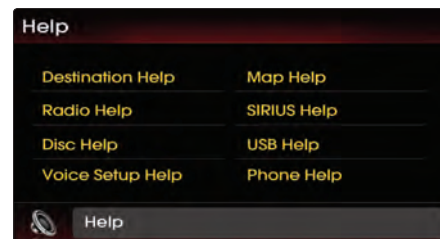

3. Say the name of the desired menu.
(ex : "Destination help")

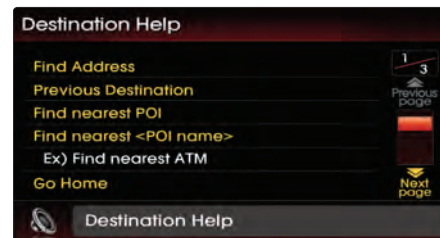

4. Say the desired voice command.

Setting up the voice command system

Setting voice prompt ON/OFF

- Voice prompt ON : All system prompts are provided.
- Voice prompt OFF : Most of the system prompts are not provided.

1. Press the  key on the Steering wheel remote controller.

2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Voice setup." The "voice prompt on" or "voice prompt off" can be directly inputted if the current state is already known.



3. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Voice Prompt on".


INFORMATION

In the Voice Setup Help screen, the commands possible for input within the current mode are displayed. For example, if the Voice prompt is currently in Off state, then the command Voice prompt ON will be displayed on the screen.


Speaker adaptation

1. Press the  key on the Steering wheel remote controller.

2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Voice setup." Or the "Speaker adaptation" command can be directly inputted.

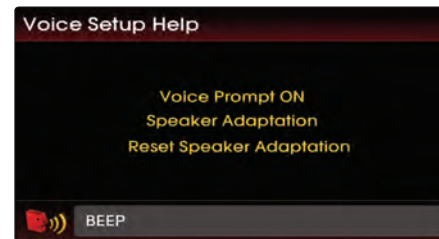

3. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Speaker adaptation".

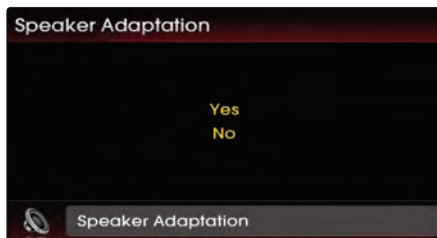

4. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Yes".



5. Listen and repeat the 20 commands (approximate) as instructed by the device.

- Reset Speaker adaptation: Returns to previous state prior to applying Speaker adaptation.

1. Press the  key on the Steering wheel remote controller.
2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Reset Speaker adaptation".

Voice command list

The voice commands for this system are divided into Global commands and Local commands.

- Global command (●) : Commands which operate in all operating modes.
- Local command (○) : Commands which operate only when the corresponding mode is operating or when the mode screen to the corresponding mode is displayed.

Command list of Help

Command		Operation
●	Help	Displays the main Help screen.
●	Destination Help	Displays the Destination related command list.
●	Map Help	Displays the Map related command list.
●	Radio Help	Displays the FM/AM radio related command list.
●	SIRIUS Help	Displays the SIRIUS radio related command list.
●	Disc Help	Displays the DISC mode related command list for the disc inserted in the CDP.
●	iPod Help	Displays the iPod related Command list.
●	USB Help	Displays the USB related command list.
●	Phone Help	Displays the Phone help screen.
●	Voice setup Help	Displays the Voice prompt settings and speaker-adaptive commands on the screen.

Command list of Audio system

FM/AM Radio

Command		Operation
●	Radio	Plays the most recent frequency for the most recently operated band.
●	(Radio) AM	Plays the most recent frequency for the corresponding band.
●	(Radio) FM	Plays the most recent frequency for the corresponding band. In the case of FM, the most recent frequency within the most recently played FM1 or FM2 band is played.
●	FM <1 or 2>	Plays the most recent frequency for the corresponding band.
●	AM frequency <530 to 1710> (ex. AM frequency 1310)	Plays the desired AM band frequency.
●	FM frequency <87.5 to 107.9> (ex. FM frequency 99.1)	Plays the desired FM band frequency.
●	AM Preset <1 to 6>	Plays the desired AM band preset frequency.
●	FM <1 or 2> Preset <1 to 6>	Plays the desired preset frequency of FM1 or FM2 band.
○	Preset <1 to 6>	Plays the desired preset frequency for the current band.
○	Seek Up	Searches and plays the next frequency of the current band.
○	Seek Down	Searches and plays the previous frequency of the current band.
○	Preset Up	Plays the next preset frequency of the current band.
○	Preset Down	Plays the previous preset frequency of the current.
○	Scan	Scans all frequencies within the current band.
○	Preset Scan	Scans the 6 preset frequencies of the current band.

PART 4 VOICE COMMAND SYSTEM

SIRIUS Radio

Command		Operation
●	SIRIUS	Plays the last channel within the last band from SIRIUS1, SIRIUS2, and SIRIUS3.
●	SIRIUS <1 or 2 or 3>	Plays the most recent channel for the corresponding Band.
●	SIRIUS Channel <0 to 223>	Plays the desired SIRIUS band channel.
●	SIRIUS <1 or 2 or 3> Preset <1 to 6>	Plays the desired preset channel for SIRIUS1 or SIRIUS2 or SIRIUS3 band.
○	Channel < 0 to 223 >	Plays the desired channel of the current band.
○	Preset <1 to 6>	Plays the desired preset channel of the current band.
○	Channel Up	Plays the next channel of the current band.
○	Channel Down	Plays the previous channel of the current band.
○	Preset Up	Plays the next preset channel of the current band.
○	Preset Down	Plays the previous preset channel of the current band.
○	Scan	Scans all channels within the current band.
○	Preset Scan	Scans all preset channels within the current band.

CD

Command		Operation
●	DISC	Plays the DISC already inserted in the CD Player.
●	CD	If the DISC inserted in the CD Player is either a CD or MP3 DISC, then the CD or MP3 will be played.
●	CD track <1 to 665>	If the DISC inserted in the CD Player is a CD, then CD Mode will start and plays the desired track.
○	Track <1 to 665>	Plays the desired track.
○	Next track	Plays the next track.
○	Previous track	Plays the previous track.
○	Scan	Scans all tracks on the CD.
○	Repeat track	Repeats the current playing track.
○	Random	Plays the tracks of the CD in random order.
○	Normal play	Turns off the Scan, Repeat, and Random functions.
○	Pause	Pauses the CD.
○	Play	The command will only be enabled when the CD is paused.

PART 4 VOICE COMMAND SYSTEM

MP3

Command		Operation
●	DISC	Plays the DISC already inserted into the CDP.
●	CD	If the DISC inserted in the CDP is either a CD or MP3 DISC, then the CD or MP3 will be played.
●	MP3	If the DISC inserted in the CDP is an MP3 DISC, then the MP3 will be played.
○	Next file	Plays the next file.
○	Previous file	Plays the previous file.
○	Next folder	Plays the first file in the next folder.
○	Previous folder	Plays the first file in the previous folder.
○	Scan	Scans all files within the MP3 DISC.
○	Folder Scan	Plays all songs in the folder in which the current playing file is located for 10 seconds each.
○	Repeat File	Repeats the current playing file.
○	Repeat Folder	Repeats all tracks within the current playing folder.
○	Random	Plays all files within the MP3 DISC in random order.
○	Random Folder	Plays all files within the current playing folder in random order.
○	Normal play	Turns off the Scan, Repeat, and Random functions.
○	Pause	Pauses the MP3 DISC.
○	Play	The command will only be enabled when the MP3 DISC is paused.

USB MP3

Command		Operation
●	USB	If the USB has been connected to the device, plays the MP3 files within the USB.
○	Next file	Plays the next file.
○	Previous file	Plays the previous file.
○	Next folder	Plays the first chapter of the next folder.
○	Previous folder	Plays the first chapter of the previous folder.
○	Scan	Scans all files within the USB.
○	Folder Scan	Plays all songs in the folder in which the current playing file is located for 10 seconds each.
○	Repeat File	Repeats the current playing file.
○	Repeat Folder	Repeats all songs within the current playing folder.
○	Random	Plays all files within the USB in random order.
○	Random Folder	Plays all files within the current playing folder in random order.
○	Normal play	Turns off the Scan, Repeat, and Random functions.
○	Pause	Pauses the USB.
○	Play	The command will only be enabled when the USB is paused.

PART 4 VOICE COMMAND SYSTEM

USB Image

Command		Operation
☒	USB	If the USB IMAGE has been connected to the device, plays the image files within the USB.
☐	Next Image	Moves to the next Image.
☐	Previous Image	Moves to the previous Image.
☐	Next folder	Moves to the next folder.
☐	Previous folder	Moves to the previous folder.

iPod

Command		Operation
☒	iPod	Plays the songs within the iPod if the iPod has been connected to the device.
☐	Next song	Plays the next song.
☐	Previous song	Plays the previous song.
☐	Repeat song	Repeats the current playing song.
☐	Random	Plays all songs within the iPod in random order.
☐	Random Album	Plays all songs within the current playing album in random order.
☐	Normal play	Turns off the Repeat and Random functions.
☐	Pause	Pauses the iPod.
☐	Play	The command will only be enabled when the iPod is paused.

Others

Command		Operation
●	Line in	Plays the unit connected with the AUX terminal.
●	Audio on	Turns on the Audio/Video.
●	Audio off	Turns off the Audio/Video.

Command list of Phone

Command		Operation
●	Call Name	Makes the call to the name.
●	Dial Number	makes the call to the number.
●	Redial	The recently called number is redialed.
●	Recent Calls	The user can select a number from the outgoing, incoming, and missed calls.

PART 4 VOICE COMMAND SYSTEM

Command list of navigation system

Navigation commands will operate only agreeing to the terms and conditions for the Navigation system.

Map

Command		Operation
●	Map Current location	Displays the current position of the vehicle.
●	Zoom In	Decreases the map zoom by one level.
●	Zoom Out	Increases the map zoom by one level.
●	Zoom minimum	Displays the map screen in the maximum zoom level.
●	Zoom maximum	Displays the map screen in the minimum zoom level.
●	Zoom level <1 to 14>	Displays the map in the zoom level selected from the 14 levels.
●	Zoom <scale factor>	Displays the map in the corresponding zoom.
	150 feet / 50 meters 300 feet /100 meters 700 feet / 200 meters 0.25 miles / 400 meters 0.5 miles / 800 meters 1 mile / 1.6 kilometers 2 miles / 3.2 kilometers 4 miles / 6.4 kilometers 8 miles / 12 kilometers 16 miles / 25 kilometers 32 miles / 50 kilometers 64 miles / 100 kilometers 130 miles / 200 kilometers 250 miles / 400 kilometers (ex.Zoom 0.25 miles, zoom 400 meters)	

Command		Operation
☐	North up	Displays the map in North Up mode.
☐	Heading up	Displays the map in Heading Up mode.
☐	Show <POI name> (ex. Show ATM)	Displays the selected POI categories. 🗲 [POI Category list], page 4-18.
☐	Hide <POI name> (ex. Hide ATM)	Hides the selected POI categories. 🗲 [POI Category list], page 4-18.
☐	Hide all	Hides all POI categories.
☐	Daylight mode	Converts the map display into daylight mode.
☐	Night mode	Converts the map display into night mode.
☐	Auto mode	Converts the map display is between daylight/night modes automatically.

Destination

Command		Operation
●	Find address	Sets the destination through address search for route guidance.
●	Find nearest POI	Sets a POI near the current position as the destination for route guidance through POI category search.
●	Find nearest <POI name>	Sets a POI near the current position as the destination by directly inputting the POI name for route guidance. 🗲 [POI Category list], page 4-18.
●	Destination POI by phone number	Sets the destination by searching the phone number of the facility.
●	Find Emergency <Category> (ex. Find Emergency Hospital)	Searches for an emergency facility which is nearby the current position and sets it as the destination for route guidance. Emergency facilities are police stations, hospitals, and dealerships.
●	Destination by address book	Sets one of the list of previously registered addresses in the address book for the user as the destination.

PART 4 VOICE COMMAND SYSTEM

Command		Operation
●	Previous destination	Sets one of the previous destination as the current destination.
●	Previous start point	Sets the previous start point as the current destination.
●	Go home	Sets the previously registered home address as the destination for route guidance.
●	Destination by memory point <1 to 5>	Sets a previously registered memory point as the destination for route guidance

Route

Command		Operation
●	Cancel route	Deletes the designated destination and terminates the route guidance.
●	Repeat voice guidance	Repeats the route guidance.
●	Detour <1 or 2 or 5 or 10> miles	Searches detour routes within a <1 2 5 10> mile radius.
●	Detour <1 or 2 or 5 or 10> kilometers	Searches detour routes within a <1 2 5 10> kilometer radius.
●	Replan recommended route	Recalculates the route with the recommended route.
●	Replan shortest route	Recalculates the route with the shortest route.
●	Distance to destination	Reports the remaining distance until destination by voice.
●	Time to destination	Reports the remaining time until destination by voice.
○	View route	If the destination has been set, displays the whole route screen until the destination.
○	Start guidance	Sets the scroll mark displayed on the map as the destination and starts route guidance.

Others

Command		Operation
●	Voice guidance on	Turns the Voice Guidance On.
●	Voice guidance off	Turns the Voice Guidance Off.
●	Voice guidance louder	Increases the Voice Guidance volume by 1 level.
●	Voice guidance softer	Decrease the Voice Guidance volume by 1 level.
●	Store marked location to <text tag> (ex. Store marked location to user 1)	Registers the selected location into the selected Address book.

PART 4 VOICE COMMAND SYSTEM

● POI Category list


All Restaurants	Car Wash	Home Specialty Store	Court House
Fast Food restaurant	Motorcycle Dealership	Clothing shop	Fire Department
American restaurant	All Travel	Shoe Store	Convention Center
French restaurant	Airport	Pharmacy	City Hall
Italian restaurant	Hotel	All Recreation	Civic Center
Continental restaurant	Tourist Information	Amusement Park	School
Mexican restaurant	Travel Agent	Museum	Government Offices
Japanese restaurant	Tourist Attraction	Cinema	Waste & Sanitary
Chinese restaurant	City Center	Sports Activities	Utilities
Korean restaurant	Rental Car Agency	Sports Complex	All Services
Vegetarian Food restaurant	Campground	Golf Course	Hospital
Seafood restaurant	Ferry Terminal	Winery	Dentist
Latin American restaurant	Bus Station	Video & Game Rental	Photography
Asian restaurant	Local Transit	Ski Resort	Tax Service
African restaurant	Train Station	Recreation Area	Medical Service
Coffee Shop	All Shopping	Other Recreation	Attorney
Other restaurants	Department Store	All Financial Service	Funeral Director
All Automotive	Convenience Store	Bank	Hair & Beauty
Gas Station	Shopping Center	ATM	Cleaning & Laundry
Parking	Music Store	Check Cashing Service	Social Service
Auto service	Grocery Store	Money Transfer	Physician
Road Assistance	Bookstore	Business Facility	Communication services
KIA Dealership	Electronics Store	All Community	Tailor & Alteration
Automobile Dealership	Hardware Store	Police Station	Mover services
Auto Parts	Gifts shop	Post Office	
Rest Area	Sporting Goods store	Library	

Searching a destination by voice command

Find address

Sets the destination through address search for route guidance.


1. Press the  key on the Steering wheel remote controller.
2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Find address".

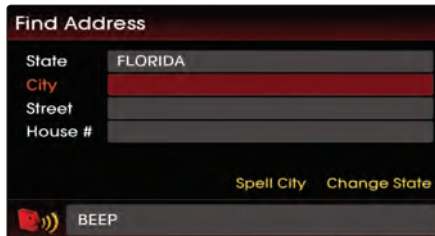


3. Say "Change state" to change the state.




4. Say the state name.

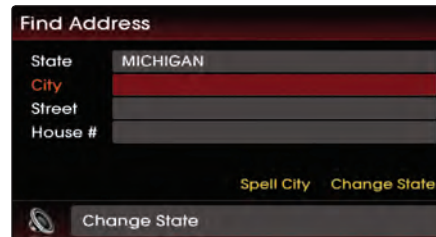

5. Say the city name.

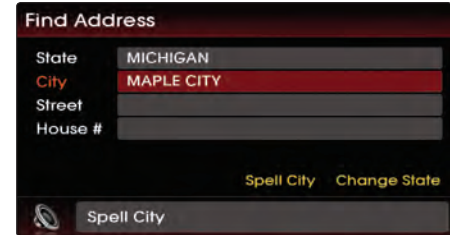

6. Say the street name.

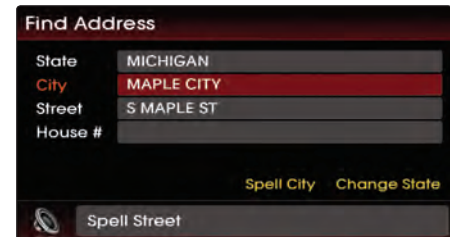

7. Say the House number.

Here, the range which can be inputted will be displayed.

8. Say "Start guidance" if guidance to the selected position is desired, or say "Show map" to verify the location of the selected position on the map.

INFORMATION

Spell recognition



- It is possible to search the state, city, street names through the text line inputted by the user.
- To enter spell search mode, say the "Spell state, city, street names" command as displayed on the screen.
- Text lines can be inputted continuously.

Pick-List(n-best list)



- If there are more than one voice result, then a pick-list which can be selected by the user will be displayed.
- There may be more than one list page. The desired page can be viewed by using commands such as "next page" or "previous page".
- Here, the "Line + number" voice command can be used to select the desired result, such as "Line one". Pressing the desired result is not supported.
- Also, selectable areas will be highlighted in yellow, allowing the user to easily see which results can be selected.


Find nearest POI

Sets a POI near the current position as the destination for route guidance through POI category search.

1. Press the  key on the Steering wheel remote controller.
2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "find nearest POI".



3. Select the desired main category.

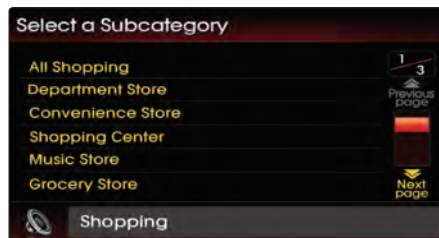

4. Select the desired sub category.



5. Select the desired POI from the list and say the line number for the corresponding menu. Ex) "Line 1".



6. Say "Start guidance" if guidance to the selected position is desired, or say "Show map" to verify the location of the selected position on the map.

Find nearest <POI name>

Sets a POI near the current position as the destination by directly inputting the POI name for route guidance.

1. Press the  key on the Steering wheel remote controller.


2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Find nearest Parking".

3. Select the desired POI from the list and



say the line number for the corresponding menu.

e.g) "Line 2".

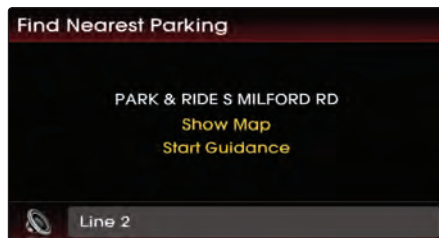

4. Say "Start guidance" if guidance to the selected position is desired, or say "Show map" to verify the location of the selected position on the map.

Destination POI by phone number

Sets the destination by searching the phone number of the facility.

1. Press the  key on the Steering wheel remote controller.
2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Destination POI by Phone number".




3. Input the 10 numbers for the phone number.

INFORMATION


Continuous recognition of phone numbers is possible, and the recognized result will be displayed in block units. To correct a block unit, say "correct". To delete the entire result, say "delete". To have the input read back, say "repeat".



4. Say "Show list" to view the resulting search list.

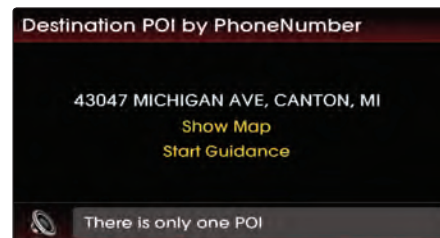

5. Select the desired location from the list and say the line command.

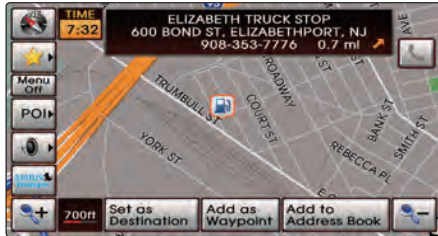

6. Say "Start guidance" if guidance to the selected position is desired, or say "Show map" to verify the location of the selected position on the map.


Find emergency <Category> :

Searches for an emergency facility which is nearby the current position and sets it as the destination for route guidance. Emergency facilities are police stations, hospitals, and dealerships.

1. Press the  key on the Steering wheel remote controller.
2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say the voice command.
Ex) "Find emergency hospital"



3. Select the desired location from the list and say the line command.

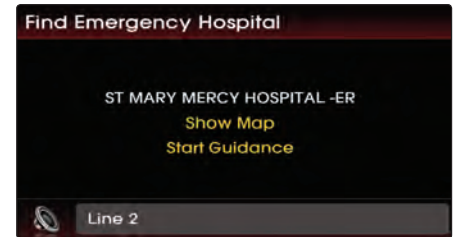


4. Say "Start guidance" if guidance to the selected position is desired, or say "Show map" to verify the location of the selected position on the map.

PART 4 VOICE COMMAND SYSTEM

Destination by address book

Sets one of the list of previously registered addresses in the address book for the user as the destination.


1. Press the  key on the Steering wheel remote controller.
2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Destination by address book".

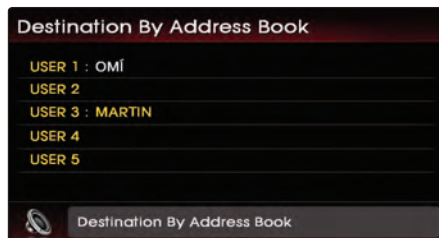

3. Select the desired user name (Address book name).



4. Select the desired location from the list and say the line command.

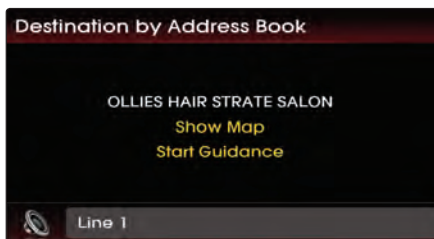

5. Say "Start guidance" if guidance to the selected position is desired, or say "Show map" to verify the location of the selected position on the map.


Previous destination

Sets one of the previous destination as the current destination.

1. Press the  key on the Steering wheel remote controller.
2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Previous destination".



3. Select the desired location from the list and say the line command.

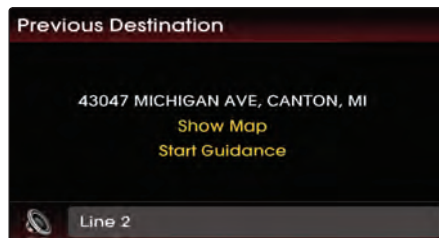

4. Say "Start guidance" if guidance to the selected position is desired, or say "Show map" to verify the location of the selected position on the map.

Previous start point

Sets the previous start point as the current destination.

1. Press the  key on the Steering wheel remote controller.
2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Previous start point".



3. Say "Start guidance" if guidance to the selected position is desired, or say "Show map" to verify the location of the selected position on the map.

Go home

Sets the previously registered home address as the destination for route guidance.

1. Press the  key on the Steering wheel remote controller.
2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Go home".

Destination by memory point <1 to 5>

Sets a previously registered memory point as the destination for route guidance.

1. Press the  key on the Steering wheel remote controller.
2. Once the  icon changes into the  icon on the pop-up screen with a beep sound, say "Destination by memory point 1".

MEMO

PART 5

BLUETOOTH® WIRELESS TECHNOLOGY HANDSFREE

Before using the Bluetooth® wireless technology Handsfree

What is Bluetooth® wireless technology ?

- Bluetooth® wireless technology allows wireless transmission of information between PC, mobile phones, headsets, PDAs, printers and other devices within close ranges by using 2.45GHz frequency short-distance wireless telecommunication technologies.
- Within this vehicle, users can make hands-free calls, transmit mobile phone data, and play audio streaming files by connecting a mobile phone with the system.



Bluetooth® wireless technology is a trademark owned by Bluetooth® wireless technology SIG, Inc.

Functions supported by Bluetooth® wireless technology Handsfree

- Pairing mobile phones (Up to 5 phones)
- Connecting/disconnecting mobile phones
- Making/Answering phone calls
- Downloading a Phone Book
- Downloading a Call history list
- Playing music saved in a Bluetooth phone in the vehicle


Some functions may not be supported in some mobile phone.

Converting Bluetooth® wireless technology Handsfree mode


Converting from Audio/Navigation mode to Bluetooth® Handsfree mode



1. While in Audio mode or Navigation mode, press the **PHONE** key or the  key on the steering wheel.

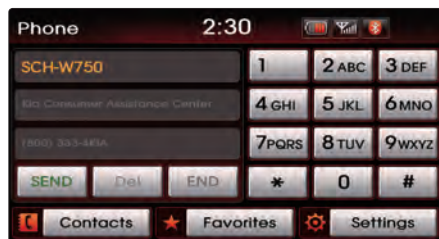

2. The system will change to Bluetooth® wireless technology Handsfree mode and display the PHONE screen.

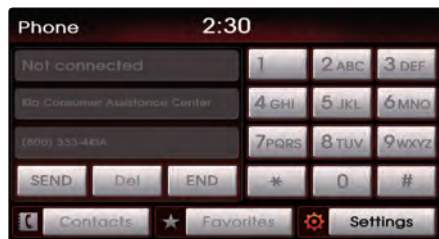


3. The following screen will become displayed if no mobile phone has been connected.

Converting from Bluetooth® wireless technology Handsfree mode to Audio/Navigation mode



1. While in Bluetooth® wireless technology Handsfree mode, press an Audio/Navigation mode key, such as **FM/AM** or **MAP VOICE**.

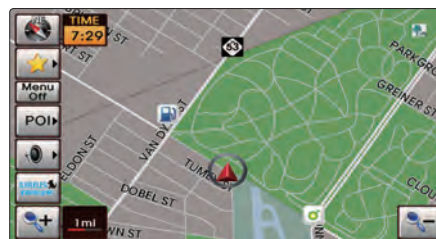

2. The corresponding mode will be displayed.

i INFORMATION

Most of the functions of the Audio or SETUP modes are not supported while on a Bluetooth® wireless technology Handsfree call. The call volume and Navigation (MAP VOICE, DEST, ROUTE) screens can be operated.


Pairing and connecting a Bluetooth® wireless technology phone

⚠ CAUTION!


- Bluetooth® connection may become intermittently disconnected in some mobile phones. Follow the following steps to try again.

1. Turn the Bluetooth® function within the mobile phone ON/OFF and try to connect again.
 2. Turn the mobile phone power ON/OFF and try to connect again.
 3. Completely remove the mobile phone battery, reboot, and then try to connect again.
 4. Reboot the Audio Navigation System and try to connect again.
 5. Delete all paired devices from the mobile phone and Audio Navigation System and re-pair for use.
- The hands-free call volume and quality may differ depending on the mobile phone.

Pairing a mobile phone

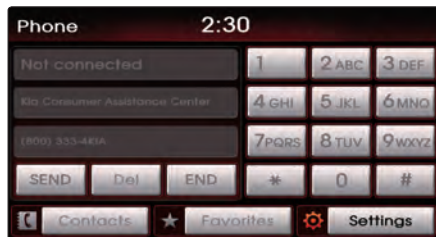

1. Press the **Settings** button on the PHONE screen.

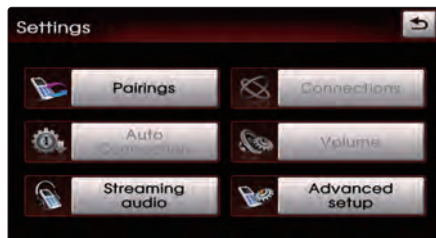

2. Press the **Pairings** button on the Settings screen.



3. The list of currently paired phones will be displayed. Press the **Add to** button to pair a new mobile phone.

i INFORMATION

For safety reasons, pairing a Bluetooth® wireless technology phone is not possible when the vehicle is in motion. Park the vehicle in a safe location to pair a new phone. It is possible to pair up to five mobile phones. In order to pair a new phone when there are already five mobile phones paired, you must first delete one of the previously paired phones.



4. From the Bluetooth® wireless technology device list within the mobile phone, add the car handsfree. The default name of the car system is KIA MOTORS.

For more information on registering Bluetooth® wireless technology devices from the mobile phone, please refer to the mobile phone user's manual.

i INFORMATION

While conducting a Bluetooth® wireless technology device search from the mobile phone, operating to another screen will prevent the car handsfree from being found in the mobile phone. Always conduct searches for Bluetooth® wireless technology devices with the Search Bluetooth® wireless technology device screen displayed.



5. When pairing the car handsfree from the mobile phone, a passkey input window will become displayed on the mobile phone screen. Input the passkey set within the car system into the mobile phone input window. (The factory state passkey is 0000.) As shown in the figure, once the passkey becomes successfully inputted, the Bluetooth® wireless technology connection between the car system and mobile phone will start.




6. Once Bluetooth® wireless technology connection is successful, the name of the connected mobile phone will become displayed on the PHONE screen and Bluetooth® wireless technology handsfree functions will operate.


i INFORMATION

Some functions may not be supported due to limited Bluetooth® wireless technology compatibility between the car system and mobile phone.

Deleting a paired phone

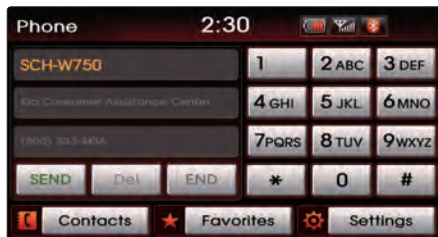


1. Press the **Settings** button on the PHONE screen.

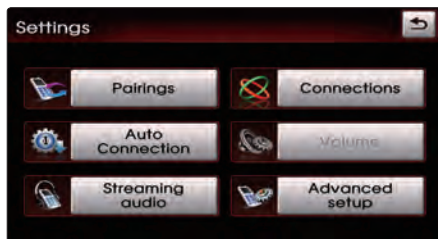

2. Press the **Pairings** button on the Settings screen.



3. The list of currently paired phones will be displayed. Select the phone you wish to delete from the list and press the **Delete** button.

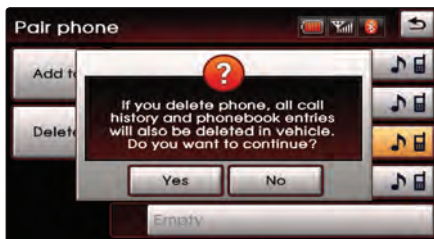

4. A pop-up asking whether you wish to delete the paired phone will be displayed. Press the **Yes** button to delete the paired phone and the **No** button to cancel.

⚠ CAUTION!


A mobile phone cannot be deleted if it is currently connected to the car system.

To delete the phone, first disconnect the mobile phone and try again.

Connecting a mobile phone



1. Press the **Settings** button on the PHONE screen.

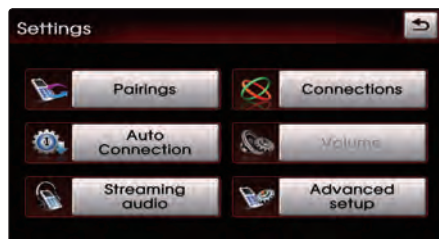

2. Press the **Connections** button on the Settings screen.



3. The list of currently paired phones will be displayed. Select the phone you wish to connect from the list and press the **Connect** button.

i INFORMATION

When there are no paired phones, pair the mobile phone through [Settings>Pairings>Add to]. For more information on pairing mobile phones, refer to the user's manual [Pairing and Connecting a Bluetooth phone > Pairing a mobile phone].



4. The Bluetooth connection between the car system and mobile phone will start.




5. Once Bluetooth connection is successful, the name of the connected mobile phone will become displayed on the PHONE screen and Bluetooth handsfree functions will operate.




6. If the connection between the mobile phone and Bluetooth® wireless technology fails, the following pop-up will be displayed. If problems occur while connecting Bluetooth® wireless technology, check for the following conditions.

- Whether the mobile phone you wish to connect is in the vicinity of the car system
- Whether the power of the mobile phone Bluetooth® wireless technology has been turned off
- Whether the mobile phone Bluetooth® wireless technology has been set to hidden state
- Whether there are Bluetooth® wireless technology compatibility issues between the car system and another mobile phone

Disconnecting a mobile phone

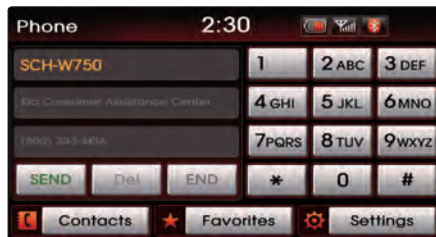

1. Press the **Settings** button on the PHONE screen.

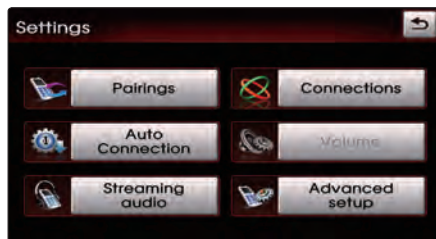

2. Press the **Connections** button on the Settings screen.



3. The list of currently paired phones will be displayed. Select the phone you wish to disconnect from the list and press the **Disconnect** button.




4. A pop-up asking whether you wish to disconnect the mobile phone will be displayed. Press the **Yes** button to disconnect the mobile phone and the **No** button to cancel.

Bluetooth® wireless technology Handsfree screen layout


Bluetooth® wireless technology Handsfree screen and functions

When there is no mobile phone connected

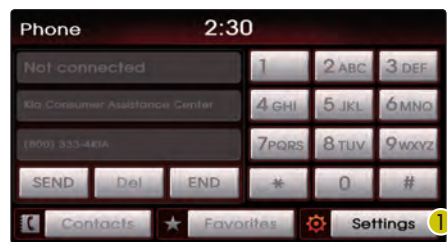

- 1 Settings : The user can set desired settings for the Bluetooth® wireless technology handsfree, such as pair/delete mobile phone, connect/ disconnect mobile phone, set call volume, change device name and change passkey.


When a mobile phone is connected

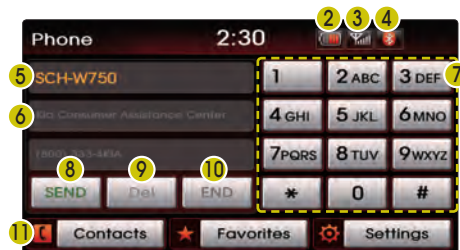

- 2 Phone battery charge status : Displays the battery charge status of the connected mobile phone. The battery charge status may not be displayed in some mobile phones.
- 3 Signal strength : Displays the mobile phone signal strength. The signal strength may not be displayed in some mobile phones.
- 4 Bluetooth® wireless technology connection state : Becomes displayed when a Bluetooth® wireless technology phone has been connected with the car system.
- 5 Name of connected mobile phone : Displays the name of the connected mobile phone.

- 6 Phone number input window : Displays the inputted phone number.
- 7 Dial : Input the phone number through the dial pad.
- 8 SEND : If a number has not been entered the phone number input window, pressing the send button displays the call history list screen.
- 9 Del : Deletes the inputted number one digit at a time.
- 10 END : If a number has been inputted, then erases the entire number.
- 11 Contacts : Displays the phone book screen. The user can search previously saved phone numbers. The phone contact list may not be displayed in some mobile phones.


When receiving an incoming call

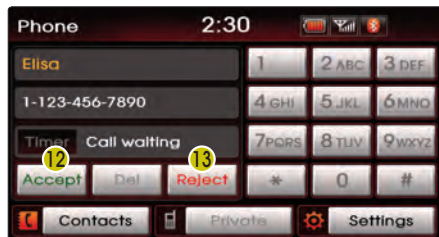

12 Accept : Accepts the incoming call.

13 Reject : Rejects the incoming call.

When already on a call

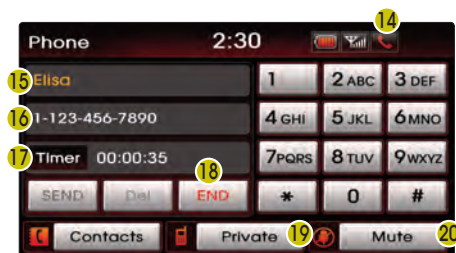

14 Busy icon : When already on a call, displays an icon shaped like a receiver.

15 Name of incoming caller : Displays the name of incoming caller. The name of the incoming caller will not be displayed if the caller's phone number has not been previously registered in the phone book.

16 Number of incoming caller : Displays the number of the incoming caller.

17 Call state : Displays the call state, such as talk time, phone connection, and end time.

18 END : Ends the call.

19 Private : When talking on the car hands-free, use this function to switch the call to the mobile phone.



20 Mute : Use this function to mute the outgoing volume. Pressing the **Mute** button will display the  at the top right side of the screen and the caller will not be able to hear the conversation taking place in the car. Press the **Mute** button again to release the Mute function.

When there is a call waiting



21 Switch : Use this button to switch between callers when there are calls on call waiting.


22 END : Use this button to end the calls with all callers.

Making a call

Making a call by dialing a phone number



1. Use the number pad on the right side of the PHONE screen to input the number you wish to call.

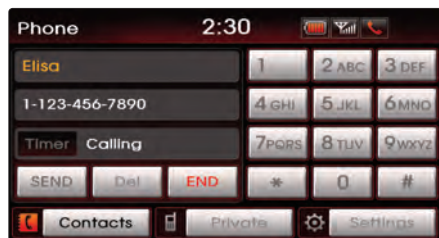

2. Press the **SEND** button or the  key on the steering wheel to make the call.

INFORMATION

To modify, press the **Del** button to delete the inputted number one digit at a time.

Press the **END** button or the  key on the steering wheel to cancel the call.

Making a call from Speed Dial




1. Use the number pad on the right side of the PHONE screen to input a speed dial number.

INFORMATION

Only speed dial numbers already stored on the mobile phone can be used for speed dial calls.

Up to 2-digit speed dial numbers are supported.

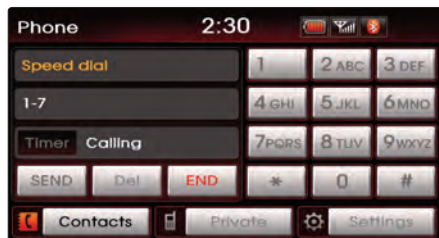


2. Press the **SEND** button or the  key on the steering wheel to make the call.

INFORMATION

For 2-digit speed dial numbers, press and hold the 2nd digit to make a call to the speed dial number.


Making a call by redialing

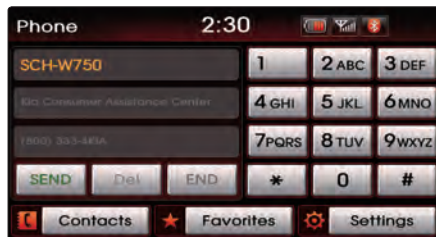

1. Press and hold (over 0.8 second) the **SEND** button on the PHONE screen or the  key on the steering wheel.

INFORMATION

Redialing is not possible when there is no call history or the call history list is being downloaded from the mobile phone. When there is no call history list, the **SEND** button will be inactive.

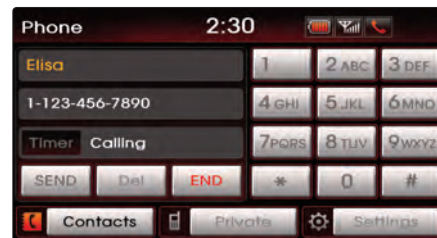


2. The recently called number is redialed.

INFORMATION

It is not possible to display the AUDIO mode and Settings screen when on a phone call. Only the call volume and Navigation (MAP, DEST, ROUTE) screens can be operated.

Answering a call

Answering an incoming call

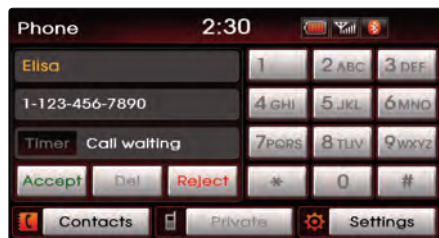


1. The following screen will be displayed when you receive an incoming call.



2. To answer the incoming call, press the **Accept** button or the  key on the steering wheel.

Rejecting an incoming

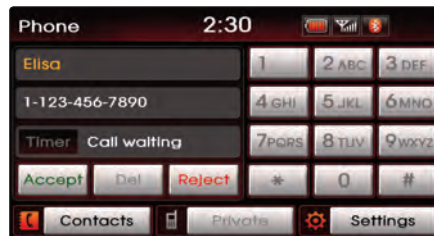

1. The following screen will be displayed when you receive an incoming call.




2. To reject the incoming call, press the **Reject** button or the  key on the steering wheel. The incoming call will be rejected.

INFORMATION

Upon receiving a call, the [Reject] function may not be supported in some mobile phones.

Operating menus during a call

Switching call to the mobile phone

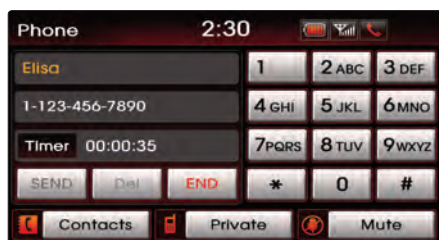

1. If you wish to switch the call to the mobile phone while talking on the car handsfree, press the **Private** button or press and hold (over 0.8 second) the  key on the steering wheel.



2. As shown, the call will be switched to the mobile phone.


INFORMATION

If you wish to switch the call to the car handsfree while talking on the mobile phone, press the **Use handsfree** button or press and hold (over 0.8 second) the  key on the steering wheel. The call will be switched to the car handsfree.

Activating Call waiting



1. If another person calls while already on a call, the following screen will be displayed.
2. Press the need screen with **Accept** button or the  key on the steering wheel to receive the incoming call by switching to the new caller.

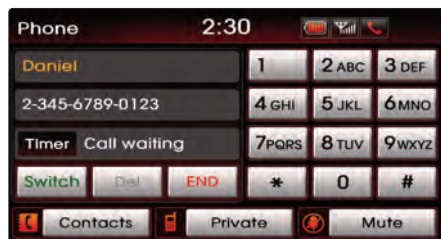

3. To switch again to the other caller, press the **Switch** button or the  key on the steering wheel. The other call will be received and the previous call will switch back to call waiting.


INFORMATION

Press the **End** button or the  key on the steering wheel to end the current call and call waiting.

Ending a call




1. To end a call, press the **End** button or the  key on the steering wheel.

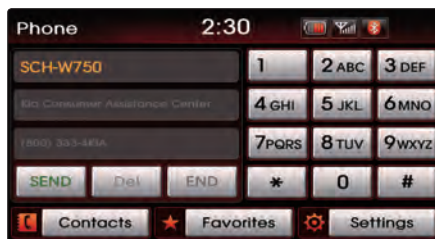


2. The call will be ended.

Phone Book

Making a call from the Phone book

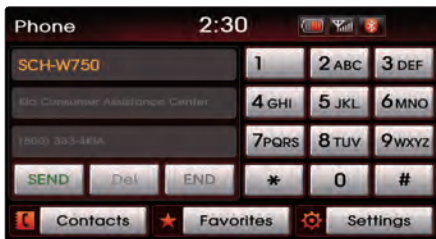


1. Press the **Contacts** button on the PHONE screen.

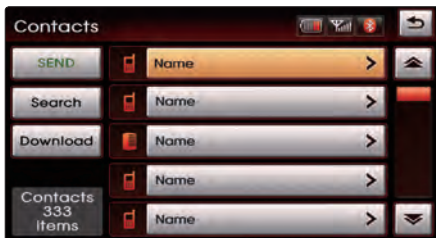


2. The phone book list will be displayed.

i INFORMATION

- The system may begin to slow down when downloading the phone book in some mobile phones.
- Upon connecting a mobile phone, the phone book lists saved in the mobile phone will automatically be downloaded (Maximum 1000 entries). The phone book download function may not be supported in some mobile phones.
- If you do not wish to automatically download the mobile phone contacts to the vehicle, turn the Contacts Sync setting OFF. (Phone>Settings>Advanced setup>Contacts Sync)

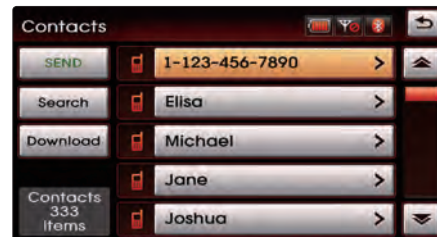

3. Select the number you wish to call from the phone book list and press the **SEND** button.

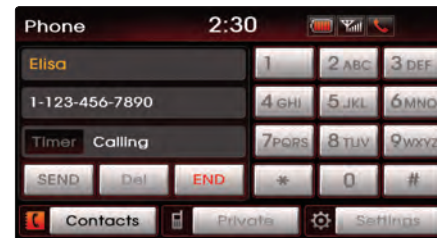

4. The call will be made to the selected number.


i INFORMATION

- When there are more than 2 numbers saved in one phone number list, if the list is repeatedly selected, the registered phone numbers will be displayed sequentially on the list.
- The Mobile Phone/Office/Home categories received via the mobile phone may differ from the information actually stored in the mobile phone.
- Select the phone number you wish to connect by repeatedly selecting the phone number list and press the **SEND** button to make the call to the selected number.


Searching the Phone Book



1. Press the **Contacts** button on the PHONE screen.

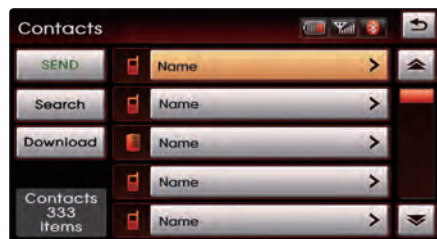


2. Press the **Search** button on the Contacts screen.

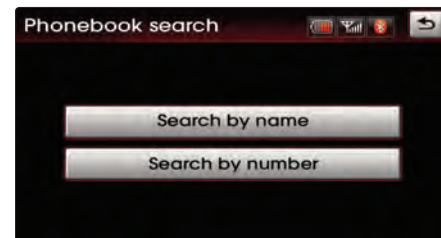

3. Phone numbers can be searched by either **Search by name** or **Search by number**. From the two methods, select the search method you wish to use.


Searching by name

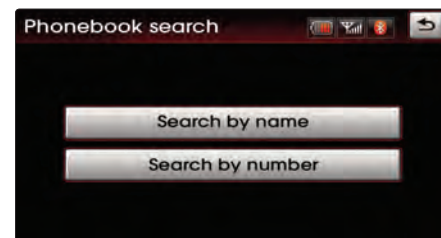

4. Press the **Search by name** button on the Phonebook search screen.




5. Input the name you wish to search and press the **Done** button.

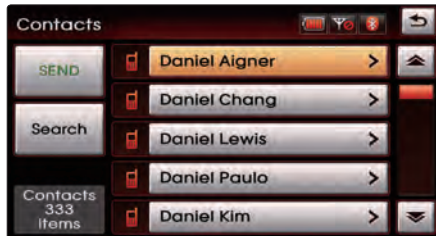

6. The search results will be displayed on the screen.

Searching by number

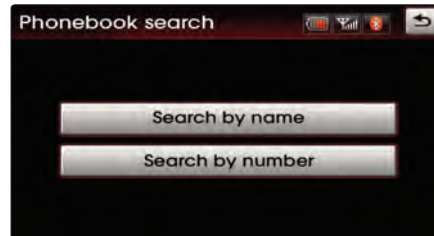

4. Press the **Search by number** button on the Phonebook search screen.




5. Input the phone number you wish to search and press the **Done** button.



6. The search results will be displayed on the screen.


Downloading Mobile Phone Contacts

1. Press the **Download** button in the Contacts screen.

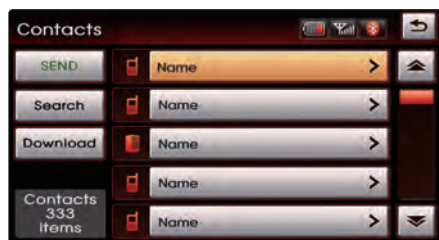

i INFORMATION

- Time required to download contacts may differ depending on your mobile phone model or data size.

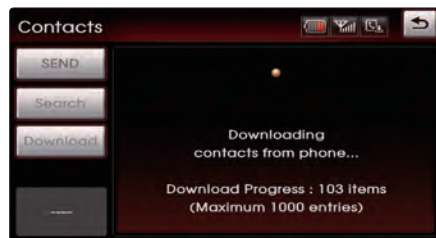

2. After Pairing is complete, a contacts download request is sent to your mobile phone. Some phones require additional confirmation. Please check your phone and accept the download request if necessary. (ex: Android and Blackberry phones)

i INFORMATION


- Upon downloading mobile phone contacts, the previous data is deleted.
- This feature may not be supported in some mobile phones.
- When using Contacts Sync, the contacts and call histories within your mobile phone are automatically downloaded once Bluetooth® is connected.
- To turn this feature off, go to [Phone>Settings>Advanced Setup>Contacts Sync]

- For contacts, up to 1,000 entries can be downloaded to each paired Bluetooth® device.
- Contacts can be viewed only when a Bluetooth® device has been connected.
- When downloading contacts, the [] icon will be displayed within the status bar.
- It is not possible to download contacts when the contacts download setting has been turned off within your Bluetooth® device.
- Some devices may also require device authorization to download contacts. If downloading cannot be normally conducted, check the Bluetooth® device settings or whether download confirm popup is displayed on the phone screen.
- The download feature may not be supported in some mobile phones. Check to see that the Bluetooth® device supports the download feature.
- For more information on mobile phone compatibility, visit the Kia Motor Company website (<http://www.kia.com/bluetooth>).

Favorites


Calling Favorites

1. In Phone screen ► Press **Favorites** ►
Select the desired Favorite ► Call is connected.

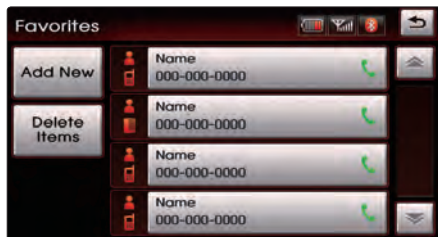

Adding New Favorites

2. In Favorites screen ► Press **Add New** ►
Select items you want to Favorite ► Press **Add**

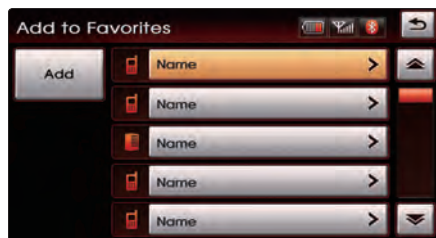


i INFORMATION

- Up to 10 Favorites can be added and Favorites can be used only when a Bluetooth® device has been connected.


Selecting/Deleting Favorites

1. In Favorites screen ► Press **Delete Items** ►
Select items you want to delete and Press **Delete** ► Press **Yes**.

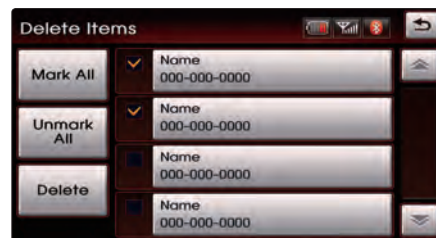

Call History List


Making a call from Call history

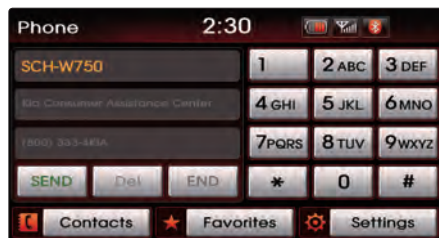

1. Press the **SEND** button on the PHONE screen or press the  key on the steering wheel.



2. The call history list will be displayed. Select the number you wish to call from the call history list and press the **SEND** button.

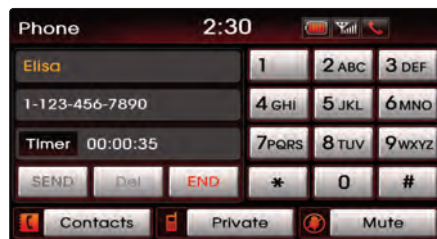

3. The call will be made to the selected number.

Sorting call history



1. The call history can be displayed by sorting the incoming calls, outgoing calls and missed calls.
2. When pressing the **Dialed**, **Received**, or **Missed** button, the corresponding call history list will be displayed.

Dialed number



Missed number



Received number



INFORMATION

If there are no entries saved in the **Dialed**, **Received**, or **Missed** lists, the corresponding button will be inactive. Up to 20 entries can be saved in each list.

Phone Music

Before playing Phone music

Music saved in the mobile phone can be played in the car through Bluetooth® wireless technology audio streaming.

Phone music can be played only when a Bluetooth® wireless technology phone has been connected. To play phone music, connect the Bluetooth® wireless technology phone to the car system. For more information on connecting Bluetooth® wireless technology, please refer to the user's manual [Pairing and Connecting a Bluetooth® phone]. If the Bluetooth® wireless technology is disconnected while playing phone music, the music will be discontinued.

The audio streaming function may not be supported in some mobile phones.

Only one function can be used at a time between the Bluetooth® wireless technology handsfree or Phone music function.

For example, if you convert to the Bluetooth® wireless technology handsfree while playing Phone music, the music will be discontinued. Playing music from the car is not possible when there are no music files stored in the mobile phone.

Starting Phone Music



1. Repeatedly press the **MEDIA** key on the front panel or the **MODE** key on the steering wheel to enter Phone music mode.


i INFORMATION

Each press of the **MEDIA** key on the front panel will change the function in the order of DISC → USB or iPod → AUX → Phone Music → DISC.

Each press of the **MODE** key on the steering wheel will change the audio mode in the order of FM1 → FM2 → AM → SIRIUS1 → SIRIUS2 → SIRIUS3 → DISC → USB or iPod → AUX → Phone Music → FM1.

It is not possible to enter Phone music mode if the mobile phone is not connected or if the audio streaming setting within Bluetooth® wireless technology handsfree settings has been set to [Disable streaming audio].

For more information on audio streaming setting, please refer to the user's manual [Bluetooth settings > Setting Audio streaming].

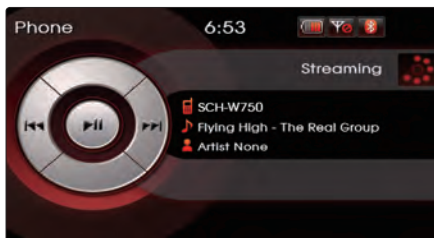


2. The Phone music screen is displayed.

i INFORMATION

While music saved in the mobile phone will automatically begin playing after converting to the Phone music screen, this music player function may not be supported in some mobile phones.


If music does not begin playing even after converting to the Phone music screen, try starting the music directly from the mobile phone.

Phone music screen layout

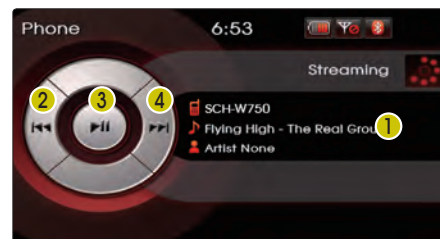

- ① Information Bar : displays information for the currently playing song.
- ② File Down button : plays the previous song.
- ③ Play/Pause button : Plays/pauses the song.
- ④ File Up button : plays the next song.

Selecting Phone music files

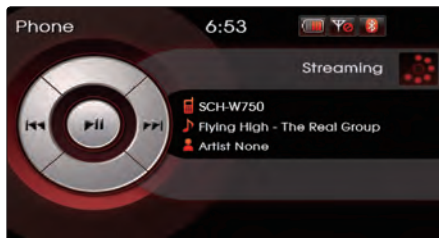

1. Press the ,  buttons on the Phone music screen or the  or  keys on the system.

The previous or next song will be played each time the button or key is pressed.

INFORMATION

The file selection function may not be supported in some mobile phones.

Bluetooth® settings

Pairing and connecting a mobile phone

For more information on pairing and connecting a mobile phone, please refer to [Pairing and Connecting a Bluetooth® phone].


Setting mobile phone auto connect priority

INFORMATION


After turning on the car ignition and the system is booted up, the Bluetooth® connection between the car system and mobile phone is automatically made.

The Bluetooth® connection will be conducted in the order of mobile phone priority.

The auto connect priority will be supported only for previously paired mobile phones.

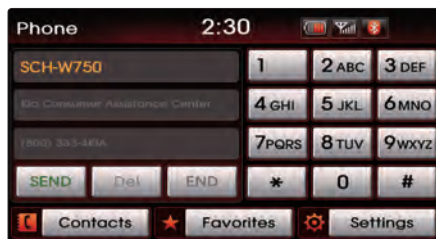

1. Press the **Settings** button on the PHONE screen.

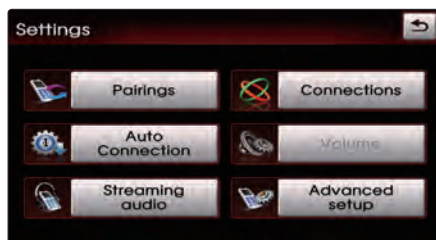

2. Press the **Auto Connection** button on the Settings screen.




3. Select the device to connect automatically upon startup.


INFORMATION

When the user selected phone cannot be connected, the system automatically attempts to connect the most recently connected phone. When the most recently connected phone cannot be connected, the system attempts to connect all paired phones continuously. If you do not want to connect automatically, turn off Bluetooth within your mobile phone.

Setting Handsfree volume

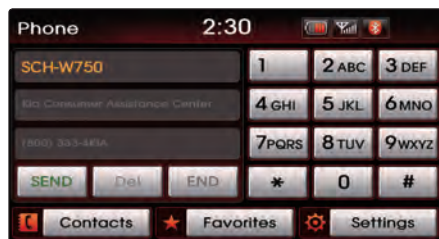

1. Press the **Settings** button on the PHONE screen.

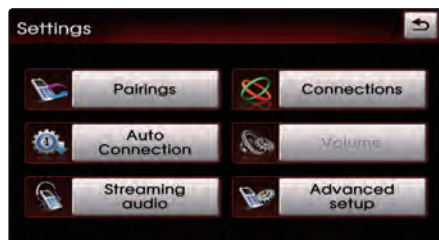

2. Press the **Volume** button on the Settings screen.

i INFORMATION

The Bluetooth® handsfree volume can be adjusted only when a mobile phone has been connected.

The **Volume** cannot be set if no mobile phone has been connected.



Use the **<**, **>** buttons to set the desired volume on the Phone volume screen.
Press the **Done** button to save.

i INFORMATION

While on a call, turning the **POWER/VOL** knob to the left/right or pressing the **VOL+**, **VOL-** keys on the steering wheel will also adjust the call volume.


Set the incoming call volume accordingly.


Setting Audio streaming

1. Press the **Settings** button on the PHONE screen.



2. Press the **Streaming audio** button on the Settings screen.

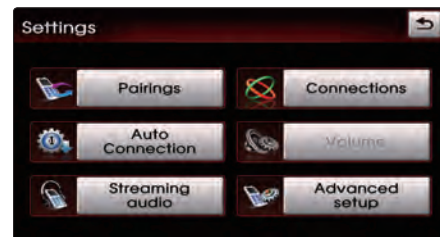

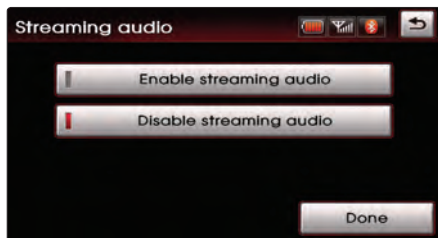

3. Streaming audio setting is selected.

i INFORMATION


Enable streaming audio: repeatedly press the **MEDIA** key or the **MODE** key to enter Phone music mode. Phone music can be played through Bluetooth® audio streaming.

Disable streaming audio: even if the **MEDIA** key or the **MODE** key is repeatedly pressed, will not be available.


Phone music through Bluetooth® audio streaming is not supported.

Advanced settings

Bluetooth® advanced settings can be changed. Enter advanced settings through the following way.

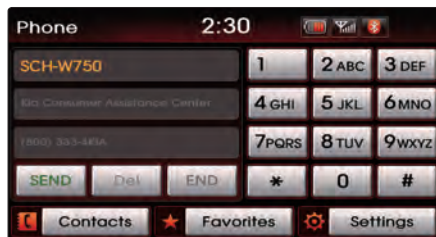


1. Press the **Settings** button on the PHONE screen.

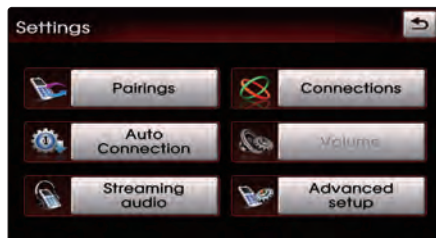

2. Press the **Advanced setup** button on the Settings screen.


i INFORMATION

For safety reasons, operation of Advance setup is not possible when the vehicle is in motion. Please park in a safe place to make changes to Advanced setup.

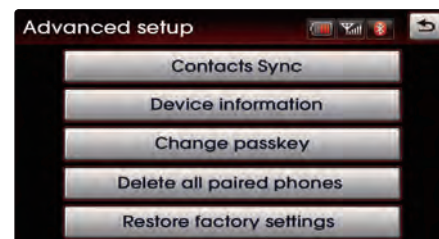

3. The Advanced setup screen will be displayed. In Advance setup, the following four settings can be made.

Setting Contacts Auto Download (Sync)

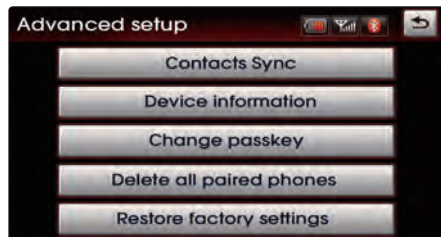

1. While in Advanced setup press the **Contacts Sync** button.




2. After turning Contacts Sync ON/OFF, press the **Done** button.


INFORMATION

- If Contacts Sync is turned ON, the contacts and call history in your mobile phone will automatically be downloaded to the vehicle each time you connect a Bluetooth® device.


Searching and modifying my device properties

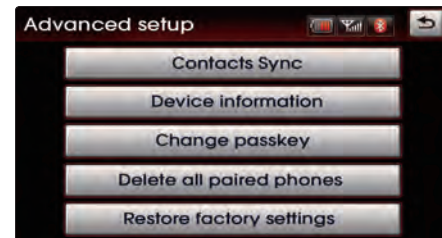

1. Press the **Device information** button on the Advanced setup screen.

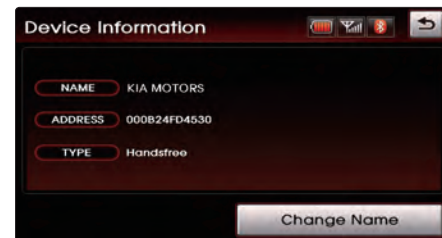

2. Displays the Device information such as the name and address of the car system. To modify the device name, press the **Change name** button.

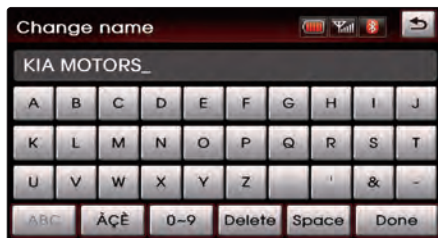


3. Use the key pad to input the Device name you wish to modify.



4. After inputting is complete, press the **Done** button to save.

Changing passkey

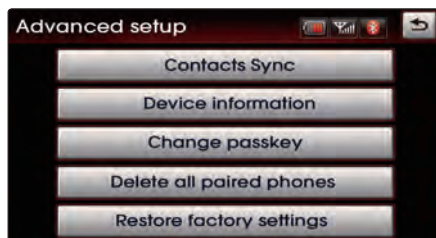

1. Press the **Change passkey** button on the Advanced setup screen.




2. Once the Change passkey screen is displayed, input the desired passkey and press the **Done** button.

i INFORMATION

The passkey is a 4-digit authentication code used for the Bluetooth® connection between the mobile phone and car system. The default passkey is set to 0000.


Deleting all paired phones

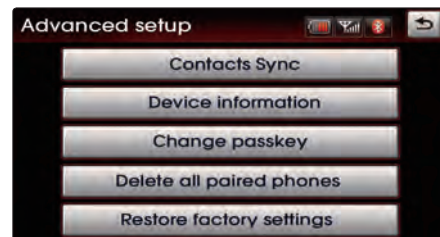

1. Press the **Delete all paired phones** button on the Advanced setup screen.




2. A pop-up asking whether you wish to delete all paired phone will be displayed. Press the button to delete all paired phones or the button to cancel.

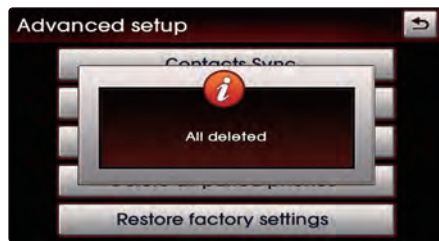

3. If button is pressed, all currently paired phones will be deleted.

Initializing Bluetooth® handsfree

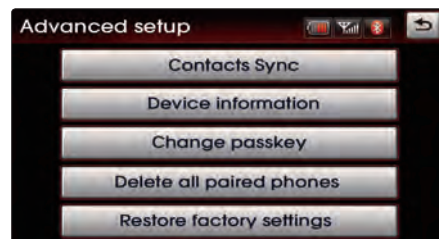


1. Press the button on the Advanced setup screen.



2. A pop-up asking whether you wish to initialize the Bluetooth® handsfree will be displayed. Press the button to initialize the Bluetooth® handsfree system and the button to cancel.

INFORMATION

Upon initializing the Bluetooth® handsfree, the entire paired phone list will be deleted and all Bluetooth® related settings will be restored to factory state.

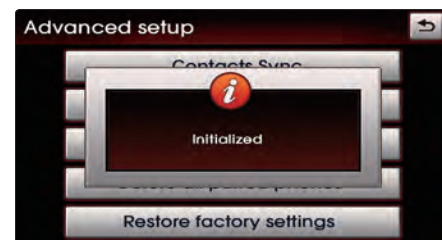

3. If is pressed, the Bluetooth® handsfree settings will be initialized.

Important information

About pairing mobile phones

Q. I cannot search for mobile phones through the car system. What is the cause?

A. Check to see whether the mobile phone you wish to connect supports Bluetooth® wireless technology function. If your mobile phone supports Bluetooth® wireless technology, check to see that whether the Bluetooth® wireless technology settings in the mobile phone have been set to hidden state or if the Bluetooth® wireless technology power has been turned off. If the device has been set to hidden, release the hidden state and if the Bluetooth® wireless technology power has been turned off, turn the power ON and try searching again.

Q. What is the difference between pairing a mobile phone and connecting a mobile phone?

A. Pairing is the process of creating a secure communication connection between the mobile phone and the car Bluetooth® wireless technology system.

Through a two-way passkey between the car system and mobile phones, up to 5 mobile phones can be paired with the car system. The paired mobile phone will remain paired with the car system until the user deletes it manually.

In addition, the call history lists and phone number books saved in each mobile phone will also be maintained until the paired phone is deleted. For more information on pairing mobile phones, please refer to the manual [Pairing and Connecting a Bluetooth phone > Pairing a mobile phone].

Connecting a mobile phone to Bluetooth® wireless technology by selecting the desired mobile phone from the paired phones.

Within the car system, only one Bluetooth® wireless technology phone can be connected at one time.

For more information, please refer to the manual [Pairing and Connecting a Bluetooth phone > Pairing a mobile phone].

Q. What is a Passkey?

A. A passkey is an authentication code used for two-way communication of the car system and the mobile phone.

Only 4-digit numbers can be used as passkeys. Passkeys are registered only once when pairing the phone number for the first time. The factory-set passkey is 0000.

About making/answering phone calls

Q. How can I answer a call?

A. When you receive an incoming call, press the  key on the steering wheel or the **Accept** button on the PHONE screen to answer. To reject the incoming call, press the  key on the steering wheel or the **Reject** button on the PHONE screen.

Q. What should I do if I am talking on the Handsfree but wish to switch the call to the mobile phone?

A. To switch the call to the mobile phone, press the **Private** button on the PHONE screen or press and hold (over 0.8 second) the  key on the steering wheel. If you wish to switch the call back to the car handsfree, press the **Use handsfree** button on the PHONE screen or press and hold (over 0.8 second) the  key on the steering wheel.

About Bluetooth® wireless technology device environment

Q. What is the range for Bluetooth® wireless technology wireless connection?

A. The wireless connection range is within approximately 30 feet.

Q. How many mobile phones can be paired?

A. It is possible to pair up to five phones with the car system.

Q. What is the reason why the call quality deteriorates?

A. First, check to see the signal strength of the mobile phone. The call quality may deteriorate when the signal strength is low. Call quality may also deteriorate if metal objects, such as drink cans, are placed near the mobile phone.


CAUTION!

Mobile Phone Compatibility

Depending on the manufacturer, product and product specification, some mobile phones functions may not be supported or may not operate to specification. Carefully read the cautions listed below.

- The occurrence of problems upon using mobile phones may be caused by the mobile phone and not by the Audio / Navigation unit.
- Even mobile phones which support Bluetooth® wireless technology function may not operate properly if the mobile phone connection has been locked. Release the connection lock and try connecting the mobile phone with the system again.
- The Mobile phone battery icon and signal strength icon may not be properly displayed depending on the type of mobile phone.
- Call waiting is supported only when connected mobile phones support this feature. The call waiting pop-up may not be displayed in some mobile phones.
- Audio streaming mode will operate only when a Bluetooth® wireless technology phone has been connected. Connecting or disconnecting a Bluetooth® wireless technology phone while audio streaming is operating will stop music play.
- The audio streaming function may not be supported in some mobile phones.
- The phonebook may take a prolonged period of time to download or may not operate in some mobile phones. The quality of Bluetooth® wireless technology handsfree calls may differ depending on the mobile phone.

 PART 6
APPENDIX



Troubleshooting guide

Before thinking the product has malfunctioned

- 1. Errors which occur during the operation or installation of the device may be mistaken as a malfunction of the actual device.
- 2. If you are having problems with the device, try the suggestions listed below.
- 3. If the problems persist, contact your KIA dealer.

Problem	Function
There are small red, blue, or green dots on the screen	Because the LCD is manufactured with technology requiring high point density, a pixel deficiency or lighting may occur within 0.01% of total pixels.
The sound or image is not working	• Has the Switch for the vehicle been turned to [ACC] or [ON]? • Has the SYSTEM been turned OFF?
The video is being displayed but sound is not working	• Has the volume been set to a low level? • Has the volume been set on mute?
When the power is turned on, the corners of the screen are dark	• The display looking somewhat darker after prolonged periods of use is a normal phenomenon with LCD panels. It is not a malfunction. • If the screen is very dark, contact your nearest KIA dealer for assistance.
Sound is working from only one speaker	Is the position of FAL/BAL sound controls or volume adjusted to only one side?
Sound and video does not work in AUX mode	Are the audio and video connector jacks fully inserted into the AUX terminal?
The external device is not working	Is the external device connected with a standard connector cable?
The road is missing	Some map data may be missing or incorrect.
The road name is spoken incorrectly	The TTS(Text To Speech) engine speaks the street name based on the phonetic spelling. This will continuously be update with the map database.

Troubleshooting

Problem	Possible Cause	Solution
The power does not turn on.	The fuse is disconnected.	Replace with a suitable fuse. If the fuse is disconnected again, please contact your point of purchase or service center.
	Device is not properly connected.	Check to see that the device has been properly connected.
The image color or tone quality is low.	The brightness, saturation, hue, and contrast levels are not properly set.	Adjust the brightness, saturation, hue, and contrast levels through the display setting.
The video does not work.	The brightness level has been set to the lowest level.	Adjust the brightness to a higher level.
	The device is not properly connected.	Check to see that the device has been properly connected.
The sound does not work.	The volume level is set the lowest level.	Adjust the volume level.
	The connector is not properly connected.	Check the connection state.
	The device is currently fast-forwarding, rewinding, scanning, or playing in slow mode.	The sound will not work when the device is fast-forwarding, rewinding, scanning, or playing in slow mode.
The sound or video quality is low.	The DISC is dirty or scratched.	Wipe off water or dirt from the DISC. Do not use a disc which has been scratched.
	Vibration is occurring from the position in which the conversion switch has been installed.	The sound may be short-circuited and the image distorted if the device begins to vibrate. The device will return to normal operation once the vibration has stopped.
	The color and tone quality of the image is low.	Aging of the video display and deterioration in performance may cause certain quality degradations.

Problem	Possible Cause	Solution
The USB does not work.	USB memory is damaged.	Please use after formatting the USB into FAT 12/16/32 format.
	USB memory has been contaminated.	Remove any foreign substances on the contact surface of the USB memory and multimedia terminal.
	A separately purchased USB HUB is being used.	Directly connect the USB memory with the multimedia terminal on the vehicle.
	A USB extension cable is being used.	Directly connect the USB memory with the multimedia terminal on the vehicle.
	A USB which is not a Metal Cover Type USB Memory is being used.	Use a standard USB Memory.
	A HDD type, CF, SD Memory is being used.	Use standard USB Memory.
	There are no music files which can be played.	Only MP3,WMA file formats are supported. Please use only the supported music file formats.
The iPod is not recognized even though it has been connected.	There are no titles which can be played.	Use iTunes to download and save MP3 files into the iPod.
	The iPod firmware version has not been properly updated.	Use iTunes to update the firmware version and reconnect the iPod with the device.
	The iPod device does not recognize downloads.	Reset the iPod and reconnect with the device.

Map legend

Road color	
Day Road Type	Color
Freeway	
Arterial	
County	
Collector	
Local	
Unpaved local	
Ferry	
Night Road Type	Color
Freeway	
Arterial	
County	
Collector	
Local	
Unpaved local	
Ferry	

POI icons

No	Category	Sub Category	Icon
1	Restaurants	Representation	
2		Fast Food	
3		American	
4		French	
5		Italian	
6		Continental	
7		Mexican	
8		Japanese	
9		Chinese	
10		Korean	
11		Vegetarian Food	
12		Seafood	
13		Latin American	
14		Asian	
15		African	

No	Category	Sub Category	Icon
16	Restaurants	Coffee Shop	
17		Others	
18	Automotive	Representation	
19		Gas Station	
20		Parking	
21		Auto service	
22		Road Assistance	
23		Hyundai Dealership	
24		Automobile Dealership	
25		Auto Parts	
26		Rest Area	
27		Car Wash	
28		Motorcycle Dealership	
29	Travel	Representation	
30		Airport	

PART 6 APPENDIX

POI icons

No	Category	Sub Category	Icon
31	Travel	Hotel	
32		Tourist Information	
33		Travel Agent	
34		Tourist Attraction	
35		Popular Spot	
36		Rental Car Agency	
37		Campground	
38		Ferry Terminal	
39		Bus Station	
40		Local Transit	
41		Train Station	
42		Shopping	
43	Shopping	Department Store	
44		Convenience Store	
45		Shopping Center	

No	Category	Sub Category	Icon
46	Shopping	Music Store	
47		Grocery Store	
48		Bookstore	
49		Electronics	
50		Hardware Store	
51		Gifts	
52		Sporting Goods	
53		Home Specialty Store	
54		Clothing	
55		Shoe Store	
56	Recreation	Representation	
57		Amusement Park	
58		Museum	
59		Cinema	
60		Sports Activities	

No	Category	Sub Category	Icon
61	Recreation	Sports Complex	
62		Golf Course	
63		Winery	
64		Video & Game Rental	
65		Ski Resort	
66		Recreation Area	
67	Financial Service	Other Recreation	
68		Representation	
69		Bank	
70		ATM	
71		Check Cashing Service	
72	Community	Money Transfer	
73		Business Facility	
74		Representation	
75		Police Station	

POI icons

No	Category	Sub Category	Icon
76	Community	Post Office	
77		Library	
78		Court House	
79		Fire Department	
80		Convention Center	
81		City Hall	
82		Civic Center	
83		School	
84		Government Offices	
85		Waste & Sanitary	
86		Utilities	
87	Service	Representation	
88		Hospital	
89		Dentist	
90		Photography	

No	Category	Sub Category	Icon
91	Service	Tax Service	
92		Medical Service	
93		Attorney	
94		Funeral Director	
95		Hair & Beauty	
96		Cleaning & Laundry	
97		Social Service	
98		Physician	
99		Communication	
100		Tailor & Alteration	
101		Mudanzas	

Landmark icons

No	Category	Sub Category	Icon
1	Service	Airport	
2		Park	
3		Golf	
4		University	

INDEX

A

About Bluetooth® device environment ...	5-33
About CDP	2-11
About making/answering phone calls ...	5-33
About pairing mobile phones	5-32
Activating Call waiting	5-14
Adaptive volume control ON/OFF	3-55
Adding to address book:	3-32
Adding waypoints	3-36
Adjusting audio volume.....	1-7
Adjusting Navigation Guidance volume	3-16
Advanced settings	5-28
Answering a call	5-13
Answering an incoming call	5-13
Audio sound setting	1-10
AUX screen	2-33
AUX	2-33

B

Basic operation and setting	1-6
Basic operation for voice command control	4-2
Before playing Phone music	5-23
Before thinking the product has malfunctioned	6-2

Before using the Bluetooth® Handsfree ...	5-2
Bluetooth® Handsfree screen and	5-9
Bluetooth® Handsfree screen layout	5-9
Bluetooth® settings	5-26
Brightness	1-11
Browsing detailed information about the SIRIUS channel	2-10

C

Call History List5-21Connecting a mobile phone	5-7
CD screen and functions	2-15
CD	2-15
CD	4-9
Changing destination position:	3-32
Changing guidance mode while driving ...	3-9
Changing Route option	3-35
Changing the map scale	3-11
Command list of Audio system	4-7
Command list of Help	4-6
Command list of navigation system	4-14
Command list of Phone	4-13
Condition for voice command system	4-2

Condition for voice recognition system ...	1-9
Connecting AUX.....	2-33
Connecting iPod devices	2-23
Control panel	1-3
Controller and functions	1-3
Converting Bluetooth® Handsfree mode ...	5-2
Converting from Audio/Navigation mode to Bluetooth® Handsfree	5-2
Converting from Bluetooth® Handsfree mode to Audio/Navigation mode	5-3
Current position map screen (When setting route)	3-8
Current position map screen (without route)3-7	

D

Deleting a paired phone	5-6
Deleting all avoid areas	3-44
Deleting an address book	3-50
Deleting an address of address book ...	3-49
Deleting avoid area	3-44
Deleting favorite place	3-53
Deleting home address	3-51
Deleting waypoints	3-37
Destination by address book	4-24

Destination by memory point <1 to 5>	4-25
Destination menu screen and functions	3-17
Destination POI by phone number	4-22
Destination	4-15
Disc/Content format compatibility	2-13
Disconnecting a mobile phone	5-8
Display mode	1-11
Display OFF	1-11
Display ON	1-11
Display Picture Frame	1-12
Display setting	1-11
Displaying / Hiding POI icons on the map	3-13
Displaying other POIs other than Q.POI	3-13
Displaying the list	1-8
Displaying/Hiding Q.POI icons	3-13
Downloading the update file.....	

E

Editing an address of address book	3-48
Editing Quick menus	3-12
Editing waypoints	3-36
Ejecting a Disc	2-14
Ending a call	5-15

F

FAD/BAL	1-10
Find address	4-19
Find emergency <Category> :	4-23
Find nearest <POI name>	4-21
Find nearest POI	4-20
Finishing route guidance (Delete Destination)	3-34
FM/AM Radio	2-2
FM/AM Radio	4-7
FM/AM screen and functions.....	2-2
For safe and efficient operation.....	2-11
Functions supported by Bluetooth® Handsfree	5-2
functions.....	5-9

G

Giving voice command	1-9
Go home	4-25
GPS signal reception	3-3
GPS signal reception	3-3

H

Help.....	3-58
Highlighting navigation functions	3-2

How to operate menu by voice command	1-9
How to operate the screen menu	1-7

I

Important information	5-32
Important information about this manual	1-2
Initializing system	3-40
Inputting letters by using screen keyboard	1-7
Inserting a Disc	2-14
Inserting/Ejecting Disc	2-14
Introduction	1-2
iPod screen and functions	2-24
iPod®	2-23
iPod	4-12

L

Landmark icons	6-7
Listening to CD music	2-15
Listening to MP3 music	2-19
Listening to music from iPod	2-24
Listening to the FM/AM radio	2-2
Listening to the SIRIUS radio	2-6
Listening to USB music	2-30

INDEX

M

Main setting	3-40
Making a call by dialing a phone number	5-11
Making a call by redialing	5-12
Making a call from Call history	5-21
Making a call from Speed Dial	5-11
Making a call from the Phone book	5-16
Making a call to POI	3-15
Making a call	5-11
Map legend	6-5
Map screen and functions	3-6
Map	4-14
MP3	2-18
MP3 disc related information and precaution	2-18
MP3 screen and functions	2-19
MP3	4-10
My places setting	3-46
Navigation setting	3-41

O

Operating after searching a destination	3-32
Operating after setting a destination	3-33
Operating menus during a call	5-14

Operating the CDP	2-11
Operating the external devices	2-23
Operating the radio	2-2
Operating USB IMAGE Mode	2-32
Operating voice command	4-2
Others	4-13
Others	4-17

P

Pairing a mobile phone	5-4
Pairing and connecting a Bluetooth® phone	5-4
Pairing and connecting a mobile phone	5-26
Phone Book.....	5-16
Phone music screen layout	5-24
Phone Music	5-23
Playing AUX	2-33
POI Category list	4-18
POI icons	6-5
Precaution for safe usage	1-2
Precautions upon handling discs	2-11
Precautions upon handling USB	2-28
Previous destination	3-6
Previous destination	4-24
Previous start point	4-25

Q

Quick Menu Functions	3-12
----------------------------	------

R

Registering avoid area	3-41
Registering favorite place	3-52
Registering home address	3-51
Registering new address in address book	3-46
Rejecting an incoming	5-13
Re-ordering waypoints	3-38
REW/FF CD track.....	2-16
REW/FF iPod song	2-26
REW/FF MP3 file	2-21
Road color	6-5
Route guidance	3-34
Route guidance screen	3-33
Route Guidance	3-5
Route menu screen and functions.....	3-34
Route overview (View entire route)	3-35
Route Re-calculation	3-5
Route	4-16

S

Scanning SIRIUS broadcast channel	2-10
Scanning CD track	2-17

Scanning FM/AM broadcast frequency	2-4	Setting a destination	3-17	Setting your home	3-18
Scanning MP3 file	2-22	Setting are to avoid	3-43	Setup and Information	3-39
Scrolling map	3-10	Setting as destination / waypoint :	3-32	Setup menu screen and functions.....	3-39
Searching a destination by voice command.....	4-19	Setting Audio streaming	5-26	SIRIUS radio.....	2-6
Searching and modifying my device properties	5-27	Setting avoid streets on route	3-38	SIRIUS Radio	4-8
Searching by name	5-17	Setting Contacts Auto Download (Sync)	5-27	SIRIUS screen and functions	2-6
Searching by number	5-18	Setting detour distance	3-38	Sorting call history	5-19
Searching for a POI	3-26	Setting estimate travel time	3-45	Sorting items from the list	1-8
Searching for a POI by local POI list	3-31	Setting for an Address	3-19	Speaker adaptation	4-4
Searching for a Previous Destination ...	3-22	Setting Handsfree volume	5-25	Starting navigation system	3-6
Searching for an Intersection.....	3-23	Setting keyboard for inputting letter ...	3-40	Starting Phone Music	5-21
Searching for Emergency facilities	3-30	Setting Language	3-40	Starting Route Guidance	3-33
Searching from Address book	3-30	Setting mobile phone auto connect priority.....	5-24	Starting USB IMAGE Mode	2-31
Searching from MAP	3-31	Setting Picture Frame.....	1-12	Steering wheel remote controller	1-5
Searching the Phone Book.....	5-17	Setting Q.POI icons.....	3-14	Storing FM/AM presets	2-4
Selecting an iPod song	2-25	Setting Q.POI icons.....	3-45	Storing SIRIUS presets	2-9
Selecting an item in a list	1-8	Setting Random function for CD music....	2-16	Supported disc formats	2-12
Selecting FM/AM broadcast frequency	2-5	Setting Random function for iPod song	2-26	Switching call to the mobile phone	5-14
Selecting other route	3-33	Setting Random function for MP3 file ...	2-21	Switching map mode (North Up / Heading Up)	
Selecting Phone music files	5-23	Setting Repeat function for iPod song ...	2-27		3-10
Selecting Quick menus	3-12	Setting Repeat function for MP3 file	2-22	Switching the SIRIUS modes (Channel /	
Selecting SIRIUS broadcast channel	2-7	Setting the Clock	1-13	Category)	2-7
Selecting the CD track	2-16	Setting up the voice command system ...	4-4	System information and Update	3-54
Selecting the CD track	2-16	Setting voice command feedback ON/OFF	3-40		
Setting for favorite places	3-18	Setting voice prompt ON/OFF	4-4		

INDEX

T

Touch screen Beep ON/OFF	1-10
Traffic Information	3-56
Traffic Setup	3-56
Treb/Mid/Bass/P.Bass	1-10
Troubleshooting	6-3
Troubleshooting guide	6-2
Turning the audio ON/OFF.....	1-6
Turning the power OFF	1-6
Turning the power ON	1-6

U

Understanding the navigation system	3-3
Updating the system	3-54
USB Image	4-12
USB IMAGE Mode	2-31
USB IMAGE mode menu screen configuration	2-31
USB MP3	2-28
USB MP3	4-11
USB MP3 related information and precaution	2-28

V

Vehicle position display	3-4
--------------------------------	-----

Viewing Current Time.....	1-13
Viewing detailed information for iPod song2-27	
Viewing GPS signal	3-3
Voice command Help	4-3
Voice command list	4-6
Voice guidance volume control	3-55
Voice guidance volume setting	3-55

W

What is Bluetooth® wireless technology ?... 5-2	
---	--



Microsoft® Windows® Automotive Operating System

Important Safety Information

Read and Follow Instructions

Before using your Windows Automotive-based system, read and follow all instructions and safety information provided in this end user manual ("User's Guide"). Not following precautions found in this User's Guide can lead to an accident or other serious consequences.

Keep User's Guide in Vehicle

When kept in the vehicle, the User's Guide will be a ready reference for you and other users unfamiliar with the Windows Automotive-based system. Please make certain that before using the system for the first time, all persons have access to the User's Guide and read its instructions and safety information carefully.

Warning:

Operating certain parts of this system while driving can distract your attention away from the road, and possibly cause an accident or other serious consequences. Do not change system settings or enter data non-verbally (using your hands) while driving. Stop the vehicle in a safe and legal manner before attempting these operations. This is important since while setting up or changing some functions you might be required to distract your attention away from the road and remove your hands from the wheel.

General Operation

Voice Command Control

Functions within the Windows Automotive-based system may be accomplished using only voice commands. Using voice commands while driving allows you to operate the system without removing your hands from the wheel.

Prolonged Views of Screen

Do not access any function requiring a prolonged view of the screen while you are driving. Pull over in a safe and legal manner before attempting to access a function of the system requiring prolonged attention. Even occasional short scans to the screen may be hazardous if your attention has been diverted away from your driving task at a critical time.

Volume Setting

Do not raise the volume excessively. Keep the volume at a level where you can still hear outside traffic and emergency signals while driving. Driving while unable to hear these sounds could cause an accident.

Navigation Features

Any navigation features included in the system are intended to provide turn by turn instructions to get you to a desired destination. Please make certain all persons using this system carefully read and follow instructions and safety information fully.

Distraction Hazard

Some navigation features may require manual (non-verbal) setup. Attempting to perform such set-up or insert data while driving can seriously distract your attention and could cause an accident or other serious consequences. Stop the vehicle in a safe and legal manner before attempting these operations.

Let Your Judgment Prevail

Any navigation features are provided only as an aid. Make your driving decisions based on your observations of local conditions and existing traffic regulations. Any such feature is not a substitute for your personal judgment. Any route suggestions made by this system should never replace any local traffic regulations or your personal judgment or knowledge of safe driving practices.

Route Safety

Do not follow the route suggestions if doing so would result in an unsafe or illegal maneuver, if you would be placed in an unsafe situation, or if you would be directed into an area that you consider unsafe. The driver is ultimately responsible for the safe operation of the vehicle and therefore, must evaluate whether it is safe to follow the suggested directions.

Potential Map Inaccuracy

Maps used by this system may be inaccurate because of changes in roads, traffic controls or driving conditions. Always use good judgment and common sense when following the suggested routes.

Emergency Services

Do not rely on any navigation features included in the system to route you to emergency services. Ask local authorities or an emergency services operator for these locations. Not all emergency services such as police, fire stations, hospitals and clinics are likely to be contained in the map database for navigation features.

Use of Speech Recognition Functions

Speech recognition software is inherently a statistical process which is subject to errors. It is your responsibility to monitor any speech recognition functions included in the system and address any errors.

M & SOFT AMERICA MAP CENTER

TEL : 888-757-0010

WEBSITE : www.mapnsoft.com

MEMO



MEMO



MEMO



MEMO

1WEND12



1WMS7-C0051