



GETTING TO KNOW YOUR ***2018 CAMARO***



chevrolet.com

Review this Quick Reference Guide for an overview of some important features in your Chevrolet Camaro. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at **my.chevrolet.com/learn**.

For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.

INSTRUMENT PANEL



SYMBOLS

	Low Fuel		StabiliTrak Active		Service Electric Parking Brake
	Traction Control Off		StabiliTrak Off		Lights On Reminder
	Brake System		Security		Airbag Readiness
	Cruise Control Set		Electric Parking Brake		Check Engine

Driver's Heated/
Vented Seat
Buttons♦

Infotainment
System Touch
Screen♦

Automatic
Climate
Controls

Passenger's
Heated/Vented
Seat Buttons♦



Hazard
Warning
Flashers
Button

Driver Mode
Selector/
Stability Control
Button

Electric
Parking
Brake
Switch

Accessory
Power Outlet



Antilock Brake System



Low Tire Pressure



Door Ajar



Engine Oil Pressure



Charging System



Driver Safety Belt
Reminder



Passenger Safety Belt
Reminder

Refer to your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators of the instrument cluster.

See In Brief in your Owner's Manual.

♦ Optional equipment

REMOTE KEYLESS ENTRY TRANSMITTER

Unlock

Press to unlock the driver's door.

Press again to unlock all doors.

Lock

Press to lock all doors.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The turn signal lamps will flash and the horn will sound.

Press and hold to activate the alarm.

Lower Convertible Top* (Convertible Models Only)

Press and release the  **Unlock** button and then press and hold the  button to lower the top.

Remote Vehicle Start*

Press and release the  **Lock** button and then press and hold the  button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 10 minutes.
- Repeat these steps for an additional 10 minutes. A remote start can be extended once.
- Press and hold the  button until the parking lamps turn off to cancel a remote start.

Note: To change the remote lock, unlock, and remote start settings, go to *Settings > Vehicle > Remote Lock, Unlock, Start*.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors, ignition and trunk without removing the Remote Keyless Entry transmitter from a pocket or purse. The transmitter must be within 3 feet of the door being unlocked or the trunk.

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the lock button on the passenger's door handle to unlock all doors.
- ▶ Press the touchpad above the license plate to open the trunk.



KEYLESS LOCKING

With the ignition off, the transmitter out of the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay once all doors are closed.

Note: To change the door lock and unlock settings, go to *Settings > Vehicle > Remote Lock, Unlock, Start*.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS (PUSHBUTTON) START

The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the transmission in Park or Neutral, press the brake pedal (automatic transmission) or the clutch pedal (manual transmission) and then press the **ENGINE START/STOP** button. The green button indicator will illuminate.

STOPPING THE ENGINE/OFF

- ▶ Shift to Park (automatic transmission, if equipped) and press the **ENGINE START/STOP** button.

Note: If the transmitter battery is weak, place the transmitter in the rear cupholder to enable the engine to start. Replace the transmitter battery as soon as possible.



See Driving and Operating in your Owner's Manual.

DRIVER INFORMATION CENTER (DIC)

The DIC on the instrument cluster displays a variety of vehicle system information and warning messages. Use the controls on the right side of the steering wheel to select the Info (includes trip and fuel information), Performance, Audio, Phone, Navigation, and Settings menus.

DIC CONTROLS

- ▶ Press the ◀ or ▶ button to move between the display zones.
- ▶ Press the ▲ or ▼ button to move through the menus.
- ▶ Press the **SEL (Select)** button to open a menu or select a setting.



Reconfigurable instrument cluster♦ shown

RESET AN ITEM

1. Use the controls to display the desired item.
2. Press the **SEL** button to reset or clear the item.



RECONFIGURABLE INSTRUMENT CLUSTER♦

The instrument cluster features 3 display themes of Standard, Technology, or Media.

1. Use the controls to display the Settings menu.
2. Select Display Theme.
3. Select the desired cluster theme.

See Instruments and Controls in your Owner's Manual.

♦ Optional equipment

UNIVERSAL REMOTE SYSTEM ♦

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to www.homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.

HEAD-UP DISPLAY (HUD) ♦

The HUD projects some operating information on the windshield. Temporary information, such as audio changes and navigation maneuvers, also will be displayed.

HUD HUD

Press down or lift up to adjust the position of the image. It cannot be adjusted side-to-side.

INFO

Press to select from the display views of Speed View, Audio/Phone View, Navigation View, and Performance View.



+ - ☀ Brightness

Press down or lift up to dim or brighten the display. Press down and hold to turn off the HUD.

See Instruments and Controls in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

📞 Push to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.

Press and hold to activate phone voice recognition (Voice Pass-Thru/Siri® Eyes Free) with a paired, compatible phone.

📞 End Call/Mute

Press to end or decline a call.

Press to mute/unmute the speakers.

🔊 Volume

Pull the + or - button to adjust the volume.

FAV Next/Previous Favorite Station

Pull the  or  button to go to the next or previous favorite radio station or track.



See Instruments and Controls in your Owner's Manual.

CHEVROLET MYLINK INFOTAINMENT SYSTEM

Refer to your Owner's Manual for important information about using the infotainment system while driving.



Applications*:
Touch the screen
icon to access
the application

Home
screen

SEEK
Previous
radio station
or track

Power/
Volume

SEEK
Next radio
station or
track

(7-inch screen)
View the Phone
screen or
answer a call

< BACK
(8-inch screen)
Move back one
level in the
menus

8-inch* color screen* shown

CHEVROLET MYLINK

Chevrolet MyLink uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone, cell phone, USB flash drive or portable audio player/iPod®. For assistance with the MyLink system, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit my.chevrolet.com/learn.

SETTING THE TIME

1. Select **Settings** on the home screen.
2. Select **Time and Date**.
3. Select **Set Time**.
4. Touch the screen buttons to adjust the hours, minutes and AM or PM.
5. Touch **BACK** to exit the menu.

See your Infotainment System Manual.

CHEVROLET MYLINK INFOTAINMENT SYSTEM

STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM⁺) can be stored in any order. Additional media (song, artist, album, and genre when connected to a USB port), phone contacts and navigation destinations also may be stored (MyLink system with 8-inch* color screen only⁺).

1. Display or select the desired radio station, media favorite, navigation destination or contact.
2. Select the desired page of favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.
4. Repeat the steps to store another favorite item.



NATURAL VOICE RECOGNITION

Control the music source⁺ and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will play a prompt followed by a beep.
3. After the beep, say what you want it to do using natural speech.
 - Example Phone command (using your paired phone): “Call Amanda” or “Dial 555-1212”
 - Example Media Music Device Search⁺ command (when connected to USB only): “Play artist [name]” or “Play song [name]”
 - Example Radio⁺ command: “Tune FM 104.3” or “Tune XM Classic Vinyl”
 - Help – Say “Help” for voice recognition assistance

CHEVROLET SHOP

In-vehicle apps, connecting to music, news, weather, travel information and more, are available for download to the radio through the **SHOP** icon on the home screen.

Downloading and using the apps requires internet connectivity and a data plan accessed through the vehicle's OnStar 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot.

Visit my.chevrolet.com/learn for more information.

PORTABLE AUDIO DEVICES

Two USB ports and an auxiliary jack are located inside the center console to connect portable audio devices.

- ▶ An iPod®, iPhone®, MP3 Player, a USB flash drive or a USB mass storage device can be connected to the USB port. Search for music on-screen or by voice commands.⁺
- ▶ Select Audio > Media to select a portable device as the audio source.

See your Infotainment System Manual.

APPLE CARPLAY™ AND ANDROID AUTO™

Apple CarPlay or Android Auto capability may be available through a compatible smartphone. If available, a  Projection icon will appear on the home screen of the infotainment display.



1. No app is required for Apple CarPlay. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your phone by plugging the compatible phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The  Projection icon will change to Apple CarPlay or Android Auto, depending on the phone. Apple CarPlay or Android Auto may launch automatically upon USB connection. If not, touch the Apple CarPlay or Android Auto icon on the home screen.

For more information on using Apple CarPlay or Android Auto, call 1-855-4-SUPPORT (1-855-478-7767) or visit my.chevrolet.com/learn.

See your Infotainment System Manual.

BLUETOOTH® SYSTEM

Refer to your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit my.chevrolet.com/learn for more information.

PAIR A PHONE

1. Using the MyLink system with 7-inch* color screen, select the Phone screen and touch Search Device.
Using the MyLink system with 8-inch* color screen*, select the Phone icon > Pair Device; or press the  Push to Talk button and say "Pair phone."
2. Start the pairing process on the phone. Locate your vehicle or Chevrolet MyLink on the phone.
3. Confirm the codes that appear on the infotainment screen and the phone.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

STREAMING AUDIO

- ▶ With a paired device connected via Bluetooth, select Audio > Media until Bluetooth is displayed on the infotainment screen to stream audio from the device. Control audio operation using the device controls or infotainment controls.

See your Infotainment System Manual.

ONSTAR® WITH 4G LTE AND WI-FI®

With OnStar 4G LTE and Wi-Fi, up to seven devices (smartphones, tablets and laptops) can be connected to high-speed internet through the vehicle's built-in Wi-Fi hotspot.

- ▶ To retrieve the SSID and password for the hotspot, go to Settings > Wi-Fi; or press the **OnStar Voice Command** button on the overhead console or rearview mirror, wait for the prompt, and then say "Wi-Fi settings." The information will be displayed on the screen.

For assistance, press the blue OnStar button or call 1-888-4-ONSTAR (1-888-466-7827).

Note: See onstar.com for a detailed instruction guide, vehicle availability, details, and system limitations.

See OnStar in your Owner's Manual.

WIRELESS CHARGING◆

The Wireless Charging system is located at the back of the center console. To check device compatibility, visit my.chevrolet.com/learn. See your phone retailer for details on required phone accessories or charging adapters.

1. The vehicle must be on, or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the device, face up, on the  charging pad.
4. The battery charging symbol will display on the infotainment screen. If not charging, remove the device for 3 seconds and rotate it 180 degrees.



See Instruments and Controls in your Owner's Manual.

VEHICLE PERSONALIZATION

Some vehicle features can be customized using the Settings menus and the touch screen buttons. The Settings menus may include Time and Date, Driving Mode, Language, Valet Mode, Radio, Vehicle, Bluetooth, Apple CarPlay, Android Auto, Voice, Display, Rear Camera, and Return to Factory Settings.

1. Select **Settings** on the home screen.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Press **BACK** to exit each menu.



See Instruments and Controls in your Owner's Manual.

AUTOMATIC CLIMATE CONTROLS

Air Delivery Modes:




SYNC
Link passenger's
temperature setting to driver's
temperature setting♦

AUTO
Automatic
Operation

A/C
Air
Conditioning
Control

Recirculation
Mode

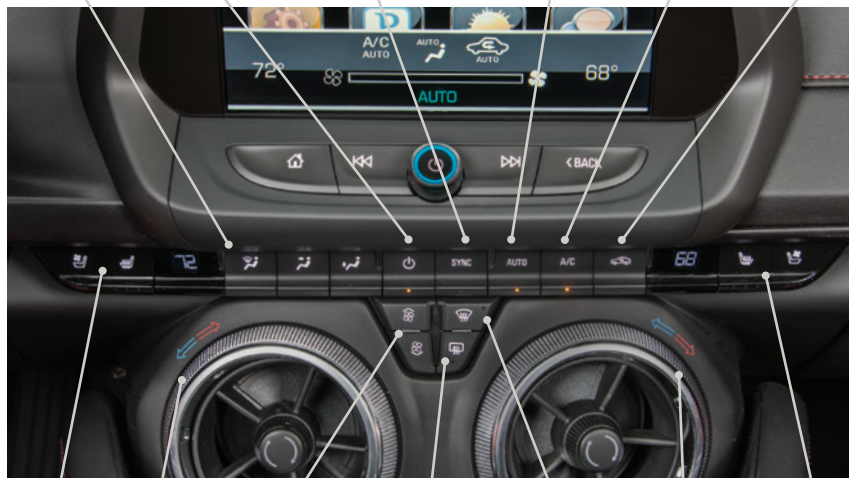

Driver's
Heated/
Vented Seat
Buttons♦

Temperature
Control

Fan Control
(Dual Automatic
System♦)

Defog/Rear
Window
Defog

Defrost

Fan Control or
Passenger's
Temperature
Control♦

Passenger's
Heated/
Vented Seat
Buttons♦

Dual Automatic Climate Control♦ shown

AUTOMATIC OPERATION

- Press **AUTO**.
- Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. Allow time for the system to reach the desired temperature. If the functions are manually adjusted, automatic operation is canceled.

RECIRCULATION MODE

- Press **Recirculation Mode** to quickly cool the air inside the vehicle or prevent outside odors from entering the vehicle.

Note: When the Recirculation Mode is used without air conditioning, the air humidity increases and the windows may fog.

See Climate Controls in your Owner's Manual.

♦ Optional equipment

HIGH-PERFORMANCE DRIVING FEATURES

TRACTION CONTROL AND STABILITY CONTROL SYSTEMS

The traction control system limits wheelspin and the StabiliTrak® stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

- ▶ Press the  **Traction Control/StabiliTrak Off** button on the center console to turn off traction control.
- ▶ Press and hold the  button to turn off both Traction Control and StabiliTrak.
- ▶ Press the  button again to turn on Traction Control and StabiliTrak.



DRIVER MODE CONTROL

Up to four selectable driver modes are available that adjust various vehicle control systems based on driving preferences, weather or road conditions. The modes are displayed on the instrument cluster: Tour (default mode), Sport (will remain active at next ignition cycle if selected), Snow/Ice, and Track (V8 models only).

1. Press the  **MODE**  button on the center console to view the current mode.
2. Press the  **MODE**  button again to scroll through the four modes.

COMPETITIVE MODE AND LAUNCH CONTROL (V8 MODELS ONLY*)

Note: Competitive Mode and Launch Control are recommended only for use during closed course track events.

Competitive Mode

Competitive Mode is an optional handling mode that allows increased performance while accelerating and cornering.

- ▶ To turn on Competitive Mode, press the  **Traction Control/StabiliTrak Off** button twice quickly while in the Sport or Track Mode. Competitive Mode will display on the instrument cluster.
- ▶ Press the  button again to return to normal traction control/StabiliTrak operation.

Launch Control

Launch Control is a form of traction control that optimizes wheelspin while launching the vehicle. It is activated when the vehicle is at a standstill on level ground, with the front wheels straight, while in Competitive Mode.

- ▶ Press the accelerator pedal to the floor with the clutch engaged (manual transmission in 1st gear) or the brake pedal firmly applied (automatic transmission); release the clutch or brake while keeping the accelerator pedal pressed to the floor for controlled wheelspin and acceleration.

Note: The brake cooling deflectors should be installed on SS models before closed course track events. The brake cooling deflectors should be removed once the track event is completed.

HIGH-PERFORMANCE DRIVING FEATURES

AUTOMATIC TRANSMISSION PERFORMANCE

Paddle Shifting

- ▶ While in Drive (D), use either paddle on the back of the steering wheel to temporarily take control of gear selection. Automatic shifting returns after 7 seconds of cruising at a steady speed without any manual shifts, or when the vehicle stops.
- ▶ Pull the right paddle to upshift and the left paddle to downshift. The current gear will be displayed on the instrument cluster or HUD⁺.
- ▶ Move the shift lever to the left from Drive (D) into the gate marked +/– and use the paddles to manually upshift or downshift the transmission. If the current vehicle speed is too fast or too slow for the requested gear, the shift will not occur.



Performance Shifting

While driving in Sport Mode or Track Mode (V8 models), the transmission may hold the current gear during high cornering loads. When braking, the transmission will downshift to keep up engine speed for exiting the corner. When driving at a steady speed, the transmission will upshift to the appropriate gear.

Powertrain Braking

With the shift lever in Drive (D) when driving on steep grades where frequent braking is required, the transmission may downshift to help hold vehicle speed and reduce brake wear. Continuing to apply the brake pedal will cause the transmission to downshift until 3rd gear is reached. When the road levels out and the accelerator pedal is applied, the transmission will upshift to the appropriate gear.

MANUAL TRANSMISSION SHIFTING (V8 MODELS ONLY⁺)

1-to-4 Shift

The 1st to 4th shift feature helps achieve the best possible fuel economy. The 1-to-4 shift message will display on the instrument cluster when, from a stop, acceleration and vehicle qualifications are met. When the shift message is displayed, the transmission can be shifted only from 1st to 4th gear. Forcing the shift lever into any other gear may damage the transmission.

Active Rev Match

Active Rev Match aids in smoother shifting by matching engine speed to the next selected gear.

- ▶ Pull either REV MATCH paddle on the back of the steering wheel to activate or deactivate the system. When active, the current gear is displayed in amber on the instrument cluster.

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT*

While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

REAR PARKING ASSIST*

During low-speed maneuvers when in Reverse, the system provides “distance to closest object” information on the instrument cluster and sounds a beep. Five beeps sound when an object is very close.

REAR CROSS TRAFFIC ALERT*

During low-speed maneuvers when in Reverse, the system warns of traffic coming in either direction by displaying a red alert on the camera display and sounding several beeps.

- ▶ To turn the alerts on or off, go to Settings > Vehicle > Collision/Detection Systems and select the desired feature.

See Driving and Operating in your Owner's Manual.

TIRES

TIRE PRESSURE MONITOR

The  **Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center (DIC).

TIRE SEALANT AND COMPRESSOR KIT*

The tire sealant and compressor kit can be used to temporarily seal small punctures in the tread area of a tire. The kit is located under the trunk floor. Refer to the kit instructions for complete operating information.

RUN-FLAT TIRES*

The run-flat tires eliminate the need for a spare tire. The tire design enables safe driving function during and after loss of pressure for 50 miles at a moderate speed. A tire pressure of 0 will display on the DIC. Driving only a short distance with a loss of pressure increases the chance that the tire can be repaired. Contact Roadside Assistance for the nearest run-flat tire servicing facility.

SUMMER PERFORMANCE TIRES*

Your vehicle may be equipped with high-performance summer tires that are optimized for maximum dry and wet road performance. It is recommended to install winter tires that will provide additional traction in cold temperatures. See your Chevrolet dealer for information about winter tires.

See Vehicle Care in your Owner's Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, pull the **(P) Parking Brake** switch.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the **(P)** switch.

Note: The parking brake will release automatically if the vehicle is running, placed into gear and an attempt is made to drive.



See *Driving and Operating* in your Owner's Manual.

CONVERTIBLE TOP OPERATION ♦

Before operating the convertible top, the cargo partition (A) must be in the fastened position with no objects forward of the partition and the trunk must be closed. The top can be operated at vehicle speeds up to 30 mph.



OPERATING THE POWER TOP

- ▶ Press and hold the **↕ Open/Close** switch (B) on the overhead console (or use the **↕ Convertible Top** button on the Remote Keyless Entry transmitter to lower the top only). The windows will lower automatically when operating the top. A message will display on the Driver Information Center when top operation is completed.

Note: The top will not operate in cold weather below 32°F (0°C).



POWER WINDOWS

- ▶ Press the front (C) or rear button (D) to operate the desired window. The indicator light on the selected button will illuminate.
- ▶ Fully press/pull the desired window switch (E) to express open/close the window.



Note: Raise the rear windows before the front windows to help ensure proper sealing.

LOSS OF VEHICLE POWER

- ▶ If the vehicle has lost power, the convertible top can be raised manually by releasing pressure on the hydraulic pump. Refer to your Owner's Manual.

See *Keys, Doors and Windows* in your Owner's Manual.

ROADSIDE ASSISTANCE

**1-800-CHEV-USA
(1-800-243-8872)**

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. Chevrolet's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

Roadside Assistance and OnStar®

If you require roadside service and have a current OnStar subscription, press the **OnStar** button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

To learn more about OnStar services, press the blue **OnStar** button, visit **onstar.com**, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP



The myChevrolet mobile app connects owners with a compatible mobile device to a variety of vehicle information and services, such as a searchable Owner's Manual, real-time fuel information, OnStar Vehicle Diagnostic information and Roadside Assistance.

The myChevrolet mobile app also enables users to send remote commands – including remotely starting the vehicle and locking/unlocking the doors – as well as to locate the vehicle on a map and send destinations to the navigation system (vehicles must be properly equipped).

Download the mobile app from your compatible mobile device's app store.

CHEVROLET OWNER CENTER

Get to know your vehicle inside and out with the Chevrolet Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, review your current OnStar Vehicle Diagnostics report (active OnStar account required) and more. Create an account today at **my.chevrolet.com**.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2017 General Motors. All rights reserved.



GENERAL MOTORS

23290947 A