



GETTING TO KNOW YOUR **2018 EQUINOX**



chevrolet.com

Review this Quick Reference Guide for an overview of some important features in your Chevrolet Equinox. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at my.chevrolet.com/learn.

For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Power Mirror/Window Switches

Heated Steering Wheel⬆/ Cruise Control/Forward Collision Alert⬆/Lane Keep Assist⬆ Buttons

Turn Signal Lever/ IntelliBeam Control⬆

Driver Information Center

Voice Recognition Buttons/Driver Information Center Controls

Windshield Wipers Lever



Memory Seat Buttons⬆

Power Liftgate Control⬆

Instrument Panel/Exterior Lamp Controls

Audio Next/Previous Favorite Station Controls (behind steering wheel)

Steering Wheel Adjustment Lever

Audio Volume Control (behind steering wheel)

Engine Start/Stop Button

SYMBOLS



Low Fuel



Traction Control Off

BRAKE

Brake System



Cruise Control



StabiliTrak Active



StabiliTrak Off



Forward Collision Alert



Security



Electric Parking Brake



Electric Parking Brake Service



Lights On Reminder



Airbag Readiness



Engine Oil Pressure



Check Engine



Lane Keep Assist



Vehicle Ahead



Antilock Brake System



Low Tire Pressure



Door Ajar



Charging System



Driver Safety Belt Reminder



Passenger Safety Belt Reminder

Refer to your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators of the instrument cluster.

See In Brief in your Owner's Manual.

◆ *Optional equipment*

REMOTE KEYLESS ENTRY TRANSMITTER



Lock

Press to lock all doors.



Unlock

Press to unlock the driver's door.

Press again to unlock all doors and liftgate.



Power Liftgate

Press twice to open or close the liftgate. Press once to stop power liftgate operation.



Vehicle Locator/ Panic Alarm

Press and release to locate your vehicle.

Press and hold to activate the alarm.

Press again to cancel the alarm.

Note: To change the remote lock, unlock, and remote start settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



Remote Vehicle Start

Press and release the Lock button and then press and hold the button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 10 minutes. Repeat the steps for an additional 10 minutes.
- To cancel a remote start, press and hold the button until the parking lamps turn off.

Key Release

In case of loss of vehicle power, press the button on the side of the transmitter to pull out the door lock key. Remove the cap on the rear part of the driver's door handle to access the lock.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors, ignition and liftgate without removing the Remote Keyless Entry transmitter from a pocket or purse. The transmitter must be within 3 feet of a front door or the liftgate.

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the lock button on a passenger's door handle to unlock all doors.
- ▶ Press the touchpad above the license plate to open the liftgate.

KEYLESS LOCKING

With the ignition off, the transmitter out of the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay once all doors are closed.

Note: To change the door lock and unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.



KEYLESS (PUSHBUTTON) START

The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the transmission in Park or Neutral, press the brake pedal and then press the **ENGINE START/STOP** button. The button indicator will be green.

Note: If the transmitter battery is weak, place the transmitter in the front cupholder in the center console to enable the engine to start. Replace the transmitter battery as soon as possible.

STOPPING THE ENGINE/OFF

- ▶ Shift to Park and press the **ENGINE START/STOP** button.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button. The button indicator will be amber.

See *Driving and Operating in your Owner's Manual*.



AUTO ENGINE STOP/START OPERATION

The fuel-saving engine stop/start system automatically stops and restarts the engine to help conserve fuel. When the brake pedal is pressed and the vehicle is at a complete stop, the engine stop/start system may turn off the engine, referred to as an Auto Stop, if operating conditions are met. In Auto Stop mode, the tachometer gauge will read AUTO STOP. The audio system and other accessories will continue to operate. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart. After parking the vehicle and turning off the engine, the tachometer gauge will read OFF.

The engine may remain running or restart when the vehicle is stopped if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The climate control system requires the engine to run based on the climate control or defog setting.
- The Auto Stop time is greater than 2 minutes.

See *Driving and Operating in your Owner's Manual*.



POWER SEATS

POWER SEAT ADJUSTMENTS

A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Support Adjustment

Press and hold the round control to adjust the amount of lumbar support.



MEMORY SEATS

1. Adjust the seat and power outside mirrors.
2. Press and release the **SET** button; a beep will sound.
3. Immediately press and hold button 1 or 2 until two beeps sound.

RECALL MEMORY POSITIONS

- Press and hold button 1, 2, or  Exit.
- To set the Auto Memory Recall or Easy Exit options, go to Settings > Vehicle > Comfort and Convenience.

See Seats and Restraints in your Owner's Manual.

REAR SEATS

RECLINING THE REAR SEAT

- Pull the lever (A) on top of the seatback and move the seatback to the desired position. Release the lever.



FOLDING THE REAR SEAT

1. Press the button on the head restraint. It will fold automatically.
2. Pull the lever (A) on top of the seatback – a tab near the lever is visible when the seatback is unlatched – and fold the seatback forward.
From the cargo area, pull the top lever (B) (passenger's side seat) or bottom lever (C) (driver's side seat) located on the passenger's side of the cargo area to fold either seatback.
3. Stow the safety belt in the belt clip.



REAR SEAT REMINDER

A Rear Seat Reminder message may display on the Driver Information Center when the vehicle is turned off. Check the rear seat before exiting the vehicle. The system does not actually detect objects in the rear seat; instead, under certain conditions, it detects when a rear door has been opened, indicating that there may be something in the rear seat.



See Seats and Restraints in your Owner's Manual.

POWER LIFTGATE◆

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the **Power Liftgate** button on the Remote Keyless Entry (RKE) transmitter twice.
- ▶ Press the **Power Liftgate** knob (A) on the driver's door.
- ▶ Press the touchpad (B) on the liftgate handle to open the liftgate.
- ▶ Press the button (C) next to the pull handle to close the liftgate.



PROGRAMMING THE LIFTGATE HEIGHT

- ▶ Turn the Power Liftgate knob (A) to the 3/4 mode position.
- ▶ Open the liftgate.
- ▶ Adjust the liftgate manually to the desired height.
- ▶ To save the setting, press and hold the button next to the pull handle (C) until the turn signals flash and a beep sounds.



HANDS-FREE OPERATION

- ▶ To open or close the liftgate hands-free, kick your foot straight under the driver's side of the rear bumper between the exhaust pipe and the license plate. The RKE transmitter must be within 3 feet of the liftgate.



See Keys, Doors and Windows in your Owner's Manual.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle messages and system information.

Use the controls on the right side of the steering wheel to select the Trip, Vehicle, or Eco menus (base DIC) or the Info (includes trip and fuel information), Audio, Phone, Navigation, and Options menus (uplevel DIC)*.



Uplevel DIC shown

DIC CONTROLS

- ▶ Press the ◀ or ▶ button to move between the display zones.
- ▶ Press the ▲ or ▼ button to scroll through the menus.
- ▶ Press the ✓ button to open a menu, or to select or reset an item.

See Instruments and Controls in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

Push to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.

Press and hold to activate Bluetooth Speech Recognition/Siri® Eyes Free on a paired, compatible cell phone.



End Call/Mute

Press to end or decline a call.

Press to mute/unmute the speakers.



Next/Previous Favorite Station button shown

+ - Volume (behind right side of steering wheel)

Press the top or bottom button to adjust the volume.

Next/Previous Favorite Station (behind left side of steering wheel)

Press the top or bottom button to go to the next or previous favorite radio station or track.

See Instruments and Controls in your Owner's Manual.

CHEVROLET MYLINK INFOTAINMENT SYSTEM

Refer to your Owner's Manual for important information about using the infotainment system while driving.



Applications♦: Touch the screen icon to access the application

Home page

SEEK
Previous station or track

Power/VOL
Power/Volume

SEEK
Next station or track

Press to answer a call or view Phone screen (7-inch* screen)

BACK
Return to previous screen (8-inch* screen♦)

8-inch* screen shown

CHEVROLET MYLINK

Chevrolet MyLink uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone, cell phone, USB flash drive or portable audio player/iPod® and offers hands-free voice control. For assistance with the MyLink system, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit my.chevrolet.com/learn.

See your Infotainment System Manual.

CHEVROLET MYLINK INFOTAINMENT SYSTEM

Visit my.chevrolet.com/learn for more information about the infotainment system.

SETTING THE TIME

1. Touch Settings on the home page.
2. Touch Time and Date.
3. Touch Set Time.
4. Touch the screen buttons to adjust the hours, minutes and AM or PM.
5. Touch < **BACK** to exit the menu.

STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM⁺) can be stored in any order.

1. Tune in the desired radio station.
2. Select the desired page of favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.
4. Repeat the steps to store another favorite station.

NATURAL VOICE RECOGNITION⁺

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will play a prompt followed by a beep.
3. After the beep, say what you want it to do using natural speech.
 - Example Phone command (using your paired phone): "Call Amanda" or "Dial 555-1212"
 - Example Media Music Device Search⁺ command (when connected to USB only): "Play artist [name]" or "Play song [name]"
 - Example Radio⁺ command: "Tune FM 104.3" or "Tune XM Classic Vinyl"
 - Help – Say "Help" for voice recognition assistance

BLUETOOTH SPEECH RECOGNITION

Bluetooth Speech Recognition allows access to the voice recognition commands on a compatible cell phone; i.e. Siri[®] Eyes Free or Voice Command.

- To activate Bluetooth Speech Recognition, press and hold the  **Push to Talk** button on the steering wheel for 2 seconds.

CHEVROLET SHOP

In-vehicle apps are available for download to the infotainment system through the SHOP icon on the home page. Downloading and using the apps requires internet connectivity and a data plan accessed through the vehicle's OnStar 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot.

CHEVROLET MYLINK INFOTAINMENT SYSTEM

APPLE CARPLAY™ AND ANDROID AUTO™

Apple CarPlay or Android Auto capability may be available through a compatible smartphone. If available, a  Projection icon will appear on the home page of the infotainment display.

1. No app is required for Apple CarPlay. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The  Projection icon will change to Apple CarPlay or Android Auto, depending on the phone. Apple CarPlay or Android Auto may launch automatically upon USB connection. If not, touch the Apple CarPlay or Android Auto icon on the home screen.

PORTABLE AUDIO DEVICES

An iPod®, iPhone®, MP3 Player, a USB flash drive or a portable USB hard drive can be connected to a USB data port located at the front of the center console or inside the center console storage compartment.

- ▶ Touch Audio > Media to select a portable device as the audio source.

The USB ports on the rear of the center console are for charging only.



See your Infotainment System Manual.

BLUETOOTH® SYSTEM

Refer to your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit my.chevrolet.com/learn for more information.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the beep, say "Pair phone," or
Use the Phone button or touch the Phone icon and then select Pair or Search Device.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

See your Infotainment System Manual.

ONSTAR® WITH 4G LTE WI-FI HOTSPOT®

With the vehicle's built-in Wi-Fi hotspot, up to seven devices (smartphones, tablets and laptops) can be connected to high-speed internet using OnStar's 4G LTE signal.

- ▶ To retrieve the SSID and password for the hotspot, press the OnStar Voice Command button on the overhead console or rearview mirror, wait for the prompt, and then say "Wi-Fi settings." The information will be displayed on the infotainment screen.

For assistance, press the blue OnStar button or call 1-888-4-ONSTAR (1-888-466-7827).

Note: See onstar.com for a detailed instruction guide, vehicle availability, details, and system limitations.

See OnStar in your Owner's Manual.

WIRELESS CHARGING◆

The Wireless Charging system for mobile devices is located at the front of the center console.

Visit my.chevrolet.com/learn to check device compatibility. See your phone retailer for details on required phone accessories.

1. The vehicle must be on or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the device, face up, on the pad, aligned against the back of the bin.
4. The charging symbol will display on the infotainment screen when charging. If not charging, remove the device for 3 seconds and rotate it 180 degrees before placing it on the pad again.



See Instruments and Controls in your Owner's Manual.

TEEN DRIVER

Teen Driver allows multiple keys to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. A Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key, the Driver Information Center displays that Teen Driver is active.


- ▶ To create a Personal Identification Number, register a key, change Teen Driver settings, or access the Report Card, go to Settings > Teen Driver.

See your Infotainment System Manual.

UNIVERSAL REMOTE SYSTEM

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to www.homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

CLIMATE CONTROLS

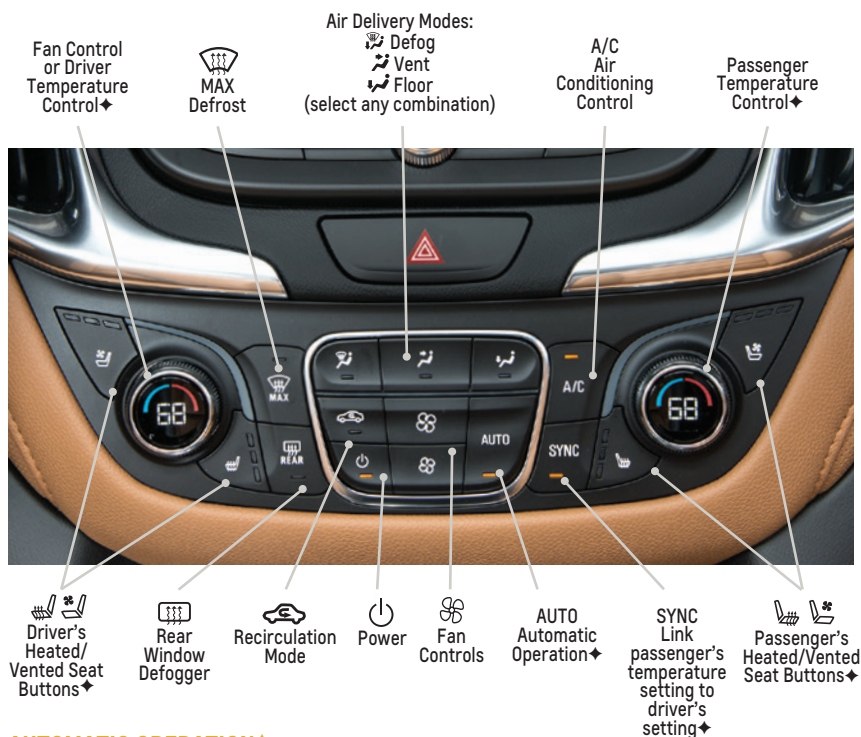

AUTOMATIC OPERATION+

- Press **AUTO**.
- Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation functions. Allow time for the system to reach the set temperature. If a function is manually adjusted, automatic operation for that function is turned off.

AUTO DEFOG AND AUTO REAR WINDOW DEFOGGER+

Auto Defog automatically makes system adjustments to help prevent fogging when humidity is detected. Auto Rear Defog automatically turns on the rear window defogger below a certain ambient temperature. It turns off automatically.

- Go to Settings > Vehicle > Climate and Air Quality to turn the Auto Defog or Auto Rear Defog settings on or off.

AIR VENTS

- Use the vent louvers to change the direction of the airflow. Move the slider knobs to open or close the vent.

See Climate Controls in your Owner's Manual.

CRUISE CONTROL

SETTING CRUISE CONTROL

- ▶ Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
- ▶ When traveling at the desired speed, press the **-SET** button to set the speed. The  symbol will illuminate in green on the instrument cluster.



ADJUSTING CRUISE CONTROL

+ RES Resume/Accelerate

Press to resume a set speed. When the system is active, press to increase speed.

- SET Set/Coast

When the system is active, press to decrease speed.

Cancel

Press the  button, or press the brake pedal, to cancel the cruise control without erasing the set speed from memory. The set speed is erased when Cruise Control or the vehicle ignition is turned off.

See Driving and Operating in your Owner's Manual.

WIPERS AND WASHERS

WINDSHIELD WIPERS

Raise or lower the wiper lever.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes

Rotate the band up for more frequent wipes or down for less frequent wipes.

OFF


1x Single Wipe

Washer Fluid

Pull the lever toward you to spray washer fluid on the windshield.

REAR WINDOW WIPER

Turn the end of the wiper lever.

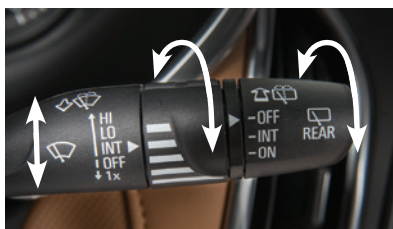

OFF

INT Intermittent Wipes

ON

Rear Washer Fluid

Push the lever away from you to spray washer fluid on the rear window.

See Instruments and Controls in your Owner's Manual.

EXTERIOR LIGHTING

EXTERIOR LAMP CONTROLS

 **Off/On**

AUTO

Automatically activates the exterior lamps depending on outside lighting conditions.

 **Parking Lamps**

 **Headlamps**

 **Fog Lamps**◆

INTELLIBEAM SYSTEM◆

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions. A green  indicator displays on the instrument cluster when the system is on; a blue  indicator displays when the high-beam headlamps are on.

- Press the  button on the turn signal lever with the lamp control in the AUTO or  Headlamps position to turn the IntelliBeam system on or off.

Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph. The system is turned off if the fog lamps are turned on.



See Lighting in your Owner's Manual.

ALL-WHEEL DRIVE◆

The vehicle can operate in two-wheel drive (2WD) or all-wheel drive (AWD).

In 2WD, power is sent to the front wheels only and the vehicle may have better fuel economy. In AWD, power is sent to all four wheels for better traction.

- Press the **AWD** button in front of the shift lever to switch to AWD. The button indicator will flash when engaging AWD and stay illuminated when AWD is active. Press the button again to return to 2WD.



See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

SAFETY ALERT SEAT♦ – The driver's seat may pulse on the left side, right side, or simultaneously, to alert the driver of potential hazards.

- ▶ Audible alerts or seat pulsing alerts may be selected. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

TRACTION CONTROL AND STABILITRAK® – The full-time Traction Control system limits wheelspin and the StabiliTrak electronic stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Traction Control should be turned off if the vehicle is stuck and rocking the vehicle is required.

- ▶ To turn Traction Control off or on, use the DIC controls to display the Vehicle menu > TCS (base DIC) or Options menu > Traction & Stability (uplevel DIC).

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING♦ – The system may help avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and displaying an amber .

If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected), on the side of the departure direction as the lane marking is crossed. In order to use this system safely, the driver needs to steer and be in complete control of the vehicle.

- ▶ To turn on or off, press the  Lane Keep Assist button (A) on the steering wheel.



FORWARD COLLISION ALERT♦ – The  Vehicle Ahead indicator is green when a vehicle is detected and illuminates in amber when following a vehicle ahead too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- ▶ Press the  Collision Alert button (B) on the steering wheel to set the alert timing to Far, Medium or Near. The setting is displayed on the Driver Information Center.



FOLLOWING DISTANCE INDICATOR♦ – The following distance is indicated in seconds under the Info menu on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.



DRIVER ASSISTANCE SYSTEMS

LOW-SPEED FORWARD AUTOMATIC BRAKING[◆] – The brakes may be applied automatically in potential collision situations to help reduce damage or help avoid collisions with vehicles directly ahead.

- ▶ To set Forward Automatic Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT[◆] – While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

REAR VISION CAMERA – When the vehicle is in Reverse, a view directly behind the vehicle is displayed on the infotainment screen.

- ▶ To turn the guidance lines on or off, go to Settings > Rear Camera.



SURROUND VISION CAMERA[◆] – The Surround Vision system displays a bird's-eye view of the area surrounding the vehicle on the infotainment screen when the vehicle is in Reverse or Drive below 5 mph.

- ▶ To switch to the front or rear camera view, touch the front or rear camera button at the bottom of the infotainment screen.

REAR CROSS TRAFFIC ALERT[◆] – When the vehicle is in Reverse, the system warns of traffic coming in either direction by displaying a red alert on the infotainment screen and the left or right side of the Safety Alert Seat pulses or beeps sound (if selected).

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert.

REAR PARKING ASSIST[◆] – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses 5 times or beeps sound (if selected).

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Park Assist.



See Driving and Operating in your Owner's Manual.

SUNROOF

The sunroof has a comfort stop feature that stops the sunroof from fully opening. This reduces potential wind noise.

- ▶ Press and release the rear of the  switch to express-open the sunroof to the comfort stop position. Press it again to fully open the sunroof.
- ▶ Press and release the front of the  switch to express-close the sunroof.
- ▶ Press the rear or front of the  switch to open or close the sunshade.



See Keys, Doors and Windows in your Owner's Manual.

CARGO STORAGE FEATURES

UNDERFLOOR REAR CARGO STORAGE

Lift up the rear cargo floor for additional storage space. Use the pull tabs to open or close the floor cover.

UMBRELLA STORAGE IN FRONT DOORS

The cargo bins in the front doors feature an upper storage area designed to store an umbrella.

CARGO COVER

Extend the cargo cover to cover items in the rear of the vehicle. Remove the cover if more space is needed for stowing items.

See Storage in your Owner's Manual.



ROOF RACK

DOCKING STATIONS

The roof rack docking stations allow easy installation of GM-certified cross rails for loading and securing items.

See Storage in your Owner's Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, pull the (P) Parking Brake switch on the center console.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the (P) switch.

Note: The parking brake will release automatically if the vehicle is running, placed into gear and an attempt is made to drive.



See Driving and Operating in your Owner's Manual.

REFUELING THE VEHICLE

- ▶ To open the fuel door, press and release the center of the rear edge of the door. It will pop out slightly. Pull the door open.
- ▶ The vehicle's capless fuel system does not have a fuel cap. Fully insert the fuel pump nozzle before starting to fill the tank.

Note: When using a portable gas can, insert the funnel adapter, stored under the spare tire, into the capless fuel fill.

See Driving and Operating in your Owner's Manual.

DIESEL FEATURES (IF EQUIPPED)

DIESEL EXHAUST FLUID (DEF)

DEF causes a chemical reaction that reduces the amount of regulated emissions produced. It is not a fuel additive and does not come into contact with the diesel fuel. The DEF level must be maintained for the vehicle to run properly. The DEF fill port is located behind the fuel fill door.

DEF FILL WARNINGS

As the DEF level becomes low, refill warnings will be displayed on the Driver Information Center. If the DEF tank is empty, the maximum vehicle speed will be reduced at various mileage intervals. To avoid speed limitations, the DEF tank should be refilled after a low fluid warning appears.

DIESEL PARTICULATE FILTER (DPF)

The DPF filters the diesel exhaust gases. Occasionally, the DPF needs to be cleaned. When needed, the system will automatically initiate a self-cleaning function once driving conditions are met.

See Driving and Operating in your Owner's Manual.

ROADSIDE ASSISTANCE

**1-800-CHEV-USA
(1-800-243-8872)**

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. Chevrolet's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

Roadside Assistance and OnStar®

If you require roadside service and have a current OnStar service plan, press the blue **OnStar** button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

To learn more about OnStar services, press the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP



The myChevrolet mobile app connects owners with a compatible mobile device to a variety of vehicle information and services, such as a searchable Owner's Manual, real-time fuel information, OnStar Vehicle Diagnostic information and Roadside Assistance.

The myChevrolet mobile app also enables users to send remote commands – including remotely starting the vehicle and locking/unlocking the doors – as well as to locate the vehicle on a map and send destinations to the navigation system (vehicles must be properly equipped).

Download the mobile app from your compatible mobile device's app store.

CHEVROLET OWNER CENTER

Get to know your vehicle inside and out with the Chevrolet Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, review your current OnStar Vehicle Diagnostics report (active OnStar account required) and more. Create an account today at my.chevrolet.com.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2017 General Motors. All rights reserved.



GENERAL MOTORS

84372714 B