



GETTING TO KNOW YOUR **2018 TRAX**



chevrolet.com

Review this Quick Reference Guide for an overview of some important features in your Chevrolet Trax. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at **my.chevrolet.com/learn**. For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Cruise Control/
Forward Collision
Alert Buttons

Turn Signal Lever/
Driver Information
Center Controls

Driver
Information
Center

Audio
Steering Wheel
Controls

Windshield
Wipers/Rear
Wiper Lever



Power
Window/Mirror
Controls

Exterior/
Interior Lamp
Controls

Hood
Release
Lever

Storage
Compartment

Tilt/Telescope
Steering Wheel
Lever

Engine Start/
Stop Button

SYMBOLS



Low Fuel



Door Ajar



Traction Control Off



Engine Coolant
Temperature



Brake System



Cruise Control Set



StabiliTrak Active



StabiliTrak Off



Low Tire Pressure



Reduced Engine Power



Antilock Brake System



Passenger Safety Belt
Reminder



- | | | | |
|---|----------------------|---|-------------------|
|  | Check Engine |  | Airbag Readiness |
|  | Oil Pressure |  | Security |
|  | Charging System |  | Power Steering |
|  | Safety Belt Reminder |  | Lamps On Reminder |

Refer to your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See In Brief in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER

Unlock

Press to unlock the driver's door. Press again to unlock all doors and liftgate.

Lock

Press to lock all doors and liftgate.

Vehicle Locator/ Panic Alarm

Press and release to locate your vehicle. The turn signal lamps will flash and the horn will sound 3 times.

Press and hold to activate the alarm. The turn signal lamps will flash and the horn will sound for 30 seconds, or until the button is pressed again or the ignition is turned on.



Remote Vehicle Start*

Press and release the  **Lock** button and then press and hold the  button to start the engine from outside the vehicle. After entering the vehicle, turn the ignition to the On position.

- The engine will run for 10 minutes. Repeat these steps for a 10-minute time extension.
- Only 2 remote starts are allowed between ignition cycles.
- Press and hold the  button to cancel a remote start.

Note: To change the remote lock, unlock and remote start settings, go to *Settings > Vehicle > Remote Lock, Unlock, Start*. See *Vehicle Personalization* on page 11.

See Keys, Doors and Windows in your Owner's Manual.

EXPRESS POWER WINDOWS

- ▶ The driver's window has an express-down/express-up feature. Fully press or pull the window switch momentarily to lower or raise the window completely. Momentarily press or pull the window switch again to stop window travel. All passenger windows have the express-down feature.

See Keys, Doors and Windows in your Owner's Manual.

STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, push down the lever on the lower left side of the steering column to adjust the steering wheel. The steering wheel can then be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.

See Instruments and Controls in your Owner's Manual.



KEYLESS ACCESS SYSTEM◆

Keyless Access enables operation of the doors, liftgate and ignition without removing the Remote Keyless Entry transmitter from a pocket or purse. The transmitter must be within 3 feet of the door being unlocked or the liftgate.

KEYLESS UNLOCKING

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors and the liftgate.
- ▶ Press the lock button on the passenger's door handle to unlock all doors and the liftgate.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.



KEYLESS LOCKING

With the ignition off, the transmitter out of the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors and the liftgate immediately.
- ▶ If Passive Locking is turned on, all doors and the liftgate will lock automatically after a short delay once all doors and the liftgate are closed.

Note: To change the door lock settings, go to *Settings > Vehicle > Remote Lock, Unlock, Start*.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS (PUSHBUTTON) START◆

The Remote Keyless Entry transmitter must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the transmission in Park or Neutral, press the brake pedal and then press the **ENGINE START/STOP** button. The green button indicator will illuminate.



STOPPING THE ENGINE/OFF

- ▶ Shift to Park and press and hold the **ENGINE START/STOP** button.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the vehicle in accessory mode. The amber button indicator will illuminate.

See Driving and Operating in your Owner's Manual.

SEATS

MANUAL DRIVER'S SEAT

A. Seat Fore/Aft Adjustment

Lift the handle under the front of the seat to slide the seat forward or rearward.

B. Seat Height Adjustment

Ratchet the lever up or down repeatedly to raise or lower the seat.

C. Seatback Recline Adjustment

Lift the lever to recline or raise the seatback.

D. Power Lumbar Adjustment

Press the control to adjust the support.



POWER DRIVER'S SEAT*

E. Power Lumbar Adjustment

Press the control to adjust the support.

F. 6-way Seat Adjustment

Move the control to move the seat forward/rearward and to tilt or raise/lower the seat.

G. Seatback Recline Adjustment

Lift the lever to recline or raise the seatback.



FOLDING FRONT PASSENGER SEAT

- With the head restraint lowered and the seat moved as far back as possible, pull the recline lever on the outboard side of the front passenger seat to fold the seat flat.

FOLDING REAR SEATS

1. Unbuckle the safety belts and return them to their normal stowed position.
2. Lower the head restraints.
3. Pull up the tab (H) located at the center front of each seat cushion.
4. Pull up the rear edge of the seat cushion and tilt it forward.
5. Press the lever (I) in the cup on top of the seatback. When the red marking is visible, the seatback is unlatched.
6. Fold down the seatback.
7. When unfolding the seats, make sure the safety belt buckles are accessible above the seat cushions.



LIGHTING

EXTERIOR LAMPS

Rotate the knob to activate the exterior lamps.

 **Off/On**

AUTO Automatic Headlamp System

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

 **Parking Lamps**

 **Headlamps**

 **Fog Lamps***

Press to turn the fog lamps on or off.

INSTRUMENT PANEL LIGHTING

 **Instrument Brightness Control**

Press the knob to extend it. Rotate it to adjust the instrument panel lighting.



DOME LAMP

The controls are in the front overhead console.

 **Dome Lamp Override – Lamp Off**

 **Door Open – Lamp On**

 **Lamp On**

See Lighting in your Owner's Manual.

WINDSHIELD WIPERS

WINDSHIELD WIPERS AND WASHER

Raise or lower the lever to activate the wipers.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes


Rotate the band to adjust the delay between wipes. The wipers activate more often as the band is rotated upward.

OFF

1x Single Wipe

 **Washer Fluid**

Pull the lever toward you to spray washer fluid on the windshield.

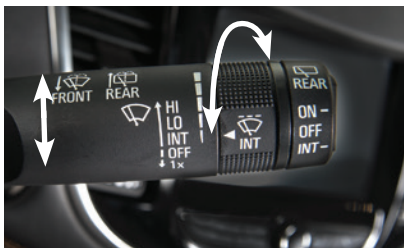

REAR WIPER AND WASHER

Press the switch on the end of the lever to operate the rear wiper.

ON

OFF

INT Intermittent Wipes

 **Washer Fluid**

Push the lever away from you to spray washer fluid on the rear window.

See Instruments and Controls in your Owner's Manual.

INFOTAINMENT SYSTEM

Refer to your Owner's Manual for important information about using the infotainment system while driving.



Applications:
Touch the screen
icon to access
the application

Home
page

SEEK
Previous radio
station or track

Power/
Volume/
Mute

SEEK
Next radio
station or
track

Press to view
Phone screen or
answer a call

CHEVROLET MYLINK

Chevrolet MyLink uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone, cell phone, USB flash drive or portable audio player/iPod®. Touch an application icon on the screen to access an item. You can use simple gestures on the touch screen just as you would on a tablet, such as tap, drag, and swipe, to interact with the system.

For assistance with the MyLink system, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit my.chevrolet.com/learn.

INFOTAINMENT SYSTEM

SETTING THE TIME

1. Select Settings on the Home page.
 2. Select System > Time/Date.
 3. Select Set Time.
 4. Touch the arrows to adjust the time.
 5. Touch  to exit the menu.
- Turn on Automatic Time and Date to have the time updated automatically as the system obtains information from the cellular network.



STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM[®]) can be stored in any order.

1. Select **Audio** on the Home page.
2. Tune in the desired radio station.
3. Select the desired page of favorite screen buttons.
4. Touch and hold one of the favorite screen buttons until a beep is heard. Favorites also can be saved by touching the ★ in a station or channel list.
5. Repeat the steps to store another favorite item.

PORTABLE AUDIO DEVICES

A USB port and an auxiliary jack are located at the front of the center console to connect portable audio devices.

- Connect an iPod[®], iPhone[®], MP3 Player, a USB flash drive or a USB mass storage device to the USB port.
- Touch Audio, and then touch More and select the USB device.

APPLE CARPLAY™ AND ANDROID AUTO™

Apple CarPlay or Android Auto capability may be available through a compatible smartphone. If available, the Apple CarPlay and Android Auto icons will appear on the home page of the infotainment display.

1. No app is required for Apple CarPlay. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The Apple CarPlay or Android Auto icon will illuminate, depending on the phone. Apple CarPlay or Android Auto may launch automatically upon USB connection. If not, touch the Apple CarPlay or Android Auto icon on the home page.

For more information on using Apple CarPlay or Android Auto, call 1-855-4-SUPPORT (1-855-478-7767) or visit my.chevrolet.com/learn.

See Infotainment System in your Owner's Manual.

BLUETOOTH® SYSTEM

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit my.chevrolet.com/learn for more information.

PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the tone, say “Pair Phone.”
To use the touch screen, select Phone > Add Phone.
2. Start the pairing process on the phone. From your phone’s Bluetooth settings, select the name shown on the infotainment screen.
3. Confirm the codes that appear on the infotainment screen and the phone.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

See Infotainment System in your Owner’s Manual.

ONSTAR® WITH 4G LTE AND WI-FI®

With OnStar 4G LTE and Wi-Fi®, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet through the vehicle’s built-in Wi-Fi hotspot.

- To retrieve the SSID and password for the hotspot, go to Settings > System > Wi-Fi Hotspot; or press the **OnStar Voice Command** button on the overhead console or rearview mirror, wait for the prompt, and then say “Wi-Fi settings.” The information will be displayed on the screen.

For assistance, press the blue **OnStar** button or call 1-888-4-ONSTAR (1-888-466-7827).

Note: See onstar.com for a detailed instruction guide, vehicle availability, and system limitations.

See Infotainment System in your Owner’s Manual.

AUDIO STEERING WHEEL CONTROLS

Push to Talk

 Press to answer an incoming call or interact with the Bluetooth or OnStar® system.

End Call/Mute

 Press to end or reject a call.
Press to mute the vehicle speakers.

Volume

Press + or – to adjust the volume.

SRC Source

Press to select an audio source.




Next/Previous

Rotate the thumbwheel up or down to go to the next or previous favorite radio station or track.

VEHICLE PERSONALIZATION


Some vehicle features can be customized using the Settings menus and the infotainment screen icons. The Settings menus include System, Apps, and Vehicle.

1. Select Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Select Back to exit each menu.

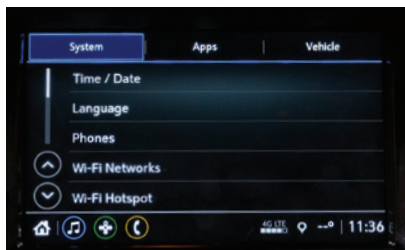

See Instruments and Controls in your Owner's Manual.

CLIMATE CONTROLS

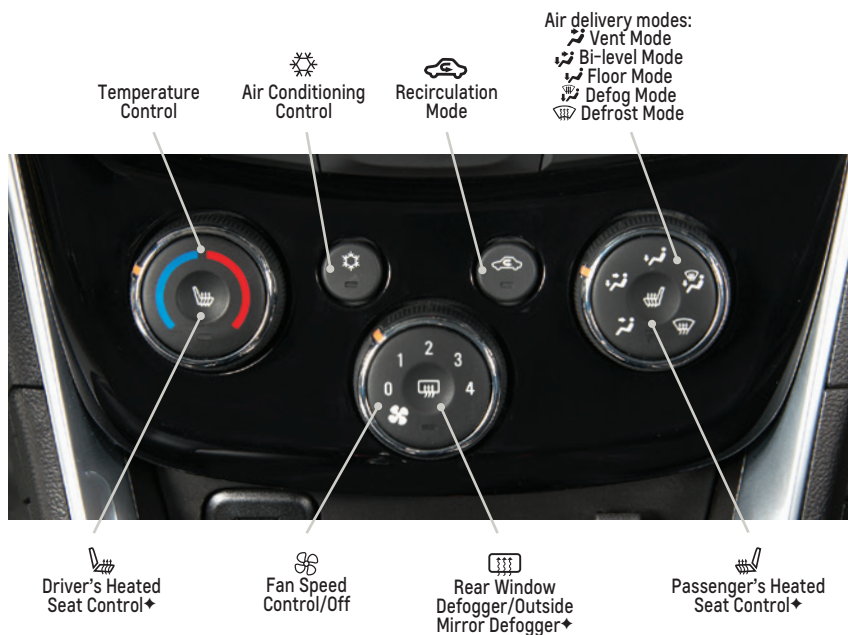

RECIRCULATION MODE

The  Recirculation Mode can help to quickly cool the air inside the vehicle or prevent outside odors from entering the vehicle. When the Recirculation Mode is used without air conditioning, the air humidity increases and the windows may fog.

See Climate Controls in your Owner's Manual.

CRUISE CONTROL ♦

SETTING CRUISE CONTROL

1. Press the  On/Off button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, rotate the thumbwheel down to the SET position to set the speed. The  symbol will illuminate in green on the instrument cluster.

ADJUSTING CRUISE CONTROL

RES/+ Resume/Accelerate

Rotate the thumbwheel up to resume a set speed. When the system is active, rotate the thumbwheel up to increase speed.

SET/- Set/Coast

When the system is active, rotate the thumbwheel down to decrease speed.



Cancel

Press to cancel the cruise control but retain the set speed in memory.

Pressing the brake pedal also will cancel the cruise control.

Turn off cruise control or the vehicle ignition to erase the set speed.

See Driving and Operating in your Owner's Manual.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle system information and warning messages.

DIC CONTROLS

A. MENU

Press to display the Trip menu (may include digital speedometer, trip odometers, fuel range, instantaneous fuel economy, average fuel economy, average vehicle speed, and navigation) or the Vehicle Information menu (may include remaining oil life, tire pressure, and units).

B.

Rotate the switch to scroll through the items of each menu.

C. SET/CLR

Press the button on the end of the lever to set a menu item or clear a message. Press and hold the button to reset a menu item.



See Instruments and Controls in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

LANE DEPARTURE WARNING⁺

The  Lane Departure Warning indicator on the instrument cluster is green when a lane marking is detected. If a detected lane marking is crossed without using a turn signal in that direction, the system flashes an amber  indicator and 3 beeps sound on the side of the departure direction.

- Press the  Lane Departure Warning button on the center of the instrument panel to turn the system on or off.

FORWARD COLLISION ALERT⁺

The  Vehicle Ahead indicator is green on the instrument cluster when a vehicle is detected and is amber when following a vehicle ahead too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and rapid beeps sound.

- Press the  **Forward Collision Alert** button on the left side of the steering wheel to set the alert timing to Far, Medium, Near, or Off.

SIDE BLIND ZONE ALERT⁺

While driving, the system displays a warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- To turn on or off, go to Settings > Vehicle > Collision/Detection Systems.

REAR VISION CAMERA

When the vehicle is in Reverse, a view of the area behind the vehicle is displayed on the infotainment screen.

- To turn the Rear Camera Park Assist Symbols on or off, go to Settings > Vehicle > Collision/Detection Systems or touch the screen button.

Note: Clean the camera lens, located above the license plate, with water and a soft cloth.

REAR CROSS TRAFFIC ALERT⁺

When the vehicle is in Reverse, the system warns of traffic coming in either direction by displaying a red alert on the infotainment screen and sounding 3 beeps.

- To turn on or off, go to Settings > Vehicle > Collision/Detection Systems.

REAR PARKING ASSIST⁺

When the vehicle is in Reverse, detected objects are indicated by audible beeps. The interval between beeps becomes shorter as the vehicle gets closer to an object. When the distance is less than 12 in. (30 cm), the beeps are continuous. The system operates only at speeds less than 5 mph.

- To turn on or off, go to Settings > Vehicle > Collision/Detection Systems.

See Driving and Operating in your Owner's Manual.

AUTOMATIC TRANSMISSION

MANUAL MODE

Manual Mode allows the driver to manually select the range of gear positions. This feature can be used to drive the vehicle in a sportier manner or to downshift when driving on a downhill grade to provide engine braking.

1. Move the shift lever to the Manual (M) position.
2. Press the + (plus) or – (minus) button on the side of the shift lever to upshift or downshift. The current gear will be displayed on the Driver Information Center.



If vehicle speed is too high or too low for the requested gear, the shift will not occur.

See Driving and Operating in your Owner's Manual.

TRACTION CONTROL AND STABILITRAK® SYSTEMS

The traction control system limits wheelspin and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control/StabiliTrak** button on the center of the instrument panel to turn traction control off or back on. The  Traction Control Off light will illuminate on the instrument cluster when the system is off.



See Driving and Operating in your Owner's Manual.

HILL START ASSIST

When stopped on a steep hill, Hill Start Assist prevents the vehicle from rolling before driving off, whether facing uphill or downhill. During the transition between when the driver releases the brake pedal and starts to accelerate, Hill Start Assist holds the brake pressure (for up to 2 seconds) to ensure the vehicle doesn't roll.

Note: Hill Start Assist will not operate if StabiliTrak is disabled.

See Driving and Operating in your Owner's Manual.

STORAGE FEATURES

CARGO SHADE

Remove the Shade

1. Unhook the cords (A) from the liftgate.
2. Lift the shade out of the rear hinges (B).
3. Slide the shade along the channels (C) to store it behind the rear seats.



Install the Shade

1. Insert the shade into the rear hinges.
2. Hook the cords to the liftgate.

See Storage in your Owner's Manual.



TIRE PRESSURE MONITOR

The (!) **Low Tire Pressure** warning light on the instrument cluster illuminates and a message is displayed on the Driver Information Center when a significant reduction in pressure occurs in one or more of the vehicle's tires. The warning light will remain on until the tire pressure is corrected. The proper tire pressures for the vehicle are listed on the Tire and Loading Information label located below the driver's door latch.

Refer to your Owner's Manual for additional information about normal monthly tire maintenance.

See Vehicle Care in your Owner's Manual.

ENGINE OIL LIFE SYSTEM

The Oil Life System calculates engine oil life based on vehicle use and displays Change Engine Oil Soon on the Driver Information Center (DIC) when it's necessary to change the engine oil and filter. The system should be reset to 100% only following an oil change.

See Vehicle Care in your Owner's Manual.

ROADSIDE ASSISTANCE

**1-800-CHEV-USA
(1-800-243-8872)**

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. Chevrolet's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

Roadside Assistance and OnStar®

If you require roadside service and have a current OnStar service plan, press the blue **OnStar** button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

To learn more about OnStar services, press the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP



The myChevrolet mobile app connects owners with a compatible mobile device to a variety of vehicle information and services, such as a searchable Owner's Manual, real-time fuel information, OnStar Vehicle Diagnostic information and Roadside Assistance.

The myChevrolet mobile app also enables users to send remote commands – including remotely starting the vehicle and locking/unlocking the doors – as well as to locate the vehicle on a map and send destinations to the navigation system (vehicles must be properly equipped).

Download the mobile app from your compatible mobile device's app store.

CHEVROLET OWNER CENTER

Get to know your vehicle inside and out with the Chevrolet Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, review your current OnStar Vehicle Diagnostics report (active OnStar account required) and more. Create an account today at my.chevrolet.com.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2017 General Motors. All rights reserved.



GENERAL MOTORS

84098813 A