

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual, which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.

LEARN MORE ABOUT YOUR NEW VEHICLE

To put QR tags to work for you, use your mobile phone's browser or app store to download a QR tag reader. Then follow the directions to scan the QR tag and see your vehicle's features come to life.



owner.ford.com (U.S.)



ford.ca (Canada)



JL2J19G217AA

UNITED STATES

Ford Customer Relationship Center
1-800-392-3673 (FORD)
(TDD for the hearing impaired: 1-800-232-5952)
owner.ford.com



@FordService

CANADA

Ford Customer Relationship Centre
1-800-565-3673 (FORD)
(TDD for the hearing impaired: 1-888-658-6805)
ford.ca



@FordServiceCA

WARNING: Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.



April 2018
Second Printing
Quick Reference Guide
Explorer
Litho in U.S.A.

2018

QUICK REFERENCE GUIDE

EXPLORER



COMMONLY USED VOICE COMMANDS



BASIC COMMANDS

- Main menu
- Go back¹
- Cancel
- List of commands¹
- Next page¹
- Previous page¹
- Help



PHONE

- Phone list of commands
- Pair phone
- Call <name>
- Call <name> <on cell/
at home/at work>
- Dial <number>
- Listen to message



NAVIGATION^{1,2}

- Navigation list of commands
- Drive home
- Find
<an address/a POI/an
intersection>
- Show route
- Where am I?
- SiriusXM Traffic and
Travel Link³ list of commands
 - Show
<traffic/weather map/
5-day forecast/fuel prices>
 - Help



CLIMATE*

- Set temperature <# degrees>



AUDIO

- AM <530-1710>
- FM <87.9-107.9>
- USB¹
- Bluetooth stereo
- Sirius <0-233>³
- <Sirius channel name>³



APPS

- List mobile apps
- Find mobile apps
- <App name>
- <App name> help¹

¹ only available with SYNC 3

² if equipped

³ SiriusXM may not be available
in all markets. Activation and a
subscription are required.

Some services may not be available in your area. Refer to your *Owner's Manual*, visit the website or call the toll-free number for more information.

For U.S. customers: visit owner.ford.com or call 1-800-392-3673 (select Option 1 or 2 for language, then Option 3).

For Canadian customers: visit SyncMyRide.ca or call 1-800-565-3673 (select Option 1 or 2 for language, then Option 3).

TABLE OF CONTENTS

INSTRUMENT PANEL	4-5
SYNC	6-7
SYNC 3	8-10
FUNCTION	11-13
COMFORT	14-15
CONVENIENCE	16-17
ESSENTIAL FEATURES	18-19





INSTRUMENT PANEL

1. ADAPTIVE CRUISE CONTROL*

The system adjusts your vehicle speed to maintain the set gap between you and the vehicle in front of you in the same lane. You can select four gap settings.

To select a gap distance, press the gap control  or . See the *Cruise Control* chapter in your *Owner's Manual* for more details

NOTE: Driving aids do not replace the need to watch where the vehicle is moving and brake when necessary. Refer to your *Owner's Manual* for more details.

*if equipped

2. INFORMATION DISPLAYS*

Provides information about various systems on your vehicle. Use the left-hand controls to choose and confirm settings and messages. See the *Information Displays* chapter in your *Owner's Manual* for more information.

Use the right-hand controls to choose and confirm audio, phone and navigation* settings. See the *SYNC 3* chapter in your *Owner's Manual* for more information.

3. SERVICE ENGINE SOON LIGHT

 Lights briefly when you switch on the ignition. If the light remains on or is blinking after starting the engine, the On-Board Diagnostics (OBD-II) system has detected a problem. Drive in a moderate fashion and have your vehicle serviced at the first available opportunity.

4. AUTOWIPERS*

Use the rotary control to adjust the sensitivity of the autowipers. The autowiper system turns the wipers on only when moisture is present on the windshield.

A low sensitivity means the wipers turn on when the system detects a large amount of moisture on the windshield.

*if equipped

A high sensitivity means the wipers turn on when the rain sensor detects a small amount of moisture on the windshield.

Autowipers default to on and remain on until you switch them off in the information display.

NOTE: Make sure you switch this feature off before entering a car wash.

5. STEERING WHEEL CONTROLS AUDIO CONTROL

Press **VOL +** or **-** to increase or decrease volume levels.

Press **K** or **D** to access the previous or next radio station preset, CD or MP3 track.

VOICE CONTROL*

Press  to access phone mode or answer a call.

Press  to access voice recognition.

6. KEYLESS STARTING*

Allows you to start your vehicle by fully pressing the brake pedal and the **START STOP** button. Press the button again without applying the brake to switch the engine off.

7. 180 DEGREE CAMERA*

The system consists of front and rear cameras.

The system:

- Allows you to see what is directly in front of or behind your vehicle.
- Provides cross traffic view in front of and behind your vehicle.
- Provides visibility during parking maneuvers.

Press the camera button  to toggle between different views.

See the *Parking Aids* chapter of your *Owner's Manual* for details.

NOTE: The front view camera switches off if your vehicle speed exceeds 6 mph (10 km/h). You need to switch the system back on by pressing the camera button  once.

8. HAZARD CONTROL

9. CLIMATE CONTROLLED FRONT SEATS*

Press the  or  repeatedly to cycle through the various modes and off. More lights indicate warmer or cooler settings. See the *Seats* chapter in your *Owner's Manual* for details.

SYNC®

SYNC is an in-vehicle communications system that works with your *Bluetooth* wireless technology-enabled phone and portable media player.

SUPPORT

The SYNC support team is available to help you with any questions you cannot answer on your own.

In the United States, call 1-800-392-3673.

In Canada, call 1-800-565-3673.

DRIVING RESTRICTIONS

For your safety, certain features are speed-dependent and restricted when your vehicle is traveling over 3 mph (5 km/h).

PAIRING YOUR PHONE WITH SYNC

In order to use the many features of SYNC, you must first pair your phone with SYNC.

To Pair Your Phone for the First Time

1. Make sure that your vehicle is in park (P) and switch your ignition and radio on.
2. Press the **PHONE** button. When the audio display indicates there is no paired phone, select the option to add.
3. When a message to begin pairing appears in the audio display, search for SYNC on your phone to start the pairing process.

4. When prompted on your phone's display, confirm that the PIN provided by SYNC matches the PIN displayed on your phone. Your phone is now paired and the display indicates that the pairing was successful. If you are prompted to enter a PIN on your device, enter the PIN displayed on the screen. The display indicates when the pairing is successful.

NOTE: The system may prompt you to set your phone as primary or favorite (the phone SYNC automatically tries to connect with first upon vehicle start-up) and download your phone book.

TIPS

- To pair subsequent phones, please refer to *Pairing Subsequent Cell Phones* in the SYNC chapter of your *Owner's Manual*.
- If you are experiencing pairing problems, try performing a clean pairing by deleting your services from SYNC, deleting the SYNC connection from your phone, and then repeating the process.

WHY DO YOU NEED A SYNC OWNER ACCOUNT?

A SYNC owner account lets you receive the latest software updates, and if you have questions, you'll get free customer support. Visit the website or call the toll-free number for more information. See the inside front cover of this guide for details.

USING YOUR PHONE WITH SYNC

Making a Phone Call

Use SYNC to make a phone call to anyone in your phone book by pressing the voice button  and, when prompted, giving a voice command.

For example, you could say, "Call Jake Smith at home". SYNC repeats the command back to you and dials the number.

Note: You can also make phone calls by pressing the voice button . When prompted, give the voice command, "Dial", then say the phone number.

Answering Incoming Calls

Press the phone button  to answer an incoming call. You can reject the call by pressing the reject call button  on the steering wheel or by using the screen.

USING SYNC TO ACCESS DIGITAL MEDIA

Plug in your USB media devices such as phones and MP3 players and use SYNC to play all of your favorite music.

Using Voice Commands to Play Music

You can use voice commands to access and play music on your digital media player when it is plugged into your media hub.

1. Plug your media player into your USB port.
2. Press the voice button . When prompted, say, "USB", then follow-up by saying a voice command.



SYNC® 3*

A REVOLUTIONARY WAY TO CONNECT WITH YOUR VEHICLE.

USING SYNC 3

The SYNC 3 system allows you to interact with a variety of features using the touchscreen and voice commands. By integrating with your *Bluetooth* wireless technology-enabled phone, the touchscreen provides easy interaction with audio, multimedia, climate control, navigation*, and your phone's SYNC 3 compatible apps.



Pairing Your Phone with SYNC 3

Pair your *Bluetooth* wireless technology-enabled phone with the system before using the functions in hands-free mode.

1. Select **Add Phone**.
2. Follow the on-screen instructions.
3. A prompt alerts you to search for the system on your phone.
4. Select your vehicle's make and model as it displays on your phone.
5. Confirm that the six-digit number appearing on your phone matches the six-digit number on the touchscreen.
6. The touchscreen indicates when the pairing is successful.
7. Your phone may prompt you to give the system permission to access information. To check your phone's compatibility, visit owner.ford.com.



PHONE



After pairing your phone, you can access more phone-dependent features:

- **Recent call lists.**
- **Contacts:** Sort alphabetically and choose a specific letter to begin viewing your entries.
- **Phone settings:** Pair another phone, and set ring tones and alerts.
- **Text messages.**
- **Do not disturb:** Send all calls to your voicemail, and all ring tones and alerts are set to silent mode.

Smartphone Connectivity

SYNC 3 allows you to use Apple CarPlay and Android Auto to access your phone over a USB connection.

When you use Apple CarPlay or Android Auto, you can:

- Make calls.
- Send and receive messages.

*if equipped

- Listen to music.
- Use your phone's voice assistant.

For more information, refer to the SYNC 3 chapter in your *Owner's Manual* for details.



NAVIGATION*



Press the **Navigation*** icon to set your destination. Select one of two ways to find your destination:

- **Destination mode** lets you key in a specific address or use a variety of search methods to locate where you want to go.
- **Map mode** shows advanced viewing of 2-D city maps, 3-D landmarks and 3-D city models (when available).

See the SYNC 3 chapter of your *Owner's Manual* for details.

Set a Destination

Press **Destination** on your touchscreen and then press **Search**. Enter a street address, intersection, city or a Point Of Interest (POI).

You can also use voice commands. Say, "**Find POI**" and then select a category, such as hotels or restaurants.

After you choose your destination, press **Start**. The system uses a variety of screens and visible prompts to guide you to your destination.

The navigation map shows your estimated time of arrival, remaining travel time or the distance to your destination.

Navigation Menu

While you are on your route, you can change your touchscreen view. Touch **Menu** and then select **Screen View** to select from these options:

- **Full Map.**
- **Highway Exit Info** displays on the right side of the touchscreen. View POI icons (restaurants, ATMs, etc.) as they pertain to each exit. You can select a POI as a waypoint, if you wish.
- **Turn List** shows all of the available turns on your current route.

SYNC® 3* CONTINUED



CLIMATE



Access climate control features, including the temperature, airflow direction, fan speed and other climate features for you and your front passenger.

Set Your Temperature*

- Touch the **Climate** icon on the touchscreen.
- Use voice commands to change your settings, like “*Set temperature 72 degrees*” and SYNC 3 makes that adjustment.
- You can also use the ▲ or ▼ buttons on the touchscreen.



AUDIO



No matter how you store your music, SYNC makes it yours to enjoy when you are behind the wheel. Press the **Audio** icon on the touchscreen, and from here, you can easily go between AM/FM, SiriusXM* and other media sources.

Set Your Radio Presets

- Tune to the station. Press and hold one of the preset buttons. The audio mutes briefly while the system saves the station, and then the audio returns.
- Two preset banks are available for AM, three banks for FM and three banks for SiriusXM*. To access additional presets, tap the preset button. The indicator on the preset button shows the bank of presets you are currently viewing.

Bring in Your Own Music

Use SYNC to play all of your favorite music from phones, flash drives and other devices.

Plug your device into a USB port, select **Sources** and then choose **USB**. Wait for the system to finish indexing your music to begin listening.

You can even create random playlists using the **Shuffle** function.



APPS

The system supports the use of certain types of apps through USB or *Bluetooth* wireless technology-enabled devices.

Each app gives you different on-screen options depending on the app's content. To find new apps, use the voice command, “*Find mobile apps*”.

For more information, refer to the SYNC 3 chapter of your *Owner's Manual*.

For support, visit owner.ford.com or call the toll-free number. See the inside front cover of this guide for details.

*if equipped

FUNCTION

ACTIVE PARK ASSIST WITH PARALLEL PARKING, PERPENDICULAR PARKING AND ACTIVE PARK OUT ASSIST*



The system detects an available parallel or perpendicular parking space and automatically steers your vehicle into the space (hands-free) while you control the accelerator, gearshift and brakes. The system visually and audibly guides you to park your vehicle.

- Press the **P** button once for parallel parking or twice for perpendicular parking.
- The system displays a message and a corresponding graphic to indicate that it is searching for a parking space.
- Use the direction indicator to select from which direction you want to begin searching, either to the left- or right-hand side of your vehicle.

*if equipped

Park out assist determines the clearance to the front and rear of your vehicle and automatically steers your vehicle out of a parallel parking space (hands-free) while you control the accelerator, gearshift and brakes.

- While your vehicle is at rest, press the **P** button once.
- The system displays a message requesting a direction. Use the direction indicator to select the left- or right-hand side of your vehicle.

For complete information, refer to the *Parking Aids* chapter of your *Owner's Manual*.

NOTE: Driving aids do not replace the need to watch where the vehicle is moving and brake when necessary. Refer to your *Owner's Manual* for safety information, more details and limitations.

BLIND SPOT INFORMATION SYSTEM (BLIS®) AND CROSS TRAFFIC ALERT*



The Blind Spot Information System aids you in detecting vehicles that may have entered into your blind spot zone. The detection area is on both sides of your vehicle, extending rearward from the exterior mirrors to approximately 13 feet (4 meters) beyond the bumper. The system alerts you if certain vehicles enter the blind spot zone while driving.


NOTE: The Blind Spot Information System's alert flashes at an increased warning level when the system is on and you switch on the corresponding direction indicator.

Cross traffic alert warns you of vehicles approaching from the sides when the transmission is in reverse (R).

Refer to the *Driving Aids* chapter in your *Owner's Manual* for more information.

FUNCTION CONTINUED

SECURICODE™ KEYLESS ENTRY SYSTEM*

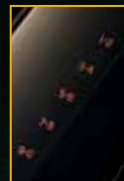

Invisible until touched, the keypad allows you to lock or unlock the doors. You will need your five-digit factory code located on your owner's wallet card

in the glove box. Refer to the *Locks* chapter in your *Owner's Manual* for more information.

DRIVER ALERT*

The system automatically monitors your driving behavior using various inputs including the front camera sensor. If the system detects that your driving alertness is reduced below a certain threshold, the system alerts you using a tone and showing a message in the instrument cluster. Press **OK** on the steering wheel to clear the warning.

FRONT AND REAR PARKING AIDS* AND SIDE SENSING SYSTEM*



These systems warn you of obstacles within a certain range of your vehicle. As you move closer to the detected obstacle, the rate of the warning tone increases in frequency.

The system turns on automatically whenever you switch the ignition on.

The side sensing system uses the front and rear side sensors to detect and map obstacles that are near the sides of your vehicle.

The front sensors are active when the transmission is in any position other than park (P) and your vehicle is traveling at a low speed.

The rear sensors are active only when the vehicle is in reverse (R).

The side sensors are active when the transmission is in any position other than park (P).

Use the parking aid button to switch the front parking aid system off.

Keep the sensors, located on the bumper or fascia, free from snow, ice and large accumulations of dirt. If the sensors are covered, the system's accuracy can be affected. Do not clean the sensors with sharp objects.

See the *Parking Aids* chapter in your *Owner's Manual* for complete information on your vehicle's sensing systems.

CONFIGURABLE DAYTIME RUNNING LAMPS*

When you switch the feature on in the information display, daytime running lamps turn on when you are driving, the lighting control is in the  position and the headlamps are off. You can switch the configurable daytime running lamps feature on or off using the information display controls.

For more complete information, see the *Lighting* chapter of your *Owner's Manual*.

SELECTSHIFT® AUTOMATIC TRANSMISSION*

Gives you the ability to manually change gears.

Pull the (+) paddle on the steering wheel or push the + button on the gearshift lever to activate SelectShift.

For vehicles with gearshift lever controls:

- Push the toggle switch (+) to upshift.
- Push the toggle switch (–) to downshift.

For vehicles with steering wheel paddles:

- Pull the right paddle (+) to upshift.
- Pull the left paddle (–) to downshift.

MYKEY®

MyKey allows you to program certain driving restrictions in order to promote good driving habits. You can program things like speed restrictions and limited volume levels. For complete information, refer to the *MyKey* chapter in your *Owner's Manual*.

LANE KEEPING SYSTEM*

When you switch the system on and the system detects an unintentional drift out of your lane is likely to occur, the system notifies or assists you to stay in your lane through the steering system and information display. Depending on the feature operation mode you select, the system provides a warning by vibrating the steering wheel (Alert Mode) or a steering assistance (Aid Mode) by gently counter steering your vehicle back into the lane. The system can also provide both warning (vibrating the steering wheel) and steering assistance (gently counter steering your vehicle back into the lane) while Aid+Alert mode is selected.

You can switch the system on or off by pressing the button on the direction indicator.

Refer to the *Driving Aids* chapter of your *Owner's Manual* for system operation and limitations

PRE-COLLISION ASSIST*

The system alerts you of certain collision risks. The system's sensor detects your vehicle's rapid approach to other vehicles traveling in the same direction as your vehicle. When your vehicle rapidly approaches another vehicle, a red warning light flashes and a tone sounds.

If the risk of collision continues to increase, the brake support prepares the brake system for rapid braking. The system does not automatically activate the brakes, but if you press the brake pedal even lightly, the brakes apply full stopping power.

POST-CRASH ALERT SYSTEM™

The system flashes the direction indicators and sounds the horn intermittently in the event of a serious impact that deploys an airbag (front, side, side curtain or Safety Canopy) or the safety belt pretensioners.

The horn and lamps turn off when:

- You press the hazard control or the panic button on your transmitter*.
- Your vehicle runs out of power.

COMFORT

TILTING HEAD RESTRAINTS*



The front head restraints tilt for extra comfort. To tilt the head restraint, do the following:

1. Adjust the seatback to an upright driving or riding position.
2. Pivot the head restraint toward you to the desired position.

After the head restraint reaches the forward-most tilt position, pivoting it forward again releases it to the rearward, un-tilted position.

SECOND-ROW HEATED SEATS*

To operate, press  on the rear of the floor console repeatedly to cycle through the various heat settings and off. More lights indicate warmer settings. See the *Seats* chapter in your *Owner's Manual* for details.

POWER ADJUSTABLE PEDALS*

Use the  control on the left side of the steering column. Press  to move the pedals farther away from you or  to move the pedals closer to you. Adjust the pedals only when the vehicle is in park (P).

POWER TILT AND TELESCOPE STEERING COLUMN*

Use the control on the side of the steering column to tilt and telescope the steering wheel to your desired position.

MEMORY FUNCTION*

Allows one-touch recall of memory positions for the driver seat, power mirrors, steering column* and power-adjustable pedals*. Use the memory controls on the driver door to program and then recall memory positions. To program position 1, adjust the memory features to your desired positions then press and hold the 1 button until you hear a tone.

Use this same procedure to set positions 2 and 3 using the respective buttons. Once programmed, you can use these controls to recall the set memory positions.

You can also program your memory seat to your transmitter. That way, when you unlock your door with the

transmitter, your memory features automatically move into your saved positions. Following the procedure above, press and hold the desired preset button until you hear a tone. Continue holding until you hear a second tone. Within three seconds, press the lock button on the remote control you are linking.

To unlink a remote control, follow the same procedure, except in the final step, press the unlock button on the remote control.

AMBIENT LIGHTING*



Press Settings then Ambient Lighting to activate ambient lighting. Tap a color once to set the color to the highest intensity. You can drag the colors up and down to increase or decrease the intensity.

To switch ambient lighting off, press the active color once or drag the active color all the way down to zero intensity.

FLAT-FOLDING THIRD-ROW MANUAL SEAT*

NOTE: Make sure that the area under the seat is free of objects before stowing it.



To fold and stow the third-row seat:

1. Remove all objects from the seat and floor stowage tub area.
2. Fold the head restraint by pulling the head restraint release strap.
3. From the rear of the vehicle, fold the seatback by pulling and holding the red strap while pushing the seatback forward. Release the strap when the seatback starts rotating forward.
4. To fold the seat fully into the floor, release the cushion latches by pulling two straps at the same time: the short black strap (next to the red strap) and the head restraint release strap.



To unfold the third-row seat:



NOTE: Make sure that the area is free of objects before unstowing it.

1. Unlatch and lift the seat out of the tub in the floor by squeezing and pulling up on the handle. When the seat is in a vertical position, push the seat over, letting it fall onto the latches.
2. To return the seatback to the upright position, pull the red strap. Then while holding the red strap, pull the long strap located on the back of the seat to raise the seatback.
3. Pull the head restraints up to their normal positions.

POWERFOLD® THIRD-ROW SEATS*

These seats feature a power, one-touch operation that allows you to fold and stow the seats. See the *Seats* chapter in your *Owner's Manual* for details.


CONVENIENCE

KEYLESS TRANSMITTER ICONS*

- Press  once to lock all doors. Press again within three seconds to confirm all doors are locked.
- Press  once to unlock the driver door. Press again within three seconds to unlock all doors.
- Press  to start the panic alarm. Press again or switch on the ignition to stop the alarm.
- Press  twice within three seconds to open the liftgate.
- **Car finder:** Press  twice within three seconds to locate your vehicle. The horn sounds and the direction indicators flash.

INTELLIGENT ACCESS*

You can unlock and lock the vehicle without taking the key out of your pocket or purse when your intelligent access key is within 3 feet (1 meter) of your vehicle.

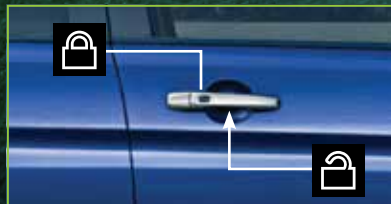

To unlock, touch the unlock sensor on the back of the door handle for a brief period and then pull on the door handle, being careful not to touch the lock sensor at the same time or pull the door handle too quickly.

To lock, touch the door handle lock sensor on the door for approximately one second, being careful not to touch the unlock sensor on the back of the door handle at the same time.

REMOTE START*

Remote start allows you to start the engine from outside your vehicle using your transmitter. To start, press  and then press  twice within three seconds. Your vehicle will run for 5, 10 or 15 minutes, depending on the setting.

See the *Information Displays* chapter in your *Owner's Manual* to select the duration of the remote start system. Once inside, switch the ignition on as you normally would before driving. To switch the engine off from outside the vehicle after using your remote start, press  once.

REMOTE CONTROL FRONT WINDOWS*

You can open the front windows for a short time after you unlock your vehicle with the remote control.

After you unlock your vehicle, press and hold the remote control unlock button to open the windows. Release the button once movement starts. Press the lock or unlock button to stop movement.

NOTE: To operate this feature, accessory delay must not be active.

NOTE: You can switch this feature on and off in the information display, or see an authorized dealer.

110-VOLT AC POWER POINT*

The power point is on the rear of the center console and can be used to power your smaller electrical devices that do not exceed 150 watts. You can use this feature after you switch your ignition on and the battery voltage is above 11 volts. When the indicator light is on, the power point is working and ready to use.



*if equipped

POWER LIFTGATE*



Your liftgate has an automatic open and closing feature. To open remotely, press  twice on

your transmitter within three seconds. To use the power feature from the driver seat, press the  control located on the instrument panel.

You can also program a new liftgate height, by opening the liftgate. Stop the liftgate movement by pressing the control button on the liftgate when it reaches the desired height. Press and hold the liftgate control button on the liftgate until you hear a tone, indicating programming is complete.

NOTE: Once the liftgate has stopped moving, you can also manually move it to the desired height.

*if equipped

HANDS-FREE LIFTGATE OPERATION*

To Open Your Liftgate Hands-Free While You Are at the Liftgate

1. Make sure you have an intelligent access transmitter* within 3 feet (1 meter) behind the liftgate.
2. Move your foot under and away from the rear bumper using a single kicking motion. Do not move your foot sideways or the sensors may not detect the motion.

Kick between the exhaust and hitch if your vehicle is equipped with a hitch.

MOONROOF AND POWER SUNSCREEN*

Use the one-touch, express-opening and express-closing feature to control various functions. To open, press and release the **SLIDE** control. The sunscreen opens automatically and the moonroof opens to the first position. To open the moonroof fully, press and release the **SLIDE** control again. To close, pull and release the **SLIDE** control. Press and release the **TILT** control to vent the moonroof. Pull and hold the **TILT** control to close the moonroof. To open the sunscreen, press and release . Pull and release  to close the sunscreen.

AUTO-FOLDING EXTERIOR MIRRORS*

This feature automatically folds the exterior mirrors toward the glass after you place the transmission into park (P), switch off the vehicle, open and close the driver door and lock the vehicle. The exterior mirrors automatically unfold and return to the driving position after you unlock the vehicle and open and close the driver door. Additionally, you can use the control on the door to fold the mirrors on-demand.

NOTE: If you use the power-fold control to fold the mirrors on-demand and the auto-fold feature is switched on, you must use the control again to unfold them. See the *Windows and Mirrors* chapter in your *Owner's Manual* for complete details.





ESSENTIAL FEATURES

REFUELING

When fueling your vehicle, put your vehicle in park (P) and switch the ignition off. Open the fuel filler door. Insert the fuel pump nozzle up to the first notch on the nozzle. Leave the nozzle fully inserted until you finish pumping. Wait at least 5 seconds before removing the fuel pump nozzle to allow any residual fuel to drain back into the fuel tank. Slowly remove the fuel pump nozzle and fully close the fuel tank filler door.

NOTE: When using a portable fuel container, pour fuel into the fuel funnel (located in the spare wheel storage tray). Do not use aftermarket funnels as they will not work with the capless fuel system and may cause damage. Properly clean or dispose of the funnel after each use.

FUEL TANK CAPACITY AND FUEL INFO

Your vehicle has a fuel tank capacity of 18.6 gallons (70 liters).

If your vehicle has a yellow fuel filler cap, a yellow bezel around the fuel filler inlet, a yellow fuel filler housing or a yellow E85 label on the fuel tank filler door, you have a flex fuel vehicle and can use either regular unleaded fuel, E85 ethanol fuel or any mixture of the two. Add at least half a tank of fuel when switching between regular unleaded fuel or E85. See the *Fuel and Refueling* chapter in your *Owner's Manual* for complete flex fuel usage details.

Non-flex fuel vehicles use only UNLEADED fuel or UNLEADED fuel blended with a maximum of 15% ethanol and a minimum octane rating of 87. Do not use any other fuel because it could damage or impair the emission control system.

Premium fuel can provide improved performance and is recommended for severe duty usage such as trailer towing.

TRAILER TOW*



Before you tow, refer to your *Owner's Manual* for complete information on weight, details and limitations, as well as safety information and the proper equipment to use while towing.

TOWING YOUR VEHICLE

Towing your vehicle behind an RV or any other vehicle may be limited. Refer to the *Towing the Vehicle on Four Wheels* section in the *Towing* chapter of your *Owner's Manual*.

TRAILER SWAY CONTROL*

This feature helps reduce trailer sway when it begins by applying your vehicle brakes at individual wheels and, if necessary, reducing engine power.

For more complete information, see the *Towing* chapter of your *Owner's Manual*.

*if equipped

TERRAIN CONTROL*

This system optimizes drivability and comfort as well as maximizing traction. Turn the dial on the center console to select from the following modes:



Grass/Gravel/Snow: Use this mode where loose or slippery material covers a firm surface.



Sand: Use this mode on soft, dry sand or deep gravel terrain.



Mud/Ruts: Use this mode on muddy, rutted, soft or uneven terrain.



Normal: Use this mode for on-road conditions.



*if equipped

HILL DESCENT CONTROL™*



Hill descent control allows the driver to set and maintain vehicle speed while descending steep grades on various surface conditions. To switch the system on, press  located in the center of the terrain management dial. The icon lights up and a tone sounds when the system is on. Use your pedals to increase or decrease your speed as you normally would, until you reach your desired speed. Remove your feet from the pedals to maintain your speed.

OPEN WINDOW BUFFETING

When one of the windows is open, you may hear a pulsing noise. Lower the opposite window slightly to reduce this noise.

USB PORT*

Plug in, charge and listen to your playlists, or just use the smart-charge feature to power up your USB devices.

LOCATION OF SPARE TIRE AND TOOLS

Your spare tire and tools are under the floor panel in the rear of the vehicle. Use the spare tire for emergency use only and replace it as soon as possible.

For complete details on changing your tire, refer to the *Changing a Road Wheel* section in the *Wheels and Tires* chapter of your *Owner's Manual*.

ROADSIDE ASSISTANCE

Your new Ford vehicle comes with the assurance and support of 24-hour emergency roadside assistance.

To receive roadside assistance in the United States, call 1-800-241-3673. In Canada, call 1-800-665-2006.