



GETTING TO KNOW YOUR 2018 TERRAIN

Instrument Panel.....	2	Front Seats.....	7	Wireless Charging.....	15
Remote Keyless Entry Transmitter.....	4	Rear Seats.....	8	Vehicle Personalization.....	15
Keyless Access System.....	4	Wipers and Washers.....	8	Driver Assistance Systems.....	16
Keyless (Pushbutton) Start.....	5	Lighting.....	9	Cruise Control.....	18
Auto Engine Stop/Start Operation.....	5	Universal Remote System.....	9	Traction Select System.....	18
Electronic Precision Shift Transmission.....	6	Climate Controls.....	10	Hill Descent Control.....	19
Electric Parking Brake.....	6	Driver Information Center.....	11	Tire Pressure Monitor.....	19
Steering Wheel Adjustment.....	7	Audio Steering Wheel Controls.....	11	Power Programmable Liftgate.....	19
		Infotainment System.....	12	Roadside Assistance.....	20
		Bluetooth System.....	14	myGMC Mobile App.....	20
		OnStar with 4G LTE and Wi-Fi.....	15	GMC Owner Center.....	20



gmc.com

Review this Quick Reference Guide for an overview of some important features in your GMC Terrain. Some optional equipment described in this guide may not be included in your vehicle. More information can be found in your Owner's Manual and at my.gmc.com/learn.

For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.

INSTRUMENT PANEL

Power Mirror/
Window
Controls

Memory
Seat
Buttons

Exterior-Interior Lamp
Controls/ Electric
Parking Brake Switch

Turn Signal
Lever/IntelliBeam
Button

Driver
Information
Center

Windshield
Wipers Lever

Engine Start-
Stop Button



Power
Liftgate
Control

Cruise Control/Forward
Collision Alert/Heated
Steering Wheel Buttons

Audio Next-Previous
Favorite Station
Controls (behind
steering wheel)

Steering Wheel
Adjustment
Lever

Audio Volume
Controls
(behind
steering wheel)

Driver Information
Center Controls/
Voice Recognition
Buttons

Symbols



Check Engine



Engine Oil Pressure



Lane Keep Assist Warning



Airbag Readiness



Cruise Control Set



Service Electric Parking Brake



Traction Control/StabiliTrak
Active



Charging System



Security



Safety Belt Reminder



BRAKE Brake System Warning



Electric Parking Brake



IntelliBeam Lighting



Lights On Reminder



Antilock Brake System Warning



Low Tire Pressure



Power Steering Warning



Vehicle Ahead



StabiliTrak Off



Passenger Safety Belt Reminder

Refer to your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators of the instrument cluster.

See In Brief in your Owner's Manual.

◆ Optional equipment

REMOTE KEYLESS ENTRY TRANSMITTER



Lock

Press to lock all doors.



Unlock

Press to unlock the driver's door. Press again to unlock all doors.



Power Liftgate[◆]

Press twice to open or close the liftgate. Press once to stop power liftgate operation.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The exterior lamps will flash and the horn will sound.

Press and hold to activate the alarm. Press it again to cancel the alarm.

Note: To change the remote settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.



Remote Vehicle Start

Press and release the Lock button and then immediately press and hold the button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 10 minutes. Repeat these steps to run the engine for an additional 10 minutes. A remote start can be extended once.
- Press and hold the button until the parking lamps turn off to cancel a remote start.

Remote Start Auto Heated/Vented Seats[◆]:

Select the Remote Start Auto Heat Seats or Remote Start Auto Cool Seats option in the Vehicle Settings to have the heated or vented seats turn on during a remote start. The seat button indicators do not illuminate and the temperature performance of the unoccupied seats may be reduced during a remote start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors, ignition and liftgate without removing the Remote Keyless Entry transmitter from your pocket or purse. **The transmitter must be within 3 feet of the door being unlocked or the liftgate.**

Keyless Unlocking

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the lock button on a passenger door handle to unlock all doors.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.



Keyless Locking

With the ignition off, the transmitter removed from the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay.

Note: To change the keyless locking and unlocking settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

KEYLESS (PUSHBUTTON) START

Starting the Engine

- ▶ With the vehicle in Park or Neutral, **press the brake pedal** and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.

Note: The transmitter must be in the vehicle to turn on the ignition. If the transmitter battery is weak, place the transmitter in the driver's-side cupholder in the center console to enable the engine to start. Replace the transmitter battery as soon as possible.



Stopping the Engine/Off

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof♦ until any door is opened.

Accessory Mode

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the accessory mode. The amber indicator on the button will illuminate.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START OPERATION

An automatic stop/start system has been integrated with the engine to help conserve fuel. While driving, when the brake pedal is applied and the vehicle is at a complete stop, the automatic stop/start system may turn off the engine, depending on operating conditions. When the engine is off, the tachometer gauge will read AUTO STOP. Upon releasing the brake pedal or applying the accelerator pedal, the engine will restart. After parking the vehicle and turning off the engine, the tachometer gauge will read OFF.

The engine may remain running or restart if:

- A minimum vehicle speed is not reached.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The transmission is in any gear other than Drive [D].
- The battery charge is low.
- The climate control system requires the engine to run based on the current settings.
- The Auto Stop time is greater than 2 minutes.



See Driving and Operating in your Owner's Manual.

ELECTRONIC PRECISION SHIFT TRANSMISSION

The Electronic Precision Shift transmission control switches are located on the front console. The selected gear position illuminates in red on the switch. Bring the vehicle to a complete stop before shifting the transmission.

Park – Press the **P** button to shift to Park.

Reverse – Pull the **R** switch to shift to Reverse.

Neutral – Press the **N** button to shift to Neutral.

Drive – Pull the **D** switch to shift to Drive.



Electronic Range Select (Manual) Mode

Electronic Range Select Mode allows you to choose the top gear limit. It can be used to limit the vehicle's speed when driving on a downhill grade or towing a trailer.

1. Press the **L (Low)** button.
2. Press the **+** (plus) or **-** (minus) button to increase or decrease the gear range available. The current gear is displayed on the Driver Information Center.

If vehicle speed is too high or low for the requested gear, the shift will not occur.

Car Wash Mode

The Car Wash Mode enables the vehicle to remain in Neutral when using automatic car washes. There are different procedures for when the driver remains in or exits the vehicle and for vehicles equipped with a gasoline or diesel engine. Refer to your Owner's Manual for more information.

See Driving and Operating in your Owner's Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, press the **(P) Parking Brake** button on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the **(P)** button.

Note: The parking brake will release automatically if the vehicle is running, placed into gear and an attempt is made to drive.



See Driving and Operating in your Owner's Manual.

STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, push down the lever under the steering column to adjust the steering wheel. The steering wheel can be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.

See Instruments and Controls in your Owner's Manual.

FRONT SEATS

Power Seat Adjustments[◆]

A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

B. Seatback Recline Adjustment

Move the top of the vertical control to recline or raise the seatback.

C. Lumbar Support Adjustment

Press and hold the rear control to adjust the lumbar support.



Set Memory Seat Positions[◆]

With the ignition On or in Accessory mode:

1. Adjust the seat and power outside mirrors to the desired positions.
 2. Press and release the **SET** button on the driver's door. A beep will sound.
 3. Immediately press and hold button **1** or **2** until two beeps sound.
- ▶ To store a seat position for when exiting the vehicle, repeat these steps using the  **Exit** button.



Recall Memory Seat Positions[◆]

- ▶ Press and hold button **1**, **2** or  **Exit** until the seat and mirrors reach the set position.

The memory/exit positions can be programmed to be recalled automatically.

- ▶ To set Auto Memory Recall or Easy Exit Options, go to Settings > Vehicle > Comfort and Convenience.



Fold-Flat Front Passenger Seatback

1. Lower the head restraint and move the seat as far back as possible.
 2. Lift the recline lever (D) and fold the seatback forward.
- ▶ To raise the seatback, lift the recline lever and fully raise the seatback.


REAR SEATS

Recline the Rear Seat

- Pull the lever (A) on the top of the seatback and move the seatback to the desired position. Release the lever.

Fold the Rear Seatback

1. Press the button on the head restraint. It will fold automatically.
2. Pull the lever (A) on the top of the seatback and fold the seatback forward. A tab near the lever is visible when the seatback is unlatched.
3. To fold the seatback from the cargo area, pull the top lever (B) (passenger's side seat) or bottom lever (C) (driver's side seat) located on the passenger's side of the rear cargo area.

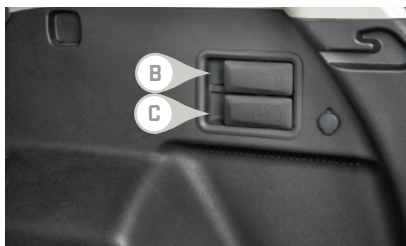

Rear Seat Reminder

A Rear Seat Reminder message may display on the Driver Information Center when the vehicle is turned off. Check the rear seat before exiting the vehicle. The system does not actually detect objects in the rear seat; instead, under certain conditions, it detects when a rear door is opened and closed during a trip, indicating that there may be something in the rear seat.

See Seats and Restraints in your Owner's Manual.

WIPERS AND WASHERS

Windshield Wipers

Raise or lower the wiper lever.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes


Rotate the band up for more frequent wipes or down for less frequent wipes.

OFF

1x Single Wipe

Washer Fluid

Pull the lever toward you to spray washer fluid on the windshield.

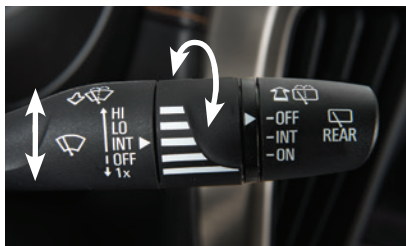

Rear Wiper

Turn the end of the lever.

OFF

INT Intermittent Wipes

ON

Rear Washer Fluid

Push the lever away from you to spray washer fluid on the rear window.

See Instruments and Controls in your Owner's Manual.

LIGHTING

Exterior Lamp Control

Rotate the knob on the left side of the instrument panel to activate the exterior lamps.

 **Off/On**

AUTO

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

 **Parking Lamps**

 **Headlamps**

 **Fog Lamps**♦

Press the button to turn the fog lamps on or off.

Instrument Panel Lighting

 **Instrument Panel Illumination**

Press and release the knob to extend it. Turn the knob to adjust the instrument panel lighting.

IntelliBeam System♦

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions. A green  indicator displays on the instrument cluster when the system is on; a blue  indicator displays when the high-beam headlamps are on.

- ▶ Press the  button on the turn signal lever with the exterior lamp control in the AUTO or  Headlamps position to turn the IntelliBeam system on or off.

Note: IntelliBeam activates the high-beam headlamps only when driving over 25 mph. The IntelliBeam system is turned off if the fog lamps are on.

See Lighting in your Owner's Manual.



UNIVERSAL REMOTE SYSTEM

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting.

Go to www.homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.



See Instruments and Controls in your Owner's Manual.

CLIMATE CONTROLS



Dual Automatic Climate Controls ♦ shown

Automatic Operation ♦

- Press AUTO.
- Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation functions to maintain the set temperature. Allow time for the system to reach the desired temperature. If the functions are manually adjusted, full automatic operation is canceled.

Auto Defog ♦ and Auto Rear Window Defog ♦

Auto Defog and Auto Rear Defog automatically turn on when the engine is started.

- Go to Settings > Vehicle > Climate and Air Quality to turn the Auto Defog or Auto Rear Defog settings on or off.

See Climate Controls in your Owner's Manual.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle system information and warning messages.

Use the controls on the right side of the steering wheel to view the Trip, Vehicle and Eco menus (base DIC) or the Info (includes trip and fuel information), Navigation, and Options menus (uplevel DIC)♦.

DIC Controls

- ▶ Press the ◀ or ▶ button to move between the display zones. Press the left ◀ to go back to the previous menu.
- ▶ Press the ▲ or ▼ button to scroll through the menus.
- ▶ Press the ✓ button to open a menu, or select or reset an item.



Uplevel DIC ♦ shown

Info Pages Menu ♦

1. Use the controls to display the Options menu. Press ✓.
2. Scroll to display Info Pages. Press ▶ to view the items.
3. Select Edit List and press ▲ or ▼ to scroll through the list of items.
4. Press ✓ to select or deselect an item to display.

See Instruments and Controls in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

Push to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.

Press and hold to activate phone voice recognition (Voice Pass-Thru/Siri® Eyes Free) with a paired, compatible phone.

End Call/Mute

Press to end or decline a call.

Press to mute/unmute the vehicle speakers.

Volume (behind right side of steering wheel)

Press the top or bottom button to adjust the volume.

Next/Previous Favorite Station (behind left side of steering wheel)

Press the top or bottom button to go to the next or previous favorite radio station or track.



Next/Previous Favorite Station button shown. Volume button is located behind the right side of the steering wheel.

INFOTAINMENT SYSTEM

Refer to your Owner's Manual for important information about using the infotainment system while driving.



Uplevel radio with 8-inch diagonal screen ♦ shown

The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone, cell phone, USB flash drive or portable audio player/iPod®, and offers hands-free voice control. For assistance with the infotainment system, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or go to my.gmc.com/learn.

INFOTAINMENT SYSTEM

Setting the Time

1. Select Settings on the Home page.
 2. Select System > Time/Date.
 3. Select Set Time.
 4. Touch the arrows to adjust the hours and minutes.
 5. Press the **BACK** button to exit the menu.
- Turn on Automatic Time and Date to have the time updated automatically as the system obtains information from the cellular network.

Storing Favorites

Radio stations from all bands (AM, FM or SiriusXM[®]) can be stored in any order.

1. Display the desired radio station.
2. Select the desired page of favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.
4. Repeat the steps to store another favorite item.

Note: To change the number of favorites displayed, go to Settings > System > Favorites.



Natural Voice Recognition[♦]

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the **Push to Talk** button on the steering wheel.
2. The radio will play a prompt followed by a beep.
3. After the beep, say what you want it to do using natural speech.
 - Example Phone command (using your paired phone): "Call Amanda" or "Call 555-1212"
 - Example Media Music Device Search command (when connected to USB only): "Play artist [name]" or "Play song [name]"
 - Example Radio command: "Tune FM 104.3" or "Tune XM Classic Vinyl"
 - Help: Say "Help" for voice recognition assistance

Portable Audio Devices

The front USB ports are for data and charging. Other USB ports are for charging only.

- Connect an iPod[®], iPhone[®], MP3 Player, or a USB flash drive to a USB port. Search for music on-screen or by voice commands.
- Select the Audio icon or press the **MEDIA** button to select a portable device as the audio source.



INFOTAINMENT SYSTEM

Apple CarPlay™ and Android Auto™

Apple CarPlay or Android Auto capability may be available through a compatible smartphone. If available, the icons will appear on the home page of the infotainment display.

1. No app is required for Apple CarPlay. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your phone by plugging the compatible phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The Apple CarPlay or Android Auto icon, depending on the phone, will brighten. Apple CarPlay or Android Auto may launch automatically upon USB connection. If not, select the Apple CarPlay or Android Auto icon on the home page.



For more information on using Apple CarPlay or Android Auto, visit my.gmc.com/learn.

GMC Shop

In-vehicle apps are available for download to the infotainment system through the SHOP icon on the home page. Downloading and using the apps requires internet connectivity and a data plan accessed through the vehicle's OnStar 4G LTE Wi-Fi hotspot, if active, or a mobile device hotspot.

See your Infotainment System Manual.

BLUETOOTH® SYSTEM

Refer to your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit my.gmc.com/learn for more information.

Pair a Phone

1. To use voice recognition, press the  **Push to Talk** button on the steering wheel; after the beep, say "Pair Phone."
To use the infotainment screen, select the Phone icon > Connect Device > Add Device.
2. Start the pairing process on your phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Confirm the codes that appear on the infotainment screen and the phone.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded depending on the phone.

Streaming Audio

With a paired device connected via Bluetooth, select the Audio icon or press the **MEDIA** button until Bluetooth is displayed on the infotainment screen to stream audio from the device. Control audio operation using the device controls or infotainment controls.

ONSTAR® WITH 4G LTE AND WI-FI®

With OnStar 4G LTE and Wi-Fi, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet through the vehicle's built-in Wi-Fi hotspot.

- To retrieve the SSID and password for the hotspot, go to Settings > System > Wi-Fi Hotspot; or press the **OnStar Voice Command** button on the overhead console or rearview mirror, wait for the prompt, and then say "Wi-Fi settings." The information will be displayed on the screen.



For assistance, press the blue **OnStar** button or call 1-888-4-ONSTAR (1-888-466-7827).

Note: See onstar.com for a detailed instruction guide, vehicle availability, details, and system limitations.

See your Infotainment System Manual.

WIRELESS CHARGING◆

The wireless charging slot for charging smartphones is located in front of the center console armrest. To check smartphone compatibility, visit my.gmc.com/learn. See your phone retailer for required phone accessories or charging adapters.

1. The vehicle must be On or Retained Accessory Power must be active.
2. Remove all objects from the charging slot.
3. Place the smartphone facing rearward in the slot.
4. The battery charging symbol will display on the infotainment screen when charging.



See Instruments and Controls in your Owner's Manual.

VEHICLE PERSONALIZATION

Some vehicle features can be customized using the Settings menus and the infotainment screen icons. The Settings menus include System, Apps, and Vehicle.

1. Select Settings on the Home screen.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Press BACK to exit each menu.



See Instruments and Controls in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety Alert Seat[◆]

The driver's seat pulses – left side, right side or simultaneously – to alert the driver of the direction of potential hazards.

- ▶ Audible alerts or seat pulsing alerts may be selected. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

Lane Change Alert with Side Blind Zone Alert[◆]

While driving, the system displays a  warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

Forward Collision Alert[◆]

The  Vehicle Ahead indicator is green when a vehicle is detected and is amber when following a vehicle ahead too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or beeps sound (if selected).

- ▶ Press the  **Forward Collision Alert** button on the steering wheel to set the alert timing to Far, Medium, or Near.

Following Distance Indicator[◆]

The following time to the vehicle ahead is indicated in seconds under the Info menu on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.

Forward Automatic Braking[◆]

The brakes may be applied automatically in potential collision situations to help reduce damage or help avoid collisions with vehicles directly ahead.

- ▶ To set Forward Automatic Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System.

Lane Keep Assist with Lane Departure Warning[◆]

The system may help avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking without using a turn signal in that direction, the system may assist by gently turning the steering wheel and displaying an amber .

If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. In order to use this system safely, the driver needs to steer and be in complete control of the vehicle.

- ▶ To turn the system on or off, press the  **Lane Keep Assist** button on the center console.

DRIVER ASSISTANCE SYSTEMS

Front[◆] and Rear Vision Camera

When the vehicle is in Reverse, a view of the area behind the vehicle displays on the infotainment screen. After shifting from Reverse to Drive, a view of the area in front of the vehicle displays. Vehicle speed must be below 5 mph.

- ▶ Touch the **Front** or **Rear Camera** button on the camera screen to display either view.
- ▶ Touch the **Guidance Lines** button on the camera screen to turn the guidelines on or off.

Surround Vision[◆]

The Surround Vision system displays a bird's-eye view of the area surrounding the vehicle on the infotainment screen when the vehicle is in Reverse or Drive below 5 mph.



Front[◆] and Rear[◆] Parking Assist

During low-speed parking maneuvers, the system provides "distance to closest object" information on the Driver Information Center, the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses 5 times or beeps sound (if selected).



Rear Cross Traffic Alert[◆]

When the vehicle is in Reverse, the system warns of traffic coming in either direction by displaying a red alert on the infotainment screen and pulsing the left or right side of the Safety Alert Seat or sounding beeps (if selected).

- ▶ To turn only Rear Cross Traffic Alert on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert.
- ▶ To turn Front and Rear Parking Assist and Rear Cross Traffic Alert on or off, press the **P**  **Parking Assist** button on the center console.

Automatic Parking Assist[◆]

Automatic Parking Assist steers the vehicle to help park in parallel and perpendicular spaces. You must still shift gears and control the brakes and accelerator.

1. Press the **P**  **Automatic Parking Assist** button on the center console. A beep sounds and a parking assist display is shown on the infotainment screen. The system will begin searching for a large enough parking space.
2. Once a space is found, shift the vehicle into Reverse to engage automatic steering.
3. Remove your hands from the steering wheel and accelerate or brake as required. Directions are displayed on the infotainment screen. Parking Complete is displayed and a beep sounds when the parking maneuver is complete.

See Driving and Operating in your Owner's Manual.

CRUISE CONTROL

Setting Cruise Control

1. Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the **SET-** button to set the speed. The  symbol will illuminate in green on the instrument cluster.

Adjusting Cruise Control

RES+ Resume/Accelerate

Press to resume a set speed. When the system is active, press to increase speed.

SET- Set/Coast

When the system is active, press to decrease speed.

Cancel

Press the  button, or press the brake pedal, to cancel the cruise control without erasing the set speed from memory. The set speed is erased when Cruise Control or the vehicle ignition is turned off.



See Driving and Operating in your Owner's Manual.

TRACTION SELECT SYSTEM

The Traction Select system automatically adjusts various vehicle control systems based on driving preferences, weather and road conditions.

- Rotate the Driver Mode Control knob on the center console to the desired mode.

FWD Models:

 Tour

 Snow

 Tow/Haul ◆

AWD Models:

 Tour

 All-Wheel Drive

 Off-Road

 Tow/Haul ◆



The AWD indicator will illuminate when an all-wheel drive mode is selected.

See Driving and Operating in your Owner's Manual.

HILL DESCENT CONTROL

Hill Descent Control sets and maintains vehicle speed from 2-14 mph while descending a very steep incline in a forward or reverse gear.

- ▶ Press the  **Hill Descent Control** button on the center console. Vehicle speed must be below 31 mph to turn on the system.
- ▶ Increase or decrease speed by applying the accelerator or brake pedal or use the Cruise Control +/- buttons on the steering wheel. The adjusted speed becomes the new set speed. The  symbol flashes on the instrument cluster when the system is actively applying the brakes to maintain vehicle speed.

See Driving and Operating in your Owner's Manual.

TIRE PRESSURE MONITOR

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label located below the driver's door latch. Current tire pressures can be viewed in the Driver Information Center.

See Vehicle Care in your Owner's Manual.

POWER PROGRAMMABLE LIFTGATE ♦

Open/Close the Power Liftgate

- ▶ Press the **Power Liftgate** button twice on the Remote Keyless Entry (RKE) transmitter.
- ▶ Press the Liftgate knob on the driver's door.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.
- ▶ Press the button next to the pull handle to close the liftgate.

Programming the Liftgate Height

1. Turn the Liftgate knob to the 3/4 mode position.
2. Open the liftgate. Adjust it manually to the desired height.
3. To save the setting, press and hold the button next to the pull handle until a beep sounds.
4. In the 3/4 mode position, the power liftgate will open to the programmed height.

Hands-Free Operation ♦

- ▶ To open or close the liftgate hands-free, kick your foot straight under the rear bumper, just left of the license plate. The RKE transmitter must be within 3 feet of the liftgate.



ROADSIDE ASSISTANCE

1-888-881-3302

TTY Users: 1-888-889-2438

As the owner of a new GMC, you are automatically enrolled in the GMC Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. GMC's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest GMC dealer for any repairs.

Roadside Assistance and OnStar®

If you require roadside service and have a current OnStar subscription, press the **OnStar** button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

To learn more about OnStar services, press the blue **OnStar** button, call 1-888-466-7827, visit onstar.com or refer to your Owner's Manual.

MYGMC MOBILE APP



The myGMC mobile app connects owners with a compatible mobile device to a variety of vehicle information and services, such as a searchable Owner's Manual, real-time fuel information, OnStar Vehicle Diagnostic information and Roadside Assistance.

The myGMC mobile app also enables users to send remote commands – including remotely starting the vehicle and locking/unlocking the doors – as well as to locate the vehicle on a map and send destinations to the navigation system (vehicles must be properly equipped).

Download the mobile app from your compatible mobile device's app store.

GMC OWNER CENTER

Get to know your vehicle inside and out with the GMC Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, review your current OnStar Vehicle Diagnostics report (active OnStar account required) and more. Create an account today at my.gmc.com.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2017 General Motors. All rights reserved.



GENERAL MOTORS

23194370 A