

Q70 HYBRID

2018 QUICK REFERENCE GUIDE



INFINITI®

To view detailed instructional videos, go to
www.infinitiownersinfo.mobi/2018/q70
or snap this barcode with an
appropriate barcode reader.



Helpful Resources

BELOW IS A LIST OF HELPFUL RESOURCES THAT CAN BE USED TO LEARN MORE ABOUT THE VEHICLE'S SYSTEMS AND FEATURE OPERATIONS.

• VEHICLE OWNER'S MANUAL

• INFINITI CLIENT SUPPORT 1-800-662-6200

Support is always available if your Infiniti retailer cannot assist you or you would like to provide INFINITI directly with comments or questions.

• INFINITI ROADSIDE ASSISTANCE 1-800-662-6200 (option 1)

As part of the Infiniti Total Ownership Experience®, Roadside Assistance is available to you, 24 hours a day 365 days a year, for emergency roadside assistance.

• INFINITI ELITE® EXTENDED PROTECTION PROGRAM 1-800-662-6200

Infiniti Elite® Assurance Products provide you with quality long-term protection and enhanced peace of mind.

• INFINITI FINANCIAL SERVICES CLIENT SUPPORT 1-800-627-4437

For client support with your Infiniti Financial Services loan or lease.

• INFINITI FINANCIAL SERVICES www.infinitifinance.com

Use the IFS Online Account Manager to check your account status, schedule recurring payments and access important forms.

• OWNER PORTAL 1-855-444-7244

www.owners.InfinitiUSA.com/iowners

Your Infiniti Owner Portal account contains your personal preferences, vehicle information and links to key vehicle features and services.

• INFINITI INTOUCH™ 1-855-444-7244 usa.infinitiintouch.com

The suite of services that is your direct link to personal security, convenience and confidence.

• SiriusXM® RADIO 1-877-447-0011

For support with your SiriusXM® subscription.

• INFINITIUSA.COM www.InfinitiUSA.com/bluetooth

Reference this site for a list of compatible cellular phones and instructions on how to pair your cellular phone to your vehicle.

• INFINITI ELECTRONIC QUICK REFERENCE GUIDE

(use the Quick Response (QR) code or URL on this page or on the back cover)

Table of Contents

Cockpit Overview.....	1
Instrument Panel.....	3
Meters and Gauges	5
Connecting your Cellular Phone or Device via Bluetooth®	7
Bluetooth® Streaming Audio	7
Cruise Control (if so equipped)	8
Navigation System (if so equipped)	9
Infiniti Intelligent Key System	10
Fuel-filler Door.....	10
Seat Adjustments.....	10

Locking and Unlocking your Vehicle via the Door Handle.....	11
USB Connection Port.....	11
Brightness Control Switches.....	11
Exterior Light Operation	12
Windows.....	12
Clock Set/Adjustment	13
Trip Computer	13
Wiper and Washer Switch	14
Voice Recognition.....	14
Infiniti InTouch™ Services (if so equipped).....	15

Additional information about your vehicle is also available in your Owner's Manual, InTouch™ Owner's Manual and at www.InfinitiUSA.com.

PLEASE SEE YOUR OWNER'S MANUAL FOR IMPORTANT SAFETY INFORMATION AND SYSTEM OPERATION LIMITATIONS.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.



For more information, refer to the "Safety – Seats, seat belts and supplemental restraint system (section 1)", the "Display screen, heater and air conditioner, and audio system (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

Cockpit Overview



Cockpit Overview

- 1 Dynamic Driver Assistance (DDA) switch (if so equipped)
- 2 Intelligent Cruise Control (ICC) switches (if so equipped)
- 3 Wiper and washer switch
- 4 Trip computer controls and reset button (behind the steering wheel)
- 5 Vehicle information display
- 6 Vehicle information display brightness controls (behind the steering wheel)
- 7 Combined turn signal/headlight control switch
- 8 Vehicle information display controls
- 9 Bluetooth® control switches and audio control switches

Instrument Panel



1

2

3

4

5

6

7

8

11

10

9

Instrument Panel

- 1 Adaptive Front Lighting system switch (behind the steering wheel)
- 2 Tilt/Telescopic steering wheel switch (behind the steering wheel)
- 3 Push-button hybrid system start (behind the steering wheel)
- 4 Multi-function control touch-screen/RearView Monitor display/Around View® Monitor (AVM) display (if so equipped)
- 5 Climate control panel
 - Heater and air conditioning (automatic)
 - Front/Rear window defroster
- 6 Navigation control panel
- 7 Audio control panel
- 8 Shift lever
- 9 Parking brake
- 10 Hood latch release
- 11 Lower switch bank
 - Vehicle Dynamic Control (VDC) OFF switch
 - Trunk release
 - Rear sunshade switch (if so equipped)
 - Warning Systems switch (if so equipped)
 - Safety Shield OFF switch
 - Heated steering wheel switch (if so equipped)

 
Meters and Gauges



Meters and Gauges

- 
- 1 Assist charge gauge
 - 2 Tachometer
 - 3 Shift lever indicator
 - 4 Vehicle information display
 - 5 Speedometer
 - 6 Fuel gauge

Connecting your Cellular Phone or Device via Bluetooth®*

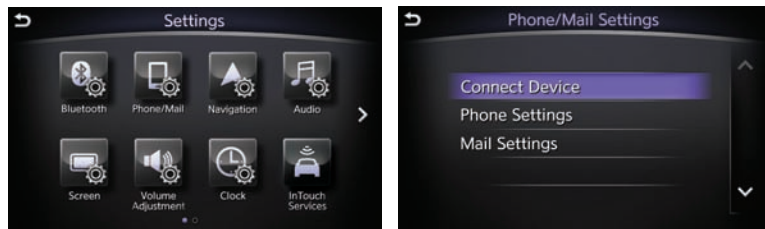

Using Bluetooth® technology, you can connect (pair) your cellular phone with the in-vehicle system for hands-free use of your cellular phone.

1. Press the **SETTING** button on the control panel.
2. Touch the "Phone/Mail" key.
3. Touch "Connect Device".
4. Touch "Add New (X/5 Free)".
5. When a PIN appears on the screen, operate the Bluetooth® device to enter/confirm the PIN.

For any Bluetooth® connectivity issues, reboot your cellular phone or device.

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Bluetooth® Streaming Audio*



If you have a compatible Bluetooth® device with streaming audio (A2DP and AVRCP profiles), you can set up a wireless connection between your Bluetooth® device and the in-vehicle audio system, enabling you to listen to the audio from your device through the vehicle's audio system.

After connecting your Bluetooth® device, press the **MEDIA** button (1) on the control panel to switch to Bluetooth® Streaming Audio.

For any Bluetooth® connectivity issues, reboot your cellular phone or device.

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Cruise Control (if so equipped)

SETTING A CRUISING SPEED

- Press the **MAIN (ON-OFF)** ① to turn on the system.
- With the vehicle at the desired speed, push down the switch ② to **COAST/SET** to enable cruise control.
- The cruising speed can be adjusted to a higher or lower speed by toggling the control switch ② up or down.

CANCELING THE PRESET SPEED

- Push the **CANCEL** switch ③ or tap the brake pedal.

INTELLIGENT CRUISE CONTROL (ICC) (if so equipped)

The ICC system is designed to maintain a selected distance from the vehicle in front of you and reduce the speed to match a slower vehicle ahead.

- To increase the distance to the vehicle ahead to be maintained by the ICC system, press the **DISTANCE** switch ④ until the display shows the desired set distance, which is shown by the number of lines on the set distance indicator ⑤.
- When a vehicle is detected ahead, a car icon will illuminate on the vehicle ahead detection indicator ⑥ and your vehicle will reduce the speed to match the slower vehicle.

To use Conventional (fixed speed) Cruise Control mode (if so equipped):

 
 
- While cruise control is off, push and hold the **MAIN (ON-OFF)** switch ① for more than 1.5 seconds. The **CRUISE** indicator light will illuminate.
- Accelerate to the desired speed.
- Push the switch ② down toward **COAST/SET** and release it. The **SET** indicator light will illuminate.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

CONVENTIONAL CRUISE CONTROL (if so equipped)



INTELLIGENT CRUISE CONTROL (ICC) (if so equipped)

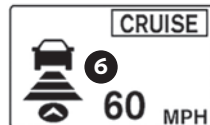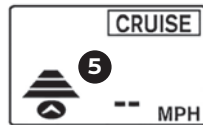

Navigation System (if so equipped)



Use the Infiniti controller ① and **ENTER** button ② to navigate through the center display screen.

- Press the **BACK** button ③ to return to the previous screen.
- Press the **MAP** button ④ to display the map.

SETTING A ROUTE

To set a route, first ensure that the correct region is selected on the touch-screen.

1. Press the **NAVI** button ⑤ on the Infiniti controller.
2. Touch the "Destination Menu" key ⑥ on the display.
3. Select the preferred destination setting method.
4. Enter the address number, street name, and city as prompted by the screen.



CANCELING A ROUTE

1. Press the **NAVI** button ⑤ on the Infiniti controller.
2. Touch the "Cancel Route" key ⑦.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Infiniti Intelligent Key System

ROLL DOWN FEATURE

The windows can be opened remotely using your Infiniti Intelligent Key.

- Press and hold the unlock button ① to open the windows remotely.
- If the unlock button ① is released, the windows will stop. To resume the roll down feature, press and hold the unlock button ① again.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Fuel-filler Door

To open the fuel-filler door, unlock the vehicle and gently push the front side of the fuel-filler door.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Seat Adjustments

POWER SEAT ADJUSTMENTS

- To slide the seat forward or backward, push the  switch ① forward or backward.
- To recline the seatback, push the  switch ② forward or backward.

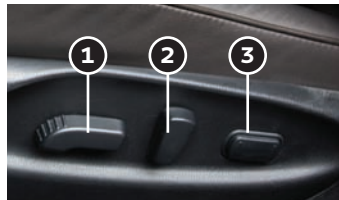

SEAT LIFTER

- To adjust the angle of the front portion or height of the seat, push the front or rear end of the  switch ① up or down.

POWER LUMBAR SUPPORT

- To adjust the seat lumbar support, push the front or back end of the  switch ③.

AUTOMATIC ENTRY/EXIT FUNCTION

- To turn on and off the automatic entry/exit function, press and hold the **SET** switch ④ for more than 10 seconds.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Locking and Unlocking your Vehicle via the Door Handle



 
To use the door handles to lock and unlock your vehicle, make sure the Intelligent Key is with you (that is, in your pocket or purse).

- Push the door handle request switch (1) to unlock the corresponding door.

- Push the door handle request switch (1) again within 1 minute to unlock the rest of the doors.
- To lock the vehicle, push either door handle request switch (1) once.

To change the settings for the door locking and unlocking system, press the **SETTING** button (2), select the "Others" key, and select the "Comfort" key.

- To unlock all doors by touching the inside of the door handle, select "Selective Door Unlock".
- To disable unlocking by touching the inside of the door handle, select "Touch Sensitive Door Sensor".

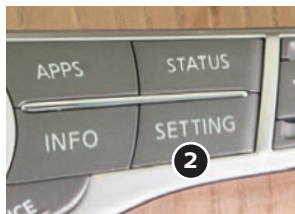

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

USB Connection Port

- The USB ports (1) are located in the center console under the armrest. Compatible audio and video files stored on a USB device can be played through the vehicle's audio system and front display.

 


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Brightness Control Switches

Use these switches to adjust the brightness of the vehicle information display.

- To increase the brightness, push the upper switch (1).
- To decrease the brightness, push the lower switch (2).

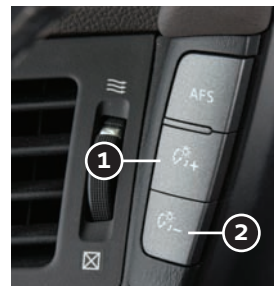

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Exterior Light Operation



- 1 Side lights, license plate lights and combination meter lighting ON position
- 2 Headlight ON position
- 3 Automatic headlight mode ON position (headlights switch on/off automatically depending on ambient light conditions/daytime running light system)
- 4 OFF position
- 5 Front fog light switch
- 6 Push the headlight switch forward for the high beams
- 7 Pull the headlight switch rearward to flash the high beams

For normal headlight operation, leave the exterior light switch in the **AUTO** position (3).

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Windows



All power windows can be operated through the main switch on the driver's door.

- 1 Power windows open/close
- 2 Disable rear passenger window operation by rear passengers

POWER WINDOW CONVENIENCE OPENING/CLOSING FEATURE

The vehicle can be unlocked and the power windows can be opened simultaneously from outside the vehicle using the Intelligent Key as follows:

To unlock the vehicle and open the windows simultaneously, press and hold the  button on the Intelligent Key until the windows have reached the desired position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Clock Set/Adjustment



DIGITAL CLOCK WITH NAVIGATION (if so equipped)

To adjust the time and the appearance of the clock on the display:

Press the **SETTINGS** button (1) on the control panel.

Locate and touch the "Clock" key to adjust "On-Screen Clock", "Daylight Savings Time", "Clock Format (24h)", and "Time Zone".

The time can be adjusted through "Offset Adjustment" (2) by adjusting the minutes and/or hours forward or backward. The current clock time can be set up to a difference of 12 hours and 59 minutes.

ANALOG CLOCK

To set the clock forward, press the button (3).

 
To set the clock backward, press the button (4).

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Trip Computer



When the  button (1) is pressed, the following modes will appear on the vehicle information display (2):

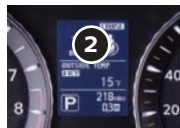

- ENERGY MONITOR
- EV ODOMETER
- FUEL ECONOMY
- TIME/MILES
- RANGE
- COOLANT TEMP
- OUTSIDE TEMP
- SETTING
- WARNING

To reset the elapsed time/miles, press and hold the  button (3) for more than 1 second. Both elapsed time/miles will reset at the same time.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Wiper and Washer Switch



Move the lever ① up or down to one of the following positions to operate the windshield wipers:

- MIST** One sweep operation
- OFF** Wipers are OFF
- AUTO** Rain-sensing automatic wipe
- LO** Continuous wipe, slow
- HI** Continuous wipe, fast

To adjust the wiper sensitivity for the **AUTO** setting, twist the control ring ②.

Pull the lever ① toward you operate the windshield washer.

To turn the rain-sensing automatic wiper system off, push up the lever to the **OFF** position, or pull down the lever to the **LO** or **HI** position.



 
PULLING UP THE WIPER ARM

The wiper arm should be in the UP position when replacing the wiper.

- With the shift lever in the **P (PARK)** position, place the ignition switch in the **OFF** position.
- Within 1 minute, push the wiper switch to the **MIST** position twice. The wiper operation stops in mid-operation and the wiper arm can be pulled up.
- To return the wiper arm, place the wiper arm in the DOWN position and operate the wiper switch once.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Voice Recognition

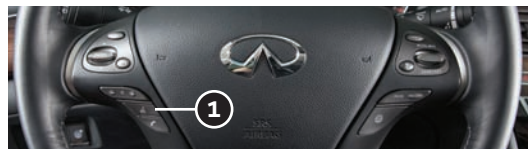

SYSTEM OPERATING TIPS

- The interior of the vehicle should be as quiet as possible.
- Speak naturally. Speaking too fast, too slow, too soft, or too loud makes voice recognition more difficult.
- Confirm that the correct voice commands are being used. Glance at the screen to see the currently available commands.

USING THE VOICE RECOGNITION SYSTEM

- Press the  button ① on the steering wheel, and a list of commands will appear on the screen.
- After the tone sounds, speak the command.
- To skip the voice prompt and give the command immediately, press the  button ① on the steering wheel to interrupt the system. Speak the next command after the tone sounds.
- To cancel the command, press and hold the  button ① on the steering wheel.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Infiniti InTouch™ Services (if so equipped)

Infiniti InTouch™ Services combine personalized convenience settings and personal security features to compliment the Total Ownership Experience®. For more details on Infiniti InTouch Services or to enroll your vehicle, please visit usa.infinitiintouch.com or call **1-855-444-7244**.



To access Infiniti InTouch Services:

- 1 Press the **INFO** button on the Infiniti controller.
- 2 Select the "InTouch Services" key on the display.



In case of an emergency, press the in-vehicle telematics **SOS** button ③, located above and in front of the rearview mirror.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Available services include, but are not limited to:

- Automatic Collision Notification
- Alarm Notification
- Maintenance Alert
- Scheduled Maintenance Notification
- Report Stolen Vehicle
- Emergency Call
- Enhanced Roadside Assistance
- My Schedule
- Infiniti Personal Assistant
- Destination Send-to-Vehicle
- Connected Search
- Drive Zone
- Maximum Speed Alert
- Mobile Information Service
- Valet Alert

INFINITI INTOUCH SERVICES ENROLLMENT

1. Create an Infiniti Owner Portal account.
(<https://owners.infiniti-usa.com/iowners/>)
2. From within your Infiniti Owner Portal account, enroll in Infiniti InTouch Services.
3. Download the Infiniti InTouch Services companion app from the App store and login using your Infiniti Owner Portal ID and Password.



Printing June 2017
QR18EAHY51UO
Printed in USA

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. INFINITI reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, INFINITI may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by INFINITI to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the INFINITI website at <https://owners.infinitiusa.com/iowners/navigation/manualsAndGuides>. If you have questions concerning any information in your Owner's Manual, contact INFINITI Client Support (see contact information listed above).



To view detailed instructional videos, go to **www.infinitiownersinfo.mobi/2018/q70** or snap this barcode with an appropriate barcode reader.



INFINITI®